
## Riverside

Sherborne Bedroom Assembly Instructions

Made in Viet Nam


email: info@riverside-furniture.com

## Components and Hardware List

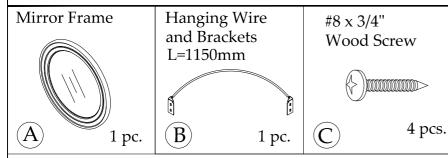

Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.

The Hanging Wire and Brackets are pre-attached onto the back of the Mirror with the Wood Screws at the factory.

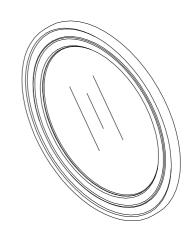

#14262 Round Accent Mirror

## Note:

To have a safe product, the mirror must be hung on the wall using the appropriate customer supplied hardware, being properly installed, capable of supporting the weight of the mirror and suitable for the wall material.

