



OK, let's show you how to put this chair together...

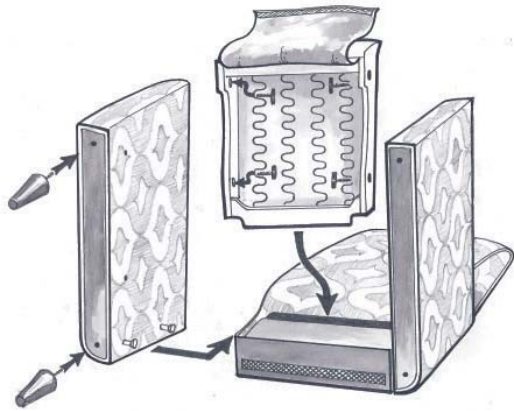

First, check to see you have all your chair parts:

- 2 Arms
- 1 Back Frame
- 1 Seat Deck
- 1 Seat Cushion
- 4 Legs
- 4 Thumb Bolts

Begin by laying the Back Frame on the floor as shown here and attach the arms using the *Helpful Hints*.

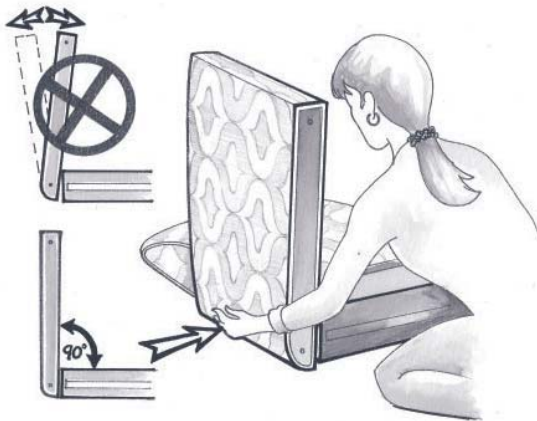

Insert the connectors on the arm into the Back Frame.

With one hand positioned on the arm as shown left, push the connectors all the way into the back until there is no gap between the arm and the back.


Helpful Hint: Hold the arm perpendicular (90 degrees) to the back. Leaning the arm too far in either direction may result in one or both connectors not engaging properly.



Grasping the bottom of the arm and the back as shown left, push the arm and pull the back towards you to fully engage the connectors.

We recommend you tip the chair upright and push down on the back to ensure the arm is fully seated into the back.

Helpful Hint: Positioning the chair in the upright position and pushing down on the back is another way of doing this. Make sure the arm is square and there is no gap between the arm and back before pushing down on the back to engage the connectors.

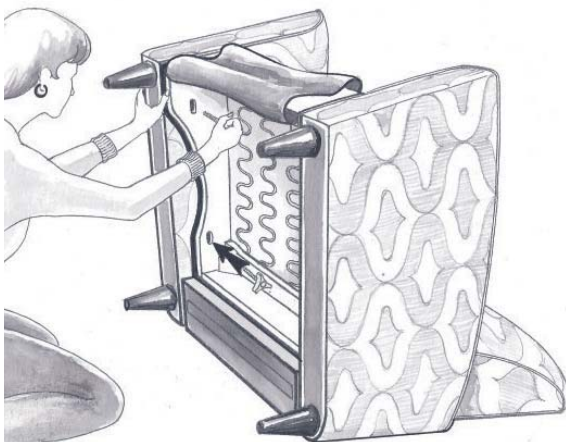

Insert the Seat Frame into the opening of the Back Frame.

Helpful Hint: Holding the bottom of the seat frame even with the bottom of the arm, start threading all four Thumb Bolts through the inside of the seat frame into the arms.

Do not tighten Thumb Bolts until all four have been started.

Attach the four legs.

Attach the velco dust cover to the bottom.

Finally add the seat cushion.