

# Standard Details for Metal Roofing & Siding

Post Frame and Residential Structures



www.fabral.com

# **Table of Contents**

Installation Instructions	2 - 3
Paint System & Warranties	4
Steel Panel Profiles	5 - 6
Aluminum Panel Profiles	7
Post Frame Estimating & Roof Types	8
Post Frame Building Details	9
Post FrameFlashings/Trim	10 - 13
Post Frame Trim Details:	13 - 30
Box Gable - 13	13 - 30
Endlap & Rain Carrying Table - 14	
Eaves - 15-16	
Ridges - 16-18	
Gables - 18-19	
Flying Gable - 20	
Endwall - 21	
Sidewall & Valley - 22	
Gambrel & Transition - 23	
Outside Corner - 24	
Inside Corner & Base Guard - 25	
Door Jambs & Headers - 26-29	
Translucent Panels - 29	
Window Details - 30	
Residential Building Details	31
Residential Load Tables & Profiles	32
Residential Flashings/Trim	33
Residential Trim Details:	34 - 43
Ridges - 34	
Eaves - 35	
Gable & Endwall - 36	
Sidewall & Gambrel - 37	
Transition & Pipe Boot - 38	
Skylight & Chimney - 39-41	
Dormer Details - 42-43	
Accessories	44



# **Installation Instructions**

### **Building Design and Construction**

In order to ensure the anticipated performance and longevity, protect metal panels from potentially corrosive situations and materials. When treated lumber will be in direct contact with metal panels or flashings please note the following: Galvanized steel is compatible with the CCA (Chromated Copper Arsenate) pressure-treated lumber that was predominantly used before 2004, but not with the older Penta treated lumber or the new ACQ (Alkaline Copper Quartenary), CA (Copper Azole), or CBA (Copper Boron Azole). Stainless steel or other special treated fasteners should be used into these non-compatible pressure treated lumbers. Aluminum must be separated from contact with all treated wood since the soluble copper in the preservative is corrosive to aluminum. Likewise, dissimilar metals also require a protective barrier between them to prevent galvanic corrosion. Request FABRAL Technical Bulletins #803, 106, and 107 for more information on treated lumber and dissimilar metals.

Plastic, builders' felt, bituminous paint, caulking, or gasket material may be used to separate panels from treated wood and dissimilar metals. When using aluminum panels in direct contact with steel, use a separator as described above and fasten with Stainless Steel screws.

Fertilizer, lime, acids, feeds, manure, soils, and many other compounds also cause corrosion in metal panels. Contact between metal panels and any potentially corrosive materials should be prevented.

Porous insulation materials may absorb and retain moisture, and should not be used in direct contact with metal panels. Use a vapor barrier such as polyethylene plastic or 30-lb felt to prevent moisture from contacting both the insulation and the metal panel.

FABRAL's translucent panels are intended for siding applications only. In all situations, foot traffic should be avoided on translucent panels. Translucent panels used in roofing applications will break down in a short time and cause staining and premature corrosion of the metal panels below. If used on roofs, apply butyl caulking to separate the fiberglass panels from the metal. Translucent panels should be cleaned and sealed regularly, as recommended by the translucent panel manufacturer.

### Purlins, Girts and Roof Deck

The substructure to which the metal panels are fastened must be properly spaced and sufficiently thick to provide a roof or wall system able to meet required design loads.

A 2" nominal lumber thickness provides the maximum pullout values for both screws and nails when the fasteners penetrate a minimum of 1" into the wood. Since 1" nominal lumber and solid decking are thinner, they provide somewhat lower pullout values. When using purlins, FABRAL recommends a maximum spacing of 24" on-center (note that 5V requires solid decking). Pullout values decrease if the fasteners protrude completely through the purlins. Kiln-dried softwood is recommended for purlins or decking (pine, fir, hemlock, and spruce). Hardwoods are difficult to fasten into without splitting and contain tannic acids that are corrosive to metal panels. Green (non-kiln-dried) lumber may warp, twist, and shrink as the wood seasons fully, causing waviness in the panels as well as loosening and leaking of the fasteners.

Solid decking is highly recommended for all residential applications. When using solid decking or sheathing, always use 30-lb felt or underlayment and plan on using closer

fastener spacing and larger diameter #14 screws. (Refer to the tables on page 31).

On re-roofing projects where the condition of the old decking is in question, or where existing shingles will be left in place, new 2x4 purlins should be fastened through the decking and into the rafters. This will provide a solid framework for attaching the metal panels. For more detailed information on Re-roofing applications, consult FABRAL Technical Bulletin #721, Re-Roofing With Metal. Load tables are available for all FABRAL panels; contact FABRAL for additional information.

### Roofing

Panel sidelaps should face away from wind driven rain. To accomplish this, begin by installing the first sheet square with the eave and gable at the down wind end of the roof, farthest away from the source of prevailing winds.

In applications requiring a panel endlap, please refer to the detailed instructions in this booklet. For best results, lap panels as shown and install in the indicated sequence. All endlaps require sealant. When weather-tightness is critical, use sealant tape in all sidelaps.

To provide a drip edge, allow an overhang of 1 to 2 inches at the eave. At the gable edge, use a gable or sidewall flashing. This will keep weather out, prevent lifting in high winds, and provide a neat, finished appearance. The trim and roofing sheet should be fastened every 12 to 24 inches along the gable edge.

### Roof Pitch

The metal roofing panels shown in this manual require a minimum slope of 2½" per foot to ensure proper drainage. Refer to the raincarrying table in this booklet for the maximum allowable panel length per slope that will provide adequate drainage. For longer slopes and lower roof pitches, contact FABRAL for other suitable profiles.

### Bending and Bowing

Aluminum roofing and siding sheets are rollformed from hardened, tempered metal for maximum strength. If a sheet must be bent, a gentle 90-degree bend is the maximum recommended. Metal should not be re-bent once it has been formed, nor should it be folded back on itself. When a metal roofing sheet must be installed on a curved roof, screws should be installed at every overlapping rib at the sheet ends to resist the natural tendency of the metal to spring back. The standard fastening pattern is permitted over the rest of the sheet. When installing the metal panels shown in this booklet over a curved arch, the minimum radius of the arch is 18' for aluminum panels and 24' for steel panels. Use sealant tape or butyl caulking at all sidelaps and endlaps.

Additional care and fasteners must be provided when securing the top and bottom purlins on an arched rafter building to prevent the curved panels from pulling the purlins loose from the rafters. Ring-shank pole barn nails, heavy wood screws, lag screws, or bolts are often used for attaching these purlins.

### Siding

Siding should be installed using the standard fastening and overlap patterns to ensure optimum performance. For strong, neat corners use hemmed corner flashings. Do not run siding sheets all the way to the ground. Instead, provide a protective base of concrete, masonry, treated wood, or similar material and terminate the siding sheets 6" above grade.

# **Installation Instructions**

If siding sheets are installed horizontally, use sealant tape or butyl caulking at the vertical laps to ensure weather-tight joints. Install panels from the bottom up so that water is directed away from, and not into, the lap joints.

### **Fastening**

FABRAL can supply either screws or nails for fastening into dimension lumber, with screws offering better pullout values. Always use screws with solid sheathing. Screws for use with steel panels are galvanized and then coated with an organic polymer for optimum corrosion resistance. For best results with aluminum panels, use #300 series stainless steel screws.

The FabrOseal® galvanized ring-shank nail, with its premium long-life silicone rubber gasket, assures a lasting seal and is the best nail available for steel panels when screws are not desired.

The correct way to fasten steel panels with nails is to drive the nail through the top of the rib so the washer is compressed securely against the metal. Nail placement must be in the ribs for roofing applications to minimize the potential for roof leaks. Over-driving the nail can split the washer and dimple the metal, causing leaks.



Wood screws with combination metal and neoprene washers should be installed in the flat area of the panel adjacent to the ribs, and tightened such that the washer is compressed as illustrated above. This will ensure a lasting, leak-proof seal. Remove any metal filings created by the drilling action of the screws to avoid rust staining on the panel surface. Refer to the fastening schedules in this booklet for the correct fastener locations.

### Flashing and Trim

Always begin flashing installation from the bottom and work up, so that upper flashings are lapped on top of lower flashings. This will prevent moisture from leaking under the flashings and into the structure. Endlap flashings a minimum of 6" and seal the lap joints with sealant. Extend flashings 4-6" beyond the building, cut along the bend lines, apply sealant, and fold the side flaps in and the top flaps down to cap off the ends. Secure with pop-rivets or stitch screws.

Some roof conditions, such as valleys, may require a longer endlap and/or a larger flashing to properly drain moisture from the roof. Factors that influence flashing size, shape, and endlap requirements include roof pitch, roof geometry, slope length, and climatic factors (such as heavy snowfall or rainfall).

Whenever possible, begin trim installation at the downwind end of the roof, farthest away from the source of prevailing winds, to allow flashing laps to face away from wind-driven rain. Refer to the details in this book for the proper location of fasteners and sealants.

The flashings and trims shown in this book are standard parts. Custom trims are available to meet your specific design needs. If you need a special trim, please furnish a drawing of the desired shape, including dimensions and angles, to your Fabral dealer to obtain pricing and availability.

Refer to the SMACNA Architectural Sheet Metal Manual for additional information about detailing and installing flashings.

### Safety

Always work safely when installing metal products and use extreme caution on the roof at all times. Wear gloves and safety glasses to reduce the risk of injury, and use hearing protection when operating power tools. Always be sure that ladders are safely positioned and properly secured. Safety harnesses or other special equipment may be required; be sure to Consult OSHA guidelines for compliance with all safety requirements.

Do Not walk on panels until all the fasteners are installed. Metal roofing panels are slippery when wet, dusty, frosty, or oily -- Do Not attempt to walk on a metal roof under these conditions. Wear soft-soled shoes to improve traction and to minimize damage to the paint finish. Always be aware of your position on the roof relative to any roof openings, roof edges, co-workers, and penetrations. Installing metal panels or flashings on a windy day can be dangerous and should be avoided if possible.

### **Cutting Aluminum Panels**

To make a cut parallel to the ribs, score the panel deeply with a sharp utility knife and bend back-and-forth along the score, breaking the metal off cleanly. For cuts across the ribs, use straight-cut snips, electric or pneumatic shears, a portable profile shear, or an electric nibbler. Some installers prefer using a circular saw with a metal cutting blade (a fine-tooth hardwood blade, or a standard combination blade reversed in the saw works also). Light oil or soap on the blade will make cutting easier.

### **Cutting and Drilling Steel Panels**

Steel panels may be cut with metal snips, electric or pneumatic shears, a portable profile shear, or an electric nibbler. Some installers prefer using a circular saw to cut metal panels. Do Not use self-consuming abrasive blades because of the following: 1. Abrasive blades burn the paint and galvanizing at the cut edge, leaving edges that are jagged and unsightly and rust more quickly 2. Abrasive blades produce hot metal filings that embed in the paint and cause rust marks on the face of the panel 3. All saw cut panels must be turned face down and cut in a location down-wind and well away from the building and other panels to avoid embedment of metal filings on other panels 4. All saw cut panels must be thoroughly wiped to ensure the removal of all metal filings. If saw cutting cannot be avoided, select a carbide-tipped blade specially designed for cutting light-gage ferrous metal panels. These blades are now available at many home centers and lumber yards. Pre-drilling wall panels gives uniform alignment of screw rows. Be sure to remove drill filings once panels are installed to avoid rust marks from the filings.

### **Building Maintenance**

A metal roof should be inspected annually and cleaned as necessary to maintain its beauty and performance. Any debris or residue, including leaves, twigs, and dust should be cleaned off promptly to prevent moisture entrapment against the metal, which may lead to finish deterioration or premature corrosion. Flashings may need to be re-sealed periodically in order to maintain optimum weathertightness.

# **Paint System & Warranties**

Enduracote™ is a paint system that takes performance to the next level. Based on cutting edge resin technology, this system offers unbeatable durability and superior long-term performance against the elements.

ENDURACOTE■■■■

### The Enduracote™ Warranty


- Lifetime film integrity for walls & roofs
- 30-year against fade & chalk
- 10-year edge rust against acid rain

For profiles: Grand Rib 3®, Alu-Tuff II, 5V Crimp, ProClad, StrongClad, Mighti-Rib®

### The Enduracote™ PLUS Warranty

- Lifetime film integrity for walls & roofs
- 30-year against fade & chalk
- 15-year edge rust against acid rain
- 25-year non-perforation against acid rain for walls; 20-years for roofs

For profiles: Grand Rib 3® PLUS, Alu-Tuff, 1 1//2" SSR, Climaguard™

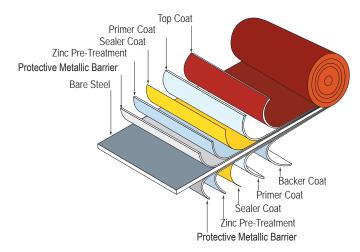

Example of the Grand Rib 3® layer system

# GRANDER 3", ALUTUFF II, R.V. PRIME RIB, STRONGCLAO<sup>TM</sup> 26 GAGE MIGHT-RIB & U.FTRA-RIB PARELS LIMITED LIFETIME ENDURACOTE" PAINT WARRANTY PERFORMANCE GUARANTE FERRI & EXPRESSION CONCEPT, A bestimable referred to as "Fairt", or "Safer," or "Safer

Example Warranty Form

### **Other Warranties**

### Polyester Paint Warranty

- 25-year limited film integrity
- 10-year against fade & chalk For profiles: MP Panel, Shelterguard®, 5-Rib

### Aluminum-Zinc Alloy Warranty

20-year limited non-perforation
 For Bare Galvalume® Products

### **Aluminum Product Guarantee**

• 30-year corrosion guarantee




# The Energy Star® Program


The Energy Star Program promotes highly reflective roof systems that reflect solar energy. These roof systems allow buildings to stay cooler and, in turn, use less electricity for air conditioning; less electricity means a reduction in power generation and a reduction of pollutants discharged at power plants. Fabral has attained Energy Star approval for many of its Enduracote™ system colors. Ask for Technical Bulletin #724 titled "Energy Star Approval", for program details and a list of approved Enduracote™ colors.

# **Steel Panel Profiles**


Grandrib 3®


29 Gauge steel, Plain, and Painted Galvanized

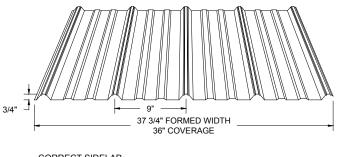




**SCREW PATTERNS** 



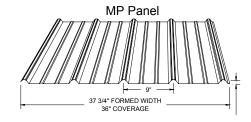


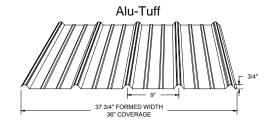






Fastener Usage: 80 screws per square or 1 pound of nails per square


# USE ON SOLID DECKING 1/2" 11 1/2" 26" FORMED WIDTH 24" COVERAGE






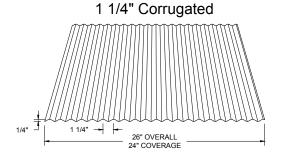







# **Steel Panel Profiles**

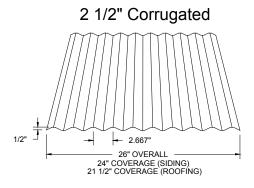


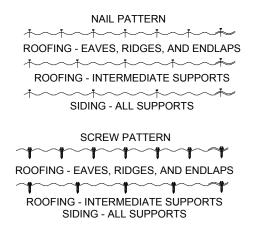

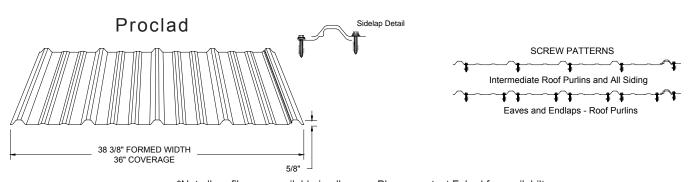


\*Not all profiles are available in all areas. Please contact Fabral for availabilty.


# **Other Steel Profiles Available**

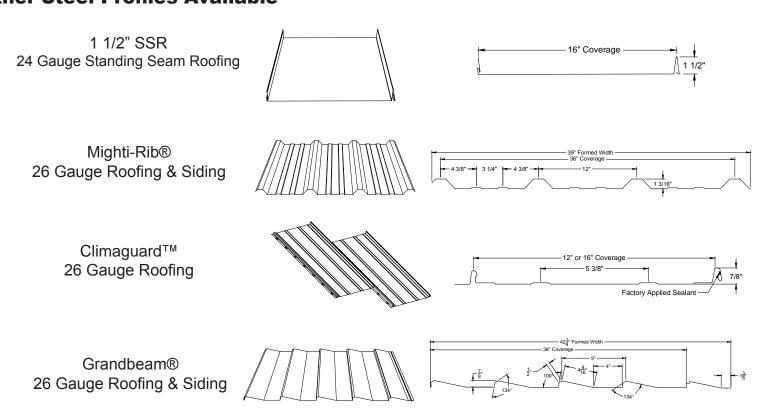



<sup>\*</sup>The panels above are available at certain locations and have their own particular details, flashings, and accessories. Please contact Fabral for more information.


# **Aluminum Panel Profiles**









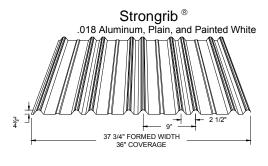








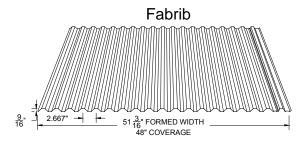




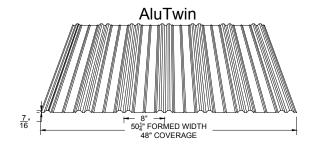



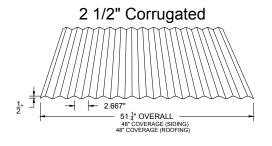



# **Post Frame Estimating & Roof Types**

### **Estimating Metal Roofing, Siding & Flashings**

Panel lengths are to be determined by the truss top chord or actual field measurements. Remember to add for overhangs at the eaves; subtract for a gap at the ridge. Siding should be kept up away from the ground with a skirt board.

### **Number of Panels**

The coverage of the panel being used will determine the number of panels at a length (i.e.: 3' coverage panel on a 30 ft. long building would require 10 panels on each side of the ridge or 20 panels at the particular length.)

### Horizontal Measurment to a Roof

Divide the building width in half, then multiply by the slope factor (i.e.: 40' wide building with 4/12 slope. 40 divided by 2 equals 20' times 1.054 equals 21'-1" in slope dimension.) Allow for 1/2" to 1" gap at peak and 1" to 2" eave overhang.


Slope Factor
1.031
1.054
1.083
1.120
1.202
1.302
1.414


### **Flashing Conditions**

Roof - Eave, Ridge, Gable, Sidewall, Endwall, Valley, Hip, Transition, Gambrel, Soffits
Siding - Base Perimeter, Corners, Inside Corners, Man


Doors, Windows, Sliding Doors, Overhead Doors

Please contact Fabral's Engineering Department for all your estimating & specification needs.




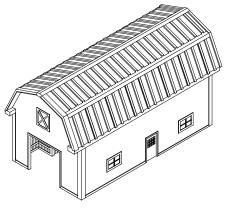


Gambrel Roof

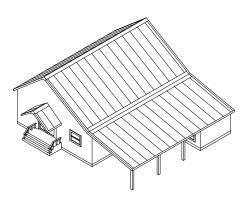


Transition Roof

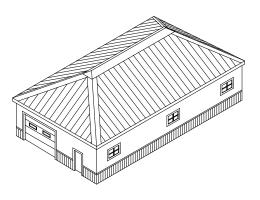



Hip Roof

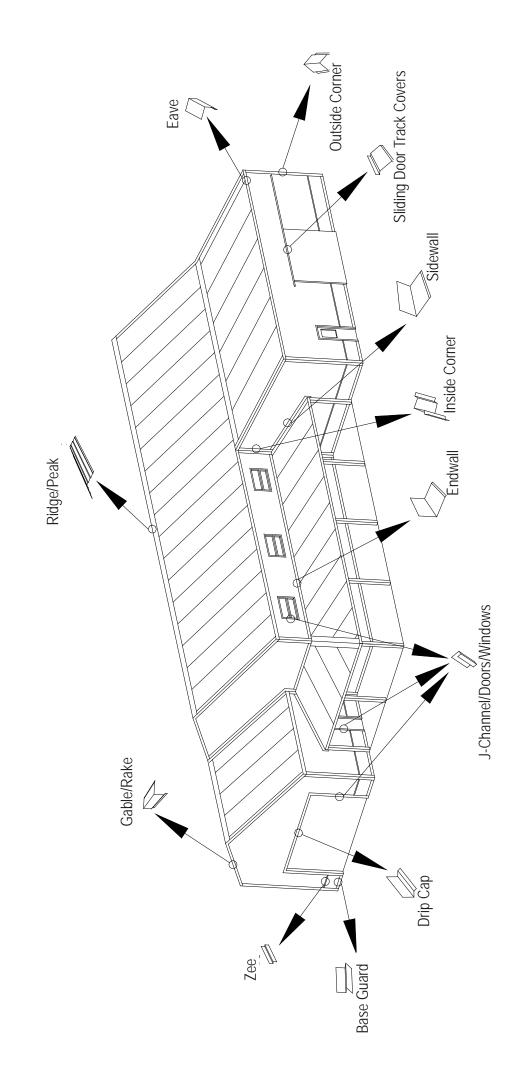


All flashing is 10' 6" in length & available in steel & aluminum, unless otherwise noted. Please contact Fabral for specifics on the trim available in your area.

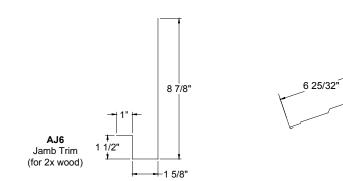

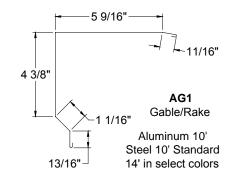


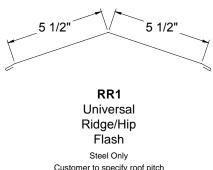

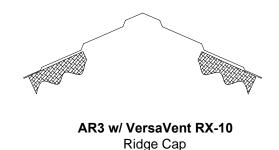


AR3


Ridge Cap

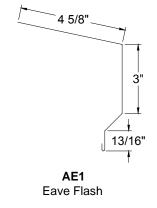



Customer to specify roof pitch


Grandrib 3 & Alutuff net free area = 10.66 sq. in. per lineal feet of ridge (5.33 per side)

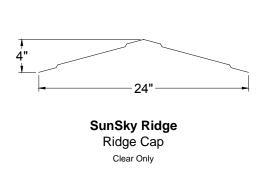

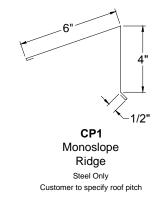


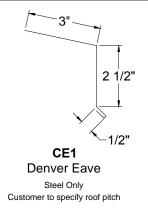


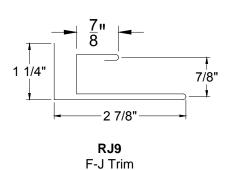

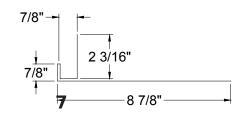


**PJFB** One Piece Door Trim

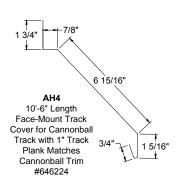

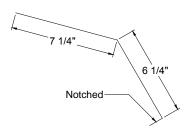



AGRN4
For Grandrib 3 40<sup>1</sup>/<sub>4</sub>" Length
Notched Gambrel Flash





RV1 Valley Flash Customer to specify roof pitch




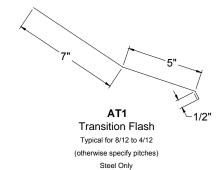


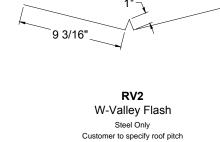


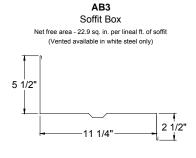


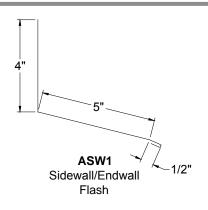


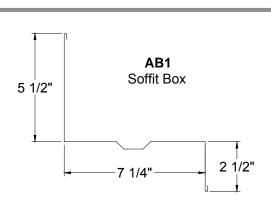


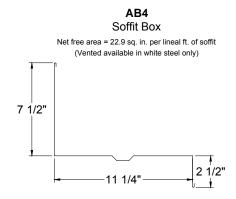


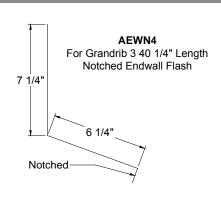

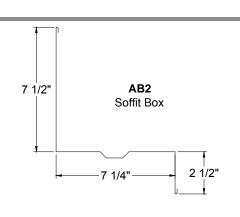

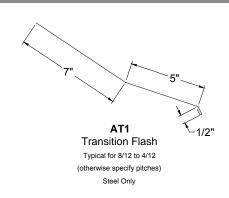


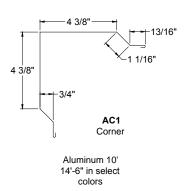

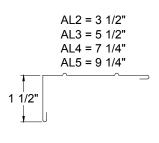



1 5/8" 1 5/8" AZ2 Zee


AL2,3,4,5 Angle Flashing

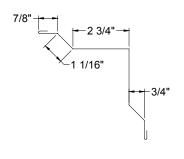



AC2 Inside Corner




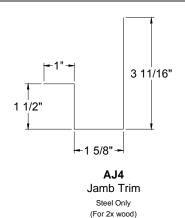


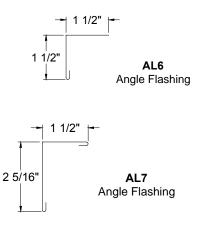


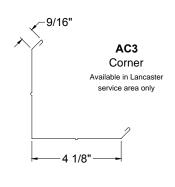


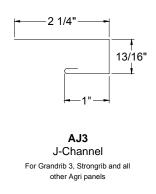

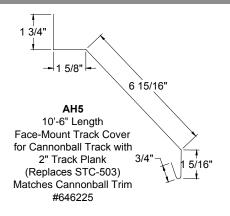


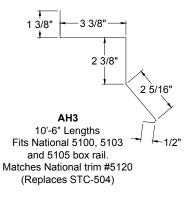

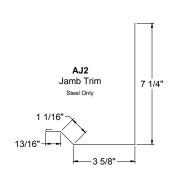

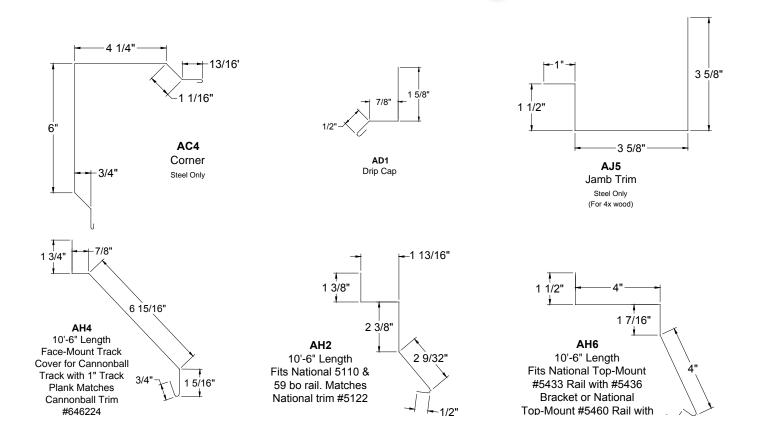



# **Post Frame Flashing Details**

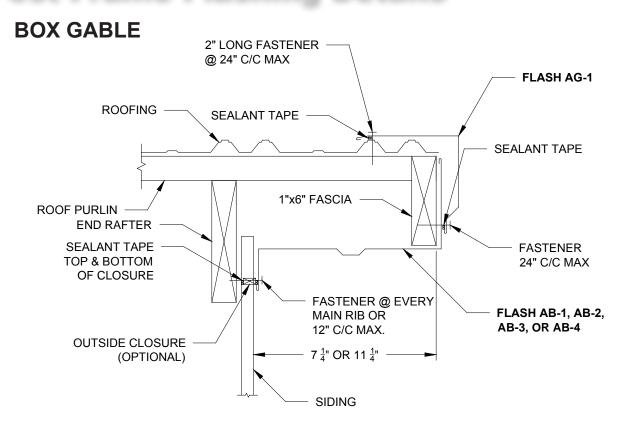

### **ENDLAP**

- 1. Apply 3/32" x 1/2" butyl endlap sealant on bottom panel just below centerline of purlin (see endlap diagram for location) on panel #1.
- 2. Apply sidelap sealant on panel #1 and connect to endlap sealant.
- 3. Place panel #2 so it overlaps panel #1, 12" as shown. Install screws per endlap fastening pattern.
- 4. Apply sidelap sealant on panel #2 to connect to sidelap sealant of panel #1.
- 5. Place panel #3 over sidelap of #1 and #2.
- 6. Apply endlap sealant on panel #3.
- 7. Apply sidelap sealant on panel #3 and connect with endlap sealant.
- 8. Place panel #4 over endlap of panel #3. Install screws per endlap pattern.

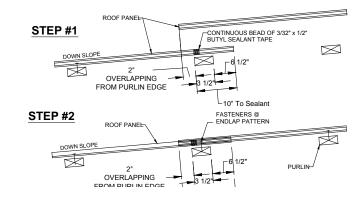

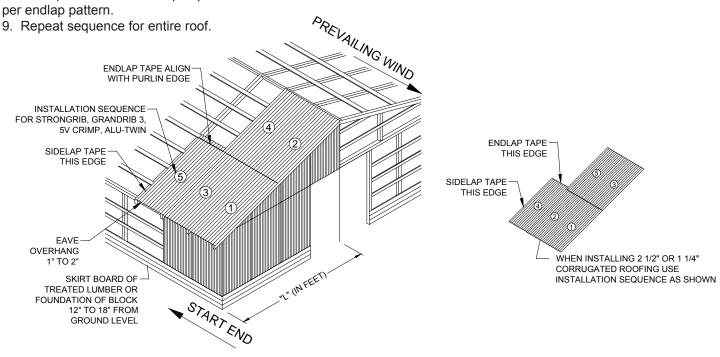


### **ALLOWABLE PANEL LENGTHS (ft.) ALONG** THE SLOPE FOR 4" RAINFALL PER HOUR

		Roof Slope					
Panel Name	Minimum Slope	2 1/2:12	3:12	3 1/2:12	4:12	5:12	6:12
Alu-Tuff	2 1/2:12	58	61	64 67 73		73	78
Grandrib 3	2 1/2:12	58	61	64	67	67 73	
Prime Rib	2 1/2:12	39	41	43	45	49	53
5V	2 1/2:12	43	45	47	49	54	58
2 1/2" Corrugated	2 1/2:12	28	29	31	32	35	38
1 1/4" Corrugated	2 1/2:12	16	16	17	18	20	21
Alutwin	2 1/2:12	37	39	41	43	46	50
Fabrib	2 1/2:12	32	34	36	38	41	44


### **Notes For Rain-Carrying Tables**

- 1. All values based on a 1-hour duration storm of 4"/hr. intensity.
- 2. Values represent the point at which the panel ribs will flood.
- 3. Size and frequency of penetrations can greatly reduce the amount of water removed from a rooof.
- 4. All panel endlaps must be caulked.
- 5. When weather-tightness is crtical, use sealant tape in all sidelaps.

# **EAVE**

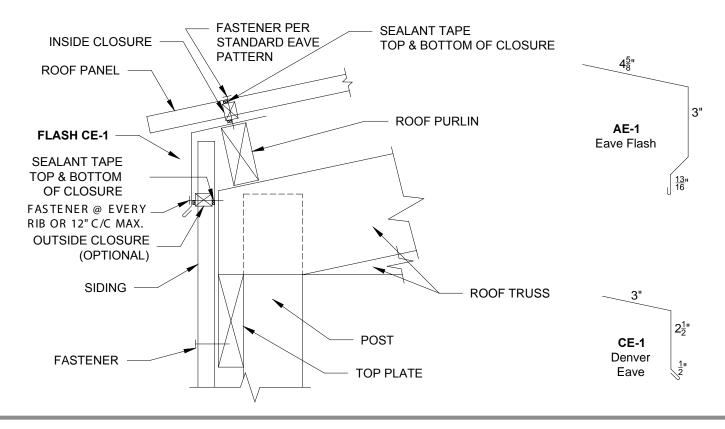


# **BOX EAVE**

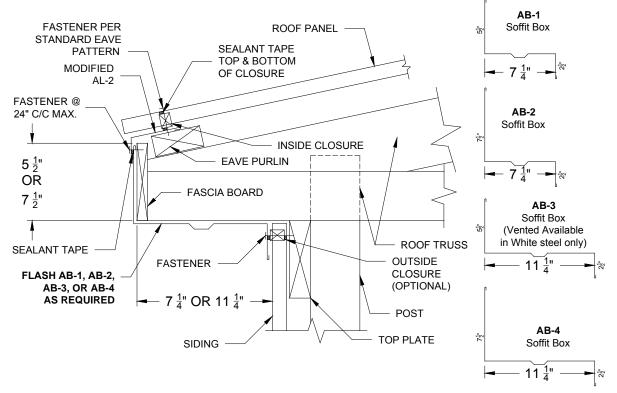


PROVIDES 8" OR 12" OVERHANG WITH GRANDRIB 3, ALU-TUFF, OR STRONGRIB SIDING

### **VENTED EAVE**

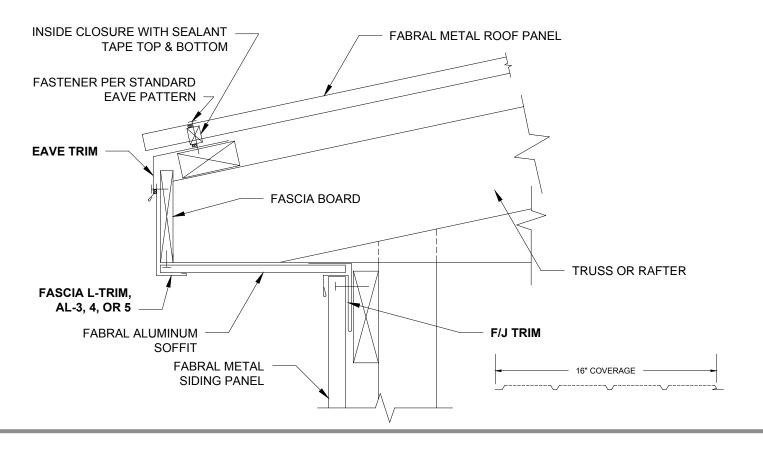


# **RIDGE/PEAK - NON VENTED**

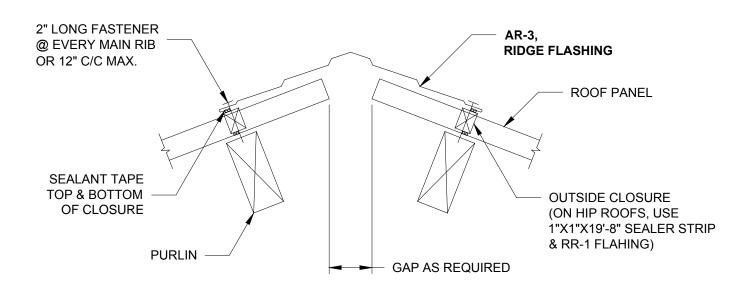

If closures are omitted, Fabral suggests using screen wire between panels and ridge gap area to keep insects and birds out of attic area. Closures and sealant are recommended for optimum weather resistance.


### **VENTED RIDGE**

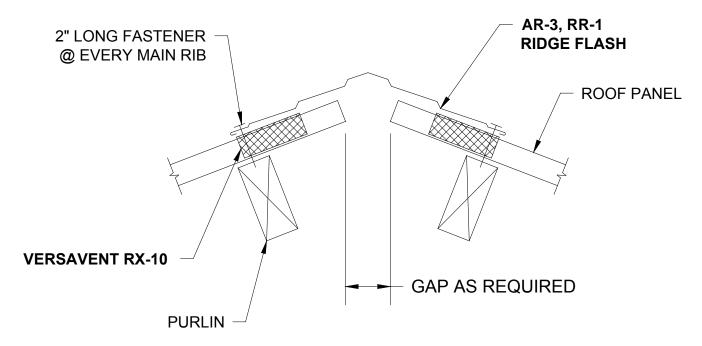


**VersaVent RX-10 Factory Applied To Ridge Cap Vent Material and Ridge Cap Install As A Unit** 

### **ALTERNATE VENTED RIDGE**

Fabral RR-1 Ridge Flash with CoraVent (shown). The RR-1 can be modified to fit many other solid, plastic vents. Other solid, plastic vents (ie..Ridge Master,...) are available from local lumberyards or dealers. The metal ridge flashing may have to be customized to fit the particular vent. Mesh vents or fiber-type vents are not recommended because a metal ridge can not be fastened securely. They are not rigid enough to give good support or appearance to the metal flash. Coravent is available from Fabral.

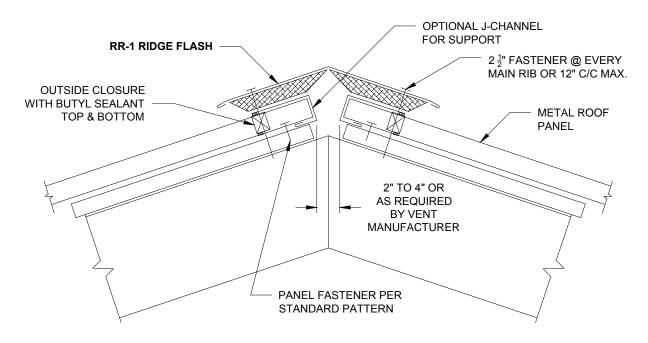


# **ALTERNATE VENTED RIDGE**

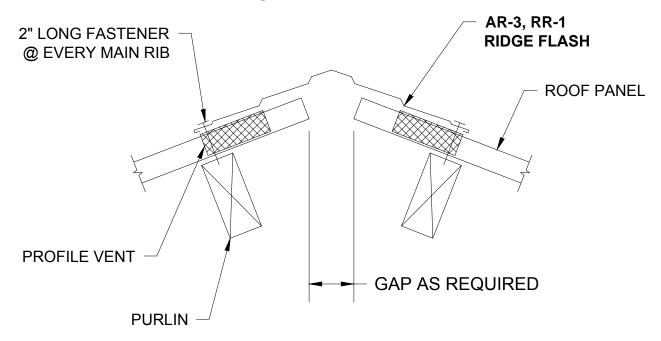


Profile Vent is pre-notched and self adhesive. Fabral stocks Profile Vent for Grandrib 3, Alu-Tuff, and 5v Crimp.


# **GABLE - STRONGRIB, GRANDRIB 3**

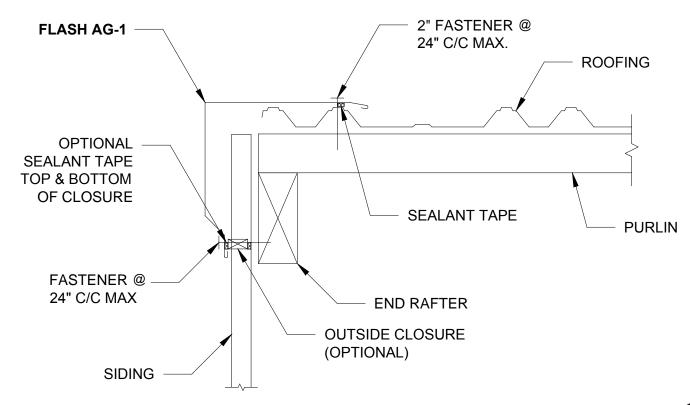


# **GABLE - FABRIB**

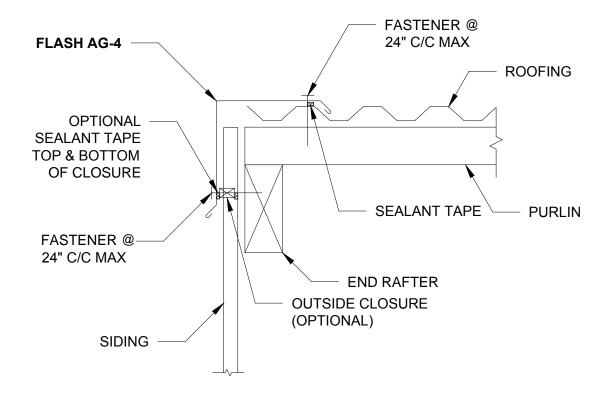


# **GABLE - GRANDRIB 3, STRONGRIB**

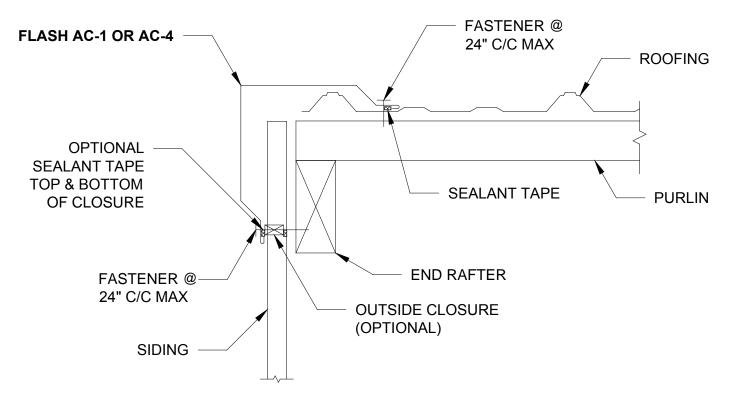


# **FLYING GABLE DETAIL**

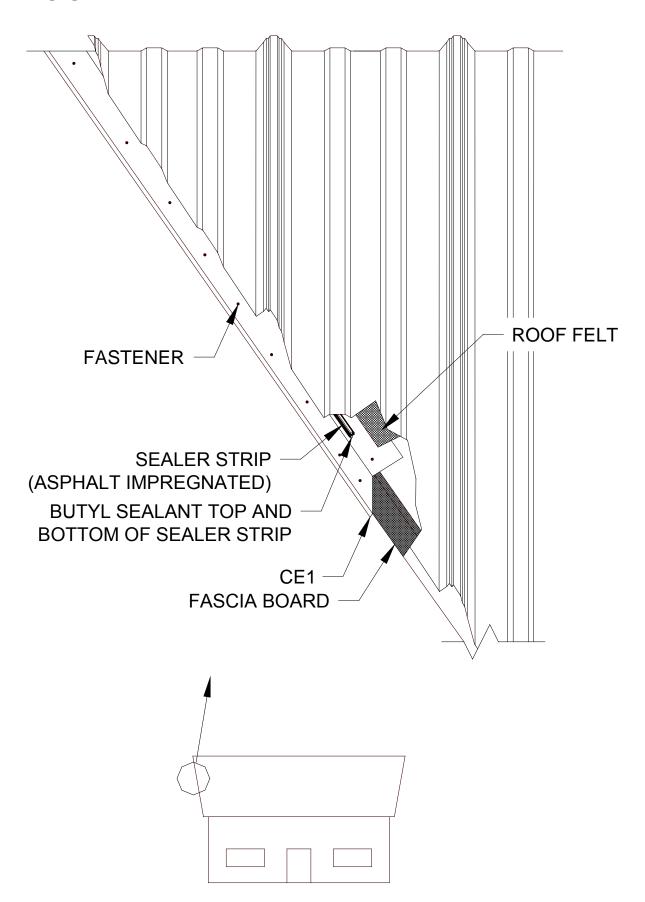


# **ENDWALL**

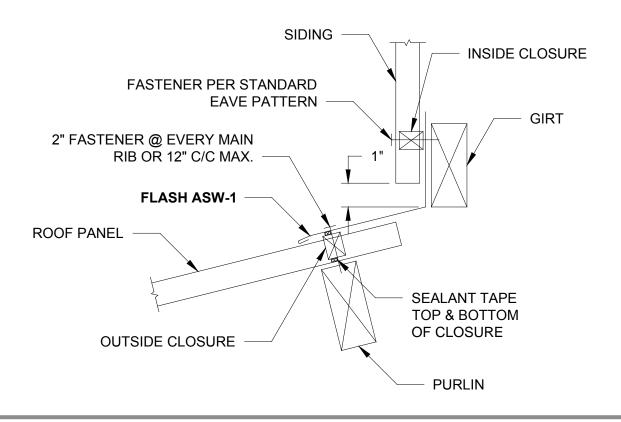


# **ENDWALL - NOTCHED**

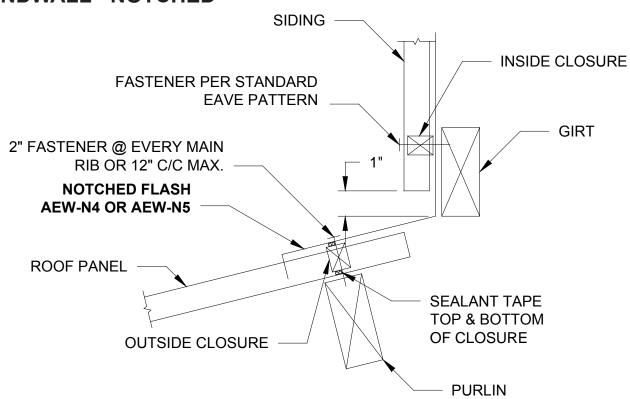

### **SIDEWALL**

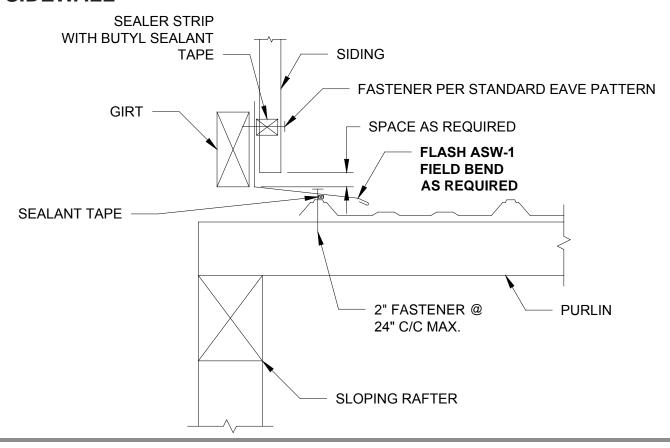


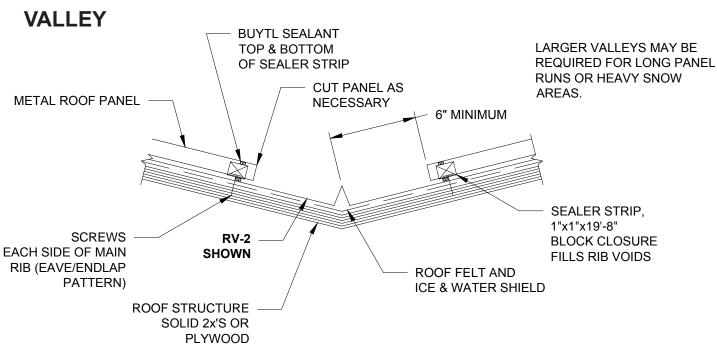


NOTE: VALLEY FLASH MUST HAVE SOLID SUPPORT.

FOR ADDITIONAL INFORMATION ON THE VALLEY DETAIL REFER TO PAGES 42 AND 43 OF THIS BOOK.

### **GAMBREL**

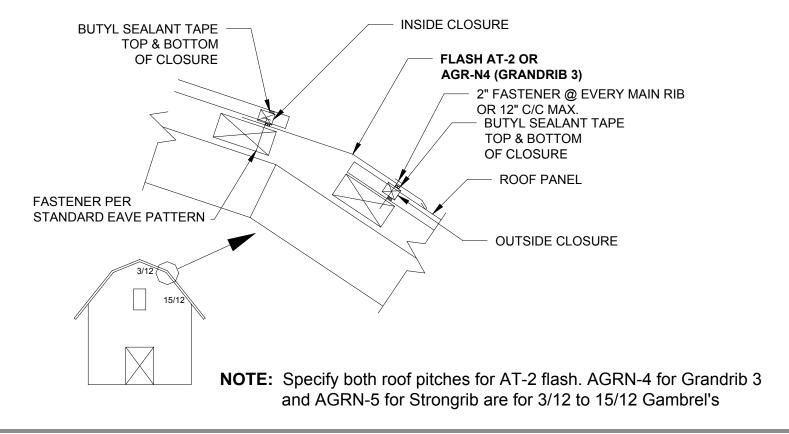


### **TRANSITION**

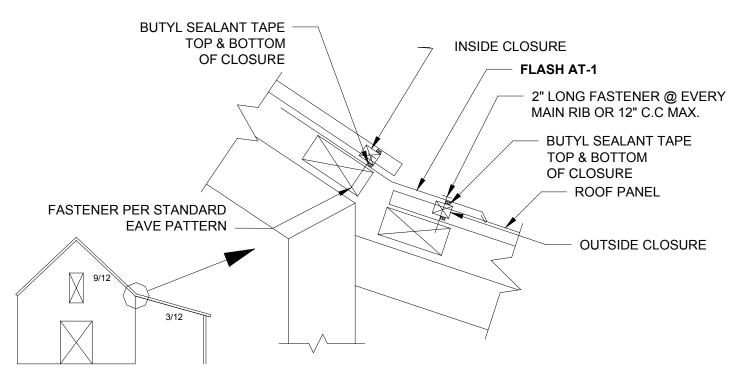


**NOTE:** Specify both roof pitches when ordering AT-1. Standard is 9/12 to 3/12.

# **OUTSIDE CORNER**

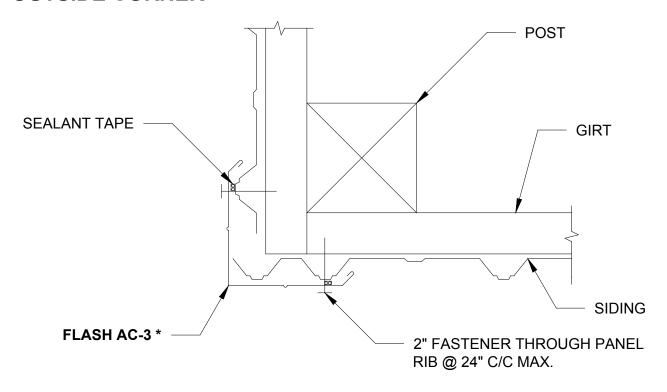


\* Available in Lancaster service area only.


# **OUTSIDE CORNER**

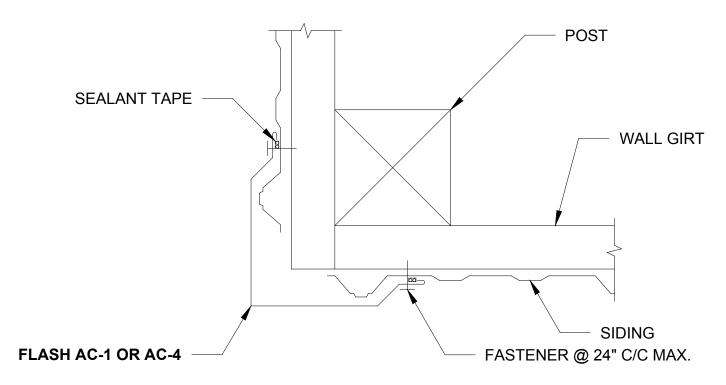


# **INSIDE CORNER**

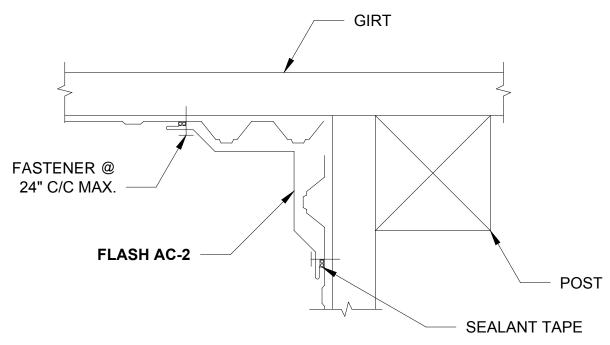



# **BASE GUARD**

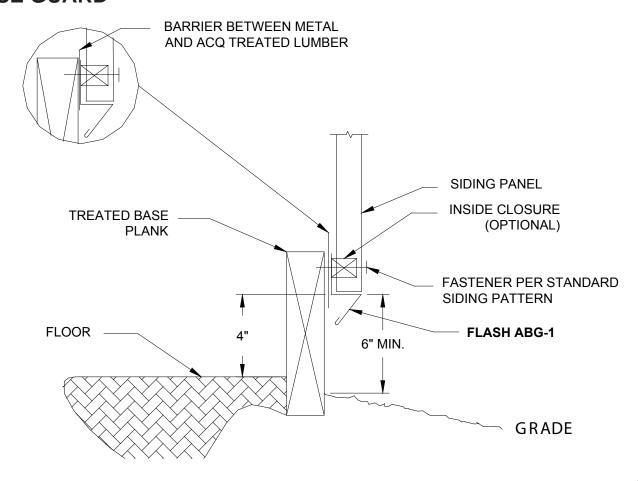


# **DOOR JAMBS**

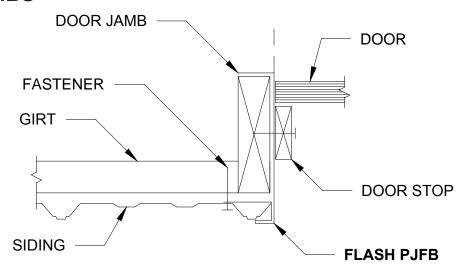


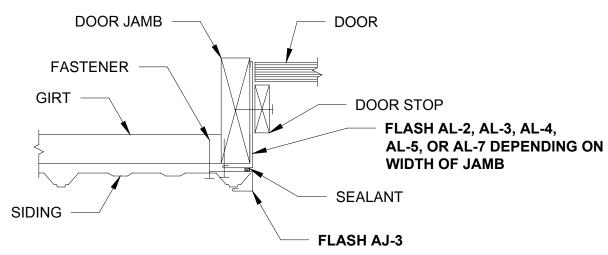


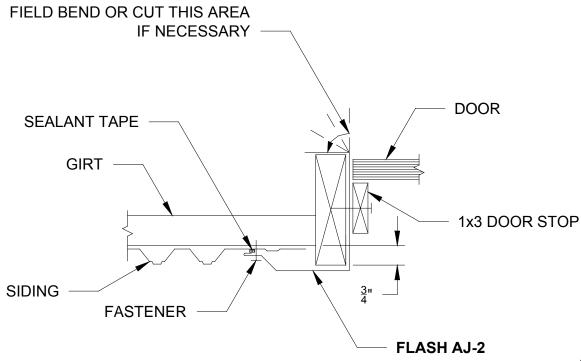


# **OVERHEAD DOOR JAMBS**

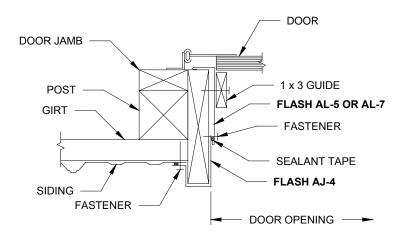


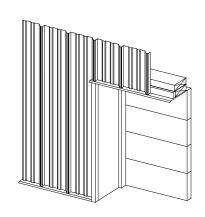

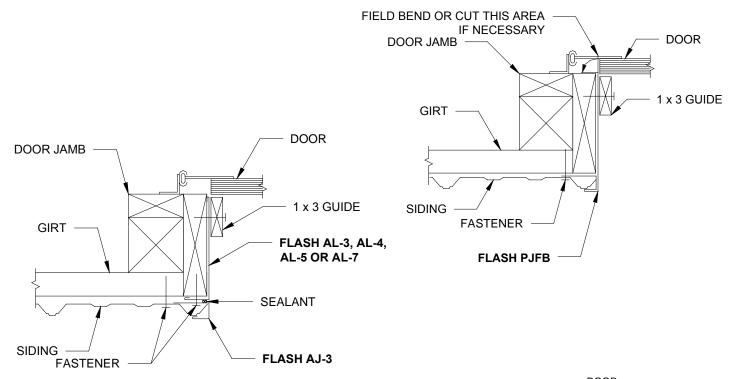


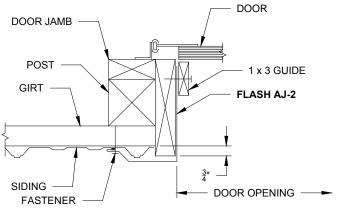


# **DOOR HEADER**

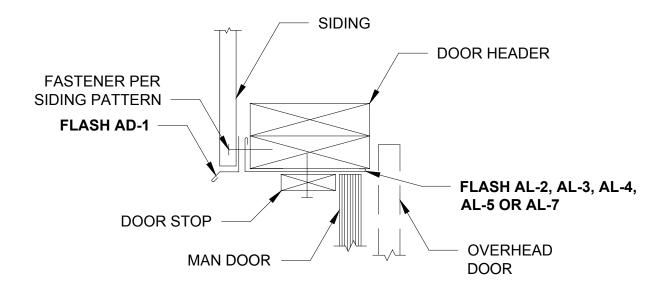


# **SLIDING DOOR JAMB DETAIL**

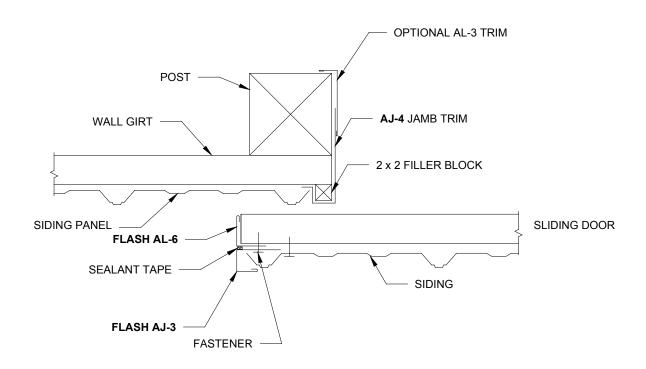

### SLIDING DOOR HEADER DETAIL

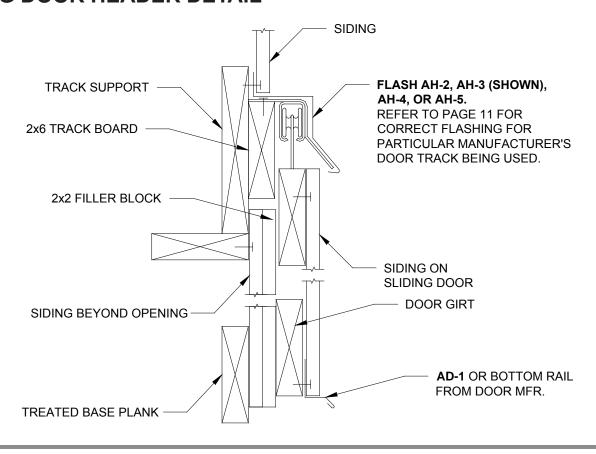



# TRANSLUCENT PANEL

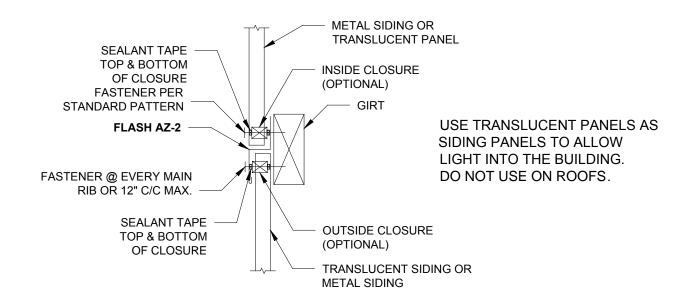


# **WINDOW DETAILS**

# SILL

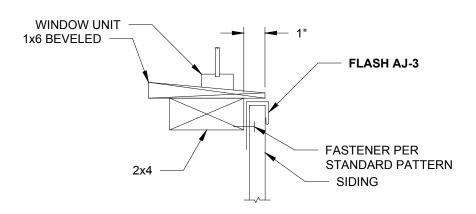


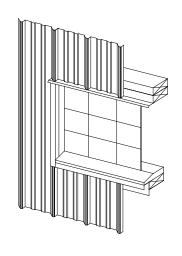


# **HEAD**

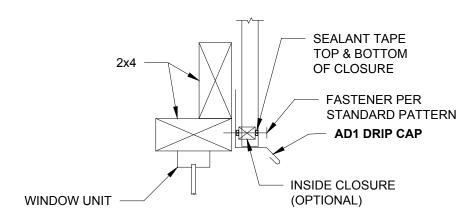

# **JAMB**

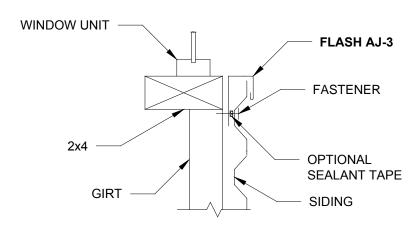

# **Residential Building Details**

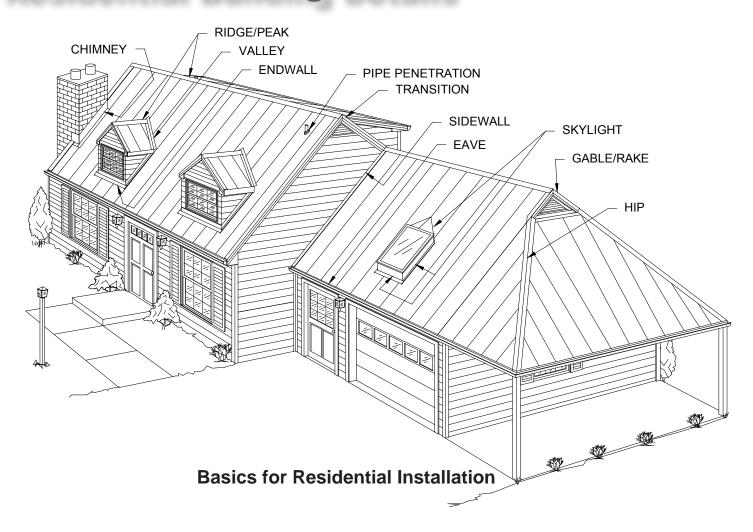

- 1. Determine the thickness and type of substrate to be used to support the metal roofing.

  Solid decking is highly recommended for all resdiential applications (i.e., plywood, OSB).
- 2. Refer to the Load-Span tables to select the proper fastener and spacing to meet loads on your structure.

Nails are NOT recommended for residential applications.

- 3. Consult local building codes and restrictions to determine acceptable methods of construction for residential applications in your area.
- 4. Solid decking with 30# felt or Pro Master® underlayment for residential applications is recommended. Ice & water shield or similar self-adhesive membrane is recommended at all valleys, dormers, chimneys, transitions, skylights and other critical areas.
- 5. When re-roofing with metal panels over an existing shingle roof, 2x4 purlins or 1x4 furring strips run parallel with the ridge of the roof and must be securely fastened into the roof rafters or trusses.
- 6. Request Fabral's technical bulletins # 720 and # 721 for more details on residential roofing.

# **Residential Load Table**

# GRANDRIB 3<sup>®</sup>

# Load-Span Tables For 29 Gauge Grandrib 3 & Alu-Tuff


Allowable Wind Uplift Loads (psf)

### Spacing of Fastener Rows

Substrate	Fastener	9"	12"	15"	18"	21"	24"
3/4" Plywood	# 14 Woodtite	275.6	206.7	165.4	137.8	118.1	103.4
5/8" Plywood	# 14 Woodtite	160	120	96	80	68.6	60
1/2" Plywood	# 14 Woodtite	135.9	101.9	81.5	67.9	58.2	51.0
23/32" OSB	# 14 Woodtite	115.9	86.9	69.5	57.9	49.7	43.5
19/32" OSB	# 14 Woodtite	100.7	75.5	60.4	50.3	43.1	37.8
7/16" OSB	# 14 Woodtite	61.5	46.1	36.9	30.7	26.3	23.1
Solid 2x SPF	# 14 Woodtite	293	220.0	176.0	146.7	125.7	110.0
Solid 1x Pine	# 14 Woodtite	207.1	155.3	124.2	103.5	88.7	77.7
Solid 2x SPF	# 9 WoodFast	218.7	164.0	131.2	109.3	93.7	82.0
Solid 1x Pine	# 9 WoodFast	168.4	126.3	101.0	84.2	72.2	63.2
	Screws per Square	190	150	120	100	90	80


The Above Loads and fastener quantities are based on the standard fastening schedule shown on page 4 of this book, with the fastener having an embedment depth of 1" into the solid wood and penetrating the plywood or OSB. Contact FABRAL for additional design information on our products.


# **Other Residential Profiles**

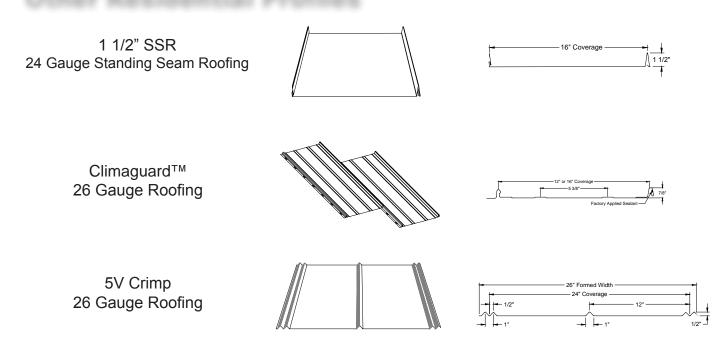


# Standard Residential Flashings/Trim

All flashing is 10' 6" in length & available in steel & aluminum, unless otherwise noted. Please contact Fabral for specifics on the trim available in your area.

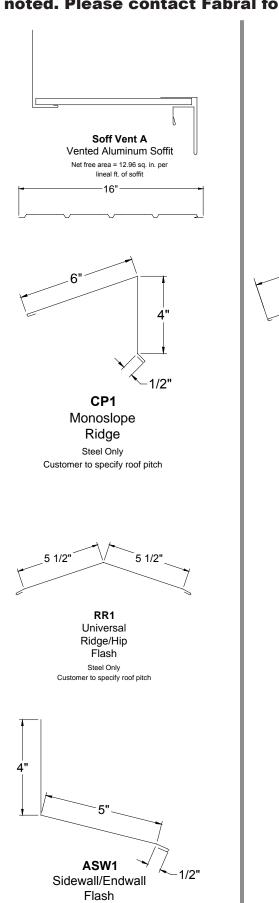

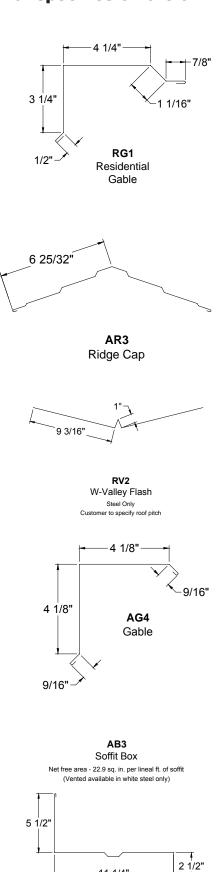


-11 1/4"-

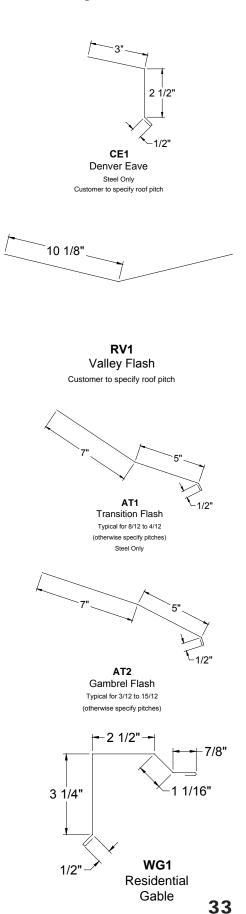


All residential flashings are formed for a 4/12 pitch unless otherwise requested by the customer.


# **RESIDENTIAL RIDGE/HIP**

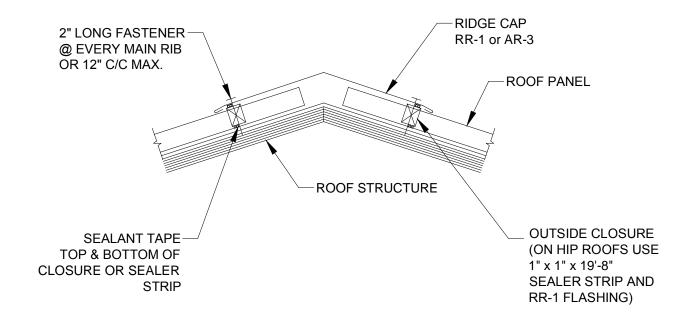


# **RESIDENTIAL VENTED RIDGE**

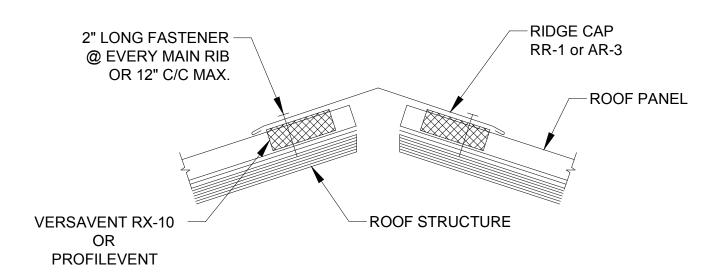


# **RESIDENTIAL VENTED EAVE**

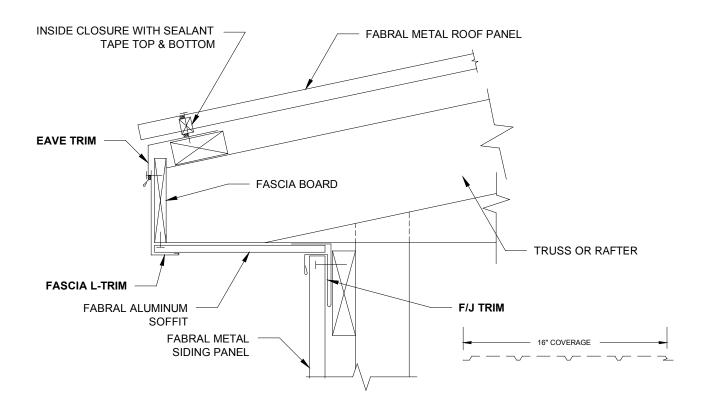


# **RESIDENTIAL EAVE**

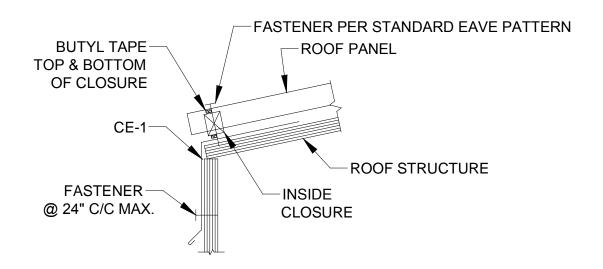


# **RESIDENTIAL GABLE**

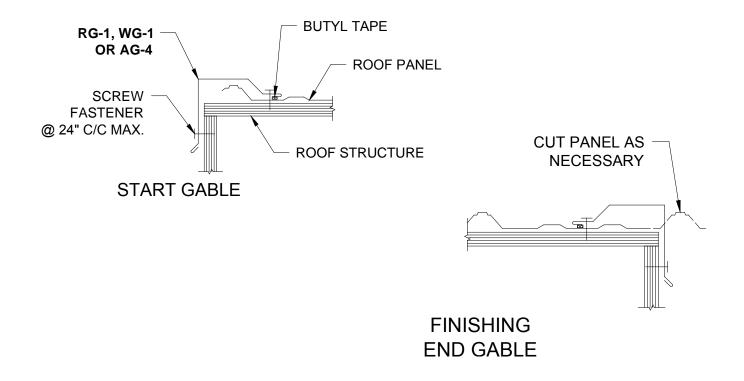


# **RESIDENTIAL ENDWALL**

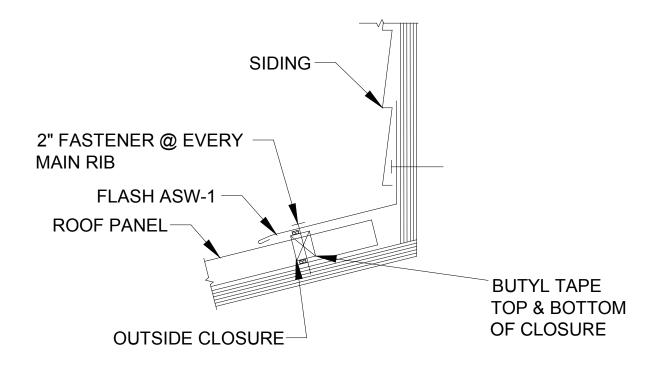


### RESIDENTIALGAMBREL

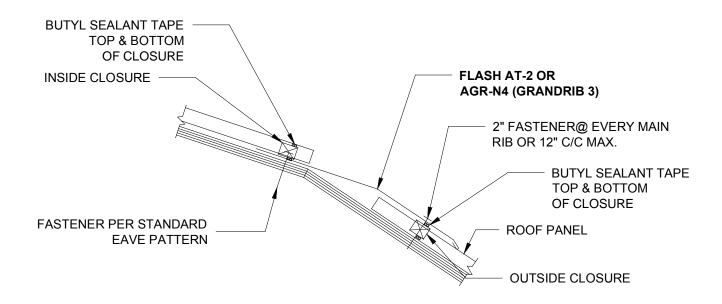


# **RESIDENTIAL SIDEWALL**

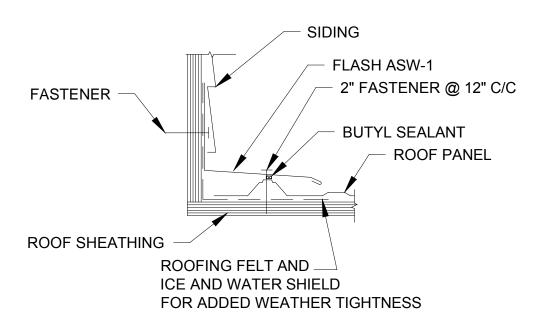


# **RESIDENTIAL TRANSITION**

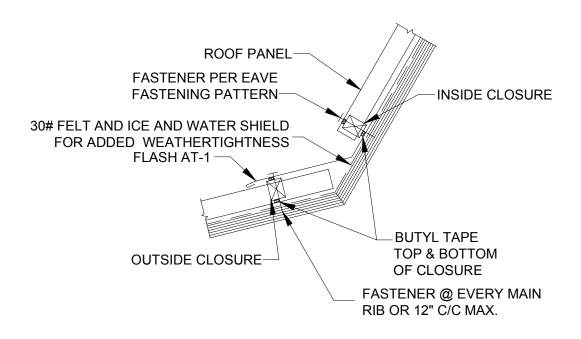

# **RESIDENTIAL PIPE BOOTS**

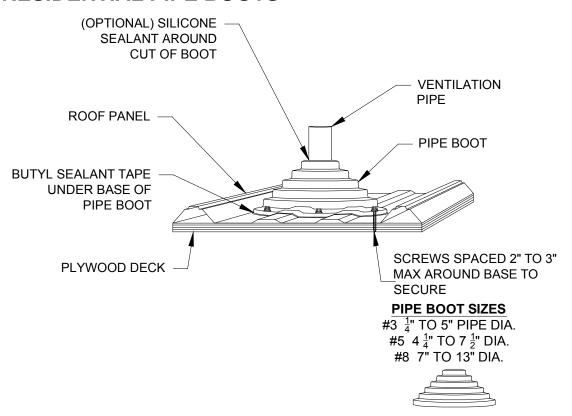


### **SKYLIGHT & CHMINEY DETAILS**

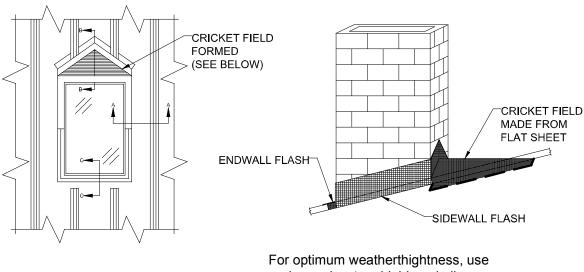


**NOTE:** SEE CROSS SECTIONS A-A, B-B, C-C For optimum weatherthightness, use ice and water shield or similar around penetrations.


### **CRICKET FIELD FORMING**

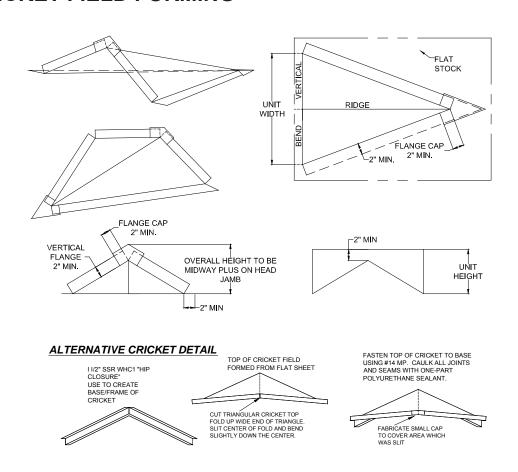


### **SKYLIGHT DETAILS**

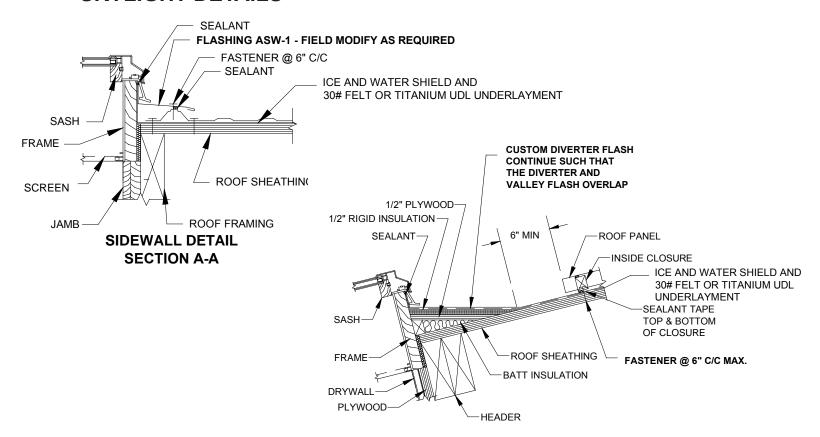


# CRICKET FIELD FORMING SECTION B-B

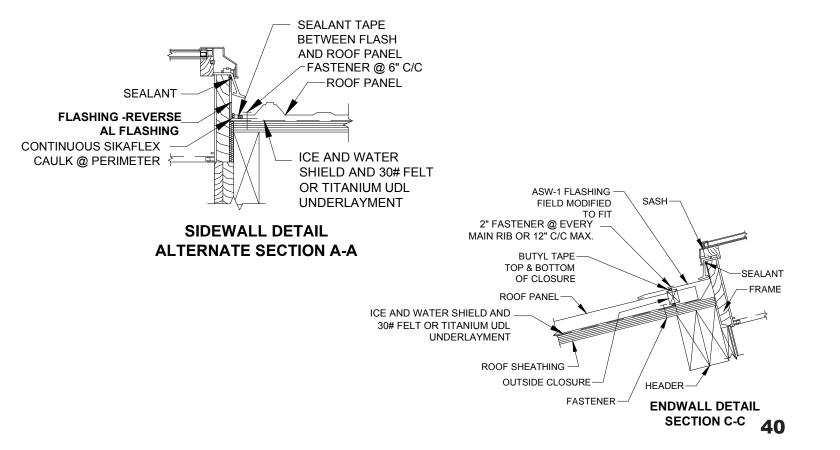


### **CHIMNEY DETAILS**

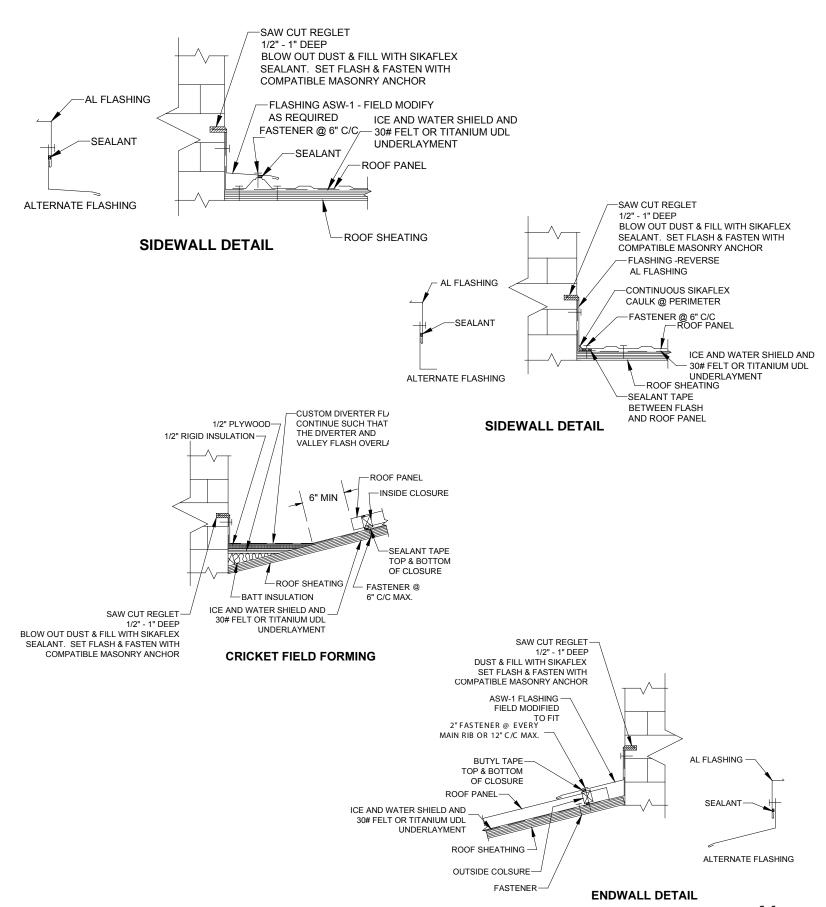


# DORMER DETAILS

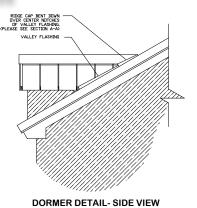

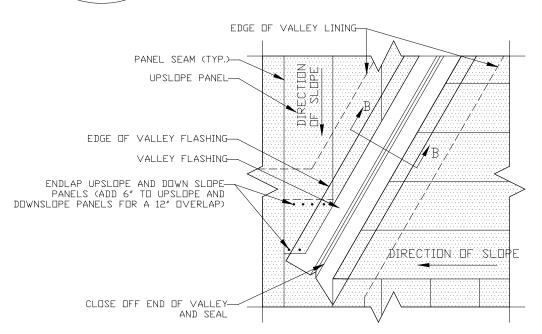


### PLAN VIEW OF SIDE OF DORMER

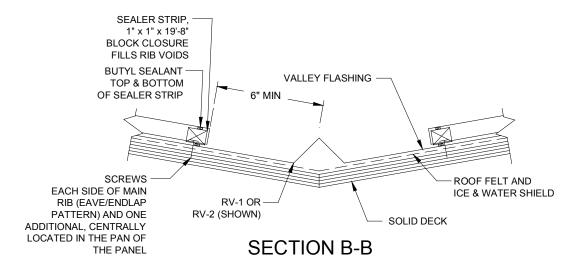



SOLID SUPPORT IS REQUIRED UNDER THE VALLEY. EPDM LINING IS RECOMMENDED UNDER LAPPED PANELS AND VALLEY FLASHING. LINING MUST CONTINUE DOWN TO EAVE LINE.

# **DORMER DETAILS**

CUT VALLEY PEAKS TO JOIN CLEANLY AND SEAL; COVER JOINT WITH ADDITIONAL FLASHING AND SEAL

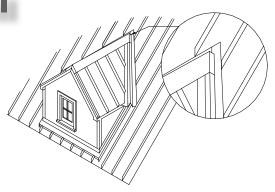


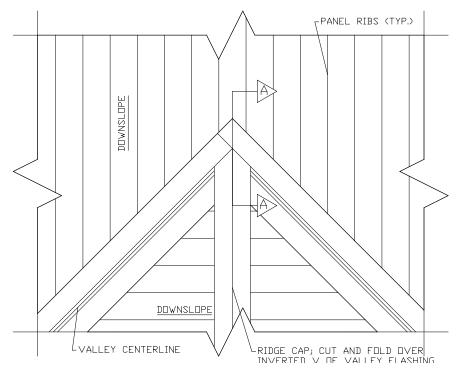

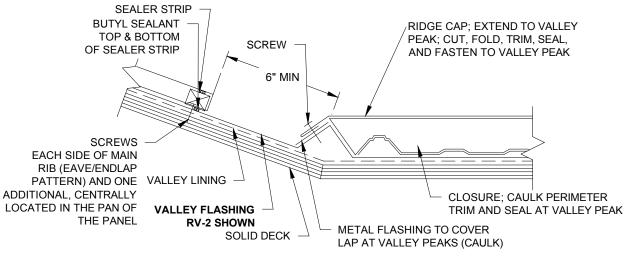


**SECTION A-A** 

# Accessories



Flat 29 gage painted and plain galvanized sheets available in full width  $(40\frac{13}{16}" \times 10')$ . Flat sheets are made in grade 33 steel for better hemming, forming, and flexibility for field forming.

Used for field forming crickets around chimneys, skylights, and penetrations. Also used for field forming special flashing as necessary.



7 3"

Pipe Flashing

**Gray EPDM** 

**Base Diameter** 


**Sealant Tape**  $\frac{3}{16}$ " x  $\frac{1}{4}$ " x 40'

**Pipe Boots** 

Item

No.

3



Pipe Siz

Min




**PROFILE VENT** GRANDRIB 3 & ALU-TUFF (SHOWN), **5V CRIMP** 

Grandrib 3 net free area = 10.66 sq. in. per lineal ft. of ridge (5.33 per side)



**Asphalt Impregnated Sealer Strip** 1"x1"x19'-6.8" long USE AT VALLEYS AND HIPS



Translucent Panels **Fiberglass** 

Grandrib 3 - White, Green - 8', 10', 12' Strongrib - White - 10', 12' Fabrib - Green -12' (availability by location - check with sale service rep.)

SunSky Polycarbonate Grandrib 3 & Alutuff Clear & White - 8',10',12' (Available Everywhere)



Inside (Eave)


Outside (Ridge)

Grandrib 3, Strongrib, 14" Corrugated, 2½" Corrugated, 5V Crimp, and Fabrib available by location - check with sales service rep.


### **Screws**




#9-16 WoodFast  $\frac{1}{4}$ " hex head, EPDM/metal washer, Oxyseal Long-Life Coating Available in 1",  $1\frac{1}{2}$ ", 2",  $2\frac{1}{2}$ " and 3" - Plain or Painted



#10-16 Ultimate WoodTite  $\frac{5}{16}$ " cast Zinc hex head Available in 1", 1  $\frac{1}{2}$ ", 2" ,  $2\frac{1}{2}$ " and 3" USE WITH GALVALUME PANELS



#9-16 WoodFast 300 Series Stainless Steel Available in 1", 1 $\frac{1}{2}$ ", and 2"  $\frac{1}{4}$ " hex head, EPDM/metal washer USE WITH **ALUMINUM** PANELS



Fabroseal with  $\frac{1}{4}$ " washer for roofing -2",  $2\frac{1}{2}$ " & 3" Regular neoprene washer for siding  $-1\frac{1}{2}$ ",  $1\frac{3}{4}$ ", 2", &  $2\frac{1}{2}$ " Plain Zinc coated and Painted



#14-10 WoodTite

<sup>5</sup>∕<sub>16</sub>" hex head, EPDM/metal washer, Oxyseal Long-Life coating. Plain or Painted 1", 11/2", 2" USE AS STITCH SCREW & TO **FASTEN METAL TO PLYWOOD OR OSB**