



off-road driven!™



2016 APPLICATION GUIDE

SUSPENSION • LIGHTING • WARRANTY

Q1



<b>SUSPENSION .....</b>	<b>3</b>
LEVEL LIFT .....	4
PRO RUNNER SHOCKS/ CONTROL ARMS .....	11
MX SHOCKS .....	18
ES SHOCKS .....	28
SHOCKS/MISC .....	60
STEERING STABILIZERS.....	66
SUSPENSION KITS// CHEVY-GMC .....	76
SUSPENSION KITS// DODGE RAM .....	113
SUSPENSION KITS// FORD.....	128
SUSPENSION KITS// JEEP.....	176
SUSPENSION KITS// TOYOTA.....	192
PARTS.....	211
ACCESSORIES .....	226
<b>EXPLORER LIGHTING.....</b>	<b>235</b>
<b>PRO COMP PROMISE.....</b>	<b>240</b>
<b>LIFT SHIELD .....</b>	<b>241</b>

# SUSPENSION



off-road driven!™

## Chevrolet

Application	Year	WD	Description	Part No.	Front Lift Ht.	Rear Lift Ht.	Rec. Max Tire Size	Rec. Front Shock	Rec. Rear Shock	Notes:
<b>CHEVY/ GMC/ CADILLAC/ HUMMER</b>										
<b>Level Lift Nitro Kits</b>										
Avalanche/ Escalade/ Suburban/ Tahoe/ Denali/ Yukon/ Yukon XL - 1500	07-16	4WD/ 2WD	Strut Ext/ Rear Spacer	63165K	2.25"	1.5"	33" x 12.50"	618253	926543	1,5
Tahoe/ Denali/ Yukon - 1500	00-06	4WD/ 2WD	Torsion Key/ Rear Spacer	63155K	2.5"	1.0"	33" x 12.50"	917580	925543	1
Trailblazer / Envoy	02-09	4WD	Strut Ext/ Spring Shackle	63215K	2.0"	1.0"	32" x 11.50"	-	-	1
Colorado/ Canyon	15-16	4WD	Strut Ext/ preload/ Rear Blocks	63162K	2.5"	1.0"	32" X 11.00"	-	-	1
Colorado / Canyon	04-12	2WD	Strut Ext/ Spring Shackle	63225K	2.5"	1.5"	31" x 10.50"	917515	924507	1
Silverado/ Sierra - 2500HD	11-16	4WD	Torsion Key/ Rear Blocks	63161K	2.5"	1.5"	33" x 12.50"	-	-	1,2,3
<b>Level Lift Kits</b>										
Avalanche/ Escalade/ Suburban/ Tahoe/ Denali/ Yukon/ Yukon XL - 1500	07-16	4WD/ 2WD	Strut Ext	63230	1.5"	-	32" x 11.50"	618253	-	1, 5
	07-16	4WD/ 2WD	Strut Ext	63235	2.25"	-	33" x 12.50"	618253	-	1, 5
	99-06	4WD/ 2WD	Torsion Key	63150	2.5"	-	32" x 11.50"	917580	-	1,2,3
Avalanche/ Suburban/ Yukon XL - 2500	00-14	4WD/ 2WD	Torsion Key w/ Shk Ext	63200	2.25"	-	32" x 11.50"	917552	-	1,2,3
Colorado/ Canyon	15-16	4WD	Strut Ext - preload spacer	63162	2.5"	-	32" x 11.00"	-	-	1,2
Colorado / Canyon	04-11	4WD	Torsion Key	63220	2.5"	-	30" x 9.50"	917515	-	1,2,3
Hummer H-2	03-10	4WD	Torsion Key w/ Shk Ext	63200	2.5"	-	37" x 13.50"	917552	-	1,2,3
Hummer H-3	06-10	4WD	Torsion Key	63220	2.25"	-	33" x 12.50"	917580	-	1,2,3
Silverado / Sierra - 1500	07-16	4WD/ 2WD	Strut Ext	63230	1.5"	-	32" x 11.50"	618253	-	1,4
	07-16	4WD/ 2WD	Strut Ext	63235	2.25"	-	33" x 12.50"	618253	-	1,4
Silverado / Sierra - 1500 Classic	99-07	4WD	Torsion Key	63150	2.5"	-	32" x 11.50"	917580	-	1,2,3
Silverado / Sierra - 1500 Classic 2WD w Torsion Bars	05-07	2WD	Torsion Key	63150	2.5"	-	32" x 11.50"	917580	-	1,2,3
Silverado / Sierra - 1500 Classic 2WD w Coil Springs	99-06	2WD	Coil Spacer	63175	2.0"	-	32" x 11.50"	917515	-	1
Silverado/ Sierra - 1500HD/ 2500HD/ 3500HD/ K2500	99-10	4WD/ 2WD	Torsion Key w/ Shk Ext	63200	2.5"	-	33" x 12.50"	917552	-	1,2,3
Silverado/ Sierra - 2500HD	11-16	4WD/ 2WD	Torsion Key w/ Shk Ext	63161	2.5"	-	33" x 12.50"	-	-	1,2,3
<b>Level Lift Rear Kts</b>										
Avalanche/ Escalade/ Suburban/ Tahoe/ Denali/ Yukon/ Yukon XL - 1500	99-16	4WD/ 2WD	Coil Spacer	63160	-	1.0"	33" x 12.50"	-	924543	5
	99-16	4WD/ 2WD	Coil Spacer	63165	-	1.5"	33" x 12.50"	-	925543	5
Silverado/ Sierra - 1500	99-16	4WD/ 2WD	Rear Block Kit w/ U-Bolts	63153	-	3.0"	33" x 12.50"	-	926543	-
	99-16	4WD/ 2WD	Rear Block Kit w/ U-Bolts	63152	-	2.0"	33" x 12.50"	-	926543	-
Silverado/ Sierra - 1500HD/ 2500HD/ 3500HD/ K2500	99-10	4WD/ 2WD	Rear Block Kit w/ U-Bolts	63201	-	1.0"	33" x 12.50"	-	929543	-
	99-10	4WD/ 2WD	Rear Block Kit w/ U-Bolts	63202	-	2.0"	33" x 12.50"	-	929543	-
<b>Level Lift Accessories</b>										
Avalanche/ Escalade/ Suburban/ Tahoe/ Denali/ Yukon/ Yukon XL - 1500	00-06	4WD/ 2WD	Tie Rod Reinforcement	63305	-	-	-	-	-	-
Silverado/ Sierra - 1500	99-07	4WD/ 2WD	Tie Rod Reinforcement	63305	-	-	-	-	-	-
Silverado/ Sierra - 1500HD/ 2500HD/ 3500HD/ K2500	00-10	4WD/ 2WD	Tie Rod Reinforcement	63305	-	-	-	-	-	-

**Notes:**

- (1) Vehicle will require alignment after kit is installed.
- (2) In order to install Max Tire Size recommendations, it may be required to retain the factory wheel width/ backsparing/ offset. Some applications may require the removal of the front inner mud flaps and/ or other fender modifications. It is up to the installer to verify tire fitment and clearance for safe operation of vehicle.
- (3) Maximum height achieved will depend upon final torsion bar adjustment, accessories, weight carried, and the age of the torsion bars.
- (4) Replacement front strut Part number 618253 is for 07-13 models only - excludes 2014 models
- (5) Excludes Magnetic Ride Control (LTZ) and Max Trailering package or any model with Air / Electronic / Hydraulic ride adjusting features.

Ford

Application	Year	WD	Description	Part No.	Front Lift Ht.	Rear Lift Ht.	Rec. Max Tire Size	Rec. Front Shock	Rec. Rear Shock	Notes:
<b>FORD/ LINCOLN</b>										
<b>Level Lift Nitro Kits</b>										
Expedition	03-09	4WD	Strut Ext/ Strut Ext	62220K	3.0"	2.0"	33" x 12.50"	-	-	1,2
F150	2015	4WD	Strut Ext/ spring preload/ 1.5" Rear Blocks	62206K	2.5"	0.5"	35" x 12.50"	-	-	1,2
	2015	2WD	Strut Ext/ spring preload/ 1.5" Rear Blocks	62206K	2.5"	1.5"	35" x 12.50"	-	-	1,2
F250	11-16	4WD	Coil Spacers /Track Bar Drop / 4" Rear Blocks w U-Bolts	62669K	2.5"	2.0"	35" x 12.50"	924553	929508	1,2
	11-16	4WD	Coil Spacers /Track Bar Drop / Radius Arm Drops / 5" Rear Blocks w U-Bolts	62689K	3.5"	1.0-3.0"	35" x 12.50"	925553	929508	1,2
F350 w/Tow Package	11-16	4WD	Coil Spacers /Track Bar Drop / 5" Rear Blocks w U-Bolts	62663K	2.5"	1.0"	35" x 12.50"	924553	929508	1,2
F250	08-10	4WD	Coil Spacers /Track Bar Drop / 4" Rear Blocks w U-Bolts	62668K	2.5"	2.0"	35" x 12.50"	924553	929508	1,2
	08-10	4WD	Coil Spacers /Track Bar Drop / Radius Arm Drops / 5" Rear Blocks w U-Bolts	62688K	3.5"	1.0-3.0"	35" x 12.50"	925553	929508	1,2
	05-07	4WD	Coil Spacers /Track Bar Drop / Radius Arm Drops / 5" Rear Blocks w U-Bolts	62687K	3.5"	1.0-3.0"	35" x 12.50"	925553	929508	1,2
<b>Level Lift Kits</b>										
Expedition	97-02	4WD	Torsion Key	62150	2.5"	-	33" x 12.50"	917515	-	1,2,3
F150	2015	4WD/ 2WD	Strut Ext/ spring preload	62206	2.5"	-	35" x 12.50"	-	-	1
F150/ Lincoln Mark LT	09-14	4WD	Strut Ext	62159	2.0"	-	35" x 12.50"	621553	-	1
	04-08	4WD	Strut Ext	62200	3.0"	-	35" x 12.50"	621553	-	1
	97-03	4WD	Torsion Key	62150	2.5"	-	33" x 12.50"	917515	-	1,2
	09-14	2WD	Strut Ext	62200	3.0"	-	35" x 12.50"	621553	-	1
	09-14	2WD	Strut Ext	62160	2.5"	-	35" x 12.50"	621553	-	1
	04-08	2WD	Strut Ext	62200	3.0"	-	35" x 12.50"	620553	-	1
F250/ F350	05-16	4WD	Coil Spacer w/ Shk Ext	62245	2.5"	-	35" x 12.50"	924553	-	1,2
	11-16	4WD	Coil Spacer w/ Shk Ext /Sway Bar Drop Brackets	62161	2.5"	-	35" x 12.50"	924553	-	1,2
	11-16	4WD	Coil Spacer/ Track Bar Drop	62667	2.5"	-	35" x 12.50"	924553	-	1
	11-16	4WD	Coil Spacer/ Track Bar Drop	62666	2.5"	-	35" x 12.50"	924553	-	1
	05-07	4WD	Coil Spacer/ Track Bar Drop	62665	2.5"	-	35" x 12.50"	924553	-	1
Ranger/ Edge	98-11	4WD	Torsion Key	62170	2.25"	-	32" x 11.50"	-	-	1,2,3
<b>Level Lift Rear Kits</b>										
F150	04-14	2WD	Rear Block Kit w/ U-Bolts	62201	-	1.5"	35" x 12.50"	-	927504	-
	04-14	4WD	Rear Block Kit w/ U-Bolts	62203	-	3.0"	35" x 12.50"	-	929504	-
F250/ F350	11-16	4WD	Rear Block Kit w/ U-Bolts	62246	-	4.0"	35" x 12.50"	-	932008	-
	11-16	4WD	Rear Block Kit w/ U-Bolts	62346	-	5.0"	35" x 12.50"	-	934008	-
	99-10	4WD/ 2WD	Rear Block Kit w/ U-Bolts	62244	-	4.0"	35" x 12.50"	-	932008	-
	99-10	4WD/ 2WD	Rear Block Kit w/ U-Bolts	62345	-	5.0"	35" x 12.50"	-	934008	-
	99-10	4WD	Rear Block Kit w/ U-Bolts	62242	-	4.0"	35" x 12.50"	-	932008	-
F250/ F350	11-16	4WD	Rear Kit: U-Bolts (16mm x 400mm or 15.75")	62248	-	-	-	-	-	-
	11-16	4WD	Rear Kit: U-Bolts (16mm x 420mm or 16.54")	62347	-	-	-	-	-	-
<b>Level Lift Accessories</b>										
F250/ F350	08-16	4WD	Track Bar Drop Bracket	62687	2.5"- 3.5"	-	-	-	-	-
	05-07	4WD	Track Bar Drop Bracket	62684	2.5"- 3.5"	-	-	-	-	-
F250/ F350	05-16	4WD	Radius Arm Drop Brackets	62698	2.5"- 3.5"	-	-	-	-	-
F250/ F350	05-16	4WD	1" Lower Spring Spacers	62699	1"	-	-	-	-	-

LEVEL LIFT

Notes

- (1) Vehicle will require alignment after kit is installed.
- (2) In order to install Max Tire Size recommendations, it may be required to retain the factory wheel width/ backspacing/ offset. Some applications may require the removal of the front inner mud flaps and/ or other fender modifications. It is up to the installer to verify tire fitment and clearance for safe operation of vehicle.
- (3) Maximum height achieved will depend upon final torsion bar adjustment, accessories, weight carried, and the age of the torsion bars.

## Dodge

Application	Year	WD	Description	Part No.	Front Lift Ht.	Rear Lift Ht.	Rec. Max Tire Size	Rec. Front Shock	Rec. Rear Shock	Notes:
<b>DODGE</b>										
<b>Level Lift Nitro Kits</b>										
Ram - 1500	09-12	4WD	Strut Ext/ Rear Spacer	<b>61180K</b>	2.5"	1.5"	35" x 12.50	-	927543	1
<b>Level Lift Kits</b>										
Dakota	05-10	2WD	Strut Ext	<b>61220</b>	2.0"	-	32" x 11.50"	-	-	1
Durango / Aspen	04-10	4WD/ 2WD	Strut Ext	<b>61230</b>	2.25"	-	33" x 12.50"	-	-	1
Ram - 1500	09-12	4WD	Strut Ext	<b>61180</b>	2.0"	-	35" x 12.50"	-	-	1
	06-08	4WD	Strut Ext	<b>61170</b>	2.5"	-	35" x 12.50"	-	-	1
	02-05	4WD	Torsion Key	<b>61151</b>	2.0"	-	35" x 12.50"	917553	-	1,2,3
	94-01	4WD	Coil Spacer	<b>61240</b>	2.0"	-	33" x 12.50	924553	-	1
Ram - 2500 / 3500 w/ Radius Arms	13-16	4WD	Coil Spacer	<b>61120</b>	2.0"	-	35" x 12.50	-	-	1,2
Ram - 1500 Mega Cab / 2500 / 3500	94-13	4WD	Coil Spacer	<b>61240</b>	2.0"	-	35" x 12.50	924553	-	1,2,4
<b>Level Lift Rear Kits</b>										
Ram - 1500	02-08	4WD/ 2WD	Rear Block Kit w/ U-Bolts	<b>61251</b>	-	1.0"	33" x 12.50"	-	925543	-
	02-08	4WD/ 2WD	Rear Block Kit w/ U-Bolts	<b>61252</b>	-	2.0"	33" x 12.50"	-	927543	-
<b>Level Lift Accessories</b>										
Ram - 2500 / 3500	03-08	4WD	Steering Box Brace	<b>61239</b>	-	-	-	-	-	-

## Jeep

<b>JEEP</b>										
<b>Level Lift Nitro Kit</b>										
Wrangler JK	07-16	4WD/ 2WD	Coil Spacer/ Coil Spacer	<b>66150K</b>	3.0"	2.0"	35" x 12.50"	924510	923500	1,2
<b>Level Lift</b>										
Wrangler TJ/ LJ (Front & Rear Set)	97-06	4WD/ 2WD	Coil Spacer/ Coil Spacer	<b>66150</b>	1.5"	1.5"	31" x 10.50"	921515	921500	1

**Notes:**

- (1) Vehicle will require alignment after kit is installed.
- (2) In order to install Max Tire Size recommendations, it may be required to retain the factory wheel width/ backspacing/ offset. Some applications may require the removal of the front inner mud flaps and/ or other fender modifications. It is up to the installer to verify tire fitment and clearance for safe operation of vehicle.
- (3) Maximum height achieved will depend upon final torsion bar adjustment, accessories, weight carried, and the age of the torsion bars.
- (4) 2013 3500 W/Radius Arms, Refer to Level Lift Kit 61120

## Nissan

Application	Year	WD	Description	Part No.	Front Lift Ht.	Rear Lift Ht.	Rec. Max Tire Size	Rec. Front Shock	Rec.Rear Shock	Notes:
<b>NISSAN/ Infiniti</b>										
<b>Level Lift Nitro Kits</b>										
Frontier / Xterra	05-12	4WD/ 2WD	Strut Ext/ Spring Shackle	<b>64660K</b>	2.5"	1.5"	33" x 12.50"	-	921508	1
<b>Level Lift Kits</b>										
Armada / Infiniti QX-56	04-07	4WD/ 2WD	Strut Ext	<b>64150</b>	2.0"	-	33" x 12.50"	-	-	1
Frontier / Xterra	05-12	4WD/ 2WD	Strut Ext	<b>64660</b>	2.0"	-	33" x 12.50"	-	-	1
Titan	08-15	4WD/ 2WD	Strut Ext	<b>64160</b>	1.5"	-	33" x 12.50"	-	-	1
<b>Level Lift Rear Kits</b>										
Titan	04-15	4WD/ 2WD	Rear Block Kit w/ U-Bolts	<b>64151</b>	-	1.0"	33" x 12.50"	-	925543	-

## Suzuki

<b>SUZUKI</b>										
<b>Level Lift Nitro Kits</b>										
Equator	09-12	4WD/ 2WD	Strut Ext/ Spring Shackle	<b>64660K</b>	2.5"	1.5"	33" x 12.50"	-	921508	1
<b>Level Lift</b>										
Equator	09-12	4WD/ 2WD	Strut Ext	<b>64150</b>	2.0"	-	33" x 12.50"	-	-	1

**Notes:**

- (1) Vehicle will require alignment after kit is installed.
- (2) In order to install Max Tire Size recommendations, it may be required to retain the factory wheel width/ backspacing/ offset. Some applications may require the removal of the front inner mud flaps and/ or other fender modifications. It is up to the installer to verify tire fitment and clearance for safe operation of vehicle.
- (3) Maximum height achieved will depend upon final torsion bar adjustment, accessories, weight carried, and the age of the torsion bars.
- (4) Excluding models with Electronic / Hydraulic ride adjusting features.

## Toyota

Application	Year	WD	Description	Part No.	Front Lift Ht.	Rear Lift Ht.	Rec. Max Tire Size	Rec. Front Shock	Rec. Rear Shock	Notes:
<b>TOYOTA</b>										
<b>Level Lift Nitro Kits</b>										
4 Runner	06-15	4WD/ 2WD	Strut Ext / Coil Spacer	<b>65210K</b>	3.0"	2.0"	33" x 12.50"	622053	922553	1,2,4
FJ Cruiser	07-14	4WD/ 2WD	Strut Ext / Coil Spacer	<b>65210K</b>	3.0"	2.0"	33" x 12.50"	622053	922553	1,2,4
Tacoma/ PreRunner (6 Lug)	05-16	4WD/ 2WD	Front Strut Ext/ Rear Blocks w U-Bolts	<b>65205K</b>	3.0"	1.0"	33" x 12.50"	622053	922518	1,2
Tacoma (5 Lug)	05-15	2WD	Strut Ext/ Rear Spacer	<b>65660K</b>	2.75"	1.75"	31" x 10.50"	-	921510	1,2
Tundra (Non TRD)	07-16	4WD/ 2WD	Strut Ext/ Rear Spacer	<b>65225K</b>	3.0"	1.0"	33" x 12.50"	623553	922518	1,2
<b>Level Lift Kits</b>										
4Runner	03-15	4WD/ 2WD	Strut Ext	<b>65205</b>	2.25"	-	32" x 11.50"	622053	-	1,2,4
FJ Cruiser	07-14	4WD/ 2WD	Strut Ext	<b>65205</b>	2.25"	-	33" x 12.50"	622053	-	1,2,4
Sequoia (Front & Rear Set)	08-12	4WD/ 2WD	Strut Ext / Coil Spacer	<b>65160</b>	2.0"	2.0"	33" x 12.50"	623553	-	1,2
Sequoia (Front Only)	00-07	4WD/ 2WD	Strut Ext	<b>65150</b>	3.0"	-	33" x 12.50"	-	-	1,2
	00-07	4WD/ 2WD	Strut Ext	<b>65175</b>	2.5"	-	32" x 11.50"	-	-	1,2
Tacoma/ PreRunner (6 Lug)	05-16	4WD/ 2WD	Strut Ext/ Diff Spacer	<b>65205</b>	2.25"	-	33" x 12.50"	622053	-	1,2
	96-04	4WD/ 2WD	Strut Ext/ Diff Spacer	<b>65170</b>	2.5"	-	32" x 11.50"	618053	-	1,2
	96-04	4WD/ 2WD	Strut Ext/ Diff Spacer	<b>65200</b>	2.0"	-	33" x 12.50"	618053	-	1
Tundra	07-16	4WD/ 2WD	Strut Ext	<b>65225</b>	2.5"	-	33" x 12.50"	623553	-	1
	99-06	4WD/ 2WD	Strut Ext	<b>65150</b>	3.0"	-	33" x 12.50"	-	-	1
	99-06	4WD/ 2WD	Strut Ext	<b>65175</b>	2.5"	-	32" x 11.50"	-	-	1
<b>Level Lift Rear Kits</b>										
Tacoma/ PreRunner	95-16	4WD/ 2WD	Rear Block Kit w/ U-Bolts	<b>65151</b>	-	1.0"	33" x 12.50"	-	922518	-
Tundra	99-16	4WD/ 2WD	Rear Block Kit w/ U-Bolts	<b>65151</b>	-	1.0"	33" x 12.50"	-	922518	-

LEVEL LIFT

## Level Lift Tools

Application	Description	Part No.
<b>UNIVERSAL</b>		
Universal - Puller Style	Torsion Key Unloading Tool	<b>67965</b>
Universal - C-Clamp Style	Torsion Key Unloading Tool	<b>67971</b>

### Notes:

- (1) Vehicle will require alignment after kit is installed.
- (2) In order to install Max Tire Size recommendations, it may be required to retain the factory wheel width/ backsparing/ offset. Some applications may require the removal of the front inner mud flaps and/ or other fender modifications. It is up to the installer to verify tire fitment and clearance for safe operation of vehicle.
- (3) Maximum height achieved will depend upon final torsion bar adjustment, accessories, weight carried, and the age of the torsion bars.
- (4) Excluding models with Electronic / Hydraulic ride adjusting features. Excludes 2015 TRD Pro Off Road Suspension package.



# Poly Lifts

Application	Year	2WD/ 4WD	Lift Height	Description	Part Number	Rec. Max Tire Size	Rec. Front Shock	Rec. Rear Shock	Notes:
<b>CHEVY/ GMC/ CADILLAC</b>									
Avalanche/ Escalade/ Suburban/ Tahoe/ Denali/ Yukon/ Yukon XL - 1500	07-16	4WD/ 2WD	2.0"	Strut Ext	<b>PLG09105</b>	32" x 11.50"	618253	924543	1,5
Silverado/ Sierra - 1500	07-16	4WD/ 2WD	2.0"	Strut Ext	<b>PLG09105</b>	32" x 11.50"	618253	925543	1
	99-07	2WD	2.0"	Coil Spacer	<b>PLG09101</b>	32" x 11.50"	917580	924543	1
	88-98	2WD	2.0"	Coil Spacer	<b>PLG09101</b>	31" x 10.50"	917515	924509	1
<b>DODGE</b>									
Ram - 1500	94-01	4WD	2.0"	Coil Spacer	<b>PLC09101</b>	35" x 12.50"	924553	925543	1,3
	94-01	2WD	2.5"	Coil Spacer	<b>PLC09100</b>	32" x 11.50"	917553	925543	1,2,3
Ram - 1500 Mega Cab/ 2500/ 3500	94-13	4WD	2.0"	Coil Spacer	<b>PLC09101</b>	33" x 12.50"	924553	927543	1
	94-13	2WD	2.5"	Coil Spacer	<b>PLC09100</b>	33" x 12.50"	917554	925543	1,2,3
	94-13	2WD	1.5"	Coil Spacer	<b>PLC09103</b>	33" x 12.50"	917553	925543	1,3
<b>FORD/ LINCOLN</b>									
Expedition	03-06	4WD/ 2WD	2.0"	Strut Ext	<b>PLF09111</b>	33" x 12.50"	-	-	1
F-150/ Lincoln Mark LT	09-14	4WD/ 2WD	2.5"	Strut Ext	<b>PLF09111</b>	35" x 12.50"	621553	927504	1
	04-08	4WD	2.5"	Strut Ext	<b>PLF09111</b>	35" x 12.50"	621553	927504	1
	04-08	2WD	2.5"	Strut Ext	<b>PLF09111</b>	35" x 12.50"	620553	925504	1
F250/ F-350/ F-450/ F-550	05-10	4WD	2.5"	Coil Spacer	<b>PLF09119</b>	35" x 12.50"	924553	929508	1,3
	99-10	2WD	2.0"	Coil Spacer	<b>PLF09101</b>	33" x 12.50"	917510	926508	1
Ranger	83-97	2WD	2.0"	Coil Spacer	<b>PLF09101</b>	29" x 8.50"	317510	326500	1
<b>JEEP</b>									
Cherokee XJ	84-01	4WD/ 2WD	1.75"	Coil Spacer	<b>PLJ09100</b>	30" x 9.50"	321515	319500	1
Grand Cherokee ZJ (Front or Rear)	92-98	4WD/ 2WD	1.75"	Coil Spacer	<b>PLJ09100</b>	30" x 9.50"	321515	322500	1
Wrangler JK (Front and Rear)	07-16	4WD/ 2WD	1.75"	Coil Spacer	<b>PLJ09137</b>	35" x 12.50"	923510	924507	1
Wrangler TJ/ LJ (Front or Rear)	97-06	4WD/ 2WD	1.75"	Coil Spacer	<b>PLJ09100</b>	31" x 10.50"	321515	321500	1
<b>NISSAN/ Infiniti</b>									
Armada/ Infiniti QX-56	04-09	4WD/ 2WD	2.0"	Strut Ext	<b>PLN09104</b>	33" x 12.50"	615053	319543	1
Titan	04-15	4WD/ 2WD	2.0"	Strut Ext	<b>PLN09104</b>	33" x 12.50"	615053	924543	1
<b>TOYOTA</b>									
4-Runner	03-15	4WD/ 2WD	2.5"	Strut Ext	<b>PLT09116</b>	33" x 12.50"	622053	321513	1,4
	96-02	4WD/ 2WD	2.5"	Strut Ext	<b>PLT09103</b>	32" x 11.50"	618053	324513	1
FJ Cruiser	07-14	4WD/ 2WD	2.5"	Strut Ext	<b>PLT09116</b>	32" x 11.50"	622053	922553	1,4
Sequoia	01-07	4WD/ 2WD	2.5"	Strut Ext	<b>PLT09103</b>	33" x 12.50"	-	324514	1
Tacoma/ PreRunner	05-16	4WD/ 2WD	2.5"	Strut Ext	<b>PLT09116</b>	33" x 12.50"	622053	922518	1,4
	96-04	4WD/ 2WD	2.5"	Strut Ext	<b>PLT09103</b>	32" x 11.50"	618053	920506	1
Tundra	00-06	4WD/ 2WD	2.5"	Strut Ext	<b>PLT09103</b>	32" x 11.50"	-	321513	1

POLY LIFT

**Notes:**

- (1) Vehicle will require alignment after kit is installed.
- (2) Kit may require aftermarket control arms to allow for proper alignment.
- (3) Kit requires longer shocks.
- (4) Excluding models with Electronic / Hydraulic ride adjusting features. Excludes 2014-15 TRD Off Road Suspension package.
- (5) Excludes Magnetic Ride Control (LTZ) and Max Trailering package or any model with Air / Electronic / Hydraulic ride adjusting features.



## Pro Runner Control Arms

Application	Year	Part Number	Notes:	Rep. Cap	Notes
<b>UNIBALL UPPER A ARM</b>					
<b>CHEVY / GMC</b>					
Colorado / Canyon - 2WD/ 4WD	15-16	0-2.5"	51005B		1
Silverado/ Sierra 1500 - 2WD/ 4WD - w factory aluminum suspension	14-16	0-2.5"	51004B	69402	1
Silverado/ Sierra 1500 - 2WD/ 4WD - w factory steel suspension	07-16	0-2.5"	51003B	69402	1,2
Avalanche/ Suburban/ Tahoe/ Yukon 1500 - 2WD/ 4WD	07-14	0-2.5"	51003B	69402	1,2
<b>FORD</b>					
F150 PU/ Lincoln Mark LT PU - 4WD	09-14	0-3"	52001B	69402	1,3
F150 PU/ Lincoln Mark LT PU - 4WD	04-08	0-3"	52001B	69402	1
<b>RAM</b>					
RAM 1500 Pickup - 4WD	09-16	0-3"	56003B	69402	1
<b>TOYOTA</b>					
Tacoma - 2WD/ 4WD	05-16	0-3"	57002B	69401	1
Tundra - 2WD/ 4WD	07-16	0-3"	57001B	69400	1

- (1) Alignment required after Uniball Upper Arms are installed.  
 (2) 14-15 GM1500 w OE Steel Suspension only.  
 (3) Excludes SVT Raptor.

## Black Series Shocks

Application	Year	Front Lift Ht.	2.75C Front Coilover	Rear Lift Height	2.0 Rear Shock
<b>CHEVY</b>					
Silverado 1500 - 2/4WD	07-16	0-2.5"	ZX4002	0-1.5"	ZX3020
<b>FORD</b>					
F150 - 4WD	2014	0-2.5"	ZX4111	0-1.5"	ZX3023
F150 - 4WD	09-13	0-2.5"	ZX4003	0-1.5"	ZX3023
F150 - 2WD	09-13	0-2.5"	ZX4069	0-1.5"	ZX3070
<b>TOYOTA</b>					
Tundra - 2/4WD	07-16	0-2.5"	ZX4078	0-1.5"	ZX3024
Tacoma / FJ Cruiser - Pre/4WD	05-16	0-2.5"	ZX4080	0-1.5"	ZX3012

## Chevrolet/ GM

Application	Year	Adjustable Height (A)	Front Lift Ht.	Front	Rear Lift Ht.	Rear	Notes:
<b>Silverado Pickup (1/2 Ton) - 4WD</b>							
K2XX GM1500	14-15	(A)	0-1.75"	ZX2108	0-1.5"	ZX2020	1
<b>With Pro Comp lift (K1154 / K1155)</b>		(A)	6"	ZX2108	4"	ZX2001	1,2
GMT900 (Incl. Z71 Pkg.)	07-13	(A)	0-1.75"	ZX2002	0-1.5"	ZX2020	1
<b>With Pro Comp lift (K1143 / K1144)</b>		(A)	6"	ZX2002	4"	ZX2001	1,2
K1500HD (Incl. Crew Cab)	99-10		0-2.0"	ZX2016	0-1.5"	ZX2034	1
<b>With Pro Comp lift (K1084)</b>			6"	ZX2006	4-5"	ZX2001	1
K1500 - Classic (Std. Cab / Ext. Cab/ Crew Cab)	99-07		0-2.5"	ZX2018	0-1.5"	ZX2034	1
<b>With Pro Comp lift (K1056 / K1057)</b>			6"	ZX2015	6"	ZX2001	1
K10/ K20	69-87		6"	ZX2101	6"	ZX2102	
<b>Suburban Blazer/Jimmy</b>							
Suburban/ Blazer/ Jimmy	73-91		6"	ZX2101	6"	ZX2102	
<b>Silverado Pickup (1/2 Ton) - 2WD</b>							
K2XX GM1500	14-15	(A)	0-1.75"	ZX2108	0-1.5"	ZX2020	1
<b>With Pro Comp lift (K1154 / K1155)</b>		(A)	6"	ZX2108	4"	ZX2001	1,2
GMT900	07-13	(A)	0-1.5"	ZX2002	0-1.5"	ZX2020	1
<b>With Pro Comp lift (K1143 / K1144)</b>		(A)	6"	ZX2002	4"	ZX2001	1,2
C1500HD (Crew Cab) (With torsion bars)	99-10		0-2.0"	ZX2016	0-1.5"	ZX2034	1
<b>With Pro Comp lift (K1084)</b>			6"	ZX2006	4-5"	ZX2001	1
K1500 - Classic (Std. Cab / Ext. Cab/ Crew Cab)	99-07		0-2.5"	ZX2018	0-1.5"	ZX2034	1
<b>With Pro Comp lift (K1056 / K1057)</b>			6"	ZX2015	6"	ZX2001	1
<b>Silverado Pickup (3/4 Ton) - 4WD</b>							
K2500HD (Incl. Crew Cab)	11-15		0-2.0"	ZX2037	1-1.5"	ZX2039	1
<b>With Pro Comp lift (K1085)</b>			6"	ZX2030	4-5"	ZX2031	1
K2500HD (Incl. Crew Cab) (9200 GVW)	99-10		0-2.0"	ZX2016	0-1.5"	ZX2034	1
<b>With Pro Comp lift (K1084)</b>			6"	ZX2006	4-5"	ZX2001	1
K30	69-87		6"	ZX2101	6"	ZX2103	
<b>Silverado Pickup (3/4 Ton) - 2WD</b>							
C2500HD (Incl. Crew Cab)	11-15		0-2.0"	ZX2037	1-1.5"	ZX2039	1
<b>With Pro Comp lift (K1085)</b>			6"	ZX2030	4-5"	ZX2031	1
C2500HD (Incl. Crew Cab) (9200 GVW)	99-10		0-2.0"	ZX2016	0-1.5"	ZX2034	1
<b>With Pro Comp lift (K1084)</b>			6"	ZX2006	4-5"	ZX2001	1
C2500 (Incl. Crew Cab)	00-10		0-2.0"	ZX2016	0-1.5"	ZX2034	1
<b>With Pro Comp lift (K1084)</b>			6"	ZX2006	4-5"	ZX2001	1
<b>Silverado Pickup (1 Ton) - 4WD</b>							
K3500HD (Incl. Crew Cab) (11400 GVW)	99-10		0"-2"	ZX2016	0-1.5"	ZX2034	1
<b>With Pro Comp lift (K1084)</b>			6"	ZX2006	4-5"	ZX2001	1
<b>Silverado Pickup (1 Ton) - 2WD</b>							
K3500HD (Incl. Crew Cab) (11400 GVW)	99-10		0"-2"	ZX2016	0-1.5"	ZX2034	1
<b>With Pro Comp lift (K1084)</b>			6"	ZX2006	4-5"	ZX2001	1

Notes:

- (1) Vehicle will require alignment after kit is installed.
- (2) When used with leveling kit or lift kit spacer, collar must be utilized on the stock height position.

## Dodge

Application	Year	Adjustable Height (A)	Front Lift Ht.	Front	Rear Lift Ht.	Rear	Notes:
<b>Ram Pickup (1/2 Ton) - 4WD</b>							
Ram 1500	09-15	(A)	0-2.75"	ZX2014	0-1.5"	ZX2028	1,2,5
-		(A)	6"	ZX2014	4.5-5.5"	ZX2001	1,2
Ram 1500	06-08	(A)	0-2.5"	ZX2017	0-1.5"	ZX2027	1,2
-		(A)	6"	ZX2017	3"	ZX2001	1,2
Ram 1500	94-01		2-3"	ZX2025	0-1.5"	ZX2027	1
<b>Ram Pickup (3/4 Ton)- 4WD</b>							
Ram 2500 w/Radius Arms (excl. Power Wagon)	14-15		0"	ZX2112	0"	ZX2113	
-			2"	ZX2112	0"	ZX2113	
			4"	ZX2114	2"	ZX2115	
			6"	ZX2116	3"	ZX2117	
<b>Ram Pickup (3/4 Ton)(Includes 1500 Mega Cab) - 4WD</b>							
Ram 2500 (Exc. Power Wagon)	03-12		0-2.0"	ZX2025	0-1.5"	ZX2027	
-			6"	ZX2009	3"	ZX2001	

PRO RUNNER

**Notes:**

- (1) Vehicle will require alignment after kit is installed.
- (2) When used with leveling kit or lift kit spacer, collar must be utilized on the stock height position.
- (5) Performance replacement upper A-arms required if ride height is added for 2013-15 Ram 1500.

## Ford

Application	Year	Adjustable Height (A)	Front Lift Ht.	Front	Rear Lift Ht.	Rear	Notes:
<b>F Series Pickup (1/2 Ton) - 4WD</b>							
F-150 (Incl. Super Crew)	15-16	(A)	0"-2"	ZX2118	0-2"	ZX2119	1,2
F-150 (Incl. Super Crew)	2014	(A)	0"-2"	ZX2111	0-1.5"	ZX2023	1,2
		(A)	6"	ZX2111	4"	ZX2042	1,2
F-150 (Incl. Super Crew)	09-13	(A)	0"-2"	ZX2109	0-1.5"	ZX2023	1,2
		(A)	6"	ZX2109	4"	ZX2042	1,2
F-150	04-08	(A)	0"-3"	ZX2076	0-1.5"	ZX2019	1,2
		(A)	6"	ZX2076	2"	ZX2023	1,2
<b>F Series Pickup (1/2 Ton) - 2WD</b>							
F-150 (Incl. Super Crew)	09-13		0"-2"	ZX2069	0-1.5"	ZX2070	1,2
			6"	ZX2069	4"	ZX2071	1,2
F-150 (Incl. Super Crew)	04-08		0"-2"	ZX2066	0-1.5"	ZX2067	1,2
			6"	ZX2066	2"	ZX2023	1,2
<b>F Series Pickup (3/4-1Ton) - 4WD</b>							
F-250 / F-350 (Incl. Quad Cab, Short Bed)	05-16		0-2.5"	ZX2022	0-1.5"	ZX2021	
			6"	ZX2032	4"	ZX2004	
F-250 / F-350	99-04		6.5"	ZX2013	4"	ZX2004	

## Jeep

Application	Year	Adjustable Height (A)	Front Lift Ht.	Front	Rear Lift Ht.	Rear	Notes:
<b>Wrangler JK Series - 2DR/4DR - 4WD</b>							
Wrangler JK (2/4 Door)	07-15		1.5-3"	ZX2084	1.5-3"	ZX2085	1
			3.5-4"	ZX2040	3.5-4"	ZX2041	1
			6"	ZX2062	6"	ZX2055	1
<b>Wrangler LJ Series - 4WD</b>							
Wrangler LJ (Unlimited)(Incl. Rubicon)	97-06		1.5"	ZX2060	1.5"	ZX2065	1
			4"	ZX2056	4"	ZX2061	1
<b>Wrangler TJ Series - 4WD</b>							
Wrangler TJ (Incl. Rubicon)	97-06		1.5"	ZX2060	1.5"	ZX2065	1
<b>Cherokee XJ - 2WD/ 4WD</b>							
Cherokee XJ (Mid Size)	84-01		3.5-4"	ZX2090	3.5-4"	ZX2091	
<b>CJ Series - 4WD</b>							
CJ5/ CJ7	76-86		3-4"	ZX2086	3-4"	ZX2087	
	55-75		2-2.5"	ZX2086	2-2.5"	ZX2087	
	55-75		3-4"	ZX2087	3-4"	ZX2087	
<b>Grand Cherokee WJ/ ZJ - 2WD/ 4WD</b>							
Grand Cherokee WJ	99-04		1.5-2"	ZX2092	1.5-2"	ZX2094	
Grand Cherokee ZJ w/Pro Comp poly lift	93-98		1.5-2"	ZX2092			
	55-75		3-4"	ZX2087	3-4"	ZX2087	

Notes:

- (1) Vehicle will require alignment after kit is installed.
- (2) When used with leveling kit or lift kit spacer, collar must be utilized on the stock height position.

## Nissan

Application	Year	Adjustable Height (A)	Front Lift Ht.	Front	Rear Lift Ht.	Rear	Notes:
<b>Titan Pickup - 4WD</b>							
Titan	04-15	(A)	0-2.0"	ZX2110	0-1.5"	ZX2045	1
With Pro Comp lift (K6001)		(A)	6"	ZX2110	3"	ZX2048	1,2
<b>Titan Pickup - 2WD</b>							
Titan	04-15	(A)	0-2.0"	ZX2110	0-1.5"	ZX2029	1
With Pro Comp lift (K6002)		(A)	6"	ZX2110	3"	ZX2048	1,2

## Toyota

Application	Year	Adjustable Height (A)	Front Lift Ht.	Front	Rear Lift Ht.	Rear	Notes:
<b>4 Runner</b>							
4 Runner	03-15	(A)	0-2.5"	ZX2080	0-1.5"	ZX2083	1,5
<b>FJ Cruiser - 4WD</b>							
FJ Cruiser	07-14	(A)	0-2"	ZX2080	0-1.5"	ZX2083	1
<b>Land Cruiser FJ40</b>							
Land Cruiser FJ 40	60-82		2.5-4"	ZX2086	2.5-4"	ZX2101	
<b>Tacoma Pickup - 4WD / PreRunner 2WD</b>							
Tacoma	05-15	(A)	0-2.5"	ZX2080	0-1.5"	ZX2012	1,2,5
		(A)	6"	ZX2080	4"	ZX2050	1,2
<b>Tundra Pickup - 2WD/ 4WD</b>							
Tundra	07-15	(A)	0-2.5"	ZX2078	0-2.5"	ZX2024	1,2,5
With Pro Comp lift (K5069)	07-15	(A)	6"	ZX2078	4"	ZX2058	1,2
Tundra	99-06	(A)	0-2"	ZX2081	0-1.5"	ZX2082	1,2

Notes:

- (1) Vehicle will require alignment after kit is installed.
- (2) When used with leveling kit or lift kit spacer, collar must be utilized on the stock height position.
- (5) Excludes 2015 TRD Pro Off Road Suspension package.

## Pro Runner Steering Stabilizers

Application	Year	Lift Height	Complete Kit	Stabilizer (Cylinder only )	Notes:
<b>DODGE - Dual Steering Stabilizers</b>					
<b>Ram Pickup (3/4 Ton / 1 Ton) - 4WD</b>					
Ram 2500 / 3500	08-13	0-6"	222583Z	ZX2904	6
Ram 2500 / 3500	03-08	0-6"	222584Z	ZX2904	6
<b>FORD - Dual Steering Stabilizers</b>					
<b>F Series ( 3/4 Ton / 1 Ton ) - 4WD</b>					
F250 / F350	05-16	0-8"	222582Z	ZX2904	6
F250 / F350	99-04	0-8.5"	222581Z	ZX2905	6
<b>JEEP -Single Steering Stabilizers</b>					
<b>Wrangler JK Series - 4WD</b>					
Wrangler JK	07-15	6"	222580Z	ZX2902	3,6
<b>Wrangler TJ / LJ Series - 4WD</b>					
Wrangler TJ / LJ	97-06	0-4"	222579Z	ZX2903	

Notes:

- (3) For use with Pro Comp 6" long arm systems.
- (6) Replacement stabilizers are sold individually.





## MX-6R — 6 Way Adjustable Monotube Reservoir Shock Absorbers

Application	Year	Lift Height	Front	Rear	Notes:
<b>CHEVROLET / GMC</b>					
<b>Silverado / Sierra PU (1/2 Ton) - 4WD</b>					
K1500 (6-Lug)	99-07	6"	-	MX6141R	
<b>With Pro Comp Multiple Shock Kit (51297)</b>			MX6064R	-	
K1500 (6-Lug)	88-99	6"	-	-	
<b>With Pro Comp Multiple Shock Kit (51294)</b>			MX6064R	-	
<b>Blazer / Suburban / Tahoe / Yukon / Yukon XL (1/2 Ton) - 4WD</b>					
K1500 (6-Lug)	00-06	6"	-	MX6143R	
<b>With Pro Comp Multiple Shock Kit (51297)</b>			MX6064R	-	
K1500 (6-Lug)	95-99	6"	-	-	
<b>With Pro Comp Multiple Shock Kit (51294)</b>			MX6064R	-	
<b>Silverado / Sierra PU (3/4 Ton) - 4WD</b>					
K2500HD/ K2500 (8-Lug)	99-10	6"	-	MX6141R	
<b>With Pro Comp Multiple Shock Kit (51211)</b>			MX6064R	-	
<b>Suburban / Yukon XL (3/4 Ton) - 4WD</b>					
K2500HD/ K2500 (8-Lug)	00-10	6"	-	MX6141R	
<b>With Pro Comp Multiple Shock Kit (51211)</b>			MX6064R	-	
<b>DODGE</b>					
<b>RAM (3/4 Ton) - 4WD</b>					
RAM 1500 Mega Cab/ 2500/ 3500	03-12	3"	-	MX6143R	
		5"-6"	-	MX6141R	
<b>With Pro Comp Multiple Shock Kit (56120)</b>			MX6065R	-	
<b>FORD</b>					
<b>F Series Pickup (1/2 Ton) - 4WD/ 2WD</b>					
F150	09-14	6"	-	MX6069R	
F150	04-08	6"	-	MX6068R	
<b>F Series Pickup (3/4 - 1 Ton) - 4WD</b>					
F-250 / F-350	08-10	6"	MX6065R	MX6069R	1
<b>With Pro Comp Multiple Shock Kit (52460)</b>			MX6065R	-	
F-250 / F-350	08-10	8"	MX6065R	MX6069R	1
<b>With Pro Comp Multiple Shock Kit (52470)</b>			MX6065R	-	
F-250 / F-350	05-07	6"	MX6065R	MX6069R	1
<b>With Pro Comp Multiple Shock Kit (52440)</b>			MX6065R	-	
F-250 / F-350	05-07	8"	MX6066R	MX6069R	1
<b>With Pro Comp Multiple Shock Kit (52450)</b>			MX6066R	-	
F-250 / F-350	99-04	4"	MX6065R	MX6069R	1
<b>With Pro Comp Multiple Shock Kit (52410/ 52420)</b>			MX6065R	-	
F-250 / F-350	99-04	6.5"	MX6066R	MX6069R	1
<b>With Pro Comp Multiple Shock Kit (52410/ 52420)</b>			MX6066R	-	
F-250 / F-350	99-04	8.5"	MX6067R	MX6069R	1
<b>With Pro Comp Multiple Shock Kit (52410/ 52420)</b>			MX6067R	-	

Notes: (1) Stem-to-Loop Conversion 690002 required to install MX6R shock in OE front position.

## MX-6R — 6 Way Adjustable Monotube Reservoir Shock Absorbers

Application	Year	Lift Height	Front	Rear	Notes:
<b>NISSAN</b>					
<b>Titan Pickup - 4WD/ 2WD</b>					
Titan	04-14	6"	-	MX6143R	
<b>TOYOTA</b>					
<b>Tacoma Pickup - 4WD/ 2WD PreRunner</b>					
Tacoma	05-15	0"	-	MX6134R	

## Travel Specifications

Application	Shock Length		MX6 Adj
	Ext.	Comp.	Part No.
<b>UNIVERSAL - Loop to Loop Mounting</b>			
7" Travel	20.50"	13.40"	MX6064R
9" Travel	26.50"	17.00"	MX6065R
10.50" Travel	27.50"	17.00"	MX6066R
10.50" Travel	27.50"	17.00"	MX6143R
12" Travel	29.00"	17.57"	MX6067R
11.5" Travel	30.50"	19.00"	MX6068R
11.5" Travel	30.50"	19.00"	MX6141R
11.5" Travel	32.00"	20.57"	MX6069R

## Reservoir Mounting Kits

Description	Part Number
<b>URETHANE MOUNT KITS</b>	
2" Reservoir to 2" Shock Body	63012
2" Reservoir to 1.5" Hoop Tube	63013
<b>ALUMINUM MOUNT KITS</b>	
2" Reservoir to 2" Shock Body	63014
2" Reservoir to 1.5" Hoop Tube	63015
MX6R Reservoir to MX6R Shock Body	63016
MX6R Reservoir to 1.5" Hoop Tube	63017
MX2.75CR Reservoir to 1.5" Hoop Tube	63018

## Chevrolet/ GMC

Application	Year	Lift Height	Front	Rear	Notes:
<b>Avalanche (1/2 Ton) - 4WD</b>					
GMT900	07-13	0"	-	MX6061	
-		1.5"	-	MX6061	
-		2"	-	MX6061	
-		6"	-	MX6098	
K1500	00-06	0"	MX6037	MX6112	1
-		2"	MX6037	MX6112	1
With Pro Comp lift K1056 / K1057		6"	MX6019	MX6098	
With Pro Comp Multiple Shock Kit (51297)		6"	MX6088	-	
<b>Avalanche (1/2 Ton) - 2WD</b>					
GMT900	07-13	0"	-	MX6061	
-		1.5"	-	MX6061	
-		2"	-	MX6061	
-		6"	-	MX6098	
C1500 (6-Lug)(With torsion bars)	02-06	0"	MX6037	MX6112	
-		2"	MX6037	MX6061	
With Pro Comp lift K5072BMX		6"	MX6019	MX6098	
<b>Avalanche (3/4 Ton) - 4WD</b>					
K2500HD/ K2500	01-10	0"-1"	MX6056	MX6036	1
-		2.5"	MX6056	MX6036	1
With Pro Comp lift K1051		6"	MX6002	MX6003	
With Pro Comp Multiple Shock Kit (51211)		6"	MX6088	-	
<b>Avalanche (3/4 Ton) - 2WD</b>					
K2500HD/ K2500	01-10	0"-1"	MX6056	MX6036	1
-		2.5"	MX6056	MX6036	1
With Pro Comp lift K1051		6"	MX6002	MX6003	
With Pro Comp Multiple Shock Kit (51211)		6"	MX6088	-	
<b>Blazer / Jimmy (1/2 Ton)(Full Size) - 4WD</b>					
K5	92-99	0"	MX6038	MX6039	
-		4"	MX6040	MX6041	
K5	73-91	4"	MX6085	MX6086	
<b>Silverado / Sierra Pickup (1/2 Ton) - 4WD</b>					
K2XX / GMT900	07-15	0"	-	MX6061	
-		1.5"	-	MX6061	
-		2"	-	MX6061	
-		6"	-	MX6003	
K1500HD (8-Lug) (Incl. Crew Cab)(With torsion bars)	01-10	0"-1"	MX6056	MX6036	1
-		2.5"	MX6056	MX6036	1
With Pro Comp lift K1051		6"	MX6002	MX6003	
With Pro Comp Multiple Shock Kit (51211)		6"	MX6088	-	
K1500	99-06	0"-1"	MX6037	MX6059	1
-		2"	MX6037	MX6059	1
With Pro Comp lift K1056 / K1057		6"	MX6019	MX6003	
With Pro Comp Multiple Shock Kit (51297)		6"	MX6088	-	
K1500	88-98	0"	MX6038	MX6039	
-		4"	MX6040	MX6041	
-		6"	MX6042	MX6043	
K-10	73-87	4"	MX6085	MX6086	

Notes: (1) Front Shock is Non-Adjustable.

## Chevrolet/ GMC

Application	Year	Lift Height	Front	Rear	Notes:
<b>Silverado / Sierra Pickup (1/2 Ton) - 2WD</b>					
K2XX / GMT900	07-15	0"	-	MX6061	
-		1.5"	-	MX6061	
-		2"	-	MX6061	
-		6"	-	MX6003	
C1500 (6-Lug) (Incl. Crew Cab)(With torsion bars)	05-06	0"	MX6037	MX6061	1
With Pro Comp lift K1096		6"	MX6019	MX6098	1
C1500 (6-Lug)(Incl. Crew Cab)(With coil springs)	99-07	0"-1"	MX6138	MX6112	
-		2"	MX6138	MX6112	
With Pro Comp lift K1078		6"	MX6028	MX6098	
<b>Silverado / Sierra Pickup (3/4 Ton) - 4WD</b>					
K2500HD/ K2500	00-10	0"-1"	MX6056	MX6036	1
-		2.5"	MX6161	MX6036	1
With Pro Comp lift (K1051)		6"	MX6002	MX6003	
With Pro Comp lift (K1084)		6"	MX6168	MX6167	
K2500HD/ K2500 (Up to 8600 GVW)	99-04	0"	MX6056	MX6036	1
K2500 (With cast lower control arms)	92-98	0"	MX6040	MX6043	
K2500 (With stamped steel lower control arms)	88-98	6"	MX6042	MX6043	
K-20	73-87	4"	MX6085	MX6086	
K-20	73-87	4"	MX6085	MX6086	
<b>Silverado / Sierra Pickup (3/4 Ton) - 2WD</b>					
C2500HD (8-Lug) (Incl. Crew Cab)(With torsion bars)	01-10	0"-1"	MX6056	MX6036	1
-		2.5"	MX6161	MX6036	1
With Pro Comp lift (K1051)		6"	MX6002	MX6003	
With Pro Comp lift (K1084)		6"	MX6168	MX6167	
With Pro Comp Multiple Shock Kit (51211)		6"	MX6088	-	
C2500 (6-Lug)(Incl. Crew Cab)(With coil springs)	00-02	0"-1"	MX6113	MX6036	1
With Pro Comp lift		2"	MX6113	MX6036	1
With Pro Comp lift		2"	MX6113	MX6036	1
<b>Silverado / Sierra Pickup (1 Ton) - 4WD</b>					
K3500HD/ K3500 (Up to 8600 GVW)	01-10	0"	MX6056	MX6036	1
K3500 (With cast lower control arms)	92-98	6"	MX6040	MX6043	
K3500 (With stamped steel lower control arms)	88-98	6"	MX6042	MX6043	
<b>Suburban / Yukon XL (1/2 Ton) - 4WD</b>					
GMT900	07-14	0"	-	MX6061	
-		1.5"	-	MX6061	
-		2"	-	MX6061	
-		6"	-	MX6098	
K1500 (Exc. Z55 Pkg., Autoride, Quadrateer)	01-06	0"	MX6037	MX6112	1
-		2"	MX6037	MX6112	1
-		6"	MX6019	MX6098	
With Pro Comp Multiple Shock Kit (51297)		6"	MX6088	-	
K-10	73-91	4"	MX6085	MX6086	

MX SERIES

Notes: (1) Front Shock is Non-Adjustable.

# SHOCKS MX SERIES

## Chevrolet/ GMC

Application	Year	Lift Height	Front	Rear	Notes:
<b>Suburban / Yukon XL (1/2 Ton) - 2WD</b>					
GMT900	07-15	0"	-	MX6061	
-		1.5"	-	MX6112	
-		2"	-	MX6112	
With Pro Comp lift		6"	-	MX6098	
C1500 (6-Lug)(With torsion bars)	01-05	0"	MX6037	MX6048	1
-		2"	MX6037	MX6048	1
With Pro Comp lift K5072BMX		6"	MX6019	MX6098	
<b>Suburban / Yukon XL (3/4 Ton) - 4WD</b>					
K2500HD/ K2500	00-10	0"-1"	MX6132	MX6162	1
With Pro Comp lift K1051		6"	MX6002	MX6003	
With Pro Comp Multiple Shock Kit (51211)		6"	MX6088	-	
K2500 (With cast lower control arms)	92-98	6"	MX6040	MX6043	
K2500 (With stamped steel lower control arms)	88-98	6"	MX6042	MX6043	
K-20	73-87	4"	MX6085	MX6086	
<b>Suburban / Yukon XL (3/4 Ton) - 2WD</b>					
C2500 (8-Lug)	00-10	0"-1"	MX6056	MX6036	1
-		2.5"	MX6161	MX6036	
With Pro Comp lift K1084		6"	MX6168	MX6167	
With Pro Comp Multiple Shock Kit (51211)		6"	MX6088	-	
<b>Tahoe / Yukon (1/2 Ton) - 4WD</b>					
GMT900	07-15	0"	-	MX6061	
-		1.5"	-	MX6061	
-		2"	-	MX6061	
-		6"	-	MX6098	
K1500 (Exc. Z55 Pkg., Autoride, QuadraSteer)	00-06	0"	MX6037	MX6112	1
-		2"	MX6037	MX6112	1
With Pro Comp lift		6"	MX6019	MX6098	
K1500	92-99	0"-2"	MX6038	MX6039	
-		4"	MX6040	MX6041	
-		6"	MX6042	MX6043	
<b>Tahoe / Yukon (1/2 Ton) - 2WD</b>					
GMT900	07-15	0"	-	MX6061	
-		1.5"	-	MX6061	
-		2"	-	MX6061	
-		6"	-	MX6098	
C1500 (6-Lug)(With torsion bars)	00-06	0"	MX6037	MX6112	1
-		2"	MX6037	MX6112	1
-		2.5"	MX6037	MX6112	1
With Pro Comp lift K1054		6"	MX6019	MX6098	

MX SERIES

Notes: (1) Front Shock is Non-Adjustable.

## Dodge

Application	Year	Lift Height	Front	Rear	Notes:
<b>Ram Pickup (1/2 Ton) - 4WD</b>					
Ram 1500 Mega-Cab	06-08	0"	MX6139	MX6098	
-		2"	MX6139	MX6098	
-		3"	MX6104	MX6098	
-		5"	MX6104	MX6100	
-		6"	MX6158	MX6100	
Ram 1500	09-15	0"	-	MX6162	
-		6"	-	MX6165	
Ram 1500	06-08	0"	-	MX6036	
-		2.5"	-	MX6036	
-		6"	-	MX6100	
Ram 1500	02-05	0"	MX6126	MX6036	
-		2"	MX6126	MX6100	
-		4.5"	MX6099	MX6100	
Ram 1500	94-01	0"	MX6119	MX6061	
-		2"	MX6087	MX6061	
-		3"	MX6087	MX6036	
With Pro Comp Multiple Shock Kit		3"	MX6146	-	
<b>Ram Pickup (1/2 Ton) - 2WD</b>					
Ram 1500	06-08	0"-2"	-	MX6036	
-		6"	MX6022	MX6100	
Ram 1500	02-05	0"-1"	MX6113	MX6116	1
-		2"	MX6113	MX6116	1
-		6"	MX6022	MX6100	
Ram 1500	94-01	0"-3"	MX6130	MX6061	1
-		1.5"	MX6130	MX6061	1
-		3"	MX6130	MX6061	1
<b>Ram Pickup (3/4 Ton) - 4WD</b>					
Ram 2500 (Exc. Power Wagon)	09-13	0"	MX6139	MX6098	
-		2"	MX6139	MX6098	
-		5"	MX6104	MX6100	
-		6"	MX6158	MX6100	
Ram 2500 (Exc. Power Wagon)	03-08	0"	MX6139	MX6098	
-		2"	MX6139	MX6098	
-		3"	MX6104	MX6098	
-		5"	MX6104	MX6100	
-		6"	MX6158	MX6100	
Ram 2500	94-02	0"	MX6119	MX6061	
-		2"	MX6087	MX6061	
-		3"	MX6087	MX6036	
With Pro Comp Multiple Shock Kit		3"	MX6146	-	
<b>Ram Pickup (1 Ton) - 4WD</b>					
Ram 3500 (Exc. Power Wagon)	09-12	0"	MX6139	MX6098	
-		2"	MX6139	MX6098	
-		5"	MX6104	MX6100	
-		6"	MX6158	MX6100	
Ram 3500 (Exc. Power Wagon)	03-08	0"	MX6139	MX6098	
-		2"	MX6139	MX6098	
-		3"	MX6104	MX6098	
-		5"	MX6104	MX6100	
-		6"	MX6158	MX6100	

MX SERIES

Notes: (1) Front Shock is Non-Adjustable.

# SHOCKS MX SERIES

## Ford

Application	Year	Lift Height	Front	Rear	Notes:
<b>Excursion - 4WD</b>					
Excursion	00-05	0"	MX6035	MX6082	
-		4"	MX6017	MX6018	
With Pro Comp Multiple Shock Kit (52410/ 52420)		4"	MX6017	-	
-		6"	MX6017	MX6083	
With Pro Comp Multiple Shock Kit (52410/ 52420)		6"	MX6017	-	
<b>Excursion - 2WD</b>					
Excursion With Pro Comp lift	00-06	6"	MX6089	MX6005	
<b>Expedition - 4WD</b>					
Expedition (Exc. rear air leveling)	97-02	0"	MX6015	MX6016	
-		2"	MX6015	MX6016	
-		4"	MX6006	MX6008	
<b>Expedition - 2WD</b>					
Expedition (Exc. rear air leveling)	97-02	0"	MX6113	MX6114	
With Pro Comp lift		2"	MX6113	MX6114	
<b>Explorer - 2WD</b>					
Explorer	95-01	0"	MX6144	MX6145	
-		2"	MX6144	MX6145	
-		3"	MX6144	MX6145	
<b>F Series Pickup (1/2 Ton) - 4WD</b>					
F-150	09-14	0"	-	MX6164	
-		6"	-	MX6166	
F-150	04-08	0"	-	MX6079	
-		6"	-	MX6009	
F-150 / F-250 Light Duty	97-03	0"	MX6080	MX6081	
-		4"	MX6006	MX6007	
<b>F Series Pickup (1/2 Ton) - 2WD</b>					
F-150	09-14	0"	-	MX6079	
-		6"	-	MX6166	
F-150 (Incl. Super Crew)	04-08	0"	-	MX6078	
-		6"	-	MX6079	
F-150 (Incl. Super Crew)	97-03	0"	MX6102	MX6103	
-		6"	MX6028	MX6081	
<b>F Series Pickup (3/4 Ton) - 4WD</b>					
F-250	08-15	0"	MX6119	MX6153	
-		2"	MX6123	MX6153	
-		2.5"	MX6087	MX6153	
-		6"	MX6154	MX6018	
With Pro Comp Multiple Shock Kit (52460) (08-10 Only)	08-10	6"	MX6129	-	
-		8"	MX6104	MX6018	
With Pro Comp Multiple Shock Kit (52470) (08-10 Only)		8"	MX6128	-	
F-250	05-07	0"-1"	MX6125	MX6018	
-		2"	MX6123	MX6018	
-		2.5"	MX6123	MX6018	
-		6"	MX6122	MX6018	
With Pro Comp Multiple Shock Kit (52440)		6"	MX6129	-	
-		8"	MX6124	MX6018	
With Pro Comp Multiple Shock Kit (52450)		8"	MX6128	-	
F-250	99-04	0"-1"	MX6035	MX6005	
With Pro Comp Multiple Shock Kit (52410/ 52420)		0"-1"	MX6035	-	
With Pro Comp lift		2"	MX6004	MX6018	
With Pro Comp Multiple Shock Kit (52410/ 52420)		2"	MX6004	-	
With Pro Comp lift		4"	MX6017	MX6018	
With Pro Comp Multiple Shock Kit (52410/ 52420)		4"	MX6017	-	
With Pro Comp lift		6.5"	MX6121	MX6018	
With Pro Comp Multiple Shock Kit (52410/ 52420)		6.5"	MX6121	-	
With Pro Comp lift		8.5"	MX6005	MX6018	
With Pro Comp Multiple Shock Kit (52410/ 52420)		8.5"	MX6005	-	

MX-6 - 6 Way Adjustable Monotube Shock Absorbers

Notes: (1) Front Shock is Non-Adjustable.



## Ford

Application	Year	Lift Height	Front	Rear	Notes:
<b>F Series Pickup (3/4 Ton) - 2WD</b>					
F250	99-06	0"	-	MX6121	
With Pro Comp lift		6"	MX6089	MX6005	
<b>F Series Pickup (1 Ton) - 4WD</b>					
F-350	08-15	0"	MX6119	MX6153	
-		2"	MX6123	MX6153	
-		2.5"	MX6087	MX6153	
-		6"	MX6154	MX6018	
With Pro Comp Multiple Shock Kit (52460) (08-10 Only)	08-10	6"	MX6129	-	
-		8"	MX6104	MX6018	
With Pro Comp Multiple Shock Kit (52470) (08-10 Only)		8"	MX6128	-	
F-350	05-07	0"-1"	MX6125	MX6018	
-		2"	MX6123	MX6018	
-		2.5"	MX6123	MX6018	
-		6"	MX6122	MX6018	
With Pro Comp Multiple Shock Kit (52440)		6"	MX6129	-	
-		8"	MX6124	MX6018	
With Pro Comp Multiple Shock Kit (52450)		8"	MX6128	-	
F-350	99-04	0"-1"	MX6035	MX6005	
With Pro Comp Multiple Shock Kit (52410/ 52420)		0"-1"	MX6035	-	
With Pro Comp lift		2"	MX6004	MX6018	
With Pro Comp Multiple Shock Kit (52410/ 52420)		2"	MX6004	-	
With Pro Comp lift		4"	MX6017	MX6018	
With Pro Comp Multiple Shock Kit (52410/ 52420)		4"	MX6017	-	
With Pro Comp lift		6.5"	MX6121	MX6018	
With Pro Comp Multiple Shock Kit (52410/ 52420)		6.5"	MX6121	-	
With Pro Comp lift		8.5"	MX6005	MX6018	
With Pro Comp Multiple Shock Kit (52410/ 52420)		8.5"	MX6005	-	
<b>F Series Pickup (1 Ton) - 2WD</b>					
F350	99-06	0"	-	MX6121	
With Pro Comp lift		6"	MX6089	MX6005	
<b>Ranger EDGE - 2WD</b>					
Ranger (EDGE) w/Torsion Bar Front Susp.	01-11	0"-1"	MX6136	MX6135	
<b>Ranger - 2WD</b>					
Ranger w/Coil Spring Front Susp.	01-11	0"-1"	MX6132	MX6137	1
Ranger With Pro Comp lift	83-97	5"	MX6089	MX6017	

## Hummer

Application	Year	Lift Height	Front	Rear	Notes:
<b>H2 - 4WD</b>					
H2	03-10	0"	MX6133	MX6098	
-		2.5"	MX6133	MX6098	
<b>H3 - 4WD</b>					
H3	06-10	0"	MX6037	MX6140	1
-		2.5"	MX6037	MX6140	1

Notes: (1) Front Shock is Non-Adjustable.

MX SERIES

# SHOCKS MX SERIES

## Jeep

Application	Year	Lift Height	Front	Rear	Notes:
<b>Cherokee XJ - 4WD/ 2WD</b>					
Cherokee XJ (Mid Size)	84-01	0"-2"	MX6028	MX6057	
With Pro Comp lift		1.75"	MX6028	MX6057	
		3"	MX6021	MX6034	
<b>CJ Series - 4WD</b>					
CJ5/ CJ7/ CJ8	82-86	0"-1.5"	MX6025	MX6030	
		2.5"	MX6010	MX6011	
CJ5/ CJ7 CJ8/ CJ10	76-81	2"-3"	MX6058	MX6010	
CJ5/ CJ7 CJ8/ CJ10	76-86	4"	MX6031	MX6031	
CJ5/ CJ6	53-75	2"-3"	MX6030	MX6030	
<b>Grand Cherokee WK/ WJ/ ZJ - 4WD/ 2WD</b>					
Grand Cherokee WK	05-07	0"	-	MX6163	
Grand Cherokee WJ	99-04	0"-2"	MX6028	MX6071	
		2"-4"	MX6021	MX6071	
Grand Cherokee ZJ	92-98	0"-2"	MX6028	MX6032	
With Pro Comp lift		1.75"	MX6028	MX6032	
		3"	MX6021	MX6032	
<b>Liberty KJ - 4WD</b>					
Liberty KJ	01-04	0"	-	MX6110	
<b>Wrangler JK Series (2 Door Non-Rubicon) - 4WD</b>					
Wrangler JK	07-15	0"	MX6149	MX6150	
With Pro Comp lift		1.75"	MX6149	MX6150	
With Pro Comp lift (With rear coils)		4"	MX6013	MX6156	
With Pro Comp lift (With rear spacers)		4"	MX6013	MX6155	
<b>Wrangler JK Series (4 Door / 2 Door Rubicon) - 4WD</b>					
Wrangler JK (Incl. Rubicon)	07-15	0"	MX6149	MX6150	
-		1.75"	MX6149	MX6150	
-		2.5"	MX6024	MX6155	
With Pro Comp lift (With rear coils)		4"	MX6013	MX6151	
With Pro Comp lift (With rear spacers)		4"	MX6013	MX6156	
<b>Wrangler JK Series - 2WD</b>					
Wrangler JK	07-15	0"	MX6149	MX6150	
-		1.75"	MX6149	MX6150	
-		4"	MX6013	MX6155	
<b>Wrangler LJ Series - 4WD</b>					
Wrangler LJ (Unlimited)(Incl. Rubicon)	03-06	0"-1.5"	MX6028	MX6029	
-		1.75"	MX6093	MX6094	
-		2"	MX6093	MX6094	
With Pro Comp lift (With hard top)		4"	MX6021	MX6023	
With Pro Comp lift (With soft top)		4"	MX6021	MX6106	
<b>Wrangler TJ Series - 4WD</b>					
Wrangler TJ (Incl. Rubicon)	96-06	0"-1.5"	MX6028	MX6029	
-		1.75"	MX6028	MX6029	
-		2"	MX6093	MX6094	
With Pro Comp lift (With hard top)		4"	MX6021	MX6023	
With Pro Comp lift (With soft top)		4"	MX6021	MX6106	
<b>Wrangler YJ Series - 4WD</b>					
Wrangler YJ	86-95	0"-1.5"	MX6024	MX6025	
-		2"-3"	MX6013	MX6014	
-		4"	MX6026	MX6027	
With Pro Comp lift K3052 / K3053		5"	MX6012	MX6070	

Notes: (1) Front Shock is Non-Adjustable.

## Nissan

Application	Year	Lift Height	Front	Rear	Notes:
<b>Armada - 2WD/ 4WD</b>					
Armada With Pro Comp lift	04-08	6"	-	MX6112	
<b>Frontier Pickup - 2WD</b>					
Frontier	05-09	0"	-	MX6160	
<b>Titan Pickup - 2WD/ 4WD</b>					
Titan With Pro Comp lift	04-14	6"	-	MX6060	

## Toyota

Application	Year	Lift Height	Front	Rear	Notes:
<b>4Runner</b>					
4 Runner	86-95	0"-1"	MX6044	MX6045	1
-		2"-3"	MX6046	MX6047	
-		4"	MX6048	MX6049	
<b>FJ Cruiser - 4WD</b>					
FJ Cruiser	07-14	0"	-	MX6148	
With Pro Comp lift		6"	-	MX6024	
<b>Pickup - 4WD</b>					
Pickup (IFS Front)	86-95	0"-1"	MX6044	MX6045	1
-		2"-3"	MX6046	MX6047	
-		4"	MX6048	MX6049	
<b>Tacoma Pickup - 2WD PreRunner</b>					
Tacoma PreRunner	05-15	0"	-	MX6134	
-		6"	-	MX6142	
Tacoma Prerunner (6 Lug)	96-04	0"	-	MX6131	
-		4"	-	MX6084	
Tacoma Prerunner (5 Lug)	96-05	0"	MX6132	MX6058	1
<b>Tacoma Pickup - 4WD</b>					
Tacoma	05-15	0"	-	MX6134	
-		6"	-	MX6142	
Tacoma	96-04	0"-1"	-	MX6131	
-		4"	-	MX6084	
<b>Tundra Pickup - 2WD/ 4WD</b>					
Tundra	07-15	0"	-	MX6147	
-		6"	-	MX6007	

## Universal

Application	Shock Length		MX6 Adj
	Ext.	Comp.	Part No.
<b>MX6 - Adjustable Non-Resi</b>			
8" Travel - Soft Valving	23.50"	15.63"	MX6050
10" Travel - Soft Valving	29.50"	18.82"	MX6075
8" Travel - Medium Valving	23.50"	15.63"	MX6053
10" Travel - Medium Valving	29.50"	18.82"	MX6054
10" Travel - Medium Valving	32.00"	20.25"	MX6055
<b>MX6 - Adjusting Key</b>			
Adjusting Key			90-4080

Notes: (1) Front Shock is Non-Adjustable.

## Chevrolet/ GMC

	Year	Lift Ht.	ES1000 Front	ES1000 Rear	ES3000 Front	ES3000 Rear	ES9000 Front	ES9000 Rear	Notes:
<b>Avalanche (1/2 Ton) - 4WD</b>									
GMT900 (Inc. Z71 Pkg.)	07-13	0"	-	-	-	-	618253	924543	
		1.5"	-	-	-	-	618253	924543	
		2"	-	-	-	-	618253	924543	
		6"	-	-	-	-	618253	928001	
K1500 (Inc. Z71 Pkg.)	02-06	0"	-	-	315580	324543	915580	924543	
		2"	-	-	317580	324543	917580	924543	
		6"	-	-	320590	327543	920590	928001	
<b>Avalanche (1/2 Ton) - 2WD</b>									
GMT900	07-13	0"	-	-	-	-	618253	924543	
		1.5"	-	-	-	-	618253	924543	
		2"	-	-	-	-	618253	927543	
		6"	-	-	-	-	618253	928001	
C1500	02-06	0"	-	-	315580	324543	915580	924543	
		2"	-	-	317580	324543	917580	924543	
		6"	-	-	320590	327543	920590	927543	
<b>Avalanche (3/4 Ton) - 4WD</b>									
K2500 (Inc. Z71 Pkg.)	02-06	0"	-	-	-	-	915551	924543	
		2.5"	-	-	-	-	917552	924543	
		6"	-	-	-	-	920508	930001	
<b>Avalanche (3/4 Ton) - 2WD</b>									
C2500 (Inc. Z71 Pkg.)	02-06	0"	-	-	-	-	915551	924543	
		2.5"	-	-	-	-	917552	924543	
		6"	-	-	-	-	920508	930001	
<b>Blazer (Compact) - 4WD</b>									
S-10 (Exc. ZR2 Pkg.)	83-05	0"-2"	117500	124509	317500	324509	917500	924509	
		3"-4"	120500	126500	320500	326500	920500	926500	
<b>Blazer (Compact) - 2WD</b>									
S-10	83-05	0"-2"	113515	124509	313515	324509	913515	924509	
With Pro Comp lift (Spindle)		3"	114515	124509	314515	324509	914515	924509	
<b>Blazer (Full Size)(1/2 Ton) - 4WD</b>									
Blazer	92-98	0"-2"	118501	124509	318501	324509	918501	924509	
		4"	122501	127500	322501	327500	922501	927500	
		6"	124501	129500	324501	329500	924501	929500	
K5, V5 (With OE quad suspension)	73-91	0"-2"							
Inner Shock (Short)		0"-2"	119502	-	319502	-	919502	-	
Outer Shock (Long)		0"-2"	121500	-	321500	-	921500	-	1
Rear shock		0"-2"	-	122500	-	322500	-	922500	
K5, V5 (With OE quad suspension)	73-91	2.5"-4"							
Inner Shock (Short)		2.5"-4"	121502	-	321502	-	921502	-	
Outer Shock (Long)		2.5"-4"	122500	-	322500	-	922500	-	1
Rear shock		2.5"-4"	-	126500	-	326500	-	926500	
K5, V5 (With OE quad suspension)	73-91	5"-7"							
Inner Shock (Short)		5"-7"	124509	-	324509	-	924509	-	
Outer Shock (Long)		5"-7"	126502	-	326502	-	926502	-	1
Rear shock		5"-7"	-	129500	-	329500	-	929500	
K5, V5 (With OE quad suspension)	73-91	8"-10"							
Inner Shock (Short)		8"-10"	129502	-	329502	-	929502	-	
Outer Shock (Long)		8"-10"	132000	-	332000	-	932000	-	1
Rear shock		8"-10"	-	132000	-	332000	-	932000	
K5, V5 (Exc. OE quad suspension)	69-91	0"-2"	119502	122500	319502	322500	919502	922500	
		2.5"-4"	121502	126500	321502	326500	921502	926500	
		5"-7"	124502	129500	324502	329500	924502	929500	
	67-68	3"-4"	121500	126500	321500	326500	921500	926500	

Notes: (1) Washers may be required to increase space between shock on lower mount.

## Chevrolet/ GMC

	Year	Lift Ht.	ES1000 Front	ES1000 Rear	ES3000 Front	ES3000 Rear	ES9000 Front	ES9000 Rear	Notes:
<b>Blazer (Full Size)(1/2 Ton) - 2WD</b>									
K5, V5	92-98	0"-3"	114515	124509	314515	324509	914515	924509	
With Pro Comp lift (Spindle)		3"	114515	126500	314515	326500	914515	926500	
		5"	120515	127500	320515	327500	920515	927500	
		6"	-	-	-	-	916015	927500	
K5, V5	69-91	0"-3"	115509	122500	315509	322500	915509	922500	
<b>Colorado - 2WD / 4WD</b>									
ALL (With torsion bars) (Z71 Pkg.)	04-10	0"	-	-	317510	324509	917510	924509	
With Pro Comp lift (Level Lift)		2.5"	-	-	317510	324509	917510	924509	
<b>LUV Pickup (Light Duty) - 2WD / 4WD</b>									
ALL	79-83	0"-2"	114515	121500	314515	321500	914515	921500	
<b>Silverado Pickup (1/2 Ton) - 4WD</b>									
K2XX	14-16	0"	-	-	-	-	-	925543	
		1.5"	-	-	-	-	-	925543	
		2"	-	-	-	-	-	925543	
		6"	-	-	-	-	-	930001	
GMT900 (Inc. Z71 Pkg.)	07-13	0"	-	-	-	-	618253	925543	
		1.5"	-	-	-	-	618253	925543	
		2"	-	-	-	-	618253	925543	
		6"	-	-	-	-	618253	928001	
K1500HD (Incl. Crew Cab)	01-06	0"	-	-	-	-	915551	926543	
-		2.5"	-	-	-	-	917552	926543	
With Pro Comp lift (K1051)		6"	-	-	-	-	920508	929505	
With Pro Comp lift (K1084)		6"	-	-	-	-	922010	929505	
K1500 - Classic (Std. Cab / Ext. Cab/ Crew Cab)	99-07	0"	-	-	315580	325543	915580	925543	
		2"	-	-	317580	325543	917580	925543	
		4"-6"	-	-	320590	329543	920590	929505	
K1500	88-98	0"-2"	118501	124509	318501	324509	918501	924509	
		4"	122501	127500	322501	327500	922501	927500	
		6"	124501	129500	324501	329500	924501	929500	
K-10 (With OE quad suspension / V-10)	73-87	0"-2"							
Inner Shock (Short)			119502	-	319502	-	919502	-	
Outer Shock (Long)			121500	-	321500	-	921500	-	1
Rear shock			-	122500	-	322500	-	922500	
K-10 (With OE quad suspension)	73-87	2.5"-4"							
Inner Shock (Short)			121502	-	321502	-	921502	-	
Outer Shock (Long)			122500	-	322500	-	922500	-	
Rear shock			-	126500	-	326500	-	926500	
K-10 (With OE quad suspension)	73-87	5"-7"							
Inner Shock (Short)			124502	-	324502	-	924502	-	
Outer Shock (Long)			125509	-	325509	-	925509	-	1
Rear shock			-	129500	-	329500	-	929500	
K-10 (With OE quad suspension)	73-87	8"-10"							
Inner Shock (Short)			129502	-	329502	-	929502	-	
Outer Shock (Long)			132000	-	332000	-	932000	-	1
Rear shock			-	132000	-	332000	-	932000	
K-10 (Exc. OE quad suspension)	69-87	0"-2"	119502	122500	319502	322500	919502	922500	
		2.5"-4"	121502	126500	321502	326500	921502	926500	
		5"-7"	124502	129500	324502	329500	924502	929500	
<b>Silverado Pickup (1/2 Ton) - 2WD</b>									
K2XX	14-16	0"	-	-	-	-	-	925543	
		1.5"	-	-	-	-	-	925543	
		2"	-	-	-	-	-	925543	
		6"	-	-	-	-	-	930001	

ES SERIES

Notes: (1) Washers may be required to increase space between shock on lower mount.

## Chevrolet/ GMC

	Year	Lift Ht.	ES1000 Front	ES1000 Rear	ES3000 Front	ES3000 Rear	ES9000 Front	ES9000 Rear	Notes:
<b>Silverado Pickup (1/2 Ton) - 2WD</b>									
GMT900	07-13	0"	-	-	-	-	618253	925543	
		1.5"	-	-	-	-	618253	925543	
		2"	-	-	-	-	618253	925543	
		6"	-	-	-	-	618253	928001	
C1500HD (Crew Cab) (With torsion bars)	01-06	0"	-	-	-	-	915551	926543	
-		2.5"	-	-	-	-	917552	926543	
With Pro Comp lift (K1051)		6"	-	-	-	-	920508	930001	
With Pro Comp lift (K1084)		6"	-	-	-	-	922010	930001	
C1500HD (Crew Cab) (With coil springs)	01-06	0"	-	-	314515	326543	914515	926543	
C1500 (Crew Cab) (With torsion bars)	04-06	0"-1"	-	-	315580	324543	915580	924543	
		2"	-	-	317580	324543	917580	924543	
With Pro Comp lift (K1096)		6"	-	-	320590	329543	920590	929505	
C1500 (Std. Cab / Ext. Cab / Crew Cab) (With coil springs)	99-06	0"	-	-	314515	325543	914515	925543	
		2"	-	-	314515	325543	914515	925543	
		6"	-	-	321515	329543	921515	927543	
<b>Silverado Pickup (1/2 Ton) - 2WD</b>									
C1500 (Std. Cab / Ext. Cab / Crew Cab) (With coil springs)	88-98	0"-1"	-	-	314515	324509	914515	924509	
With Pro Comp lift (Spindle)		3"	-	-	-	-	914515	926500	
With Pro Comp lift (A-arm, Coil)		3"	-	-	-	-	916015	926500	
With cross member and spindles		5"	120515	127500	320515	327500	920515	927500	
C-10 (With leaf spring rear)	69-87	0"-2"	115509	122500	315509	322500	915509	922500	
C-10 (With coil spring rear)	63-72	0"-2"	115509	121500	315509	321500	915509	921500	
<b>Silverado Pickup (3/4 Ton) - 4WD</b>									
K2500HD (Incl. Crew Cab)	11-16	0"	-	-	-	-	918750	926543	
-		2.5"	-	-	-	-	918750	926543	
With Pro Comp lift (K1085 / K1087)		6"	-	-	-	-	924375	930001	
K2500HD (Incl. Crew Cab) (9200 GVW)	99-10	0"	-	-	-	-	915551	926543	
-		2.5"	-	-	-	-	917552	926543	
With Pro Comp lift (K1051)		6"	-	-	-	-	920508	930001	
With Pro Comp lift (K1084)		6"	-	-	-	-	922010	930001	
K2500 (Incl. Crew Cab)	01-07	0"-2"	-	-	-	-	915551	926543	
-		2"	-	-	-	-	917552	926543	
With Pro Comp lift (K1051)		6"	-	-	-	-	920508	930001	
With Pro Comp lift (K1084)		6"	-	-	-	-	922010	930001	
K2500 (With cast lower control arms)	92-98	0"-2"	-	-	317501	324509	917501	924509	
-		4"	-	-	322501	327500	922501	927500	
With Pro Comp lift (K1044)		6"	-	-	322501	329500	922501	929500	
K2500 (With stamped steel lower control arms)	88-98	0"-2"	-	-	318501	324509	918501	924509	
-		4"	-	-	322501	327500	922501	927500	
With Pro Comp lift (K1109)		6"	-	-	324501	329500	924501	929500	
K-20 (With OE quad suspension)	73-87	0"-2"							
Inner Shock (Short)			119502	-	319502	-	919502	-	
Outer Shock (Long)			121500	-	321500	-	921500	-	1
Rear shock			-	122500	-	322500	-	922500	
K-20 (With OE quad suspension)	73-87	2.5"-4"							
Inner Shock (Short)			121502	-	321502	-	921502	-	
Outer Shock (Long)			122500	-	322500	-	922500	-	
Rear shock			-	126500	-	326500	-	926500	
K-20 (With OE quad suspension)	73-87	5"-7"							
Inner Shock (Short)			124502	-	324502	-	924502	-	
Outer Shock (Long)			125509	-	325509	-	925509	-	1
Rear shock			-	129500	-	329500	-	929500	
K-20 (With OE quad suspension)	73-87	8"-10"							
Inner Shock (Short)			129502	-	329502	-	929502	-	
Outer Shock (Long)			132000	-	332000	-	932000	-	1
Rear shock			-	132000	-	332000	-	932000	
K-20 (Exc. OE quad suspension)	69-87	0"-2"	119502	122500	319502	322500	919502	922500	
		2.5"-4"	121502	126500	321502	326500	921502	926500	
		5"-7"	124502	129500	324502	329500	924502	929500	

Notes: (1) Washers may be required to increase space between shock on lower mount.

## Chevrolet/ GMC

	Year	Lift Ht.	ES1000 Front	ES1000 Rear	ES3000 Front	ES3000 Rear	ES9000 Front	ES9000 Rear	Notes:
<b>Silverado Pickup (3/4 Ton) - 2WD</b>									
C2500HD (Incl. Crew Cab)	11-16	0"	-	-	-	-	918750	926543	
-		2.5"	-	-	-	-	918750	926543	
With Pro Comp lift (K1085 / K1087)		6"	-	-	-	-	924375	930001	
C2500HD (Incl. Crew Cab) (9200 GVW)	01-10	0"	-	-	-	-	915551	926543	
-		2.5"	-	-	-	-	917552	926543	
With Pro Comp lift (K1051)		6"	-	-	-	-	920508	930001	
With Pro Comp lift (K1084)		6"	-	-	-	-	922010	930001	
C2500 (Incl. Crew Cab)	00-10	0"	-	-	-	-	915551	926543	
-		2"	-	-	-	-	917552	926543	
With Pro Comp lift (K1051)		6"	-	-	-	-	920508	930001	
With Pro Comp lift (K1084)		6"	-	-	-	-	922010	930001	
C2500 (Std. Cab / Ext. Cab / Crew Cab) (W/coil springs)	99-07	0"	-	-	314515	326543	914515	926505	
-		2"	-	-	314515	326543	914515	926505	
C2500 (Std. Cab / Ext. Cab / Crew Cab) (W/coil springs)	88-98	0"-1"	-	-	314515	324509	914515	924509	
C-20 (With leaf spring rear)	69-87	0"-2"	115509	122500	315509	322500	915509	922500	
C-20 (With coil spring rear)	63-72	0"-2"	115509	121500	315509	321500	915509	921500	
<b>Silverado Pickup (1 Ton) - 4WD</b>									
K3500HD (Incl. Crew Cab)	11-16	0"	-	-	-	-	918750	926543	
-		2.5"	-	-	-	-	918750	926543	
With Pro Comp lift (K1085 / K1087)		6"	-	-	-	-	924375	930001	
K3500HD (Incl. Crew Cab) (11400 GVW)	01-10	0"-2"	-	-	-	-	915551	926543	
With Pro Comp lift (Level Lift)		2.5"	-	-	-	-	917552	926543	
K3500 (With cast lower control arms)	92-98	0"-2"	-	-	317501	324509	917501	924509	
-		4"	-	-	322501	327500	922501	927500	
With Pro Comp lift (K1044)		6"	-	-	322501	329500	922501	929500	
K3500 (With stamped steel lower control arms)	88-98	0"-2"	-	-	318501	324509	918501	924509	
-		4"	-	-	322501	327500	922501	927500	
With Pro Comp lift (K1109)		6"	-	-	324501	329500	924501	929500	
K-30 (With OE quad suspension)	73-87	0"-2"							
Inner Shock (Short)			119502	-	319502	-	919502	-	
Outer Shock (Long)			121500	-	321500	-	921500	-	1
Rear shock			-	122500	-	322500	-	922500	
K-30 (With OE quad suspension)	73-87	2.5"-4"							
Inner Shock (Short)			121502	-	321502	-	921502	-	
Outer Shock (Long)			122500	-	322500	-	922500	-	
Rear shock			-	126500	-	326500	-	926500	
K-30 (With OE quad suspension)	73-87	5"-7"							
Inner Shock (Short)			124502	-	324502	-	924502	-	
Outer Shock (Long)			125509	-	325509	-	925509	-	1
Rear shock			-	129500	-	329500	-	929500	
K-30 (With OE quad suspension)	73-87	8"-10"							
Inner Shock (Short)			129502	-	329502	-	929502	-	
Outer Shock (Long)			132000	-	332000	-	932000	-	1
Rear shock			-	132000	-	332000	-	932000	
K-30 (Exc. OE quad suspension)	69-87	0"-2"	119502	126500	319502	326500	919502	926500	
-		2.5"-4"	121502	132000	321502	332000	921502	932000	
-		5"-7"	124502	129500	324502	329500	924502	929500	
<b>Silverado Pickup (1 Ton) - 2WD</b>									
C3500HD (Incl. Crew Cab)	11-16	0"	-	-	-	-	918750	926543	
-		2.5"	-	-	-	-	918750	926543	
With Pro Comp lift (K1085 / K1087)		6"	-	-	-	-	924375	930001	
C3500 (Incl. Chassis Cab) (11400 GVW)	01-10	0"	-	-	-	-	915551	926543	
With Pro Comp lift (Level Lift)		2.5"	-	-	-	-	917552	926543	
C3500 (Inc. Crew Cab)	87-00	0"	114515	124509	314515	326500	914515	924509	
C-30 (Inc. Crew Cab and Custom Camper)	73-87	0"	114509	122506	314509	322506	914509	922506	
C-30 (With rear coil springs)	67-72	0"	115509	121500	315509	321500	919509	921500	
C-30 (157" W.B.) (With rear leaf springs)		0"	115509	122500	315509	322500	915509	922500	

**ES SERIES**

Notes: (1) Washers may be required to increase space between shock on lower mount.

## Chevrolet/ GMC

	Year	Lift Ht.	ES1000 Front	ES1000 Rear	ES3000 Front	ES3000 Rear	ES9000 Front	ES9000 Rear	Notes:
<b>S-10 Pickup (Compact) - 4WD</b>									
S-10 (Exc. ZR2 Pkg.)	83-05	0"	117500	124509	317500	324509	917500	924509	
		2.5"-4"	120500	124509	320500	324509	920500	924509	
<b>S-10 Pickup (Compact) - 2WD</b>									
S-10	83-05	0"-2"	113515	124509	313515	324509	913515	924509	
With Pro Comp lift (Spindle)		3"	114515	124509	314515	324509	914515	924509	
<b>Suburban (1/2 Ton) - 4WD</b>									
GMT900 (Inc. Z71 Pkg.)	07-15	0"	-	-	-	-	618253	924543	2
		1.5"	-	-	-	-	618253	924543	2
		2"	-	-	-	-	618253	924543	2
		6"	-	-	-	-	618253	928001	2
K1500 (Exc. Z55 Pkg., Autoride, QuadraSteer)	00-06	0"-2"	-	-	315580	325543	915580	925543	
		2.5"	-	-	317580	325543	917580	925543	
		6"	-	-	320590	327543	920590	927543	
K1500	92-99	0"	-	-	318501	324509	918501	924509	
		4"	122501	127500	322501	327500	922501	927500	
		6"	124501	129500	324501	329500	924501	929500	
K-10 (With OE quad suspension)	73-91	0"-2"							
Inner Shock (Short)			119502	-	319502	-	919502	-	
Outer Shock (Long)			121500	-	321500	-	921500	-	1
Rear shock			-	122500	-	322500	-	922500	
K-10 (With OE quad suspension)	73-91	2.5"-4"							
Inner Shock (Short)			121502	-	321502	-	921502	-	
Outer Shock (Long)			122500	-	322500	-	922500	-	
Rear shock			-	126500	-	326500	-	926500	
K-10 (With OE quad suspension)	73-91	5"-7"							
Inner Shock (Short)			124502	-	324502	-	924502	-	
Outer Shock (Long)			125509	-	325509	-	925509	-	1
Rear shock			-	129500	-	329500	-	929500	
K-10 (With OE quad suspension)	73-91	8"-10"							
Inner Shock (Short)			129502	-	329502	-	929502	-	
Outer Shock (Long)			132000	-	332000	-	932000	-	1
Rear shock			-	132000	-	332000	-	932000	
K-10 (Exc. OE quad suspension)	69-91	0"-2"	119502	124500	319502	324500	919502	924500	
		2.5"-4"	121502	126500	321502	326500	921502	926500	
		5"-7"	124502	129500	324502	329500	924502	929500	
<b>Suburban (1/2 Ton) - 2WD</b>									
GMT900	07-15	0"	-	-	-	-	618253	924543	2
		1.5"	-	-	-	-	618253	924543	2
		2"	-	-	-	-	618253	924543	2
		6"	-	-	-	-	618253	928001	2
C1500	00-06	0"	-	-	315580	325543	915580	925543	
		2"	-	-	317580	325543	917580	925543	
		2.5"	-	-	317580	326543	917580	926543	
		6"	-	-	320590	327543	920590	927543	
C1500	92-99	0"-2"	114515	124509	314515	324509	914515	924509	
With Pro Comp lift (Spindle)		3"	-	-	-	-	914515	926504	
With Pro Comp lift (A-arm, Coil)		3"	-	-	-	-	916015	926500	
With cross member and spindles		5"	120515	127500	320515	327500	920515	927500	
C-10 (With leaf spring rear)	73-99	0"	115509	122500	315509	322500	915509	922500	
C-10 (With coil spring rear)	63-72	0"-1"	115509	119500	315509	319500	915509	919500	

Notes:

- (1) Washers may be required to increase space between shock on lower mount.
- (2) Excludes Magnetic Ride Control (LTZ) and Max Trailering package or any model with Air / Electronic / Hydraulic ride adjusting features.



## Chevrolet/ GMC

	Year	Lift Ht.	ES1000 Front	ES1000 Rear	ES3000 Front	ES3000 Rear	ES9000 Front	ES9000 Rear	Notes:
<b>Suburban (3/4 Ton) - 4WD</b>									
K2500 (Exc. Z55 Pkg., Autoride, QuadraSteer)	00-12	0"	-	-	-	-	915551	926543	
-		2.5"	-	-	-	-	917552	926543	
With Pro Comp lift (K1051)		6"	-	-	320508	329543	920508	930001	
K2500 (With cast lower control arms)	92-98	0"-2"	-	-	317501	324509	917501	924509	
-		4"	-	-	322501	327500	922501	927500	
With Pro Comp lift (K1044)		6"	-	-	322501	329500	922501	929500	
K2500 (With stamped steel lower control arms)	88-98	0"-2"	-	-	318501	324509	918501	924509	
-		4"	-	-	322501	327500	922501	927500	
With Pro Comp lift (K1109)		6"	-	-	324501	329500	924501	929500	
K-20 (With OE quad suspension)	88-91	0"-2"							
Inner Shock (Short)			119502	-	319502	-	919502	-	
Outer Shock (Long)			121500	-	321500	-	921500	-	1
Rear shock			-	122500	-	322500	-	922500	
K-20 (With OE quad suspension)	73-87	2.5"-4"							
Inner Shock (Short)			121502	-	321502	-	921502	-	
Outer Shock (Long)			122500	-	322500	-	922500	-	1
Rear shock			-	126500	-	326500	-	926500	
K-30 (With OE quad suspension)	73-87	0"-2"							
Inner Shock (Short)			119502	-	319502	-	919502	-	
Outer Shock (Long)			121500	-	321500	-	921500	-	1
Rear shock			-	122500	-	322500	-	922500	
K-30 (With OE quad suspension)	73-87	2.5"-4"							
Inner Shock (Short)			121502	-	321502	-	921502	-	
Outer Shock (Long)			122500	-	322500	-	922500	-	
Rear shock			-	126500	-	326500	-	926500	
K-30 (With OE quad suspension)	73-87	5"-7"							
Inner Shock (Short)			124502	-	324502	-	924502	-	
Outer Shock (Long)			125509	-	325509	-	925509	-	1
Rear shock			-	129500	-	329500	-	929500	
K-30 (With OE quad suspension)	73-87	8"-10"							
Inner Shock (Short)			129502	-	329502	-	929502	-	
Outer Shock (Long)			132000	-	332000	-	932000	-	1
Rear shock			-	132000	-	332000	-	932000	
K-30 (Exc. OE quad suspension)	69-87	0"-2"	119502	126500	319502	326500	919502	926500	
		2.5"-4"	121502	132000	321502	332000	921502	932000	
-		5"-7"	124502	129500	324502	329500	924502	929500	
<b>Suburban (3/4 Ton) - 2WD</b>									
Suburban 2500	00-12	0"	-	-	-	-	915551	925543	
C-2500	92-99	0"	114515	124509	314515	324509	914515	924509	
	69-91	0"-2"	115509	122500	315509	322500	915509	922500	
	63-72	0"	115509	121500	315509	321500	915509	921500	
<b>Tahoe (1/2 Ton) - 4WD</b>									
GMT900	07-15	0"	-	-	-	-	618253	924543	2
		1.5"	-	-	-	-	618253	924543	2
		2"	-	-	-	-	618253	924543	2
		6"	-	-	-	-	618253	927543	2
All (except w/autoride system)	00-06	0"	-	-	315580	325543	915580	925543	
		2"	-	-	317580	325543	917580	925543	
		6"	-	-	320590	327543	920590	927543	
K1500	92-99	0"-2"	-	-	318501	324509	918501	924509	
		4"	-	-	322501	327500	922501	927500	
		6"	-	-	324501	329500	924501	929500	

**Notes:**

- (1) Washers may be required to increase space between shock on lower mount.
- (2) Excludes Magnetic Ride Control (LTZ) and Max Trailering package or any model with Air / Electronic / Hydraulic ride adjusting features.

## Chevrolet/ GMC

	Year	Lift Ht.	ES1000 Front	ES1000 Rear	ES3000 Front	ES3000 Rear	ES9000 Front	ES9000 Rear	Notes:
<b>Tahoe (1/2 Ton) - 2WD</b>									
GMT900	07-15	0"	-	-	-	-	618253	924543	2
		1.5"	-	-	-	-	618253	924543	2
		2"	-	-	-	-	618253	924543	2
		6"	-	-	-	-	618253	927543	2
C1500	00-06	0"	-	-	315580	325543	915580	925543	
		2"	-	-	317580	325543	917580	925543	
		6"	-	-	320590	327543	920590	927543	
C1500	95-99	0"	114515	124509	314515	324509	914515	924509	
With Pro Comp lift (Spindle)		3"	-	-	-	-	914515	926500	
With Pro Comp lift (A-arm, Coil)		3"	-	-	-	-	916015	926500	
With cross member and spindles		5"	120515	127500	320515	327500	920515	927500	
<b>Van - Astro (Mini) - AWD / 2WD</b>									
Astro - AWD	90-04	0"	-	-	317501	322500	917501	922500	
Astro - 2WD	85-04	0"	115515	122500	315515	322500	915515	922500	
<b>Van (1/2 Ton) - 2WD</b>									
1500 Express & G-10 (Incl. Sport Van)	96-02	0"	114515	122500	314515	322500	914515	922500	
G-10	70-95	0"	119509	122500	319509	322500	919509	922500	
G-10	64-69	0"	-	122500	325509	322500	925509	922500	
<b>Van (3/4 Ton) - 2WD</b>									
2500 Express & G Model (Incl. Sport Van)	96-02	0"	114515	122500	314515	322500	914515	922500	
G-10	70-95	0"	115509	122500	315509	322500	915509	922500	
G-10	64-69	0"	-	122500	325509	322500	925509	922500	
<b>Van ( 1 Ton) - 2WD</b>									
G-30 (Incl. Chopped, Ext., Dually) (G39)	70-95	0"	115509	122500	315509	322500	915509	922500	

ES SERIES

## Daihatsu

Application	Year	Lift Ht.	ES1000 Front	ES1000 Rear	ES3000 Front	ES3000 Rear	ES9000 Front	ES9000 Rear	Notes:
<b>Feroza - 4WD</b>									
Feroza	89-90	0"-1"	113515	118510	313515	318510	913515	918510	
<b>Rocky - 4WD</b>									
Rocky (USA)	82-90	0"-1"	118510	118530	318510	318530	918510	918530	
<b>Taft - 4WD</b>									
Taft	74-82	0"-1"	118509	118509	318509	318509	918509	918509	

**Notes:**

- (1) Washers may be required to increase space between shock on lower mount.
- (2) Excludes Magnetic Ride Control (LTZ) and Max Trailering package or any model with Air / Electronic / Hydraulic ride adjusting features.

## Dodge

Application	Year	Lift Ht.	ES1000 Front	ES1000 Rear	ES3000 Front	ES3000 Rear	ES9000 Front	ES9000 Rear	Notes:
<b>Dakota Pickup (Light Duty) - 4WD</b>									
Dakota	97-04	0"	-	-	-	-	914515	925508	
Dakota	86-96	0"-1"	114515	125509	314515	325509	914515	924509	
<b>Dakota Pickup (Light Duty) - 2WD</b>									
Dakota	97-04	0"-1"	113515	124509	313515	324509	913515	924509	
Dakota	87-96	0"-1"	113515	122500	313515	322500	913515	922500	
<b>Durango - 4WD</b>									
ALL	98-03	0"-1"	114512	124507	314512	324507	914512	924507	
<b>Durango - 2WD</b>									
ALL	98-03	0"	114515	124509	314515	324509	914515	924509	
<b>Raider (Light Duty) - 2WD / 4WD</b>									
Raider (With rear coil springs)	88-89	0"-1"	114515	119500	314515	319500	914515	919500	
Raider (With rear leaf springs)	83-89	0"-1"	114515	120500	314515	320500	914515	920500	
<b>Ramcharger - 4WD</b>									
Ramcharger	76-93	0"-2"	121506	132003	321506	332003	921506	932003	
		2.5"-4"	-	132003	325506	332003	925506	932003	
Ramcharger	74-75	0"-2"	121506	124503	321506	324503	921506	924503	
<b>Ramcharger - 2WD</b>									
Ramcharger	75-93	0"-2"	115517	124509	315517	324509	915517	924509	
<b>Ram 50 (Light Duty) - 4WD</b>									
Ram 50	82-94	0" - 2"	113515	122500	313515	322500	913515	922500	
<b>Ram 50 (Light Duty) - 2WD</b>									
Ram 50	79-93	0" - 2"	113515	120500	313515	320500	913515	920500	
<b>Ram Pickup (1/2 Ton)(Incl. W Models) - 4WD</b>									
Ram 1500-Mega Cab	06-08	0"	-	-	-	-	922553	927543	
-		2"	-	-	-	-	924553	927543	
-		3"	-	-	-	-	925553	927543	
-		5"	-	-	-	-	927591	929543	
-		6"	-	-	-	-	929592	929543	
Ram 1500	09-15	0"	-	-	-	-	-	926543	
-		2.5"	-	-	-	-	-	926543	
-		6"	-	-	-	-	-	930001	
Ram 1500	06-08	0"	-	-	-	-	-	926543	
-		2.5"	-	-	-	-	-	926543	
-		6"	-	-	-	-	-	930001	
Ram 1500	02-05	0"	-	-	317553	326543	917553	926543	
-		2"	-	-	317553	326543	917553	926543	
-		4.5"	-	-	320553	329543	920553	929543	
Ram 1500	94-01	0"	-	-	322553	325543	922553	925543	
-		2"	-	-	322553	325543	922553	925543	
-		2"	-	-	322553	325543	922553	925543	
-		2"-3"	-	-	325553	325543	925553	925543	
With Multiple Shock Kit			-	-	324505	-	924505	-	
W-150 (Inc. Turbo Diesel)	72-93	0"-2"	121506	129503	321506	329503	921506	929503	
		2.5"-4"	-	-	325506	332003	925506	932003	
W-100	76-93	0"-2"	121506	129503	321506	329503	921506	929503	
		2.5"-4"	-	-	325506	332003	925506	932003	
W-100	72-75	0"	121506	129503	321506	329503	921506	929503	
W-100	61-71	0"-2"	121506	122500	321506	322500	921506	922500	
		2.5"-4"	-	124509	325506	324509	925506	924509	

**ES SERIES**

Notes: (1) Washers may be required to increase space between shock on lower mount.

## Dodge

Application	Year	Lift Ht.	ES1000 Front	ES1000 Rear	ES3000 Front	ES3000 Rear	ES9000 Front	ES9000 Rear	Notes:
<b>Ram Pickup (1/2 Ton)(Incl. D Models) - 2WD</b>									
Ram 1500-Mega Cab	06-08	0"	-	-	-	-	917554	927543	
-		2"	-	-	-	-	917554	927543	
Ram 1500	06-08	0"-2"	-	-	-	-	914551	926505	
-		6"	-	-	-	-	921010	930001	
Ram 1500	02-05	0"	-	-	314551	326543	914551	926505	
-		2"	-	-	314551	326543	914551	926505	
-		6"	-	-	-	-	921010	930001	
Ram 1500	94-01	0"-1"	-	-	314553	324543	914553	924543	
-		1.5"	-	-	317553	324543	914553	924543	
With lift Spindles		3"	-	-	314553	325543	917553	925543	
D-100, D-150	72-93	0"-2"	114517	124509	314517	324509	914517	924509	
D-100	61-71	0"-2"	-	124509	325506	324509	925506	924509	
<b>Ram Pickup (3/4 Ton)(Incl. W Models) - 4WD</b>									
Ram 2500 w Radius Arms (Exc. Power Wagon)	14-16	0"	-	-	-	-	922553	924553	
-		2"	-	-	-	-	924553	924553	
-		4"	-	-	-	-	926553	925553	
-		6"	-	-	-	-	927553	926553	
Ram 2500 (Exc. Power Wagon)	03-12	0"	-	-	-	-	922553	927543	
-		2"	-	-	-	-	924553	927543	
-		3"	-	-	-	-	925553	927543	
-		5"	-	-	-	-	927591	929543	
-		6"	-	-	-	-	929592	929543	
Ram 2500	94-02	0"-1"	-	-	322553	325543	922553	925543	
-		2"	-	-	324553	325543	924553	925543	
-		2"-3"	-	-	325553	325543	925553	925543	
With Multiple Shock Kit			-	-	324505	-	924505	-	
W-200, W-250 (Inc. Turbo Diesel)	72-93	0"-2"	121506	129503	321506	329503	921506	929503	
		2.5"-4"	-	132003	325506	332003	925506	932003	
W-200	61-71	0"-2"	121506	122500	321506	322500	921506	922500	
		2.5"-4"	-	124509	325506	324509	925506	924509	
<b>Ram Pickup (3/4 Ton)(Incl. D Models) - 2WD</b>									
Ram 2500	03-12	0"-1"	-	-	-	-	917554	927543	
Ram 2500	94-02	0"-1"	-	-	314553	324543	914553	924543	
With Pro Comp lift (Poly Lift)		1.5"	-	-	314553	324543	914553	924543	
With Pro Comp lift (Poly Lift)		2.5"	-	-	317553	324543	917553	924543	
D-200, D-250	72-93	0"-2"	114517	124509	314517	324509	914517	924509	
D-200, D-250	61-71	0"-2"	-	124509	325506	324509	925506	924509	
<b>Ram Pickup (1 Ton)(Incl. W Models) - 4WD</b>									
Ram 3500 w Radius Arms	13-16	0"	-	-	-	-	922553	927543	
-		2"	-	-	-	-	924553	927543	
-		4"	-	-	-	-	926553	929543	
-		6"	-	-	-	-	927591	929505	
Ram 3500	03-13	0"	-	-	-	-	922553	927543	
-		2"	-	-	-	-	924553	927543	
-		3"	-	-	-	-	925553	927543	
-		5"	-	-	-	-	927591	929543	
-		6"	-	-	-	-	929592	929543	
Ram 3500	94-02	0"-1"	-	-	322553	325543	922553	925543	
-		2"	-	-	324553	325543	924553	925543	
-		2"-3"	-	-	325553	325543	925553	925543	
With Multiple Shock Kit			-	-	324505	-	924505	-	
W-300, W-350 (Inc. Turbo Diesel)	72-93	0"-2"	121506	129503	321506	329503	921503	929503	
		2.5"-4"	-	132003	325506	332003	925506	932003	
W-300 (After serial number 1286462)	65-72	0"	118509	121500	318509	321500	918509	921500	
W-300 (Up to serial number 1286462)	61-65	0"	118509	118509	318509	318509	918509	918509	
<b>Ram Pickup (1 Ton)(Incl. D Models) - 2WD</b>									
Ram 2500	94-01	0"-1"	-	-	314553	324543	914553	924543	
With Pro Comp lift (Poly Lift)		1.5"	-	-	314553	324543	914553	924543	
With Pro Comp lift (Poly Lift)		2.5"	-	-	317553	324543	917553	924543	
D-300, D-350	72-93	0"-2"	114517	124509	314517	324509	914517	924509	
D-300, D-350	61-71	0"-2"	-	124509	325506	324509	925506	924509	

## Ford

Application	Year	Lift Ht.	ES1000 Front	ES1000 Rear	ES3000 Front	ES3000 Rear	ES9000 Front	ES9000 Rear	Notes:
<b>Bronco (Full Size) - 4WD</b>									
Bronco (With OE quad suspension)	80-96	0"							
Shock rearward of front axle (Short)			115510	-	315510	-	915510	-	
Shock forward of front axle (Long)			119510	-	319510	-	919510	-	
Rear shock			-	122500	-	322500	-	922500	
Bronco (With OE quad suspension)		2"-3"							
Shock rearward of front axle (Short)			118510	-	318510	-	918510	-	
Shock forward of front axle (Long)			121510	-	321510	-	921510	-	
Rear shock			-	124509	-	324509	-	924509	
Bronco (With OE quad suspension)		4"							
Shock rearward of front axle (Short)			119510	-	319510	-	919510	-	
Shock forward of front axle (Long)			122510	-	322510	-	922510	-	
Rear shock			-	126500	-	326500	-	926500	
Bronco (With OE quad suspension)		6"							
Shock rearward of front axle (Short)			121510	-	321510	-	921510	-	
Shock forward of front axle (Long)			124510	-	324510	-	924510	-	
Rear shock			-	126500	-	326500	-	926500	
Bronco (With OE quad suspension)	78-79	0"-2"							
Shock rearward of front axle (Short)			119510	-	319510	-	919510	-	
Shock forward of front axle (Long)			121510	-	321510	-	921510	-	
Rear shock			-	121500	-	321500	-	921500	
Bronco (With OE quad suspension)		2"-4"							
Shock rearward of front axle (Short)			121510	-	321510	-	921510	-	
Shock forward of front axle (Long)			122510	-	322510	-	922510	-	
Rear shock			-	124509	-	324509	-	924509	
Bronco (Exc. OE quad suspension)	80-96	0"	115510	122500	315510	322500	915510	922500	
-		1"-3"	118510	124509	318510	324509	918510	924509	
-		4"	119510	126500	319510	326500	919510	926500	
-		6"	121510	126500	321510	326500	921510	926500	
Bronco (Exc. OE quad suspension)	78-79	0"							
Right Front			121510		321510		921510		
Left Front			119510		319510		919510		
Rear				121500		321500		921500	
		2"4"							
Right Front			-	-	325510		925510		
Left Front			-	-	321510		921510		
Rear			-	-		324509		924509	
Bronco	66-77	0"	119510	121510	319510	321510	919510	921510	
-		2"-4"	121510	124510	321510	324510	921510	924510	
<b>Bronco II (Mid size) - 4WD</b>									
Bronco II	83-90	0"-1.5"	115510	122500	315510	322500	915510	922500	
-		3"	119510	126500	319510	326500	919510	926500	
-		4"	121510	126500	321510	326500	921510	926500	
<b>Bronco II (Mid size) - 2WD</b>									
Bronco II	86-89	0"-1"	115510	122500	315510	322500	915510	922500	
<b>Courier Pickup (Light Duty) - 2WD</b>									
Courier	72-82	0"-1.5"	113515	121530	313515	321530	913515	921530	
<b>Excursion - 4WD</b>									
Excursion	00-06	0"	122508	129509	322508	329509	922508	929509	
-		4"	124508	132000	324508	332000	924508	932000	
-		6"	126508	132000	326508	332000	926508	932000	
<b>Excursion - 2WD</b>									
Excursion	00-06	0"	115510	126500	315510	326500	915510	926500	
-		2"	117510	126500	317510	326500	917510	926500	
-		6"	121510	129509	321510	329509	921510	929509	
<b>Expedition - 4WD</b>									
ALL (Exc. rear air leveling)	97-02	0"	-	-	315511	322504	915511	922504	
-		2.5"	-	-	315511	322504	915511	922504	
-		4"	-	-	320510	326500	920510	926500	
<b>Expedition - 2WD</b>									
ALL (Exc. rear air leveling)	97-02	0"	-	-	315515	322504	915515	922504	
-		2"-3"	-	-	317515	324504	917515	924504	

## Ford

Application	Year	Lift Ht.	ES1000 Front	ES1000 Rear	ES3000 Front	ES3000 Rear	ES9000 Front	ES9000 Rear	Notes:
<b>Explorer - 4WD</b>									
ALL (Exc. Auto ride control)	95-01	0"	118595	124509	318595	324509	918595	924509	
ALL	91-94	0"-1.5"	115515	124529	315515	324509	915515	924509	
-		2.5"	117510	124509	317510	324509	917510	924509	
<b>Explorer - 2WD</b>									
Explorer	95-01	0"	118515	124509	318515	324509	918515	924509	
-		2"	118515	124509	318515	324509	918515	924509	
With lift (Spindle)		3"	118515	124509	318515	324509	918515	924509	
Explorer	91-94	0"-1"	115515	124509	315515	324509	915515	924509	
<b>Explorer Sport Trac - 2WD/ 4WD</b>									
Explorer Sport Trac	01-04	0"	118595	126500	318595	326500	918595	926500	
<b>F Series Pickup (1/2 Ton) - 4WD</b>									
F-150 (Incl. Super Crew)	09-13	0"-2"	-	-	-	-	621553	929504	
-		2"-3"	-	-	-	-	621553	929504	
-		6"	-	-	-	-	621553	932008	
F-150	04-08	0"-2"	-	-	-	-	621553	927504	
-		2"-3"	-	-	-	-	621553	927504	
-		6"	-	-	-	-	621553	929504	
F-150	97-03	0"-2"	-	-	317510	327510	917510	927510	
-		2.5"	-	-	317510	327510	917510	927510	
-		4	120510	129510	320510	329510	920510	929510	
F-100, F-150 (With OE quad suspension)	80-96								
Shock rearward of front axle (Short)		0"	115510	-	315510	-	915510	-	
Shock forward of front axle (Long)			119510	-	319510	-	919510	-	
Rear shock			-	124509	-	324509	-	924509	
F-100, F-150 (With OE quad suspension)									
Shock rearward of front axle (Short)		2"	117510	-	317510	-	917510	-	
Shock forward of front axle (Long)			121510	-	321510	-	921510	-	
Rear shock			-	124509	-	324509	-	924509	
F-100, F-150 (With OE quad suspension)									
Shock rearward of front axle (Short)		4"	119510	-	319510	-	919510	-	
Shock forward of front axle (Long)			122510	-	322510	-	922510	-	
Rear shock			-	126500	-	326500	-	926500	
F-100, F-150 (With OE quad suspension)									
Shock rearward of front axle (Short)		6"	121510	-	321510	-	921510	-	
Shock forward of front axle (Long)			124510	-	324510	-	924510	-	
Rear shock			-	126500	-	326500	-	926500	
F-100, F-150 (With OE quad suspension)	77-79	0"							
Shock rearward of front axle (Short)			119510	-	319510	-	919510	-	
Shock forward of front axle (Long)			121510	-	321510	-	921510	-	
Rear shock			-	121510	-	321510	-	921510	
F-100, F-150 (With OE quad suspension)		2"-4"							
Shock rearward of front axle (Short)			121510	-	321510	-	921510	-	
Shock forward of front axle (Long)			122510	-	322510	-	922510	-	
Rear shock			-	126510	-	326510	-	926510	
F-100, F-150 (Exc. OE quad suspension)	80-96	0"	115510	124509	315510	324509	915510	924509	
-		1"-3"	118510	124509	318510	324509	918510	924509	
-		4"	119510	126500	319510	326500	919510	926500	
-		6"	121510	126500	321510	326500	921510	926500	
F-100, F-150 (Exc. OE quad suspension)	77-79	0"	119510	121510	319510	321510	919510	921510	
-		2"-4"	121510	126510	321510	326510	921510	926510	
F-150 Super Cab (With leaf springs)	77-79	2"-4"	125530	126510	325530	326510	925530	926510	
F-100, F-150 (Exc. Crew Cab)	70-76	0"	121500	121510	321500	321510	921500	921510	
-		2"-4"	122500	126510	322500	326510	922500	926510	
F-100	66-69	0"-2"	121500	122500	321500	322500	921500	922500	
-		3"-4"	122500	126500	322500	326500	922500	926500	
F-100	61-65	0"-2"	121530	121500	321530	321500	921530	921500	
-		3"-4"	125530	124509	325530	324509	925530	924509	

## Ford

Application	Year	Lift Ht.	ES1000 Front	ES1000 Rear	ES3000 Front	ES3000 Rear	ES9000 Front	ES9000 Rear	Notes:
<b>F Series Pickup (1/2 Ton) - 2WD</b>									
F-150 (Incl. Super Crew)	09-13	0"-2"	-	-	-	-	620553	927504	
-		2"-3"	-	-	-	-	620553	927504	
-		6"	-	-	-	-	620553	932008	
F-150 (Incl. Super Crew)	04-08	0"-2"	-	-	620553	325504	620553	925504	
-		2"-3"	-	-	620553	325504	620553	925504	
-		6"	-	-	620553	327504	620553	927504	
F-150 (Incl. Super Crew)	97-03	0"	115515	124510	315515	324510	915515	924510	
With Pro Comp lift (Spindle)		3"	115515	124510	315515	324510	915515	924510	
-		3"-4"	118515	126510	318515	326510	918515	926510	
With Pro Comp lift (Pro Ride)		6"	117515	126510	317515	326510	917515	926510	
-		6"	122515	126510	322515	326510	922515	926510	
F-100, F-150	80-96	0"	115510	122500	315510	322500	915510	922500	
-		1"-3"	118510	124509	318510	324509	918510	924509	
-		4"	119510	126500	319510	326500	919510	926500	
-		6"	121510	126500	321510	326500	921510	926500	
F-100, F-150 (Exc. Crew Cab)	70-79	0"	118510	121510	318510	321510	918510	921510	
-		2" - 4"	121510	126510	321510	326510	921510	926510	
<b>F Series Pickup (3/4 Ton) - 4WD</b>									
F-250	08-16	0"	-	-	321553	329508	921553	929508	
-		2"-3"	-	-	324553	329508	924553	929508	
-		6"	-	-	326553	332008	926553	932008	
With Pro Comp Multiple Shock Kit (52460 / 52451)			-	-	-	-	925501	-	
-		8"	-	-	327553	334008	927553	934008	
With Pro Comp Multiple Shock Kit (52470)			-	-	-	-	927501	-	
F-250	05-07	0"	-	-	322553	329508	922553	929508	
-		2"-3"	-	-	324553	329508	924553	929508	
-		6"	-	-	326553	332008	926553	932008	
With Pro Comp Multiple Shock Kit (52440)			-	-	-	-	925501	-	
-		8"	-	-	327553	334008	927553	934008	
With Pro Comp Multiple Shock Kit (52450)			-	-	-	-	927501	-	
F-250	99-04	0"	-	-	322508	332008	922508	932008	
-		2"	-	-	324508	332008	924508	932008	
-		4"-5"	-	-	326508	334008	926508	934008	
-		6.5"-8.5"	-	-	329508	336008	929508	936008	
F-250 Light Duty (7 Lug)	97-03	0"	117510	127510	317510	327510	917510	927510	
-		4"	120510	129510	320510	329510	920510	929510	
F-250	87-91	0"	122500	124509	322500	324509	922500	924509	
F-250	80-2/82	0"	119510	124509	319510	324509	919510	924509	
-		1"-3"	121510	126500	321510	326500	921510	926500	
F-250 ( Built after 3/1/77)	77-79	0"	121530	121510	321530	321510	921530	921510	
-		1"-3.5"	125530	126510	325530	326510	925530	926510	
F-250 ( Built before 3/1/77)	65-77	0"	125530	122500	325530	322500	925530	922500	
-		1"-3"	125530	124509	325530	324509	925530	924509	
F-250	61-64	0"	121530	121500	321530	321500	921530	921500	
-		3"-4"	125530	124509	325530	324509	925530	924509	
<b>F Series Pickup (3/4 Ton) - 2WD</b>									
F-250	99-14	0"	115510	126508	315510	326508	915510	926508	
-		2"	115510	126508	315510	326508	915510	926508	
-		6"	121510	129508	321510	329509	921510	929508	
F-250 Light Duty (7 Lug)	97-03	0"	115517	124510	315515	324510	915515	924510	
-		2.5"	-	-	317515	324510	917515	924510	
-		3"-4"	118517	126510	318515	326510	918515	926510	
F-250	80-98	0"	115510	124509	315510	324509	915510	924509	
F-250 (Exc. Crew Cab)	70-79	0"	118510	121510	318510	321510	918510	921510	
-		2"-4"	121510	126510	321510	326510	921510	926510	

## Ford

Application	Year	Lift Ht.	ES1000 Front	ES1000 Rear	ES3000 Front	ES3000 Rear	ES9000 Front	ES9000 Rear	Notes:
<b>F Series Pickup (1 Ton) - 4WD</b>									
F-350	08-16	0"	-	-	321553	329508	921553	929508	
-		2"-3"	-	-	324553	329508	924553	929508	
-		6"	-	-	326553	332008	926553	932008	
With Pro Comp Multiple Shock Kit (52460/52451)									
-		8"	-	-	327553	334008	927553	934008	
With Pro Comp Multiple Shock Kit (52470)									
F-350	05-07	0"	-	-	322553	332008	922553	932008	
-		2"-3"	-	-	324553	332008	924553	932008	
-		6"	-	-	326553	332008	926553	932008	
With Pro Comp Multiple Shock Kit (52440)									
-		8"	-	-	327553	334008	927553	934008	
With Pro Comp Multiple Shock Kit (52450)									
F-350	99-04	0"	-	-	322508	332008	922508	932008	
-		2"	-	-	324508	332008	924508	932008	
-		4"-5"	-	-	326508	334008	926508	934008	
-		6.5"-8.5"	-	-	329508	336008	929508	936008	
F-350 (Exc. Dual rear wheels)	86-97	0"-1"	122500	126500	322500	326500	922500	926500	
F-350 (Dual rear wheels)	87-96	0"	122500	124509	322500	324509	922500	924509	
<b>F Series Pickup (1 Ton) - 2WD</b>									
F-350	99-12	0"	115510	126508	315510	326508	915510	926508	
-		2"	115510	126508	315510	326508	915510	926508	
-		6"	121510	129508	321510	329509	921510	929508	
F-350	80-98	0"-2"	115510	124509	315510	324509	915510	924509	
<b>Ranger / Range EDGE - 4WD</b>									
Ranger	98-11	0"	118595	126500	318595	326500	918595	926500	
<b>Ranger - 4WD</b>									
Ranger	87-97	0"	114515	122508	314515	322508	914515	922508	
-		2.5"	118510	126500	318510	326500	918510	926500	
Ranger	83-89	0"-1.5"	115510	125509	315510	325509	915510	925509	
-		2.5"	118510	126500	318510	326500	918510	926500	
-		3"-4"	119510	126500	319510	326500	919510	926500	
<b>Ranger EDGE / Tremor - 2WD</b>									
EDGE w/Torsion Bar Front Susp.	01-11	0"	118595	126500	318595	326500	918595	926500	
With lift (Spindle)		3"	118515	126500	318515	326500	918515	926500	
<b>Ranger - 2WD</b>									
Ranger w/Coil Spring Front Susp.	98-11	0"	114515	122500	314515	322500	914515	922500	
With lift (Coil)		3"	117515	124509	317515	324509	917515	924509	
Ranger	83-97	0"	115510	122500	315510	322500	915510	922500	
-		2"	118510	122500	318510	322500	918510	922500	
-		2.5"	118510	124500	318510	324500	918510	924500	
-		5"	121510	126500	321510	326500	921510	926500	
<b>Van - Aerostar (Mini) - 4WD</b>									
Aerostar	90-97	0"	115515	118509	315515	318509	915515	918509	
<b>Van - Aerostar (Mini) - 2WD</b>									
Aerostar	86-97	0"	114515	118509	314515	318509	914515	918509	2
<b>Van (1/2 Ton) - 2WD</b>									
E-100, E-150	75-98	0"	115510	119510	315510	319510	915510	919510	
<b>Van (3/4 Ton) - 2WD</b>									
E-250	75-98	0"	115510	122510	315510	322510	915510	922510	

ES SERIES

## Geo

Application	Year	Lift Ht.	ES1000 Front	ES1000 Rear	ES3000 Front	ES3000 Rear	ES9000 Front	ES9000 Rear	Notes:
<b>Tracker-4WD</b>									
Tracker (With ABS & w/o ABS)	89-98	0"	-	118510	-	315810	-	918510	

Notes: (2) Slight grinding of A-Frame hole may be required to fit body of shock



## GMC

Application	Year	Lift Ht.	ES1000 Front	ES1000 Rear	ES3000 Front	ES3000 Rear	ES9000 Front	ES9000 Rear	Notes:
<b>Canyon - 2WD / 4WD</b>									
ALL (With torsion bars) (Z71 Pkg.)	04-10	0"	-	-	317510	324509	917510	924509	
With Pro Comp lift (Level Lift)		2.5"	-	-	317510	324509	917510	924509	
<b>Jimmy (Compact) - 4WD</b>									
S-15 (Exc. ZR2 Pkg.)	83-05	0"-2"	117500	124509	317500	324509	917500	924509	
		3"-4"	120500	126500	320500	326500	920500	926500	
<b>Jimmy (Compact) - 2WD</b>									
S-10	83-05	0"-2"	113515	124509	313515	324509	913515	924509	
With Pro Comp lift (Spindle)		3"	114515	124509	314515	324509	914515	924509	
<b>Yukon 2DR (1/2 Ton) - 4WD</b>									
Yukon	92-98	0"-2"	118501	124509	318501	324509	918501	924509	
-		4"	122501	127500	322501	327500	922501	927500	
-		6"	124501	129500	324501	329500	924501	929500	
<b>Jimmy (Full Size)(1/2 Ton) - 4WD</b>									
K5, V5 (With OE quad suspension)	73-91	0"-2"							
Inner Shock (Short)			119502	-	319502	-	919502	-	
Outer Shock (Long)			121500	-	321500	-	921500	-	1
Rear shock			-	122500	-	322500	-	922500	
K5, V5 (With OE quad suspension)		2.5"-4"							
Inner Shock (Short)			121502	-	321502	-	921502	-	
Outer Shock (Long)			122500	-	322500	-	922500	-	1
Rear shock			-	126500	-	326500	-	926500	
K5, V5 (With OE quad suspension)		5"-7"							
Inner Shock (Short)			124509	-	324509	-	924509	-	
Outer Shock (Long)			126502	-	326502	-	926502	-	1
Rear shock			-	129500	-	329500	-	929500	
K5, V5 (With OE quad suspension)		8"-10"							
Inner Shock (Short)			129502	-	329502	-	929502	-	
Outer Shock (Long)			132000	-	332000	-	932000	-	1
Rear shock			-	132000	-	332000	-	932000	
K5, V5 (Exc. OE quad suspension)	69-91	0"-2"	119502	122500	319502	322500	919502	922500	
		2.5"-4"	121502	126500	321502	326500	921502	926500	
		5"-7"	124502	129500	324502	329500	924502	929500	
	67-68	3"-4"	121500	126500	321500	326500	921500	926500	
<b>Yukon (1/2 Ton) - 2WD</b>									
K5, V5	92-98	0"-3"	114515	124509	314515	324509	914515	924509	
With Pro Comp lift (Spindle)		3"	114515	126500	314515	326500	914515	926500	
-		5"	120515	127500	320515	327500	920515	927500	
-		6"	-	-	-	-	916015	927500	
K5, V5	69-91	0"-3"	115509	122500	315509	322500	915509	922500	
<b>Sierra Pickup (1/2 Ton) - 4WD</b>									
K2XX (Inc. Z71 Pkg.)	14-15	0"	-	-	-	-	-	925543	
-		1.5"	-	-	-	-	-	925543	
-		2"	-	-	-	-	-	925543	
-		6"	-	-	-	-	-	929505	
GMT900 (Inc. Z71 Pkg.)	07-13	0"	-	-	-	-	618253	925543	
-		1.5"	-	-	-	-	618253	925543	
-		2"	-	-	-	-	618253	925543	
-		6"	-	-	-	-	618253	928001	
K1500HD (Incl. Crew Cab)	01-06	0"	-	-	-	-	915551	926543	
-		2.5"	-	-	-	-	917552	926543	
With Pro Comp lift (K1051)		6"	-	-	-	-	920508	930001	
With Pro Comp lift (K1084)		6"	-	-	-	-	922010	930001	
K1500 - Classic (Std. Cab / Ext. Cab/ Crew Cab)	99-07	0"	-	-	315580	325543	915580	925543	
-		2"	-	-	317580	325543	917580	925543	
-		4"-6"	-	-	320590	329543	920590	929505	
K1500	88-98	0"-2"	118501	124509	318501	324509	918501	924509	
-		4"	122501	127500	322501	327500	922501	927500	
-		6"	124501	129500	324501	329500	924501	929500	

Notes: (1) Washers may be required to increase space between shock on lower mount.

ES SERIES

## GMC

Application	Year	Lift Ht.	ES1000 Front	ES1000 Rear	ES3000 Front	ES3000 Rear	ES9000 Front	ES9000 Rear	Notes:
<b>Sierra Pickup (1/2 Ton) - 4WD - Continued</b>									
K-10 (With OE quad suspension / V-10)	73-87	0"-2"							
Inner Shock (Short)			119502	-	319502	-	919502	-	
Outer Shock (Long)			121500	-	321500	-	921500	-	1
Rear shock			-	122500	-	322500	-	922500	
Rear shock			-	126500	-	326500	-	926500	
K-10 (With OE quad suspension)		2.5"-4"							
Inner Shock (Short)			121502	-	321502	-	921502	-	
Outer Shock (Long)			122500	-	322500	-	922500	-	
Rear shock			-	126500	-	326500	-	926500	
K-10 (With OE quad suspension)		5"-7"							
Inner Shock (Short)			124502	-	324502	-	924502	-	
Outer Shock (Long)			125509	-	325509	-	925509	-	1
Rear shock			-	129500	-	329500	-	929500	
K-10 (With OE quad suspension)		8"-10"							
Inner Shock (Short)			129502	-	329502	-	929502	-	
Outer Shock (Long)			132000	-	332000	-	932000	-	1
Rear shock			-	132000	-	332000	-	932000	
K-10 (Exc. OE quad suspension)	69-87	0"-2"	119502	122500	319502	322500	919502	922500	
-		2.5"-4"	121502	126500	321502	326500	921502	926500	
-		5"-7"	124502	129500	324502	329500	924502	929500	
<b>Sierra Pickup (1/2 Ton) - 2WD</b>									
K2XX (Inc. Z71 Pkg.)	14-15	0"	-	-	-	-	-	925543	
-		1.5"	-	-	-	-	-	925543	
-		2"	-	-	-	-	-	925543	
-		6"	-	-	-	-	-	929505	
GMT900	07-13	0"	-	-	-	-	618253	925543	
-		1.5"	-	-	-	-	618253	925543	
-		2"	-	-	-	-	618253	925543	
-		6"	-	-	-	-	618253	928001	
C1500HD (Crew Cab) (With torsion bars)	01-06	0"	-	-	-	-	915551	926543	
-		2.5"	-	-	-	-	917552	926543	
With Pro Comp lift (K1051)		6"	-	-	-	-	920508	930001	
With Pro Comp lift (K1084)		6"	-	-	-	-	922010	930001	
C1500HD (Crew Cab) (With coil springs)	01-06	0"	-	-	314515	326543	914515	926543	
C1500 (Crew Cab) (With torsion bars)	04-06	0"-1"	-	-	315580	324543	915580	924543	
-		2"	-	-	317580	324543	917580	924543	
With Pro Comp lift (K1096)		6"	-	-	320590	327543	920590	927543	
C1500 (Std. Cab / Ext. Cab / Crew Cab) (With coil springs)	99-06	0"	-	-	314515	325543	914515	925543	
-		2"	-	-	314515	325543	914515	925543	
-		6"	-	-	321515	329543	921515	927543	
C1500 (Std. Cab / Ext. Cab / Crew Cab) (With coil springs)	88-98	0"-1"	-	-	314515	324509	914515	924509	
With Pro Comp lift (Spindle)		3"	-	-	-	-	914515	926500	
With Pro Comp lift (A-arm, Coil)		3"	-	-	-	-	916015	926500	
With cross member and spindles		5"	120515	127500	320515	327500	920515	927500	
C-10 (With leaf spring rear)	69-87	0"-2"	115509	122500	315509	322500	915509	922500	
C-10 (With coil spring rear)	63-72	0"-2"	115509	121500	315509	321500	915509	921500	

Notes: (1) Washers may be required to increase space between shock on lower mount.

## GMC

Application	Year	Lift Ht.	ES1000 Front	ES1000 Rear	ES3000 Front	ES3000 Rear	ES9000 Front	ES9000 Rear	Notes:
<b>Sierra Pickup (3/4 Ton) - 4WD</b>									
K2500HD (Incl. Crew Cab)	11-16	0"	-	-	-	-	918750	926543	
-		2.5"	-	-	-	-	918750	926543	
With Pro Comp lift (K1085 / K1087)		6"	-	-	-	-	924375	930001	
K2500HD (Incl. Crew Cab) (9200 GVW)	99-10	0"	-	-	-	-	915551	926543	
-		2.5"	-	-	-	-	917552	926543	
With Pro Comp lift (K1051)		6"	-	-	-	-	920508	930001	
With Pro Comp lift (K1084)		6"	-	-	-	-	922010	930001	
K2500 (Incl. Crew Cab)	01-07	0"-2"	-	-	-	-	915551	926543	
-		2"	-	-	-	-	917552	926543	
With Pro Comp lift (K1051)		6"	-	-	-	-	920508	930001	
With Pro Comp lift (K1084)		6"	-	-	-	-	922010	930001	
K2500 (With cast lower control arms)	92-98	0"-2"	-	-	317501	324509	917501	924509	
-		4"	-	-	322501	327500	922501	927500	
With Pro Comp lift (K1044)		6"	-	-	322501	329500	922501	929500	
K2500 (With stamped steel lower control arms)	88-98	0"-2"	-	-	318501	324509	918501	924509	
-		4"	-	-	322501	327500	922501	927500	
With Pro Comp lift (K1109)		6"	-	-	324501	329500	924501	929500	
<b>Sierra Pickup (1/2 Ton) - 2WD</b>									
K-20 (With OE quad suspension)	73-87	0"-2"							
Inner Shock (Short)			119502	-	319502	-	919502	-	
Outer Shock (Long)			121500	-	321500	-	921500	-	1
Rear shock			-	122500	-	322500	-	922500	
K-20 (With OE quad suspension)		2.5"-4"							
Inner Shock (Short)			121502	-	321502	-	921502	-	
Outer Shock (Long)			122500	-	322500	-	922500	-	
Rear shock			-	126500	-	326500	-	926500	
K-20 (With OE quad suspension)		5"-7"							
Inner Shock (Short)			124502	-	324502	-	924502	-	
Outer Shock (Long)			125509	-	325509	-	925509	-	1
Rear shock			-	129500	-	329500	-	929500	
K-20 (With OE quad suspension)		8"-10"							
Inner Shock (Short)			129502	-	329502	-	929502	-	
Outer Shock (Long)			132000	-	332000	-	932000	-	1
Rear shock			-	132000	-	332000	-	932000	
K-20 (Exc. OE quad suspension)	69-87	0"-2"	119502	122500	319502	322500	919502	922500	
-		2.5"-4"	121502	126500	321502	326500	921502	926500	
-		5"-7"	124502	129500	324502	329500	924502	929500	
<b>Sierra Pickup (3/4 Ton) - 2WD</b>									
C2500HD (Incl. Crew Cab)	11-16	0"	-	-	-	-	918750	926543	
-		2.5"	-	-	-	-	918750	926543	
With Pro Comp lift (K1085 / K1087)		6"	-	-	-	-	924375	930001	
C2500HD (Incl. Crew Cab) (9200 GVW)	01-10	0"	-	-	-	-	915551	926543	
-		2.5"	-	-	-	-	917552	926543	
With Pro Comp lift (K1051)		6"	-	-	-	-	920508	930001	
With Pro Comp lift (K1084)		6"	-	-	-	-	922010	930001	
C2500 (Incl. Crew Cab)	00-10	0"	-	-	-	-	915551	926543	
-		2"	-	-	-	-	917552	926543	
With Pro Comp lift (K1051)		6"	-	-	-	-	920508	930001	
With Pro Comp lift (K1084)		6"	-	-	-	-	922010	930001	
C2500 (Std. Cab / Ext. Cab / Crew Cab) (With coil springs)	99-07	0"	-	-	314515	326543	914515	926505	
-		2"	-	-	314515	326543	914515	926505	
C2500 (Std. Cab / Ext. Cab / Crew Cab) (With coil springs)	88-98	0"-1"	-	-	314515	324509	914515	924509	
C-20 (With leaf spring rear)	69-87	0"-2"	115509	122500	315509	322500	915509	922500	
C-20 (With coil spring rear)	63-72	0"-2"	115509	121500	315509	321500	915509	921500	

ES SERIES

Notes: (1) Washers may be required to increase space between shock on lower mount.

## GMC

Application	Year	Lift Ht.	ES1000 Front	ES1000 Rear	ES3000 Front	ES3000 Rear	ES9000 Front	ES9000 Rear	Notes:
<b>Sierra Pickup (1 Ton) - 4WD</b>									
K3500HD (Incl. Crew Cab)	11-16	0"	-	-	-	-	918750	926543	
-		2.5"	-	-	-	-	918750	926543	
With Pro Comp lift (K1085 / K1087)		6"	-	-	-	-	924375	930001	
K3500HD (Incl. Crew Cab) (11400 GVW)	01-10	0"-2"	-	-	-	-	915551	926543	
With Pro Comp lift (Level Lift)		2.5"	-	-	-	-	917552	926543	
K3500 (With cast lower control arms)	92-98	0"-2"	-	-	317501	324509	917501	924509	
-		4"	-	-	322501	327500	922501	927500	
With Pro Comp lift (K1044)		6"	-	-	322501	329500	922501	929500	
K3500 (With stamped steel lower control arms)	88-98	0"-2"	-	-	318501	324509	918501	924509	
-		4"	-	-	322501	327500	922501	927500	
With Pro Comp lift (K1109)		6"	-	-	324501	329500	924501	929500	
K-30 (With OE quad suspension)	73-87	0"-2"							
Inner Shock (Short)			119502	-	319502	-	919502	-	
Outer Shock (Long)			121500	-	321500	-	921500	-	1
Rear shock			-	122500	-	322500	-	922500	
K-30 (With OE quad suspension)		2.5"-4"							
Inner Shock (Short)			121502	-	321502	-	921502	-	
Outer Shock (Long)			122500	-	322500	-	922500	-	
Rear shock			-	126500	-	326500	-	926500	
<b>Sierra Pickup (1 Ton) - 4WD (Continued)</b>									
K-30 (With OE quad suspension)		5"-7"							
Inner Shock (Short)			124502	-	324502	-	924502	-	
Outer Shock (Long)			125509	-	325509	-	925509	-	1
Rear shock			-	129500	-	329500	-	929500	
K-30 (With OE quad suspension)		8"-10"							
Inner Shock (Short)			129502	-	329502	-	929502	-	
Outer Shock (Long)			132000	-	332000	-	932000	-	1
Rear shock			-	132000	-	332000	-	932000	
K-30 (Exc. OE quad suspension)	69-87	0"-2"	119502	126500	319502	326500	919502	926500	
-		2.5"-4"	121502	132000	321502	332000	921502	932000	
-		5"-7"	124502	129500	324502	329500	924502	929500	
<b>Sierra Pickup (1 Ton) - 2WD</b>									
C3500 (Incl. Chassis Cab) (11400 GVW)	01-10	0"	-	-	-	-	915551	926543	
With Pro Comp lift (Level Lift)		2.5"	-	-	-	-	917552	926543	
C3500 (Inc. Crew Cab)	87-00	0"	114515	124509	314515	326500	914515	924509	
C-30 (Inc. Crew Cab and Custom Camper)	73-87	0"	114509	122506	314509	322506	914509	922506	
C-30 (With rear coil springs)	67-72	0"	115509	121500	315509	321500	919509	921500	
C-30 (157" W.B.) (With rear leaf springs)		0"	115509	122500	315509	322500	915509	922500	
<b>S-15 Pickup (Compact) - 4WD</b>									
S-15 (Exc. ZR2 Pkg.)	83-05	0"	117500	124509	317500	324509	917500	924509	
-		2.5"-4"	120500	124509	320500	324509	920500	924509	
<b>S-15 Pickup (Compact) - 2WD</b>									
S-15	83-05	0"-2"	113515	124509	313515	324509	913515	924509	
With Pro Comp lift (Spindle)		3"	114515	124509	314515	324509	914515	924509	
<b>Yukon XL (1/2 Ton) - 4WD</b>									
GMT900 (Inc. Z71 Pkg.)	07-14	0"	-	-	-	-	618253	924543	
-		1.5"	-	-	-	-	618253	924543	
-		2"	-	-	-	-	618253	924543	
-		6"	-	-	-	-	618253	928001	
K1500 (Exc. Z55 Pkg., Autoride, QuadraSteer)	00-06	0"-2"	-	-	315580	325543	915580	925543	
-		2.5"	-	-	317580	325543	917580	925543	
-		6"	-	-	320590	327543	920590	927543	

Notes: (1) Washers may be required to increase space between shock on lower mount.

## GMC

Application	Year	Lift Ht.	ES1000 Front	ES1000 Rear	ES3000 Front	ES3000 Rear	ES9000 Front	ES9000 Rear	Notes:
<b>Suburban (1/2 Ton) - 4WD</b>									
K1500	92-99	0"	-	-	318501	324509	918501	924509	
-		4"	122501	127500	322501	327500	922501	927500	
-		6"	124501	129500	324501	329500	924501	929500	
K-10 (With OE quad suspension)	73-91	0"-2"							
Inner Shock (Short)			119502	-	319502	-	919502	-	
Outer Shock (Long)			121500	-	321500	-	921500	-	1
Rear shock			-	122500	-	322500	-	922500	
K-10 (With OE quad suspension)		2.5"-4"							
Inner Shock (Short)			121502	-	321502	-	921502	-	
Outer Shock (Long)			122500	-	322500	-	922500	-	
Rear shock			-	126500	-	326500	-	926500	
K-10 (With OE quad suspension)		5"-7"							
Inner Shock (Short)			124502	-	324502	-	924502	-	
Outer Shock (Long)			125509	-	325509	-	925509	-	1
Rear shock			-	129500	-	329500	-	929500	
K-10 (With OE quad suspension)		8"-10"							
Inner Shock (Short)			129502	-	329502	-	929502	-	
Outer Shock (Long)			132000	-	332000	-	932000	-	1
Rear shock			-	132000	-	332000	-	932000	
K-10 (Exc. OE quad suspension)	69-91	0"-2"	119502	124500	319502	324500	919502	924500	
-		2.5"-4"	121502	126500	321502	326500	921502	926500	
-		5"-7"	124502	129500	324502	329500	924502	929500	
<b>Yukon XL (1/2 Ton) - 2WD</b>									
GMT900	07-14	0"	-	-	-	-	618253	924543	
-		1.5"	-	-	-	-	618253	924543	
-		2"	-	-	-	-	618253	924543	
-		6"	-	-	-	-	618253	928001	
<b>Yukon XL (1/2 Ton) - 2WD</b>									
C1500	00-06	0"	-	-	315580	325543	915580	925543	
-		2"	-	-	317580	325543	917580	925543	
-		2.5"	-	-	317580	326543	917580	926543	
-		6"	-	-	320590	327543	920590	927543	
<b>Suburban (1/2 Ton) - 2WD</b>									
C1500	92-99	0"-2"	114515	124509	314515	324509	914515	924509	
With Pro Comp lift (Spindle)		3"	-	-	-	-	914515	926504	
With Pro Comp lift (A-arm, Coil)		3"	-	-	-	-	916015	926500	
With cross member and spindles		5"	120515	127500	320515	327500	920515	927500	
C-10 (With leaf spring rear)	73-99	0"	115509	122500	315509	322500	915509	922500	
C-10 (With coil spring rear)	63-72	0"-1"	115509	119500	315509	319500	915509	919500	
<b>Yukon XL (3/4 Ton) - 4WD</b>									
K2500 (Exc. Z55 Pkg., Autoride, QuadraSteer)	00-12	0"	-	-	-	-	915551	926543	
-		2.5"	-	-	-	-	917552	926543	
With Pro Comp lift (K1051)		6"	-	-	320508	329543	920508	930001	

**ES SERIES**

Notes: (1) Washers may be required to increase space between shock on lower mount.

## GMC

Application	Year	Lift Ht.	ES1000 Front	ES1000 Rear	ES3000 Front	ES3000 Rear	ES9000 Front	ES9000 Rear	Notes:
<b>Suburban (3/4 Ton) - 4WD</b>									
K2500 (With cast lower control arms)	92-98	0"-2"	-	-	317501	324509	917501	924509	
-		4"	-	-	322501	327500	922501	927500	
With Pro Comp lift (K1044)		6"	-	-	322501	329500	922501	929500	
K2500 (With stamped steel lower control arms)	88-98	0"-2"	-	-	318501	324509	918501	924509	
-		4"	-	-	322501	327500	922501	927500	
With Pro Comp lift (K1109)		6"	-	-	324501	329500	924501	929500	
K-20 (With OE quad suspension)	88-91	0"-2"							
Inner Shock (Short)			119502	-	319502	-	919502	-	
Outer Shock (Long)			121500	-	321500	-	921500	-	1
Rear shock			-	122500	-	322500	-	922500	
K-20 (With OE quad suspension)		2.5"-4"							
Inner Shock (Short)			121502	-	321502	-	921502	-	
Outer Shock (Long)			122500	-	322500	-	922500	-	1
Rear shock			-	126500	-	326500	-	926500	
K-30 (With OE quad suspension)	73-87	0"-2"							
Inner Shock (Short)			119502	-	319502	-	919502	-	
Outer Shock (Long)			121500	-	321500	-	921500	-	1
Rear shock			-	122500	-	322500	-	922500	
K-30 (With OE quad suspension)		2.5"-4"							
Inner Shock (Short)			121502	-	321502	-	921502	-	
Outer Shock (Long)			122500	-	322500	-	922500	-	
Rear shock			-	126500	-	326500	-	926500	
K-30 (With OE quad suspension)		5"-7"							
Inner Shock (Short)			124502	-	324502	-	924502	-	
Outer Shock (Long)			125509	-	325509	-	925509	-	1
Rear shock			-	129500	-	329500	-	929500	
K-30 (With OE quad suspension)		8"-10"							
Inner Shock (Short)			129502	-	329502	-	929502	-	
Outer Shock (Long)			132000	-	332000	-	932000	-	1
Rear shock			-	132000	-	332000	-	932000	
K-30 (Exc. OE quad suspension)	69-87	0"-2"	119502	126500	319502	326500	919502	926500	
-		2.5"-4"	121502	132000	321502	332000	921502	932000	
-		5"-7"	124502	129500	324502	329500	924502	929500	
<b>Yukon XL (3/4 Ton) - 2WD</b>									
Yukon XL 2500	00-12	0"	-	-	-	-	915551	925543	
<b>Suburban (3/4 Ton) - 2WD</b>									
C-2500	92-99	0"	114515	124509	314515	324509	914515	924509	
C-2500	69-91	0"-2"	115509	122500	315509	322500	915509	922500	
C-2500	63-72	0"	115509	121500	315509	321500	915509	921500	
<b>Yukon (1/2 Ton) - 4WD</b>									
GMT900	07-14	0"	-	-	-	-	618253	924543	
-		1.5"	-	-	-	-	618253	924543	
-		2"	-	-	-	-	618253	924543	
-		6"	-	-	-	-	618253	927543	
<b>Yukon (1/2 Ton) - 4WD</b>									
All (except w/autoride system)	00-06	0"	-	-	315580	325543	915580	925543	
		2"	-	-	317580	325543	917580	925543	
		6"	-	-	320590	327543	920590	927543	
K1500	92-99	0"-2"	-	-	318501	324509	918501	924509	
-		4"	-	-	322501	327500	922501	927500	
-		6"	-	-	324501	329500	924501	929500	

Notes: (1) Washers may be required to increase space between shock on lower mount.

## GMC

Application	Year	Lift Ht.	ES1000 Front	ES1000 Rear	ES3000 Front	ES3000 Rear	ES9000 Front	ES9000 Rear	Notes:
<b>Yukon (1/2 Ton) - 2WD</b>									
GMT900	07-14	0"	-	-	-	-	618253	924543	
-		1.5"	-	-	-	-	618253	924543	
-		2"	-	-	-	-	618253	924543	
-		6"	-	-	-	-	618253	927543	
C1500	00-06	0"	-	-	315580	325543	915580	925543	
-		2"	-	-	317580	325543	917580	925543	
-		6"	-	-	320590	327543	920590	927543	
C1500	95-99	0"	114515	124509	314515	324509	914515	924509	
With Pro Comp lift (Spindle)		3"	-	-	-	-	914515	926500	
With Pro Comp lift (A-arm, Coil)		3"	-	-	-	-	916015	926500	
With cross member and spindles		5"	120515	127500	320515	327500	920515	927500	
<b>Van - Safari (Mini) - AWD / 2WD</b>									
Safari - AWD	90-04	0"	-	-	317501	322500	917501	922500	
Safari - 2WD	85-04	0"	115515	122500	315515	322500	915515	922500	
<b>Van (1/2 Ton) - 2WD</b>									
1500 Savana & G-10 (Incl. Sport Van)	96-02	0"	114515	122500	314515	322500	914515	922500	
G-10	70-95	0"	119509	122500	319509	322500	919509	922500	
G-10	64-69	0"	-	122500	325509	322500	925509	922500	
<b>Van (3/4 Ton) - 2WD</b>									
2500 Savana & G Model (Incl. Sport Van)	96-02	0"	114515	122500	314515	322500	914515	922500	
G-10	70-95	0"	115509	122500	315509	322500	915509	922500	
G-10	64-69	0"	-	122500	325509	322500	925509	922500	
<b>Van ( 1 Ton) - 2WD</b>									
G-30 (Incl. Chopped, Ext., Dually) (G39)	70-95	0"	115509	122500	315509	322500	915509	922500	

## Honda

Application	Year	Lift Ht.	ES1000 Front	ES1000 Rear	ES3000 Front	ES3000 Rear	ES9000 Front	ES9000 Rear	Notes:
<b>Passport - 2WD/ 4WD</b>									
Passport	96-97	0"	115510	121510	315510	321510	915510	921510	

## Hummer

Application	Year	Lift Ht.	ES1000 Front	ES1000 Rear	ES3000 Front	ES3000 Rear	ES9000 Front	ES9000 Rear	Notes:
<b>H2 - 4WD</b>									
H2	03-10	0"	-	-	-	-	915551	927543	
<b>H3 - 4WD</b>									
H3	05-10	0"	-	-	315580	324503	915580	924503	

Notes: (1) Washers may be required to increase space between shock on lower mount.

## International Harvester

Application	Year	Lift Ht.	ES1000 Front	ES1000 Rear	ES3000 Front	ES3000 Rear	ES9000 Front	ES9000 Rear	Notes:
<b>Scout - 4WD</b>									
Scout II, Terra, Traveller	71-81	0"	119510	121500	319510	321500	919510	921500	
		2"-3"	121510	122500	321510	322500	921510	922500	
Scout 80, 800 A, B, C Series	61-71	0"-2"	118509	118510	318509	318510	918509	918510	
		3"-4"	121500	121510	321500	321510	921500	921510	

## Isuzu

Application	Year	Lift Ht.	ES1000 Front	ES1000 Rear	ES3000 Front	ES3000 Rear	ES9000 Front	ES9000 Rear	Notes:
<b>Amigo - 2WD/ 4WD</b>									
Amigo	89-95	0"	115510	122500	315510	322500	915510	922500	
<b>Hombre Pickup - 4WD</b>									
Hombre	96-04	0"	117500	124509	317500	324509	917500	924509	
<b>Hombre Pickup - 2WD</b>									
Hombre	96-04	0"-1"	113515	124509	313515	324509	913515	913515	
With Pro Comp lift (Spindle)		3"	114515	124509	314515	324509	914515	924509	
<b>Pickup - 4WD</b>									
Pickup	81-95	0"-1"	114515	122500	314515	322500	914515	922500	
<b>Pickup - 2WD</b>									
Pickup	81-95	0"-1"	113515	122500	313515	322500	913515	922500	
<b>Rodeo - 2WD/ 4WD</b>									
Rodeo	81-95	0"-1"	115510	121510	315510	321510	915510	921510	
<b>Trooper - 2WD/ 4WD</b>									
Trooper	92-00	0"-1"	115510	119500	315510	319500	915510	919500	
<b>Trooper II - 4WD</b>									
Trooper II	87-91	0"-1"	114515	122510	314515	322510	914515	922510	
Trooper II	84-86	0"-1"	113515	122500	313515	322500	913515	922500	
<b>Trooper II - 2WD</b>									
Trooper II	92-00	0"-1"	115510	119500	315510	319500	915510	919500	
<b>Vehicross - 4WD</b>									
Vehicross	99-00	0"-1"	115510	119500	315510	319500	915510	919500	

ES SERIES

Notes: (1) Washers may be required to increase space between shock on lower mount.



## Jeep

Application	Year	Lift Ht.	ES1000 Front	ES1000 Rear	ES3000 Front	ES3000 Rear	ES9000 Front	ES9000 Rear	Notes:
<b>Cherokee XJ - 2WD/ 4WD</b>									
Cherokee XJ (Mid Size)	84-01	0"-2"	121515	119500	321515	319500	921515	919500	
With Pro Comp lift (Poly Lift)		1.75"	121515	119500	321515	319500	921515	919500	
		3"	124515	122500	324515	322500	924515	922500	
<b>CJ Series - 4WD</b>									
CJ5/ CJ6/ CJ7	82-86	0"-1.5"	121500	121500	321500	321500	921500	921500	
		2.5"-3"	122500	121500	322500	321500	922500	921500	
CJ5/ CJ6/ CJ7	76-86	4"	124509	124509	324509	324509	924509	924509	
CJ5/ CJ6/ CJ7	76-81	0"-1.5"	118509	121500	318509	321500	918509	921500	
		2.5"-3"	119500	122500	319500	322500	919500	922500	
CJ5/ CJ6	53-75	0"	118509	118509	318509	318509	918509	918509	
		2"-3"	121500	121500	321500	321500	921500	921500	
CJ2A/ CJ3A/ CJ3B	41-63	0"	115509	118509	315509	318509	915509	918509	
		2"-3"	118509	121500	318509	321500	918509	921500	
<b>Dispatcher DJ - 2WD</b>									
DJ5/ DJ6	63-75	0"	118509	118509	318509	318509	918509	918509	
DJ3A	49-65	0"	118509	118509	318509	318509	915509	918509	
<b>U.S. Postal Vehicle - 2WD</b>									
AM General FJ8A	61-75	0"-1"	118509	118509	318509	318509	918509	918509	
		2"-3"	121500	121500	321500	321500	921500	921500	
<b>Grand Cherokee WK/ WJ / ZJ - 2WD/ 4WD</b>									
Grand Cherokee WK	05-07	0"	-	-	-	-	-	924504	
Grand Cherokee WJ	99-04	0"	121515	122508	321515	322508	921515	922508	
Grand Cherokee ZJ	92-98	0"-2"	121515	122509	321515	322509	921515	922509	
With Pro Comp lift (Poly Lift)		1.75"	121515	122509	321515	322509	921515	922509	
		3"	124515	124509	324515	324509	924515	924509	
<b>Grand Wagoneer - 2WD/ 4WD</b>									
Grand Wagoneer	84-91	0"	121500	121500	321500	321500	921500	921500	
		2.5"	122500	122500	322500	322500	922500	922500	
<b>Jeepster/ Commando/ Utility Wagon 4WD</b>									
Jeepster/ Commando/C101	69-73	0"	118509	121500	318509	321500	918509	921500	
		2"-3"	121500	122500	321500	322500	921500	922500	
Utility Wagon	47-62	0"	115509	121500	315509	321500	915509	921500	
		1.5"-3"	118509	124509	318509	324509	918509	924509	
<b>Liberty KJ - 4WD</b>									
Liberty KJ	01-04	0"	-	-	-	322504	-	922504	
<b>M-Series Military Jeep - 4WD</b>									
M38A1	53-75	0"	118509	118509	318509	318509	918509	918509	
		2"-3"	121500	121500	321500	321500	921500	921500	
MB/ MB38	41-63	0"	115509	118509	315509	318509	915509	918509	
		2"-3"	118509	121500	318509	321500	918509	921500	
<b>Pickup J Series - 2WD/ 4WD</b>									
Comanche MJ	86-92	0"-2"	121515	122500	321515	322500	921515	922500	
Pioneer J10/ J20	74-86	0"	121500	121500	321500	321500	921500	921500	
		2"-3"	122500	122500	322500	322500	922500	922500	
Gladiator (Exc. Torsion Bar Front)	63-73	0"	121500	121500	321500	321500	921500	921500	
		2"-3"	124509	124509	324509	324509	924509	924509	
Utility Truck	47-62	0"	115509	121500	315509	321500	915509	921500	
		1.5"-3"	118509	124509	318509	324509	918509	924509	

**ES SERIES**

Notes: (1) Washers may be required to increase space between shock on lower mount.

## Jeep

Application	Year	Lift Ht.	ES1000 Front	ES1000 Rear	ES3000 Front	ES3000 Rear	ES9000 Front	ES9000 Rear	Notes:
<b>Wagoneer SJ/ XJ - 4WD</b>									
Wagoneer XJ (101" WB)(Exc. Grand Wagoneer)	84-90	0"	121515	119500	321515	319500	921515	919500	
Wagoneer SJ (Full Size)	76-91	0"	121500	121500	321500	321500	921500	921500	
		2"-3"	122500	122500	322500	322500	922500	922500	
Wagoneer SJ (Full Size)	1975	0"	121500	115509	321500	315509	921500	915509	
		2"-3"	122500	118509	322500	318509	922500	918509	
Wagoneer SJ (Full Size)	1974	0"	121500	118509	321500	318509	921500	918509	
		2"-3"	122500	121500	322500	321500	922500	921500	
Wagoneer SJ (Full Size)	63-73	0"	121500	121500	321500	321500	921500	921500	
		2"-3"	124509	122500	324509	322500	924509	922500	
<b>Wrangler JK Series - 4WD</b>									
Wrangler JK (4 Door)	07-16	0"	-	-	-	-	922510	923500	
-		1.75"	-	-	-	-	923510	923500	
-		2.5"	-	-	-	-	924510	924507	
-		4"	-	-	-	-	926511	926501	
-		6"	-	-	-	-	929511	929504	
Wrangler JK (2 Door)	07-16	0"	-	-	-	-	922510	923500	
-		1.75"	-	-	-	-	923510	923500	
-		2.5"	-	-	-	-	924510	924507	
-		4"	-	-	-	-	926511	924507	
-		6"	-	-	-	-	929511	929504	
Wrangler JK (2 Door)(Incl. Rubicon)	07-16	0"	-	-	-	-	922510	923500	
-		1.75"	-	-	-	-	924510	923500	
-		4"	-	-	-	-	926511	926501	
-		4"	-	-	-	-	926511	926501	
<b>Wrangler JK Series - 2WD</b>									
Wrangler JK (4 Door)	07-16	0"	-	-	-	-	922510	923500	
-		1.75"	-	-	-	-	924510	923500	
-		4"	-	-	-	-	926511	924507	
<b>Wrangler LJ Series - 4WD</b>									
Wrangler LJ (Unlimited)(Incl. Rubicon)	03-06	0"	121515	119500	321515	319500	921515	919500	
-		1"-2"	121515	121500	321515	321500	921515	921500	
-		4"	-	-	324515	324509	924515	924509	
<b>Wrangler TJ Series - 4WD</b>									
Wrangler TJ (Incl. Rubicon)	97-06	0"	121515	119500	321515	319500	921515	919500	
-		1"-2"	121515	121500	321515	321500	921515	921500	
-		4"	-	-	324515	323509	924515	923500	
<b>Wrangler YJ Series - 4WD</b>									
Wrangler YJ	86-96	0"-1.5"	124510	121500	324510	321500	924510	921500	
-		2"-3"	126510	122500	326510	322500	926510	922500	
-		4"	129510	124509	329510	324509	929510	924509	
With Pro Comp lift (CSC Kit 55099/ 55199)		5"	-	-	-	-	926500	923500	

ES SERIES

## Lada

Application	Year	Lift Ht.	ES1000 Front	ES1000 Rear	ES3000 Front	ES3000 Rear	ES9000 Front	ES9000 Rear	Notes:
<b>Niva - 4WD</b>									
Niva	79-89	0"	113518	121506	313518	321506	913518	921506	

Notes: (1) Washers may be required to increase space between shock on lower mount.

## Land Rover

Application	Year	Lift Ht.	ES1000 Front	ES1000 Rear	ES3000 Front	ES3000 Rear	ES9000 Front	ES9000 Rear	Notes:
<b>Defender/ Series I, II, III</b>									
Land Rover/ Defender (90", 110", 121", 130" WB)	83-98	0"-1"	121560	121573	321560t	321573	921560	921573	
109" WB / Incl. 1 ton	59-84	0"-1"	118509	121523	318509	321523	918509	921523	
Series II/ III	59-84	0"-1"	118509	-	318509	-	918509	-	
Series I/ II/ III (88" WB)	56-83	0"-1"	118509	121506	318509	321506	918509	921506	
<b>Discovery</b>									
Series I	89-00	0"-1"	121560	121573	321560	321573	921560	921573	
<b>Range Rover Classic</b>									
Range Rover (W/O Air suspension) (100" WB)	70-94	0"-1"	121560	121573	321560	321573	921560	921573	

## Lexus

Application	Year	Lift Ht.	ES1000 Front	ES1000 Rear	ES3000 Front	ES3000 Rear	ES9000 Front	ES9000 Rear	Notes:
<b>LX450</b>									
LX450	96-97	0"	124530	124514	324530	324514	924530	924514	

## Mazda

Application	Year	Lift Ht.	ES1000 Front	ES1000 Rear	ES3000 Front	ES3000 Rear	ES9000 Front	ES9000 Rear	Notes:
<b>Navajo - 2WD/ 4WD</b>									
Navajo	91-94	0"-1.5"	115510	124509	315510	324509	915510	924509	
		2.5"	117510	124509	317510	324509	917510	924509	
<b>Pickup B-Series/ Bravo/ Bounty/ Drifter/ Fighter/ Proceed - 4WD</b>									
B3000/ B4000	94-97	0"	114515	122508	314515	322508	914515	924500	
		2.5"	117510	126500	317510	326500	917510	926500	
B2600	87-93	0"-1"	114510	125506	314510	325504	914510	925506	
<b>Pickup B-Series/ Bravo/ Bounty/ Drifter/ Fighter/ Proceed - 2WD</b>									
B2000/ B2200/ B2600	94-97	0"-1"	115510	122500	315510	322500	915510	922500	
		5"	121510	126500	321510	326500	921510	926500	
B2000/ B2200/ B2600	86-93	0"-1"	114515	120500	314515	320500	914515	920500	
B2000/ B2200	82-84	0"-1"	113515	121530	313515	321530	913515	921530	

## Mercury

Application	Year	Lift Ht.	ES1000 Front	ES1000 Rear	ES3000 Front	ES3000 Rear	ES9000 Front	ES9000 Rear	Notes:
<b>Mountaineer - 2WD/ 4WD</b>									
Mountaineer (W/O Rear Air Ride)	96-01	0"	118595	124509	318595	324509	918595	924509	

Notes: (1) Washers may be required to increase space between shock on lower mount.

## Mitsubishi

Application	Year	Lift Ht.	ES1000 Front	ES1000 Rear	ES3000 Front	ES3000 Rear	ES9000 Front	ES9000 Rear	Notes:
<b>Montero / Pajero / Raider- 2WD/ 4WD</b>									
All (Exc. Electronic Susp.)	92-00	0"-1"	114515	118510	314515	318510	914515	918510	
All (6 cyl)	89-91	0"-1"	114515	119500	314515	319500	914515	919500	
All (4 cyl)	89-91	0"-1"	114515	122500	314515	322500	914515	922500	
<b>Montero Sport / Pajero - 2WD/ 4WD</b>									
Montero Sport	97-99	0"-1"	-	-	313515	323500	913515	923500	
<b>Pickup - 4WD</b>									
Pickup	83-96	0"-2"	113515	122500	313515	322500	913515	922500	
<b>Pickup - 2WD</b>									
Pickup	83-96	0"-1"	113515	121500	313515	321500	913515	921500	

## Nissan

Application	Year	Lift Ht.	ES1000 Front	ES1000 Rear	ES3000 Front	ES3000 Rear	ES9000 Front	ES9000 Rear	Notes:
<b>Armada - 2WD/ 4WD</b>									
Armada	04-09	0"-1"	-	-	-	319543	-	919543	
-		2"-3"	-	-	-	319543	-	919543	
Shock behind rear axle (short)		6"	-	-	-	318509	-	918509	
Shock ahead of rear axle (long)		6"	-	-	-	324543	-	924543	
<b>Frontier - 2WD/ 4WD</b>									
Frontier (Exc. Nismo)	05-11	0"	-	-	-	-	-	921508	
-		3"	-	-	-	-	-	921508	
Frontier	98-03	0"	113515	120500	313515	320500	913515	920509	
<b>Pathfinder/ Terrano - 2WD/ 4WD</b>									
Pathfinder	87-95	0"-1.5"	114518	122509	314518	322509	914518	922500	
<b>Pickup Hardbody / Patrol - 4WD</b>									
Pickup	86-97	0"-2.5"	113518	121500	313518	321500	913518	921500	
Pickup	83-86	0"-1.5"	113518	121500	313518	321500	913518	921500	
Pickup	1982	0"-1.5"	113518	120500	313518	320500	913518	920500	
Pickup	80-81	0"-1.5"	113518	118520	313518	318520	913518	918520	
<b>Pickup Hardbody / Patrol - 2WD</b>									
Pickup	86-97	0"-2.5"	113518	121500	313518	321500	913518	921500	
Pickup	68-86	0"-1.5"	113518	118520	313518	318520	913518	918520	
<b>Titan Pickup - 4WD</b>									
Titan	04-15	0"-1"	-	-	-	325543	-	925543	
-		6"	-	-	-	327503	-	927503	
<b>Titan Pickup - 2WD</b>									
Titan	04-15	0"-1"	-	-	-	324543	-	924543	
-		6"	-	-	-	327503	-	927503	
<b>Xterra - 2WD/ 4WD</b>									
Xterra	00-05	0"-1"	113515	122509	313515	322509	913515	922509	

Notes: (1) Washers may be required to increase space between shock on lower mount.

## Opel

Application	Year	Lift Ht.	ES1000 Front	ES1000 Rear	ES3000 Front	ES3000 Rear	ES9000 Front	ES9000 Rear	Notes:
Montery - 2WD/ 4WD									
Montery	92-97	0"-1"	115510	-	315510	-	915510	-	

## Plymouth

Application	Year	Lift Ht.	ES1000 Front	ES1000 Rear	ES3000 Front	ES3000 Rear	ES9000 Front	ES9000 Rear	Notes:
Arrow Pickup - 2WD									
Arrow	79-82	0"-2"	113515	120500	313515	320500	913515	920500	
Trailduster - 4WD									
Trailduster	76-93	0"-2"	121506	132003	321506	332003	921506	932003	
		2.5"-4"	-	132003	325506	332003	925506	932003	
Trailduster	74-75	0"-2"	121506	124503	321506	324503	921506	924503	
Trailduster - 2WD									
Trailduster	75-93	0"-2"	115517	124509	315517	324509	915517	924509	
Van (1/2 Ton) - 2WD									
PB100, PB150	70-83	0"	114517	121500	314517	321500	914517	921500	
Van (3/4 Ton) - 2WD									
PB200, PB250	70-83	0"	114517	121500	314517	321500	914517	921500	
Van (1 Ton) - 2WD									
PB300, PB350 (Exc. 9000 GVW or 4000 lbs. Front Axle)	70-83	0"	114517	121500	314517	321500	914517	921500	

ES SERIES

## Suzuki

Application	Year	Lift Ht.	ES1000 Front	ES1000 Rear	ES3000 Front	ES3000 Rear	ES9000 Front	ES9000 Rear	Notes:
Samurai / Jimny - 4WD									
Samurai	86-95	0" - 1"	115510	118509	315510	318509	915510	918509	
LJ10, SJ10	78-88	0" - 1"	118510	118509	318510	318509	918510	918509	
LJ413	85-87	0" - 1"	119510	121500	319510	321500	919510	921500	
LJ413	82-85	0" - 1"	115510	118509	315510	318509	915510	918509	
Sidekick/ Vitara/ Sport/ Escudo - 4WD									
Sidekick	88-99	0"-1"	-	120510	-	320510	-	920510	
X-90/ SUV Cabrio - 2WD/ 4WD									
X-90	96-99	0"-2"	-	120510	-	320510	-	920510	

Notes: (1) Washers may be required to increase space between shock on lower mount.

## Toyota

Application	Year	Lift Ht.	ES1000 Front	ES1000 Rear	ES3000 Front	ES3000 Rear	ES9000 Front	ES9000 Rear	Notes:
<b>4Runner - 2WD/ 4WD</b>									
4Runner	03-15	0"	-	-	622053	321513	622053	921513	
-		2.25"	-	-	622053	321513	622053	921513	
-		2.5"	-	-	622053	321513	622053	921513	
4Runner	96-02	0"-1"	-	-	618053	321513	618053	921513	
-		2.5"	-	-	618053	321513	618053	921513	
-		2.5"	-	-	618053	321513	618053	921513	
4Runner	90-95	0"-1"	114014	121513	314014	321513	914014	921513	
<b>With Pro Comp lift (57089/ 57289)</b>		4"	118514	126513	318514	326513	918514	926513	
4Runner	86-89	0"-1"	114014	121506	314014	321506	914014	921506	
<b>With Pro Comp lift (57089/ 57289)</b>		4"	118514	126506	318514	326506	918514	926506	
<b>FJ Cruiser - 4WD</b>									
FJ Cruiser	07-14	0"	-	-	622053	322553	622053	922553	
-		2"-3"	-	-	-	-	622053	923553	
-		5.5"	-	-	-	-	622053	924750	
<b>Landcruiser - 4WD</b>									
J80 (Coil Spring Front)	90-99	0"	124530	124514	324530	324514	924530	924514	
J60/ 61/ 62 (Station Wagon)	88-90	0"	121513	122500	321513	322500	921513	922500	
J40/ 41/ 42/ J45	60-84	0"	118509	121500	318509	321500	918509	921500	
-		2"-3"	121500	124509	321500	324509	921500	924509	
J43/ 44/ 45/ 46/ 47	64-81	0"	118509	122500	318509	322500	918509	922500	
-		2"-3"	121500	124509	321500	324509	921500	924509	
<b>Pickup/ Hilux - 4WD</b>									
Pickup (IFS Front)	86-95	0"-1"	114014	121506	314014	321506	914014	921506	
-		2"-3"	117514	122506	317514	322506	917514	922506	
<b>With Pro Comp lift (57089/ 57289)</b>		4"	118514	126506	318514	326506	918514	926506	
Pickup (Leaf Spring Front)	79-85	0"-2"	118518	122506	318518	322506	918518	922506	
-		2.5"-3"	121518	124506	321518	324506	921518	924506	
-		4"	121518	125506	321518	325506	921518	925506	
<b>Pickup/ Hilux - 2WD</b>									
Pickup	84-95	0"-1"	114515	120500	314515	320500	914515	920500	
-		3"-4"	117515	121500	317515	321500	917515	921500	
Pickup	70-83	0"-2"	113515	120500	313515	320500	913515	920500	
<b>Sequoia - 2WD/ 4WD</b>									
Sequoia	08-09	0"	-	-	623553	-	623553	-	
<b>With Pro Comp lift (Level Lift)</b>		2"	-	-	623553	-	623553	-	
<b>T100 Pickup - 4WD</b>									
T100	93-98	0"	114514	124509	314514	324509	914514	924509	
<b>With Pro Comp lift (57094)</b>		4"	118514	126506	318514	326500	918514	926500	
<b>T100 Pickup - 2WD</b>									
T100 (Exc. 1 Ton)	93-98	0"	114515	121500	314515	321500	914515	921500	
<b>Tacoma Pickup - 4WD / PreRunner 2WD</b>									
Tacoma	05-15	0"	-	-	622053	322518	622053	922518	
-		2.25"	-	-	622053	322518	622053	922518	
-		3"	-	-	-	-	622053	925518	
-		6"	-	-	-	-	622053	927710	
Tacoma	95-04	0"-1"	-	-	618053	320506	618053	920506	
-		2.5"	-	-	618053	320506	618053	920506	
-		4"	-	-	618053	326506	618053	926506	
<b>Tacoma Pickup - 2WD</b>									
Tacoma	05-15	0"	-	-	-	320510	-	920510	
Tacoma	95-04	0"-1"	114515	119500	314515	319500	914515	919500	
<b>Tundra Pickup - 2WD/ 4WD</b>									
Tundra	07-15	0"	-	-	623553	322518	623553	922518	
-		2.4"	-	-	623553	322518	623553	922518	
-		6"	-	-	-	-	623553	929511	
Tundra	99-06	0"-1"	-	-	-	-	-	922518	
-		6"	-	-	-	-	-	929511	

Notes: (1) Washers may be required to increase space between shock on lower mount.

## Chevrolet/ GMC — 2WD

Application	Year	Lowered Height: Front	Lowered Height: Rear	Lowering Method: Front	Lowering Method: Rear	ES4000 Front	ES4000 Rear	Notes:
<b>Avalanche - (1/2 Ton) - 2WD</b>								
GMT900	07-13	0"	0"-1"	-	3	-	424506	
		-	2"-4"	-	12	-	422543	
		-	5"-7"	-	12	-	420543	
Avalanche 1500	02-06	0"-2"	0"-1"	2	-	414515	424506	
		2"-5"	2"-4"	9	3,4	414515	422543	
		2"-5"	-	9	-	414515	-	
Rear Shock - Drivers' Side		-	5"-7"	-	4	-	419543	
Rear Shock - Passengers' Side		-	5"-7"	-	4	-	420543	
<b>Blazer / Jimmy (Light Duty) - 2WD</b>								
Blazer / Jimmy	82-97	0"-2"	0"-3"	1	5	413515	422500	
		2"-4"	3"-5"	2	8	413515	420500	
		4"-5"	6"-8"	1,2	6	411015	419500	
<b>Blazer / Jimmy (1/2 Ton) - 2WD</b>								
Blazer / Jimmy 1500	92-97	0"	2"	-	3	414515	426500	
		2"-4"	2"-4"	1,2	3,4	413515	424509	
		4"	-	2,11	-	411015	-	
Rear Shock - Drivers' Side		-	5"-8"	-	6	-	420500	
Rear Shock - Passengers' Side		-	5"-8"	-	6	-	422500	
Blazer / Jimmy 1500	73-91	0"-3"	0"-2"	1	4	414509	422500	
		0"-3"	3"-6"	2	4	413509	415509	
		4"-6"	3"-6"	1,2,11	6	413509	415509	
Blazer / Jimmy 1500	63-72	0"-3"	2"-5"	2	2	413509	415509	
<b>Blazer / Jimmy (3/4 Ton) - 2WD</b>								
Blazer / Jimmy 2500	73-91	0"-3"	0"-2"	1	4	414509	422500	
		0"-3"	3"-6"	2	4	413509	415509	
		4"-6"	3"-6"	1,2,11	6	413509	415509	
Blazer / Jimmy 2500	63-72	0"-3"	2"-5"	2	2	413509	415509	
<b>Colorado / Canyon - (Light Duty) - 2WD</b>								
Colorado / Canyon	04-09	-	0"-3"	-	5	-	420500	
		-	3"-5"	-	8	-	415509	
<b>S-10 / S-15 Pickup (Light Duty) - 2WD</b>								
S-10 / S15 Pickup	82-03	0"-2"	0"-3"	1	5	413515	422500	
		2"-4"	3"-5"	2	8	413515	420500	
		4"-5"	6"-8"	1,2	6	411015	419500	
<b>Silverado/ Sierra Pickup (1/2 Ton) - 2WD</b>								
C1500HD	99-07	3"	-	11	-	414515	-	
Rear Shock - Drivers Side		-	4"-6"	-	4	-	422543	
Rear Shock - Passengers' Side		-	4"-6"	-	4	-	424506	
		6"	-	11	-	414515	-	
Rear Shock - Drivers Side		-	4"-6"	-	6,14	-	415543	
Rear Shock - Passengers' Side		-	4"-6"	-	6,14	-	415543	
GMT900	07-15	0"	0"-1"	-	3	-	424506	
		-	2"-4"	-	12	-	422543	
		-	5"-7"	-	12	-	420543	
C1500	99-07	0"-2"	0"-1"	2	-	414515	424506	
		2"-3"	2"-4"	9	3,4	414515	422543	
		2"-3"	-	9	-	414515	-	
Rear Shock - Drivers Side		-	5"-7"	-	4	-	419543	
Rear Shock - Passengers' Side		-	5"-7"	-	4	-	420543	
		4"-5"	-	11	-	413515	-	
Rear Shock - Drivers Side		-	6"-7"	-	6	-	415500	
Rear Shock - Passengers' Side		-	6"-7"	-	6	-	419500	
C1500 (Inc. SS454)	88-98	0"	2"	-	3	414515	426500	
		2"-4"	2"-4"	1,2	3,4	413515	424509	

TOXIC

Lowering Method:	#4 - Shackle & Hanger	#7 - I-Beam Arm	#10 - Ball Joint	#13 - Shock Mount Relocation Kit
#1 - Spindle	#5 - Block	#8 - Leaf Spring	#11 - Control Arm	#14 - Trans X Member Drop
#2 - Coil Spring	#6 - Axle Flip Kit	#9 - Torsion Key	#12 - Hardware/ Bracket Kit	
#3 - Shackle				

## Chevrolet/ GMC — 2WD

Application	Year	Lowered Height: Front	Lowered Height: Rear	Lowering Method: Front	Lowering Method: Rear	ES4000 Front	ES4000 Rear	Notes:
		4"	-	2,11	-	411015	-	
Rear Shock - Drivers' Side		-	5"-8"	-	6	-	420500	
Rear Shock - Passengers' Side		-	5"-8"	-	6	-	422500	
C-10	73-87	0"-3"	0"-2"	1	4	414509	422500	
		0"-3"	3"-6"	2	4	413509	415509	
		4"-6"	3"-6"	1,2,11	6	413509	415509	
C-10	63-72	0"-3"	2"-5"	2	2	413509	415509	
<b>Silverado / Sierra Pickup (3/4 Ton) - 2WD</b>								
C2500HD	99-10	3"	-	11	-	414515	-	
Rear Shock - Drivers' Side		-	4"-6"	-	4	-	422543	
Rear Shock - Passengers' Side		-	4"-6"	-	4	-	424506	
		6"	-	11	-	414515	-	
Rear Shock - Drivers' Side		-	4"-6"	-	6,14	-	415543	
Rear Shock - Passengers' Side		-	4"-6"	-	6,14	-	415543	
C2500	92-98	0"	2"	-	3	414515	426500	
		2"-4"	2"-4"	1,2	3,4	413515	424509	
		4"	-	2,11	-	411015	-	
Rear Shock - Drivers' Side		-	5"-8"	-	6	-	420500	
Rear Shock - Passengers' Side		-	5"-8"	-	6	-	422500	
C-20	73-87	0"-3"	0"-2"	1	4	414509	422500	
		0"-3"	3"-6"	2	4	413509	415509	
		4"-6"	3"-6"	1,2,11	6	413509	415509	
<b>Silverado / Sierra Pickup (1 Ton) - 2WD</b>								
C3500HD	99-10	3"	-	11	-	414515	-	
Rear Shock - Drivers' Side		-	4"-6"	-	4	-	422543	
Rear Shock - Passengers' Side		-	4"-6"	-	4	-	424506	
		6"	-	11	-	414515	-	
Rear Shock - Drivers' Side		-	4"-6"	-	6,14	-	415543	
Rear Shock - Passengers' Side		-	4"-6"	-	6,14	-	415543	
C3500	92-98	0"	2"	-	3	414515	426500	
		2"-4"	2"-4"	1,2	3,4	413515	424509	
		4"	-	2,11	-	411015	-	
Rear Shock - Drivers' Side		-	5"-8"	-	6	-	420500	
Rear Shock - Passengers' Side		-	5"-8"	-	6	-	422500	
C-30	73-87	0"-3"	0"-2"	1	4	414509	422500	
		0"-3"	3"-6"	2	4	413509	415509	
		4"-6"	3"-6"	1,2,11	6	413509	415509	
<b>Suburban (1/2 - 3/4 Ton) - 2WD</b>								
GMT900	07-14	0"	0"-1"	-	3	-	424506	
		-	2"-4"	-	12	-	422543	
		-	5"-7"	-	12	-	420543	
Suburban 1500	00-06	0"-2"	0"-1"	2	-	414515	424543	
		2"-5"	2"-4"	9	3,4	414515	422543	
		2"-5"	-	9	-	414515	-	
Rear Shock - Drivers' Side		-	5"-7"	-	4	-	419543	
Rear Shock - Passengers' Side		-	5"-7"	-	4	-	420543	
Suburban 1500	88-98	0"	2"	-	3	414515	426500	
		2"-4"	2"-4"	1,2	3,4	413515	424509	
		4"	-	2,11	-	411015	-	
Rear Shock - Drivers' Side		-	5"-8"	-	6	-	420500	
Rear Shock - Passengers' Side		-	5"-8"	-	6	-	422500	
Suburban 1500	73-91	0"-3"	0"-2"	1	4	414509	422500	
		0"-3"	3"-6"	2	4	413509	415509	
		4"-6"	3"-6"	1,2,11	6	413509	415509	

TOXIC

**Lowering Method:**

- |                  |                       |                  |                             |                                  |
|------------------|-----------------------|------------------|-----------------------------|----------------------------------|
| #1 - Spindle     | #4 - Shackle & Hanger | #7 - I-Beam Arm  | #10 - Ball Joint            | #13 - Shock Mount Relocation Kit |
| #2 - Coil Spring | #5 - Block            | #8 - Leaf Spring | #11 - Control Arm           | #14 - Trans X Member Drop        |
| #3 - Shackle     | #6 - Axle Flip Kit    | #9 - Torsion Key | #12 - Hardware/ Bracket Kit |                                  |



## Chevrolet/ GMC — 2WD

Application	Year	Lowered Height: Front	Lowered Height: Rear	Lowering Method: Front	Lowering Method: Rear	ES4000 Front	ES4000 Rear	Notes:
<b>Trailblazer / Envoy (Light Duty) - 2WD</b>								
Trailblazer / Envoy	01-09	2"	4"	-	2,12	-	415509	
<b>Tahoe / Yukon (1/2 Ton) - 2WD</b>								
GMT900	07-14	0"	0"-1"	-	3	-	424506	
		-	2"-4"	-	12	-	422543	
		-	5"-7"	-	12	-	420543	
Tahoe / Yukon 1500	00-06	0"-2"	0"-1"	2	-	414515	424506	
		2"-5"	2"-4"	9	3,4	414515	422543	
		2"-5"	-	9	-	414515	-	
Rear Shock - Drivers' Side		-	5"-7"	-	4	-	419543	
Rear Shock - Passengers' Side		-	5"-7"	-	4	-	420543	
Tahoe / Yukon 1500	88-98	0"	2"	-	3	414515	426509	
		2"-4"	2"-4"	1,2	3,4	413515	424500	
		4"	-	2,11	-	411015	-	
Rear Shock - Drivers' Side		-	5"-8"	-	6	-	420500	
Rear Shock - Passengers' Side		-	5"-8"	-	6	-	422500	
<b>Van - Astro / Safari (Mini) - 2WD</b>								
Astro / Safari	82-00	0"-2"	0"-2"	1	3,4	414515	420500	
		2"	3"	1	6	431515	419500	

## Dodge — 2WD

Application	Year	Lowered Height: Front	Lowered Height: Rear	Lowering Method: Front	Lowering Method: Rear	ES4000 Front	ES4000 Rear	Notes:
<b>Dakota Pickup - 2WD</b>								
Dakota (Incl. RT)	97-04	0"	0"-1"	-	-	414515	424509	
		1"-3"	2"-3"	2	12	411515	422500	
Dakota	87-96	0"-2"	0"-1"	1	3	413515	422500	
		2"-4"	2"-4"	1	5	411515	420500	
<b>Durango - 2WD</b>								
Durango	98-03	0"	0"-1"	-	-	414515	424509	
		1"-3"	2"-3"	2	12	411515	422500	
<b>Ram 1500 Pickup (1/2 Ton) - 2WD</b>								
Ram 1500	06-08	0"	0"-2"	2	-	414515	425543	
		1"-3"	3"-5"	2	6	413515	422543	
Ram 1500	02-05	0"	0"-2"	2	-	414515	425543	
		1"-3"	-	2	-	413515	-	
Rear Shock - Drivers' Side		-	3"-5"	-	6	-	422543	
Rear Shock - Passengers' Side		-	3"-5"	-	6	-	424506	
Ram 1500	94-01	0"-3"	0"-1"	1	-	414515	425543	
		3"-5"	2"-4"	2	4	413515	422543	
		-	6"	-	6,14	-	419543	
<b>Ram 2500/ 3500 Pickup (3/4 - 1 Ton) - 2WD</b>								
Ram 2500 / 3500	94-02	0"	0"-1"	-	-	413515	425543	
		1"-3"	2"-4"	2	4	413515	422543	

Lowering Method:	#4 - Shackle & Hanger	#7 - I-Beam Arm	#10 - Ball Joint	#13 - Shock Mount Relocation Kit
#1 - Spindle	#5 - Block	#8 - Leaf Spring	#11 - Control Arm	#14 - Trans X Member Drop
#2 - Coil Spring	#6 - Axle Flip Kit	#9 - Torsion Key	#12 - Hardware/ Bracket Kit	
#3 - Shackle				

TOXIC

## Ford — 2WD

Application	Year	Lowered Height: Front	Lowered Height: Rear	Lowering Method: Front	Lowering Method: Rear	ES4000 Front	ES4000 Rear	Notes:
<b>F-150 Pickup (1/2 Ton) - 2WD</b>								
F-150	09-14	-	0"-1"	-	-	-	424509	
		-	2"-3"	-	3	-	423500	
		-	4"-5"	-	3,4	-	422500	
F-150	04-08	-	0"-1"	-	-	-	424509	
		-	2"-3"	-	3	-	423500	
		-	4"-5"	-	3,4	-	422500	
F-150 / F-250 (Light Duty)	97-03	0"	0"-1"	-	-	414510	424510	
		2"	2"-4"	2	4	414510	421510	
		3"-5"	6"	2,11	6	413510	419510	
F-100 / F-150 (Incl. Lightning)	80-96	0"-2"	2"-4"	2	3	414515	422500	
		3"	4"-5"	7	6	414515	419500	
<b>F250 / F350 Pickup (3/4 - 1 Ton) - 2WD</b>								
F-250 / F-350	08-09	3"	5"	7	12	414515	422500	
F-250 / F-350	99-07	0"	1"	-	3	414515	422500	
		3"	3"-5"	7	6	414515	421500	
F-250 / F-350	87-97	0"-2"	0"-2"	2	3	414515	422500	
		3"	4"	7	4	414515	421500	
		3"-5"	5"-7"	2,7	6	411015	415509	
<b>Excursion - 2WD</b>								
Excursion	99-05	3"	5"	7	4	414515	421500	
<b>Expedition - 2WD</b>								
Expedition	97-03	0"	0"-1"	-	-	414510	424510	
		2"	2"-4"	2	4	414510	421510	
		3"-5"	6"	2,11	6	413510	419510	
<b>Ranger (Excluding EDGE) - 2WD</b>								
Ranger	98-03	2"	-	2	-	413515	-	
Rear Shock - Drivers' Side		-	3"	-	6	-	419500	
Rear Shock - Passengers' Side		-	3"	-	6	-	421500	
		4"	-	2,11	-	411515	-	
Rear Shock - Drivers' Side		-	5"	-	6	-	415509	
Rear Shock - Passengers' Side		-	5"	-	6	-	419500	
Ranger	83-97	0"-2"	0"-2"	2	3	414515	421500	
		3"	4"-5"	7	6	414515	419500	

TOXIC

## Isuzu — 2WD

Application	Year	Lowered Height: Front	Lowered Height: Rear	Lowering Method: Front	Lowering Method: Rear	ES4000 Front	ES4000 Rear	Notes:
<b>Hombre Pickup (Light Duty) - 2WD</b>								
Hombre	82-03	0"-2"	0"-3"	1	5	413515	422500	
		2"-4"	3"-5"	2	8	413515	420500	
		4"-5"	6"-8"	1,2	6	411015	419500	

### Lowering Method:

#1 - Spindle  
#2 - Coil Spring  
#3 - Shackle

#4 - Shackle & Hanger  
#5 - Block  
#6 - Axle Flip Kit

#7 - I-Beam Arm  
#8 - Leaf Spring  
#9 - Torsion Key

#10 - Ball Joint  
#11 - Control Arm  
#12 - Hardware/ Bracket Kit

#13 - Shock Mount Relocation Kit  
#14 - Trans X Member Drop

## Mazda — 2WD

Application	Year	Lowered Height: Front	Lowered Height: Rear	Lowering Method: Front	Lowering Method: Rear	ES4000 Front	ES4000 Rear	Notes:
Pickup B-Series - 2WD								
B2300/ 3000/ 4000	98-09	2"	-	2		413515	-	
Rear Shock - Drivers' Side		-	3"	-	6	-	419500	
Rear Shock - Passengers' Side		-	3"	-	6	-	421500	
		4"	-	2,11	-	413515	-	
Rear Shock - Drivers' Side		-	5"	-	6	-	415509	
Rear Shock - Passengers' Side		-	5"	-	6	-	419500	
B2300/ 3000/ 4000	83-97	0"-2"	0"-2"	2	3	414515	421500	
		3"	4"-5"	7	6	414515	419500	

## Mitsubishi — 2WD

Application	Year	Lowered Height: Front	Lowered Height: Rear	Lowering Method: Front	Lowering Method: Rear	ES4000 Front	ES4000 Rear	Notes:
Pickup Series - 2WD								
Pickup	83-97	2.5"	3"	2	5	414515	419500	

## Nissan — 2WD

Application	Year	Lowered Height: Front	Lowered Height: Rear	Lowering Method: Front	Lowering Method: Rear	ES4000 Front	ES4000 Rear	Notes:
Frontier - 2WD								
Frontier	98-03	-	3"	-	-		419500	
Pickup Series - 2WD								
Pickup	86.5-97	3"	3"-4"	1	5	413515	421500	
Pickup	68-86.5	2"	3"-4"	1	5	413515	415820	
Titan - 2WD								
Titan	04-09	-	0"-1"	-	-		424506	
		-	2"-4"	-	3	-	420543	

## Toyota — 2WD

Application	Year	Lowered Height: Front	Lowered Height: Rear	Lowering Method: Front	Lowering Method: Rear	ES4000 Front	ES4000 Rear	Notes:
Pickup Series - 2WD								
Pickup	84-95	2"-3"	3"-4"	1,11	5	413515	419500	
Tacoma - 2WD								
Tacoma PreRunner 6 Lug)	05-09	-	4"	-	12	-	419518	
Tacoma PreRunner 6 Lug)	96-04	-	3"-4"	-	5	-	415505	
Tacoma (5 Lug)	95-04	3"	3"-4"	11,12	5	411515	415500	
Tundra - 2WD								
Tundra	07-09	-	2"-5"	-	12	-	422518	

Lowering Method:	#4 - Shackle & Hanger	#7 - I-Beam Arm	#10 - Ball Joint	#13 - Shock Mount Relocation Kit
#1 - Spindle	#5 - Block	#8 - Leaf Spring	#11 - Control Arm	#14 - Trans X Member Drop
#2 - Coil Spring	#6 - Axle Flip Kit	#9 - Torsion Key	#12 - Hardware/ Bracket Kit	
#3 - Shackle				

TOXIC

# SHOCKS MISCELLANEOUS

SHOCK LENGTH

Part Number	Extended (Inches)	Compress. (Inches)	Travel (Inches)	Top Mounting	Lower Mounting	Body Dia.
<b>ES1000 SHOCKS ABSORBERS</b>						
11351X	13.68	9.17	4.51	STEM	LOOP	1.75
11451X	14.50	9.31	5.19	STEM	LOOP	1.75
11510X	15.50	10.18	5.32	STEM	LOOP	1.75
11850X	18.61	11.78	6.83	LOOP	LOOP	2.00
11851X	18.12	11.31	6.85	STEM	LOOP	2.00
11950X	19.86	12.34	7.52	LOOP	LOOP	2.00
11951X	19.39	11.93	7.52	STEM	LOOP	2.00
12050X	20.85	16.86	7.99	LOOP	LOOP	2.00
12150X	21.61	13.25	8.36	LOOP	LOOP	2.00
12151X	21.52	12.97	8.55	STEM	LOOP	2.00
12250X	22.58	13.73	8.85	LOOP	LOOP	2.00
12251X	22.58	13.73	8.85	STEM	LOOP	2.00
12450X	24.86	14.84	10.02	LOOP	LOOP	2.00
12451X	24.86	14.83	10.03	STEM	LOOP	2.00
12650X	26.80	15.85	10.95	LOOP	LOOP	2.00
12651X	26.75	15.58	11.17	STEM	LOOP	2.00
12950X	29.83	17.32	12.51	LOOP	LOOP	2.00
12951X	29.32	16.87	12.45	STEM	LOOP	2.00
13200X	32.83	18.82	14.01	LOOP	LOOP	2.00
<b>ES2000 SHOCKS ABSORBERS</b>						
21751X	17.50	10.73	6.77	STEM	LOOP	1.75
21920X	19.91	12.17	7.74	LOOP	LOOP	1.75
219500	23.01	15.74	7.27	(1") LOOP	LOOP	2.36
219505	19.35	12.17	7.18	LOOP	LOOP	2.36
22023X	20.21	12.05	8.16	STEM	STEM	2.36
22050X	20.50	12.98	7.52	LOOP	LOOP	1.75
22253X	22.37	13.13	9.24	STEM	STEM	2.36
22256X	23.92	14.67	9.25	LOOP	LOOP	2.36
22320X	23.30	14.09	9.21	LOOP	LOOP	2.18
22400X	23.90	14.35	9.55	LOOP	LOOP	2.36
22600X	26.33	15.59	10.74	LOOP	LOOP	2.36
<b>ES3000 SHOCKS ABSORBERS</b>						
31351X	13.35	9.02	4.33	STEM	LOOP	2.00
31401X	13.96	9.25	4.71	STEM	LOOP	2.36
31451X	14.71	9.56	5.15	STEM	LOOP	2.00
31458X	15.64	10.49	5.15	(1/2") STEM	CLEVIS	2.00
31550X	15.50	10.17	5.33	LOOP	LOOP	2.36
31551X	15.69	10.02	5.67	STEM	LOOP	2.00
31558X	16.81	11.24	5.57	(1/2") STEM	CLEVIS	2.00
31750X	15.55	11.05	6.50	LOOP	LOOP	1.75
31751X	17.08	10.58	6.50	STEM	LOOP	1.75
31758X	18.06	11.82	6.24	(1/2") STEM	CLEVIS	1.75
31850X	18.59	11.70	5.89	LOOP	LOOP	2.36
31851X	18.66	11.52	7.14	STEM	LOOP	2.36
31854X	18.59	11.87	6.72	(2") LOOP	(2") LOOP	2.36
31859X	18.38	13.33	5.05	(1/2") STEM	BAR/LOOP	2.00
31950X	19.84	12.32	7.52	LOOP	LOOP	2.36
31951X	19.73	12.03	7.70	STEM	LOOP	2.36
32050X	20.59	12.70	7.89	LOOP	LOOP	2.00
32051X	20.24	12.45	7.79	STEM	LOOP	2.00
32058X	21.61	13.49	8.12	(1/2") STEM	CLEVIS	2.00
32059X	21.67	13.77	7.90	LOOP	CLEVIS	2.00
32150X	21.61	13.22	8.39	LOOP	LOOP	2.36
32151X	21.75	13.06	8.69	STEM	LOOP	2.36
32154X	21.77	13.46	7.75	(2") LOOP	(2") LOOP	2.36
32157X	22.99	14.06	8.93	(2") LOOP	(1/2") STEM	2.36
32250X	22.58	13.71	8.87	LOOP	LOOP	2.36
322501	22.58	13.71	8.87	LOOP	LOOP	2.00
32251X	22.75	13.54	9.21	STEM	LOOP	2.36

Part Number	Extended (Inches)	Compress. (Inches)	Travel (Inches)	Top Mounting	Lower Mounting	Body Dia.
322515	22.74	13.56	9.18	STEM	LOOP	2.00
32350X	23.81	14.31	9.50	LOOP	LOOP	2.36
32450X	24.84	14.82	10.02	LOOP	LOOP	2.36
324501	24.84	14.82	10.02	LOOP	LOOP	2.00
32451X	24.70	14.52	10.18	STEM	LOOP	2.36
32455X	24.71	14.62	10.09	(1/2") STEM	LOOP	2.36
32550X	25.74	15.49	10.25	LOOP	LOOP	2.36
32551X	25.75	15.04	10.71	STEM	LOOP	2.36
32554X	25.23	15.22	10.01	(2") LOOP	(2") LOOP	2.36
32555X	25.22	15.22	10.00	(1/2") STEM	(2") LOOP	2.36
32600X	25.99	15.39	10.60	LOOP	LOOP	2.00
32650X	27.07	15.94	11.13	LOOP	LOOP	2.36
32651X	26.79	15.56	11.23	STEM	LOOP	2.36
32654X	27.55	16.49	11.06	(2") LOOP	(2") LOOP	2.36
32750X	27.76	16.27	11.49	LOOP	LOOP	2.00
32751X	27.29	15.80	11.49	STEM	LOOP	2.00
32950X	29.83	17.32	12.51	LOOP	LOOP	2.36
329505	29.80	17.34	12.46	LOOP	LOOP	2.00
32951X	29.77	17.09	12.68	STEM	LOOP	2.36
33200X	32.83	18.82	14.01	LOOP	LOOP	2.36
33400X	34.00	19.42	14.58	LOOP	LOOP	2.36
33600X	35.88	20.36	15.52	LOOP	LOOP	2.36
<b>ES4000 SHOCKS ABSORBERS</b>						
41101X	10.52	7.25	3.27	STEM	LOOP	1.75
41350X	13.62	9.28	4.34	LOOP	LOOP	1.75
41351X	13.35	9.01	4.34	STEM	LOOP	1.75
41450X	15.00	9.81	5.19	LOOP	LOOP	1.75
41451X	14.71	9.54	5.17	STEM	LOOP	1.75
41550X	15.50	10.17	5.33	LOOP	LOOP	2.36
41551X	15.26	9.78	5.48	STEM	LOOP	2.36
41751X	17.08	10.58	6.50	STEM	LOOP	1.75
41850X	18.59	11.70	6.89	LOOP	LOOP	2.36
41851X	18.27	11.29	6.98	STEM	LOOP	2.36
41950X	19.84	12.32	7.52	LOOP	LOOP	2.36
41951X	19.73	12.03	7.70	STEM	LOOP	2.36
42050X	20.59	12.70	7.89	LOOP	LOOP	2.00
42051X	20.59	12.70	7.89	STEM	LOOP	2.00
42150X	21.61	13.22	8.39	LOOP	LOOP	2.36
42250X	22.78	13.78	9.00	LOOP	LOOP	2.36
42450X	24.84	14.82	10.02	LOOP	LOOP	2.36
42550X	25.74	15.49	10.25	LOOP	LOOP	2.36
<b>ES9000 SHOCKS ABSORBERS</b>						
91351X	13.35	9.02	4.33	STEM	LOOP	2.00
91401X	13.96	9.25	4.71	STEM	LOOP	2.36
91451X	14.71	9.56	5.15	STEM	LOOP	2.00
91458X	15.64	10.49	5.15	(1/2") STEM	CLEVIS	2.00
91550X	15.50	10.17	5.33	LOOP	LOOP	2.36
91551X	15.69	10.02	5.67	STEM	LOOP	2.00
91555X	15.25	10.25	5.00	(1/2") STEM	LOOP	2.36
91558X	16.81	11.38	5.43	(1/2") STEM	CLEVIS	2.36
91601X	16.04	10.23	5.25	STEM	LOOP	2.00
91651X	16.60	10.51	6.09	STEM	LOOP	2.36
91750X	17.55	11.05	6.50	LOOP	LOOP	1.75
91751X	17.08	10.58	6.50	STEM	LOOP	1.75
91755X	17.49	11.25	6.24	(1/2") STEM	LOOP	2.36
91850X	18.59	11.70	6.89	LOOP	LOOP	2.36
918501	18.59	11.70	6.89	LOOP	LOOP	2.00
91851X	18.66	11.52	7.14	STEM	LOOP	2.36
91859X	18.38	13.33	5.05	(1/2") STEM	BAR/LOOP	2.00
91950X	19.84	12.32	7.52	LOOP	LOOP	2.36

# MISCELLANEOUS SHOCKS

Part Number	Extended (Inches)	Compress. (Inches)	Travel (Inches)	Top Mounting	Lower Mounting	Body Dia.
91951X	19.73	12.03	7.70	STEM	LOOP	2.36
91952X	19.41	11.89	7.52	LOOP	STEM	2.36
92050X	20.59	12.70	7.89	LOOP	LOOP	2.00
92051X	20.24	12.45	7.79	STEM	LOOP	2.00
92059X	21.67	13.77	7.90	STEM	CLEVIS	2.00
92150X	21.61	13.22	8.39	LOOP	LOOP	2.36
92151X	21.75	13.06	8.69	STEM	LOOP	2.36
92152X	21.32	12.89	8.43	LOOP	STEM	2.36
92153X	21.74	13.05	8.69	STEM	STEM	2.36
92156X	22.98	13.71	9.27	(1/2") STEM	(1/2") STEM	2.36
92157X	22.99	14.06	8.93	(2") LOOP	(1/2") STEM	2.36
92171X	22.08	13.21	8.87	(1/2") STEM	LOOP	2.00
92201X	22.00	13.58	8.42	(1/2") STEM	LOOP	2.36
92250X	22.58	13.71	8.87	LOOP	LOOP	2.36
922501	22.58	13.71	8.87	LOOP	LOOP	2.00
92251X	22.75	13.54	9.21	STEM	LOOP	2.36
92255X	22.70	13.59	9.10	(1/2") STEM	(2") LOOP	2.36
92256X	22.28	13.36	8.92	(1/2") STEM	(1/2") STEM	2.36
92257X	22.31	13.71	8.60	(2") LOOP	(1/2") STEM	2.36
92350X	23.81	14.31	9.50	LOOP	LOOP	2.36
92355X	23.56	14.20	9.36	(1/2") STEM	(2") LOOP	2.36
92450X	24.84	14.82	10.02	LOOP	LOOP	2.36
924501	24.88	14.84	10.04	LOOP	LOOP	2.00
92451X	24.70	14.52	10.18	STEM	LOOP	2.36
92454X	24.80	14.94	9.86	(2") LOOP	(2") LOOP	2.36
92455X	24.68	14.56	10.12	(1/2") STEM	(2") LOOP	2.36
92456X	24.50	14.47	10.03	(1/2") STEM	(1/2") STEM	2.36
92457X	24.48	14.79	9.69	(2") LOOP	(1/2") STEM	2.36
92475X	24.71	14.53	10.18	(1/2") STEM	LOOP	2.36
92550X	25.74	15.49	10.25	LOOP	LOOP	2.36
92551X	25.75	15.04	10.71	STEM	LOOP	2.36
92554X	25.74	15.49	10.25	(2") LOOP	(2") LOOP	2.36
92555X	25.74	15.49	10.25	(1/2") STEM	(2") LOOP	2.36
92557X	25.74	15.49	10.25	(2") LOOP	(1/2") STEM	2.36
92650X	27.07	16.94	11.13	LOOP	LOOP	2.36
926505	26.77	15.90	10.87	(2") LOOP	(2") LOOP	2.36
92651X	26.79	15.56	11.23	STEM	LOOP	2.36
92654X	26.76	15.94	10.82	(2") LOOP	(2") LOOP	2.36
92655X	27.11	15.98	11.13	(1/2") STEM	(2") LOOP	2.36
92656X	27.11	15.97	11.14	(1/2") STEM	(1/2") STEM	2.36
92657X	27.07	16.08	10.99	(2") LOOP	(1/2") STEM	2.36
92750X	27.76	16.27	11.49	LOOP	LOOP	2.00
927505	27.76	16.27	11.49	(2") LOOP	(2") LOOP	2.00
927504	27.76	16.30	11.46	LOOP	LOOP	2.36
92751X	27.76	16.27	11.49	STEM	LOOP	2.00
92754X	27.78	16.47	11.31	(2") LOOP	(2") LOOP	2.00
927553	27.75	16.26	11.49	(1/2") STEM	(2") LOOP	2.36
927554	27.89	16.40	11.49	(1/2") STEM	(2") LOOP	2.00
92759X	27.74	16.25	11.49	(1/2") STEM	LOOP	2.00
92771X	27.75	16.26	11.49	STEM	LOOP	2.00
92800X	28.04	16.54	11.50	(2") LOOP	(2") LOOP	2.00
92950X	29.83	17.32	12.51	LOOP	LOOP	2.36
929505	29.80	17.34	12.46	LOOP	LOOP	2.00
92951X	29.77	17.09	12.68	(1/2") STEM	LOOP	2.36
92954X	29.98	18.24	11.74	(2") LOOP	(2") LOOP	2.36
93000X	30.08	18.00	12.08	(2") LOOP	(2") LOOP	2.36
93200X	32.93	18.82	14.01	LOOP	LOOP	2.36
93205X	32.47	18.73	13.74	(1/2") STEM	(2") LOOP	2.36
93400X	34.00	19.42	14.58	LOOP	LOOP	2.36
93600X	35.88	20.36	15.52	LOOP	LOOP	2.36

Part Number	Extended (Inches)	Compress. (Inches)	Travel (Inches)	Top Mounting	Lower Mounting
<b>PRO RUNNER SHOCK ABSORBERS</b>					
ZX2001	29.70	18.26	11.44	Loop	Loop
ZX2002	18.50	14.43	4.08	10mm X 1.5 Stem	Bonded OE Bushing w bar pin
ZX2003	21.85	16.93	4.92	12mm X 1.75 Stem	Bonded OE Bushing / Loop
ZX2004	32.40	19.55	12.85	Loop	Loop
ZX2006	21.13	13.43	7.70	1/2"-13 Stem	Loop
ZX2009	30.33	19.57	10.76	1/2"-13 Stem	Loop
ZX2012	22.55	14.13	8.42	3/8"-16 Stem	Loop
ZX2013	27.10	16.84	10.26	Loop	Loop
ZX2014	21.46	15.16	6.30	12mm X 1.75 Stem	Clevis
ZX2015	20.85	13.74	7.11	3/8"-16 Stem	Clevis
ZX2016	16.60	11.15	5.44	1/2"-13 Stem	Loop
ZX2017	21.18	15.12	6.06	12mm X 1.75 Stem	Clevis
ZX2018	16.61	11.65	4.96	3/8"-16 Stem	Clevis
ZX2019	26.71	16.74	9.97	Loop	Loop
ZX2020	25.39	16.50	8.90	Loop	Loop
ZX2021	29.76	18.32	11.44	Loop	Loop
ZX2022	21.04	13.61	7.43	1/2"-13 Stem	Loop
ZX2023	28.86	18.11	10.76	Loop	Loop
ZX2024	24.35	15.34	9.01	1/2"-13 Stem	Loop
ZX2025	24.33	15.72	8.61	1/2"-13 Stem	Loop
ZX2027	27.40	17.42	9.98	Loop	Loop
ZX2028	26.46	16.85	9.60	Loop	Loop
ZX2029	23.13	14.91	8.22	Loop	Loop
ZX2032	25.83	16.32	9.51	1/2"-13 Stem	Loop
ZX2034	26.04	16.37	9.67	Loop	Loop
ZX2040	26.46	16.67	9.80	3/8"-16 Stem	Loop
ZX2041	26.76	17.04	9.72	Loop	Loop
ZX2042	32.54	19.98	12.56	Loop	Loop
ZX2045	24.85	16.85	8.00	Loop	Loop
ZX2048	27.37	17.42	9.95	Loop	Loop
ZX2050	26.92	16.76	10.16	3/8"-16 Stem	Loop
ZX2055	27.51	17.32	10.19	Loop	Loop
ZX2056	24.48	15.48	9.01	1/2"-13 Stem	Loop
ZX2058	29.38	18.15	11.23	1/2"-13 Stem	Loop
ZX2060	21.01	13.57	7.44	3/8"-16 Stem	Loop
ZX2061	23.44	15.15	8.29	Loop	Loop
ZX2062	29.38	18.17	11.22	1/2"-13 Stem	Loop
ZX2065	19.70	13.06	6.65	Loop	Loop
ZX2066	20.84	15.43	5.41	Stem	Loop
ZX2067	24.62	15.75	8.87	Loop	Loop
ZX2068	27.57	17.41	10.16	Loop	Loop
ZX2069	21.75	16.21	5.54	Stem	Loop
ZX2070	28.02	17.65	10.37	Loop	Loop
ZX2071	31.89	19.71	12.18	Loop	Loop
ZX2076	21.93	16.34	5.59	10mm X 1.5 Stem	Bonded OE Bushing / Loop
ZX2078	23.86	17.32	6.54	1/2"-13 Stem	Bonded OE Bushing / Loop
ZX2080	22.24	16.57	5.67	1/2"-13 Stem	Bonded OE Bushing / Loop
ZX2108	18.50	14.43	4.08	10mm X 1.5 Stem	Bonded OE Bushing w bar pin
ZX2110	15.16	10.87	4.29	1/2"-13 Stem	Bonded Bushing / Loop
ZX2111	21.85	16.93	4.92	12mm X 1.75 Stem	Bonded OE Bushing w bar pin
ZX2902	22.87	15.40	7.47	Loop	Loop
ZX2903	18.83	12.33	6.50	Loop	Loop
ZX2904	22.83	14.57	8.26	Loop	Loop
ZX2905	26.14	16.33	9.81	Loop	Loop

SHOCK LENGTH

## Shock Boots

Color	Bulk - No Bag	Single - Bagged	Pair - Bagged
<b>2" AND 2.36" DIAMETER CYLINDERS FOR ES SHOCKS</b>			
Royal Blue	10100	11100	12100
Hot Pink	10105	11105	12105
Fluorescent Orange	10110	11110	12110
Teal	10114	11114	12114
Lime Green	10115	11115	12115
Light Blue	10120	11120	12120
White	10124	11124	12124
Grey	10126	11126	12126
Black	10127	11127	12127
Red	10128	11128	12128
Yellow	10129	11129	12129
Dark Forest Green	10130	11130	12130
Dark Purple	10131	11131	12131
Raspberry	10132	11132	12132
Clear	10133	11133	12133
<b>1.75" DIAMETER CYLINDERS FOR ES SHOCKS</b>			
Mini-Black	10147	11147	12147
<b>2" DIAMETER CYLINDERS FOR MX SHOCKS</b>			
MX Black	10136	N/A	N/A
<b>ZIP TIE</b>			
Zip Tie	10999	N/A	N/A

### Notes:

Bulk shock boots are available in case lots of 100 boots/ case.

ES1000 Shocks include black shock boots.

ES2000, ES3000, ES4000, ES6000 and ES9000: Do not include shock boot.

MX2.0 Shocks: Do not include shock boot.

Fox Shocks: Do not include shock boot.

MX6 Shocks: Includes black shock boot.

MX6R Shocks: Includes black shock boot.

## Loop-to-Loop Stem Conversion Kits

Description	Part Number
<b>FOR USE WITH ES SERIES SHOCKS</b>	
5/8" Loop -to- 5/8" Stem - Adds 1.5" to overall length	690001
<b>FOR USE WITH MX/ MX6/ MX6R/ FOX SERIES SHOCKS</b>	
5/8" Loop -to- 5/8" Stem - Adds 2.0" to overall length	690002

## Reservoir Mounting Kits

Description	Part Number
<b>URETHANE MOUNT KITS</b>	
2" Reservoir to 2" Shock Body	63012
2" Reservoir to 1.5" Hoop Tube	63013
<b>ALUMINUM MOUNT KITS</b>	
2" Reservoir to 2" Shock Body	63014
2" Reservoir to 1.5" Hoop Tube	63015
MX6R Reservoir to MX6R Shock Body	63016
MX6R Reservoir to 1.5" Hoop Tube	63017
MX2.75CR Reservoir to 1.5" Hoop Tube	63018

## Replacement Shock Bushings

Description	Material	Hardness	Part Number
<b>SHOCK EYE BUSHINGS</b>			
Shock Eye Bushing - 5/8" ID Hourglass	Rubber	Soft	45359
Shock Eye Bushing - 5/8" ID Straight	Rubber	Soft	45558
Shock Eye Bushing - 3/4" ID Hourglass (2 Piece)	Rubber	Soft	11866
Shock Eye Bushing - 5/8" ID Hourglass	Urethane	Firm	600000
Shock Eye Bushing - 5/8" ID Hourglass	Urethane	Soft	600006
Shock Eye Bushing - 5/8" ID Hourglass ("T" Style)	Urethane	Firm	600040
Shock Eye Bushing - 5/8" ID Hourglass (Wide Centered)	Urethane	Firm	610020
Shock Eye Bushing - 5/8" ID Hourglass (Wide Offset)	Urethane	Firm	610010
Shock Eye Bushing - 5/8" ID Straight	Urethane	Firm	600010
Shock Eye Bushing - 3/4" ID Hourglass	Urethane	Firm	600020
Shock Eye Bushing - 3/4" ID Hourglass	Urethane	Soft	600026
Shock Eye Bushing - 3/4" ID Hourglass (1.300")	Urethane	Soft	600027
<b>SHOCK STEM BUSHINGS</b>			
Shock Stem Bushing - 3/8" ID	Urethane	Firm	600050
Shock Stem Bushing - 3/8" ID	Urethane	Soft	600056
Shock Stem Bushing - 1/2" ID	Urethane	Firm	600058
Shock Stem Bushing - 1/2" ID	Urethane	Soft	600057
<b>Bushings are sold individually.</b>			

## Replacement Shock Hardware

Description	Bagged Pack	Component	Qty
<b>STEM HARDWARE</b>			
Shock Stem Nut - 3/8" Fine	P-962	8337-1	1
Shock Stem Washer - 3/8" ID (Large Diameter)	-	117345211	1
Shock Stem Washer - 3/8" ID (Small Diameter)	-	060408	1
Shock Stem Washer - 1/2" ID (Large Diameter)	-	11730006	1
Shock Stem Pack - 3/8" ID - Urethane Bushings	P-1014	-	-
Shock Stem Pack - 1/2" ID - Urethane Bushings	P-1029	-	-
Shock Stem Pack - 3/8" ID - Rubber Bushings	P-438	-	-
<b>BAR PINS</b>			
Shock Bar Pin - 2.500"	P-1001	-	1
Shock Bar Pin - 3.000"	-	55268	1
Shock Bar Pin - 3.125"	-	53405	1
<b>EYE BOLTS</b>			
Shock Eye Bolt (w/ Hardware)	P-19	-	-
<b>SLEEVES</b>			
Shock Sleeve - 3/4" x 14mm x 1.48"	P-1036	113600020	1
Shock Sleeve - 5/8"x 1/2" x 1.37"	P-108	51792	2
Shock Sleeve - 5/8"x 1/2" x 1.37"	P-109	51792	1
Shock Sleeve - 5/8" x 1/2" x 1.00"	-	54314	1
Shock Sleeve - 5/8" x 1/2" x 1.48" (Wide Centered)	-	54794	1
Shock Sleeve - 5/8" x 1/2" x 1.48" (Wide Offset)	-	54993	1
Shock Sleeve - 5/8" x 12mm x 1.750"	-	60194	1
Shock Sleeve - 5/8" x 12mm x 1.480"	-	60859H	1
Shock Sleeve - 5/8" x 10mm x 1.480"	-	61150	1
Shock Sleeve - 5/8" x 12mm x 1.625"	-	61734	1
Shock Sleeve - 3/4" x 16mm x 1.485"	-	Q	1
Shock Sleeve - 5/8" x 12mm x 1.00"	-	T	1
Shock Sleeve - 5/8" x 12mm x 1.569"	-	45351	1
Shock Sleeve - 5/8" x 12mm x 1.410"	-	61351H	1
<b>BAGGED HARDWARE</b>			
Shock Hardware Pack - Sleeves	-	P-999	1
Shock Hardware Pack - Sleeves/ Bar Pin	-	P-1000	1
<b>Stem packs include: 2 Retaining washers, 2 Stem bushings, and 1 Stem nut.</b>			

## Multiple Shock Kits

Application	Year	Lift Ht.	Kit Type	Bracket Kit	Hoop w/ Brackets	ES SERIES ES1000	ES SERIES ES3000	ES SERIES ES9000	MX SERIES Non-Resi	MX SERIES Resi
<b>CHEVY / GMC</b>										
Silverado/ Sierra 1500 - 4WD	99-06	6"	Triple	-	51297B	120500	320500	920500	MX6088	MX6064R
Silverado/ Sierra 1500 - 4WD	88-99	6"	Triple	-	51294B	120500	320500	920500	MX6088	MX6064R
		4"	Triple	-	51294B	118500	318509	918500	MX6022	MX6064R
Silverado/ Sierra 1500 - 4WD	73-87	6"	Dual	58103	-	125500	325509	925509	MX6012	MX6065R
		4"	Dual	58103	-	124500	324509	924509	MX6027	-
		2.5"	Dual	58103	-	122500	322500	922500	MX6010	-
		0"	Dual	58103	-	119500	319500	919500	MX6038	MX6064R
Silverado/ Sierra 2500HD - 4WD (A-Arm Kit)	99-10	6"	Triple	-	51211B	120500	320500	920500	MX6088	MX6064R
Silverado/ Sierra 2500HD - 4WD (Knuckle Kit)	99-10	6"	Triple	-	51214B	-	-	915509	-	-
Avalanche/ Suburban/ Tahoe/ Yukon 1500 - 4WD	00-06	6"	Triple	-	51297B	120500	320500	920500	MX6088	MX6064R
Avalanche/ Suburban/ Tahoe/ Yukon 1500 - 4WD	92-99	6"	Triple	-	51294B	120500	320500	920500	MX6088	MX6064R
		4"	Triple	-	51294B	118500	318500	918500	MX6022	MX6064R
Blazer/ Jimmy/ Suburban 1500 - 4WD	73-91	6"	Dual	58103	-	125500	325509	925509	MX6012	MX6065R
		4"	Dual	58103	-	124500	324509	924509	MX6027	-
		2.5"	Dual	58103	-	122500	322500	922500	MX6010	-
		0"	Dual	58103	-	119500	319500	919500	MX6038	MX6064R
Avalanche/ Suburban/ Yukon XL 2500 - 4WD (A-Arm Kit)	00-13	6"	Triple	-	51211B	120500	320500	920500	MX6088	MX6064R
Avalanche/ Suburban/ Yukon XL 2500 - 4WD (Knuckle Kit)	99-09	6"	Triple	-	51214B	-	-	915509	-	-
<b>DODGE</b>										
Ram 2500/ 3500 - 4WD	11-13	6"	Triple	-	56120B	126500	326500	926500	MX6012	MX6065R
Ram 2500/ 3500 - 4WD	03-09	6"	Triple	-	56120B	126500	326500	926500	MX6012	MX6065R
<b>FORD</b>										
F250/ F350 - 4WD	11-16	8"	Dual	-	52451B-1	127500	327500	927501	MX6129	MX6065R
F250/ F350 - 4WD	11-16	6"	Dual	-	52451B	125500	325509	925501	-	-
F250/ F350 - 4WD	08-10	8"	Dual	-	52470B	127500	327509	927501	MX6128	MX6066R
F250/ F350 - 4WD	08-10	6"	Dual	-	52460B	125500	325500	925501	MX6128	MX6066R
F250/ F350 - 4WD	05-07	8"	Dual	-	52450B	127500	327500	927500	MX6128	MX6066R
F250/ F350 - 4WD	05-07	6"	Dual	-	52440B	125500	325500	925500	MX6129	MX6065R
		6"	Dual	-	52440BF	-	-	-	-	-
		6"	Dual	-	52440BFR	-	-	-	-	-
F250/ F350 - 4WD	98-04	8.5"	Dual	52410B	52420B	129500	329500	929500	MX6005	MX6067R
F250/ F350 - 4WD	98-04	6.5"	Dual	52410B	52420B	129500	329500	929500	MX6121	MX6066R
			Dual	-	52420BF	-	-	-	-	-
			Dual	-	52420BFR	-	-	-	-	-
F250/ F350 - 4WD	98-04	4"	Dual	52410B	52420B	126500	326500	926500	MX6017	MX6065R
			4"	Dual	-	52420BF	-	-	-	-
			4"	Dual	-	52420BFR	-	-	-	-
F250/ F350 - 4WD	98-04	2"	Dual	52410B	52420B	124500	324500	924500	MX6004	-
F250/ F350 - 4WD	98-04	0"	Dual	52410B	52420B	122500	322500	922500	MX6035	-
Excursion - 4WD	00-06	4"-6"	Dual	52410B	52420B	126500	326500	926500	MX6017	MX6065R
			4"-6"	Dual	-	52420BF	-	-	-	-
			4"-6"	Dual	-	52420BFR	-	-	-	-
Excursion	00-06	2"	Dual	52410B	52420B	124500	324500	924500	MX6004	-
Excursion	00-06	0"	Dual	52410B	52420B	122500	322500	922500	MX6035	-

**Notes:**

On Chevy /GMC, The factory location shock must be used.

Four shocks are required and are sold separately.

Customers with existing Pro Comp shock bracket # 52410B can add hoop kit # 52430B to complete shock hoop with bracket kit # 52420B.





# SUSPENSION STEERING STABILIZERS

## Chevrolet

Application	Year	Lift Height	Complete Kit	Shock (Cyl only)	Bracket Only	Notes:
<b>CHEVROLET - Single Steering Stabilizers</b>						
<b>Blazer (Compact) - 4WD</b>						
S-10 (Bolts to stock mounts)	83-01	0"-2"	-	219200	-	33
S-10 (w/o stock mounts)	83-01	0"-2"	219526	219200	2526	
<b>Blazer (Full Size) - 4WD</b>						
Blazer (w/o stock mounts)	92-94	0"-2"	219526	219200	2526	35
With Pro Comp lift K1048		6"	-	217513	-	
K5, V5 (With OE quad suspension)	73-91	0"-2"	-	224000	-	
K5, V5 (Exc. OE quad suspension)	58-72	0"-2"	222509	222530	2509	
<b>Silverado Pickup (1/2 Ton) - 4WD</b>						
K1500 (w/o stock mounts)	88-98	0"-2"	219526	219200	2526	35
With Pro Comp lift K1048		6"	-	217513	-	
K-10 (Bolts to stock mounts)	73-87	0"-2"	-	224000	-	
K-10	58-72	0"-2"	222509	222530	2509	
<b>Silverado Pickup (3/4 Ton) - 2WD</b>						
C2500HD (Bolts into stock location)	99-10	0"-2"	-	220501	-	
With Pro Comp lift K1084 (bolts into stock location)		6"	-	220501	-	
With Pro Comp lift K1051		6"	-	219200	-	
<b>Silverado Pickup (3/4 Ton) - 4WD</b>						
K2500HD (Bolts into stock location)	11-16	0"-6"	226010	226000	-	
K2500HD (Bolts into stock location)	99-10	0"-2"	-	220501	-	
With Pro Comp lift K1084 (bolts into stock location)		6"	-	220501	-	
With Pro Comp lift K1051		6"	-	219200	-	
K2500 (w/o stock mounts)	88-98	0"-2"	219526	219200	2526	35
With Pro Comp lift K1044 / K1109		6"	-	219200	-	
K-20 (Bolts to stock mounts)	73-87	0"-2"	-	224000	-	
K-20	58-72	0"-2"	222509	222530	2509	
<b>Silverado Pickup (1 Ton) - 4WD</b>						
K3500 (w/o stock mounts)	88-98	0"-2"	219526	219200	2526	35
With Pro Comp lift K1044 / K1109		6"	-	219200	-	
<b>S-10 Pickup (Light Duty) - 4WD</b>						
S-10 (Bolts to stock mounts)	83-01	0"-2"	-	219200	-	33
S-10 (w/o stock mounts)	83-01	0"-2"	219526	219200	2526	
<b>Suburban (1/2 Ton) - 2WD</b>						
K1500 (w/o stock mounts)	92-99	0"-2"	219526	219200	2526	35
K-10 (Bolts to stock mounts)	73-87	0"-2"	-	224000	-	
<b>Suburban (3/4 Ton) - 4WD</b>						
K2500HD (Bolts into stock location)	99-10	0"-2"	-	220501	-	
Pro Comp lift K1084		6"	-	220501	-	
Pro Comp lift K1051		6"	-	219200	-	
K2500 (w/o stock mounts)	88-98	0"-2"	219526	219200	2526	35
With Pro Comp lift K1044 / K1109		6"	-	219200	-	
K-20 (Bolts to stock mounts)	73-87	0"-2"	-	224000	-	
K-20	58-72	0"-2"	222509	222530	2509	
<b>Tahoe - 4WD</b>						
K1500 (w/o stock mounts)	95-99	0"-2"	219526	219200	2526	35
With Pro Comp lift K1047 / K1048		6"	-	217513	-	
<b>CHEVROLET - Dual Steering Stabilizers</b>						
<b>Blazer (Full Size) - 4WD</b>						
K5, V5 (Leaf Spring Front)	67-91	0"-6"	220561	220230	2561	
<b>Silverado Pickup (1/2 Ton) - 2WD</b>						
C1500 (Crew Cab) (With coil springs)	99-06	0"-2"	-	-	-	
With Pro Comp lift K1078		6"	218568	218000	2568	
<b>Silverado Pickup (1/2 Ton) - 4WD</b>						
K5, V5 (Leaf Spring Front)	67-91	0"-6"	220561	220230	2561	

**Notes:**

- (33) Tie rod must have factory hole for stabilizer to fit. (35) For stock height vehicles. Will not work with Pro Comp 6" Lift.
- (37) Will not fit on some late model Dodge full size (38) Will not fit Ford vehicles with factory high rider package or vehicles with off-set Pitman arm.
- (39) Factory quad shock lower mount required to mount stabilizer kit.
- (40) Will fit Ford vehicles with factory high rider package and vehicles with off-set Pitman arm more than 1.25" off-set.

STEERING STABILIZERS

## Chevrolet

Application	Year	Lift Height	Complete Kit	Shock (Cyl only)	Bracket Only	Notes:
<b>Silverado Pickup (3/4 Ton) - 4WD</b>						
K20 (Leaf Spring Front)	67-91	0"-6"	220561	220230	2561	
<b>Suburban (1/2 Ton) - 4WD</b>						
K5, V5 (Leaf Spring Front)	67-91	0"-6"	220561	220230	2561	
<b>Suburban (3/4 Ton) - 4WD</b>						
K20 (Leaf Spring Front)	73-91	0"-6"	220561	220230	2561	

## Dodge

Application	Year	Lift Height	Complete Kit	Shock (Cyl only)	Bracket Only	Notes:
<b>DODGE - Single Steering Stabilizers</b>						
<b>Ramcharger - 4WD</b>						
Ramcharger	74-93	0"-2"	222509	222530	2509	
<b>Ram Pickup (1/2 Ton) (Incl. D Models) - 2WD</b>						
D-100	54-71	0"-2"	220508	220230	2508	
<b>Ram Pickup (1/2 Ton) (Incl. W Models) - 4WD</b>						
Ram 1500 (Bolts to stock mounts)	00-01	0"	-	223200	-	
Ram 1500 (Bolts to stock mounts)	94-99	0"	-	224000	-	
W-100, W-150 (Inc. Turbo Diesel)	60-93	0"-2"	222509	222530	2509	
<b>Ram Pickup (3/4 Ton) (Incl. D Models) - 2WD</b>						
D-200	54-71	0"-2"	220508	220230	2508	
<b>Ram Pickup (3/4 Ton) (Incl. W Models) - 4WD</b>						
Ram 2500	00-3/08	0"-6"	-	223200	-	
Ram 2500	94-99	0"-2"	-	224000	-	
<b>Ram Pickup (1 Ton) (Incl. D Models) - 2WD</b>						
D-300	54-71	0"-2"	220508	220230	2508	
<b>Ram Pickup (1 Ton) (Incl. W Models) - 4WD</b>						
Ram 3500	00-3/08	0"-6"	-	223200	-	
Ram 3500	94-99	0"-2"	-	224000	-	
<b>Ram Van (1/2 Ton) (A &amp; B Models) - 2WD</b>						
Ram 1500, B-100, B-150 (I Beam)	54-71	0"-2"	220508	220530	2508	
<b>Ram Van (3/4 Ton) (B Models) - 2WD</b>						
2500, B-200, B-250 (I Beam)	54-71	0"-2"	220508	220530	2508	
<b>Ram Van (1 Ton) (B Models) - 2WD</b>						
3500, B-300, B-350 (I Beam)	54-71	0"-2"	220508	220530	2508	
<b>DODGE - Dual Steering Stabilizers</b>						
<b>Ramcharger - 4WD</b>						
Ramcharger	60-93	0"-2"	220561	220230	2561	37
<b>Ram Pickup (1/2 Ton) - 4WD</b>						
1500-Mega Cab (w/ Inverted T Style Steering)	3/08-09	0"-6"	222583Z	ZX2904	2583	
1500-Mega Cab (w/ Inverted T Style Steering)	3/08-09	0"-6"	222583	223500	2583	
1500-Mega Cab (Y Style Steering)	06-3/08	0"-6"	219838	224000	-	
<b>Ram Pickup (3/4 Ton) - 4WD</b>						
2500(w/ Inverted T Style Steering)	3/08-12	0"-6"	222583Z	ZX2904	2583	
2500(w/ Inverted T Style Steering)	3/08-12	0"-6"	222583	223500	2583	
2500 (Y Style Steering)	03-3/08	0"-6"	222584Z	ZX2904	-	
2500 (Y Style Steering)	03-3/08	0"-6"	219838	224000	-	
<b>Ram Pickup (1 Ton) - 4WD</b>						
3500(w/ Inverted T Style Steering)	3/08-12	0"-6"	222583Z	ZX2904	2583	
3500(w/ Inverted T Style Steering)	3/08-12	0"-6"	222583	223500	2583	
3500 (Y Style Steering)	03-3/08	0"-6"	222584Z	ZX2904	-	
3500 (Y Style Steering)	03-3/08	0"-6"	219838	224000	-	

**Notes:**

- (33) Tie rod must have factory hole for stabilizer to fit. (35) For stock height vehicles. Will not work with Pro Comp 6" Lift.
- (37) Will not fit on some late model Dodge full size (38) Will not fit Ford vehicles with factory high rider package or vehicles with off-set Pitman arm.
- (39) Factory quad shock lower mount required to mount stabilizer kit.
- (40) Will fit Ford vehicles with factory high rider package and vehicles with off-set Pitman arm more than 1.25" off-set.

# SUSPENSION STEERING STABILIZERS

## Ford

Application	Year	Lift Height	Complete Kit	Shock (Cyl only)	Bracket Only	Notes:
<b>FORD - Single Steering Stabilizers</b>						
<b>Bronco (Full Size) - 4WD</b>						
Bronco (OE quad suspension)	80-96	0"-6"	220566	220230	2566	39
Bronco (w/o OE quad suspension)	90-96	0"-6"	220537	220230	2537	
Bronco (w/o OE quad suspension)	80-89	0"-6"	220535	220230	2535	35,38
Bronco (Bolts to stock mounts)	70-79	0"-6"	-	222530	-	
Bronco (Bolts to stock mounts)	66-69	0"-2"	-	224000	-	
<b>Bronco II (Mid size) - 4WD</b>						
Bronco II (Sway bar mounted in front of axle)	83-90	0"-5"	220535	220230	2535	38
<b>Bronco II (Mid size) - 2WD</b>						
Bronco II (Sway bar mounted in front of axle)	83-90	0"-5"	220535	220230	2535	38
<b>Excursion - 4WD</b>						
Excursion	00-06	0"-8.5"	222570	222560	2770	
<b>Excursion - 2WD</b>						
Excursion w Pro Comp Lift only	00-04	6"	222585	222530	2585	
<b>Expedition - 4WD</b>						
Expedition	97-03	0"-4"	220580	220210	2580	
<b>Explorer - 2WD/ 4WD</b>						
Explorer	90-94	0"-5"	220537	220230	2537	
<b>F-Series Pickup (1/2 Ton) - 4WD</b>						
F-150 (Incl. Super Crew)	97-03	0"-4"	220580	220210	2580	
F-100, F-150 (OE quad suspension)	80-96	0"-6"	220566	220230	2566	39
F-100, F-150 (w/o OE quad suspension)	90-96	0"-6"	220537	220230	2537	
F-100, F-150 (w/o OE quad suspension)	81-89	0"-6"	220535	220230	2535	35,38
F-100, F-150 (Bolts to stock mounts)	70-79	0"-2"	-	222530	-	
<b>F-Series Pickup (1/2 Ton) - 2WD</b>						
F-100, F-150 (w/o Sway bar)	81-96	0"-6"	220537	220230	2537	
F-100, F-150	50-64	0"-6"	220508	220230	2508	
<b>F-Series Pickup (3/4 Ton) - 4WD</b>						
F-250 (Bolts to stock mounts)	05-07	0"-8"	-	227010	-	
F-250	99-04	0"-8.5"	222570	222560	2770	
F-250 Light Duty (7 Lug)	97-03	0"-4"	220580	220210	2580	
F-250	80-96	0"-4"	220535	220230	2535	38
F-250 (Bolts to stock mounts)	77-79	0"-4"	-	220210	-	
F-250 (w/o power steering)	59-77	0"-1"	222509	222530	2509	
<b>F-Series Pickup (3/4 Ton) - 2WD</b>						
F-250 w Pro Comp Lift only	99-04	6"	222585	222530	2585	
F-250 (w/o Sway bar)	81-96	0"-6"	220537	220230	2537	
F-250 (I Beam)	50-64	0"-6"	220508	220230	2508	
<b>F-Series Pickup (1 Ton) - 4WD</b>						
F-250 (Bolts to stock mounts)	05-07	0"-8"	-	227010	-	
F-250	99-04	0"-8.5"	222570	222560	2770	
F-250 Light Duty (7 Lug)	97-03	0"-4"	220580	220210	2580	
F-250	80-96	0"-4"	220535	220230	2535	38
F-250 (Bolts to stock mounts)	77-79	0"-4"	-	220210	-	
F-250 (w/o power steering)	59-77	0"-1"	222509	222530	2509	
<b>F-Series Pickup (1 Ton) - 2WD</b>						
F-350 w Pro Comp Lift only	99-04	6"	222585	222530	2585	
F-350 (w/o Sway bar)	81-96	0"-6"	220537	220230	2537	
F-350 (I Beam)	50-64	0"-6"	220508	220230	2508	

### Notes:

- (33) Tie rod must have factory hole for stabilizer to fit. (35) For stock height vehicles. Will not work with Pro Comp 6" Lift.  
 (37) Will not fit on some late model Dodge full size (38) Will not fit Ford vehicles with factory high rider package or vehicles with off-set Pitman arm.  
 (39) Factory quad shock lower mount required to mount stabilizer kit.  
 (40) Will fit Ford vehicles with factory high rider package and vehicles with off-set Pitman arm more than 1.25" off-set.

## Ford

Application	Year	Lift Height	Complete Kit	Shock (Cyl only)	Bracket Only	Notes:
<b>Ranger - 4WD</b>						
Ranger	83-97	0"-2"	220535	220230	2535	38
Ranger (Inc. high rider pkg)	87-91	2.5"	220537	220230	2537	40
<b>Ranger - 2WD</b>						
Ranger (Sway bar mounted in front of axle)	92-99	0"-1"	220537	220230	2537	
Ranger (w/o Sway bar mounted in front of axle)	83-96	0"-1"	220513	220230	2513	
<b>FORD - Dual Steering Stabilizers</b>						
<b>Bronco (Full Size) - 4WD</b>						
Bronco (OE quad suspension)	81-96	0"-2"	220565	220230	2565	39
Bronco (w/o OE quad suspension)	80-91	0"-3"	220563	220230	2563	
Bronco (w/o Sway bar)	78-79	0"-2"	220561	220230	2561	39
<b>Excursion - 4WD</b>						
Excursion	00-06	0"-8.5"	222581Z	ZX2905	2581	
Excursion	00-06	0"-8.5"	222581	226000	2581	
Excursion	00-06	0"-8.5"	222286	222560	-	
<b>F-Series Pickup (1/2 Ton) - 4WD</b>						
F-100, F-150 (OE quad suspension)	81-96	0"-2"	220565	220230	2565	39
F-100, F-150 (w/o OE quad suspension)	80-93	0"-3"	220563	220230	2563	
F-100, F-150 (w/o OE quad suspension)	70-79	0"-3"	220561	220230	2561	39
<b>F-Series Pickup (1/2 Ton) - 2WD</b>						
F-150 (Incl. Super Crew)	04-08	0"	-	-	-	
With Pro Comp lift (52205)		6"	224301	224030	-	
<b>F-Series Pickup (3/4 Ton) - 4WD</b>						
F-250	05-16	0"-8"	222582Z	ZX2904	2582	
F-250	05-16	0"-8"	222582	223500	2582	
F-250	99-04	0"-8.5"	222581Z	ZX2905	2581	
F-250	99-04	0"-8.5"	222581	226000	2581	
F-250	99-04	0"-8.5"	222286	222560	-	
<b>F-Series Pickup (1 Ton) - 4WD</b>						
F-350	05-16	0"-8"	222582Z	ZX2904	2582	
F-350	05-16	0"-8"	222582	223500	2582	
F-350	99-04	0"-8.5"	222581Z	ZX2905	2581	
F-350	99-04	0"-8.5"	222581	226000	2581	
F-350	99-04	0"-8.5"	222286	222560	-	

**Notes:**

- (33) Tie rod must have factory hole for stabilizer to fit. (35) For stock height vehicles. Will not work with Pro Comp 6" Lift.  
 (37) Will not fit on some late model Dodge full size (38) Will not fit Ford vehicles with factory high rider package or vehicles with off-set Pitman arm.  
 (39) Factory quad shock lower mount required to mount stabilizer kit.  
 (40) Will fit Ford vehicles with factory high rider package and vehicles with off-set Pitman arm more than 1.25" off-set.

# SUSPENSION STEERING STABILIZERS

## GMC

Application	Year	Lift Height	Complete Kit	Shock (Cyl only)	Bracket Only	Notes:
<b>GMC - Single Steering Stabilizers</b>						
<b>Jimmy (Compact) - 4WD</b>						
S-15 (Bolts to stock mounts)	83-01	0"-2"	-	219200	-	33
S-15 (w/o stock mounts)	83-01	0"-2"	219526	219200	2526	
<b>Jimmy / Yukon (Full Size) - 4WD</b>						
Jimmy / Yukon (w/o stock mounts)	92-94	0"-2"	219526	219200	2526	35
With Pro Comp lift K1048		6"	-	217513	-	
K5, V5 (With OE quad suspension)	73-91	0"-2"	-	224000	-	
K5, V5 (Exc. OE quad suspension)	58-72	0"-2"	222509	222530	2509	
<b>Sierra Pickup (1/2 Ton) - 4WD</b>						
K1500 (w/o stock mounts)	88-98	0"-2"	219526	219200	2526	35
With Pro Comp lift K1048		6"	-	217513	-	
K-10 (Bolts to stock mounts)	73-87	0"-2"	-	224000	-	
K-10	58-72	0"-2"	222509	222530	2509	
<b>Sierra Pickup (3/4 Ton) - 2WD</b>						
C2500HD (Bolts into stock location)	99-10	0"-2"	-	220501	-	
<b>With Pro Comp lift K1084</b> (bolts into stock location)		6"	-	220501	-	
<b>With Pro Comp lift K1051</b>		6"	-	219200	-	
<b>Sierra Pickup (3/4 Ton) - 4WD</b>						
K2500HD (Bolts into stock location)	11-15	0"-6"	226010	226000	-	
K2500HD (Bolts into stock location)	99-10	0"-2"	-	220501	-	
<b>With Pro Comp lift K1084</b> (bolts into stock location)		6"	-	220501	-	
<b>With Pro Comp lift K1051</b>		6"	-	219200	-	
K2500 (w/o stock mounts)	88-98	0"-2"	219526	219200	2526	35
With Pro Comp lift K1044 / K1109		6"	-	219200	-	
K-20 (Bolts to stock mounts)	73-87	0"-2"	-	224000	-	
K-20	58-72	0"-2"	222509	222530	2509	
<b>Sierra Pickup (1 Ton) - 4WD</b>						
K3500 (w/o stock mounts)	88-98	0"-2"	219526	219200	2526	35
With Pro Comp lift K1044 / K1109		6"	-	219200	-	
<b>S-15 Pickup (Light Duty) - 4WD</b>						
S-15 (Bolts to stock mounts)	83-01	0"-2"	-	219200	-	33
S-15 (w/o stock mounts)	83-01	0"-2"	219526	219200	2526	
<b>Suburban (1/2 Ton) - 2WD</b>						
K1500 (w/o stock mounts)	92-99	0"-2"	219526	219200	2526	35
K-10 (Bolts to stock mounts)	73-87	0"-2"	-	224000	-	
<b>Suburban / Yukon XL (3/4 Ton) - 4WD</b>						
K2500HD (Bolts into stock location)	99-10	0"-2"	-	220501	-	
Pro Comp lift K1084		6"	-	220501	-	
Pro Comp lift K1051		6"	-	219200	-	
K2500 (w/o stock mounts)	88-98	0"-2"	219526	219200	2526	35
With Pro Comp lift K1044 / K1109		6"	-	219200	-	
K-20 (Bolts to stock mounts)	73-87	0"-2"	-	224000	-	
K-20	58-72	0"-2"	222509	222530	2509	
<b>Yukon - 4WD</b>						
K1500 (w/o stock mounts)	95-99	0"-2"	219526	219200	2526	35
With Pro Comp lift K1047 / K1048		6"	-	217513	-	
<b>GMC - Dual Steering Stabilizers</b>						
<b>Jimmy (Full Size) - 4WD</b>						
K5, V5 (Leaf Spring Front)	67-91	0"-6"	220561	220230	2561	

**Notes:**

- (33) Tie rod must have factory hole for stabilizer to fit. (35) For stock height vehicles. Will not work with Pro Comp 6" Lift.
- (37) Will not fit on some late model Dodge full size (38) Will not fit Ford vehicles with factory high rider package or vehicles with off-set Pitman arm.
- (39) Factory quad shock lower mount required to mount stabilizer kit.
- (40) Will fit Ford vehicles with factory high rider package and vehicles with off-set Pitman arm more than 1.25" off-set.

## GMC

Application	Year	Lift Height	Complete Kit	Shock (Cyl only)	Bracket Only	Notes:
Sierra Pickup (1/2 Ton) - 4WD						
K5, V5 (Leaf Spring Front)	67-91	0"-6"	220561	220230	2561	
Sierra Pickup (3/4 Ton) - 4WD						
K20 (Leaf Spring Front)	67-91	0"-6"	220561	220230	2561	
Suburban (1/2 Ton) - 4WD						
K5, V5 (Leaf Spring Front)	67-91	0"-6"	220561	220230	2561	
Suburban (3/4 Ton) - 4WD						
K20 (Leaf Spring Front)	73-91	0"-6"	220561	220230	2561	

## Honda

Application	Year	Lift Height	Complete Kit	Shock (Cyl only)	Bracket Only	Notes:
<b>HONDA - Single Steering Stabilizers</b>						
Passport - 2WD						
Passport	94-97	0"	220508	220230	2508	

## International Harvester

Application	Year	Lift Height	Complete Kit	Shock (Cyl only)	Bracket Only	Notes:
<b>INTERNATIONAL HARVESTER - Single Steering Stabilizer</b>						
Pickups (1/2, 3/4, 1 Ton) - 4WD						
Pickup, Travelall 150/ 200 Series	60-75	0"-1"	222509	222530	2509	
Pickups (1/2, 3/4, 1 Ton) - 2WD						
Pickup, Travelall 150/ 200 Series	59-75	0"-1"	220508	220230	2508	
Scout - 4WD						
Scout II, Terra, Traveller	69-81	0"-1"	222509	222530	2509	
Scout 80, 800 A, B, C Series	61-68	0"-1"	220508	220230	2508	

## Isuzu

Application	Year	Lift Height	Complete Kit	Shock (Cyl only)	Bracket Only	Notes:
<b>ISUZU - Single Steering Stabilizer</b>						
Amigo - 4WD						
Amigo	89-97	0"-1"	220508	220230	2508	
Pickup - 4WD						
Pickup	89-91	0"-1"	220508	220230	2508	
Rodeo - 4WD						
Rodeo	89-97	0"-1"	220508	220230	2508	
Trooper - 4WD						
Trooper	84-90	0"-1"	220508	220230	2508	
Trooper II - 4WD						
Trooper II	84-90	0"-1"	220508	220230	2508	

**Notes:**

- (33) Tie rod must have factory hole for stabilizer to fit. (35) For stock height vehicles. Will not work with Pro Comp 6" Lift.
- (37) Will not fit on some late model Dodge full size (38) Will not fit Ford vehicles with factory high rider package or vehicles with off-set Pitman arm.
- (39) Factory quad shock lower mount required to mount stabilizer kit.
- (40) Will fit Ford vehicles with factory high rider package and vehicles with off-set Pitman arm more than 1.25" off-set.

# SUSPENSION STEERING STABILIZERS

## Jeep

Application	Year	Lift Height	Complete Kit	Shock (Cyl only)	Bracket Only	Notes:
<b>JEEP - Single Steering Stabilizer</b>						
Cherokee SJ/ XJ - 2WD/ 4WD						
Cherokee XJ (Bolts to stock mounts)	84-01	0"-4"	-	219200	-	
CJ Series - 4WD						
CJ5/ CJ6/ CJ7/ CJ8/ CJ10 (Bolts to stock mounts)	76-86	0"-4"	-	217510	-	
CJ2A/ CJ3A/ CJ3B	41-86	0"-3"	220508	220230	2508	
Grand Cherokee ZJ - 2WD/ 4WD						
Grand Cherokee ZJ (Bolts to stock mounts)	84-98	0"-4"	-	219200	-	
Grand Wagoneer - 2WD/ 4WD						
Grand Wagoneer	74-91	0"-3"	-	217510	-	
Jeepster/ Commando/ Utility Wagon 4WD						
Jeepster/ Commando	66-73	0"-3"	220508	220230	2508	
Utility Wagon	47-63	0"-3"	222509	222530	2509	
M-Series Military Jeep - 4WD						
MB/ MB38/ M38A1	41-68	0"-3"	220508	220230	2508	
Pickup J Series - 2WD/ 4WD						
Comanche MJ	86-92	0"-4"	-	219200	-	
J10/ J20 (Bolts to stock mounts)	75-88	0"-3"	-	217510	-	
Gladiator (Exc. Torsion Bar Front)	63-73	0"-3"	222509	222530	2509	
Utility Truck	47-63	0"-3"	222509	222530	2509	
Wagoneer SJ/ XJ - 4WD						
Wagoneer SJ (Full Size)	74-91	0"-3"	-	217510	-	
Wrangler JK Series - 4WD						
Wrangler JK (Incl. Rubicon)(Bolts to stock mounts)	07-16	0"-4"	-	220500	-	
Wrangler JK w/ High Steer (Pro Comp replacement steering knuckle or inverted drag link)	07-16	6"	222580Z	ZX2902	-	
Wrangler LJ Series - 4WD						
Wrangler LJ (Unlimited)(Incl. Rubicon) (Bolts to stock mounts) (Small Cyl)	03-06	0"-4"	-	219200	-	
Wrangler LJ (Unlimited)(Incl. Rubicon) (Bolts to stock mounts) (Large Cyl)	03-06	0"-4"	-	219505	-	
Wrangler LJ (Unlimited)(Incl. Rubicon)	03-06	0"-4"	222579Z	ZX2903	-	
Wrangler TJ Series - 4WD						
Wrangler TJ (Incl. Rubicon) (Bolts to stock mounts) (Small Cyl)	97-06	0"-4"	-	219200	-	
Wrangler TJ (Incl. Rubicon) (Bolts to stock mounts) (Large Cyl)	97-06	0"-4"	-	219505	-	
Wrangler TJ (Incl. Rubicon)	97-06	0"-4"	222579Z	ZX2903	-	
Wrangler YJ Series - 4WD						
Wrangler YJ (Bolt to stock mounts)	86-96	0"-4"	-	219200	-	
<b>JEEP - Dual Steering Stabilizers</b>						
Wrangler JK						
Wrangler JK (Incl. Rubicon)	07-16	0"-6"	222586	217510	-	

**Notes:**

- (33) Tie rod must have factory hole for stabilizer to fit. (35) For stock height vehicles. Will not work with Pro Comp 6" Lift.
- (37) Will not fit on some late model Dodge full size (38) Will not fit Ford vehicles with factory high rider package or vehicles with off-set Pitman arm.
- (39) Factory quad shock lower mount required to mount stabilizer kit.
- (40) Will fit Ford vehicles with factory high rider package and vehicles with off-set Pitman arm more than 1.25" off-set.



## Land Rover

Application	Year	Lift Height	Complete Kit	Shock (Cyl only)	Bracket Only	Notes:
<b>LAND ROVER - Single Steering Stabilizer</b>						
Defender/ Series I, II, III						
Land Rover/ Defender (90", 110", 121", 130" WB)	84-92	0"-3"	-	224010	-	
Series II/ III (109" WB) (Incl. 1 ton)	59-81	0"-3"	220520	220230	2520	
Discovery						
Series I	89-96	0"-3"	-	222530	-	
Range Rover Classic						
Range Rover (W/O Air suspension) (100" WB)	84-92	0"-3"	-	220230	-	

## Mazda

Application	Year	Lift Height	Complete Kit	Shock (Cyl only)	Bracket Only	Notes:
<b>MAZDA - Single Steering Stabilizer</b>						
Pickup B-Series - 4WD						
B3000/ B4000	94-97	0"-1"	220535	220230	2535	
B2600 (O.E. stud on passenger frame)	87-93	0"-1"	-	220210	-	
B2600	87-93	2.5"	220537	220230	2537	
Pickup B-Series - 2WD						
B2300/ B3000	94-97	0"-1"	220535	220230	2535	

## Mitsubishi

Application	Year	Lift Height	Complete Kit	Shock (Cyl only)	Bracket Only	Notes:
<b>MITSUBISHI - Single Steering Stabilizer</b>						
Montero / Pajero - 2WD/ 4WD						
Montero (4 & 6 Cyl)	89-91	0"-3"	220508	220230	2508	

**Notes:**

- (33) Tie rod must have factory hole for stabilizer to fit. (35) For stock height vehicles. Will not work with Pro Comp 6" Lift.
- (37) Will not fit on some late model Dodge full size (38) Will not fit Ford vehicles with factory high rider package or vehicles with off-set Pitman arm.
- (39) Factory quad shock lower mount required to mount stabilizer kit.
- (40) Will fit Ford vehicles with factory high rider package and vehicles with off-set Pitman arm more than 1.25" off-set.

# SUSPENSION STEERING STABILIZERS

## Nissan

Application	Year	Lift Height	Complete Kit	Shock (Cyl only)	Bracket Only	Notes:
<b>Nissan - Single Steering Stabilizer</b>						
Pathfinder/ Patrol - 2WD						
Pathfinder (w/o Sway bar)	87-95	0"-1"	220533	220230	2533	
Pathfinder / Patrol - 4WD						
Patrol GR (Y60)	89-94	0"-1"	-	220230	-	
Patrol R (Inc Short, Long, Diesel)	84-88	0"-1"	-	219200	-	
Pathfinder	87-95	0"-1"	220533	220230	2533	
Pickup - 2WD						
Pickup (w/o Sway bar)	87-97	0"-2"	220533	220230	2533	
Pickup - 4WD						
Pickup	87-97	0"-2"	220533	220230	2533	

## Suzuki

Application	Year	Lift Height	Complete Kit	Shock (Cyl only)	Bracket Only	Notes:
<b>SUZUKI - Single Steering Stabilizer</b>						
Jimny (LJ/ SJ) - 4WD						
LJ413/ LJ50/ SJ10/ SJ410/ SJ413	82-87	0"-1"	220508	220230	2508	
LJ10/ SJ10	78-88	0"-1"	220508	220230	2508	
Samuri - 4WD						
Samuri JL/ JX	85-90	0"-1"	220508	220230	2508	

## Toyota

Application	Year	Lift Height	Complete Kit	Shock (Cyl only)	Bracket Only	Notes:
<b>TOYOTA - Single Steering Stabilizer</b>						
4Runner - 4WD						
4Runner (Bolts to stock mounts)	86-95	0"-4"	-	219500	-	
4Runner	86-95	0"-4"	220504	220230	2504	
4Runner	84-85	0"-4"	222525	222530	2525	
Landcruiser - 4WD						
J60/ 61/ 62 (Station Wagon)	81-89	0"-1"	-	224000	-	
J25 / 40 / 43 / 55	55-84	0"-1"	220520	220230	2520	
Pickup - 4WD						
Pickup (Bolts to stock mounts)	86-95	0"-4"	-	219500	-	
Pickup	86-95	0"-4"	220504	220230	2504	
Pickup	84-85	0"-4"	222525	222530	2525	
Pickup	79-83	0"-4"	220525	222530	2525	
<b>TOYOTA - Dual Steering Stabilizers</b>						
4Runner - 4WD						
4Runner	86-95	0"-4"	220577	220230	2577	
4Runner	84-85	0"-4"	220562	220230	2562	
Pickup - 4WD						
Pickup	86-95	0"-4"	220577	220230	2577	
Pickup	84-85	0"-4"	220562	220230	2562	

### Notes:

- (33) Tie rod must have factory hole for stabilizer to fit. (35) For stock height vehicles. Will not work with Pro Comp 6" Lift.  
 (37) Will not fit on some late model Dodge full size (38) Will not fit Ford vehicles with factory high rider package or vehicles with off-set Pitman arm.  
 (39) Factory quad shock lower mount required to mount stabilizer kit.  
 (40) Will fit Ford vehicles with factory high rider package and vehicles with off-set Pitman arm more than 1.25" off-set.

# How to Use the Suspension Kit Application Guide

- 1 Product Bar**  
Short description of the product, including lift height and key differences between similar kits.
- 2 Application Bar**  
Specific engine and/or cab configurations for the Model vehicle each products fit.
- 3 Consists of...**  
All of the major components included in the kit.
- 4 Complete Kit**  
Complete kit listing provides a simple, all inclusive means to order our products.
- 5 Kit Components**  
Individual components that make up the complete kit.
- 6 Tire/Wheel Specs**  
Quick reference for everything from maximum tire and wheel range to lug nut sizes and specific Pro Comp lug nut kits.
- 7 Footnotes**  
Footnotes can be found either directly on each page or at least on each spread.

## K2XX Silverado/Sierra 1500 Pickup — 4WD/2WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes	
K2XX Silverado/ Sierra 1500 Pickup							
6" Lift							
14-15	Steering Knuckles Drop Crossmembers Diff Drop Brackets Diff Skid Plate Sway Bars Rear 5" Bumpers Rear U-Bolts Rear Add-A-Leafs	<b>K1154B</b> Kit w/Front Strut Spacers and Rear ES Shocks OR <b>K1154BP</b> Kit w/Front Strut Spacers and Rear Pro Runner Shocks OR <b>K1154B</b> Kit w/Front Strut Spacers and Front / Rear Pro Runner Shocks OR <b>K1154BPX</b> Kit w/Front MX2.75 Coilovers and Rear Pro Runner Shocks OR <b>K1154BMX</b> Kit w/Front MX2.75 Coilovers and Rear MX-6 Shocks	1 1 1 1 1 OR 1 1 OR 1 1 OR 1 1 OR 1 1	51014B-1 51014B-2 51014B-3 51014B-4 51099B-5 51014B-6 51007BP-6 51007BP-6 ZX2108 51007BPX-6 51007BPX-7 51007BMX-6 51007BMX-7	Kit Box Kit Box Kit Box Kit Box Kit Box Front Spacers/ Rear ES9000 Shocks Spacers / Rear Pro Runner Shocks Front Spacers / Rear Pro Runner Shocks Front Pro Runner SS Strut MX2.75 Coilovers/ Rear Pro Runner Shocks MX2.75 Coilovers/ Rear Pro Runner Shocks MX2.75 Coilovers / Rear MX-6 Shocks MX2.75 Coilovers / Rear MX-6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 9.5" Backspacing 4.5" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	1 2 2 3 7

# SUSPENSION KITS

## K2XX Silverado/Sierra 1500 Pickup — 4WD/2WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>K2XX Silverado/ Sierra 1500 Pickup - w factory steel suspension - 4WD</b>						
<b>6" Lift</b>						
14-16	Steering Knuckles Drop Crossmembers Differential Skid Plate Differential Drop Brackets Sway Bar Drops Related Hardware Rear 5" Blocks Rear U-Bolts Rear Add-A-Leafs	<b>K1164B</b> Kit W/ Front Strut Spacers and Rear ES Shocks	1 2 1 1 1 PLUS 1	51064B-1 Kit Box 51014B-2 Kit Box 51014B-3 Kit Box 51064B-4 Kit Box 51009B-5 Kit Box 51064B-6 Front Spacers/ Rear ES9000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 9.5" Wheel 4.5" - 5" Backspace 6 x 5.5" Wheel Bolt 83 Pattern 14mm x 1.5 Wheel Bolt PXA26144 Code Lug Nut Size Lug Nut Kit	2 3 4 5 6 7 8
<b>K2XX Silverado/ Sierra 1500 Pickup - w factory aluminum suspension - 4WD</b>						
<b>6" Lift</b>						
14-16	Steering Knuckles Drop Crossmembers Differential Skid Plate Differential Drop Brackets Sway Bar Drops Related Hardware Rear 5" Blocks Rear U-Bolts Rear Add-A-Leafs	<b>K1165B</b> Kit W/ Front Strut Spacers and Rear ES Shocks	1 2 1 1 1 PLUS 1	51064B-1 Kit Box 51015B-2 Kit Box 51014B-3 Kit Box 51064B-4 Kit Box 51009B-5 Kit Box 51064B-6 Front Spacers/ Rear ES9000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 9.5" Wheel 4.5" - 5" Backspace 6 x 5.5" Wheel Bolt 83 Pattern 14mm x 1.5 Wheel Bolt PXA26144 Code Lug Nut Size Lug Nut Kit	2 3 4 5 6 7 8
<b>K2XX Silverado/ Sierra 1500 Pickup - w factory steel suspension - 4WD / 2WD</b>						
<b>6" Lift</b>						
14-16	Steering Knuckles Drop Crossmembers Diff Drop Brackets Diff Skid Plate Sway Bar Drops Related Hardware Rear 5" Blocks Rear U-Bolts Rear Add-A-Leafs	<b>K1154B</b> Kit w/Front Strut Spacers and Rear ES Shocks OR <b>K1154BP</b> Kit w/Front Strut Spacers and Rear Pro Runner Shocks OR <b>K1154BPS</b> Kit w/Front Strut Spacers and Front / Rear Pro Runner Shocks OR <b>K1154BPX</b> Kit w/Front MX2.75 Coilovers and Rear Pro Runner Shocks	1 1 1 1 1 PLUS 1 OR 1 OR 1 2 OR 1 1 OR 1	51014B-1 Kit Box 51014B-2 Kit Box 51014B-3 Kit Box 51014B-4 Kit Box 51099B-5 Kit Box 51014B-6 Front Spacers/ Rear ES9000 Shocks 51007BP-6 Front Spacers / Rear Pro Runner Shocks 51007BP-6 Front Spacers / Rear Pro Runner Shocks ZX2108 Front Pro Runner SS Strut 51007BPX-6 MX2.75 Coilovers/ Rear Pro Runner Shocks 51007BPX-7 MX2.75 Coilovers/ Rear Pro Runner Shocks 51007BMX-6 MX2.75 Coilovers / Rear MX-6 Shocks 51007BMX-7 MX2.75 Coilovers / Rear MX-6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 9.5" Backspace 4.5" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	1 2 3 4 5 7 8

CHEVY / GMC

OPTIONS	
51104	Stainless Steel Skid Plate
51003B	K2XX w/ Factory Steel Suspension
51004B	K2XX w/ Factory Alum Suspension

OPTIONS	
91-10416B	Magnetic Ride Control Shock Brackets
51257	"CV Style Front Driveshaft - 36.81" (1)
51255	Driveline Shim Kit - 2Pc Rr Driveshaft (5)

- (1) A replacement CV front driveshaft is recommended for extended high speed use in 4x4 high or AUTO 4x4. Use p/n 51257 - (measures 36.81" from U-joint center to end of slip joint).
- (2) Must use 17" or larger diameter rims. 17" rims not to exceed 4.625" backspacing. 18" to 20" rims not to exceed 5.00" backspacing.
- (3) 14-16 Models with Magnetic Ride Control will require PN 91-10416B. Do not install K1158B / K1159B systems on vehicles with Magnetic Ride Control.
- (4) 2wd Standard Cab or Double Cab with Standard bed and one-piece aluminum driveshaft will require a custom drive shaft and cross member modification.
- (5) Vehicles with 2 Pc rear driveshaft - Use shim kit PN 51255 to reduce launch vibration and/or high speed driveline vibration.
- (6) K1164B / K1165B feature new design front differential mounts to reduce noise, vibration levels for extended 4wd operation.
- (7) Vehicle will require alignment after kit is installed.
- (8) Hubcentric rings, PN PXAHR1081, are recommended for use of Pro Comp rims on 14-16 GM 1500 vehicles. Use HR1082 with push through caps.

## K2XX Silverado/Sierra 1500 Pickup — 4WD/2WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>K2XX Silverado/ Sierra 1500 Pickup - w factory aluminum suspension- 4WD / 2WD</b>						
<b>6" Lift</b>						
14-16	Steering Knuckles Drop Crossmembers Diff Drop Brackets Diff Skid Plate Sway Bar Drops Related Hardware Rear 5" Blocks Rear U-Bolts Rear Add-A-Leafs	<b>K1155B</b> Kit w/Front Strut Spacers and Rear ES Shocks OR <b>K1155BP</b> Kit w/Front Strut Spacers and Rear Pro Runner Shocks OR <b>K1155BPS</b> Kit w/Front Strut Spacers and Front / Rear Pro Runner Shocks OR <b>K1155BPX</b> Kit w/Front MX2.75 Coilovers and Rear Pro Runner Shocks	1 1 1 1 1 PLUS 1 OR 1 OR 1 2 OR 1 1 OR 1	51014B-1 Kit Box 51015B-2 Kit Box 51014B-3 Kit Box 51014B-4 Kit Box 51099B-5 Kit Box 51014B-6 Front Spacers/ Rear ES9000 Shocks 51007BP-6 Front Spacers / Rear Pro Runner Shocks 51007BP-6 Front Spacers / Rear Pro Runner Shocks ZX2108 Front Pro Runner SS Strut 51007BPX-6 MX2.75 Coilovers/ Rear Pro Runner Shocks 51007BPX-7 MX2.75 Coilovers/ Rear Pro Runner Shocks 51007BMX-6 MX2.75 Coilovers / Rear MX-6 Shocks 51007BMX-7 MX2.75 Coilovers / Rear MX-6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 9.5" Backspace 4.5" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	1 2 3 4 5 7 8
<b>K2XX Silverado/ Sierra 1500 Pickup - w factory steel suspension - 4WD / 2WD</b>						
<b>4" Lift</b>						
14-16	Steering Knuckles Drop Crossmembers Differential Skid Plate Diff Drop Brackets Sway Bar Drops Related Hardware Rear 3" Blocks Rear U-Bolts Rear Add-A-Leafs	<b>K1158B</b> Kit w/Front Strut Spacers and Rear ES Shocks	1 1 1 1 1 PLUS 1	51018B-1 Kit Box 51029B-2 Kit Box 51029B-3 Kit Box 51029B-4 Kit Box 51009B-5 Kit Box 51029B-6 Front Spacers/ Rear ES9000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 9.5" Backspace 4.5" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	1 3 5 7 8
<b>K2XX Silverado/ Sierra 1500 Pickup - w factory aluminum suspension - 4WD / 2WD</b>						
<b>4" Lift</b>						
14-16	Steering Knuckles Drop Crossmembers Differential Skid Plate Diff Drop Brackets Sway Bar Drops Related Hardware Rear 3" Blocks Rear U-Bolts Rear Add-A-Leafs	<b>K1159B</b> Kit w/Front Strut Spacers and Rear ES Shocks	1 1 1 1 1 PLUS 1	51018B-1 Kit Box 51030B-2 Kit Box 51029B-3 Kit Box 51029B-4 Kit Box 51009B-5 Kit Box 51029B-6 Front Spacers/ Rear ES9000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 9.5" Backspace 4.5" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	1 3 5 7 8

CHEVY / GMC

OPTIONS	
Front Skid Plate	
51104	Stainless Steel Skid Plate
Uniball Upper A Arms	
51003B	K2XX w/ Factory Steel Suspension
51004B	K2XX w/ Factory Alum Suspension

OPTIONS	
Magnetic Ride Control Shock Brackets	
91-10416B	Magnetic Ride Control Shock Brackets
Driveline Options	
51257	"CV Style Front Driveshaft - 36.81" (1)
51255	Driveline Shim Kit - 2Pc Rr Driveshaft (5)

- (1) A replacement CV front driveshaft is recommended for extended high speed use in 4x4 high or AUTO 4x4. Use p/n 51257 - (measures 36.81" from U-joint center to end of slip joint.).
- (2) Must use 17" or larger diameter rims. 17" rims not to exceed 4.625" backspacing. 18" to 20" rims not to exceed 5.00" backspacing.
- (3) 14-16 Models with Magnetic Ride Control will require PN 91-10416B
- (4) 2wd Standard Cab or Double Cab with Standard bed and one-piece aluminum driveshaft will require a custom drive shaft and cross member modification.
- (5) Vehicles with 2 Pc rear driveshaft - Use shim kit PN 51255 to reduce launch vibration and/or high speed driveline vibration.
- (7) Vehicle will require alignment after kit is installed.
- (8) Hubcentric rings, PN PXAHR1081, are recommended for use of Pro Comp rims on 14-16 GM 1500 vehicles. Use HR1082 with push through caps.

# SUSPENSION KITS

## K2XX Silverado/Sierra 1500 Pickup — 4WD/2WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>GMT900 Silverado/ Sierra 1500 Pickup - w factory steel suspension - 4WD / 2WD</b>						
<b>4" LIFT - Upper Arms / Strut spacers</b>						
14-16	Upper Control Arms Front Strut Spacers Differential Drop Spacers 3" Rear Lift Blocks Rear U-Bolts Rear Shocks	<b>K1153B</b> Kit W/ Upper Control Arms and Front Strut Spacers	1	51013B Kit Box	Max Tire Size Wheel Diameter Wheel Width Backspace Bolt Pattern Bolt Code Lug Nut Size Lug Nut Kit	33" x 12.50" 17" + 8" - 9.5" 4.5" - 5" 6 x 5.5" 83 14mm x 1.5 PXA26144 3 7
<b>K2XX Silverado/ Sierra 1500 Pickup - w factory aluminum suspension - 4WD / 2WD</b>						
<b>4" LIFT - Upper Arms / Strut spacers</b>						
14-16	Upper Control Arms Front Strut Spacers Differential Drop Spacers 3" Rear Lift Blocks Rear U-Bolts Rear Shocks	<b>K1151B</b> Kit W/ Upper Control Arms and Front Strut Spacers	1	51012B Kit Box	Max Tire Size Wheel Diameter Wheel Width Backspace Bolt Pattern Bolt Code Lug Nut Size Lug Nut Kit	33" x 12.50" 17" + 8" - 9.5" 4.5" - 5" 6 x 5.5" 83 14mm x 1.5 PXA26144 3 7
<b>K2XX Silverado/ Sierra 1500 Pickup - w factory steel suspension - 4WD / 2WD</b>						
<b>2.5" LIFT - Uniball Upper Arms / Black Series Coil Overs</b>						
14-16	Uniball Upper A Arms Black Series Front Coil Over Black Series 2.0 Rear Shocks	<b>51103K</b> Kit W/ Uniball Upper A Arms Black Series Front Coil Over and Black Series 2.0 Rear Shocks	1 2 2	51003B Uniball Upper A Arms ZX4002 P2.75 Coilover ZX3020 P2 Series shock	Max Tire Size Wheel Diameter Wheel Width Backspace Bolt Pattern Bolt Code Lug Nut Size Lug Nut Kit	32" x 12.50" 17" + 8" - 9.5" 4.5" - 5" 6 x 5.5" 83 14mm x 1.5 PXA26144 3 7
<b>K2XX Silverado/ Sierra 1500 Pickup - w factory steel suspension - 4WD / 2WD</b>						
<b>2.5" LIFT - Uniball Upper Arms / Pro Runner Struts</b>						
14-16	Uniball Upper A Arms Pro Runner SS Monotube Front Struts Pro Runner Rear Shocks	<b>51203K</b> Kit W/ Uniball Upper A Arms Front / Rear Pro Runner Shocks	1 2 2	51003B Uniball Upper A Arms ZX2108 Pro Runner SS Monotube Strut ZX2001 Pro Runner Monotube Shock	Max Tire Size Wheel Diameter Wheel Width Backspace Bolt Pattern Bolt Code Lug Nut Size Lug Nut Kit	32" x 12.50" 17" + 8" - 9.5" 4.5" - 5" 6 x 5.5" 83 14mm x 1.5 PXA26144 3 7

CHEVY / GMC

### OPTIONS

Front Skid Plate	
51104	Stainless Steel Skid Plate
Uniball Upper A Arms	
51003B	K2XX w/ Factory Steel Suspension
51004B	K2XX w/ Factory Alum Suspension

### OPTIONS

Magnetic Ride Control Shock Brackets	
91-10416B	Magnetic Ride Control Shock Brackets
Driveline Options	
51257	"CV Style Front Driveshaft - 36.81" (1)
51255	Driveline Shim Kit - 2Pc Rr Driveshaft (5)

- (1) A replacement CV front driveshaft is recommended for extended high speed use in 4x4 high or AUTO 4x4. GM vehicles with selectable 4x4 high and Auto 4x activation (Auto Trac) and a 6spd automatic transmission or vehicles with All Wheel Drive will use p/n 51257 - (measures 36.81" from U-joint center to end of slip joint.).
- (2) 17" rims not to exceed 4.625" backspacing.
- (3) Must use 17" or larger diameter rims. (4) 14-16 Models with Magnetic Ride Control will require PN 91-10416B
- (5) Vehicles with 2 Pc rear driveshaft - shim kit 51255 may be required to reduce launch vibration and/or high speed driveline vibration.
- (7) Vehicle will require alignment after kit is installed.
- (8) Hubcentric rings are recommended for 99-16 GM 1500 vehicles

## K2XX Silverado/Sierra 1500 Pickup — 4WD/2WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>K2XX Silverado/ Sierra 1500 Pickup - w factory aluminum suspension - 4WD / 2WD</b>						
<b>2.5" LIFT - Uniball Upper Arms / Black Series Coil Overs</b>						
14-16	Uniball Upper A Arms Black Series Front Coil Over Black Series 2.0 Rear Shocks	<b>51104K</b> Kit W/ Uniball Upper A Arms Black Series Front Coil Over and Black Series 2.0 Rear Shocks	1 2 2	51004B Uniball Upper A Arms ZX4002 P2.75 Coilover ZX3020 P2 Series shock	Max Tire Size 32" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 9.5" Backspace 4.5" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	3 7
<b>K2XX Silverado/ Sierra 1500 Pickup - w factory aluminum suspension - 4WD / 2WD</b>						
<b>2.5" LIFT - Uniball Upper Arms / Pro Runner Struts</b>						
14-16	Uniball Upper A Arms Pro Runner SS Monotube Front Struts Pro Runner Rear Shocks	<b>51204K</b> Kit W/ Uniball Upper A Arms Front / Rear Pro Runner Shocks	1 2 2	51004B Uniball Upper A Arms ZX2108 Pro Runner SS Monotube Strut ZX2001 Pro Runner Monotube Shock	Max Tire Size 32" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 9.5" Backspace 4.5" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	3 7
<b>GM 1500 Silverado/ Sierra 1500 Pickup - 4WD / 2WD</b>						
<b>1.5" Level Lift</b>						
07-16	Front Strut Spacers		63230	Front Strut Spacers	Max Tire Size 32" x 11.50" Wheel Diameter 17" + Wheel Width 8" - 9.5" Backspace 4.5" - 5.25" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	7 8
<b>2.25" Level Lift</b>						
07-16	Front Strut Spacers Front Lower Strut Spacers		63235	Front Strut Spacers	Max Tire Size 32" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 9.5" Backspace 4.5" - 5.25" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	7 8
<b>2" Poly Lift</b>						
07-16	Front Strut Spacers		PLG09105	Front Strut Spacers	Max Tire Size 32" x 11.50" Wheel Diameter 17" + Wheel Width 8" - 9.5" Backspace 4.5" - 5.25" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	7 8

OPTIONS	
Front Coil Over Upgrade	
51207BMX	Stage 1 to Stage 2 Conversion Kit
Level Lift	
63153	Rear Block w/ U-Bolt Kit 3"
63152	Rear Block w/ U-Bolt Kit 2"

OPTIONS	
Front Skid Plate	
51104	Stainless Steel Skid Plate
Uniball Upper A Arms	
51003B	K2XX w/ Factory Steel Suspension
51004B	K2XX w/ Factory Alum Suspension

OPTIONS	
Magnetic Ride Control Shock Brackets	
91-10416B	Magnetic Ride Control Shock Brackets
Driveline Options	
51257	"CV Style Front Driveshaft - 36.81" (1)
51255	Driveline Shim Kit - 2Pc Rr Driveshaft (5)

- (1) A replacement CV front driveshaft is recommended for extended high speed use in 4x4 high or AUTO 4x4. GM vehicles with selectable 4x4 high and Auto 4x activation (Auto Trac) and a 6spd automatic transmission or vehicles with All Wheel Drive will use p/n 51257 - (measures 36.81" from U-joint center to end of slip joint).
- (2) 17" rims not to exceed 4.625" backspacing.
- (3) Must use 17" or larger diameter rims. (4) 14-16 Models with Magnetic Ride Control will require PN 91-10416B
- (5) Vehicles with 2 Pc rear driveshaft - shim kit 51255 may be required to reduce launch vibration and/or high speed driveline vibration.
- (7) Vehicle will require alignment after kit is installed.
- (8) Hubcentric rings are recommended for 99-16 GM 1500 vehicles

# SUSPENSION KITS

## GM T900 Silverado/Sierra 1500 Pickup — 4WD/2WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>GM T900 Silverado/ Sierra 1500 Pickup - Non-Auto Trac - 4WD</b>						
<b>6" LIFT w 5" Rear Blocks</b>						
07-13	Steering Knuckles Drop Crossmembers Diff Drop Brackets Sway Bar Drop Related Hardware Rear 5" Blocks Rear U-Bolts Rear Add-A-Leafs	K1152B Kit W/ Front Strut Spacers and Rear ES Shocks OR K1152BMX Kit W/ Front MX2.75 Coil-overs and Rear MX6 Shocks	1 1 1 1 1 PLUS 1 OR 1 1	51008B-1 Kit Box 51007B-2 Kit Box 51007B-3 Kit Box 51007B-4 Kit Box 51099B-5 Kit Box 51007B-6 Front Spacers/ Rear ES9000 Shocks 51007BMX-6 MX2.75 Coil-overs / Rear MX-6 Shocks 51007BMX-7 MX2.75 Coil-overs / Rear MX-6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 9.5" Backspace 4.5" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	1 3 7 8
<b>GM T900 Silverado/ Sierra 1500 Pickup - Auto Trac - 4WD</b>						
<b>6" LIFT w 4" Rear Blocks</b>						
07-13	Steering Knuckles Drop Crossmembers Diff Drop Brackets Sway Bar Drops Related Hardware Rear 4" Blocks Rear U-Bolts Rear Add-A-Leafs CV Style Front Driveshaft	<b>K1144B</b> Kit W/ Front Strut Spacers and Rear ES Shocks OR <b>K1144BP</b> Kit W/ Front Strut Spacers and Rear Pro Runner Shocks OR <b>K1144BPS</b> Kit W/ Front Strut Spacers and Front / Rear Pro Runner Shocks OR <b>K1144BPX</b> Kit W/ Front MX2.75 Coil-overs and Rear Pro Runner Shocks OR <b>K1144BMX</b> Kit W/ Front MX2.75 Coil-overs and Rear MX-6 Shocks	1 2 1 1 1 1 PLUS 1 OR 1 OR 1 2 OR 1 1 OR 1 1	51017B-1 Kit Box 51007B-2 Kit Box 51007B-3 Kit Box 51007B-4 Kit Box 51099B-5 Kit Box 51246 CV Front Drive shaft 51007B-6 Front Spacers/ Rear ES9000 Shocks 51007BP-6 Front Spacers / Rear Pro Runner Shocks 51007BP-6 Front Spacers / Rear Pro Runner Shocks ZX2002 Front Pro Runner SS Strut 51007BPX-6 MX2.75 Coil-overs/ Rear Pro Runner Shocks 51007BPX-7 MX2.75 Coil-overs/ Rear Pro Runner Shocks 51007BMX-6 MX2.75 Coil-overs / Rear MX-6 Shocks 51007BMX-7 MX2.75 Coil-overs / Rear MX-6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 9.5" Backspace 4.5" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	1 3 7 8

CHEVY / GMC

OPTIONS	
Front Coil Over Upgrade	
51207BMX	Stage 1 to Stage 2 Conversion Kit
Level Lift	
63153	Rear Block w/ U-Bolt Kit 3"
63152	Rear Block w/ U-Bolt Kit 2"
Front Skid Plate	
51104	Stainless Steel Skid Plate

OPTIONS	
Fender Relocation Brackets	
90-6640B	Front inner Fender Relocation Brackets
Magnetic Ride Control Shock Brackets	
91-10416B	Magnetic Ride Control Shock Brackets
Driveline Options	
51249	CV Style Front Driveshaft - 37.81" W/ Differential Brackets
51245	CV Style Front Driveshaft - 36.81" W/ Differential Brackets

- (1) A replacement CV front driveshaft is recommended for extended high speed use in 4x4 high or AUTO 4x4. GM vehicles with selectable 4x4 high and Auto 4x activation (Auto Trac) can use p/n 51249 (measures 37.81" from U-joint center to end of slip joint.) 2010 to current models with a 6spd automatic transmission or vehicles with All Wheel Drive will require p/n 51245 - (measures 36.81" from U-joint center to end of slip joint.). The K1144 / 51017 includes p/n 51256 and required differential brackets.
- (3) 07-13 vehicles must use 17" or larger diameter rims.
- (7) Vehicle will require alignment after kit is installed.
- (8) Hubcentric rings are recommended for 99-13 GM 1500 vehicles.



## GM T900 Silverado/Sierra 1500 Pickup — 4WD/2WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes	
<b>GM T900 Silverado/ Sierra 1500 Pickup - Non-Auto Trac - 4WD / 2WD</b>							
<b>6" LIFT w 4" Rear Blocks</b>							
07-13	Steering Knuckles Drop Crossmembers Diff Drop Brackets Sway Bar Drops Related Hardware Rear 4" Blocks Rear U-Bolts Rear Add-A-Leafs	<b>K1143B</b> Kit W/ Front Strut Spacers and Rear ES Shocks OR <b>K1143BP</b> PLUS Kit W/ Front Strut Spacers and Rear Pro Runner Shocks OR <b>K1143BPS</b> Kit W/ Front Strut Spacers and Front / Rear Pro Runner Shocks OR <b>K1143BPX</b> Kit W/ Front MX2.75 Coil-overs and Rear Pro Runner Shocks OR <b>K1143BMX</b> Kit W/ Front MX2.75 Coil-overs and Rear MX6 Shocks	1 1 1 1 1 PLUS 1 OR 1 OR 1 2 OR 1 1 OR 1	51007B-1 51007B-2 51007B-3 51007B-4 51099B-5 51007B-6 51007BP-6 51007BP-6 ZX2002 51007BPX-6 51007BPX-7 51007BMX-6 51007BMX-7	Kit Box Kit Box Kit Box Kit Box Kit Box Front Spacers/ Rear ES9000 Shocks Front Spacers / Rear Pro Runner Shocks Front Spacers / Rear Pro Runner Shocks Front Pro Runner SS Strut MX2.75 Coil-overs/ Rear Pro Runner Shocks MX2.75 Coil-overs/ Rear Pro Runner Shocks MX2.75 Coil-overs / Rear MX-6 Shocks MX2.75 Coil-overs / Rear MX-6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 9.5" Backspace 4.5" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	1 3 7 8

OPTIONS	
Front Coil Over Upgrade	
51207BMX	Stage 1 to Stage 2 Conversion Kit
Level Lift	
63153	Rear Block w/ U-Bolt Kit 3"
63152	Rear Block w/ U-Bolt Kit 2"
Front Skid Plate	
51104	Stainless Steel Skid Plate

OPTIONS	
Fender Relocation Brackets	
90-6640B	Front inner Fender Relocation Brackets
Magnetic Ride Control Shock Brackets	
91-10416B	Magnetic Ride Control Shock Brackets
Driveline Options	
51249	CV Style Front Driveshaft - 37.81" W/ Differential Brackets
51245	CV Style Front Driveshaft - 36.81" W/ Differential Brackets

- (1) A replacement CV front driveshaft is recommended for extended high speed use in 4x4 high or AUTO 4x4. GM vehicles with selectable 4x4 high and Auto 4x activation (Auto Trac) can use p/n 51249 (measures 37.81" from U-joint center to end of slip joint.) 2010 to current models with a 6spd automatic transmission or vehicles with All Wheel Drive will require p/n 51245 - (measures 36.81" from U-joint center to end of slip joint.). The K1144 / 51017 includes p/n 51256 and required differential brackets.
- (3) 07-13 vehicles must use 17" or larger diameter rims.
- (7) Vehicle will require alignment after kit is installed.
- (8) Hubcentric rings are recommended for 99-13 GM 1500 vehicles.

# SUSPENSION KITS

## GM T900 Silverado/Sierra 1500 Pickup — 4WD/2WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>GMT900 Silverado/ Sierra 1500 Pickup - 4WD / 2WD</b>						
<b>4" LIFT - Upper Arms / Strut spacers</b>						
07-13	Upper Control Arms Front Strut Spacers Differential Drop Spacers 3" Rear Lift Blocks Rear U-Bolts Rear Shocks	<b>K1153B</b> Kit W/ Upper Control Arms and Front Strut Spacers	1 2	51013B Kit Box 927543 Rear ES9000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 9.5" Backspace 4.5" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	3 7
<b>GMT900 Silverado/ Sierra 1500 Pickup - w factory steel suspension - 4WD / 2WD</b>						
<b>2.5" LIFT - Uniball Upper Arms / Black Series Coil Overs</b>						
07-13	Uniball Upper A Arms Black Series Front Coil Over Black Series 2.0 rear shocks	<b>51103K</b> Kit W/ Uniball Upper A Arms Black Series Front Coil Over and Black Series 2.0 rear shocks	1 2 2	51003B Uniball Upper A Arms ZX4002 P2.75 Coilover ZX3020 P2 Series shock	Max Tire Size 32" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 9.5" Backspace 4.5" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	3 7
<b>GM T900 Silverado/ Sierra 1500 Pickup - 4WD / 2WD</b>						
<b>2.5" LIFT - Uniball Upper Arms / Pro Runner Shocks</b>						
07-13	Uniball Upper A Arms Pro Runner SS Monotube Front Struts Pro Runner rear shocks	<b>51213K</b> Kit W/ Uniball Upper A Arms Front / Rear Pro Runner Shocks	1 2 2	51003B Uniball Upper A Arms ZX2002 Pro Runner SS Monotube Strut ZX2001 Pro Runner Monotube Shock	Max Tire Size 32" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 9.5" Backspace 4.5" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	3 7

### OPTIONS

#### Front Coil Over Upgrade

51207BMX Stage 1 to Stage 2 Conversion Kit

#### Level Lift

63153 Rear Block w/ U-Bolt Kit 3"

63152 Rear Block w/ U-Bolt Kit 2"

#### Front Skid Plate

51104 Stainless Steel Skid Plate

### OPTIONS

#### Fender Relocation Brackets

90-6640B Front inner Fender Relocation Brackets

#### Magnetic Ride Control Shock Brackets

91-10416B Magnetic Ride Control Shock Brackets

#### Driveline Options

51249 CV Style Front Driveshaft - 37.81" W/ Differential Brackets

51245 CV Style Front Driveshaft - 36.81" W/ Differential Brackets

- (1) A replacement CV front driveshaft is recommended for extended high speed use in 4x4 high or AUTO 4x4. GM vehicles with selectable 4x4 high and Auto 4x activation (Auto Trac) can use p/n 51249 (measures 37.81" from U-joint center to end of slip joint.) 2010 to current models with a 6spd automatic transmission or vehicles with All Wheel Drive will require p/n 51245 - (measures 36.81" from U-joint center to end of slip joint.). The K1144 / 51017 includes p/n 51256 and required differential brackets.
- (3) 07-13 vehicles must use 17" or larger diameter rims.
- (7) Vehicle will require alignment after kit is installed.
- (8) Hubcentric rings are recommended for 99-13 GM 1500 vehicles.



# SUSPENSION KITS

## GM Silverado/ Sierra 1500 Pickup — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>GM Silverado/ Sierra 1500 Pickup - Non-Auto Trac</b>						
<b>6" LIFT - Bracket System</b>						
99-07	Upper A-Arm Drop Brackets Drop Crossmembers Diff Drop Brackets Sway Bar Links Related Hardware Rear 4" Blocks Rear U-Bolts Rear Add-A-Leafs	<b>K1057B</b> Kit w/ES Shocks OR <b>K1057BP</b> Kit w/Pro Runner Shocks OR <b>K1057BMX</b> Kit w/MX6 Shocks	1 1 1 1 PLUS 1 OR 1 OR 2 2	51099B-1 Kit Box 51099B-2 Kit Box 51099B-3 Kit Box 51099B-5 Kit Box 51099B-4 Front / Rear ES9000 Shocks 51099BP-4 Front / Rear Pro Runner Shocks MX6019 Front MX6 Shocks MX6003 Rear MX6 Shocks Wheel / Ti	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 9.5" Backspace 4" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	1 3 5 7 8
<b>GM Silverado/ Sierra 1500 Pickup - Auto Trac</b>						
<b>6" LIFT - Bracket System</b>						
99-07	Upper A-Arm Drop Brackets Drop Crossmembers Diff Drop Brackets Sway Bar Links Related Hardware Rear 4" Blocks Rear U-Bolts Rear Add-A-Leafs CV Style Front Driveshaft	<b>K1056B</b> Kit w/ES Shocks OR <b>K1056BP</b> Kit w/Pro Runner Shocks OR <b>K1056BMX</b> Kit w/MX6 Shocks	1 1 1 1 PLUS 1 OR 1 OR 2 2	51099B-1 Kit Box 51099B-2 Kit Box 51099B-3 Kit Box 51099B-5 Kit Box 51256 CV Front Drive shaft 51099B-4 Front / Rear ES9000 Shocks 51099BP-4 Front / Rear Pro Runner Shocks MX6019 Front MX6 Shocks MX6003 Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 9.5" Backspace 4" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	1 3 5 7 8

OPTIONS	Notes:
Multiple Shock Mount Kit - 6" Lift	
51297B Shock Mount Kit - No Shocks	5,6
Multiple Shock Kit - Shock Options 6" Lift	
320500 ES3000	6
920500 ES9000	6
MX6088 MX6 Non-Reservoir	6
MX6064R MX6 Reservoir	6

OPTIONS	Notes:
Reservoir Mounting Kits - Stainless	
63012 2" Body to 2" Body	6
63013 2" Body to 1.5" Hoop Tube	6
Reservoir Mounting Kits - Aluminum	
63016 MX6R Body to MX6R Reservoir	6
63017 MX6R Body to 1.5" Hoop Tube	6
Driveline Options - 6 Lift	
51256 CV Style Front Driveshaft 37.81"	1
51257 CV Style Front Driveshaft 36.81"	1

OPTIONS	Notes:
Front Skid Plate - 6" Lift	
51199 Stainless Steel Skid Plate	
Traction Bars 6" Lift	
71000B Rear Traction Bars - Pair	
71199B Rear Traction Bar Mounting Kit	
Sway Bar End Links - K1056 / K1057	
91-6100B Sway Bar End Links	
Level Lift	
63305 Tie Rod Reinforcement Kit	9
63201 Block w U-Bolt Kit 1"	
63202 Block w U-Bolt Kit 2"	

- (1) A replacement CV front driveshaft is recommended for extended high speed use in 4x4 high or AUTO 4x4. GM vehicles with push button 4x4 high activation (Auto Trac) use 51256 (measures 37.81" from U-joint center to end of slip joint.) GM vehicles with All Wheel Drive will require 51257 (measures 36.81" from U-joint center to end of slip joint.)
- (3) 00-04 vehicles must use 16" or larger diameter rims. 05-13 vehicles must use 17" or larger diameter rims.
- (4) Replacement knuckles increase factory track width by 3". Requires use of rims with backsparing not to exceed 4.5".
- (5) Front multiple shock kit option recommended to reduce body roll and to improve high speed handling and stability.
- (6) Four shocks must be ordered separately. Reservoir shocks require reservoir mounting kits - one pair required per shock - sold separately.
- (7) Vehicle will require alignment after kit is installed.
- (8) Hubcentric rings are recommended for 99-10 GM 1500 vehicles.
- (9) Tie Rod Reinforcement Kit (Part No. 63305) threads onto factory tie rods to provide extra support for GM vehicles equipped with oversize tires and wheels.

## GM Silverado/ Sierra 1500 Pickup — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>GM Silverado/ Sierra 1500 Pickup</b>						
<b>5" LIFT - Knuckle System</b>						
99-07	Steering Knuckles Drop Crossmembers Diff Drop Brackets Sway Bar Links Related Hardware Rear 5.5" Blocks Rear U-Bolts	<b>K1095B</b> Kit w/ES Shocks OR <b>K1095BMX</b> Kit w/MX6 Shocks	1 1 1 1 PLUS 1 OR 2 2	51020BMX-1 Kit Box 51020BMX-2 Kit Box 51020BMX-3 Kit Box 51020BMX-5 Kit Box  51099B-4 Front / Rear ES9000 Shocks  MX6019 Front MX6 Shocks MX6003 Rear MX6 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 9.5" Backspace 4" - 4.50" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	3 4 7 8 9
<b>GM Silverado/ Sierra 1500 Pickup</b>						
<b>2.5" Level Lift</b>						
99-07	Torsion Keys		63150	Torsion Keys	Max Tire Size 32" x 11.50" Wheel Diameter 16" + Wheel Width 8" - 9.5" Backspace 4" - 5.00" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	2 7 8 9

- (1) A replacement CV front driveshaft is recommended for extended high speed use in 4x4 high or AUTO 4x4. GM vehicles with push button 4x4 high activation ( Auto Trac) use 51256 (measures 37.81" from U-joint center to end of slip joint.) GM vehicles with All Wheel Drive will require 51257 (measures 36.81" from U-joint center to end of slip joint.)
- (3) 00-04 vehicles must use 16" or larger diameter rims. 05-13 vehicles must use 17" or larger diameter rims.
- (4) Replacement knuckles increase factory track width by 3". Requires use of rims with backspacing not to exceed 4.5".
- (5) Front multiple shock kit option recommended to reduce body roll and to improve high speed handling and stability.
- (6) Four shocks must be ordered separately. Reservoir shocks require reservoir mounting kits - one pair required per shock - sold separately.
- (7) Vehicle will require alignment after kit is installed.
- (8) Hubcentric rings are recommended for 99-10 GM 1500 vehicles.
- (9) Tie Rod Reinforcement Kit (Part No. 63305) threads onto factory tie rods to provide extra support for GM vehicles equipped with oversize tires and wheels.

# SUSPENSION KITS

## GM Silverado/ Sierra 1500 Pickup — 2WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>GM Silverado/ Sierra 1500 Pickup w/Coil Springs</b>						
<b>7" LIFT - Knuckle System</b>						
99-07	Steering Knuckles Drop Crossmembers Sway Bar Links Related Hardware Rear 3" Blocks Rear U-Bolts Rear Add-A-Leafs	<b>K1078B</b> Kit w/ES Shocks OR <b>K1078BMX</b> Kit w/MX6 Shocks	1 1 1 1 1 PLUS 1 OR 2 2	51084B-1 Kit Box 51084B-2 Kit Box 51084B-3 Kit Box 51099B-5 Kit Box 14514 Front Coil Springs 51084B-5 Front / Rear ES9000 Shocks MX6028 Front MX6 Shocks MX6098 Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 9.5" Backspace 4" - 4.50" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	3 4 7 8
<b>GM Silverado/ Sierra 1500 Pickup w/Torsion Bars</b>						
<b>2.5" Level Lift</b>						
99-07	Torsion Keys		63150	Torsion Keys	Max Tire Size 32" x 11.50" Wheel Diameter 16" + Wheel Width 8" - 9.5" Backspace 4" - 5.25" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	7 8
<b>GM Silverado/ Sierra 1500 Pickup w/Coil Springs</b>						
<b>2" Level Lift</b>						
99-07	Coil Spring Spacers		63175	Coil Spring Spacers	Max Tire Size 31" x 10.50" Wheel Diameter 16" + Wheel Width 8" - 9.5" Backspace 4" - 5.25" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	7 8
<b>2.0" Poly Lift</b>						
99-07	Coil Spring Spacers		PLG09101	Coil Spring Spacers	Max Tire Size 31" x 10.50" Wheel Diameter 16" + Wheel Width 8" - 9.5" Backspace 4" - 5.25" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	7 8

CHEVY / GMC

OPTIONS	Notes:
Drive Shaft Alignment Kit	
51255 2 PC Drive shafts only	
Traction Bars	
71000B Rear Traction Bars - Pair	
71199B Rear Traction Bar Mounting Kit	

(3) 00-04 vehicles must use 16" or larger diameter rims. 05-13 vehicles must use 17" or larger diameter rims.  
 (4) Replacement knuckles increase factory track width by 3". Requires use of rims with backspacing not to exceed 4.5".  
 (7) Vehicle will require alignment after kit is installed.  
 (8) Hubcentric rings are recommended for 99-10 GM 1500 vehicles.

## K1500 Pickup — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>K1500 Pickup - 4WD</b>						
<b>6" LIFT - Bracket System</b>						
88-99	Upper A-Arm Drop Brackets Drop Crossmembers Diff Drop Brackets Related Hardware Rear 4" Blocks Rear U-Bolts Rear Add-A-Leafs	<b>K1048B</b> Kit w/ES Shocks OR <b>K1048BMX</b> Kit w/MX6 Shocks	1 1 1 1 PLUS 1 OR 2 2	51088B-1 Kit Box 51088B-2 Kit Box 51088B-3 Kit Box 51088B-5 Kit Box 51088B-4 Front / Rear ES3000 Shocks MX6042 Front MX6 Shocks MX6043 Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 9.5" Backspace 3.25" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	1 2 4 6
<b>4" LIFT - Bracket System</b>						
88-99	Upper A-Arm Drop Brackets Drop Crossmembers Diff Drop Brackets Related Hardware Rear 3.5" Blocks Rear U-Bolts	<b>K1053B</b> Kit w/ES Shocks OR <b>K1053BMX</b> Kit w/MX6 Shocks	1 1 1 PLUS 1 OR 2 2	51494B-1 Kit Box 51494B-2 Kit Box 51494B-3 Kit Box 51494B-4 Front / Rear ES9000 Shocks MX6040 Front MX6 Shocks MX6041 Rear MX6 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 9.5" Backspace 3.25" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	1 2 4 6
<b>1.5" Level Lift</b>						
88-99	Torsion Keys		63150	Torsion Keys	Max Tire Size 31" x 10.50" Wheel Diameter 16" + Wheel Width 8" - 9.5" Backspace 3.25" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	6

OPTIONS	Notes:
Add-A-Leaf Kit	
51088B-5 Rear Add-A-Leaf	
Multiple Shock Mount Kit - K1048/ K1053	
51294B Shock Mount Kit	3
Multiple Shock Kit - Shock Options - K1048	
320500 ES3000	3
920500 ES9000	3
MX6088 MX6 Non-Reservoir	3
MX6064R MX6 Reservoir	3

OPTIONS	Notes:
Reservoir Mounting Kits - Stainless	
63012 2" Body to 2" Body	3
63013 2" Body to 1.5" Hoop Tube	3
Reservoir Mounting Kits - Aluminum	
63016 MX6R Body to MX6R Reservoir	3
63017 MX6R Body to 1.5" Hoop Tube	3
Multiple Shock Kit - Shock Options - K1053	
318509 ES3000 Shock	3
918509 ES9000 Shock	3

OPTIONS	Notes:
Steering Stabilizer - K1048	
217513 Single Kit - ES2000	
Steering Center Link	
21093 Center Link Replacement Kit	5
Traction Bars	
71000B Rear Traction Bars - Pair	
71182B Rear Traction Bar Mounting Kit	

- (1) Moderate to severe driveline vibration may occur at speeds above 25 mph when 4x4 Hi is engaged. (Please refer to original vehicle owner's manual.) Rear driveline modification may be necessary for short wheelbase vehicles.
- (2) Not recommended for 98-99 GM1500 4WD vehicles with Auto Track NP246 transfer case.
- (3) Four shocks must be ordered separately. Reservoir shocks require reservoir mounting kits - one pair required per shock - sold separately.
- (4) Exhaust modifications may be required for height increases of 4" and are normally required for height increases of 6".
- (5) Replacement Steering center Link for 6" kits produced from 1992-2003
- (6) Vehicle will require alignment after kit is installed.

# SUSPENSION KITS

## K10/ K15 Pickup — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
K10 / K15 Pickup - 4WD						
<b>6" LIFT</b>						
1987	Front Leaf Springs Front U-Bolts Stainless Brake Lines Drop Steering Arm Related Brackets Rear 4" Blocks Rear U-Bolts Rear Add-A-Leafs	<b>K1019</b> Kit With ES Shocks	2 1 1 1 1 1 1 Plus 2 2	11511 Front Leaf Spring 58301 Front U-Bolts 58401 Rear Block Kit 13122 Rear Add-A-Leafs 7225 Stainless Brake Lines GM400 Drop Steering Arm 324509 Front ES3000 Shocks 329500 Rear ES3000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 5 6 7
<b>4" LIFT</b>						
1987	Front Leaf Springs Front U-Bolts Drop Steering Arm Related Brackets Rear 4" Blocks Rear U-Bolts	<b>K1020</b> Kit With ES Shocks	2 1 1 1 Plus 2 2	11411 Front Leaf Spring 58301 Front U-Bolts 58401 Rear Block Kit GM400 Drop Steering Arm 322500 Front ES3000 Shocks 326500 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 5 6 7
<b>2.5" LIFT</b>						
1987	Front Leaf Springs Front U-Bolts Related Brackets Rear 2.5" Blocks Rear U-Bolts	<b>K1021</b> Kit With ES Shocks	2 1 1 Plus 2 2	11211 Front Leaf Spring 58301 Front U-Bolts 58251 Rear Block Kit 321500 Front ES3000 Shocks 325509 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 5 6 7

OPTIONS	Notes:
Add-A-Leaf Kit	
13122 1.5"-2" Rear Add-A-Leaf	
13125 2"-3" Rear Add-A-Leaf	
Factory Dual Shock Options - 2.5" - 6" Lift	
321500 2.5" Lift - ES3000	5
322500 4.0" Lift - ES3000	5
324509 6.0" Lift - ES3000	5
Multiple Shock Mount Kit - 2.5" - 6" Lift	
58103 Shock Mount Kit - No Shocks	

OPTIONS	Notes:
2.5" Lift Multiple Shock Kit - Shock Options	
322500 ES3000	
MX6010 MX6 Adjustable	
4" Lift Multiple Shock Kit - Shock Options	
324509 ES3000	
MX6027 MX6 Adjustable	
6" Lift Multiple Shock Kit - Shock Options	
325509 ES3000	
MX6012 MX6 Adjustable	
Rear Leaf Springs 52"	
13311 Rear Leaf Spring - 4" Lift	
13411 Rear Leaf Spring - 6" Lift	

OPTIONS	Notes:
Rear Leaf Springs 56"	
13511 Rear Leaf Spring - 4" Lift	
13611 Rear Leaf Spring - 6" Lift	
Rear U-Bolt Kits (For use w/Rear Leaf Springs)	
50204 5/8"-18 x 2.950" x 7.80" Round	
50165 5/8"-18 x 3.650" x 9.00" Round	
Steering Stabilizer Kits	
220561 Dual Stabilizer Kit - ES2000	
224000 Single Stabilizer Kit - ES2000	

- (1) Driveline modifications may be required due to increased driveline angles.
- (2) Exhaust modifications may be required for height increases of 4" and are normally required for 6" height increases.
- (3) All ride height increases are approximate and will vary due to vehicle specification (Engine size, factory options, trail equipment, etc).
- (5) Two additional front shocks must be ordered separately for vehicles equipped with factory dual shocks.
- (6) Replacement 4" and 6" rear leaf springs are available and sold separately.
- (7) Vehicle will require alignment after kit is installed.



## K10/ K15 Pickup — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
K10 / K15 Pickup - 4WD						
<b>6" LIFT</b>						
79-86	Front Leaf Springs Front U-Bolts Stainless Brake Lines Drop Steering Arm Related Brackets Rear 4" Blocks Rear U-Bolts Rear Add-A-Leafs	<b>K1013</b> Kit With ES Shocks	2 1 1 1 1 1 1 Plus 2 2	11511 Front Leaf Spring 58201 Front U-Bolts 58401 Rear Block Kit 13122 Rear Add-A-Leafs 7220 Stainless Brake Lines GM400 Drop Steering Arm 324509 Front ES3000 Shocks 329500 Rear ES3000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 5 6 7
<b>4" LIFT</b>						
79-86	Front Leaf Springs Front U-Bolts Drop Steering Arm Related Brackets Rear 4" Blocks Rear U-Bolts	<b>K1011</b> Kit With ES Shocks	2 1 1 1 Plus 2 2	11411 Front Leaf Spring 58201 Front U-Bolts 58401 Rear Block Kit GM400 Drop Steering Arm 322500 Front ES3000 Shocks 326500 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 5 6 7
<b>2.5" LIFT</b>						
79-86	Front Leaf Springs Front U-Bolts Related Brackets Rear 2.5" Blocks Rear U-Bolts	<b>K1012</b> Kit With ES Shocks	2 1 1 Plus 2 2	11211 Front Leaf Spring 58201 Front U-Bolts 58251 Rear Block Kit 321500 Front ES3000 Shocks 325509 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 5 6 7

OPTIONS	Notes:
<b>Add-A-Leaf Kit</b>	
13122 1.5"-2" Rear Add-A-Leaf	
13125 2"-3" Rear Add-A-Leaf	
<b>Factory Dual Shock Options - 2.5" - 6" Lift</b>	
321500 2.5" Lift - ES3000	5
322500 4.0" Lift - ES3000	5
324509 6.0" Lift - ES3000	5
<b>Multiple Shock Mount Kit - 2.5" - 6" Lift</b>	
58103 Shock Mount Kit - No Shocks	
<b>2.5" Lift Multiple Shock Kit - Shock Options</b>	
322500 ES3000	
MX6010 MX6 Non-Reservoir	

OPTIONS	Notes:
<b>4" Lift Multiple Shock Kit - Shock Options</b>	
324509 ES3000	
MX6027 MX6 Adjustable	
<b>6" Lift Multiple Shock Kit - Shock Options</b>	
325509 ES3000	
MX6012 MX6 Adjustable	
<b>Rear Leaf Springs 52"</b>	
13311 Rear Leaf Spring - 4" Lift	
13411 Rear Leaf Spring - 6" Lift	
<b>Rear Leaf Springs 56"</b>	
13511 Rear Leaf Spring - 4" Lift	
13611 Rear Leaf Spring - 6" Lift	

OPTIONS	Notes:
<b>Rear U-Bolt Kits (For use w/Rear Leaf Springs)</b>	
50204 5/8"-18 x 2.950" x 7.80" Round	
50165 5/8"-18 x 3.650" x 9.00" Round	
<b>Steering Stabilizer Kits</b>	
220561 Dual Stabilizer Kit - ES2000	
224000 Single Stabilizer Kit - ES2000	

- (1) Driveline modifications may be required due to increased driveline angles.
- (2) Exhaust modifications may be required for height increases of 4" and are normally required for 6" height increases.
- (3) All ride height increases are approximate and will vary due to vehicle specification (Engine size, factory options, trail equipment, etc).
- (5) Two additional front shocks must be ordered separately for vehicles equipped with factory dual shocks.
- (6) Replacement 4" and 6" rear leaf springs are available and sold separately.
- (7) Vehicle will require alignment after kit is installed.

# SUSPENSION KITS

## K10/ K15 Pickup — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
K10 / K15 Pickup - 4WD						
<b>6" LIFT</b>						
77-78	Front Leaf Springs Front U-Bolts Stainless Brake Lines Drop Steering Arm Related Brackets Rear 4" Blocks Rear U-Bolts Rear Add-A-Leafs	<b>K1010</b> Kit With ES Shocks	2 1 1 1 1 1 1 Plus 2 2	11511 Front Leaf Spring 58201 Front U-Bolts 58401 Rear Block Kit 13122 Rear Add-A-Leafs 7215 Stainless Brake Lines GM400 Drop Steering Arm 324509 Front ES3000 Shocks 329500 Rear ES3000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 5 6 7
<b>4" LIFT</b>						
77-78	Front Leaf Springs Front U-Bolts Drop Steering Arm Related Brackets Rear 4" Blocks Rear U-Bolts	<b>K1011</b> Kit With ES Shocks	2 1 1 1 Plus 2 2	11411 Front Leaf Spring 58201 Front U-Bolts 58401 Rear Block Kit GM400 Drop Steering Arm 322500 Front ES3000 Shocks 326500 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 5 6 7
<b>2.5" LIFT</b>						
77-78	Front Leaf Springs Front U-Bolts Related Brackets Rear 2.5" Blocks Rear U-Bolts	<b>K1012</b> Kit With ES Shocks	2 1 1 Plus 2 2	11211 Front Leaf Spring 58201 Front U-Bolts 58251 Rear Block Kit 321500 Front ES3000 Shocks 325509 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 5 6 7

OPTIONS	Notes:
Add-A-Leaf Kit	
13122 1.5"-2" Rear Add-A-Leaf	
13125 2"-3" Rear Add-A-Leaf	
Factory Dual Shock Options - 2.5"- 6" Lift	
321500 2.5" Lift - ES3000	5
322500 4.0" Lift - ES3000	5
324509 6.0" Lift - ES3000	5
Multiple Shock Mount Kit - 2.5" - 6" Lift	
58103 Shock Mount Kit - No Shocks	

OPTIONS	Notes:
2.5" Lift Multiple Shock Kit - Shock Options	
322500 ES3000	
MX6010 MX6 Non-Reservoir	
4" Lift Multiple Shock Kit - Shock Options	
324509 ES3000	
MX6027 MX6 Adjustable	
6" Lift Multiple Shock Kit - Shock Options	
325509 ES3000	
MX6012 MX6 Adjustable	

OPTIONS	Notes:
Rear Leaf Springs 52"	
13311 Rear Leaf Spring - 4" Lift	
13411 Rear Leaf Spring - 6" Lift	
Rear Leaf Springs 56"	
13511 Rear Leaf Spring - 4" Lift	
13611 Rear Leaf Spring - 6" Lift	
Rear U-Bolt Kits (For use w/Rear Leaf Springs)	
50204 5/8"-18 x 2.950" x 7.80" Round	
50165 5/8"-18 x 3.650" x 9.00" Round	
Steering Stabilizer Kits	
220561 Dual Stabilizer Kit - ES2000	
224000 Single Stabilizer Kit - ES2000	

- (1) Driveline modifications may be required for height increases over 2.5" due to increased driveline angles.
- (2) Exhaust modifications may be required for height increases of 4" and are normally required for 6" height increases.
- (3) All ride height increases are approximate and will vary due to vehicle specification (Engine size, factory options, trail equipment, etc).
- (5) Two additional front shocks must be orderd separately for vehicles equipped with factory dual shocks. See options.
- (6) Replacement 4" and 6" rear leaf springs are available and sold separately. See options.
- (7) Vehicle will require alignment after kit is installed.

## K10/ K15 Pickup — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
K10 / K15 Pickup - 4WD						
<b>6" LIFT</b>						
73-76	Front Leaf Springs Front U-Bolts Stainless Brake Lines Drop Steering Arm Related Brackets Rear 4" Blocks Rear U-Bolts Rear Add-A-Leafs	<b>K1007</b> Kit With ES Shocks	2 1 1 1 1 1 1 Plus 2 2	11511 Front Leaf Spring 13122 Rear Add a Leaf Springs 58101 Front Box Kit 58401 Rear Blocks / U-Bolts 7215 Stainless Brake Lines GM400 Steering Arm 324509 Front ES3000 Shocks 329500 Rear ES3000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 5 6 7
<b>4" LIFT</b>						
73-76	Front Leaf Springs Front U-Bolts Drop Steering Arm Related Brackets Rear 4" Blocks Rear U-Bolts	<b>K1008</b> Kit With ES Shocks	2 1 1 1 Plus 2 2	11411 Front Leaf Spring 58101 Front Box Kit 58401 Rear Blocks / U-Bolts GM400 Steering Arm 322500 Front ES3000 Shocks 326500 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 5 6 7
<b>2.5" LIFT</b>						
73-76	Front Leaf Springs Front U-Bolts Related Brackets Rear 2.5" Blocks Rear U-Bolts	<b>K1009</b> Kit With ES Shocks	2 1 1 Plus 2 2	11211 Front Leaf Spring 58101 Front Box Kit 58251 Rear Blocks / U-Bolts 321500 Front ES3000 Shocks 325509 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 5 6 7

OPTIONS	Notes:
<b>Add-A-Leaf Kit</b>	
13122 1.5"-2" Rear Add-A-Leaf	
13125 2"-3" Rear Add-A-Leaf	
<b>Factory Dual Shock Options - 2.5"- 6" Lift</b>	
321500 2.5" Lift - ES3000	5
322500 4.0" Lift - ES3000	5
324509 6.0" Lift - ES3000	5
<b>Multiple Shock Mount Kit - 2.5" - 6" Lift</b>	
58103 Shock Mount Kit - No Shocks	

OPTIONS	Notes:
<b>2.5" Lift Multiple Shock Kit - Shock Options</b>	
322500 ES3000	
MX6010 MX6 Non-Reservoir	
<b>4" Lift Multiple Shock Kit - Shock Options</b>	
324509 ES3000	
MX6027 MX6 Adjustable	
<b>6" Lift Multiple Shock Kit - Shock Options</b>	
325509 ES3000	
MX6012 MX6 Adjustable	
<b>Rear Leaf Springs 52"</b>	
13311 Rear Leaf Spring - 4" Lift	
13411 Rear Leaf Spring - 6" Lift	

OPTIONS	Notes:
<b>Rear Leaf Springs 56"</b>	
13511 Rear Leaf Spring - 4" Lift	
13611 Rear Leaf Spring - 6" Lift	
<b>Rear U-Bolt Kits (For use w/Rear Leaf Springs)</b>	
50204 5/8"-18 x 2.950" x 7.80" Round	
50165 5/8"-18 x 3.650" x 9.00" Round	
<b>Steering Stabilizer Kits</b>	
220561 Dual Stabilizer Kit - ES2000	
224000 Single Stabilizer Kit - ES2000	

- (1) Driveline modifications may be required due to increased driveline angles.
- (2) Exhaust modifications may be required for height increases of 4" and are normally required for 6" height increases.
- (3) All ride height increases are approximate and will vary due to vehicle specification (Engine size, factory options, trail equipment, etc).
- (5) Two additional front shocks must be ordered separately for vehicles equipped with factory dual shocks.
- (6) Replacement 4" and 6" rear leaf springs are available and sold separately.
- (7) Vehicle will require alignment after kit is installed.

# SUSPENSION KITS

## 2500HD/ 3500HD Pickup — 4WD/ 2WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes	
<b>2500HD Pickup - 4WD / 2WD</b>							
<b>6" LIFT - Knuckle System</b>							
11-16	Steering Knuckles Drop Crossmembers Diff Drop Brackets Differential Skid Plate Sway Bar Links Related Hardware Rear 3" Blocks Rear U-Bolts	<b>K1085B</b>	1	51802B-1 Kit Box	Max Tire Size 35" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 10" Backspace 4.5" - 6.125" Bolt Pattern 8 x 180mm" Bolt Code 89 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	1 2	
		Kit w/ES Shocks	1	51802B-2 Kit Box			
		OR	1	51802B-3 Kit Box			
		<b>K1085BP</b>	PLUS	1			51802B-4 Front / Rear ES9000 Shocks
		Kit w/Pro Runner Shocks	OR	1			51802BP-4 Front / Rear Pro Runner Shocks
<b>3500HD Pickup - 4WD / 2WD</b>							
<b>6" LIFT - Knuckle System</b>							
11-16	Differential Skid Plate Sway Bar Links Related Hardware Rear 3" Blocks Rear U-Bolts	<b>K1087B</b>	1	51802B-1 Kit Box	Max Tire Size 35" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 10" Backspace 4.5" - 6.125" Bolt Pattern 8 x 180mm" Bolt Code 89 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	1 2	
		Kit w/ES Shocks	1	51802B-2 Kit Box			
		OR	1	51802B-3 Kit Box			
		<b>K1087BP</b>	PLUS	1			50350 Rear U-Bolt kit
		Kit w/Pro Runner Shocks	OR	1			51802B-4 Front / Rear ES9000 Shocks
		OR	1	51802BP-4 Front / Rear Pro Runner Shocks			
<b>3500HD Pickup - 4WD / 2WD Dual Rear Wheel</b>							
<b>6" LIFT - Knuckle System</b>							
11-16	Differential Skid Plate Sway Bar Links Related Hardware Rear 3" Blocks Rear U-Bolts	<b>K1088B</b>	1	51802B-1 Kit Box	Max Tire Size 35" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 10" Backspace 4.5" - 6.125" Bolt Pattern 8 x 180mm" Bolt Code 89 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	1 2	
		Kit w/ES Shocks	1	51802B-2 Kit Box			
		OR	1	51802B-3 Kit Box			
		<b>K1088BP</b>	PLUS	1			50351 Rear U-Bolt kit
		Kit w/Pro Runner Shocks	OR	1			51802B-4 Front / Rear ES9000 Shocks
		OR	1	51802BP-4 Front / Rear Pro Runner Shocks			
<b>2500HD Pickup - 4WD / 2WD</b>							
<b>2.5" Level Lift</b>							
11-16	Torsion Keys Front Shock Extensions		63161	Torsion Keys Front Shock Extensions	Max Tire Size 33" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.25" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	2	
<b>2.5"/ 1.5" Level Lift Nitro Kit</b>							
11-16	Torsion Keys Front Shock Extensions Rear Blocks w/U-Bolts		63161K	Torsion Keys Front Shock Extensions Rear Blocks w/U-Bolts	Max Tire Size 33" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.25" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	2	

CHEVY / GMC

OPTIONS	Notes:
Traction Bars	
72500B	Tube Rear Traction Bars - pair
72502B	Plate Rear Traction Bars - pair
71201B	Traction Bar Mounting Kit

(1) For this application we recommend 17x9" rims with up to 5.5" backspacing, 18x9" rims with up to 5.75" backspacing, or 20x9" rims with up to 6.125" backspacing. Maximum rim width and backspace recommendations cannot be exceeded.  
 (2) Vehicle will require alignment after kit is installed.

## 1500HD/ 2500HD/ 2500 Pickup — 4WD/ 2WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes	
<b>1500HD/ 2500HD/ 2500 Pickup - 4WD / 2WD</b>							
<b>6" LIFT - Knuckle System</b>							
01-10	Steering Knuckles Drop Crossmembers Diff Drop Brackets Sway Bar Links CV Axle Spacers Differential Skid Plate Related Hardware Rear 4" Blocks Rear U-Bolts	<b>K1084B</b> Kit w/ES Shocks OR <b>K1084BP</b> Kit w/Pro Runner Shocks OR <b>K1084BMX</b> Kit w/MX6 Shocks	1 1 1 PLUS 1 OR 1 OR 2 2	51801B-1 51801B-2 51801B-3 51801B-4 51801BP-4 MX6168 MX6167	Kit Box Kit Box Kit Box Front / Rear ES9000 Shocks Front / Rear Pro Runner Shocks Front MX6 Shocks Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.00" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	4 5 8 9 10 11 12 13
<b>6" LIFT - Bracket System</b>							
99-10	Steering Knuckles Upper A-Arm Drop Brackets Drop Crossmembers Diff Drop Brackets Sway Bar Links Related Hardware Rear 4" Blocks Rear U-Bolts Rear Add-A-Leafs Steering Stabilizer	<b>K1051B</b> Kit w/ES Shocks OR <b>K1051BP</b> Kit w/Pro Runner Shocks OR <b>K1051BMX</b> Kit w/MX6 Shocks	1 2 1 1 PLUS 1 OR 1 OR 2 2	51800B-1 51800B-2 51800B-3 51099B-5 51800B-4 51800BP-4 MX6002 MX6003	Kit Box Kit Box Kit Box Kit Box Front / Rear ES9000 Shocks Front / Rear Pro Runner Shocks Front MX6 Shocks Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.00" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	1 2 3 4 5 7 9 10 11 13
<b>2.5" Level Lift</b>							
99-10	Torsion Keys Front Shock Extensions		63200	Torsion Keys Front Shock Extensions	Max Tire Size 32" x 11.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.25" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	11 13	

OPTIONS	Notes:
Add-A-Leaf Kit	
51099B-5 Rear Add-A-Leaf	
<b>Driveline Options - 6" Lift</b>	
51258 CV Style Front Driveshaft for Diesel	2
51256 CV Style Front Driveshaft for 6.0L / 8.1L	
51255 Driveline Shim Kit - 2 Pc Rr Driveshaft	3
<b>Multiple Shock Mount Kit - K1084</b>	
51214B-1 Shock Mount Kit - No Shocks	6
51214B Shock Mount Kit w/ES9000	
<b>Multiple Shock Kit - Shock Options - K1084 Kit</b>	
915509 ES9000	6
<b>Multiple Shock Mount Kit - K1051</b>	
51211B Shock Mount Kit - No Shocks	6,7

OPTIONS	Notes:
<b>Multiple Shock Kit - Shock Options - K1051</b>	
320500 ES3000	6
920500 ES9000	6
MX6088 MX6 Adjustable	6
MX6064R MX6R Reservoir	6
<b>Reservoir Mounting Kits - Stainless</b>	
63012 2" Body to 2" Body	6
63013 2" Body to 1.5" Hoop Tube	6
<b>Reservoir Mounting Kits - Aluminum</b>	
63016 MX6R Body to MX6R Reservoir	6
63017 MX6R Body to 1.5" Hoop Tube	6
<b>Front Skid Plate</b>	
51101 Stainless Steel Skid Plate for K1084	
51100 Stainless Steel Skid Plate for K1051	

OPTIONS	Notes:
<b>Traction Bars</b>	
72400B Rear Traction Bars - Pair	
71200B Rear Traction Bar Mounting Kit	
<b>Level Lift</b>	
63305 Tie Rod Reinforcement Kit	13
63201 Block w U-Bolt Kit 1"	
63202 Block w U-Bolt Kit 2"	
<b>Sway Bar End Links</b>	
91-6100B Sway Bar End Link Kit for K1051B	

- (1) For compression struts on 08-10 Gas Models - use 91-2074 instead of 91-2126. Order 2) 91-2074 separately.
- (2) 05-10 Vehicles with Allison transmission - CV Front Driveshaft 51258 is recommended for extended highway speed use in 4x4 HI.
- (3) Vehicles with 2 Pc rear driveshaft - shim kit 51255 may be required to reduce launch vibration and/or high speed driveline vibration.
- (4) Vehicles with 6.0L engine - exhaust crossover kit 51810 will be required for 4WD and sold separately.
- (5) Vehicles with 8.1L engine - exhaust crossover modification will be required for 4WD.
- (6) Four shocks must be ordered separately. Reservoir shocks require reservoir mounting kits - one pair required per shock - sold separately.
- (7) A max. backspace of 4.5" recommended when using multiple shock hoop kit with K1051 to provide adequate clearance between tires and shock absorbers.
- (8) A maximum backspace of 4.75" is recommended when using 16" and 17" wheels with the K1084 Knuckle System.
- (9) Excludes 2WD vehicles with front coil springs and 2WD/ 4WD vehicles with dual rear wheels.
- (10) Use of a 35" x 12.5" tire may require fender relocation kit 90-6640 for additional tire to fender clearance.
- (11) Vehicle will require alignment after kit is installed.
- (12) GM factory 2500 HD tie rods required for installation on 1500HD/ K2500 models.
- (13) Tie Rod Reinforcement kit threads directly onto the factory tie rods to provide extra support for GM vehicles equipped with over-sized tire and wheels.

# SUSPENSION KITS

## K2500 Pickup — 4WD (8 Lug)

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes	
<b>K2500 Pickup - 4WD (8 Lug)</b>							
<b>6.0" LIFT - Bracket System - Vehicles w/Cast Lower Arms</b>							
93-99	Upper A-Arm Drop Brackets	<b>K1044B</b> Kit w/ES Shocks	1	51893B-1	Kit Box	Max Tire Size 35" x 12.50"	1
	Drop Crossmembers		1	51893B-2	Kit Box	Wheel Diameter 16" +	2
	Diff Drop Brackets		1	51893B-3	Kit Box	Wheel Width 8" - 10"	7
	Sway Bar Links		PLUS			Backspace 4" - 5"	8
	Related Hardware		1	51894B-4	Front / Rear ES3000 Shocks & ES2000 Steering Stabilizer	Bolt Pattern 8 x 6.5"	9
	Rear 4" Blocks				Bolt Code 82		
	Rear U-Bolts				Lug Nut Size 14mm x 1.5		
	Limit Straps				Lug Nut Kit PXA26145		
<b>6.0" LIFT - Bracket System - Vehicles w/Stamped Lower Arms</b>							
93-99	Upper A-Arm Drop Brackets	<b>K1109B</b> Kit w/ES Shocks OR <b>K1109BMX</b> Kit w/MX6 Shocks	1	51893B-1	Kit Box	Max Tire Size 35" x 12.50"	1
	Drop Crossmembers		1	51893B-2	Kit Box	Wheel Diameter 16" +	2
	Diff Drop Brackets		1	51893B-3	Kit Box	Wheel Width 8" - 10"	7
	Sway Bar Links		PLUS			Backspace 4" - 5"	8
	Related Hardware		1	51893B-4	Front / Rear ES3000 Shocks & ES2000 Steering Stabilizer	Bolt Pattern 8 x 6.5"	9
	Rear 4" Blocks	OR			Bolt Code 82		
	Rear U-Bolts	1	51893BMX-4	Front / Rear MX6 Shocks & ES2000 Steering Stabilizer	Lug Nut Size 14mm x 1.5		
					Lug Nut Kit PXA26145		

OPTIONS	Notes:
Add-A-Leaf Kit	
51088B-5 1.5" Rear Add-A-Leaf (93-99)	9

- (1) Driveline modifications may be required due to increased driveline angles.
- (2) Exhaust modifications will be required for height increases of 4-6 inches.
- (3) All ride height increases are approximate and will vary due to vehicle specification (Engine size, factory options, trail equipment, etc).
- (7) Vehicle will require alignment after kit is installed.
- (8) Not recommended for 98-99 2500 4WD vehicles with Auto Trac NP246 transfer case.
- (9) Rear Add-A-Leaf 51088B-5 can be used to increase the rear lift height of K1044B/ K1109

## K20/ K25 Pickup — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>K20 / K25 Pickup - 4WD</b>						
<b>6" LIFT</b>						
1987	Front Leaf Springs Front U-Bolts Related Brackets Rear 2.5" Blocks Rear U-Bolts	<b>K1123</b> Kit With ES Shocks	2 1 1 1 1 1 Plus 2 2	11511 Front Leaf Spring 58301 Front U-Bolts 58402 Rear Block Kit 13122 Rear Add-A-Leafs 7215 Stainless Brake Lines GM400 Drop Steering Arm 324509 Front ES3000 Shocks 329500 Rear ES3000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 4 5 6
<b>4" LIFT</b>						
1987	Front Leaf Springs Front U-Bolts Drop Steering Arm Related Brackets Rear 4" Blocks Rear U-Bolts	<b>K1122</b> Kit With ES Shocks	2 1 1 1 Plus 2 2	11411 Front Leaf Spring 58301 Front U-Bolts 58402 Rear Block Kit GM400 Drop Steering Arm 322500 Front ES3000 Shocks 326500 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 5 6
<b>2.5" LIFT</b>						
1987	Front Leaf Springs Front U-Bolts Related Brackets Rear 2.5" Blocks Rear U-Bolts	<b>K1121</b> Kit With ES Shocks	2 1 1 Plus 2 2	11211 Front Leaf Spring 58301 Front U-Bolts 58252 Rear Block Kit 321500 Front ES3000 Shocks 325509 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 5 6
<b>K20 / K25 Pickup - 4WD</b>						
<b>6" LIFT</b>						
76-86	Front Leaf Springs Front U-Bolts Stainless Brake Lines Drop Steering Arm Related Brackets Rear 4" Blocks Rear U-Bolts Rear Add-A-Leafs	<b>K1058</b> Kit With ES Shocks	2 1 1 1 1 1 Plus 2 2	11511 Front Leaf Spring 58201 Front U-Bolts 58402 Rear Block Kit 13122 Rear Add-A-Leafs 7215 Stainless Brake Lines GM400 Drop Steering Arm 324509 Front ES3000 Shocks 329500 Rear ES3000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 4 5 6
<b>4" LIFT</b>						
76-86	Front Leaf Springs Front U-Bolts Drop Steering Arm Related Brackets Rear 4" Blocks Rear U-Bolts	<b>K1059</b> Kit With ES Shocks	2 1 1 1 Plus 2 2	11411 Front Leaf Spring 58201 Front U-Bolts 58402 Rear Block Kit GM400 Drop Steering Arm 322500 Front ES3000 Shocks 326500 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 5 6
<b>2.5" LIFT</b>						
76-86	Front Leaf Springs Front U-Bolts Related Brackets Rear 2.5" Blocks Rear U-Bolts	<b>K1060</b> Kit With ES Shocks	2 1 1 Plus 2 2	11211 Front Leaf Spring 58201 Front U-Bolts 58252 Rear Block Kit 321500 Front ES3000 Shocks 325509 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 5 6

Continued on following page (including options and footnotes)

CHEVY / GMC

# SUSPENSION KITS

## K20/ K25 Pickup — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>K20 / K25 Pickup - 4WD</b>						
<b>6" LIFT</b>						
73-76	Front Leaf Springs Front U-Bolts Stainless Brake Lines Drop Steering Arm Related Brackets Rear 4" Blocks Rear U-Bolts Rear Add-A-Leafs	<b>K1022</b> Kit With ES Shocks	2 1 1 1 1 1 1 Plus 2 2	11511 Front Leaf Spring 58101 Front U-Bolts 58402 Rear Block Kit 13122 Rear Add-A-Leafs 7215 Stainless Brake Lines GM400 Drop Steering Arm 324509 Front ES3000 Shocks 329500 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 4 5 6 6
<b>4" LIFT</b>						
73-76	Front Leaf Springs Front U-Bolts Drop Steering Arm Related Brackets Rear 4" Blocks Rear U-Bolts	<b>K1125</b> Kit With ES Shocks	2 1 1 1 Plus 2 2	11411 Front Leaf Spring 58101 Front U-Bolts 58402 Rear Block Kit GM400 Steering Arm 322500 Front ES3000 Shocks 326500 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 5 6 6
<b>2.5" LIFT</b>						
73-76	Front Leaf Springs Front U-Bolts Related Brackets Rear 2.5" Blocks Rear U-Bolts	<b>K1124</b> Kit With ES Shocks	2 1 1 Plus 2 2	11211 Front Leaf Spring 58101 Front U-Bolts 58252 Rear Block Kit 321500 Front ES3000 Shocks 325509 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 5 6 6

CHEVY / GMC

OPTIONS		Notes:
Factory Dual Shock Options 2.5"- 6" Lift		
321500	2.5" Lift	5
322500	4.0" Lift	5
324509	6.0" lift	5
Front Multiple Shock Mount Kit - Bracket		
58103	Shock Mount Kit - No Shocks	
Multiple Shock Kit - Shock Options 2.5" Lift		
322500	ES3000	
MX6010	MX6 Adjustable	

OPTIONS		Notes:
Multiple Shock Kit - Shock Options 4" Lift		
324509	ES3000	
MX6027	MX6 Adjustable	
Multiple Shock Kit - Shock Options 6" Lift		
325509	ES3000	
MX6012	MX6 Adjustable	
Rear Leaf Springs 52"		
13311	Rear Leaf Spring - 4" Lift	
13411	Rear Leaf Spring - 6" Lift	

OPTIONS		Notes:
Rear Leaf Springs 56"		
13511	Rear Leaf Spring - 4" Lift	
13611	Rear Leaf Spring - 6" Lift	
Rear U-Bolt Kits (For use w/Rear Leaf Springs)		
50204	5/8"-18 x 2.950" x 7.80" Round	
50165	5/8"-18 x 3.650" x 9.00" Round	
Steering Stabilizer Kits		
220561	Dual Stabilizer Kit - ES2000	
224000	Single Stabilizer Kit - ES2000	

- (1) Driveline modifications may be required for height increases over 2.5" due to increased driveline angles.
- (2) Exhaust modifications may be required for height increases of 4" and are normally required for 6" height increases.
- (3) All ride height increases are approximate and will vary due to vehicle specification. (engine size, factory options, trail equipment, etc)
- (4) 7215 brake lines are for vehicles up to 7200 lbs GVW.
- (5) Two additional front shocks must be orderd separately for vehicles equipped with factory dual shocks. See options.
- (6) Replacement 4" and 6" rear leaf springs are available and sold separately. See options.



## K2XX Tahoe/ Suburban/ Yukon/ Yukon XL 1500 — 4WD/ 2WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>K2XX Tahoe / Suburban / Yukon / Yukon XL 1500 - w factory aluminum suspension- 4WD / 2WD</b>						
<b>6" LIFT</b>						
2015	Steering Knuckles Drop Crossmembers Differential Skid Plate Diff Drop Brackets Sway Bar Drops Rear Sway Bar End Links Related Hardware Rear Coils Rear Track Bar Brackets Rear Control Arm Brackets	<b>K1161B</b> Kit w/Front Strut Spacers and Rear ES Shocks OR <b>K1161BMX</b> Kit w/Front MX2.75 Coilovers and Rear MX6 Shocks	1 1 1 1 1 PLUS OR 1 1	51031B-1 Kit Box 51015B-2 Kit Box 51014B-3 Kit Box 51014B-4 Kit Box 51907B-5 Kit Box 51907B-6 Front Spacers/ Rear ES9000 Shocks 51947BMX-6 MX2.75 Coilovers / Rear MX-6 Shocks 51947BMX-7 MX2.75 Coilovers / Rear MX-6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 9.5" Backspace 4.5" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	1 2 3 4 7 8
<b>K2XX Tahoe / Suburban / Yukon / Yukon XL 1500 - w factory steel suspension - 4WD / 2WD</b>						
<b>6" LIFT</b>						
2015	Steering Knuckles Drop Crossmembers Differential Skid Plate Diff Drop Brackets Sway Bar Drops Rear Sway Bar End Links Related Hardware Rear Coils Rear Track Bar Brackets Rear Control Arm Brackets	<b>K1160B</b> Kit w/Front Strut Spacers and Rear ES Shocks OR <b>K1160BMX</b> Kit w/Front MX2.75 Coilovers and Rear MX-6 Shocks	1 1 1 1 1 PLUS OR 1 1	51031B-1 Kit Box 51014B-2 Kit Box 51014B-3 Kit Box 51014B-4 Kit Box 51907B-5 Kit Box 51907B-6 Front Spacers/ Rear ES9000 Shocks 51947BMX-6 MX2.75 Coilovers / Rear MX-6 Shocks 51947BMX-7 MX2.75 Coilovers / Rear MX-6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 9.5" Backspace 4.5" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	1 2 3 4 7 8
<b>GM 1500 SUV - 4WD / 2WD</b>						
<b>1.5" LEVEL LIFT</b>						
07-15	Front Strut Spacers		63230	Front Strut Spacers	Max Tire Size 32" x 11.50" Wheel Diameter 17" + Wheel Width 8" - 9.5" Backspace 4.5" - 5.25" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	7 8
07-15	Front Strut Spacers		PLG09105	Front Strut Spacers	Max Tire Size 32" x 11.50" Wheel Diameter 17" + Wheel Width 8" - 9.5" Backspace 4.5" - 5.25" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	7 8

**CHEVY / GMC**

OPTIONS	Notes:
Front Skid Plate	
51104 Stainless Steel Skid Plate	
Driveline Options	
51257 CV Style Front Driveshaft - 36.81	

- (1) A replacement CV front driveshaft is recommended for extended high speed use in 4x4 high or AUTO 4x4. Use p/n 51257 - (measures 36.81" from U-joint center to end of slip joint.).
- (2) Must use 17" or larger diameter rims. 17" rims not to exceed 4.625" backspacing. 18" to 20" rims not to exceed 5.00" backspacing.
- (3) Excludes Magnetic Ride Control (LTZ) and Max Trailering package or any model with Air / Electronic / Hydraulic ride adjusting features.
- (4) 2wd models with one-piece driveshaft will require a longer custom drive shaft to maintain specified slip yoke engagement.
- (7) Vehicle will require alignment after kit is installed.
- (8) Hubcentric rings, PN PXAHR1081, are recommended for use of Pro Comp rims on 14-16 GM 1500 vehicles. Use HR1082 with push through caps.

# SUSPENSION KITS

## GM T900 Avalanche/ Suburban/ Tahoe/ Yukon/ Yukon XL 1500 — 2WD/ 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
------	-------------	---------------	------	--------------------------------------	---------------------	-------

### GM T900 Avalanche/ Suburban/ Tahoe/ Yukon/ Yukon XL 1500 - Non-Auto Track 2WD/ 4WD

#### 6" LIFT

07-14	Steering Knuckles	<b>K1141B</b> Kit w/Front Strut Spacers and Rear ES Shocks	1	51947B-1	Kit Box	Max Tire Size 35" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 10" Backspace 3.25" - 5.00" Bolt Pattern 6 x 5.5" Bolt Code 38 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	1
	Drop Crossmembers		1	51007B-2	Kit Box		2
	Diff Drop Brackets		1	51007B-3	Kit Box		3
	Front Sway Bar Drop	OR	1	51007B-4	Kit Box		7
	Rear Sway Bar End Links	<b>K1141BMX</b>	1	51907B-5	Rear Coils		
	Related Hardware	Kit w/Front MX2.75	PLUS				
	Rear Coils	Coilovers	1	51907B-6	Front Spacers / Rear ES9000 shocks		
	Rear Track Bar Brackets	and Rear MX6 Shocks	OR				
	Rear Control Arm Brackets		1	51947BMX-6	Front MX2.75 Coilover / Rear MX6 Shocks		
			1	51947BMX-7	Front MX2.75 Coilover / Rear MX6 Shocks		

### GM T900 Avalanche/ Suburban/ Tahoe/ Yukon/ Yukon XL 1500 - Auto Track 4WD

#### 6" LIFT

07-14	Steering Knuckles	<b>K1142B</b> Kit w/Front Strut Spacers and Rear ES Shocks	1	51907B-1	Kit Box	Max Tire Size 35" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 10" Backspace 3.25" - 5.00" Bolt Pattern 6 x 5.5" Bolt Code 38 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	1
	Drop Crossmembers		2	51007B-2	Kit Box		2
	Diff Drop Brackets		1	51007B-3	Kit Box		3
	Front Sway Bar Drop	OR	1	51007B-4	Kit Box		7
	Rear Sway Bar End Links	<b>K1142BMX</b>	1	51907B-5	Rear Coils		
	Related Hardware	Kit w/Front MX2.75	PLUS				
	Rear Coils	Coilovers	1	51256	CV Style Front Driveshaft		
	Rear Track Bar Brackets	and Rear MX-6 Shocks	OR				
	CV Style Front Driveshaft		1	51907B-6	Front Spacers / Rear ES9000 shocks		
			1	51947BMX-6	Front MX2.75 Coilover / Rear MX6 Shocks		
		1	51947BMX-7	Front MX2.75 Coilover / Rear MX6 Shocks			

#### OPTIONS

Notes:

Front Coil Over Upgrade 6" Kit only

51957BMX Stage 1 to Stage 2 Conversion Kit

Front Skid Plate 6" Kit only

51104 Stainless Steel Skid Plate

Driveline Options

51249 CV Style Front Driveshaft - 37.81" w/Differential Brackets 1

51245 CV Style Front Driveshaft - 36.81" w/Differential Brackets 1

Fender Relocation Kit

90-6640B Inner Fender Relocation Kit

- (1) A replacement CV front driveshaft is recommended for extended high speed use in 4x4 high or AUTO 4x4. GM vehicles with selectable 4x4 high and Auto 4x activation (Auto Trac) can use p/n 51256 (measures 37.81" from U-joint center to end of slip joint.) 2010 to current models with a 6spd automatic transmission or vehicles with All Wheel Drive will require p/n 51257 - (measures 36.81" from U-joint center to end of slip joint.). The K1142 / 51907 includes p/n 51256 and required differential brackets.
- (2) Due to variations in front bumper valance types on Avalanche and Z71, 33" x 12.50 tires may be required.
- (3) OE wheels will not fit. 07-13 models require 17" or larger diameter wheels.
- (7) Vehicle will require alignment after kit is installed.

## GM T900 Avalanche/ Suburban/ Tahoe/ Yukon/ Yukon XL 1500 — 2WD/ 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>GM T900 Avalanche/ Suburban/ Tahoe/ Yukon/ Yukon XL 1500 - 2WD/ 4WD</b>						
<b>1.5" Level Lift</b>						
07-15	Front Strut Spacers		63230	Front Strut Spacers	Max Tire Size 32" x 11.50" Wheel Diameter 17" + Wheel Width 8" - 10" Backspace 3.25" - 5.25" Bolt Pattern 6 x 5.5" Bolt Code 38 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	4 5 7
<b>2.25" Level Lift</b>						
07-15	Front Strut Spacers Front Lower Strut Spacers		63235	Front Strut Spacers	Max Tire Size 33" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 10" Backspace 3.25" - 5.25" Bolt Pattern 6 x 5.5" Bolt Code 38 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	4 5 7
<b>2.25" Level Lift Nitro Kit</b>						
07-15	Front Upper Strut Spacers Front Lower Strut Spacers Rear Coil Spacers		63165K	Front Strut Spacers Rear Coil Spacers	Max Tire Size 33" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 10" Backspace 3.25" - 5.25" Bolt Pattern 6 x 5.5" Bolt Code 38 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	4 5 7
<b>2.0" Poly Lift</b>						
07-15	Front Strut Spacers		PLG09105	Front Strut Spacers	Max Tire Size 32" x 11.50" Wheel Diameter 17" + Wheel Width 8" - 10" Backspace 3.25" - 5.25" Bolt Pattern 6 x 5.5" Bolt Code 38 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	4 5 7

OPTIONS	Notes:
Level Lift	
63160 Rear Coil Spacers 1"	
63165 Rear Coil Spacers 1.5"	
Fender Relocation Kit	
90-6640B Inner Fender Relocation Kit	

- (4) Excludes Magnetic Ride Control (LTZ) and Max Trailering package or any model with Air / Electronic / Hydraulic ride adjusting features.
- (5) In order to install Max Tire Size recommendations, it may be required to retain the factory wheel width/ backspacing/ offset. Some applications may require the removal of the front inner mud flaps and/ or other fender modifications. It is up to the installer to verify tire fitment and clearance for safe operation of vehicle.
- (7) Vehicle will require alignment after kit is installed.

# SUSPENSION KITS

## GM Avalanche/ Suburban/ Tahoe/ Yukon/ Yukon XL 1500 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>GM Avalanche/ Suburban/ Tahoe/ Yukon/ Yukon XL 1500 - No Ride Control</b>						
<b>6.0" LIFT - Bracket System</b>						
00-06	Upper A-Arm Drop Brackets Drop Crossmembers Diff Drop Brackets Sway Bar Links Related Hardware Rear Coil Springs Rear Control Arm Brackets CV Style Front Driveshaft	<b>K5072B</b> Kit w/ES Shocks OR <b>K5072BMX</b> Kit w/MX6 Shocks	1 1 1 1 1 PLUS 1 OR 2 2	51021B-1 Kit Box 51021B-2 Kit Box 51021B-3 Kit Box 51021B-4 Rear Coils 51256 CV Style Front Driveshaft 51022B-5 Front / Rear ES9000 Shocks MX6019 Front MX6 Shocks MX6098 Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter OE" + Wheel Width 8" - 10" Backspace 3.25" - 5.25" Bolt Pattern 6 x 5.5" Bolt Code 38 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	1 2 3 5 7 8
<b>GM Avalanche/ Suburban/ Tahoe/ Yukon/ Yukon XL 1500</b>						
<b>2.5" Level Lift</b>						
00-06	Torsion Keys		63150	Torsion Keys	Max Tire Size 32" x 11.50" Wheel Diameter OE" + Wheel Width 8" - 10" Backspace 3.25" - 5.25" Bolt Pattern 6 x 5.5" Bolt Code 38 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	2 7 8
<b>2.5" Level Lift Nitro Kit</b>						
00-06	Torsion Keys		63155K	Torsion Keys 2.5" Rear Coil Spacer 1.0"	Max Tire Size 32" x 11.50" Wheel Diameter OE" + Wheel Width 8" - 10" Backspace 3.25" - 5.25" Bolt Pattern 6 x 5.5" Bolt Code 38 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	2 7 8

CHEVY / GMC

OPTIONS	Notes:
Front Multiple Shock Mount Kit - Bracket	
51297B Shock Mount Kit - No Shocks	5,6
Multiple Shock Kit - Shock Options 6" Lift	
320500 ES3000	6
920500 ES9000	6
MX6088 MX6 Non-Reservoir	6
MX6064R MX6 Reservoir	6

OPTIONS	Notes:
Driveline Options	
51257 CV Style Front Driveshaft	1
Front Stainless Steel Skid plate	
51199 Stainless Steel Skid Plate	
Reservoir Mounting Kits - Stainless	
63012 2" Body to 2" Body	6
63013 2" Body to 1.5" Hoop Tube	6

OPTIONS	Notes:
Reservoir Mounting Kits - Aluminum	
63016 MX6R Body to MX6R Reservoir	6
63017 MX6R Body to 1.5" Hoop Tube	6
Level Lift	
63305 Tie Rod Reinforcement Kit	8
63160 Rear Coil Spacer 1.0"	
63165 Rear Coil Spacer 1.5"	

- (1) A replacement CV front driveshaft is recommended for extended high speed use in 4x4 high or AUTO 4x4. GM vehicles with push button 4x4 high activation (Auto Trac) use 51256 (measures 37.81" from U-joint center to end of slip joint.) GM vehicles with All Wheel Drive will require 51257 (measures 36.81" from U-joint center to end of slip joint.)
- (2) OE Wheels can be used.
- (3) 2000-2004 vehicles must use 16" or larger diameter rims. 2005-2006 vehicles must use 17" or larger diameter rims.
- (4) Replacement knuckles increase factory track width by 3". Requires use of rims with backspacing not to exceed 4.5".
- (5) Front multiple shock kit option recommended to reduce body roll and to improve high speed handling and stability.
- (6) Four shocks must be ordered separately. Reservoir shocks require reservoir mounting kits - one pair required per shock - sold separately.
- (7) Vehicle will require alignment after kit is installed.
- (8) Tie Rod Reinforcement kit threads directly onto the factory tie rods to provide extra support for GM vehicles equipped with over-sized tires and wheels.

## GM Avalanche/ Suburban/ Tahoe/ Yukon/ Yukon XL 1500 — 2WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
------	-------------	---------------	------	--------------------------------------	---------------------	-------

### GM Avalanche/ Suburban/ Tahoe/ Yukon/ Yukon XL 1500 - No Ride Control

#### 6.0" LIFT - Knuckle System

00-06	Steering Knuckles	<b>K1054BMX</b> Kit w/MX6 Shocks	1	51024BMX-1	Kit Box	Max Tire Size	35" x 12.50"	3	
	Drop Crossmembers		1	51084B-2	Kit Box	Wheel Diameter	16" +	4	
	Sway Bar Links		1	51024BMX-3	Kit Box	Wheel Width	8" - 10"	7	
	Related Hardware		1	51021B-4	Rear Coils	Backspace	3.25" - 4.5"	8	
	Rear Coil Springs		2	MX6019	Front MX6 Shocks	Bolt Pattern	6 x 5.5"		
	Rear Control Arm Brackets		2	MX6098	Rear MX6 Shocks	Bolt Code	38		
							Lug Nut Size	14mm x 1.5	
							Lug Nut Kit	PXA26144	

### GM Avalanche/ Suburban/ Tahoe/ Yukon/ Yukon XL 1500 - No Ride Control

#### 6.0" LIFT - Bracket System

00-06	Upper A-Arm Drop Brackets	<b>K1083B</b> Kit w/ES Shocks OR <b>K1083BMX</b> Kit w/MX6 Shocks	1	51028B-1	Kit Box	Max Tire Size	35" x 12.50"	2	
	Drop Crossmembers		1	51023B-2	Kit Box	Wheel Diameter	OE" +	3	
	Front & Rear Sway Bar Links		1	51021B-3	Kit Box	Wheel Width	8" - 10"	5	
	Related Hardware		1	51021B-4	Rear Coils	Backspace	3.25" - 5.25"	7	
	Rear Coil Springs		PLUS	1	51022B-5	Front / Rear ES9000 Shocks	Bolt Pattern	6 x 5.5"	8
	Rear Control Arm Brackets		OR	2	MX6019	Front MX6 Shocks	Bolt Code	38	
				2	MX6098	Rear MX6 Shocks	Lug Nut Size	14mm x 1.5	
							Lug Nut Kit	PXA26144	

### GM Avalanche/ Suburban/ Tahoe/ Yukon/ Yukon XL 1500

#### 2.5" Level Lift

00-06	Torsion Keys		63150	Torsion Keys		Max Tire Size	32" x 11.50"	7
						Wheel Diameter	OE" +	8
						Wheel Width	8" - 10"	
						Backspace	3.25" - 5.25"	
						Bolt Pattern	6 x 5.5"	
						Bolt Code	38	
						Lug Nut Size	14mm x 1.5	
						Lug Nut Kit	PXA26144	

OPTIONS	Notes:
Front Multiple Shock Mount Kit - Bracket	
51297B Shock Mount Kit - No Shocks	5,6
Multiple Shock Kit - Shock Options 6" Lift	
320500 ES3000	6
920500 ES9000	6
MX6088 MX6 Non-Reservoir	6
MX6064R MX6 Reservoir	6

OPTIONS	Notes:
Driveline Options	
51257 CV Style Front Driveshaft	1
Front Stainless Steel Skid plate	
51199 Stainless Steel Skid Plate	
Reservoir Mounting Kits - Stainless	
63012 2" Body to 2" Body	6
63013 2" Body to 1.5" Hoop Tube	6

OPTIONS	Notes:
Reservoir Mounting Kits - Aluminum	
63016 MX6R Body to MX6R Reservoir	6
63017 MX6R Body to 1.5" Hoop Tube	6
Level Lift	
63305 Tie Rod Reinforcement Kit	8
63160 Rear Coil Spacer 1.0"	
63165 Rear Coil Spacer 1.5"	

CHEVY/GMC

- (1) A replacement CV front driveshaft is recommended for extended high speed use in 4x4 high or AUTO 4x4. GM vehicles with push button 4x4 high activation (Auto Trac) use 51256 (measures 37.81" from U-joint center to end of slip joint.) GM vehicles with All Wheel Drive will require 51257 (measures 36.81" from U-joint center to end of slip joint.)
- (2) OE Wheels can be used.
- (3) 2000-2004 vehicles must use 16" or larger diameter rims. 2005-2006 vehicles must use 17" or larger diameter rims.
- (4) Replacement knuckles increase factory track width by 3". Requires use of rims with backspacing not to exceed 4.5".
- (5) Front multiple shock kit option recommended to reduce body roll and to improve high speed handling and stability.
- (6) Four shocks must be ordered separately. Reservoir shocks require reservoir mounting kits - one pair required per shock - sold separately.
- (7) Vehicle will require alignment after kit is installed.
- (8) Tie Rod Reinforcement kit threads directly onto the factory tie rods to provide extra support for GM vehicles equipped with over-sized tires and wheels.

# SUSPENSION KITS

## GM Blazer/ Suburban/ Tahoe 2DR/ Yukon 1500 2DR — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
------	-------------	---------------	------	--------------------------------------	---------------------	-------

### GM Blazer/ Suburban/ Tahoe 2DR / Yukon 2DR 1500 - 4WD

#### 6.0" LIFT - Bracket System

92-99	Upper A-Arm Drop Brackets	<b>K1048B</b> Kit w/ES Shocks	1	51088B-1	Kit Box	Max Tire Size 35" x 12.50" Wheel Diameter OE" + Wheel Width 8" - 10" Backspace 3.25" - 5.00" Bolt Pattern 6 x 6.5" Bolt Code 83 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	1
	Drop Crossmembers		1	51088B-2	Kit Box		2
	Diff Drop Brackets	OR	1	51088B-3	Kit Box		6
	Sway Bar Links	<b>K1048BMX</b> Kit w/MX6 Shocks	1	51088B-5	Kit Box		
	Related Hardware		PLUS	1	51088B-4		Front / Rear ES3000 Shocks
	Rear 4" Blocks	OR	1	51088B-4	Front / Rear ES3000 Shocks		
	Rear U-Bolts		2	MX6042	Front MX6 Shocks		
	Rear Add-A-Leafs		2	MX6043	Rear MX6 Shocks		

### GM Blazer/ Suburban/ Tahoe 2DR / Yukon 2DR 1500 - 4WD

#### 4.0" LIFT - Bracket System

92-99	Upper A-Arm Drop Brackets	<b>K1053B</b> Kit w/ES Shocks	1	51494B-1	Kit Box	Max Tire Size 35" x 12.50" Wheel Diameter OE" + Wheel Width 8" - 10" Backspace 3.25" - 5.00" Bolt Pattern 6 x 6.5" Bolt Code 83 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	1
	Drop Crossmembers		1	51494B-2	Kit Box		2
	Diff Drop Brackets	OR	1	51494B-3	Kit Box		6
	Sway Bar Links	<b>K1053BMX</b> Kit w/MX6 Shocks	1	51494B-4	Front / Rear ES3000 Shocks		
	Related Hardware		PLUS	1	51494B-4		Front / Rear ES3000 Shocks
	Rear 3.5" Blocks	OR	2	MX6040	Front MX6 Shocks		
	Rear U-Bolts		2	MX6041	Rear MX6 Shocks		

OPTIONS	Notes:
Front Multiple Shock Mount Kit 4"-6" Lift	
51294B Shock Mount Kit (GM1500 Only)	3,5
Multiple Shock Kit - Shock Options 6" Lift	
320500 ES3000	3
920500 ES9000	3
MX6088 MX6 Adjustable	3
MX6064R MX6R Reservoir	3
Reservoir Mounting Kits - Stainless	
63012 2" Body to 2" Body	3
63013 2" Body to 1.5" Hoop Tube	3

OPTIONS	Notes:
Reservoir Mounting Kits - Aluminum	
63016 MX6R Body to MX6R Reservoir	3
63017 MX6R Body to 1.5" Hoop Tube	3
Multiple Shock Kit - Shock Options 4" Lift	
318509 ES3000 Shock	3
918509 ES9000 Shock	3
Traction Bars	
71000B Rear Traction Bars - Pair	5
71182B Rear Traction Bar Mounting Kit	5

OPTIONS	Notes:
Traction Bars / Tahoe / Yukon 4DR	
71000B Rear Traction Bars - Pair	5
71199B Rear Traction Bar Mounting Kit	5
Steering Stabilizer	
217513 Stabilizer for K1047 / K1048 / 51088	
Steering Centerlink	
21093 Replacement Centerlink Kit	7

- (1) Moderate to severe driveline vibration may occur at speeds above 25 mph when 4x4 Hi is engaged. Rear driveline modification may be necessary for short wheel-base vehicles.
- (2) Not recommended for 98-99 GM1500 4WD vehicles with Auto Track NP246 transfer case.
- (3) Four shocks must be ordered separately. Reservoir shocks require reservoir mounting kits - one pair required per shock - sold separately.
- (5) Excludes standard cab short bed and 2-door Tahoe/Yukon.
- (6) Vehicle will require alignment after kit is installed.
- (7) Replacement Steering Centerlink for 6" Kits produced between 1992-2003.

## GM Tahoe 4DR/ Yukon 1500 4DR — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes		
<b>GM Tahoe 4DR / Yukon 4DR 1500 - 4WD</b>								
<b>6.0" LIFT - Bracket System</b>								
95-99	Front Cross members Upper A-arm drop brackets Differential Brackets Related Hardware Rear 4" Blocks Rear U-Bolts Rear Add-A-Leafs	<b>K1047B</b> Kit w/ES Shocks	1	51088B-1	Kit Box	Max Tire Size 35" x 12.50"	1	
			1	51088B-2	Kit Box	Wheel Diameter OE" +	2	
		<b>K1047BMX</b> Kit w/MX6 Shocks	1	51088B-3	Kit Box	Wheel Width 8" - 10"	Backspace 3.25" - 5.00" Bolt Pattern 6 x 6.5" Bolt Code 83 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	6
			1	51088B-5	Kit Box			
		1	51095B	Torsion Bar Brackets				
		PLUS		1	51088B-4	Front / Rear ES3000 Shocks		
		OR		2	MX6042	Front MX6 Shocks		
				2	MX6043	Rear MX6 Shocks		
		<b>4.0" LIFT - Bracket System</b>						
		95-99	Upper A-Arm Drop Brackets Drop Crossmembers Diff Drop Brackets Sway Bar Links Related Hardware Rear 3.5" Blocks Rear U-Bolts	<b>K1049B</b> Kit w/ES Shocks	1	51494B-1	Kit Box	Max Tire Size 33" x 12.50"
1	51494B-2				Kit Box	Wheel Diameter OE" +	2	
<b>K1049BMX</b> Kit w/MX6 Shocks	1			51494B-3	Kit Box	Wheel Width 8" - 10"	Backspace 3.25" - 5.00" Bolt Pattern 6 x 6.5" Bolt Code 83 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26144	6
	1			51095B	Torsion Bar Brackets			
PLUS				1	51494B-4	Front / Rear ES3000 Shocks		
OR				2	MX6040	Front MX6 Shocks		
				2	MX6041	Rear MX6 Shocks		

OPTIONS	Notes:
<b>Front Multiple Shock Mount Kit 4"-6" Lift</b>	
51294B Shock Mount Kit (GM1500 Only)	3,5
<b>Multiple Shock Kit - Shock Options 6" Lift</b>	
320500 ES3000	3
920500 ES9000	3
MX6088 MX6 Adjustable	3
MX6064R MX6R Reservoir	3
<b>Reservoir Mounting Kits - Stainless</b>	
63012 2" Body to 2" Body	3
63013 2" Body to 1.5" Hoop Tube	3

OPTIONS	Notes:
<b>Reservoir Mounting Kits - Aluminum</b>	
63016 MX6R Body to MX6R Reservoir	3
63017 MX6R Body to 1.5" Hoop Tube	3
<b>Multiple Shock Kit - Shock Options 4" Lift</b>	
318509 ES3000 Shock	3
918509 ES9000 Shock	3
<b>Traction Bars</b>	
71000B Rear Traction Bars - Pair	5
71182B Rear Traction Bar Mounting Kit	5

OPTIONS	Notes:
<b>Traction Bars / Tahoe / Yukon 4DR</b>	
71000B Rear Traction Bars - Pair	5
71199B Rear Traction Bar Mounting Kit	5
<b>Steering Stabilizer</b>	
217513 Stabilizer for K1047 / K1048 / 51088	
<b>Steering Centerlink</b>	
21093 Replacement Centerlink Kit	7

- (1) Moderate to severe driveline vibration may occur at speeds above 25 mph when 4x4 Hi is engaged. Rear driveline modification may be necessary for short wheel-base vehicles.
- (2) Not recommended for 98-99 GM1500 4WD vehicles with Auto Track NP246 transfer case.
- (3) Four shocks must be ordered separately. Reservoir shocks require reservoir mounting kits - one pair required per shock - sold separately.
- (5) Excludes standard cab short bed and 2-door Tahoe/Yukon.
- (6) Vehicle will require alignment after kit is installed.
- (7) Replacement Steering Centerlink for 6" Kits produced between 1992-2003.

# SUSPENSION KITS

## Blazer/ Jimmy/ Suburban/ 1500 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
Blazer / Jimmy / Suburban - 4WD						
<b>6" LIFT</b>						
87-91	Front Leaf Springs Front U-Bolts Stainless Brake Lines Drop Steering Arm Related Brackets Rear 4" Blocks Rear U-Bolts Rear Add-A-Leafs	<b>K1019</b> Kit With ES Shocks	2 1 1 1 1 1 1 Plus 2 2	11511 Front Leaf Spring 58301 Front U-Bolts 58401 Rear Block Kit 13122 Rear Add-A-Leafs 7225 Stainless Brake Lines GM400 Drop Steering Arm 324509 Front ES3000 Shocks 329500 Rear ES3000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 5 6 7
<b>4" LIFT</b>						
87-91	Front Leaf Springs Front U-Bolts Drop Steering Arm Related Brackets Rear 4" Blocks Rear U-Bolts	<b>K1020</b> Kit With ES Shocks	2 1 1 1 Plus 2 2	11411 Front Leaf Spring 58301 Front U-Bolts 58401 Rear Block Kit GM400 Drop Steering Arm 322500 Front ES3000 Shocks 326500 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 5 6 7
<b>2.5" LIFT</b>						
87-91	Front Leaf Springs Front U-Bolts Related Brackets Rear 2.5" Blocks Rear U-Bolts	<b>K1021</b> Kit With ES Shocks	2 1 1 Plus 2 2	11211 Front Leaf Spring 58301 Front U-Bolts 58251 Rear Block Kit 321500 Front ES3000 Shocks 325509 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 5 6 7

OPTIONS	Notes:
Add-A-Leaf	
13122 1.5-2" Rear Add-A-Leaf	
Factory Dual Shock Options 2.5" - 6" Lift	
321500 2.5" Lift	5
322500 4.0" Lift	5
324509 6.0" lift	5
Front Multiple Shock Mount Kit - Bracket	
58103 Shock Mount Kit - No Shocks	
Multiple Shock Kit - Shock Options 2.5" Lift	
322500 ES3000	
MX6010 MX6 Adjustable	

OPTIONS	Notes:
Multiple Shock Kit - Shock Options 4" Lift	
324509 ES3000	
MX6027 MX6 Adjustable	
Multiple Shock Kit - Shock Options 6" Lift	
325509 ES3000	
MX6012 MX6 Adjustable	
Rear Leaf Springs 52"	
13311 Rear Leaf Spring - 4" Lift	
13411 Rear Leaf Spring - 6" Lift	
Rear Leaf Springs 56"	
13511 Rear Leaf Spring - 4" Lift	
13611 Rear Leaf Spring - 6" Lift	

OPTIONS	Notes:
Rear U-Bolt Kits (For use w/Rear Leaf Springs)	
50204 5/8"-18 x 2.950" x 7.80" Round	
50165 5/8"-18 x 3.650" x 9.00" Round	
Steering Stabilizer Kits	
220561 Dual Stabilizer Kit - ES2000	
224000 Single Stabilizer Kit - ES2000	
Drag Link	
GDL40 4" Adj Drag Link (73-91) GM	
Steering Gear Repair	
CC100 Pwr Steering Frame Repair Kit (67-87) GM	

- (1) Driveline modifications may be required for height increases over 2.5" due to increased driveline angles.
- (2) Exhaust modifications may be required for height increases of 4" and are normally required for 6" height increases.
- (3) All ride height increases are approximate and will vary due to vehicle specification (Engine size, factory options, trail equipment, etc).
- (5) Two additional front shocks must be orderd separately for vehicles equipped with factory dual shocks. See options.
- (6) Replacement 4" and 6" rear leaf springs are available and sold separately. See options.
- (7) Vehicle will require alignment after kit is installed.



## Blazer/ Jimmy/ Suburban/ 1500 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
Blazer / Jimmy / Suburban - 4WD						
<b>6" LIFT</b>						
79-86	Front Leaf Springs Front U-Bolts Stainless Brake Lines Drop Steering Arm Related Brackets Rear 4" Blocks Rear U-Bolts Rear Add-A-Leafs	<b>K1013</b> Kit With ES Shocks	2 1 1 1 1 1 1 Plus 2 2	11511 Front Leaf Spring 58201 Front U-Bolts 58401 Rear Block Kit 13122 Rear Add-A-Leafs 7220 Stainless Brake Lines GM400 Drop Steering Arm 324509 Front ES3000 Shocks 329500 Rear ES3000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 5 6 7
<b>4" LIFT</b>						
79-86	Front Leaf Springs Front U-Bolts Drop Steering Arm Related Brackets Rear 4" Blocks Rear U-Bolts	<b>K1011</b> Kit With ES Shocks	2 1 1 1 Plus 2 2	11411 Front Leaf Spring 58201 Front U-Bolts 58401 Rear Block Kit GM400 Drop Steering Arm 322500 Front ES3000 Shocks 326500 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 5 6 7
<b>2.5" LIFT</b>						
79-86	Front Leaf Springs Front U-Bolts Related Brackets Rear 2.5" Blocks Rear U-Bolts	<b>K1012</b> Kit With ES Shocks	2 1 1 Plus 2 2	11211 Front Leaf Spring 58201 Front U-Bolts 58251 Rear Block Kit 321500 Front ES3000 Shocks 325509 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 5 6 7

OPTIONS	Notes:
Add-A-Leaf	
13122 1.5-2" Rear Add-A-Leaf	
Factory Dual Shock Options 2.5"- 6" Lift	
321500 2.5" Lift	5
322500 4.0" Lift	5
324509 6.0" lift	5
Front Multiple Shock Mount Kit - Bracket	
58103 Shock Mount Kit - No Shocks	
Multiple Shock Kit - Shock Options 2.5" Lift	
322500 ES3000	
MX6010 MX6 Adjustable	

OPTIONS	Notes:
Multiple Shock Kit - Shock Options 4" Lift	
324509 ES3000	
MX6027 MX6 Adjustable	
Multiple Shock Kit - Shock Options 6" Lift	
325509 ES3000	
MX6012 MX6 Adjustable	
Rear Leaf Springs 52"	
13311 Rear Leaf Spring - 4" Lift	
13411 Rear Leaf Spring - 6" Lift	
Rear Leaf Springs 56"	
13511 Rear Leaf Spring - 4" Lift	
13611 Rear Leaf Spring - 6" Lift	

OPTIONS	Notes:
Rear U-Bolt Kits (For use w/Rear Leaf Springs)	
50204 5/8"-18 x 2.950" x 7.80" Round	
50165 5/8"-18 x 3.650" x 9.00" Round	
Steering Stabilizer Kits	
220561 Dual Stabilizer Kit - ES2000	
224000 Single Stabilizer Kit - ES2000	
Drag Link	
GDL40 4" Adj Drag Link (73-91) GM	
Steering Gear Repair	
CC100 Pwr Steering Frame Repair Kit (67-87) GM	

**CHEVY/GMC**

- (1) Driveline modifications may be required for height increases over 2.5" due to increased driveline angles.
- (2) Exhaust modifications may be required for height increases of 4" and are normally required for 6" height increases.
- (3) All ride height increases are approximate and will vary due to vehicle specification (Engine size, factory options, trail equipment, etc).
- (5) Two additional front shocks must be orderd separately for vehicles equipped with factory dual shocks. See options.
- (6) Replacement 4" and 6" rear leaf springs are available and sold separately. See options.
- (7) Vehicle will require alignment after kit is installed.

# SUSPENSION KITS

## Blazer/ Jimmy/ Suburban/ 1500 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
Blazer / Jimmy / Suburban - 4WD						
<b>6" LIFT</b>						
77-78	Front Leaf Springs Front U-Bolts Stainless Brake Lines Drop Steering Arm Related Brackets Rear 4" Blocks Rear U-Bolts Rear Add-A-Leafs	<b>K1010</b> Kit With ES Shocks	2 1 1 1 1 1 1 Plus 2 2	11511 Front Leaf Spring 58201 Front U-Bolts 58401 Rear Block Kit 13122 Rear Add-A-Leafs 7215 Stainless Brake Lines GM400 Drop Steering Arm 324509 Front ES3000 Shocks 329500 Rear ES3000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 4 5 6 7
<b>4" LIFT</b>						
77-78	Front Leaf Springs Front U-Bolts Drop Steering Arm Related Brackets Rear 4" Blocks Rear U-Bolts	<b>K1011</b> Kit With ES Shocks	2 1 1 1 Plus 2 2	11411 Front Leaf Spring 58201 Front U-Bolts 58401 Rear Block Kit GM400 Drop Steering Arm 322500 Front ES3000 Shocks 326500 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 5 6 7
<b>2.5" LIFT</b>						
77-78	Front Leaf Springs Front U-Bolts Related Brackets Rear 2.5" Blocks Rear U-Bolts	<b>K1012</b> Kit With ES Shocks	2 1 1 Plus 2 2	11211 Front Leaf Spring 58201 Front U-Bolts 58251 Rear Block Kit 321500 Front ES3000 Shocks 325509 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 5 6 7

OPTIONS	Notes:
Add-A-Leaf	
13122 1.5-2" Rear Add-A-Leaf	
Factory Dual Shock Options 2.5" - 6" Lift	
321500 2.5" Lift	5
322500 4.0" Lift	5
324509 6.0" lift	5
Front Multiple Shock Mount Kit - Bracket	
58103 Shock Mount Kit - No Shocks	
Multiple Shock Kit - Shock Options 2.5" Lift	
322500 ES3000	
MX6010 MX6 Adjustable	

OPTIONS	Notes:
Multiple Shock Kit - Shock Options 4" Lift	
324509 ES3000	
MX6027 MX6 Adjustable	
Multiple Shock Kit - Shock Options 6" Lift	
325509 ES3000	
MX6012 MX6 Adjustable	
Rear Leaf Springs 52"	
13311 Rear Leaf Spring - 4" Lift	
13411 Rear Leaf Spring - 6" Lift	
Rear Leaf Springs 56"	
13511 Rear Leaf Spring - 4" Lift	
13611 Rear Leaf Spring - 6" Lift	

OPTIONS	Notes:
Rear U-Bolt Kits (For use w/Rear Leaf Springs)	
50204 5/8"-18 x 2.950" x 7.80" Round	
50165 5/8"-18 x 3.650" x 9.00" Round	
Steering Stabilizer Kits	
220561 Dual Stabilizer Kit - ES2000	
224000 Single Stabilizer Kit - ES2000	
Drag Link	
GDL40 4" Adj Drag Link (73-91) GM	
Steering Gear Repair	
CC100 Pwr Steering Frame Repair Kit (67-87) GM	

- (1) Driveline modifications may be required for height increases over 2.5" due to increased driveline angles.
- (2) Exhaust modifications may be required for height increases of 4" and are normally required for 6" height increases.
- (3) All ride height increases are approximate and will vary due to vehicle specification (Engine size, factory options, trail equipment, etc).
- (5) Two additional front shocks must be orderd separately for vehicles equipped with factory dual shocks. See options.
- (6) Replacement 4" and 6" rear leaf springs are available and sold separately. See options.
- (7) Vehicle will require alignment after kit is installed.

## Blazer/ Jimmy/ Suburban/ 1500 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
Blazer/ Jimmy/ Suburban 1500 - 4WD						
<b>6" LIFT</b>						
73-76	Front Leaf Springs Front U-Bolts Stainless Brake Lines Drop Steering Arm Related Brackets Rear 4" Blocks Rear U-Bolts Rear Add-A-Leafs	<b>K1007</b> Kit With ES Shocks	2 1 1 1 1 1 1 Plus 2 2	11511 Front Leaf Spring 13122 Front U-Bolts 58101 Rear Block Kit 58401 Rear Add-A-Leafs 7215 Stainless Brake Lines GM400 Drop Steering Arm 324509 Front ES3000 Shocks 329500 Rear ES3000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 5 6 7
<b>4" LIFT</b>						
73-76	Front Leaf Springs Front U-Bolts Drop Steering Arm Related Brackets Rear 4" Blocks Rear U-Bolts	<b>K1008</b> Kit With ES Shocks	2 1 1 1 Plus 2 2	11411 Front Leaf Spring 58101 Front U-Bolts 58401 Rear Block Kit GM400 Drop Steering Arm 322500 Front ES3000 Shocks 326500 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 5 6 7
<b>2.5" LIFT</b>						
73-76	Front Leaf Springs Front U-Bolts Related Brackets Rear 2.5" Blocks Rear U-Bolts	<b>K1009</b> Kit With ES Shocks	2 1 1 Plus 2 2	11211 Front Leaf Spring 58101 Front U-Bolts 58251 Rear Block Kit 321500 Front ES3000 Shocks 325509 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 5 6 7

OPTIONS	Notes:
<b>Add-A-Leaf</b>	
13122 1.5-2" Rear Add-A-Leaf	
<b>Factory Dual Shock Options 2.5" - 6" Lift</b>	
321500 2.5" Lift	5
322500 4.0" Lift	5
324509 6.0" lift	5
<b>Front Multiple Shock Mount Kit - Bracket</b>	
58103 Shock Mount Kit - No Shocks	
<b>Multiple Shock Kit - Shock Options 2.5" Lift</b>	
322500 ES3000	
MX6010 MX6 Adjustable	

OPTIONS	Notes:
<b>Multiple Shock Kit - Shock Options 4" Lift</b>	
324509 ES3000	
MX6027 MX6 Adjustable	
<b>Multiple Shock Kit - Shock Options 6" Lift</b>	
325509 ES3000	
MX6012 MX6 Adjustable	
<b>Rear Leaf Springs 52"</b>	
13311 Rear Leaf Spring - 4" Lift	
13411 Rear Leaf Spring - 6" Lift	
<b>Rear Leaf Springs 56"</b>	
13511 Rear Leaf Spring - 4" Lift	
13611 Rear Leaf Spring - 6" Lift	

OPTIONS	Notes:
<b>Rear U-Bolt Kits (For use w/Rear Leaf Springs)</b>	
50204 5/8"-18 x 2.950" x 7.80" Round	
50165 5/8"-18 x 3.650" x 9.00" Round	
<b>Steering Stabilizer Kits</b>	
220561 Dual Stabilizer Kit - ES2000	
224000 Single Stabilizer Kit - ES2000	
<b>Drag Link</b>	
GDL40 4" Adj Drag Link (73-91) GM	
<b>Steering Gear Repair</b>	
CC100 Pwr Steering Frame Repair Kit (67-87) GM	

**CHEVY/GMC**

- (1) Driveline modifications may be required for height increases over 2.5" due to increased driveline angles.
- (2) Exhaust modifications may be required for height increases of 4" and are normally required for 6" height increases.
- (3) All ride height increases are approximate and will vary due to vehicle specification (Engine size, factory options, trail equipment, etc).
- (5) Two additional front shocks must be orderd separately for vehicles equipped with factory dual shocks. See options.
- (6) Replacement 4" and 6" rear leaf springs are available and sold separately. See options.
- (7) Vehicle will require alignment after kit is installed.

# SUSPENSION KITS

## Avalanche/ Suburban/ Yukon XL 2500 — 2WD/ 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes			
<b>Avalanche/ Suburban/ Yukon XL 2500</b>									
<b>6.0" LIFT - Bracket System</b>									
00-12	Upper A-Arm Drop Brackets Drop Crossmembers Diff Drop Brackets Sway Bar Links Related Hardware Rear 4" Blocks Rear U-Bolts Rear Add-A-Leafs Steering Stabilizer	<b>K1051B</b> Kit w/ES Shocks	1	51800B-1	Kit Box	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.25" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145			
		OR	1	51800B-2	Kit Box				
		<b>K1051BP</b> Kit w/Pro Runner Shocks	1	51800B-3	Kit Box				
		OR	1	51099B-5	Kit Box				
		<b>K1051BMX</b> Kit w/MX6 Shocks	PLUS						
		OR	1	51800B-4	Front / Rear ES9000 Shocks				
		OR	1	51800BP-4	Front / Rear Pro Runner Shocks				
		OR	2	MX6002	Front MX6 Shocks				
		OR	2	MX6003	Rear MX6 Shocks				
		<b>6.0" LIFT - Knuckle System</b>							
00-12	Steering Knuckles Drop Crossmembers Diff Drop Brackets Sway Bar Links CV Axle Spacers Related Hardware Rear 4" Blocks Rear U-Bolts	<b>K1084B</b> Kit w/ES Shocks	1	51801B-1	Kit Box	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145			
		OR	1	51801B-2	Kit Box				
		<b>K1084BP</b> Kit w/Pro Runner Shocks	1	51801B-3	Kit Box				
		OR	PLUS						
		<b>K1084BMX</b> Kit w/MX6 Shocks	1	51801B-4	Front / Rear ES9000 Shocks				
		OR	1	51801BP-4	Front / Rear Pro Runner Shocks				
		OR	2	MX6168	Front MX6 Shocks				
		OR	2	MX6167	Rear MX6 Shocks				
		<b>2.0" Level Lift</b>							
		00-12	Torsion Keys Front Shock Extensions		1		63200	Torsion Keys Front Shock Extensions	Max Tire Size 32" x 11.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 3.25" - 5.25" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145

CHEVY / GMC

OPTIONS	Notes:
<b>Driveline Options - K1051</b>	
51256 CV Style Front Driveshaft for 6.0L / 8.1L	
<b>Add-A-Leaf - Pair</b>	
51099B-5 Rear Add-A-Leaf	
<b>Multiple Shock Mount Kit - K1084</b>	
51214B-1 Shock Mount Kit - No Shocks	6
51214B Shock Mount Kit - w/ ES9000	
<b>Multiple Shock Kit - Shock Options - K1084 Kit</b>	
915509 ES9000	6
<b>Multiple Shock Mount Kit - K1051 Kit</b>	
51211B Shock Mount Kit - No Shocks	6,7

OPTIONS	Notes:
<b>Multiple Shock Kit - Shock Options - K1051 Kit</b>	
320500 ES3000	6
920500 ES9000	6
MX6088 MX6 Adjustable	6
MX6064R MX6R Reservoir	6
<b>Reservoir Mounting Kits - Stainless</b>	
63012 2" Body to 2" Body	6
63013 2" Body to 1.5" Hoop Tube	6
<b>Reservoir Mounting Kits - Aluminum</b>	
63016 MX6R Body to MX6R Reservoir	6
63017 MX6R Body to 1.5" Hoop Tube	6

OPTIONS	Notes:
<b>Front Stainless Steel Skid plate</b>	
51100 Stainless Steel Skid Plate for K1051	
51101 Stainless Steel Skid Plate for K1084	
<b>Sway Bar End Links</b>	
91-6100B Sway Bar End Link Kit for K1051B	
<b>Level Lift</b>	
63305 Front Tie Rod Reinforcement Kit	
63201 Rear Block w/ U-Bolts 1"	
63202 Rear Block w/ U-Bolts 2"	

- (2) Due to variations in body trim ( ie Avalanche body cladding) 33x12.50 tires may be required.
- (4) Vehicles with 6.0L engine - exhaust crossover kit 51810 will be required for 4WD and sold separately.
- (5) Vehicles with 8.1L engine - exhaust crossover modification will be required for 4WD.
- (6) Four shocks must be ordered separately. Reservoir shocks require reservoir mounting kits - one pair required per shock - sold separately.
- (7) A maximum backspace of 4.5" is recommended when using multiple shock hoop kit with K1051 to provide adequate clearance between the tires and shock absorbers.
- (8) A maximum backspace of 4.75" is recommended when using 16" and 17" wheels with the K1084 Knuckle System.
- (10) Use of a 35" x 12.5" tire may require fender relocation kit 90-6640 for additional tire to fender clearance.
- (11) Vehicle will require alignment after kit is installed.

## GM Suburban 2500 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes		
<b>GM Suburban 2500 - 4WD</b>								
<b>6.0" LIFT - Bracket System - Vehicles w/Cast Lower Arms</b>								
93-99	Upper A-Arm Drop Brackets	<b>K1044B</b> Kit w/ES Shocks	1	51893B-1	Kit Box	Max Tire Size	35" x 12.50"	1
	Drop Crossmembers		1	51893B-2	Kit Box	Wheel Diameter	OE" +	2
	Diff Drop Brackets		1	51893B-3	Kit Box	Wheel Width	8" - 10"	4
	Sway Bar Links		PLUS			Backspace	3.25" - 5.00"	6
	Related Hardware		1	51894B-4	Front / Rear ES3000 Shocks & ES2000 Steering Stabilizer	Bolt Pattern	8 x 6.5"	
	Rear 4" Blocks					Bolt Code	82	
Rear U-Bolts				Lug Nut Size	14mm x 1.5			
					Lug Nut Kit	PXA26145		
<b>6.0" LIFT - Bracket System - Vehicles w/Stamped Lower Arms</b>								
93-99	Upper A-Arm Drop Brackets	<b>K1109B</b> Kit w/ES Shocks	1	51893B-1	Kit Box	Max Tire Size	35" x 12.50"	1
	Drop Crossmembers		1	51893B-2	Kit Box	Wheel Diameter	OE" +	2
	Diff Drop Brackets		1	51893B-3	Kit Box	Wheel Width	8" - 10"	4
	Sway Bar Links		PLUS			Backspace	3.25" - 5.00"	6
	Related Hardware		1	51893B-4	Front / Rear ES3000 Shocks & ES2000 Steering StabilizerT	Bolt Pattern	8 x 6.5"	
	Rear 4" Blocks					Bolt Code	82	
Rear U-Bolts				Lug Nut Size	14mm x 1.5			
					Lug Nut Kit	PXA26145		

OPTIONS		Notes:
Add-A-leaf Kit		
51088B-5	1.5 Rear Add-A-Leaf	4
Steering Center Link		
21093	Replacement Center link Kit	7

- (1) Driveline Modifications may be required due to increase driveline angles
- (2) Not recommended for 98-99 GM2500 4WD vehicles with Auto Track NP246 transfer case.
- (4) Rear Add-A-Leaf 51088B-5 can be used to increase the rear lift height of 51893B / 51894B by 1.5".
- (6) Vehicles will require alignment after kit is installed.
- (7) Replacement Steering Centerlink for 6" Kits produced between 1992-2003

# SUSPENSION KITS

## Suburban 3/4 Ton — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
Suburban 3/4 Ton - 4WD						
<b>6" LIFT</b>						
87-91	Front Leaf Springs Front U-Bolts Stainless Brake Lines Drop Steering Arm Related Brackets Rear 4" Blocks Rear U-Bolts Rear Add-A-Leafs	<b>K1123</b> Kit With ES Shocks	2 1 1 1 1 1 Plus 2 2	11511 Front Leaf Spring 58301 Front U-Bolts 58402 Rear Block Kit 13122 Rear Add-A-Leafs 7215 Stainless Brake Lines GM400 Drop Steering Arm 324509 Front ES3000 Shocks 329500 Rear ES3000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 4 5 6 7
<b>4" LIFT</b>						
87-91	Front Leaf Springs Front U-Bolts Drop Steering Arm Related Brackets Rear 4" Blocks Rear U-Bolts	<b>K1122</b> Kit With ES Shocks	2 1 1 1 Plus 2 2	11411 Front Leaf Spring 58301 Front U-Bolts 58402 Rear Block Kit GM400 Drop Steering Arm 322500 Front ES3000 Shocks 326500 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 5 6 7
<b>2.5" LIFT</b>						
87-91	Front Leaf Springs Front U-Bolts Related Brackets Rear 2.5" Blocks Rear U-Bolts	<b>K1121</b> Kit With ES Shocks	2 1 1 Plus 2 2	11211 Front Leaf Spring 58301 Front U-Bolts 58252 Rear Block Kit 321500 Front ES3000 Shocks 325509 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 5 6 7
Suburban 3/4 Ton - 4WD						
<b>6" LIFT</b>						
76-86	Front Leaf Springs Front U-Bolts Stainless Brake Lines Drop Steering Arm Related Brackets Rear 4" Blocks Rear U-Bolts Rear Add-A-Leafs	<b>K1058</b> Kit With ES Shocks	2 1 1 1 1 1 Plus 2 2	11511 Front Leaf Spring 58201 Front U-Bolts 58402 Rear Block Kit 13122 Rear Add-A-Leafs 7215 Stainless Brake Lines GM400 Drop Steering Arm 324509 Front ES3000 Shocks 329500 Rear ES3000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 4 5 6
<b>4" LIFT</b>						
76-86	Front Leaf Springs Front U-Bolts Drop Steering Arm Related Brackets Rear 4" Blocks Rear U-Bolts	<b>K1059</b> Kit With ES Shocks	2 1 1 1 Plus 2 2	11411 Front Leaf Spring 58201 Front U-Bolts 58402 Rear Block Kit GM400 Drop Steering Arm 322500 Front ES3000 Shocks 326500 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 5 6
<b>2.5" LIFT</b>						
76-86	Front Leaf Springs Front U-Bolts Related Brackets Rear 2.5" Blocks Rear U-Bolts	<b>K1060</b> Kit With ES Shocks	2 1 1 Plus 2 2	11211 Front Leaf Spring 58201 Front U-Bolts 58252 Rear Block Kit 321500 Front ES3000 Shocks 325509 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 5 6

CHEVY / GMC

## Suburban 3/4 Ton — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
Suburban 3/4 Ton - 4WD						
<b>6" LIFT</b>						
73-76	Front Leaf Springs Front U-Bolts Stainless Brake Lines Drop Steering Arm Related Brackets Rear 4" Blocks Rear U-Bolts Rear Add-A-Leafs	<b>K1022</b> Kit With ES Shocks	2 1 1 1 1 1 1 Plus 2 2	11511 Front Leaf Spring 58101 Front U-Bolts 58402 Rear Block Kit 13122 Rear Add-A-Leafs 7215 Stainless Brake Lines GM400 Drop Steering Arm 324509 Front ES3000 Shocks 329500 Rear ES3000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 4 5 6
<b>4" LIFT</b>						
73-76	Front Leaf Springs Front U-Bolts Drop Steering Arm Related Brackets Rear 4" Blocks Rear U-Bolts	<b>K1125</b> Kit With ES Shocks	2 1 1 1 Plus 2 2	11411 Front Leaf Spring 58101 Front U-Bolts 58402 Rear Block Kit GM400 Steering Arm 322500 Front ES3000 Shocks 326500 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 5 6
<b>2.5" LIFT</b>						
73-76	Front Leaf Springs Front U-Bolts Related Brackets Rear 2.5" Blocks Rear U-Bolts	<b>K1124</b> Kit With ES Shocks	2 1 1 Plus 2 2	11211 Front Leaf Spring 58101 Front U-Bolts 58252 Rear Block Kit 321500 Front ES3000 Shocks 325509 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 7/16" Lug Nut Kit N/A	1 2 3 5 6

OPTIONS	Notes:
<b>Factory Dual Shock Options 2.5" - 6" Lift</b>	
321500 2.5" Lift	5
322500 4.0" Lift	5
324509 6.0" lift	5
<b>Multiple Shock Mount Kit - Bracket</b>	
58103 Shock Mount Kit - No Shocks	
<b>Multiple Shock Kit - Shock Options 2.5" Lift</b>	
322500 ES3000	
MX6010 MX6 Adjustable	
<b>Multiple Shock Kit - Shock Options 4" Lift</b>	
324509 ES3000	
MX6027 MX6 Adjustable	

OPTIONS	Notes:
<b>Multiple Shock Kit - Shock Options 6" Lift</b>	
325509 ES3000	
MX6012 MX6 Adjustable	
<b>Add-A-Leaf</b>	
13122 1.5-2" Rear Add-A-Leaf	
<b>Rear Leaf Springs 52"</b>	
13311 Rear Leaf Spring - 4" Lift	
13411 Rear Leaf Spring - 6" Lift	
<b>Rear Leaf Springs 56"</b>	
13511 Rear Leaf Spring - 4" Lift	
13611 Rear Leaf Spring - 6" Lift	

OPTIONS	Notes:
<b>Rear U-Bolt Kits (For use w/Rear Leaf Springs)</b>	
50204 5/8"-18 x 2.950" x 7.80" Round	
50165 5/8"-18 x 3.650" x 9.00" Round	
<b>Steering Stabilizer Kits</b>	
220561 Dual Stabilizer Kit - ES2000	
224000 Single Stabilizer Kit - ES2000	
<b>Drag Link</b>	
GDL40 4" Adj drag link (73-91) GM	
<b>Steering Gear</b>	
CC100 Steering Gear Frame Repair kit (67-87) GM	

- (1) Driveline modifications may be required for height increases over 2.5" due to increased driveline angles.
- (2) Exhaust modifications may be required for height increases of 4" and are normally required for 6" height increases.
- (3) All ride height increases are approximate and will vary due to vehicle specification. (engine size, factory options, trail equipment, etc)
- (4) 7215 brake lines are for vehicles up to 7200 lbs GVW.
- (5) Two additional front shocks must be ordered separately for vehicles equipped with factory dual shocks. See options.
- (6) Replacement 4" and 6" rear leaf springs are available and sold separately. See options.
- (7) Vehicle will require alignment after kit is installed





## Ram 1500 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes	
<b>Ram 1500 - 4WD 3.0L Eco Diesel</b>							
<b>6" LIFT</b>							
14-16	Steering Knuckles Drop Crossmembers Differential Skid Plate Diff Drop Brackets Front Sway Bar Extensions Rear Sway Bar Links Front Brake Lines Front Drive Shaft Spacer Related Hardware Rear Control Arm Brackets Rear Coil Spacers Rear Track Bar Bracket	<b>K2101B</b> Kit w/Front Strut Spacers and Rear ES 9000 <b>Shocks</b> OR <b>K2101BP</b> Kit w/Front Strut Spacer and Rear Pro Runner Shocks OR <b>K2101BPS</b> Kit w/Front Strut Spacers and Front / Rear Pro Runner Shocks OR <b>K2101BPX</b> Kit w/Front MX2.75 Coilovers and Rear Pro Runner Shocks OR <b>K2101BMX</b> Kit w/Front MX2.75 Coilovers and Rear MX-6 Shocks	1 1 1 1 1 PLUS 1 OR 1 OR 1 2 OR 1 1 OR 1 1	56750B-1 56747B-2 56747B-3 56755B-4 56747B-5 56747B-6 56747BP-6 56747BP-6 ZX2014 56747BPX-6 56747BPX-7 56747BMX-6 56747BMX-7	Kit Box Kit Box Kit Box Kit Box Kit Box Front Strut Spacers w/Rear ES9000 Front Strut Spacers w/Rear Pro Runner Shocks Front Strut Spacers w/Rear Pro Runner Shocks Front Pro Runner SS Struts Front MX2.75 Coilover wRear Pro Runner Shocks Front MX2.75 Coilover wRear Pro Runner Shocks Front MX2.75 Coilover wRear MX6 Shocks Front MX2.75 Coilover wRear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 18" + Wheel Width 8" - 9.5" Backspace 4" - 5" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 9/16" Lug Nut Kit PXA26194	4 5
<b>Ram 1500 - 4WD Gas</b>							
<b>6" LIFT</b>							
12-16	Steering Knuckles Drop Crossmembers Differential Skid Plate Diff Drop Brackets Front Sway Bar Extensions Rear Sway Bar Links Front Brake Lines Front Drive Shaft Spacer Related Hardware Rear Control Arm Brackets Rear Coil Spacers Rear Track Bar Bracket	<b>K2084B</b> Kit w/Front Strut Spacers and Rear ES 9000 <b>Shocks</b> OR <b>K2084BP</b> Kit w/Front Strut Spacer and Rear Pro Runner Shocks OR <b>K2084BPS</b> Kit w/Front Strut Spacers and Front / Rear Pro Runner Shocks OR <b>K2084BPX</b> Kit w/Front MX2.75 Coilovers and Rear Pro Runner Shocks OR <b>K2084BMX</b> Kit w/Front MX2.75 Coilovers and Rear MX-6 Shocks	1 1 1 1 1 Plus 1 OR 1 OR 1 2 OR 1 1 OR 1 1	56750B-1 56747B-2 56747B-3 56750B-4 56747B-5 56747B-6 56747BP-6 56747BP-6 ZX2014 56747BPX-6 56747BPX-7 56747BMX-6 56747BMX-7	Kit Box Kit Box Kit Box Kit Box Kit Box Front Strut Spacers w/Rear ES9000 Front Strut Spacers w/Rear Pro Runner Shocks Front Strut Spacers w/Rear Pro Runner Shocks Front Pro Runner SS Struts Front MX2.75 Coilover wRear Pro Runner Shocks Front MX2.75 Coilover wRear Pro Runner Shocks Front MX2.75 Coilover wRear MX6 Shocks Front MX2.75 Coilover wRear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 18" + Wheel Width 8" - 9.5" Backspace 4" - 5" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 9/16" Lug Nut Kit PXA26194	4 5

OPTIONS	Notes:
Front Coil Over Upgrade 6" Lift	
56009BMX Stage 1 to Stage 2 Conversion Kit (09-15)	
Rear Lowering Kit	
91-7175B 3.25" Rear Coil Spacers Ram 1500 (09-15)	7

- (2) Not Recommended for TRX4 Models.
- (3) Depending on engine combination, front driveshaft may contact the exhaust system upon the installation of this kit. If so, the exhaust system will need to be modified.
- (4) OE wheels will not fit. Must use 18" or larger diameter wheels.
- (5) Vehicle will require alignment after kit is installed.
- (6) In order to install Max Tire Size recommendations, it may be required to retain the factory width/ backspacing/ offset. Some applications may require the removal of the front inner fender mud flaps and/ or other fender modifications.  
Its up to the installer to verify tire fitment and clearance for safe operation of vehicle.
- (7) Optional rear spacers and track bar bracket to lower rear ride height by 1.25".

# SUSPENSION KITS

## Ram 1500 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>Ram 1500 - 4WD Gas</b>						
<b>4" LIFT</b>						
12-16	Steering Knuckles Drop Crossmembers Differential Skid Plate Diff Drop Brackets Front Sway Bar Extensions Rear Sway Bar Links Front Brake Lines Front Drive Shaft Spacer Related Hardware Rear Control Arm Brackets Rear Coil Spacers Rear Track Bar Bracket	<b>K2102B</b> Kit w/Front Strut Spacers and Rear ES 9000 Shocks  Plus 1 56756B-6 Front Strut Spacers w/Rear ES9000	1 1 1 1 1 1	56750B-1 Kit Box 56756B-2 Kit Box 56756B-3 Kit Box 56750B-4 Kit Box 56756B-5 Kit Box	Max Tire Size 35" x 12.50" Wheel Diameter 18" + Wheel Width 8" - 9.5" Backspace 4" - 5" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 9/16" Lug Nut Kit PXA26194	4 5
<b>Ram 1500 - 4WD</b>						
<b>6" LIFT</b>						
09-11	Steering Knuckles Drop Crossmembers Diff Drop Brackets Front Sway Bar Extensions Front Brake Lines Related Hardware Transfer Case Index Ring Front Drive Shaft Spacer Rear Control Arm Brackets Rear Coil Spacers Rear Track Bar Bracket	<b>K2075B</b> Kit w/Front Strut Spacers and Rear ES 9000 Shocks OR <b>K2075BP</b> Kit w/Front Strut Spacer and Rear Pro Runner Shocks OR <b>K2075BPS</b> Kit w/Front Strut Spacers and Front / Rear Pro Runner Shocks OR <b>K2075BPX</b> Kit w/Front MX2.75 Coilovers and Rear Pro Runner Shocks OR <b>K2075BMX</b> Kit w/Front MX2.75 Coilovers and Rear MX-6 Shocks	1 1 1 1 1 Plus 1 OR 1 OR 1 2 OR 1 1 OR 1 1	56747B-1 Kit Box 56747B-2 Kit Box 56747B-3 Kit Box 56747B-4 Kit Box 56747B-5 Kit Box  56747B-6 Front Strut Spacers w/Rear ES9000  56747BP-6 Front Strut Spacers w/Rear Pro Runner Shocks  56747BP-6 Front Strut Spacers w/Rear Pro Runner Shocks ZX2014 Front Pro Runner SS Struts  56747BPX-6 Front MX2.75 Coilover w/Rear Pro Runner Shocks 56747BPX-7 Front MX2.75 Coilover w/Rear Pro Runner Shocks  56747BMX-6 Front MX2.75 Coilover w/Rear MX6 Shocks 56747BMX-7 Front MX2.75 Coilover w/Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 18" + Wheel Width 8" - 9.5" Backspace 4" - 5" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 9/16" Lug Nut Kit PXA26194	1 3 4 5
<b>2.75" LIFT - Uniball Upper Arms / Pro Runner Struts</b>						
9-16	Uniball Upper A Arms Pro Runner SS Monotube Front Struts Pro Runner rear shocks	<b>56203K</b> Kit W/ Uniball Upper A Arms Front / Rear Pro Runner Shocks	1 2 2	56003B Uniball Upper A Arms ZX2014 Pro Runner SS Monotube Strut ZX2001 Pro Runner Monotube Shock	Max Tire Size 35" x 12.50" Wheel Diameter OE" + Wheel Width 8" - 9.5" Backspace 4" - 5" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 9/16" Lug Nut Kit PXA26194	2 5 6

OPTIONS	Notes:
Front Coil Over Upgrade 6" Lift	
56007BMX Stage 1 to Stage 2 Conversion Kit (06-08)	
56009BMX Stage 1 to Stage 2 Conversion Kit (09-15)	

OPTIONS	Notes:
Rear Lowering Kit	
91-7175B 3.25" Rear Coil Spacers Ram 1500 (09-15)	7

- (1) This kit should not be installed on trucks with the AWD Shift on Demand transfer case.
- (2) Not Recommended for TRX4 Models.
- (3) Depending on engine combination, front driveshaft may contact the exhaust system upon the installation of this kit. If so, the exhaust system will need to be modified.
- (4) OE wheels will not fit. Must use 18" or larger diameter wheels.
- (5) Vehicle will require alignment after kit is installed.
- (6) In order to install Max Tire Size recommendations, it may be required to retain the factory width/ backspacing/ offset. Some applications may require the removal of the front inner fender mud flaps and/ or other fender modifications.  
Its up to the installer to verify tire fitment and clearance for safe operation of vehicle.
- (7) Optional rear spacers and track bar bracket to lower rear ride height by 1.25".

## Dodge Ram 1500 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>Ram 1500 - 4WD</b>						
<b>2.5" / 1.5" Level Lift Nitro Kit</b>						
09-12	Front Coil Spacers Rear Coil Spacers Related Hardware		1	61180K Front Coil Spacers Rear Coil Spacers	Max Tire Size 35" x 12.50" Wheel Diameter OE" + Wheel Width 8" - 9.5" Backspace 4" - 5" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 9/16" Lug Nut Kit PXA26194	2 5 6
<b>2.0" Level Lift</b>						
09-12	Front Coil Spacers Related Hardware		1	61180 Front Coil Spacers	Max Tire Size 35" x 12.50" Wheel Diameter OE" + Wheel Width 8" - 9.5" Backspace 4" - 5" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 9/16" Lug Nut Kit PXA26194	2 5 6

(2) Not Recommended for TRX4 Models.

(5) Vehicle will require alignment after kit is installed.

(6) In order to install Max Tire Size recommendations, it may be required to retain the factory width/ backspacing/ offset. Some applications may require the removal of the front inner fender mud flaps and/ or other fender modifications. Its up to the installer to verify tire fitment and clearance for safe operation of vehicle.

# SUSPENSION KITS

## Dodge Ram 1500 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>Ram 1500 - 4WD</b>						
<b>6" LIFT</b>						
06-08	Steering Knuckles Drop Crossmembers Diff Drop Brackets Front Sway Bar Extensions Front Drive Shaft Spacer Related Hardware Transfer Case Index Ring Rear 3" Blocks Rear U-Bolts	<b>K2062B</b> Kit w/Rear ES Shocks OR <b>K2062BP</b> Kit w/Rear Pro Runner Shocks OR <b>K2062BPS</b> Kit w/Front / Rear Pro Runner Shocks OR <b>K2062BPX</b> Kit w/Front 2.75 Coilovers and Rear Pro Runner Shocks OR <b>K2062BMX</b> Kit w/Front MX2.75 Coilovers and Rear MX-6 Shocks	1 1 1 1 PLUS 1 OR 1 OR 1 2 OR 1 1 OR 1	56746B-1 Kit Box 56746B-2 Kit Box 56746B-3 Kit Box 56746B-4 Kit Box 56746B-5 Front Spacers w/Rear ES9000 56746BP-5 Front Spacers w/Rear Pro Runner Shocks 56746BP-5 Front Spacers w/Rear Pro Runner Shocks ZX2017 Front Pro Runner SS Struts 56746BPX-5 Front MX2.75 Coilover w/Rear Pro Runner Shocks 56746BPX-6 Front MX2.75 Coilover w/Rear Pro Runner Shocks 56746BMX-5 Front MX2.75 Coilover w/Rear MX6 Shocks 56746BMX-6 Front MX2.75 Coilover w/Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 18" + Wheel Width 8" - 9.5" Backspace 4" - 5" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 9/16" Lug Nut Kit PXA26194	1 2 3 4 5
<b>2.5" Level Lift</b>						
06-08	Front Strut Spacers Related Hardware		1	61170 Front Strut Spacer	Max Tire Size 35" x 12.50" Wheel Diameter OE" + Wheel Width 8" - 9.5" Backspace 4" - 5" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 9/16" Lug Nut Kit PXA26194	2 5 6
<b>2.0" Level Lift</b>						
06-08	Front Strut Spacers Related Hardware		1	61180 Front Strut Spacers	Max Tire Size 35" x 12.50" Wheel Diameter OE" + Wheel Width 8" - 9.5" Backspace 4" - 5" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 9/16" Lug Nut Kit PXA26194	5 6

DODGE / RAM

OPTIONS
Front Coil Over Upgrade
56007BMX Stage 1 to Stage 2 Conversion Kit (06-08)
56009BMX Stage 1 to Stage 2 Conversion Kit (09-12)

OPTIONS
Rear Traction Bars
72500B Rear Traction Bars - Pair (06-08)
75006B Rear Traction Bar Mount Kit (06-08)

OPTIONS
Level Lift
61251 Rear Block w/ U-Bolts 1.0"
61252 Rear Block w/ U-Bolts 2.0"

- (1) This kit should not be installed on trucks with the AWD Shift on demand transfer case.
- (2) This kit should not be installed on trucks with the TRX4 package.
- (3) Depending on engine combination, the front driveshaft may contact the exhaust system upon the installation of this kit. If so, the exhaust system will need to be modified.
- (4) OE wheels will not fit. Must use 18" or larger diameter wheels not to exceed 5" backspacing.
- (5) Vehicle will require alignment after kit is installed.
- (6) In order to install Max Tire Size recommendations, it may be required to retain factory width/ backspacing/ offset rims. Some applications may require removal of the front inner fender mud flaps and/ or other fender modifications. Its up to the installer to verify tire fitment and clearance for safe operation of vehicle.

## Dodge Ram 1500 — 2WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions		Wheel / Tire Specs:	Notes
<b>Ram 1500 - 2WD</b>							
<b>6" LIFT</b>							
06-08	Front coil Springs Steering Knuckles Drop Crossmembers Front Sway Bar Extensions Front Brake Lines Related Hardware Rear 3" Blocks Rear U-Bolts	<b>K2063B</b> Kit With ES Shocks OR <b>K2063BMX</b> Kit w/MX6 Shocks	1 1 1 1 1 PLUS 1 OR 1	52160 56726B-1 56726B-2 56726B-3 56726B-4 56706B-5 56706BMX-5	Front Coil Springs Kit Box Kit Box Kit Box Kit Box Front / Rear ES9000 Shocks Front / Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 18" + Wheel Width 8" - 9.5" Backspace 4" - 5" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 9/16" Lug Nut Kit PXA26194	4 5
<b>1.5" Poly Lift</b>							
06-08	Poly Spacers Related Hardware		1	PLC09103	Coil Spacers	Max Tire Size 32" x 11.50" Wheel Diameter 17" + Wheel Width 8" - 9.5" Backspace 4" - 5" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 9/16" Lug Nut Kit PXA26194	5 6
<b>Ram 1500 - 2WD</b>							
<b>6" LIFT</b>							
02-05		<b>K2060B</b> Kit With ES Shocks OR <b>K2060BMX</b> Kit w/MX6 Shocks	1 1 1 1 1 PLUS 1 OR 1	52160 56706B-1 56706B-2 56706B-3 56706B-4 56706B-5 56706BMX-5	Front Coil Springs Kit Box Kit Box Kit Box Kit Box Front / Rear ES9000 Shocks Front / Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 9.5" Backspace 4" - 5" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 9/16" Lug Nut Kit PXA26194	5
<b>1.5" Poly Lift</b>							
94-08	Poly Spacers Related Hardware		1	PLC09103	Coil Spacers	Max Tire Size 32" x 11.50" Wheel Diameter 17" + Wheel Width 8" - 9.5" Backspace 4" - 5" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 1/2" Lug Nut Kit PXA21183	

OPTIONS
Front Coil Over Upgrade
56007BMX Stage 1 to Stage 2 Conversion Kit (06-08)
56009BMX Stage 1 to Stage 2 Conversion Kit (09-12)

OPTIONS
Rear Traction Bars
72500B Rear Traction Bars - Pair (06-08)
75006B Rear Traction Bar Mount Kit (06-08)

OPTIONS
Level Lift
61251 Rear Block w/ U-Bolts 1.0"
61252 Rear Block w/ U-Bolts 2.0"

- (1) This kit should not be installed on trucks with the AWD Shift on demand transfer case.
- (2) This kit should not be installed on trucks with the TRX4 package.
- (3) Depending on engine combination, the front driveshaft may contact the exhaust system upon the installation of this kit. If so, the exhaust system will need to be modified.
- (4) OE wheels will not fit. Must use 18" or larger diameter wheels not to exceed 5" backspacing.
- (5) Vehicle will require alignment after kit is installed.
- (6) In order to install Max Tire Size recommendations, it may be required to retain factory width/ backspacing/ offset rims. Some applications may require removal of the front inner fender mud flaps and/ or other fender modifications. Its up to the installer to verify tire fitment and clearance for safe operation of vehicle.

# SUSPENSION KITS

## Dodge Ram 1500 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>Ram 1500 - 4WD</b>						
<b>3" LIFT</b>						
94-01	Front Coil Spring Spacers Front Bump Stops Related Hardware Rear 1" Blocks Rear Add-A-Leafs	<b>K2051B</b> Kit With ES Shocks OR <b>K2051BP</b> Kit w/Pro Runner Shocks	1 PLUS 1 OR 1	56494B-1 Kit Box 56494B-2 Front / Rear ES3000 Shocks 56494BP-2 Front / Rear Pro Runner Shocks	Max Tire Size 33" x 12.50" Wheel Diameter OE" + Wheel Width 8" - 9.5" Backspace 4" - 5" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 9/16" Lug Nut Kit PXA26194	5
<b>2.5" Level Lift</b>						
94-01	Front Coil Spacers Related Hardware		1	61240 Front Coil Spacers	Max Tire Size 33" x 12.50" Wheel Diameter OE" + Wheel Width 8" - 9.5" Backspace 4" - 5" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 1/2" Lug Nut Kit PXA21183	5 6
<b>Ram 1500 - 2WD</b>						
<b>2" Poly Lift</b>						
94-01	Poly Spacers Related Hardware		1	PLC09101 Coil Spacers	Max Tire Size 33" x 12.50" Wheel Diameter OE" + Wheel Width 8" - 9.5" Backspace 4" - 5" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 1/2" Lug Nut Kit PXA21183	5 6

(5) Vehicle will require alignment after kit is installed.

(6) In order to install Max Tire Size recommendations, it may be required to retain the factory width/ backspacing/ offset rims. Some applications may require the removal of the front inner fender mud flaps and/ or other fender modifications. Its up to the installer to verify tire fitment and clearance for safe operation of vehicle.

## Ram 2500 — 4WD w/ Radius Arms/ Rear Coil Springs

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions		Wheel / Tire Specs:		Notes
<b>Ram 2500 - Gas Engine</b>								
<b>6" LIFT Stage I Radius Arm Drop Brackets</b>								
14-16	Front Coil Springs Front Track Bar Bracket Drop Pitman Arm Radius Arm Drop Brackets Sway Bar Drop Brackets Related Hardware Rear Coil Spacers Rear Track Bar Bracket	<b>K2097B</b> Kit With ES Shocks	1 1 1 1 Plus 2 2	56210 56717B-1 56717B-2 56753B-4  927553 926553	Front Coil Springs Kit Box Kit Box Kit Box  Front ES9000 Shocks Rear ES9000 Shocks	Max Tire Size Wheel Diameter Wheel Width Backspace Bolt Pattern Bolt Code Lug Nut Size Lug Nut Kit	37" x 13.50" 17" + 8" - 10" 3.25" - 5.5" 8 x 6.5" 82 14mm x 1.5	1 2 3
<b>Ram 2500 - Diesel Engine</b>								
<b>6" LIFT Stage I Radius Arm Drop Brackets</b>								
14-16	Front Coil Springs Front Track Bar Bracket Drop Pitman Arm Radius Arm Drop Brackets Sway Bar Drop Brackets Related Hardware Rear Coil Spacers Rear Track Bar Bracket	<b>K2098B</b> Kit With ES Shocks	1 1 1 1 Plus 2 2	56200 56717B-1 56717B-2 56753B-4  927553 926553	Front Coil Springs Kit Box Kit Box Kit Box  Front ES9000 Shocks Rear ES9000 Shocks	Max Tire Size Wheel Diameter Wheel Width Backspace Bolt Pattern Bolt Code Lug Nut Size Lug Nut Kit	37" x 13.50" 17" + 8" - 10" 3.25" - 5.5" 8 x 6.5" 82 14mm x 1.5	1 2 3
<b>Ram 2500 - Gas Engine</b>								
<b>6" LIFT Stage II Radius Arms</b>								
14-16	Front Coil Springs Front Track Bar Bracket Drop Pitman Arm Radius Arm Drop Brackets Sway Bar Drop Brackets Related Hardware Rear Coil Spacers Rear Track Bar Bracket	<b>K2099B</b> Kit With ES Shocks	1 1 1 1 Plus 2 2	56210 56718B-1 56717B-2 56753B-4  927553 926553	Front Coil Springs Kit Box Kit Box Kit Box  Front ES9000 Shocks Rear ES9000 Shocks	Max Tire Size Wheel Diameter Wheel Width Backspace Bolt Pattern Bolt Code Lug Nut Size Lug Nut Kit	37" x 13.50" 17" + 8" - 10" 3.25" - 5.5" 8 x 6.5" 82 14mm x 1.5	1 2 3
<b>Ram 2500 - Diesel Engine</b>								
<b>6" LIFT Stage II Radius Arms</b>								
14-16	Front Coil Springs Front Track Bar Bracket Drop Pitman Arm Radius Arm Drop Brackets Sway Bar Drop Brackets Related Hardware Rear Coil Spacers Rear Track Bar Bracket	<b>K2100B</b> Kit With ES Shocks	1 1 1 1 Plus 2 2	56200 56718B-1 56717B-2 56753B-4  927553 926553	Front Coil Springs Kit Box Kit Box Kit Box  Front ES9000 Shocks Rear ES9000 Shocks	Max Tire Size Wheel Diameter Wheel Width Backspace Bolt Pattern Bolt Code Lug Nut Size Lug Nut Kit	37" x 13.50" 17" + 8" - 10" 3.25" - 5.5" 8 x 6.5" 82 14mm x 1.5	1 2 3

- (1) A reduction of factory caster specifications may be required to maintain factory front pinion angle.  
 (2) Not recommended for use with Power Wagon or rear air bag equipped models.  
 (3) Vehicle will require alignment after kit is installed.

# SUSPENSION KITS

## Ram 2500 — 4WD w/ Radius Arms/ Rear Coil Springs

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>Ram 2500 - Gas Engine</b>						
<b>4" LIFT Stage I Radius Arm Drop Brackets</b>						
14-16	Front Coil Springs Front Track Bar Bracket Drop Pitman Arm Radius Arm Drop Brackets Sway Bar Drop Brackets Related Hardware Rear Coil Spacers Rear Track Bar Bracket	<b>K2093B</b> Kit With ES Shocks	1 1 1 1 Plus 2 2	56190 Front Coil Springs 56717B-1 Kit Box 56717B-2 Kit Box 56751B-4 Kit Box 926553 Front ES9000 Shocks 925553 Rear ES9000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 10" Backspace 3.25" - 5.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 14mm x 1.5 Lug Nut Kit	1 2 3
<b>Ram 2500 - Diesel Engine</b>						
<b>4" LIFT Stage I Radius Arm Drop Brackets</b>						
14-16	Front Coil Springs Front Track Bar Bracket Drop Pitman Arm Radius Arm Drop Brackets Sway Bar Drop Brackets Related Hardware Rear Coil Spacers Rear Track Bar Bracket	<b>K2094B</b> Kit With ES Shocks	1 1 1 1 Plus 2 2	56180 Front Coil Springs 56717B-1 Kit Box 56717B-2 Kit Box 56751B-4 Kit Box 926553 Front ES9000 Shocks 925553 Rear ES9000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 10" Backspace 3.25" - 5.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 14mm x 1.5 Lug Nut Kit	1 2 3
<b>Ram 2500 - Gas Engine</b>						
<b>4" LIFT Stage II Radius Arms</b>						
14-16	Front Coil Springs Front Track Bar Bracket Drop Pitman Arm Radius Arm Drop Brackets Sway Bar Drop Brackets Related Hardware Rear Coil Spacers Rear Track Bar Bracket	<b>K2095B</b> Kit With ES Shocks	1 1 1 1 Plus 2 2	56190 Front Coil Springs 56718B-1 Kit Box 56717B-2 Kit Box 56751B-4 Kit Box 926553 Front ES9000 Shocks 925553 Rear ES9000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 10" Backspace 3.25" - 5.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 14mm x 1.5 Lug Nut Kit	1 2 3
<b>Ram 2500 - Diesel Engine</b>						
<b>4" LIFT Stage II Radius Arms</b>						
14-16	Front Coil Springs Front Track Bar Bracket Drop Pitman Arm Radius Arm Drop Brackets Sway Bar Drop Brackets Related Hardware Rear Coil Spacers Rear Track Bar Bracket	<b>K2096B</b> Kit With ES Shocks	1 1 1 1 Plus 2 2	56180 Front Coil Springs 56718B-1 Kit Box 56717B-2 Kit Box 56751B-4 Kit Box 926553 Front ES9000 Shocks 925553 Rear ES9000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 10" Backspace 3.25" - 5.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 14mm x 1.5 Lug Nut Kit	1 2 3
<b>Ram 2500 - Gas &amp; Diesel Engine w Radius Arms</b>						
<b>2" LEVEL LIFT</b>						
14-16	Front Coil Spacers Related Hardware		61120	Front Coil Spacers Front Shock Extensions	Max Tire Size 35" x 12.50" Wheel Diameter OE" + Wheel Width 8" - 10" Backspace 3.25" - 5.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 14mm x 1.5 Lug Nut Kit	1 2 3

- (1) A reduction of factory caster specifications may be required to maintain factory front pinion angle.  
 (2) Not recommended for use with Power Wagon or rear air bag equipped models.  
 (3) Vehicle will require alignment after kit is installed.



## Ram 3500 — 4WD w/ Radius Arms

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions		Wheel / Tire Specs:	Notes			
<b>Ram 3500 - Diesel Engine</b>										
<b>6" LIFT Stage I Radius Arm Drop Brackets</b>										
13-16	Front Coil Springs Front Track Bar Bracket Drop Pitman Arm Radius Arm Drop Brackets Sway Bar Drop Brackets Related Hardware Rear 3" Blocks Rear U-Bolts	<b>K2085B</b> Kit With ES Shocks OR <b>K2085BMX</b> Kit w/MX6 Shocks	1	56200	Front Coil Springs	Max Tire Size 37" x 13.50" Wheel Diameter 17" + Wheel Width 8" - 10" Backspace 3.25" - 5.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 14mm x 1.5 Lug Nut Kit	1			
			1	56717B-1	Kit Box		2			
			1	56717B-2	Kit Box		3			
		Plus								
		2	927591	Front ES9000 Shocks						
		2	929505	Rear ES9000 Shocks						
		OR								
		2	MX6104	Front MX6 Shocks						
		2	MX6003	Rear MX6 Shocks						
		<b>Ram 3500 - Gas Engine</b>								
<b>6" LIFT Stage I Radius Arm Drop Brackets</b>										
13-16	Front Coil Springs Front Track Bar Bracket Drop Pitman Arm Radius Arm Drop Brackets Sway Bar Drop Brackets Related Hardware Rear 3" Blocks Rear U-Bolts	<b>K2086B</b> Kit With ES Shocks OR <b>K2086BMX</b> Kit w/MX6 Shocks	1	56210	Front Coil Springs	Max Tire Size 37" x 13.50" Wheel Diameter 17" + Wheel Width 8" - 10" Backspace 3.25" - 5.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 14mm x 1.5 Lug Nut Kit	1			
			1	56717B-1	Kit Box		2			
			1	56717B-2	Kit Box		3			
		Plus								
		2	927591	Front ES9000 Shocks						
		2	929505	Rear ES9000 Shocks						
		OR								
		2	MX6104	Front MX6 Shocks						
		2	MX6003	Rear MX6 Shocks						
		<b>Ram 3500 - Diesel Engine</b>								
<b>6" LIFT Stage II Radius Arms</b>										
13-16	Front Coil Springs Front Track Bar Bracket Drop Pitman Arm Radius Arms Sway Bar Drop Brackets Related Hardware Rear 3" Blocks Rear U-Bolts	<b>K2087B</b> Kit With ES Shocks OR <b>K2087BMX</b> Kit w/MX6 Shocks	1	56200	Front Coil Springs	Max Tire Size 37" x 13.50" Wheel Diameter 17" + Wheel Width 8" - 10" Backspace 3.25" - 5.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 14mm x 1.5 Lug Nut Kit	1			
			1	56718B-1	Kit Box		2			
			1	56717B-2	Kit Box		3			
		Plus								
		1	56709B-3	Front / Rear ES9000 Shocks						
		OR								
		2	MX6104	Front MX6 Shocks						
		2	MX6003	Rear MX6 Shocks						
		<b>Ram 3500 - Gas Engine</b>								
		<b>6" LIFT Stage II Radius Arms</b>								
13-16	Front Coil Springs Front Track Bar Bracket Drop Pitman Arm Radius Arms Sway Bar Drop Brackets Related Hardware Rear 3" Blocks Rear U-Bolts	<b>K2088B</b> Kit With ES Shocks OR <b>K2088BMX</b> Kit w/MX6 Shocks	1	56210	Front Coil Springs	Max Tire Size 37" x 13.50" Wheel Diameter 17" + Wheel Width 8" - 10" Backspace 3.25" - 5.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 14mm x 1.5 Lug Nut Kit	1			
			1	56718B-1	Kit Box		2			
			1	56717B-2	Kit Box		3			
		Plus								
		1	56709B-3	Front / Rear ES9000 Shocks						
		OR								
		2	MX6104	Front MX6 Shocks						
		2	MX6003	Rear MX6 Shocks						

- (1) A reduction of factory caster specifications may be required to maintain factory front pinion angle.
- (2) Not recommended for use on Dual Rear Wheel or airbag-equipped models.
- (3) Vehicle will require alignment after kit is installed.

# SUSPENSION KITS

## Ram 3500 — 4WD w/ Radius Arms

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes	
<b>Ram 3500 - Diesel Engine</b>							
<b>4" LIFT Stage I Radius Arm Drop Brackets</b>							
13-16	Front Coil Springs Front Track Bar Bracket Drop Pitman Arm Radius Arm Drop Brackets Sway Bar Drop Brackets Related Hardware Rear 3" Blocks Rear U-Bolts	<b>K2089B</b> Kit With ES Shocks OR <b>K2089BMX</b> Kit w/MX6 Shocks	1 1 1 Plus 2 2 OR 2 2	56180 56719B-1 56717B-2  926553 929543  MX6169 MX6100	Front Coil Springs Kit Box Kit Box  Front ES9000 Shocks Rear ES9000 Shocks  Front MX6 Shocks Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 10" Backspace 3.25" - 5.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 14mm x 1.5 Lug Nut Kit	1 2 5
<b>Ram 3500 - Gas Engine</b>							
<b>4" LIFT Stage I Radius Arm Drop Brackets</b>							
13-16	Front Coil Springs Front Track Bar Bracket Drop Pitman Arm Radius Arm Drop Brackets Sway Bar Drop Brackets Related Hardware Rear 3" Blocks Rear U-Bolts	<b>K2090B</b> Kit With ES Shocks OR <b>K2090BMX</b> Kit w/MX6 Shocks	1 1 1 Plus 2 2 OR 2 2	56190 56719B-1 56717B-2  926553 929543  MX6169 MX6100	Front Coil Springs Kit Box Kit Box  Front ES9000 Shocks Rear ES9000 Shocks  Front MX6 Shocks Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 10" Backspace 3.25" - 5.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 14mm x 1.5 Lug Nut Kit	1 2 5
<b>Ram 3500 - Diesel Engine</b>							
<b>4" LIFT Stage II Radius Arms</b>							
13-16	Front Coil Springs Front Track Bar Bracket Drop Pitman Arm Radius Arm Drop Brackets Sway Bar Drop Brackets Related Hardware Rear 3" Blocks Rear U-Bolts	<b>K2091B</b> Kit With ES Shocks OR <b>K2091BMX</b> Kit w/MX6 Shocks	1 1 1 Plus 1 OR 2 2	56180 56720B-1 56717B-2  56719B-3  MX6169 MX6100	Front Coil Springs Kit Box Kit Box  Front / Rear ES9000 Shocks  Front MX6 Shocks Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 10" Backspace 3.25" - 5.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 14mm x 1.5 Lug Nut Kit	1 2 5
<b>Ram 3500 - Gas Engine</b>							
<b>4" LIFT Radius Arm Kit</b>							
13-16	Front Coil Springs Front Track Bar Bracket Drop Pitman Arm Radius Arm Drop Brackets Sway Bar Drop Brackets Related Hardware Rear 3" Blocks Rear U-Bolts	<b>K2092B</b> Kit With ES Shocks OR <b>K2092BMX</b> Kit w/MX6 Shocks	1 1 1 Plus 1 OR 2 2	56190 56720B-1 56717B-2  56719B-3  MX6169 MX6100	Front Coil Springs Kit Box Kit Box  Front / Rear ES9000 Shocks  Front MX6 Shocks Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 10" Backspace 3.25" - 5.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 14mm x 1.5 Lug Nut Kit	1 2 5
<b>Ram 3500 - Gas &amp; Diesel Engine w Radius Arms</b>							
<b>2" Level Lift</b>							
13-16	Front Coil Spacers Related Hardware		1	61120	Front Coil Spacers Front Shock Extensions	Max Tire Size 35" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 10" Backspace 3.25" - 5.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 14mm x 1.5 Lug Nut Kit	1 2 5

- (1) Driveline modifications may be required due to increased driveline angles.  
 (2) Not recommended for use on Dual Rear Wheel or Power Wagon models.  
 (5) Vehicle will require alignment after kit is installed.

## Ram 2500/ 3500 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes		
<b>Ram 2500/ 3500 (includes Mega Cab) - Gas Engine</b>								
<b>6" LIFT Short Arm Kit</b>								
10-13	Front Coil Springs Upper Control Arms Lower Control Arms Front Track Bar Bracket Drop Pitman Arm Trans Drop Bracket Related Hardware Rear 3" Blocks Rear U-Bolts	<b>K2081B</b> Kit With ES Shocks	1	56170	Front Coil Springs	Max Tire Size 37" x 13.50" Wheel Diameter 17" + Wheel Width 8" - 10" Backspace 3.25" - 5.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 9/16" Lug Nut Kit PXA26195	1	
		OR	1	56716B-1	Kit Box		2	
		OR	1	56716B-2	Adj Front Track Bar Bracket		5	
		<b>K2081BP</b> Kit w/Pro Runner Shocks	1	90-5143B	Trans Drop Bracket - Gas		7	
		OR	Plus					
		OR	1	56708B-3	Front / Rear ES9000 Shocks			
		<b>K2081BMX</b> Kit w/MX6 Shocks	OR	1	56708BP-3		Front / Rear Pro Runner Shocks	
		OR	2	MX6158	Front MX6 Shocks			
		2	MX6100	Rear MX6 Shocks				
<b>Ram 2500/ 3500 - 6.7L Diesel Engine</b>								
<b>6" LIFT Short Arm Kit</b>								
10-13	Front Coil Springs Upper Control Arms Lower Control Arms Front Track Bar Bracket Drop Pitman Arm Trans Drop Bracket Related Hardware Rear 3" Blocks Rear U-Bolts	<b>K2080B</b> Kit With ES Shocks	1	56160	Front Coil Springs	Max Tire Size 37" x 13.50" Wheel Diameter 17" + Wheel Width 8" - 10" Backspace 3.25" - 5.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 9/16" Lug Nut Kit PXA26195	1	
		OR	1	56716B-1	Kit Box		2	
		OR	1	56716B-2	Adj Front Track Bar Bracket		5	
		<b>K2080BP</b> Kit w/Pro Runner Shocks	1	90-5152B	Trans Drop Bracket - 6.7L DSL		7	
		OR	Plus					
		OR	1	56708B-3	Front / Rear ES9000 Shocks			
		<b>K2080BMX</b> Kit w/MX6 Shocks	OR	1	56708BP-3		Front / Rear Pro Runner Shocks	
		OR	2	MX6158	Front MX6 Shocks			
		2	MX6100	Rear MX6 Shocks				
<b>Ram 2500/ 3500 (Includes Mega Cab) - Gas &amp; Diesel Engine</b>								
<b>5" LIFT</b>								
09-13	Front Coil Spacers Upper Control Arms Lower Control Arms Front Track Bar Bracket Drop Pitman Arm Trans Drop Bracket Related Hardware Rear 3" Blocks Rear U-Bolts	<b>K2077B</b> Kit With ES Shocks	1	91-4091B	Front Coil Spacers	Max Tire Size 35" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 10" Backspace 3.25" - 5.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 9/16" Lug Nut Kit PXA26195	1	
		OR	1	56713B-1	Kit Box		2	
		OR	1	56716B-2	Adj Front Track Bar Bracket		5	
		<b>K2077BMX</b> Kit w/MX6 Shocks	Plus				7	
		OR	1	56709B-3	Front / Rear ES9000 Shocks			
		OR	1	56708B-3	Front / Rear ES9000 Shocks			
		<b>K2077BMX</b> Kit w/MX6 Shocks	OR	1	56708BP-3		Front / Rear Pro Runner Shocks	
		OR	2	MX6104	Front MX6 Shocks			
		2	MX6100	Rear MX6 Shocks				

**DODGE / RAM**

OPTIONS	Notes:
<b>Multiple Shock Mount Kit</b>	
56120B 6" Mount Kit - No Shocks	4
<b>6" Multiple Shock Kit - Shock Options</b>	
326509 ES3000	4
926500 ES9000	4
MX6012 MX6 Adjustable	4
MX6065R MX6R Reservoir	4
<b>Reservoir Mounting Kits - Aluminum</b>	
63016 MX6R Body to MX6R Reservoir	4
63017 MX6R Body to 1.5" Hoop Tube	4

OPTIONS	Notes:
<b>Reservoir Mounting Kits - Stainless</b>	
63012 2" Body to 2" Body	4
63013 2" Body to 1.5" Hoop Tube	4
<b>Rear Traction Bars - 5" to 6" Lift</b>	
72501B Rear Traction Bars - Mega Cab	
72500B Rear Traction Bars - Crew Cab	
72098B Traction Bar Mounting Kit	

OPTIONS	Notes:
<b>Steering Stabilizers</b>	
223200 Single Stab Kit (00-08) - ES2000 Shock	
219838 Dual Stab Kit (03-3/08) - ES2000 Shock	
222584Z Dual Stab Kit (03-3/08) - Pro Runner Shocks	
222583 Dual Stab Kit (3/08-12) - ES2000 Shocks	
222583Z Dual Stab Kit (3/08-12) - Pro Runner Shocks	

- (1) Driveline modifications may be required due to increased driveline angles. (5) Vehicle will require alignment after kit is installed.  
 (2) Not recommended for use on Dual Rear Wheel or Power Wagon models. (6) Replacement stabilizers sold individually.  
 (3) Installation requires removal of factory control arm mounts. (7) For 2013 3500 w/ Radius Arm, see page 254.  
 (4) Four shocks must be ordered separately. Reservoir shocks require reservoir mounting kits - one pair required per shock - sold separately.

# SUSPENSION KITS

## Dodge Ram 2500/ 3500 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>Ram 2500/ 3500 (includes Mega Cab) - Gas Engine</b>						
<b>6" LIFT Short Arm Kit</b>						
2009	Front Coil Springs Upper Control Arms Lower Control Arms Front Track Bar Bracket Drop Pitman Arm Trans Drop Bracket Related Hardware Rear 3" Blocks Rear U-Bolts	<b>K2079B</b> Kit With ES Shocks OR <b>K2079BP</b> Kit w/Pro Runner Shocks OR <b>K2079BMX</b> Kit w/MX6 Shocks	1 1 1 1 Plus 1 OR 1 OR 2 2	56170 Front Coil Springs 56713B-1 Kit Box 56716B-2 Adj Front Track Bar Bracket 90-5143B Trans Drop Bracket - Gas 56708B-3 Front / Rear ES9000 Shocks 56708BP-3 Front / Rear Pro Runner Shocks MX6158 Front MX6 Shocks MX6100 Rear MX6 Shocks	37" x 13.50" 17" + 8" - 10" 3.25" - 5.5" 8 x 6.5" 82 9/16" PXA26195	1 2 5
<b>Ram 2500/ 3500 - 6.7L Diesel Engine</b>						
<b>6" LIFT Short Arm Kit</b>						
2009	Front Coil Springs Upper Control Arms Lower Control Arms Front Track Bar Bracket Drop Pitman Arm Trans Drop Bracket Related Hardware Rear 3" Blocks Rear U-Bolts	<b>K2076B</b> Kit With ES Shocks OR <b>K2076BP</b> Kit w/Pro Runner Shocks OR <b>K2076BMX</b> Kit w/MX6 Shocks	1 1 1 1 Plus 1 OR 1 OR 2 2	56160 Front Coil Springs 56713B-1 Kit Box 56716B-2 Adj Front Track Bar Bracket 90-5152B Trans Drop Bracket - 6.7L DSL 56708B-3 Front / Rear ES9000 Shocks 56708BP-3 Front / Rear Pro Runner Shocks MX6158 Front MX6 Shocks MX6100 Rear MX6 Shocks	Max Tire Size 37" x 13.50" Wheel Diameter 17" + Wheel Width 8" - 10" Backspace 3.25" - 5.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 9/16" Lug Nut Kit PXA26195	1 2 5 7
<b>Ram 2500/ 3500 (Includes Mega Cab) - Gas &amp; Diesel Engine</b>						
<b>2" Level Lift</b>						
09-13			1	61240 Front Coil Spacers	Max Tire Size 33" x 12.50" Wheel Diameter OE" + Wheel Width 8" - 10" Backspace 3.25" - 5.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 9/16" Lug Nut Kit PXA26195	1 2 5 7
<b>2" Poly Lift</b>						
09-13			1	PLC09101 Front Coil Spacers	Max Tire Size 33" x 12.50" Wheel Diameter OE" + Wheel Width 8" - 10" Backspace 3.25" - 5.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 9/16" Lug Nut Kit PXA26195	1 2 5 7

DODGE / RAM

OPTIONS	Notes:
<b>Multiple Shock Mount Kit</b>	
56120B 6" Mount Kit - No Shocks	4
<b>6" Multiple Shock Kit - Shock Options</b>	
326509 ES3000	4
926500 ES9000	4
MX6012 MX6 Adjustable	4
MX6065R MX6R Reservoir	4
<b>Reservoir Mounting Kits - Aluminum</b>	
63016 MX6R Body to MX6R Reservoir	4
63017 MX6R Body to 1.5" Hoop Tube	4

OPTIONS	Notes:
<b>Reservoir Mounting Kits - Stainless</b>	
63012 2" Body to 2" Body	4
63013 2" Body to 1.5" Hoop Tube	4
<b>Rear Traction Bars - 5" to 6" Lift</b>	
72501B Rear Traction Bars - Mega Cab	
72500B Rear Traction Bars - Crew Cab	
72098B Traction Bar Mounting Kit	

OPTIONS	Notes:
<b>Steering Stabilizers</b>	
223200 Single Stab Kit (00-08) - ES2000 Shock	
219838 Dual Stab Kit (03-3/08) - ES2000 Shock	
222584Z Dual Stab Kit (03-3/08) - Pro Runner Shocks	
222583 Dual Stab Kit (3/08-12) - ES2000 Shocks	
222583Z Dual Stab Kit (3/08-12) - Pro Runner Shocks	

- (1) Driveline modifications may be required due to increased driveline angles. (5) Vehicle will require alignment after kit is installed.  
 (2) Not recommended for use on Dual Rear Wheel or Power Wagon models. (6) Replacement stabilizers sold individually.  
 (3) Installation requires removal of factory control arm mounts. (7) For 2013 3500 w/ Radius Arm, see page 254.  
 (4) Four shocks must be ordered separately. Reservoir shocks require reservoir mounting kits - one pair required per shock - sold separately.

## Dodge Ram 2500/ 3500 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>Ram 2500/ 3500 - 6.7L Diesel Engine</b>						
<b>6" LIFT Short Arm Kit</b>						
07-08	Front Coil Springs	<b>K2069B</b>	1	56160	Front Coil Springs	Max Tire Size 37" x 13.50"
	Upper Control Arms	Kit With ES Shocks	1	56708B-1	Kit Box	Wheel Diameter 17" +
	Lower Control Arms	OR	1	56708B-2	Adj Front Track Bar	Wheel Width 8" - 10"
	Front Track Bar Bracket	<b>K2069BP</b>	1	90-5152B	Trans Drop Bracket - 6.7L DSL	Backspace 3.25" - 5.5"
	Adj Front Track Bar	Kit w/Pro Runner	Plus			Bolt Pattern 8 x 6.5"
	Drop Pitman Arm	Shocks	1	56708B-3	Front / Rear ES9000 Shocks	Bolt Code 82
	Trans Drop Bracket	OR	OR			Lug Nut Size 9/16"
	Related Hardware	<b>K2069BMX</b>	1	56708BP-3	Front / Rear Pro Runner Shocks	Lug Nut Kit PXA26195
Rear 3" Blocks	Kit w/MX6 Shocks	OR				
Rear U-Bolts		2	MX6158	Front MX6 Shocks		
		2	MX6100	Rear MX6 Shocks		
<b>6" LIFT Long Arm Kit</b>						
07-08	Front Coil Springs	<b>K2074B</b>	1	56160	Front Coil Springs	Max Tire Size 37" x 13.50"
	Front Control Arm Brackets	Kit With ES Shocks	1	56710B-1	Kit Box	Wheel Diameter 17" +
	Upper Long Control Arms	OR	1	56710B-2	Kit Box	Wheel Width 8" - 10"
	Lower Long Control Arms	<b>K2074BP</b>	1	56708B-2	Adj Front Track Bar	Backspace 3.25" - 5.5"
	Front Track Bar Bracket	Kit w/Pro Runner	1	90-5152B	Trans Drop Bracket - 6.7L DSL	Bolt Pattern 8 x 6.5"
	Adj Front Track Bar	Shocks	Plus			Bolt Code 82
	Drop Pitman Arm	OR	1	56708B-3	Front / Rear ES9000 Shocks	Lug Nut Size 9/16"
	Trans Drop Bracket	<b>K2074BMX</b>	OR			Lug Nut Kit PXA26195
Related Hardware	Kit w/MX6 Shocks	1	56708BP-3	Front / Rear Pro Runner Shocks		
Rear 3" Blocks		OR				
Rear U-Bolts		2	MX6158	Front MX6 Shocks		
		2	MX6100	Rear MX6 Shocks		
<b>Ram 2500/ 3500 (includes 1500 Mega Cab) - Gas Engine</b>						
<b>6" LIFT Short Arm Kit</b>						
06-08	Front Coil Springs	<b>K2067B</b>	1	56170	Front Coil Springs	Max Tire Size 37" x 13.50"
	Upper Control Arms	Kit With ES Shocks	1	56708B-1	Kit Box	Wheel Diameter 17" +
	Lower Control Arms	OR	1	56708B-2	Adj Front Track Bar	Wheel Width 8" - 10"
	Front Track Bar Bracket	<b>K2067BP</b>	1	90-5143B	Trans Drop Bracket - Gas	Backspace 3.25" - 5.5"
	Adj Front Track Bar	Kit w/Pro Runner	Plus			Bolt Pattern 8 x 6.5"
	Drop Pitman Arm	Shocks	1	56708B-3	Front / Rear ES9000 Shocks	Bolt Code 82
	Trans Drop Bracket	OR	OR			Lug Nut Size 9/16"
	Related Hardware	<b>K2067BMX</b>	1	56708BP-3	Front / Rear Pro Runner Shocks	Lug Nut Kit PXA26195
Rear 3" Blocks	Kit w/MX6 Shocks	OR				
Rear U-Bolts		2	MX6158	Front MX6 Shocks		
		2	MX6100	Rear MX6 Shocks		
<b>Ram 2500/ 3500 - 5.9L Diesel Engine</b>						
<b>6" LIFT Short Arm Kit</b>						
06-08	Front Coil Springs	<b>K2068B</b>	1	56160	Front Coil Springs	Max Tire Size 37" x 13.50"
	Upper Control Arms	Kit With ES Shocks	1	56708B-1	Kit Box	Wheel Diameter 17" +
	Lower Control Arms	OR	1	56708B-2	Adj Front Track Bar	Wheel Width 8" - 10"
	Front Track Bar Bracket	<b>K2068BP</b>	1	90-5149B	Trans Drop Bracket - 5.9L DSL	Backspace 3.25" - 5.5"
	Adj Front Track Bar	Kit w/Pro Runner	Plus			Bolt Pattern 8 x 6.5"
	Drop Pitman Arm	Shocks	1	56708B-3	Front / Rear ES9000 Shocks	Bolt Code 82
	Trans Drop Bracket	OR	OR			Lug Nut Size 9/16"
	Related Hardware	<b>K2068BMX</b>	1	56708BP-3	Front / Rear Pro Runner Shocks	Lug Nut Kit PXA26195
Rear 3" Blocks	Kit w/MX6 Shocks	OR				
Rear U-Bolts		2	MX6158	Front MX6 Shocks		
		2	MX6100	Rear MX6 Shocks		

**DODGE / RAM**

OPTIONS	Notes:
<b>Multiple Shock Mount Kit</b>	
56120B 6" Mount Kit - No Shocks	4
<b>6" Multiple Shock Kit - Shock Options</b>	
326509 ES3000	4
926500 ES9000	4
MX6012 MX6 Adjustable	4
MX6065R MX6R Reservoir	4
<b>Reservoir Mounting Kits - Aluminum</b>	
63016 MX6R Body to MX6R Reservoir	4
63017 MX6R Body to 1.5" Hoop Tube	4

OPTIONS	Notes:
<b>Reservoir Mounting Kits - Stainless</b>	
63012 2" Body to 2" Body	4
63013 2" Body to 1.5" Hoop Tube	4
<b>Rear Traction Bars - 5" to 6" Lift</b>	
72501B Rear Traction Bars - Mega Cab	
72500B Rear Traction Bars - Crew Cab	
72098B Traction Bar Mounting Kit	

OPTIONS	Notes:
<b>Steering Stabilizers</b>	
219838 Dual Stab Kit (03-3/08) - ES2000 Shock	
222584Z Dual Stab Kit (03-3/08) - Pro Runner Shocks	6
222583Z Dual Stab Kit (3/08-12) - Pro Runner Shocks	6
223200 Single Stab Kit (00-08) - ES2000 Shock	
224000 Single Stab Kit (94-99) - ES2000 Shock	

- (1) Driveline modifications may be required due to increased driveline angles. (5) Vehicle will require alignment after kit is installed.  
 (2) Not recommended for use on Dual Rear Wheel or Power Wagon models. (6) Replacement stabilizers sold individually.  
 (3) Installation requires removal of factory control arm mounts.  
 (4) Four shocks must be ordered separately. Reservoir shocks require reservoir mounting kits - one pair required per shock - sold separately.

# SUSPENSION KITS

## Dodge Ram 2500/ 3500 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>Ram 2500/ 3500 - Gas Engine</b>						
<b>6" LIFT Short Arm Kit</b>						
03-05	Front Coil Springs Upper Control Arms Lower Control Arms Front Track Bar Bracket Adj Front Track Bar Drop Pitman Arm Trans Drop Bracket Related Hardware Rear 3" Blocks Rear U-Bolts	<b>K2065B</b> Kit With ES Shocks OR <b>K2065BP</b> Kit w/Pro Runner Shocks OR <b>K2065BMX</b> Kit w/MX6 Shocks	1 1 1 1 Plus 1 OR 1 OR 2 2	56170 Front Coil Springs 56708B-1 Kit Box 56708B-2 Adj Front Track Bar 90-5140B Trans Drop Bracket - Gas 56708B-3 Front / Rear ES9000 Shocks 56708BP-3 Front / Rear Pro Runner Shocks MX6158 Front MX6 Shocks MX6100 Rear MX6 Shocks	Max Tire Size 37" x 13.50" Wheel Diameter 17" + Wheel Width 8" - 10" Backspace 3.25" - 5.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 9/16" Lug Nut Kit PXA26195	1 2 5
<b>Ram 2500/ 3500 - 5.9L Diesel Engine</b>						
<b>6" LIFT Short Arm Kit</b>						
03-05	Front Coil Springs Upper Control Arms Lower Control Arms Front Track Bar Bracket Adj Front Track Bar Drop Pitman Arm Trans Drop Bracket Related Hardware Rear 3" Blocks Rear U-Bolts	<b>K2066B</b> Kit With ES Shocks OR <b>K2066BP</b> Kit w/Pro Runner Shocks OR <b>K2066BMX</b> Kit w/MX6 Shocks	1 1 1 1 Plus 1 OR 1 OR 2 2	56160 Front Coil Springs 56708B-1 Kit Box 56708B-2 Adj Front Track Bar 90-5146B Trans Drop Bracket - 5.9L DSL 56708B-3 Front / Rear ES9000 Shocks 56708BP-3 Front / Rear Pro Runner Shocks MX6158 Front MX6 Shocks MX6100 Rear MX6 Shocks	Max Tire Size 37" x 13.50" Wheel Diameter 17" + Wheel Width 8" - 10" Backspace 3.25" - 5.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 9/16" Lug Nut Kit PXA26195	1 2 5
<b>Ram 2500/ 3500 (Includes Mega Cab 1500) - Gas &amp; Diesel Engine</b>						
<b>5" LIFT</b>						
03-08	Front Coil Spacers Upper Control Arms Lower Control Arms Front Track Bar Bracket Adj Front Track Bar Drop Pitman Arm Related Hardware Rear 3" Blocks Rear U-Bolts	<b>K2064B</b> Kit With ES Shocks OR <b>K2064BMX</b> Kit w/MX6 Shocks	1 1 1 Plus 1 OR 2 2	91-4091B Front Coil Spacers 56708B-1 Kit Box 56708B-2 Adj Front Track Bar 56709B-3 Front / Rear ES9000 Shocks MX6104 Front MX6 Shocks MX6100 Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 10" Backspace 3.25" - 5.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 9/16" Lug Nut Kit PXA26195	1 2 5
<b>Ram 2500/ 3500 (Includes Mega Cab 1500) - Gas &amp; Diesel Engine</b>						
<b>3" LIFT</b>						
03-08	Front Coil Spacers Upper Control Arms Lower Control Arms Front Track Bar Bracket Drop Pitman Arm Related Hardware	<b>K2058B</b> Kit With ES Shocks OR <b>K2058BMX</b> Kit w/MX6 Shocks	1 PLUS 1 OR 2 2	56703B-1 Kit Box 56703B-2 Front / Rear ES9000 Shocks MX6104 Front MX6 Shocks MX6098 Rear MX6 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 10" Backspace 3.25" - 5.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 9/16" Lug Nut Kit PXA26195	1 2 5

DODGE / RAM

OPTIONS	Notes:
<b>Multiple Shock Mount Kit</b>	
56120B 6" Mount Kit - No Shocks	4
<b>6" Multiple Shock Kit - Shock Options</b>	
326509 ES3000	4
926500 ES9000	4
MX6012 MX6 Adjustable	4
MX6065R MX6R Reservoir	4
<b>Reservoir Mounting Kits - Aluminum</b>	
63016 MX6R Body to MX6R Reservoir	4
63017 MX6R Body to 1.5" Hoop Tube	4

OPTIONS	Notes:
<b>Reservoir Mounting Kits - Stainless</b>	
63012 2" Body to 2" Body	4
63013 2" Body to 1.5" Hoop Tube	4
<b>Rear Traction Bars - 5" to 6" Lift</b>	
72501B Rear Traction Bars - Mega Cab	
72500B Rear Traction Bars - Crew Cab	
72098B Traction Bar Mounting Kit	

OPTIONS	Notes:
<b>Steering Stabilizers</b>	
219838 Dual Stab Kit (03-3/08) - ES2000 Shock	
222584Z Dual Stab Kit (03-3/08) - Pro Runner Shocks	6
222583Z Dual Stab Kit (3/08-12) - Pro Runner Shocks	6
223200 Single Stab Kit (00-08) - ES2000 Shock	
224000 Single Stab Kit (94-99) - ES2000 Shock	

- (1) Driveline modifications may be required due to increased driveline angles. (5) Vehicle will require alignment after kit is installed.  
 (2) Not recommended for use on Dual Rear Wheel or Power Wagon models. (6) Replacement stabilizers sold individually.  
 (3) Installation requires removal of factory control arm mounts.  
 (4) Four shocks must be ordered separately. Reservoir shocks require reservoir mounting kits - one pair required per shock - sold separately.

## Dodge Ram 2500/ 3500 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>Ram 2500/ 3500 (Includes Mega Cab 1500) - Gas &amp; Diesel Engine</b>						
<b>2" Level Lift</b>						
03-13	Front Coil Spacers Related Hardware		1	61240 Front Coil Spacers	Max Tire Size 33" x 12.50" Wheel Diameter OE" + Wheel Width 8" - 10" Backspace 3.25" - 5.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 9/16" Lug Nut Kit PXA26195	1 2 5 7
<b>Ram 2500/ 3500 (Includes Mega Cab 1500) - Gas &amp; Diesel Engine</b>						
<b>2" Poly Lift</b>						
03-13	Front Coil Spacers Related Hardware		1	PLC09101 Front Coil Spacers	Max Tire Size 33" x 12.50" Wheel Diameter OE" + Wheel Width 8" - 10" Backspace 3.25" - 5.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 9/16" Lug Nut Kit PXA26195	1 2 5 7
<b>Ram 2500/ 3500 - Gas &amp; Diesel Engine</b>						
<b>2" LIFT</b>						
94-02	Front Coil Spacers Front Bump Stops Related Hardware	K2054B Kit With ES Shocks	1 PLUS 1	56594B-1 Kit Box 56494B-2 Front / Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter OE" + Wheel Width 8" - 10" Backspace 3.25" - 5.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 9/16" Lug Nut Kit PXA26195	1 5
<b>2" Level Lift</b>						
94-02	Front Coil Spacers Related Hardware			61240 Front Coil Spacers	Max Tire Size 33" x 12.50" Wheel Diameter OE" + Wheel Width 8" - 10" Backspace 3.25" - 5.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 9/16" Lug Nut Kit PXA26195	1 2 5
<b>2" Poly Lift</b>						
94-02	Front Coil Spacers Related Hardware			PLC09101 Front Coil Spacers	Max Tire Size 33" x 12.50" Wheel Diameter OE" + Wheel Width 8" - 10" Backspace 3.25" - 5.5" Bolt Pattern 8 x 6.5" Bolt Code 82 Lug Nut Size 9/16" Lug Nut Kit PXA26195	1 2 5

OPTIONS	Notes:
<b>Steering Stabilizers</b>	
219838 Dual Stab Kit (03-3/08) - ES2000 Shock	
222584Z Dual Stab Kit (03-3/08) - Pro Runner Shocks	6
222583Z Dual Stab Kit (3/08-12) - Pro Runner Shocks	6
223200 Single Stab Kit (00-08) - ES2000 Shock	
224000 Single Stab Kit (94-99) - ES2000 Shock	

- (1) Driveline modifications may be required due to increased driveline angles.
- (2) Not recommended for use on Dual Rear Wheel or Power Wagon models.
- (5) Vehicle will require alignment after kit is installed.
- (6) Replacement stabilizers sold individually.
- (7) For 2013 3500 w/ Radius Arm, see page 254.

# SUSPENSION KITS

## Ford F-150 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions		Wheel / Tire Specs:	Notes
<b>FORD F150 - 4WD</b>							
<b>3.0" LONG TRAVEL LIFT</b>							
15-16	Upper / Lower Arms Tie Rod Ends Sway bar brackets / Links Front Brake Lines Rear Wheel Spacers Rear Brake Lines Rear Shackles Front Skid Plate Front Axles Rear Spring Packs Front Coil Over Shocks Reservoir Rear Shocks	<b>K4192B</b> Performance Long Travel System with Internal Bypass Reservoir Front Coil Over Shocks Internal Bypass Reservoir Rear Shocks	1 1 1 1 1 1 2 2 2	TBA TBA TBA TBA TBA TBA TBA TBA	Kit Box Kit Box Kit Box Kit Box Kit Box Kit Box Rear Spring Packs Internal Bypass Reservoir Coil Over Shocks Internal Bypass Reservoir Rear Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 18" + Wheel Width 8" - 9.5" Backspace 4" - 5" Bolt Pattern 6 x 135mm Bolt Code 36 Lug Nut Size 14mm x 2.0 Lug Nut Kit PXA26104	2 3 4 5
<div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 0 auto;">                     Due to the increase in track width and wheel travel, fender modification is required for clearance of 35" tires.                 </div>							
<b>6.0" LIFT</b>							
15-16	Steering Knuckles Drop Crossmembers Diff Drop Brackets Sway Bar Drops Related Hardware Rear 4" Blocks Rear U-Bolts	<b>K4189B</b> Kit W/ Front Strut Spacers and Rear ES Shocks OR <b>K4189BPX</b> Kit W/ Front MX2.75 Coil-overs and Rear Pro Runner Shocks	1 1 1 Plus 1 OR 1	52221B-1 52221B-2 52221B-3 52221B-4 52221BPX-4	Kit Box Kit Box Kit Box Front Strut Spacers / Rear ES9000 Shocks Front MX2.75 Coil-over / Rear Pro Runner Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 18" + Wheel Width 8" - 9.5" Backspace 4" - 5" Bolt Pattern 6 x 135mm Bolt Code 36 Lug Nut Size 14mm x 2.0 Lug Nut Kit PXA26104	2 3 4 5
<b>2.5" LIFT</b>							
15-16	Front Strut Spacers		1	62206	Front Strut Spacers Spring Preload Spacers	Max Tire Size 33" x 12.50" Wheel Diameter 18" + Wheel Width 8" - 9.5" Backspace 4" - 5" Bolt Pattern 6 x 135mm Bolt Code 36 Lug Nut Size 14mm x 2.0 Lug Nut Kit PXA26104	2 3 4 5
<b>FORD F150 - 2WD</b>							
<b>6.0" LIFT</b>							
15-16	Steering Knuckles Drop Crossmembers Diff Drop Brackets Sway Bar Drops Related Hardware Rear 4" Blocks Rear U-Bolts	<b>K4190B</b> Kit W/ Front Strut Spacers and Rear ES Shocks	1 1 1 Plus 1	52222B-1 52221B-2 52222B-3 52213B-4	Kit Box Kit Box Kit Box Front Strut Spacers / Rear ES9000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 18" + Wheel Width 8" - 9.5" Backspace 4" - 5" Bolt Pattern 6 x 135mm Bolt Code 36 Lug Nut Size 14mm x 2.0 Lug Nut Kit PXA26104	2 3 4 5
<b>2.5" LIFT</b>							
15-16	Front Strut Spacers		1	62206	Front Strut Spacers Spring Preload Spacers	Max Tire Size 33" x 12.50" Wheel Diameter 18" + Wheel Width 8" - 9.5" Backspace 4" - 5" Bolt Pattern 6 x 135mm Bolt Code 36 Lug Nut Size 14mm x 2.0 Lug Nut Kit PXA2610	2 3 4 5

(2) Rear axle shim kit 52700 can be used to increase rear ride height up to 1".

(3) In order to install Max Tire Size recommendations, it may be required to retain the factory wheel width/ backspacing/ offset for Level Lift.

6" and Level Lift applications may require the removal of the front inner fender mud flaps and/or other fender modifications.

Its up to the installer to verify tire fitment and clearance for safe operation of vehicle.

(4) Vehicle will require alignment after kit is installed.

(5) This kit can not be installed on SVT Raptor.



## Ford F-150 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>FORD F150 - 4WD</b>						
<b>6.0" LIFT</b>						
2014	Steering Knuckles Drop Crossmembers Diff Drop Brackets Sway Bar Drops Related Hardware Rear 4" Blocks Rear U-Bolts	<b>K4143B</b> Kit W/ Front Strut Spacers and Rear ES Shocks OR <b>K4143BP</b> Kit W/ Front Strut Spacers and Rear Pro Runner Shocks OR <b>K4147BPS*</b> Kit W/ Front Strut Spacers and Front / Rear Pro Runner Shocks OR <b>K4147BPX*</b> Kit W/ Front MX2.75 Coil-overs and Rear Pro Runner Shocks	1 1 1 Plus 1 OR 1 OR 1 2 OR 1	52209B-1 Kit Box 52209B-2 Kit Box 52209B-3 Kit Box 52209B-4 Front Strut Spacers / Rear ES9000 Shocks 52209BP-4 Front Strut Spacers / Rear Pro Runner Shocks 52209BP-4 Front Strut Spacers / Rear Pro Runner Shocks ZX2111 Front Pro Runner SS Struts 52217BPX-4 Front MX2.75 Coil-over / Rear Pro Runner Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 18" + Wheel Width 8" - 9.5" Backspace 4" - 5" Bolt Pattern 6 x 135mm Bolt Code 36 Lug Nut Size 14mm x 2.0 Lug Nut Kit PXA26104	2 4 5
<b>*K4147 kits include front struts or coil over shocks with specific lower mounts for 2014 F150 4WD</b>						
<b>2.5" LIFT - Uniball Upper Arms / Black Series Coil Overs</b>						
2014	Uniball Upper A Arms Black Series Front Coil Over Black Series 2.0 rear shocks	<b>52101K</b> Kit W/ Uniball Upper A Arms Black Series Front Coil Over and Black Series 2.0 Rear Shocks	1 2 2	52001B Uniball Upper A Arms ZX4111 P2.75 Coilover ZX3023 P2 Series shock	Max Tire Size 35" x 12.50" Wheel Diameter 18" + Wheel Width 8" - 9.5" Backspace 4" - 5" Bolt Pattern 6 x 135mm Bolt Code 36 Lug Nut Size 14mm x 2.0 Lug Nut Kit PXA26104	2 3 4 5
<b>2.5" LIFT - Uniball Upper Arms / Pro Runner Struts</b>						
2014	Uniball Upper A Arms Pro Runner SS Monotube Front Struts Pro Runner Rear Shocks	<b>52201K</b> Kit W/ Uniball Upper A Arms Front / Rear Pro Runner Shocks	1 2 2	52001B Uniball Upper A Arms ZX2111 Pro Runner SS Monotube Strut ZX2023 Pro Runner Monotube Shock	Max Tire Size 35" x 12.50" Wheel Diameter 18" + Wheel Width 8" - 9.5" Backspace 4" - 5" Bolt Pattern 6 x 135mm Bolt Code 36 Lug Nut Size 14mm x 2.0 Lug Nut Kit PXA26104	2 3 4 5

OPTIONS	Notes:
Front Coil Over Upgrade - K4143B / K4144B	
52209BMX-4 Conversion Kit - 4WD	
52213BMX-4 Conversion Kit - 2WD	
Front Skid Plate	
52109 Stainless Steel Skid Plate - 4WD	
Rear Add-A-Leaf Kit	
13137 Rear Add-A-Leaf Kit - 2WD/ 4WD	
52700 Rear Axle Shim Kit - 1.0" - 2WD/ 4WD	

OPTIONS	Notes:
Rear Lift Blocks Kits	
95-554FB 5.5" Rear Lift Block Kit - Pair - 4WD	
Rear Traction Bars	
72500B Rear Traction Bars - Pair	
72096B Rear Traction Bar Mount Kit - S/Crew Cab	
Level Lift	
62201 Rear Block Kit W/U-Bolts 1.5" 2WD	
62203 Rear Block Kit W/U-Bolts 3.0" 4WD	
Uniball Upper Control Arms	
52001B Uniball Upper Arm - Pair	

- (2) Rear axle shim kit 52700 can be used to increase rear ride height up to 1".
- (3) In order to install Max Tire Size recommendations, it may be required to retain the factory wheel width/ backspacing/ offset. Some application may require removal of front inner fender mud flaps and/or other fender modifications. Its up to installer to verify tire fitment and clearance for safe operation of vehicle.
- (4) Vehicle will require alignment after kit is installed.
- (5) This Kit should not be installed on Raptor Edition models 09-13.
- (6) Rear axle shim kit 52700 can be used to increase rear ride height up to 1".

# SUSPENSION KITS

## Ford F-150 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes	
<b>FORD F150 - 4WD</b>							
<b>6.0" LIFT</b>							
09-13	Steering Knuckles Drop Crossmembers Diff Drop Brackets Sway Bar Drops Related Hardware Rear 4" Blocks Rear U-Bolts	<b>K4143B</b> Kit w/Front Strut Spacers and Rear ES Shocks OR <b>K4143BP</b> Kit w/Front Strut Spacers Rear Pro Runner Shocks OR <b>K4143BPS</b> Kit w/Front Strut Spacers and Front / Rear Pro Runner Shocks OR <b>K4143BPX</b> Kit w/Front MX2.75 Coilovers and Rear Pro Runner Shocks OR <b>K4143BMX</b> Kit w/Front MX2.75 Coilovers and Rear MX6 Shocks	1 1 1 Plus 1 OR 1 OR 1 2 OR 1 OR 1	52209B-1 52209B-2 52209B-3 52209B-4 52209BP-4 52209BP-4 ZX2109 52209BPX-4 52209BMX-4	Kit Box Kit Box Kit Box Front Spacers / Rear ES9000 Shocks Front Spacers / Rear Pro Runner Shocks Front Spacers / Rear Pro Runner Shocks Front Pro Runner SS Struts Front MX2.75 Coilover / Rear Pro Runner Shocks Front MX2.75 Coilover / Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 18" + Wheel Width 8" - 9.5" Backspace 4" - 5" Bolt Pattern 6 x 135mm Bolt Code 36 Lug Nut Size 14mm x 2.0 Lug Nut Kit PXA26104	2 4 5
<b>2.5" LIFT - Uniball Upper Arms / Pro Runner Struts</b>							
09-13	Uniball Upper A Arms Black Series Front Coil Over Black Series 2.0 rear shocks	<b>52111K</b> <b>Kit W/ Uniball Upper A Arms Black Series Front Coil Over and Black Series 2.0 rear shocks</b>	1 2 2	52001B ZX4003 ZX3023	Uniball Upper A Arms P2.75 Coilover P2 Series shock	Max Tire Size 35" x 12.50" Wheel Diameter 18" + Wheel Width 8" - 9.5" Wheel 4" - 5" Backspace 6 x 135mm Wheel Bolt 36 Pattern 14mm x 2.0 Wheel Bolt PXA26104 Code Lug Nut Size Lug Nut Kit	2 3 4 5
<b>2.5" LIFT - Uniball Upper Arms / Pro Runner Struts</b>							
09-13	Uniball Upper A Arms Pro Runner SS Monotube Front Struts Pro Runner rear shocks	<b>52111K</b> <b>Kit W/ Uniball Upper A Arms Front / Rear Pro Runner Shocks</b>	1 2 2	52001B ZX2109 ZX2023	Uniball Upper A Arms Pro Runner SS Monotube Strut Pro Runner Monotube Shock	Max Tire Size 35" x 12.50" Wheel Diameter 18" + Wheel Width 8" - 9.5" Wheel 4" - 5" Backspace 6 x 135mm Wheel Bolt 36 Pattern 14mm x 2.0 Wheel Bolt PXA26104 Code Lug Nut Size Lug Nut Kit	2 3 4 5

FORD

OPTIONS	Notes:
Front Skid Plate K4143	
52109 Stainless Steel Skid Plate - 4WD	
Rear Add-A-Leaf Kit	
13137 Rear Add-A-Leaf Kit - 4WD	

OPTIONS	Notes:
Rear Lift Blocks	
95-554FB 5.5" Rear Lift Blocks - 4WD	

- (2) Rear axle shim kit 52700 can be used to increase rear ride height up to 1".
- (3) In order to install Max Tire Size recommendations, it may be required to retain the factory wheel width/ backspacing/ offset. Some application may require the removal of the front inner fender mud flaps and/or other fender modifications. Its up to the installer to verify tire fitment and clearance for safe operation of vehicle.
- (4) Vehicle will require alignment after kit is installed.
- (5) This kit can not be installed on SVT Raptor 09-14.

## Ford F-150 — 2WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>FORD F150 - 4WD</b>						
<b>2.0" Level Lift</b>						
09-13	Front Strut Spacers		1	62159 Front Strut Spacers	Max Tire Size 35" x 12.50" Wheel Diameter 18" + Wheel Width 8" - 9.5" Backspace 4" - 5" Bolt Pattern 6 x 135mm Bolt Code 36 Lug Nut Size 14mm x 2.0 Lug Nut Kit PXA26104	2 3 4 5
<b>FORD F150 - 2WD</b>						
<b>6.0" LIFT</b>						
09-13	Steering Knuckles Drop Crossmembers Diff Drop Brackets Sway Bar Drops Related Hardware Rear 3" Blocks Rear U-Bolts	<b>K4144B</b> Kit w/Front Strut Spacers/Rear ES Shocks OR <b>K4144BP</b> Kit w/Front Strut Spacers/Rear Pro Runner Shocks OR <b>K4144BPS</b> Kit w/Front Strut Spacers and Front / Rear Pro Runner Shocks OR <b>K4144BPX</b> Kit w/Front MX2.75 Coilovers and Rear Pro Runner Shocks OR <b>K4144BMX</b> Kit w/Front MX2.75 Coilovers/ Rear MX6 Shocks	1 1 1 Plus 1 OR OR 1 2 OR 1 OR 1	52213B-1 Kit Box 52213B-2 Kit Box 52213B-3 Kit Box 52213B-4 Front Strut Spacers / Rear ES9000 Shocks 52213BP-4 Front Strut Spacers / Rear Pro Runner Shocks ZX2003 Front Strut Spacers / Rear Pro Runner Shocks 52213BPX-4 Front Pro Runner SS Struts 52213BMX-4 Front MX2.75 Coilover / Rear Pro Runner Shocks Front MX2.75 Coilover / Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 18" + Wheel Width 8" - 9.5" Backspace 4" - 5" Bolt Pattern 6 x 135mm Bolt Code 36 Lug Nut Size 14mm x 2.0 Lug Nut Kit PXA26104	2 4 5
<b>2.5" Level Lift</b>						
09-14			1	62160 Front Strut Spacers	Max Tire Size 35" x 12.50" Wheel Diameter 18" + Wheel Width 8" - 9.5" Backspace 4" - 5" Bolt Pattern 6 x 135mm Bolt Code 36 Lug Nut Size 14mm x 2.0 Lug Nut Kit PXA26104	2 3 4 5
<b>3" Level Lift</b>						
09-14	Front Strut Spacers		1	62200 Front Strut Spacers	Max Tire Size 35" x 12.50" Wheel Diameter 18" + Wheel Width 8" - 9.5" Backspace 4" - 5" Bolt Pattern 6 x 135mm Bolt Code 36 Lug Nut Size 14mm x 2.0 Lug Nut Kit PXA26104	2 3 4 5

FORD

OPTIONS	Notes:
<b>Driveline Options</b>	
52208 CV Style Front Driveshaft	1
90-4107B Rear Driveshaft Spacer Kit	
<b>Front Coil Over Upgrade</b>	
52206BMX Stage 1 to Stage 2 Conversion Kit - 4WD	
52207BMX Stage 1 to Stage 2 Conversion Kit - 2WD	
<b>Front Skid Plate</b>	
52104 Stainless Steel Skid Plate - 4WD	

OPTIONS	Notes:
<b>Rear Lift Blocks Kits</b>	
95-404FB 4.0" Rear Lift Block Kit-Pair-4WD	
95-554FB 5.5" Rear Lift Block Kit-Pair-4WD	
<b>Rear Add-A-Leaf Kit</b>	
13134 Rear Add-A-Leaf Kit - 2WD/ 4WD	
52700 Rear Axle Shim Kit - 1.0" - 2WD/ 4WD	6

OPTIONS	Notes:
<b>Rear Traction Bars</b>	
72500B Rear Traction Bars - Pair	
72096B Rear Mount Kit - Crew Cab	
72095B Rear Mount Kit - Extra Cab	
<b>Steering Stabilizers</b>	
224301 Dual Steering Stabilizer Kit - 2WD	
<b>Level Lift</b>	
62201 Rear Block Kit w/U-Bolts 1.5"	
62203 Rear Block Kit w/U-Bolts 3.0"	

- (2) Rear axle shim kit 52700 can be used to increase rear ride height up to 1".
- (3) In order to install Max Tire Size recommendations, it may be required to retain the factory wheel width/ backspacing/ offset. Some application may require removal of front inner fender mud flaps and/or other fender modifications. Its up to installer to verify tire fitment and clearance for safe operation of vehicle.
- (4) Vehicle will require alignment after kit is installed.
- (5) This Kit should not installed on Raptor Edition models 09-13.
- (6) Rear axle shim kit 52700 can be used to increase rear ride height up to 1".

# SUSPENSION KITS

## Ford F-150 — 4WD/ 2WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>FORD F150 - 4WD</b>						
<b>6.0" LIFT</b>						
04-08	Steering Knuckles Drop Crossmembers Diff Drop Brackets Sway Bar Drops Related Hardware Rear 2.5" Blocks Rear U-Bolts	<b>K4137B</b> Kit w/Front Strut Spacers/ Rear ES Shocks OR <b>K4137BP</b> Kit W Front Strut Spacers and Rear Pro Runner Shocks OR <b>K4137BPS</b> Kit w/Front Strut Spacers and Front / Rear Pro Runner Shocks OR <b>K4137BPX</b> Kit w/Front MX2.75 Coilovers and Rear Pro Runner Shocks OR <b>K4137BMX</b> Kit w/Front MX2.75 Coilovers and Rear MX6 Shocks	1 1 1 Plus 1 OR 1 OR 1 2 OR 1 1 OR 1 1	52204B-1 Kit Box 52204B-2 Kit Box 52204B-3 Kit Box 52204B-4 Front Strut Spacers / Rear ES9000 Shocks 52204BP-4 Front Strut Spacers / Rear Pro Runner Shocks 52204BP-4 Front Strut Spacers / Rear Pro Runner Shocks ZX2076 Front Pro Runner SS Struts 52204BPX-4 Front MX2.75 Coilover / Rear Pro Runner Shocks 52204BPX-5 Front MX2.75 Coilover / Rear Pro Runner Shocks 52204BMX-4 Front MX2.75 Coilover / Rear MX6 Shocks 52204BMX-5 Front MX2.75 Coilover / Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 9.5" Backspace 4" - 5" Bolt Pattern 6 x 135mm Bolt Code 36 Lug Nut Size 14mm x 2.0 Lug Nut Kit PXA26104	1 3 5 7
<b>FORD F150 - 2WD</b>						
<b>6.0" LIFT</b>						
04-08	Steering Knuckles Drop Crossmembers Diff Drop Brackets Sway Bar Drops Related Hardware Rear 3" Blocks Rear U-Bolts	<b>K4138B</b> Kit w/Front Strut Spacers and Rear ES Shocks OR <b>K4138BP</b> Kit W Front Strut Spacers and Rear Pro Runner Shocks OR <b>K4138BPS</b> Kit w/Front Strut Spacers and Front / Rear Pro Runner Shocks OR <b>K4138BPX</b> Kit w/Front MX2.75 Coilovers and Rear Pro Runner Shocks OR <b>K4138BMX</b> Kit w/Front MX2.75 Coilovers and Rear MX6 Shocks	1 1 1 Plus 1 OR 1 OR 1 2 OR 1 1 OR 1 1	52205B-1 Kit Box 52205B-2 Kit Box 52205B-3 Kit Box 52205B-4 Front Strut Spacers / Rear ES9000 Shocks 52205BP-4 Front Strut Spacers / Rear Pro Runner Shocks 52205BP-4 Front Strut Spacers / Rear Pro Runner Shocks ZX2066 Front Pro Runner SS Struts 52205BPX-4 Front MX2.75 Coilover / Rear Pro Runner Shocks 52205BPX-5 Front MX2.75 Coilover / Rear Pro Runner Shocks 52205BMX-4 Front MX2.75 Coilover / Rear MX6 Shocks 52205BMX-5 Front MX2.75 Coilover / Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 9.5" Backspace 4" - 5" Bolt Pattern 6 x 135mm Bolt Code 36 Lug Nut Size 14mm x 2.0 Lug Nut Kit PXA26104	2 3 5 7

FORD

OPTIONS	Notes:
<b>Driveline Options</b>	
52208 CV Style Front Driveshaft	1
90-4107B Rear Driveshaft Spacer Kit	
<b>Front Coil Over Upgrade</b>	
52206BMX Stage 1 to Stage 2 Conversion Kit - 4WD	
52207BMX Stage 1 to Stage 2 Conversion Kit - 2WD	
<b>Front Skid Plate</b>	
52104 Stainless Steel Skid Plate - 4WD	

OPTIONS	Notes:
<b>Rear Lift Blocks Kits</b>	
95-404FB 4.0" Rear Lift Block Kit-Pair-4WD	
95-554FB 5.5" Rear Lift Block Kit-Pair-4WD	
<b>Rear Add-A-Leaf Kit</b>	
13134 Rear Add-A-Leaf Kit - 2WD/ 4WD	
52700 Rear Axle Shim Kit - 1.0" - 2WD/ 4WD	3

OPTIONS	Notes:
<b>Rear Traction Bars</b>	
72500B Rear Traction Bars - Pair	
72096B Rear Mount Kit - Crew Cab	
72095B Rear Mount Kit - Extra Cab	
<b>Steering Stabilizers</b>	
224301 Dual Steering Stabilizer Kit- 2WD	
<b>Level Lift</b>	
62201 Rear Block Kit w/U-Bolts 1.5"	
62203 Rear Block Kit w/U-Bolts 3.0"	

- (1) CV style front driveshaft part 52208 is recommended for extended high speed use in 4x4 HI.
- (2) Ford recommends not to reuse the original spindle nuts. Pro comp recommends ordering spindle nut kit part 90-4116B.
- (3) Rear axle shim kit 52700 can be used to increase rear ride height up to 1".
- (4) Use of a 35" x 12.5" tire may require the removal of the front inner fender mud flaps and/or other fender modifications.
- (5) Vehicle will require alignment after kit is installed.
- (6) In Order to install Max Tire Size recommendations, it may be required to retain the factory wheel width/ backspacing/ offset. Some applications may require removal of front inner fender mud flaps and/or other fender modifications. Its up to installer to verify tire fitment and clearance for safe operation of vehicle.
- (7) Baja Champion Edition models 04-08 are applicable for Leveling and 6" lift kits.

## Ford F-150 — 4WD/ 2WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions		Wheel / Tire Specs:		Notes
<b>FORD F150 - 2WD/ 4WD</b>								
<b>3" Level Lift</b>								
04-08	Front Strut Spacers		1	62200	Front Strut Spacers	Max Tire Size	35" x 12.50"	3
						Wheel Diameter	OE" +	4
						Wheel Width	8" - 9.5"	5
						Backspace	4" - 5"	6
						Bolt Pattern	6 x 135mm	
						Bolt Code	36	
						Lug Nut Size	14mm x 2.0	
						Lug Nut Kit	PXA26104	
<b>FORD F150 - 2WD/ 4WD</b>								
<b>2.5" Poly Lift</b>								
04-08			1	PLF09111	Front Strut Spacers	Max Tire Size	35" x 12.50"	3
						Wheel Diameter	OE" +	4
						Wheel Width	8" - 9.5"	5
						Backspace	4" - 5"	6
						Bolt Pattern	6 x 135mm	
						Bolt Code	36	
						Lug Nut Size	14mm x 2.0	
						Lug Nut Kit	PXA26104	
<b>F150 w/4.6L (11" x 13" Trans Pan) - 4WD</b>								
<b>4.0" LIFT</b>								
97-03	Steering Knuckles Drop Crossmembers Diff Drop Brackets Sway Bar Links Related Hardware Rear Add-A-Leaf Rear U-Bolts	<b>K4050B</b> Kit w/ES Shocks OR <b>K4050BMX</b> Kit w/MX6 Shocks	1	52097B-1	Kit Box	Max Tire Size	35" x 12.50"	2
			1	52097B-2	Kit Box	Wheel Diameter	16" +	3
			1	52097B-3	Kit Box	Wheel Width	8" - 9.5"	4
			1	22259	Rear U-Bolt Kit	Backspace	3.5" - 4.5"	5
			1	13132	Rear Add-A-Leaf	Bolt Pattern	5 x 135mm	
			Plus			Bolt Code	35	
			2	320510	Front ES3000 Shocks	Lug Nut Size	See Notes	
			2	329510	Rear ES3000 Shocks	Lug Nut Kit	See Notes	
			OR					
			2	MX6006	Front MX6 Shocks			
			2	MX6007	Rear MX6 Shocks			
<b>F150 / F250 (7 Lug) w/5.4L (13" x 26" Trans Pan) - 4WD</b>								
97-03	Steering Knuckles Drop Crossmembers Diff Drop Brackets Sway Bar Links Related Hardware Rear Add-A-Leaf Rear U-Bolts	<b>K4051B</b> Kit w/ES Shocks OR <b>K4051BMX</b> Kit w/MX6 Shocks	1	52098B-1	Kit Box	Max Tire Size	35" x 12.50"	2
			1	52097B-2	Kit Box	Wheel Diameter	16" +	3
			1	52098B-3	Kit Box	Wheel Width	8" - 9.5"	4
			1	22259	Rear U-Bolt Kit	Backspace	3.5" - 4.5"	5
			1	13132	Rear Add-A-Leaf	Bolt Pattern	5 x 135mm	
			Plus			Bolt Code	35	
			2	320510	Front ES3000 Shocks	Lug Nut Size	See Notes	
			2	329510	Rear ES3000 Shocks	Lug Nut Kit	See Notes	
			OR					
			2	MX6006	Front MX6 Shocks			
			2	MX6007	Rear MX6 Shocks			
<b>F150 - 4WD</b>								
<b>2.5" Level Lift</b>								
97-03	Torsion Keys		1	62150	Torsion Keys	Max Tire Size	33" x 12.50"	2
						Wheel Diameter	16" +	3
						Wheel Width	8" - 9.5"	4
						Backspace	3.5" - 4.5"	5
						Bolt Pattern	5 x 135mm	
						Bolt Code	35	
						Lug Nut Size	See Notes	
						Lug Nut Kit	See Notes	

OPTIONS	Notes:
Steering Stabilizers	
220580 Single Kit - 4WD	
220595 Single Kit - 2WD	

OPTIONS	Notes:
Alignment Cam Bolts - 4WD / 2WD	
90-6170 Set of 4	3

- 97-99 Vehicles use 12mm x 1.75 lug nuts. 00-03 Vehicles use 14mm x 2.0 lug nuts. Use lug nut kit PXA26104. 7-lug vehicles will require 8 additional lug nuts. Individual lug nuts sold separately.
- Vehicle will require eccentric alignment cam kit. P/N 90-6170 available separately. (4) Vehicle will require alignment after kit is installed.
- Maximum height achieved will depend upon final torsion bar adjustment, accessories, weight carried and the age of the torsion bars.
- In order to install Max Tire Size recommendations, it may be required to retain the factory wheel width/ backspacing/ offset. Some applications may require removal of front inner fender mud flaps and/or other fender modifications. Its up to installer to verify tire fitment and clearance for safe operation of vehicle.

# SUSPENSION KITS

## Ford F-150 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>F150 Standard Cab</b>						
<b>6.0" LIFT Stage I w/Rear Blocks</b>						
90-96	Front Coil Springs Radius Arm Brackets I Beam Brackets Drop Pitman Arm Stainless Brake Lines Related Hardware Rear 3.5" Blocks Rear U-Bolts	<b>K4063B</b> Kit w/ES Shocks	1 1 1 1 1 2 2	24612 Front Coil Springs - Standard Cab 52180B Kit Box 22256 Rear Lift Block Kit 7325 Stainless Brake Line Kit FD400 Drop Pitman Arm 321510 Front ES3000 Shocks 326500 Rear ES3000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 3 4
<b>F150 Extra Cab</b>						
<b>6.0" LIFT Stage I w/Rear Blocks</b>						
90-96	Front Coil Springs Radius Arm Brackets I Beam Brackets Drop Pitman Arm Stainless Brake Lines Related Hardware Rear 3.5" Blocks Rear U-Bolts	<b>K4067B</b> Kit w/ES Shocks	1 1 1 1 1 2 2	24613 Front Coil Springs - Extra Cab 52180B Kit Box 22256 Rear Lift Block Kit 7325 Stainless Brake Line Kit FD400 Drop Pitman Arm 321510 Front ES3000 Shocks 326500 Rear ES3000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 3 4
<b>F150 Standard Cab</b>						
<b>6.0" LIFT Stage II w/Rear Blocks</b>						
90-96	Front Coil Springs Radius Arm I Beam Brackets Drop Pitman Arm Stainless Brake Lines Related Hardware Rear 3.5" Blocks Rear U-Bolts	<b>K4064B</b> Kit w/ES Shocks	1 1 1 1 1 2 2	24612 Front Coil Springs - Standard Cab 52080B-1 Kit Box 52080B-2 Kit Box 22256 Rear Lift Block Kit 7325 Stainless Brake Line Kit 321510 Front ES3000 Shocks 326500 Rear ES3000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 3 4
<b>F150 Extra Cab</b>						
<b>6.0" LIFT Stage II w/Rear Blocks</b>						
90-96	Front Coil Springs Radius Arm I Beam Brackets Drop Pitman Arm Stainless Brake Lines Related Hardware Rear 3.5" Blocks Rear U-Bolts	<b>K4066B</b> Kit w/ES Shocks	1 1 1 1 1 2 2	24613 Front Coil Springs - Extra Cab 52080B-1 Kit Box 52080b-2 Kit Box 22256 Rear Lift Block Kit 7325 Stainless Brake Line Kit 321510 Front ES3000 Shocks 326500 Rear ES3000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 3 4

FORD

OPTIONS		Notes:
Alignment Cam - Pair		
532	Eccentric Alignment Cam Kit - 4WD	1
Rear Add-A-Leaf - Pairs		
13128	2.5"-3.5" Rear Add-A-Leaf - 4WD	
13130	3.5"-4.5" Rear Add-A-Leaf - 4WD	
Rear Leaf Spring		
23411	6" Rear Leaf Spring - Single - 4WD	
23211	4" Rear Leaf Spring - Single - 4WD	

OPTIONS		Notes:
U-Bolt Kits		
50438	Rear Axle U-Bolt Kit	
Shock - Factory Front Quad Shocks		
324510	6" Lift ES3000	2
322510	4" Lift ES3000	2
Steering Stabilizers		
220537	Steering Stabilizer Kit (Non-Quad Front)	
220566	Steering Stabilizer Kit (Quad Front)	
220565	Dual Steering Stabilizer Kit (Quad Front)	

- (1) Vehicle will require eccentric alignment cam kit p/n 532.
- (2) Vehicles equipped with factory front quad shocks will require 2) additional front shocks. Required and sold separately.
- (3) Vehicle will require alignment after kit is installed.
- (4) Brake Hose Kit 7325 required when left front brake line has 3-way T-block (Non-ABS). Brake hose kit 7350 required when both front brake lines are identical (ABS).

## Ford F-150 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
------	-------------	---------------	------	--------------------------------------	---------------------	-------

### F150 Standard Cab

#### 4.0" LIFT Stage I w/Rear Blocks

90-96	Front Coil Springs	<b>K4055B</b> Kit w/ES Shocks	1	24412	Front Coil Springs - Standard Cab	Max Tire Size	33" x 12.50"	1
	Radius Arm Brackets		1	52180B	Kit Box	Wheel Diameter	15" +	2
	I Beam Brackets		1	22255	Rear Lift Block Kit	Wheel Width	8" - 10"	3
	Drop Pitman Arm		1	7325	Stainless Brake Line Kit	Backspace	3.25" - 4"	4
	Stainless Brake Lines		1	FD400	Drop Pitman Arm	Bolt Pattern	5 x 5.5"	
	Related Hardware		2	319510	Front ES3000 Shocks	Bolt Code	85	
	Rear 2.5" Blocks		2	324509	Rear ES3000 Shocks	Lug Nut Size	1/2"	
	Rear U-Bolts					Lug Nut Kit	PXA21183	

### F150 Extra Cab

#### 4.0" LIFT Stage I w/Rear Blocks

90-96	Front Coil Springs	<b>K4059B</b> Kit w/ES Shocks	1	24413	Front Coil Springs - Extra Cab	Max Tire Size	33" x 12.50"	1
	Radius Arm Brackets		1	52180B	Kit Box	Wheel Diameter	15" +	2
	I Beam Brackets		1	22255	Rear Lift Block Kit	Wheel Width	8" - 10"	3
	Drop Pitman Arm		1	7325	Stainless Brake Line Kit	Backspace	3.25" - 4"	4
	Stainless Brake Lines		1	FD400	Drop Pitman Arm	Bolt Pattern	5 x 5.5"	
	Related Hardware		2	319510	Front ES3000 Shocks	Bolt Code	85	
	Rear 2.5" Blocks		2	324509	Rear ES3000 Shocks	Lug Nut Size	1/2"	
	Rear U-Bolts					Lug Nut Kit	PXA21183	

### F150 Standard Cab

#### 4.0" LIFT Stage II w/Rear Blocks

90-96	Front Coil Springs	<b>K4056B</b> Kit w/ES Shocks	1	24412	Front Coil Springs - Standard Cab	Max Tire Size	33" x 12.50"	1
	Radius Arms		1	52080B-1	Kit Box	Wheel Diameter	15" +	2
	I Beam Brackets		1	52080B-2	Kit Box	Wheel Width	8" - 10"	3
	Drop Pitman Arm		1	22255	Rear Lift Block Kit	Backspace	3.25" - 4"	4
	Stainless Brake Lines		1	7325	Stainless Brake Line Kit	Bolt Pattern	5 x 5.5"	
	Related Hardware		2	319510	Front ES3000 Shocks	Bolt Code	85	
	Rear 2.5" Blocks		2	324509	Rear ES3000 Shocks	Lug Nut Size	1/2"	
	Rear U-Bolts					Lug Nut Kit	PXA21183	

### F150 Extra Cab

#### 4.0" LIFT Stage II w/Rear Blocks

90-96	Front Coil Springs	<b>K4060B</b> Kit w/ES Shocks	1	24413	Front Coil Springs - Extra Cab	Max Tire Size	33" x 12.50"	1
	Radius Arms		1	52080B-1	Kit Box	Wheel Diameter	15" +	2
	I Beam Brackets		1	52080B-2	Kit Box	Wheel Width	8" - 10"	3
	Drop Pitman Arm		1	22255	Rear Lift Block Kit	Backspace	3.25" - 4"	4
	Stainless Brake Lines		1	7325	Stainless Brake Line Kit	Bolt Pattern	5 x 5.5"	
	Related Hardware		2	319510	Front ES3000 Shocks	Bolt Code	85	
	Rear 2.5" Blocks		2	324509	Rear ES3000 Shocks	Lug Nut Size	1/2"	
	Rear U-Bolts					Lug Nut Kit	PXA21183	

OPTIONS	Notes:
Alignment Cam - Pair	
532 Eccentric Alignment Cam Kit - 4WD	1
Rear Add-A-Leaf - Pairs	
13128 2.5"-3.5" Rear Add-A-Leaf - 4WD	
13130 3.5"-4.5" Rear Add-A-Leaf - 4WD	
Rear Leaf Spring	
23411 6" Rear Leaf Spring - Single - 4WD	
23211 4" Rear Leaf Spring - Single - 4WD	
U-Bolt Kits	
50438 Rear Axle U-Bolt Kit	

OPTIONS	Notes:
Shock - Factory Front Quad Shocks	
324510 6" Lift ES3000	2
322510 4" Lift ES3000	2
Steering Stabilizers	
220537 Steering Stabilizer Kit (Non-Quad Front)	
220566 Steering Stabilizer Kit (Quad Front)	
220565 Dual Steering Stabilizer Kit (Quad Front)	

- (1) Vehicle will require eccentric alignment cam kit p/n 532.
- (2) Vehicles equipped with factory front quad shocks will require 2) additional front shocks. Required and sold separately.
- (3) Vehicle will require alignment after kit is installed.
- (4) Brake Hose Kit 7325 required when left front brake line has 3-way T-block (Non-ABS). Brake hose kit 7350 required when both front brake lines are identical (ABS).

# SUSPENSION KITS

## Ford F-150 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>F150 Standard Cab</b>						
<b>6.0" LIFT Stage I w/Rear Blocks</b>						
81-89	Front Coil Springs Radius Arm Brackets I Beam Brackets Drop Pitman Arm Stainless Brake Lines Related Hardware Rear 3.5" Blocks Rear U-Bolts	<b>K4079B</b> Kit w/ES Shocks	1 1 1 1 1 2 2	24612 Front Coil Springs - Standard Cab 52180B Kit Box 22256 Rear Lift Block Kit 7330 Stainless Brake Line Kit FD400 Drop Pitman Arm 321510 Front ES3000 Shocks 326500 Rear ES3000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 3
<b>F150 Extra Cab</b>						
<b>6.0" LIFT Stage I w/Rear Blocks</b>						
81-89	Front Coil Springs Radius Arm Brackets I Beam Brackets Drop Pitman Arm Stainless Brake Lines Related Hardware Rear 3.5" Blocks Rear U-Bolts	<b>K4083B</b> Kit w/ES Shocks	1 1 1 1 1 2 2	24613 Front Coil Springs - Extra Cab 52180B Kit Box 22256 Rear Lift Block Kit 7330 Stainless Brake Line Kit FD400 Drop Pitman Arm 321510 Front ES3000 Shocks 326500 Rear ES3000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 3
<b>F150 Standard Cab</b>						
<b>6.0" LIFT Stage II w/Rear Blocks</b>						
81-89	Front Coil Springs Radius Arms I Beam Brackets Drop Pitman Arm Stainless Brake Lines Related Hardware Rear 3.5" Blocks Rear U-Bolts	<b>K4080B</b> Kit w/ES Shocks	1 1 1 1 1 2 2	24612 Front Coil Springs - Standard Cab 52080B-1 Kit Box 52080B-2 Kit Box 22256 Rear Lift Block Kit 7330 Stainless Brake Line Kit 321510 Front ES3000 Shocks 326500 Rear ES3000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 3
<b>F150 Extra Cab</b>						
<b>6.0" LIFT Stage II w/Rear Blocks</b>						
81-89	Front Coil Springs Radius Arms I Beam Brackets Drop Pitman Arm Stainless Brake Lines Related Hardware Rear 3.5" Blocks Rear U-Bolts	<b>K4084B</b> Kit w/ES Shocks	1 1 1 1 1 2 2	24613 Front Coil Springs - Extra Cab 52080B-1 Kit Box 52080B-2 Kit Box 22256 Rear Lift Block Kit 7330 Stainless Brake Line Kit 321510 Front ES3000 Shocks 326500 Rear ES3000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 3

FORD

OPTIONS	Notes:
Alignment Cam - Pair	
532 Eccentric Alignment Cam Kit - 4WD	1
Rear Add-A-Leaf - Pairs	
13128 2.5"-3.5" Rear Add-A-Leaf - 4WD	
13130 3.5"-4.5" Rear Add-A-Leaf - 4WD	
Rear Leaf Spring	
23411 6" Rear Leaf Spring - Single - 4WD	
23211 4" Rear Leaf Spring - Single - 4WD	
U-Bolt Kits	
50438 Rear Axle U-Bolt Kit	

OPTIONS	Notes:
Shock - Factory Front Quad Shocks	
324510 6" Lift ES3000	2
322510 4" Lift ES3000	2
Steering Stabilizers	
220537 Steering Stabilizer Kit (Non-Quad Front)	
220566 Steering Stabilizer Kit (Quad Front)	
220565 Dual Steering Stabilizer Kit (Quad Front)	

- (1) Vehicle will require eccentric alignment cam kit p/n 532.
- (2) Vehicles equipped with factory front quad shocks will require 2) additional front shocks. Required and sold separately.
- (3) Vehicle will require alignment after kit is installed.
- (4) Brake Hose Kit 7325 required when left front brake line has 3-way T-block (Non-ABS). Brake hose kit 7350 required when both front brake lines are identical (ABS).



## Ford F-150 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>F150 Standard Cab</b>						
<b>4.0" LIFT Stage I w/Rear Blocks</b>						
81-89	Front Coil Springs Radius Arm Brackets I Beam Brackets Drop Pitman Arm Stainless Brake Lines Related Hardware Rear 2.5" Blocks Rear U-Bolts	<b>K4071B</b> Kit w/ES Shocks	1 1 1 1 1 2 2	24412 Front Coil Springs - Standard Cab 52180B Kit Box 22255 Rear Lift Block Kit 7330 Stainless Brake Line Kit FD400 Drop Pitman Arm 319510 Front ES3000 Shocks 324509 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 3
<b>F150 Extra Cab</b>						
<b>4.0" LIFT Stage I w/Rear Blocks</b>						
81-89	Front Coil Springs Radius Arm Brackets I Beam Brackets Drop Pitman Arm Stainless Brake Lines Related Hardware Rear 2.5" Blocks Rear U-Bolts	<b>K4075B</b> Kit w/ES Shocks	1 1 1 1 1 2 2	24413 Front Coil Springs - Extra Cab 52180B Kit Box 22255 Rear Lift Block Kit 7330 Stainless Brake Line Kit FD400 Drop Pitman Arm 319510 Front ES3000 Shocks 324509 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 3
<b>F150 Standard Cab</b>						
<b>4.0" LIFT Stage II w/Rear Blocks</b>						
81-89	Front Coil Springs Radius Arms I Beam Brackets Drop Pitman Arm Stainless Brake Lines Related Hardware Rear 2.5" Blocks Rear U-Bolts	<b>K4072B</b> Kit w/ES Shocks	1 1 1 1 1 2 2	24412 Front Coil Springs - Standard Cab 52080B-1 Kit Box 52080B-2 Kit Box 22255 Rear Lift Block Kit 7330 Stainless Brake Line Kit 319510 Front ES3000 Shocks 324509 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 3
<b>F150 Extra Cab</b>						
<b>4.0" LIFT Stage II w/Rear Blocks</b>						
81-89	Front Coil Springs Radius Arms I Beam Brackets Drop Pitman Arm Stainless Brake Lines Related Hardware Rear 2.5" Blocks Rear U-Bolts	<b>K4076B</b> Kit w/ES Shocks	1 1 1 1 1 2 2	24413 Front Coil Springs - Extra Cab 52080B-1 Kit Box 52080B-2 Kit Box 22255 Rear Lift Block Kit 7330 Stainless Brake Line Kit 319510 Front ES3000 Shocks 324509 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 3
<b>F150 Standard/ Extra Cab</b>						
<b>2.0" LIFT</b>						
81-89	Front Coil Springs	<b>K4085</b> Kit w/Front Coil Spacers	1 2 2	24212 Front Coils - Standard Cab 317510 Front ES3000 Shocks 324509 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 3

OPTIONS	Notes:
Alignment Cam - Pair	
594 Eccentric Alignment Cam Kit - 2WD	1

OPTIONS	Notes:
Rear Add-A-Leaf - Pairs	
13122 1.5"-2.5" Rear Add-A-Leaf - 2WD	

OPTIONS	Notes:
Steering Stabilizers	
220537 Steering Stabilizer Kit (Non-Quad Front)	

- (1) Vehicle will require eccentric alignment cam kit p/n 594.
- (2) Vehicles equipped with factory front quad shocks will require 2) additional front shocks. Required and sold separately.
- (3) Vehicle will require alignment after kit is installed.
- (4) Brake Hose Kit 7325 required when left front brake line has 3-way T-block (Non-ABS). Brake hose kit 7350 required when both front brake lines are identical (ABS).

# SUSPENSION KITS

## Ford F-150 — 2WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>F150 Standard Cab</b>						
<b>6.0" LIFT Stage I w/Rear Blocks</b>						
90-96	Front Coil Springs Radius Arm Brackets I Beam Brackets Drop Pitman Arm Stainless Brake Lines Related Hardware Rear 3.5" Blocks Rear U-Bolts	<b>K4104B</b> Kit w/ES Shocks	1 1 1 1 1 2 2	24612 Front Coil Springs - Standard Cab 52180B Kit Box 22254 Rear Lift Block Kit 7325 Stainless Brake Line Kit FD400 Drop Pitman Arm 321510 Front ES3000 Shocks 324509 Rear ES3000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 3 4
<b>F150 Extra Cab</b>						
<b>6.0" LIFT Stage I w/Rear Blocks</b>						
90-96	Front Coil Springs Radius Arm Brackets I Beam Brackets Drop Pitman Arm Stainless Brake Lines Related Hardware Rear 3.5" Blocks Rear U-Bolts	<b>K4106B</b> Kit w/ES Shocks	1 1 1 1 1 2 2	24613 Front Coil Springs - Extra Cab 52180B Kit Box 22254 Rear Lift Block Kit 7325 Stainless Brake Line Kit FD400 Drop Pitman Arm 321510 Front ES3000 Shocks 324509 Rear ES3000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 3 4
<b>F150 Standard Cab</b>						
<b>6.0" LIFT Stage II w/Rear Blocks</b>						
90-96	Front Coil Springs Radius Arms I Beam Brackets Drop Pitman Arm Stainless Brake Lines Related Hardware Rear 3.5" Blocks Rear U-Bolts	<b>K4105B</b> Kit w/ES Shocks	1 1 1 1 1 2 2	24612 Front Coil Springs - Standard Cab 52080B-1 Kit Box 52080B-2 Kit Box 22254 Rear Lift Block Kit 7325 Stainless Brake Line Kit 321510 Front ES3000 Shocks 324509 Rear ES3000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 3 4
<b>F150 Extra Cab</b>						
<b>6.0" LIFT Stage II w/Rear Blocks</b>						
90-96	Front Coil Springs Radius Arms I Beam Brackets Drop Pitman Arm Stainless Brake Lines Related Hardware Rear 3.5" Blocks Rear U-Bolts	<b>K4107B</b> Kit w/ES Shocks	1 1 1 1 1 2 2	24613 Front Coil Springs - Extra Cab 52080B-1 Kit Box 52080B-2 Kit Box 22254 Rear Lift Block Kit 7325 Stainless Brake Line Kit 321510 Front ES3000 Shocks 324509 Rear ES3000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 3 4

FORD

OPTIONS	Notes:	OPTIONS	Notes:	OPTIONS	Notes:
Alignment Cam - Pair		Rear Add-A-Leaf - Pairs		Steering Stabilizers	
594 Eccentric Alignment Cam Kit - 2WD 1		13122 1.5"-2.5" Rear Add-A-Leaf - 2WD		220537 Steering Stabilizer Kit (Non-Quad Front)	

- (1) Vehicle will require eccentric alignment cam kit p/n 594.  
 (3) Vehicle will require alignment after kit is installed.  
 (4) Brake Hose Kit 7325 required when left front brake line has a 3-way T-block (Non-ABS). Brake hose kit 7350 required when both front brake lines are identical (ABS).

## Ford F-150 — 2WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>F150 Standard Cab</b>						
<b>4.0" LIFT Stage I w/Rear Blocks</b>						
90-96	Front Coil Springs Radius Arm Brackets I Beam Brackets Drop Pitman Arm Stainless Brake Lines Related Hardware Rear 2.5" Blocks Rear U-Bolts	<b>K4098B</b> Kit w/ES Shocks	1 1 1 1 1 2 2	24412 Front Coil Springs - Standard Cab 52180B Kit Box 22253 Rear Lift Block Kit 7325 Stainless Brake Line Kit FD400 Drop Pitman Arm 319510 Front ES3000 Shocks 324509 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 3 4
<b>F150 Extra Cab</b>						
<b>4.0" LIFT Stage I w/Rear Blocks</b>						
90-96	Front Coil Springs Radius Arm Brackets I Beam Brackets Drop Pitman Arm Stainless Brake Lines Related Hardware Rear 2.5" Blocks Rear U-Bolts	<b>K4102B</b> Kit w/ES Shocks	1 1 1 1 1 2 2	24413 Front Coil Springs - Extra Cab 52180B Kit Box 22253 Rear Lift Block Kit 7325 Stainless Brake Line Kit FD400 Drop Pitman Arm 319510 Front ES3000 Shocks 324509 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 3 4
<b>F150 Standard Cab</b>						
<b>4.0" LIFT Stage II w/Rear Blocks</b>						
90-96	Front Coil Springs Radius Arms I Beam Brackets Drop Pitman Arm Stainless Brake Lines Related Hardware Rear 2.5" Blocks Rear U-Bolts	<b>K4099B</b> Kit w/ES Shocks	1 1 1 1 1 2 2	24412 Front Coil Springs - Standard Cab 52080B-1 Kit Box 52080B-2 Kit Box 22253 Rear Lift Block Kit 7325 Stainless Brake Line Kit 319510 Front ES3000 Shocks 324509 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 3 4
<b>F150 Extra Cab</b>						
<b>4.0" LIFT Stage II w/Rear Blocks</b>						
90-96	Front Coil Springs Radius Arms I Beam Brackets Drop Pitman Arm Stainless Brake Lines Related Hardware Rear 2.5" Blocks Rear U-Bolts	<b>K4103B</b> Kit w/ES Shocks	1 1 1 1 1 2 2	24413 Front Coil Springs - Extra Cab 52080B-1 Kit Box 52080B-2 Kit Box 22253 Rear Lift Block Kit 7325 Stainless Brake Line Kit 319510 Front ES3000 Shocks 324509 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 3 4

OPTIONS	Notes:
Alignment Cam - Pair	
594 Eccentric Alignment Cam Kit - 2WD	1

OPTIONS	Notes:
Rear Add-A-Leaf - Pairs	
13122 1.5"-2.5" Rear Add-A-Leaf - 2WD	

OPTIONS	Notes:
Steering Stabilizers	
220537 Steering Stabilizer Kit (Non-Quad Front)	

- (1) Vehicle will require eccentric alignment cam kit p/n 594.
- (3) Vehicle will require alignment after kit is installed.
- (4) Brake Hose Kit 7325 required when left front brake line has a 3-way T-block (Non-ABS). Brake hose kit 7350 required when both front brake lines are identical (ABS).

FORD

# SUSPENSION KITS

## Ford F-150 — 2WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>F150 Standard Cab</b>						
<b>6.0" LIFT Stage I w/Rear Blocks</b>						
81-89	Front Coil Springs Radius Arm Brackets I Beam Brackets Drop Pitman Arm Stainless Brake Lines Related Hardware Rear 3.5" Blocks Rear U-Bolts	<b>K4116B</b> Kit w/ES Shocks	1 1 1 1 1 2 2	24612 Front Coil Springs - Standard Cab 52180B Kit Box 22254 Rear Lift Block Kit 7330 Stainless Brake Line Kit FD400 Drop Pitman Arm 321510 Front ES3000 Shocks 324509 Rear ES3000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 3
<b>F150 Extra Cab</b>						
<b>6.0" LIFT Stage I w/Rear Blocks</b>						
81-89	Front Coil Springs Radius Arm Brackets I Beam Brackets Drop Pitman Arm Stainless Brake Lines Related Hardware Rear 3.5" Blocks Rear U-Bolts	<b>K4118B</b> Kit w/ES Shocks	1 1 1 1 1 2 2	24613 Front Coil Springs - Extra Cab 52180B Kit Box 22254 Rear Lift Block Kit 7330 Stainless Brake Line Kit FD400 Drop Pitman Arm 321510 Front ES3000 Shocks 324509 Rear ES3000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 3
<b>F150 Standard Cab</b>						
<b>6.0" LIFT Stage II w/Rear Blocks</b>						
81-89	Front Coil Springs Radius Arms I Beam Brackets Drop Pitman Arm Stainless Brake Lines Related Hardware Rear 3.5" Blocks Rear U-Bolts	<b>K4117B</b> Kit w/ES Shocks	1 1 1 1 1 2 2	24612 Front Coil Springs - Standard Cab 52080B-1 Kit Box 52080B-2 Kit Box 22254 Rear Lift Block Kit 7330 Stainless Brake Line Kit 321510 Front ES3000 Shocks 324509 Rear ES3000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 3
<b>F150 Extra Cab</b>						
<b>6.0" LIFT Stage II w/Rear Blocks</b>						
81-89	Front Coil Springs Radius Arms I Beam Brackets Drop Pitman Arm Stainless Brake Lines Related Hardware Rear 3.5" Blocks Rear U-Bolts	<b>K4119B</b> Kit w/ES Shocks	1 1 1 1 1 2 2	24613 Front Coil Springs - Extra Cab 52080B-1 Kit Box 52080B-2 Kit Box 22254 Rear Lift Block Kit 7330 Stainless Brake Line Kit 321510 Front ES3000 Shocks 324509 Rear ES3000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 3

FORD

OPTIONS	Notes:	OPTIONS	Notes:	OPTIONS	Notes:
Alignment Cam - Pair		Rear Add-A-Leaf - Pairs		Steering Stabilizers	
594 Eccentric Alignment Cam Kit - 2WD	1	13122 1.5"-2.5" Rear Add-A-Leaf - 2WD		220537 Steering Stabilizer Kit (Non-Quad Front)	

(1) Vehicle will require eccentric alignment cam kit p/n 594. (3) Vehicle will require alignment after kit is installed.

## Ford F-150 — 2WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
------	-------------	---------------	------	--------------------------------------	---------------------	-------

### F150 Standard Cab

#### 4.0" LIFT Stage I w/Rear Blocks

81-89	Front Coil Springs	<b>K4110B</b> Kit w/ES Shocks	1	24412	Front Coil Springs - Standard Cab	Max Tire Size	33" x 12.50"	1
	Radius Arm Brackets		1	52180B	Kit Box	Wheel Diameter	15" +	3
	I Beam Brackets		1	22253	Rear Lift Block Kit	Wheel Width	8" - 10"	
	Drop Pitman Arm		1	7330	Stainless Brake Line Kit	Backspace	3.25" - 4"	
	Stainless Brake Lines		1	FD400	Drop Pitman Arm	Bolt Pattern	5 x 5.5"	
	Related Hardware		2	319510	Front ES3000 Shocks	Bolt Code	85	
	Rear 2.5" Blocks		2	324509	Rear ES3000 Shocks	Lug Nut Size	1/2"	
	Rear U-Bolts					Lug Nut Kit	PXA21183	

### F150 Extra Cab

#### 4.0" LIFT Stage I w/Rear Blocks

81-89	Front Coil Springs	<b>K4114B</b> Kit w/ES Shocks	1	24413	Front Coil Springs - Extra Cab	Max Tire Size	33" x 12.50"	1
	Radius Arm Brackets		1	52180B	Kit Box	Wheel Diameter	15" +	3
	I Beam Brackets		1	22253	Rear Lift Block Kit	Wheel Width	8" - 10"	
	Drop Pitman Arm		1	7330	Stainless Brake Line Kit	Backspace	3.25" - 4"	
	Stainless Brake Lines		1	FD400	Drop Pitman Arm	Bolt Pattern	5 x 5.5"	
	Related Hardware		2	319510	Front ES3000 Shocks	Bolt Code	85	
	Rear 2.5" Blocks		2	324509	Rear ES3000 Shocks	Lug Nut Size	1/2"	
	Rear U-Bolts					Lug Nut Kit	PXA21183	

### F150 Standard Cab

#### 4.0" LIFT Stage II w/Rear Blocks

81-89	Front Coil Springs	<b>K4111B</b> Kit w/ES Shocks	1	24412	Front Coil Springs - Standard Cab	Max Tire Size	33" x 12.50"	1
	Radius Arms		1	52080B-1	Kit Box	Wheel Diameter	15" +	3
	I Beam Brackets		1	52080B-2	Kit Box	Wheel Width	8" - 10"	
	Drop Pitman Arm		1	22253	Rear Lift Block Kit	Backspace	3.25" - 4"	
	Stainless Brake Lines		1	7330	Stainless Brake Line Kit	Bolt Pattern	5 x 5.5"	
	Related Hardware		2	319510	Front ES3000 Shocks	Bolt Code	85	
	Rear 2.5" Blocks		2	324509	Rear ES3000 Shocks	Lug Nut Size	1/2"	
	Rear U-Bolts					Lug Nut Kit	PXA21183	

### F150 Extra Cab

#### 4.0" LIFT Stage II w/Rear Blocks

81-89	Front Coil Springs	<b>K4115B</b> Kit w/ES Shocks	1	24413	Front Coil Springs - Extra Cab	Max Tire Size	33" x 12.50"	1
	Radius Arms		1	52080B-1	Kit Box	Wheel Diameter	15" +	3
	I Beam Brackets		1	52080B-2	Kit Box	Wheel Width	8" - 10"	
	Drop Pitman Arm		1	22253	Rear Lift Block Kit	Backspace	3.25" - 4"	
	Stainless Brake Lines		1	7330	Stainless Brake Line Kit	Bolt Pattern	5 x 5.5"	
	Related Hardware		2	319510	Front ES3000 Shocks	Bolt Code	85	
	Rear 2.5" Blocks		2	324509	Rear ES3000 Shocks	Lug Nut Size	1/2"	
	Rear U-Bolts					Lug Nut Kit	PXA21183	

OPTIONS	Notes:	OPTIONS	Notes:	OPTIONS	Notes:
Alignment Cam - Pair		Rear Add-A-Leaf - Pair		Steering Stabilizers	
594 Eccentric Alignment Cam Kit - 2WD	1	13120 1.5"-2.5" Rear Add-A-Leaf - 2WD		220537 Steering Stabilizer Kit (Non-Quad Front)	

- (1) Vehicle will require eccentric alignment cam kit p/n 594.
- (2) Brake Hose Kit 7310 required when left front brake line has a 3-way T-block. Brake hose kit 7315 required when both front brake lines are identical.
- (3) Vehicle will require alignment after kit is installed.

# SUSPENSION KITS

## Ford Ranger — 2WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>Ranger 2WD</b>						
<b>5.0" LIFT Stage I w/3.5" Rear Blocks</b>						
1997	Front Coil Springs Radius Arm Brackets I Beam Brackets Drop Pitman Arm Stainless Brake Lines Related Hardware Rear 3.5" Blocks Rear U-Bolts	<b>K4122B</b> Kit w/ES Shocks	1 1 1 1 1 2 2	24513 Front Coil Springs 52289B Kit Box 22251 Rear Lift Block Kit 7315 Stainless Brake Line Kit FD400 Drop Pitman Arm 321510 Front ES3000 Shocks 326500 Rear ES3000 Shocks	Max Tire Size 31" x 10.50" Wheel Diameter 15" + Wheel Width 7" - 8" Backspace 3.25" - 4" Bolt Pattern 5 x 4.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 3
<b>5.0" LIFT Stage I w/2.5" Rear Blocks</b>						
1997	Front Coil Springs Radius Arm Brackets I Beam Brackets Drop Pitman Arm Stainless Brake Lines Related Hardware Rear 2.5" Blocks Rear U-Bolts	<b>K4128B</b> Kit w/ES Shocks	1 1 1 1 1 2 2	24513 Front Coil Springs 52289B Kit Box 22250 Rear Lift Block Kit 7315 Stainless Brake Line Kit FD400 Drop Pitman Arm 321510 Front ES3000 Shocks 325509 Rear ES3000 Shocks	Max Tire Size 31" x 10.50" Wheel Diameter 15" + Wheel Width 7" - 8" Backspace 3.25" - 4" Bolt Pattern 5 x 4.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 3
<b>5.0" LIFT Stage I w/3.5" Rear Blocks</b>						
89-96	Front Coil Springs Radius Arm Brackets I Beam Brackets Drop Pitman Arm Stainless Brake Lines Related Hardware Rear 3.5" Blocks Rear U-Bolts	<b>K4126B</b> Kit w/ES Shocks	1 1 1 1 1 2 2	24513 Front Coil Springs 52289B Kit Box 22251 Rear Lift Block Kit 7310 Stainless Brake Line Kit FD400 Drop Pitman Arm 321510 Front ES3000 Shocks 326500 Rear ES3000 Shocks	Max Tire Size 31" x 10.50" Wheel Diameter 15" + Wheel Width 7" - 8" Backspace 3.25" - 4" Bolt Pattern 5 x 4.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 3
<b>5.0" LIFT Stage I w/2.5" Rear Blocks</b>						
89-96	Front Coil Springs Radius Arm Brackets I Beam Brackets Drop Pitman Arm Stainless Brake Lines Related Hardware Rear 2.5" Blocks Rear U-Bolts	<b>K4124B</b> Kit w/ES Shocks	1 1 1 1 1 2 2	24513 Front Coil Springs 52289B Kit Box 22250 Rear Lift Block Kit 7310 Stainless Brake Line Kit FD400 Drop Pitman Arm 321510 Front ES3000 Shocks 325509 Rear ES3000 Shocks	Max Tire Size 31" x 10.50" Wheel Diameter 15" + Wheel Width 7" - 8" Backspace 3.25" - 4" Bolt Pattern 5 x 4.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 3
<b>5.0" LIFT Stage I w/3.5" Rear Blocks</b>						
86-88	Front Coil Springs Radius Arm Brackets I Beam Brackets Drop Pitman Arm Stainless Brake Lines Related Hardware Rear 3.5" Blocks Rear U-Bolts	<b>K4122B</b> Kit w/ES Shocks	1 1 1 1 1 2 2	24513 Front Coil Springs 52289B Kit Box 22251 Rear Lift Block Kit 7315 Stainless Brake Line Kit FD400 Drop Pitman Arm 321510 Front ES3000 Shocks 326500 Rear ES3000 Shocks	Max Tire Size 31" x 10.50" Wheel Diameter 15" + Wheel Width 7" - 8" Backspace 3.25" - 4" Bolt Pattern 5 x 4.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 3
<b>5.0" LIFT Stage I w/2.5" Rear Blocks</b>						
86-88	Front Coil Springs Radius Arm Brackets I Beam Brackets Drop Pitman Arm Stainless Brake Lines Related Hardware Rear 2.5" Blocks Rear U-Bolts	<b>K4128B</b> Kit w/ES Shocks	1 1 1 1 1 2 2	24513 Front Coil Springs 52289B Kit Box 22250 Rear Lift Block Kit 7315 Stainless Brake Line Kit FD400 Drop Pitman Arm 321510 Front ES3000 Shocks 325509 Rear ES3000 Shocks	Max Tire Size 31" x 10.50" Wheel Diameter 15" + Wheel Width 7" - 8" Backspace 3.25" - 4" Bolt Pattern 5 x 4.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 3

FORD

OPTIONS	Notes:	OPTIONS	Notes:	OPTIONS	Notes:
Alignment Cam - Pair		Rear Add-A-Leaf - Pair		Steering Stabilizers	
594 Eccentric Alignment Cam Kit - 2WD	1	13120 1.5"-2.5" Rear Add-A-Leaf - 2WD		220537 Steering Stabilizer Kit (Non-Quad Front)	

- (1) Vehicle will require eccentric alignment cam kit p/n 594.  
 (2) Brake Hose Kit 7310 required when left front brake line has a 3-way T-block. Brake hose kit 7315 required when both front brake lines are identical.  
 (3) Vehicle will require alignment after kit is installed.

## Ford Ranger — 2WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>Ranger 2WD</b>						
<b>2" Poly Lift</b>						
83-97	Front Coil Spacers		1	PLF09101 Front Coil Spacers	Max Tire Size 29" x 9.50" Wheel Diameter 15" + Wheel Width 7" - 8" Backspace 3.25" - 4" Bolt Pattern 5 x 4.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 3

OPTIONS	Notes:
Alignment Cam - Pair	
594 Eccentric Alignment Cam Kit - 2WD	1

OPTIONS	Notes:
Rear Add-A-Leaf - Pair	
13120 1.5"-2.5" Rear Add-A-Leaf - 2WD	

OPTIONS	Notes:
Steering Stabilizers	
220537 Steering Stabilizer Kit (Non-Quad Front)	

- (1) Vehicle will require eccentric alignment cam kit p/n 594.
- (2) Brake Hose Kit 7310 required when left front brake line has a 3-way T-block. Brake hose kit 7315 required when both front brake lines are identical.
- (3) Vehicle will require alignment after kit is installed.

# SUSPENSION KITS

## Ford F-250/ F-350 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>F-250 - Gas Engine</b>						
<b>8.0" LIFT Stage I w/Rear Blocks and Add-A-Leafs</b>						
11-16	Front Coil Springs	<b>K4183B</b>	1	24514 Front Coils - Gas	Max Tire Size 37" x 13.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	1 2
	Front Coil Spacers	Kit w/ES Shocks	1	52882B-1 Kit Box		
	Radius Arm Brackets	OR	1	52800B-2 Kit Box		
	Front Track Bar	<b>K4183BMX</b>	1	52800B-4 Kit Box		
	Bracket	Kit w/MX6 Shocks	Plus			
	Drop Pitman Arm	OR	1	52421B-3 Front / Rear ES9000 Shocks		
	Sway Bar Links	<b>K4183BMXR</b>	OR			
	Related Hardware	Kit w/MX6 Resi Shocks	1	52881BMX-3 Front / Rear MX6 Shocks		
	Rear 5.5" Blocks		OR			
	Rear U-Bolts		1	52881BMXR-3 Front / Rear MX6 Resi Shocks		
Rear Add-A-Leaf						
<b>F-250 - Diesel Engine</b>						
<b>8.0" LIFT Stage I w/Rear Blocks and Add-A-Leafs</b>						
11-16	Front Coil Springs	<b>K4184B</b>	1	24515 Front Coils - Diesel	Max Tire Size 37" x 13.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	1 2
	Front Coil Spacers	Kit w/ES Shocks	1	52882B-1 Kit Box		
	Radius Arm Brackets	OR	1	52800B-2 Kit Box		
	Front Track Bar	<b>K4184BMX</b>	1	52800B-4 Kit Box		
	Bracket	Kit w/MX6 Shocks	Plus			
	Drop Pitman Arm	OR	1	52421B-3 Front / Rear ES9000 Shocks		
	Sway Bar Links	<b>K4184BMXR</b>	OR			
	Related Hardware	Kit w/MX6 Resi Shocks	1	52881BMX-3 Front / Rear MX6 Shocks		
	Rear 5.5" Blocks		OR			
	Rear U-Bolts		1	52881BMXR-3 Front / Rear MX6 Resi Shocks		
Rear Add-A-Leaf						

OPTIONS	Notes:
Alignment Cambolt - Pair	
599 Eccentric Alignment Cambolt Kit	1
Rear Add-A-Leaf	
13150 2.5"-3.5" Rear Add-A-Leaf - Pair	
Rear Lift Blocks Kits w/Bump Stop Pad - Pair	
52560 5.5" Rear Block Kit	
Steering Stabilizer Kits	
222582 Dual Stabilizer Kit - ES2000 Shocks	
222582Z Dual Stabilizer Kit - Pro Runner	

OPTIONS	Notes:
Traction Bars	
72300B Tube Rear Traction Bars - Pair	5,6
72301B Plate Rear Traction Bars - Pair	6
72101B Rear Traction Bar Mounting Kit	5,6
1" Lower Spring Spacers	
62699 1" Lower Spring Spacers	
Track Bar Drop Bracket	
62687 2.5" to 3.5" Lift	

OPTIONS	Notes:
Radius Arm Drop Brackets	
62698 2.5" to 3.5" Lift	
Tapered Blocks w / U-bolts	
62246 4" Tapered Rear Block kit	
62346 5" Tapered Rear Block kit	

- (1) Vehicle will require alignment after kit is installed. Eccentric cam kit 599 required to make caster / camber adjustments.
- (2) Speedometer and ABS recalibration may be necessary with installation of larger diameter tires. Tires 10% larger in diameter will require recalibration.
- (5) Tube Traction bars 72300B match Stage II radius arms.
- (6) Traction Bars and Mounting kit are for CREW CAB SB Models ONLY.



## Ford F-250/ F-350 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>F-250 - Gas Engine</b>						
<b>8.0" LIFT Stage II w/Rear Blocks and Add-A-Leafs</b>						
11-16	Front Coil Springs	<b>K4185B</b>	1	24514 Front Coils - Gas	Max Tire Size 37" x 13.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	1 2
	Front Coil Spacers	Kit w/ES Shocks	1	52883B-1 Kit Box		
	Radius Arms	OR	1	52883B-2 Kit Box		
	Front Track Bar Bracket	<b>K4185BMX</b>	1	52800B-4 Kit Box		
	Drop Pitman Arm	Kit w/MX6 Shocks	Plus			
	Sway Bar Links	OR	1	52421B-3 Front / Rear ES9000 Shocks		
	Related Hardware	<b>K4185BMXR</b>	OR			
	Rear 5.5" Blocks	Kit w/MX6 Resi Shocks	1	52881BMX-3 Front / Rear MX6 Shocks		
	Rear U-Bolts		OR			
	Rear Add-A-Leaf		1	52881BMXR-3 Front / Rear MX6 Resi Shocks		
<b>F-250 - Diesel Engine</b>						
<b>8.0" LIFT Stage II w/Rear Blocks and Add-A-Leafs</b>						
11-16	Front Coil Springs	<b>K4186B</b>	1	24515 Front Coils - Diesel	Max Tire Size 37" x 13.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	1 2
	Front Coil Spacers	Kit w/ES Shocks	1	52883B-1 Kit Box		
	Radius Arms	OR	1	52883B-2 Kit Box		
	Front Track Bar Bracket	<b>K4186BMX</b>	1	52800B-4 Kit Box		
	Drop Pitman Arm	Kit w/MX6 Shocks	Plus			
	Sway Bar Links	OR	1	52421B-3 Front / Rear ES9000 Shocks		
	Related Hardware	<b>K4186BMXR</b>	OR			
	Rear 5.5" Blocks	Kit w/MX6 Resi Shocks	1	52881BMX-3 Front / Rear MX6 Shocks		
	Rear U-Bolts		OR			
	Rear Add-A-Leaf		1	52881BMXR-3 Front / Rear MX6 Resi Shocks		

OPTIONS	Notes:
<b>Alignment Cambolt - Pair</b>	
599 Eccentric Alignment Cambolt Kit	1
<b>Driveline Options</b>	
52480 Driveline Shim Kit - 2 Pc Rr Driveshaft	
<b>Multiple Shock Mount Kit</b>	
52451B 6" Mount Kit - ES9000 Shocks	3
52451B-1 6" Mount kit - No Shocks	4
<b>6" Multiple Shock Kit - Shock Options</b>	
925501 ES9000	4
<b>Rear Add-A-Leaf</b>	
13150 2.5"-3.5" Rear Add-A-Leaf - Pair	

OPTIONS	Notes:
<b>Rear Lift Blocks Kits w/Bump Stop Pad - Pair</b>	
52560 5.5" Rear Block Kit	
<b>Steering Stabilizer Kits</b>	
222582 Dual Stabilizer Kit - ES2000 Shocks	
222582Z Dual Stabilizer Kit - Pro Runner	
<b>Traction Bars</b>	
72300B Tube Rear Traction Bars - Pair	5,6
72301B Plate Rear Traction Bars - Pair	6
72101B Rear Traction Bar Mounting Kit	5,6
<b>1" Lower Spring Spacers</b>	
62699 1" Lower Spring Spacers	

OPTIONS	Notes:
<b>Track Bar Drop Bracket</b>	
62687 2.5" to 3.5" Lift	
<b>Radius Arm Drop Brackets</b>	
62698 2.5" to 3.5" Lift	
<b>Tapered Blocks w / U-bolts</b>	
62246 4" Tapered Rear Block kit	
62346 5" Tapered Rear Block kit	

- (1) Vehicle will require alignment after kit is installed. Eccentric cam kit 599 required to make caster / camber adjustments.
- (2) Speedometer and ABS recalibration may be necessary with installation of larger diameter tires. Tires 10% larger in diameter will require recalibration.
- (3) Dual shock kits require loop to loop mount shocks.
- (4) Four shocks must be ordered separately. Use of any shocks not specified will void warranty on the dual shock hoops.
- (5) Tube Traction bars 72300B match Stage II radius arms.
- (6) Traction Bars and Mounting kit are for CREW CAB SB Models ONLY.
- (7) In order to install Max Tire Size recommendations, it may be required to retain factory wheel width/ backspacing/ offset. Some applications will require the removal of front inner fender mud flaps and/or other fender modifications. Its up to installer to verify tire fitment and clearance for safe operation of vehicle.

# SUSPENSION KITS

## Ford F-250 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>F-250 - Gas Engine</b>						
<b>6.0" LIFT Stage I w/Rear Blocks and Add-A-Leafs</b>						
11-16	Front Coil Springs Front Coil Spacers Radius Arm Brackets Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 4" Blocks Rear U-Bolts Rear Add-A-Leaf	<b>K4175B</b> Kit w/ES Shocks OR <b>K4175BP</b> Kit w/Pro Runner Shocks OR <b>K4175BMX</b> Kit w/MX6 Shocks OR <b>K4175BMXR</b> Kit w/MX6 Resi Shocks	1 1 1 1 Plus 1 OR 1 OR 2 2 OR 1	24514 Front Coils - Gas 52802B-1 Kit Box 52800B-2 Kit Box 52800B-4 Kit Box 52413B-3 Front / Rear ES9000 Shocks 52413BP-3 Front / Rear Pro Runner Shocks MX6154 Front MX6 Shocks MX6018 Rear MX6 Shocks 52800BMXR-3 Front / Rear MX6 Resi Shocks	Max Tire Size 37" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	1 2
<b>F-250 - Diesel Engine</b>						
<b>6.0" LIFT Stage I w/Rear Blocks and Add-A-Leafs</b>						
11-16	Front Coil Springs Front Coil Spacers Radius Arm Brackets Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 4" Blocks Rear U-Bolts Rear Add-A-Leaf	<b>K4177B</b> Kit w/ES Shocks OR <b>K4177BP</b> Kit w/Pro Runner Shocks OR <b>K4177BMX</b> Kit w/MX6 Shocks OR <b>K4177BMXR</b> Kit w/MX6 Resi Shocks	1 1 1 1 Plus 1 OR 1 OR 2 2 OR 1	24515 Front Coils - Diesel 52802B-1 Kit Box 52800B-2 Kit Box 52800B-4 Kit Box 52413B-3 Front / Rear ES9000 Shocks 52413BP-3 Front / Rear Pro Runner Shocks MX6154 Front MX6 Shocks MX6018 Rear MX6 Shocks 52800BMXR-3 Front / Rear MX6 Resi Shocks	Max Tire Size 37" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	1 2

OPTIONS	Notes:
Alignment Cambolt - Pair	
599 Eccentric Alignment Cambolt Kit	1
Driveline Options	
52480 Driveline Shim Kit - 2 Pc Rr Driveshaft	
Multiple Shock Mount Kit	
52451B 6" Mount Kit - ES9000 Shocks	3
52451B-1 6" Mount kit - No Shocks	4
6" Multiple Shock Kit - Shock Options	
925501 ES9000	4
Rear Add-A-Leaf	
13150 2.5"-3.5" Rear Add-A-Leaf - Pair	

OPTIONS	Notes:
Rear Lift Blocks Kits w/Bump Stop Pad - Pair	
52560 5.5" Rear Block Kit	
Steering Stabilizer Kits	
222582 Dual Stabilizer Kit - ES2000 Shocks	
222582Z Dual Stabilizer Kit - Pro Runner	
Traction Bars	
72300B Tube Rear Traction Bars - Pair	5,6
72301B Plate Rear Traction Bars - Pair	6
72101B Rear Traction Bar Mounting Kit	5,6
1" Lower Spring Spacers	
62699 1" Lower Spring Spacers	

OPTIONS	Notes:
Track Bar Drop Bracket	
62687 2.5" to 3.5" Lift	
Radius Arm Drop Brackets	
62698 2.5" to 3.5" Lift	
Tapered Blocks w / U-bolts	
62246 4" Tapered Rear Block kit	
62346 5" Tapered Rear Block kit	

- (1) Vehicle will require alignment after kit is installed. Eccentric cam kit 599 required to make caster / camber adjustments.
- (2) Speedometer and ABS recalibration may be necessary with installation of larger diameter tires. Tires 10% larger in diameter will require recalibration.
- (3) Dual shock kits require loop to loop mount shocks.
- (4) Four shocks must be ordered separately. Use of any shocks not specified will void warranty on the dual shock hoops.
- (5) Tube Traction bars 72300B match Stage II radius arms.
- (6) Traction Bars and Mounting kit are for CREW CAB SB Models ONLY.
- (7) In order to install Max Tire Size recommendations, it may be required to retain factory wheel width/ backspacing/ offset. Some applications will require the removal of front inner fender mud flaps and/or other fender modifications. Its up to installer to verify tire fitment and clearance for safe operation of vehicle.

## Ford F-250 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>F-250 - Gas Engine</b>						
<b>6.0" LIFT Stage II w/Rear Blocks and Add-A-Leafs</b>						
11-16	Front Coil Springs Front Coil Spacers Radius Arms Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 4" Blocks Rear U-Bolts Rear Add-A-Leaf	<b>K4176B</b> Kit w/ES Shocks OR <b>K4176BP</b> Kit w/Pro Runner Shocks OR <b>K4176BMX</b> Kit w/MX6 Shocks OR <b>K4176BMXR</b> Kit w/MX6 Resi Shocks	1 1 1 1 Plus 1 OR 1 OR 2 2 OR 1	24514 Front Coils - Gas 52803B-1 Kit Box 52803B-2 Kit Box 52800B-4 Kit Box 52413B-3 Front / Rear ES9000 Shocks 52413BP-3 Front / Rear Pro Runner Shocks MX6154 Front MX6 Shocks MX6018 Rear MX6 Shocks 52800BMXR-3 Front / Rear MX6 Resi Shocks	Max Tire Size 37" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	1 2

<b>F-250 - Diesel Engine</b>						
<b>6.0" LIFT Stage II w/Rear Blocks and Add-A-Leafs</b>						
11-16	Front Coil Springs Front Coil Spacers Radius Arms Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 4" Blocks Rear U-Bolts Rear Add-A-Leaf	<b>K4178B</b> Kit w/ES Shocks OR <b>K4178BP</b> Kit w/Pro Runner Shocks OR <b>K4178BMX</b> Kit w/MX6 Shocks OR <b>K4178BMXR</b> Kit w/MX6 Resi Shocks	1 1 1 1 Plus 1 OR 1 OR 2 2 OR 1	24515 Front Coils - Diesel 52803B-1 Kit Box 52803B-2 Kit Box 52800B-4 Kit Box 52413B-3 Front / Rear ES9000 Shocks 52413BP-3 Front / Rear Pro Runner Shocks MX6154 Front MX6 Shocks MX6018 Rear MX6 Shocks 52800BMXR-3 Front / Rear MX6 Resi Shocks	Max Tire Size 37" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	1 2

OPTIONS	Notes:
Alignment Cambolt - Pair	
599 Eccentric Alignment Cambolt Kit	1
Driveline Options	
52480 Driveline Shim Kit - 2 Pc Rr Driveshaft	
Multiple Shock Mount Kit	
52451B 6" Mount Kit - ES9000 Shocks	3
52451B-1 6" Mount kit - No Shocks	4
6" Multiple Shock Kit - Shock Options	
925501 ES9000	4
Rear Add-A-Leaf	
13150 2.5"-3.5" Rear Add-A-Leaf - Pair	

OPTIONS	Notes:
Rear Lift Blocks Kits w/Bump Stop Pad - Pair	
52560 5.5" Rear Block Kit	
Steering Stabilizer Kits	
222582 Dual Stabilizer Kit - ES2000 Shocks	
222582Z Dual Stabilizer Kit - Pro Runner	
Traction Bars	
72300B Tube Rear Traction Bars - Pair	5,6
72301B Plate Rear Traction Bars - Pair	6
72101B Rear Traction Bar Mounting Kit	5,6
1" Lower Spring Spacers	
62699 1" Lower Spring Spacers	

OPTIONS	Notes:
Track Bar Drop Bracket	
62687 2.5" to 3.5" Lift	
Radius Arm Drop Brackets	
62698 2.5" to 3.5" Lift	
Tapered Blocks w / U-bolts	
62246 4" Tapered Rear Block kit	
62346 5" Tapered Rear Block kit	

- (1) Vehicle will require alignment after kit is installed. Eccentric cam kit 599 required to make caster / camber adjustments.
- (2) Speedometer and ABS recalibration may be necessary with installation of larger diameter tires. Tires 10% larger in diameter will require recalibration.
- (3) Dual shock kits require loop to loop mount shocks.
- (4) Four shocks must be ordered separately. Use of any shocks not specified will void warranty on the dual shock hoops.
- (5) Tube Traction bars 72300B match Stage II radius arms.
- (6) Traction Bars and Mounting kit are for CREW CAB SB Models ONLY.

# SUSPENSION KITS

## Ford F-350 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>F-350 - Gas Engine</b>						
<b>6.0" LIFT Stage I w/Rear Blocks and Add-A-Leafs</b>						
11-16	Front Coil Springs Front Coil Spacers Radius Arm Brackets Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 5.5" Blocks Rear U-Bolts Rear Add-A-Leaf	<b>K4179B</b> Kit w/ES Shocks OR <b>K4179BP</b> Kit w/Pro Runner Shocks OR <b>K4179BMX</b> Kit w/MX6 Shocks OR <b>K4179BMXR</b> Kit w/MX6 Resi Shocks	1 1 1 1 Plus 1 OR 1 OR 2 2 OR 1	24514 Front Coils - Gas 52802B-1 Kit Box 52800B-2 Kit Box 52800B-4 Kit Box 52560 Rear Block Kit 52413B-3 Front / Rear ES9000 Shocks 52413BP-3 Front / Rear Pro Runner Shocks MX6154 Front MX6 Shocks MX6018 Rear MX6 Shocks 52881BMXR-3 Front / Rear MX6 Resi Shocks	Max Tire Size 37" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	1 2
<b>F-350 - Diesel Engine</b>						
<b>6.0" LIFT Stage I w/Rear Blocks and Add-A-Leafs</b>						
11-16	Front Coil Springs Front Coil Spacers Radius Arm Brackets Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 5.5" Blocks Rear U-Bolts Rear Add-A-Leaf	<b>K4181B</b> Kit w/ES Shocks OR <b>K4181BP</b> Kit w/Pro Runner Shocks OR <b>K4181BMX</b> Kit w/MX6 Shocks OR <b>K4181BMXR</b> Kit w/MX6 Resi Shocks	1 1 1 1 Plus 1 OR 1 OR 2 2 OR 1	24515 Front Coils - Diesel 52802B-1 Kit Box 52800B-2 Kit Box 52800B-4 Kit Box 52560 Rear Block Kit 52413B-3 Front / Rear ES9000 Shocks 52413BP-3 Front / Rear Pro Runner Shocks MX6154 Front MX6 Shocks MX6018 Rear MX6 Shocks 52881BMXR-3 Front / Rear MX6 Resi Shocks	Max Tire Size 37" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	1 2
<b>F-350 - Diesel Engine Dual Rear Wheel</b>						
<b>6.0" LIFT Stage I w/Rear Blocks and Add-A-Leafs</b>						
11-16	Front Coil Springs Front Coil Spacers Radius Arm Brackets Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 5.5" Blocks Rear U-Bolts Dual Rear Add-A-Leaf	<b>K4188B</b> Kit w/ES Shocks	1 1 1 1 1 Plus 1	24515 Front Coils - Diesel 52804B-1 Kit Box 52800B-2 Kit Box 52800B-4 Kit Box 52560 Rear Block Kit 52413B-3 Front / Rear ES9000 Shocks	Max Tire Size 37" x 13.50" Wheel Diameter 17" + Wheel Width 8" - 10" Backspace 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	1 2

FORD

OPTIONS	Notes:
Alignment Cambolt - Pair	
599 Eccentric Alignment Cambolt Kit	1
Steering Stabilizer Kits	
222582 Dual Stabilizer Kit - ES2000 Shocks	
222582Z Dual Stabilizer Kit - Pro Runner	

- (1) Vehicle will require alignment after kit is installed. Eccentric cam kit 599 required to make caster / camber adjustments.
- (2) Speedometer and ABS recalibration may be necessary with installation of larger diameter tires. Tires 10% larger in diameter will require recalibration.
- (3) In order to install Max Tire Size recommendations, it may be required to retain the factory wheel width/ backspacing/ offset. Some applications will require the removal of the front inner fender mud flaps and/or other fender modifications. Its up to the installer to verify tire fitment and clearance for safe operation of vehicle.

## Ford F-350 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes	
<b>F-350 - Gas Engine</b>							
<b>6.0" LIFT Stage II w/Rear Blocks and Add-A-Leafs</b>							
11-16	Front Coil Springs Front Coil Spacers Radius Arms Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 5.5" Blocks Rear U-Bolts Rear Add-A-Leaf	<b>K4180B</b> Kit w/ES Shocks OR <b>K4180BP</b> Kit w/Pro Runner Shocks OR <b>K4180BMX</b> Kit w/MX6 Shocks OR <b>K4180BMXR</b> Kit w/MX6 Resi Shocks	1 1 1 1 1 Plus 1 OR 1 OR 2 OR 1	24514 52803B-1 52803B-2 52800B-4 52560 52413B-3 52413BP-3 MX6154 MX6018 52881BMXR-3	Front Coils - Gas Kit Box Kit Box Kit Box Rear Block Kit Front / Rear ES9000 Shocks Front / Rear Pro Runner Shocks Front MX6 Shocks Rear MX6 Shocks Front / Rear MX6 Resi Shocks	Max Tire Size 37" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	1 2
<b>F-350 - Diesel Engine</b>							
<b>6.0" LIFT Stage II w/Rear Blocks and Add-A-Leafs</b>							
11-16	Front Coil Springs Front Coil Spacers Radius Arms Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 5.5" Blocks Rear U-Bolts Rear Add-A-Leaf	<b>K4182B</b> Kit w/ES Shocks OR <b>K4182BP</b> Kit w/Pro Runner Shocks OR <b>K4182BMX</b> Kit w/MX6 Shocks OR <b>K4182BMXR</b> Kit w/MX6 Resi Shocks	1 1 1 1 1 Plus 1 OR 1 OR 2 OR 1	24515 52803B-1 52803B-2 52800B-4 52560 52413B-3 52413BP-3 MX6154 MX6018 52881BMXR-3	Front Coils - Diesel Kit Box Kit Box Kit Box Rear Block Kit Front / Rear ES9000 Shocks Front / Rear Pro Runner Shocks Front MX6 Shocks Rear MX6 Shocks Front / Rear MX6 Resi Shocks	Max Tire Size 37" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	1 2

OPTIONS	Notes:
Alignment Cambolt - Pair	
599 Eccentric Alignment Cambolt Kit	1
Driveline Options	
52480 Driveline Shim Kit - 2 Pc Rr Driveshaft	
Multiple Shock Mount Kit	
52451B 6" Mount Kit - ES9000 Shocks	3
52451B-1 6" Mount kit - No Shocks	4
6" Multiple Shock Kit - Shock Options	
925501 ES9000	4
Rear Add-A-Leaf	
13150 2.5"-3.5" Rear Add-A-Leaf - Pair	

OPTIONS	Notes:
Rear Lift Blocks Kits w/Bump Stop Pad - Pair	
52560 5.5" Rear Block Kit	
Steering Stabilizer Kits	
222582 Dual Stabilizer Kit - ES2000 Shocks	
222582Z Dual Stabilizer Kit - Pro Runner	
Traction Bars	
72300B Tube Rear Traction Bars - Pair	5,6
72301B Plate Rear Traction Bars - Pair	6
72101B Rear Traction Bar Mounting Kit	5,6
1" Lower Spring Spacers	
62699 1" Lower Spring Spacers	

OPTIONS	Notes:
Track Bar Drop Bracket	
62687 2.5" to 3.5" Lift	
Radius Arm Drop Brackets	
62698 2.5" to 3.5" Lift	
Tapered Blocks w / U-bolts	
62246 4" Tapered Rear Block kit	
62346 5" Tapered Rear Block kit	

- (1) Vehicle will require alignment after kit is installed. Eccentric cam kit 599 required to make caster / camber adjustments.
- (2) Speedometer and ABS recalibration may be necessary with installation of larger diameter tires. Tires 10% larger in diameter will require recalibration.
- (3) Dual shock kits require loop to loop mount shocks.
- (4) Four shocks must be ordered separately. Use of any shocks not specified will void warranty on the dual shock hoops.
- (5) Tube Traction bars 72300B match Stage II radius arms.
- (6) Traction Bars and Mounting kit are for CREW CAB SB Models ONLY.

# SUSPENSION KITS

## Ford F-250/ F-350 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>F-250 / F-350</b>						
<b>3.5" / 1.0" Level Lift Nitro Kit</b>						
11-16	Front Coil Spacers Track Bar Drop Front Shock Relocation Brackets 5" Rear Blocks w/ U-Bolts		1	62689K Front Coil Spacers Track Bar Drop Front Shock Relocation Brackets Rear Blocks w/ U-Bolts	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	1 2 7
<b>F-250</b>						
<b>2.5" / 2.0" Level Lift Nitro Kit</b>						
11-16	Front Coil Spacers Track Bar Drop Front Shock Relocation Brackets 4: Rear Blocks w/ U-Bolts		1	62669K Front Coil Spacers Track Bar Drop Front Shock Relocation Brackets Rear Blocks w/ U-Bolts	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	1 2 7
<b>F-350 - w/Tow Package</b>						
<b>2.5" / 2.0" Level Lift Nitro Kit</b>						
11-16	Front Coil Spacers Track Bar Drop Front Shock Relocation Brackets 5" Rear Blocks w/ U-Bolts		1	62663K Front Coil Spacers Track Bar Drop Front Shock Relocation Brackets Rear Blocks w/ U-Bolts	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	1 2 7
<b>F-250 / F-350</b>						
<b>2.5" Level Lift</b>						
11-16	Front Coil Spacers Front Shock Relocation Brackets		1	62161 Front Coil Spacers Sway Bar Drop Brackets Front Shock Relocation Brackets	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	1 2 7

FORD

OPTIONS	Notes:
<b>Alignment Cambolt - Pair</b>	
599 Eccentric Alignment Cambolt Kit	1
<b>Driveline Options</b>	
52480 Driveline Shim Kit - 2 Pc Rr Driveshaft	
<b>Multiple Shock Mount Kit</b>	
52451B 6" Mount Kit - ES9000 Shocks	3
52451B-1 6" Mount kit - No Shocks	4
<b>6" Multiple Shock Kit - Shock Options</b>	
925501 ES9000	4
<b>Rear Add-A-Leaf</b>	
13150 2.5"-3.5" Rear Add-A-Leaf - Pair	

OPTIONS	Notes:
<b>Rear Lift Blocks Kits w/Bump Stop Pad - Pair</b>	
52560 5.5" Rear Block Kit	
<b>Steering Stabilizer Kits</b>	
222582 Dual Stabilizer Kit - ES2000 Shocks	
222582Z Dual Stabilizer Kit - Pro Runner	
<b>Traction Bars</b>	
72300B Tube Rear Traction Bars - Pair	5,6
72301B Plate Rear Traction Bars - Pair	6
72101B Rear Traction Bar Mounting Kit	5,6
<b>1" Lower Spring Spacers</b>	
62699 1" Lower Spring Spacers	

OPTIONS	Notes:
<b>Track Bar Drop Bracket</b>	
62687 2.5" to 3.5" Lift	
<b>Radius Arm Drop Brackets</b>	
62698 2.5" to 3.5" Lift	
<b>Tapered Blocks w / U-bolts</b>	
62246 4" Tapered Rear Block kit	
62346 5" Tapered Rear Block kit	

- (1) Vehicle will require alignment after kit is installed. Eccentric cam kit 599 required to make caster / camber adjustments.  
 (2) Speedometer and ABS recalibration may be necessary with installation of larger diameter tires. Tires 10% larger in diameter will require recalibration.  
 (3) Dual shock kits require loop to loop mount shocks.  
 (4) Four shocks must be ordered separately. Use of any shocks not specified will void warranty on the dual shock hoops.  
 (5) Tube Traction bars 72300B match Stage II radius arms.  
 (6) Traction Bars and Mounting kit are for CREW CAB SB Models ONLY.  
 (7) In order to install Max Tire Size recommendations, it may be required to retain factory wheel width/ backspacing/ offset. Some applications will require removal of front inner fender mud flaps and/or other fender modifications. Its up to installer to verify tire fitment and clearance for safe operation of vehicle.

## Ford F-250/ F-350 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>F-250/ F350</b>						
<b>2.5" Level Lift</b>						
05-16	Front Coil Spacers Front Shock Relocation Brackets		1	62245 Front Coil Spacers Front Shock Relocation Brackets	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	1 2 7
<b>F-250/ F350</b>						
<b>1.0" Level Lift</b>						
05-16	Front Lower Spring Spacer		1	62669 Front Lower Spring Spacer	Max Tire Size 33" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	1 2 7
<b>F-250/ F350</b>						
<b>2.5" Poly Lift</b>						
05-16	Front Coil Spacers		1	PLF09119 Front Coil Spacers	Max Tire Size 33" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	1 2 7

OPTIONS	Notes:
Alignment Cambolt - Pair	
599 Eccentric Alignment Cambolt Kit	1
Driveline Options	
52480 Driveline Shim Kit - 2 Pc Rr Driveshaft	
Multiple Shock Mount Kit	
52451B 6" Mount Kit - ES9000 Shocks	3
52451B-1 6" Mount kit - No Shocks	4
6" Multiple Shock Kit - Shock Options	
925501 ES9000	4
Rear Add-A-Leaf	
13150 2.5"-3.5" Rear Add-A-Leaf - Pair	

OPTIONS	Notes:
Rear Lift Blocks Kits w/Bump Stop Pad - Pair	
52560 5.5" Rear Block Kit	
Rear U-Bolt Kits	
62248 Rear U-Bolt kit 4.0" (14mm X 412mm)	
62247 Rear U-Bolt kit 5.0" (14mm X 473mm)	
Steering Stabilizer Kits	
222582 Dual Stabilizer Kit - ES2000 Shocks	
222582Z Dual Stabilizer Kit - Pro Runner	
Traction Bars	
72300B Tube Rear Traction Bars - Pair	5,6
72301B Plate Rear Traction Bars - Pair	6
72101B Rear Traction Bar Mounting Kit	5,6

OPTIONS	Notes:
1" Lower Spring Spacers	
62699 1" Lower Spring Spacers	
Track Bar Drop Bracket	
62687 2.5" to 3.5" Lift	
Radius Arm Drop Brackets	
62698 2.5" to 3.5" Lift	
Tapered Blocks w / U-bolts	
62246 4" Tapered Rear Block kit	
62346 5" Tapered Rear Block kit	

- (1) Vehicle will require alignment after kit is installed. Eccentric cam kit 599 required to make caster / camber adjustments.
- (2) Speedometer and ABS recalibration may be necessary with installation of larger diameter tires. Tires 10% larger in diameter will require recalibration.
- (3) Dual shock kits require loop to loop mount shocks.
- (4) Four shocks must be ordered separately. Use of any shocks not specified will void warranty on the dual shock hoops.
- (5) Tube Traction bars 72300B match Stage II radius arms.
- (6) Traction Bars and Mounting kit are for CREW CAB SB Models ONLY.
- (7) In order to install Max Tire Size recommendations, it may be required to retain factory wheel width/ backspacing/ offset. Some applications will require removal of front inner fender mud flaps and/or other fender modifications. Its up to installer to verify tire fitment and clearance for safe operation of vehicle.

# SUSPENSION KITS

## Ford F-250/ F-350 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>F-250 / F350 - V 10 Gas Engine</b>						
<b>8.0" LIFT Stage I w/Rear Leaf Springs</b>						
08-10	Front Coil Springs Front Coil Spacers Radius Arm Brackets Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 4" Blocks Rear U-Bolts Rear Leaf Springs	<b>K4156B</b> Kit w/ES Shocks OR <b>K4156BMX</b> Kit w/MX6 Shocks OR <b>K4156BMXR</b> Kit w/MX6 Resi Shocks	1 2 1 1 Plus 1 OR 1 OR 1	24514 Front Coils - Gas 22518 Rear Leaf Springs 52880B-1 Kit Box 52800B-2 Kit Box 52421B-3 Front / Rear ES9000 Shocks 52881BMX-3 Front / Rear MX6 Shocks 52881BMXR-3 Front / Rear MX6 Resi Shocks	Max Tire Size 37" x 13.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	8 10
<b>F-250 / F350 - Diesel Engine</b>						
<b>8.0" LIFT Stage I w/Rear Leaf Springs</b>						
08-10	Front Coil Springs Front Coil Spacers Radius Arm Brackets Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 4" Blocks Rear U-Bolts Rear Leaf Springs	<b>K4155B</b> Kit w/ES Shocks OR <b>K4155BMX</b> Kit w/MX6 Shocks OR <b>K4155BMXR</b> Kit w/MX6 Resi Shocks	1 2 1 1 Plus 1 OR 1 OR 1	24515 Front Coils - Diesel 22518 Rear Leaf Springs 52880B-1 Kit Box 52800B-2 Kit Box 52421B-3 Front / Rear ES9000 Shocks 52881BMX-3 Front / Rear MX6 Shocks 52881BMXR-3 Front / Rear MX6 Resi Shocks	Max Tire Size 37" x 13.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	8 10

OPTIONS	Notes:
<b>Alignment Cambolt - Pair</b>	
599 Eccentric Alignment Cambolt Kit	5,8
<b>Driveline Options</b>	
52480 Driveline Shim Kit - 2 Pc Rr Driveshaft	2
<b>Multiple Shock Mount Kit</b>	
52470B 8" Shock Mount Kit - No Shocks	3,4
52460B 6" Mount Kit - No Shocks	3,4
<b>8" Multiple Shock Kit - Shock Options</b>	
927501 ES9000	4
MX6075 MX6 Adjustable	4
MX6067R MX6R Adjustable Reservoir	4
<b>6" Multiple Shock Kit - Shock Options</b>	
925501 ES9000	4
MX6128 MX6 Adjustable	4
MX6066R MX6R Adjustable Reservoir	4
<b>Reservoir Mounting Kits - Stainless</b>	
63012 2" Body to 2" Body	10
63013 2" Body to 1.5" Hoop Tube	10
<b>Reservoir Mounting Kits - Aluminum</b>	
63016 MX6R Body to MX6R Reservoir	10
63017 MX6R Body to 1.5" Hoop Tube	10

OPTIONS	Notes:
<b>Rear Lift Blocks Kits w/Bump Stop Pad - Pair</b>	
95-400SDB 4" Rear Block Kit	
95-550SDB 5.5" Rear Block Kit	
<b>Level Lift</b>	
62687 Front Track Bar Drop2.5"- 3.5"	
62698 Radius Arm Drop Brackets 2.5"- 3.5"	
62244 Rear Block Kit w/U-Bolts 4.0" 2/4WD	
62345 Rear Block Kit w/U-Bolts 5.0" 2/4WD	
62247 Rear U-Bolt kit 4.0" (14mm X 365mm)	
62243 Rear U-Bolt kit 5.0" (14mm X 400mm)	
<b>Steering Stabilizer Kits</b>	
222582Z Dual Stabilizer Kit - Pro Runner Shocks	
222582 Dual Stabilizer Kit - ES2000 Shocks	
<b>Traction Bars</b>	
72400B Rear Traction Bars - Pair	
72099B Rear Traction Bar Mounting Kit	
<b>Rear Add-A-Leaf</b>	
13150 2.5"-3.5" Rear Add-A-Leaf - Pair	
<b>Rear Leaf Spring</b>	
22518 5" Rear Leaf Spring - Single - 4WD	

- (2) Vehicles w/2 Pc rear driveshaft may require shim kit 52480 to reduce launch vibration and/or high speed driveline vibration.
- (3) Dual shock kits require loop to loop mount shocks.
- (4) Four shocks must be ordered separately. Reservoir shocks require reservoir mounting kits - one pair required per shock - sold separately.
- (8) Vehicle will require alignment after kit is installed. Eccentric cam kit 599 required to make caster / camber adjustments.
- (9) In order to install Max Tire Size recommendations, it may be required to retain factory wheel width/ backspacing/ offset. Some applications will require removal of front inner fender mud flaps and/or other fender modifications. Its up to installer to verify tire fitment and clearance for safe operation of vehicle.
- (10) Not for use on Dually applications.



## Ford F-250/ F-350 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes	
<b>F-250 / F350 - V 10 Gas Engine</b>							
<b>8.0" LIFT Stage II w/Rear Leaf Springs</b>							
08-10	Front Coil Springs Front Coil Spacers Radius Arms Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 4" Blocks Rear U-Bolts Rear Leaf Springs	<b>K4158B</b> Kit w/ES Shocks OR <b>K4158BMX</b> Kit w/MX6 Shocks OR <b>K4158BMXR</b> Kit w/MX6 Resi Shocks	1 2 1 1 Plus 1 OR 1 OR 1	24514 22518 52881B-1 52881B-2 52421B-3 52881BMX-3 52881BMXR-3	Front Coils - Gas Rear Leaf Springs Kit Box Kit Box Front / Rear ES9000 Shocks Front / Rear MX6 Shocks Front / Rear MX6 Resi Shocks	Max Tire Size 37" x 13.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	8 10
<b>F-250 / F350 - Diesel Engine</b>							
<b>8.0" LIFT Stage II w/Rear Leaf Springs</b>							
08-10	Front Coil Springs Front Coil Spacers Radius Arms Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 4" Blocks Rear U-Bolts Rear Leaf Springs	<b>K4157B</b> Kit w/ES Shocks OR <b>K4157BMX</b> Kit w/MX6 Shocks OR <b>K4157BMXR</b> Kit w/MX6 Resi Shocks	1 2 1 1 Plus 1 OR 1 OR 1	24515 22518 52881B-1 52881B-2 52421B-3 52881BMX-3 52881BMXR-3	Front Coils - Diesel Rear Leaf Springs Kit Box Kit Box Front / Rear ES9000 Shocks Front / Rear MX6 Shocks Front / Rear MX6 Resi Shocks	Max Tire Size 37" x 13.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	8 10

OPTIONS	Notes:
Alignment Cambolt - Pair	
599 Eccentric Alignment Cambolt Kit	5,8
Driveline Options	
52480 Driveline Shim Kit - 2 Pc Rear Driveshaft	2
Multiple Shock Mount Kit	
52470B 8" Shock Mount Kit - No Shocks	3,4
52460B 6" Mount Kit - No Shocks	3,4
8" Multiple Shock Kit - Shock Options	
927501 ES9000	4
MX6075 MX6 Adjustable	4
MX6067R MX6R Adjustable Reservoir	4

OPTIONS	Notes:
6" Multiple Shock Kit - Shock Options	
925501 ES9000	4
MX6128 MX6 Adjustable	4
MX6066R MX6R Adjustable Reservoir	4
Rear Leaf Spring	
22518 5" Rear Leaf Spring - Single - 4WD	
Reservoir Mounting Kits - Stainless	
63012 2" Body to 2" Body	10
63013 2" Body to 1.5" Hoop Tube	10
Reservoir Mounting Kits - Aluminum	
63016 MX6R Body to MX6R Reservoir	10
63017 MX6R Body to 1.5" Hoop Tube	10

OPTIONS	Notes:
Rear Lift Blocks Kits w/Bump Stop Pad - Pair	
95-400SDB 4" Rear Block Kit	
95-550SDB 5.5" Rear Block Kit	
Steering Stabilizer Kits	
222582Z Dual Stabilizer Kit - Pro Runner Shocks	
222582 Dual Stabilizer Kit - ES2000 Shocks	
Traction Bars	
72400B Rear Traction Bars - Pair	
72099B Rear Traction Bar Mounting Kit	
Rear Add-A-Leaf	
13150 2.5"-3.5" Rear Add-A-Leaf - Pair	

- (2) Vehicles w/2 Pc rear driveshaft may require shim kit 52480 to reduce launch vibration and/or high speed driveline vibration.
- (3) Dual shock kits require loop to loop mount shocks.
- (4) Four shocks must be ordered separately. Reservoir shocks require reservoir mounting kits - one pair required per shock - sold separately.
- (8) Vehicle will require alignment after kit is installed. Eccentric cam kit 599 required to make caster / camber adjustments.
- (9) In order to install Max Tire Size recommendations, it may be required to retain factory wheel width/ backspacing/ offset. Some applications will require the removal of front inner fender mud flaps and/or other fender modifications. Its up to installer to verify tire fitment and clearance for safe operation of vehicle.
- (10) Not for use on Dually applications.

# SUSPENSION KITS

## Ford F-250/ F-350 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>F-250 / F350 - V 10 Gas Engine</b>						
<b>6.0" LIFT Stage I w/Blocks and Add-A-Leafs</b>						
08-10	Front Coil Springs Radius Arm Brackets Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 1" / 1.5" Blocks Rear U-Bolts Rear Add-A-Leaf	<b>K4151B</b> Kit w/ES Shocks OR <b>K4151BP</b> Kit w/Pro Runner Shocks OR <b>K4151BMX</b> Kit w/MX6 Shocks OR <b>K4151BMXR</b> Kit w/MX6 Resi Shocks	1 1 1 1 1 1 1 1 2 2 OR 1	24514 Front Coils - Gas 52800B-1 Kit Box 52800B-2 Kit Box 52800B-4 Kit Box 52413B-3 Front / Rear ES9000 Shocks 52413BP-3 Front / Rear Pro Runner Shocks MX6154 Front MX6 Shocks MX6018 Rear MX6 Shocks 52800BMXR-3 Front / Rear MX6 Resi Shocks	Max Tire Size 37" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	8 10
<b>F-250 / F350 - Diesel Engine</b>						
<b>6.0" LIFT Stage I w/Blocks and Add-A-Leafs</b>						
08-10	Front Coil Springs Radius Arm Brackets Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 1" / 1.5" Blocks Rear U-Bolts Rear Add-A-Leaf	<b>K4150B</b> Kit w/ES Shocks OR <b>K4150BP</b> Kit w/Pro Runner Shocks OR <b>K4150BMX</b> Kit w/MX6 Shocks OR <b>K4150BMXR</b> Kit w/MX6 Resi Shocks	1 1 1 1 1 1 1 1 2 2 OR 1	24515 Front Coils - Diesel 52800B-1 Kit Box 52800B-2 Kit Box 52800B-4 Kit Box 52413B-3 Front / Rear ES9000 Shocks 52413BP-3 Front / Rear Pro Runner Shocks MX6154 Front MX6 Shocks MX6018 Rear MX6 Shocks 52800BMXR-3 Front / Rear MX6 Resi Shocks	Max Tire Size 37" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	8 10
<b>F-250 / F350 - V 10 Gas Engine</b>						
<b>6.0" LIFT Stage I w/Rear Leaf Springs</b>						
08-10	Front Coil Springs Radius Arm Brackets Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 1" / 1.5" Blocks Rear U-Bolts Rear Leaf Springs	<b>K4166B</b> Kit w/ES Shocks OR <b>K4166BP</b> Kit w/Pro Runner Shocks OR <b>K4166BMX</b> Kit w/MX6 Shocks OR <b>K4166BMXR</b> Kit w/MX6 Resi Shocks	1 2 1 1 1 1 1 1 2 2 OR 1	24514 Front Coils - Gas 22518 Rear Leaf Springs 52860B-1 Kit Box 52800B-2 Kit Box 52413B-3 Front / Rear ES9000 Shocks 52413BP-3 Front / Rear Pro Runner Shocks MX6154 Front MX6 Shocks MX6018 Rear MX6 Shocks 52800BMXR-3 Front / Rear MX6 Resi Shocks	Max Tire Size 37" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	8 10

FORD

OPTIONS	Notes:
Alignment Cambolt - Pair	
599 Eccentric Alignment Cambolt Kit	5,8
<b>Driveline Options</b>	
52480 Driveline Shim Kit - 2 Pc Rear Driveshaft	2
<b>Multiple Shock Mount Kit</b>	
52470B 8" Shock Mount Kit - No Shocks	3,4
52460B 6" Mount Kit - No Shocks	3,4
<b>8" Multiple Shock Kit - Shock Options</b>	
927501 ES9000	4
MX6075 MX6 Adjustable	4
MX6067R MX6R Adjustable Reservoir	4

OPTIONS	Notes:
<b>6" Multiple Shock Kit - Shock Options</b>	
925501 ES9000	4
MX6128 MX6 Adjustable	4
MX6066R MX6R Adjustable Reservoir	4
<b>Rear Leaf Spring</b>	
22518 5" Rear Leaf Spring - Single - 4WD	
<b>Reservoir Mounting Kits - Stainless</b>	
63012 2" Body to 2" Body	10
63013 2" Body to 1.5" Hoop Tube	10
<b>Reservoir Mounting Kits - Aluminum</b>	
63016 MX6R Body to MX6R Reservoir	10
63017 MX6R Body to 1.5" Hoop Tube	10

OPTIONS	Notes:
<b>Rear Lift Blocks Kits w/Bump Stop Pad - Pair</b>	
95-400SDB 4" Rear Block Kit	
95-550SDB 5.5" Rear Block Kit	
<b>Steering Stabilizer Kits</b>	
222582Z Dual Stabilizer Kit - Pro Runner Shocks	
222582 Dual Stabilizer Kit - ES2000 Shocks	
<b>Traction Bars</b>	
72400B Rear Traction Bars - Pair	
72099B Rear Traction Bar Mounting Kit	
<b>Rear Add-A-Leaf</b>	
13150 2.5"-3.5" Rear Add-A-Leaf - Pair	

- (2) Vehicles w/2 Pc rear driveshaft may require shim kit 52480 to reduce launch vibration and/or high speed driveline vibration.
- (3) Dual shock kits require loop to loop mount shocks.
- (4) Four shocks must be ordered separately. Reservoir shocks require reservoir mounting kits - one pair required per shock - sold separately.
- (8) Vehicle will require alignment after kit is installed. Eccentric cam kit 599 required to make caster / camber adjustments.
- (9) In order to install Max Tire Size recommendations, it may be required to retain factory wheel width/ backspacing/ offset. Some applications will require the removal of front inner fender mud flaps and/or other fender modifications. Its up to installer to verify tire fitment and clearance for safe operation of vehicle.
- (10) Not for use on Dually applications.

## Ford F-250/ F-350 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
------	-------------	---------------	------	--------------------------------------	---------------------	-------

### F-250 / F350 - Diesel Engine

#### 6.0" LIFT Stage I w/Rear Leaf Springs

08-10	Front Coil Springs Radius Arm Brackets Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 1"/ 1.5" Blocks Rear U-Bolts Rear Leaf Springs	<b>K4165B</b> Kit w/ES Shocks	1	24515	Front Coils - Diesel	Max Tire Size 37" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	8 10
		OR	2	22518	Rear Leaf Springs		
		<b>K4165BP</b> Kit w/Pro Runner Shocks	1	52860B-1	Kit Box		
		OR	1	52800B-2	Kit Box		
		Plus	1	52413B-3	Front / Rear ES9000 Shocks		
		OR	1	52413BP-3	Front / Rear Pro Runner Shocks		
		OR	2	MX6154	Front MX6 Shocks		
		OR	2	MX6018	Rear MX6 Shocks		
		OR	1	52800BMR-3	Front / Rear MX6 Resi Shocks		

### F-250 / F350 - V 10 Gas Engine

#### 6.0" LIFT Stage II w/Blocks and Add-A-Leafs

08-10	Front Coil Springs Radius Arms Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 1"/ 1.5" Blocks Rear U-Bolts Rear Add-A-Leaf	<b>K4153B</b> Kit w/ES Shocks	1	24514	Front Coils - Gas	Max Tire Size 37" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	8 10	
		OR	1	52801B-1	Kit Box			
		OR	1	52801B-2	Kit Box			
		<b>K4153BP</b> Kit w/Pro Runner Shocks	1	52800B-4	Kit Box			
		OR	Plus	1	52413B-3			Front / Rear ES9000 Shocks
		OR	1	52413BP-3	Front / Rear Pro Runner Shocks			
		OR	2	MX6154	Front MX6 Shocks			
		OR	2	MX6018	Rear MX6 Shocks			
		OR	1	52800BMR-3	Front / Rear MX6 Resi Shocks			

### F-250 / F350 - Diesel Engine

#### 6.0" LIFT Stage II w/Blocks and Add-A-Leafs

08-10	Front Coil Springs Radius Arms Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 1"/ 1.5" Blocks Rear U-Bolts Rear Add-A-Leaf	<b>K4152B</b> Kit w/ES Shocks	1	24515	Front Coils - Diesel	Max Tire Size 37" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	8 10	
		OR	1	52801B-1	Kit Box			
		OR	1	52801B-2	Kit Box			
		<b>K4152BP</b> Kit w/Pro Runner Shocks	1	52800B-4	Kit Box			
		OR	Plus	1	52413B-3			Front / Rear ES9000 Shocks
		OR	1	52413BP-3	Front / Rear Pro Runner Shocks			
		OR	2	MX6154	Front MX6 Shocks			
		OR	2	MX6018	Rear MX6 Shocks			
		OR	1	52800BMR-3	Front / Rear MX6 Resi Shocks			

OPTIONS	Notes:
Alignment Cambolt - Pair	
599 Eccentric Alignment Cambolt Kit	5,8
<b>Driveline Options</b>	
52480 Driveline Shim Kit - 2 Pc Rear Driveshaft	2
<b>Multiple Shock Mount Kit</b>	
52470B 8" Shock Mount Kit - No Shocks	3,4
52460B 6" Mount Kit - No Shocks	3,4
<b>8" Multiple Shock Kit - Shock Options</b>	
927501 ES9000	4
MX6075 MX6 Adjustable	4
MX6067R MX6R Adjustable Reservoir	4

OPTIONS	Notes:
<b>6" Multiple Shock Kit - Shock Options</b>	
925501 ES9000	4
MX6128 MX6 Adjustable	4
MX6066R MX6R Adjustable Reservoir	4
<b>Rear Leaf Spring</b>	
22518 5" Rear Leaf Spring - Single - 4WD	
<b>Reservoir Mounting Kits - Stainless</b>	
63012 2" Body to 2" Body	10
63013 2" Body to 1.5" Hoop Tube	10
<b>Reservoir Mounting Kits - Aluminum</b>	
63016 MX6R Body to MX6R Reservoir	10
63017 MX6R Body to 1.5" Hoop Tube	10

OPTIONS	Notes:
<b>Rear Lift Blocks Kits w/Bump Stop Pad - Pair</b>	
95-400SDB 4" Rear Block Kit	
95-550SDB 5.5" Rear Block Kit	
<b>Steering Stabilizer Kits</b>	
222582Z Dual Stabilizer Kit - Pro Runner Shocks	
222582 Dual Stabilizer Kit - ES2000 Shocks	
<b>Traction Bars</b>	
72400B Rear Traction Bars - Pair	
72099B Rear Traction Bar Mounting Kit	
<b>Rear Add-A-Leaf</b>	
13150 2.5"-3.5" Rear Add-A-Leaf - Pair	

- (2) Vehicles w/2 Pc rear driveshaft may require shim kit 52480 to reduce launch vibration and/or high speed driveline vibration.
- (3) Dual shock kits require loop to loop mount shocks.
- (4) Four shocks must be ordered separately. Reservoir shocks require reservoir mounting kits - one pair required per shock - sold separately.
- (8) Vehicle will require alignment after kit is installed. Eccentric cam kit 599 required to make caster / camber adjustments.
- (9) In order to install Max Tire Size recommendations, it may be required to retain factory wheel width/ backspacing/ offset. Some applications will require the removal of front inner fender mud flaps and/or other fender modifications. Its up to installer to verify tire fitment and clearance for safe operation of vehicle.
- (10) Not for use on Dually applications.

# SUSPENSION KITS

## Ford F-250/ F-350 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>F-250 / F350 - V 10 Gas Engine</b>						
<b>6.0" LIFT Stage II w/Rear Leaf Springs</b>						
08-10	Front Coil Springs Radius Arms Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 1" / 1.5" Blocks Rear U-Bolts Rear Leaf Springs	<b>K4168B</b> Kit w/ES Shocks OR <b>K4168BP</b> Kit w/Pro Runner Shocks OR <b>K4168BMX</b> Kit w/MX6 Shocks OR <b>K4168BMXR</b> Kit w/MX6 Resi Shocks	1 2 1 1 Plus 1 OR 1 OR 2 2 OR 1	24514 Front Coils - Gas 22518 Rear Leaf Springs 52861B-1 Kit Box 52861B-2 Kit Box 52413B-3 Front / Rear ES9000 Shocks 52413BP-3 Front / Rear Pro Runner Shocks MX6154 Front MX6 Shocks MX6018 Rear MX6 Shocks 52800BMXR-3 Front / Rear MX6 Resi Shocks	Max Tire Size 37" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	8 10
<b>F-250 / F350 - Diesel Engine</b>						
<b>6.0" LIFT Stage II w/Rear Leaf Springs</b>						
08-10	Front Coil Springs Radius Arms Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 1" / 1.5" Blocks Rear U-Bolts Rear Leaf Springs	<b>K4167B</b> Kit w/ES Shocks OR <b>K4167BP</b> Kit w/Pro Runner Shocks OR <b>K4167BMX</b> Kit w/MX6 Shocks OR <b>K4167BMXR</b> Kit w/MX6 Resi Shocks	1 2 1 1 Plus 1 OR 1 OR 2 2 OR 1	24515 Front Coils - Diesel 22518 Rear Leaf Springs 52861B-1 Kit Box 52861B-2 Kit Box 52413B-3 Front / Rear ES9000 Shocks 52413BP-3 Front / Rear Pro Runner Shocks MX6154 Front MX6 Shocks MX6018 Rear MX6 Shocks 52800BMXR-3 Front / Rear MX6 Resi Shocks	Max Tire Size 37" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	8 10

OPTIONS	Notes:
Alignment Cambolt - Pair	
599 Eccentric Alignment Cambolt Kit	5,8
<b>Driveline Options</b>	
52480 Driveline Shim Kit - 2 Pc Rear Driveshaft	2
<b>Multiple Shock Mount Kit</b>	
52470B 8" Shock Mount Kit - No Shocks	3,4
52460B 6" Mount Kit - No Shocks	3,4
<b>8" Multiple Shock Kit - Shock Options</b>	
927501 ES9000	4
MX6075 MX6 Adjustable	4
MX6067R MX6R Adjustable Reservoir	4

OPTIONS	Notes:
<b>6" Multiple Shock Kit - Shock Options</b>	
925501 ES9000	4
MX6128 MX6 Adjustable	4
MX6066R MX6R Adjustable Reservoir	4
<b>Rear Leaf Spring</b>	
22518 5" Rear Leaf Spring - Single - 4WD	
<b>Reservoir Mounting Kits - Stainless</b>	
63012 2" Body to 2" Body	10
63013 2" Body to 1.5" Hoop Tube	10
<b>Reservoir Mounting Kits - Aluminum</b>	
63016 MX6R Body to MX6R Reservoir	10
63017 MX6R Body to 1.5" Hoop Tube	10
<b>Rear Lift Blocks Kits w/Bump Stop Pad - Pair</b>	
95-400SDB 4" Rear Block Kit	
95-550SDB 5.5" Rear Block Kit	

OPTIONS	Notes:
<b>Level Lift</b>	
62687 Front Track Bar Drop 2.5"- 3.5"	
62698 Radius Arm Drop Brackets 2.5"- 3.5"	
62244 Rear Block Kit w/U-Bolts 4.0" 2/4WD	
62345 Rear Block Kit w/U-Bolts 5.0" 2/4WD	
62247 Rear U-Bolt kit 4.0" (14mm X 365mm)	
62243 Rear U-Bolt kit 5.0" (14mm X 400mm)	
<b>Steering Stabilizer Kits</b>	
222582Z Dual Stabilizer Kit - Pro Runner Shocks	
222582 Dual Stabilizer Kit - ES2000 Shocks	
<b>Traction Bars</b>	
72400B Rear Traction Bars - Pair	
72099B Rear Traction Bar Mounting Kit	
<b>Rear Add-A-Leaf</b>	
13150 2.5"-3.5" Rear Add-A-Leaf - Pair	

- (2) Vehicles w/2 Pc rear driveshaft may require shim kit 52480 to reduce launch vibration and/or high speed driveline vibration.
- (3) Dual shock kits require loop to loop mount shocks.
- (4) Four shocks must be ordered separately. Reservoir shocks require reservoir mounting kits - one pair required per shock - sold separately.
- (8) Vehicle will require alignment after kit is installed. Eccentric cam kit 599 required to make caster / camber adjustments.
- (9) In order to install Max Tire Size recommendations, it may be required to retain factory wheel width/ backspacing/ offset. Some applications will require the removal of front inner fender mud flaps and/or other fender modifications. Its up to installer to verify tire fitment and clearance for safe operation of vehicle.
- (10) Not for use on Dually applications.

## Ford F-250/ F-350 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>F-250/ F350 ALL</b>						
<b>2.0" LIFT w Rear Blocks</b>						
08-10	Front Coil Spacers Front Track Bar Bracket Related Hardware Rear Blocks Rear U-Bolts	<b>K4154B</b> Kit w/ES Shocks OR <b>K4154BMX</b> Kit w/MX6 Shocks	1 Plus 1 OR 2 2	52820B-1 Kit Box 52212B-2 Front / Rear ES9000 Shocks MX6123 Front MX6 Shocks MX6018 Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	1 8 10
<b>F-250</b>						
<b>2.5" / 2.0" Level Lift Nitro Kit</b>						
08-10	Front Coil Spacers Track Bar Drop Front Shock Relocation Brackets 4" Rear Blocks w/ U-Bolts		1	62668K Front Coil Spacers Track Bar Drop Front Shock Relocation Brackets Rear Blocks w/ U-Bolts	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	8 9
<b>F-350</b>						
<b>3.5" / 1.0" Level Lift Nitro Kit</b>						
08-10	Front Coil Spacers Track Bar Drop Front Shock Relocation Brackets 5" Rear Blocks w/ U-Bolts		1	62688K Front Coil Spacers Track Bar Drop Front Shock Relocation Brackets Rear Blocks w/ U-Bolts	Max Tire Size 35" - 37" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	8 9

(8) Vehicle will require alignment after kit is installed. Eccentric cam kit 599 required to make caster / camber adjustments.

(9) In order to install Max Tire Size recommendations, it may be required to retain factory wheel width/ backspacing/ offset. Some applications will require the removal of front inner fender mud flaps and/or other fender modifications. Its up to installer to verify tire fitment and clearance for safe operation of vehicle

(10) Not for use on Dually applications.

# SUSPENSION KITS

## Ford F-250/ F-350 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>F-250/ F350</b>						
<b>2.5" Level Lift</b>						
08-10	Front Coil Spacers Track Bar Drop Front Shock Relocation Brackets		1	62666 Front Coil Spacers Track Bar Drop Front Shock Relocation Brackets	Max Tire Size 37" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	8 9
<b>F-250/ F350</b>						
<b>2.5" Level Lift</b>						
05-12	Front Coil Spacers Front Shock Relocation Brackets		1	62245 Front Coil Spacers Front Shock Relocation Brackets	Max Tire Size 37" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	8 9
<b>F-250/ F350</b>						
<b>1.0" Level Lift</b>						
05-12	Front Lower Spring Spacer		1	62669 Front Lower Spring Spacer	Max Tire Size 33" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	8 9
<b>F-250/ F350 - ALL</b>						
<b>2.5" Poly Lift</b>						
05-12	Front Coil Spacers		1	PLF09119 Front Coil Spacers	Max Tire Size 33" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	8 9

FORD

OPTIONS	Notes:
<b>Alignment Cambolt - Pair</b>	
599 Eccentric Alignment Cambolt Kit	5,8
<b>Driveline Options</b>	
52480 Driveline Shim Kit - 2 Pc Rr Driveshaft	2
<b>Rear Lift Blocks Kits w/Bump Stop Pad - Pair</b>	
95-400SDB 4" Rear Block Kit	
95-550SDB 5.5" Rear Block Kit	
<b>Steering Stabilizer Kits</b>	
222582Z Dual Stabilizer Kit - Pro Runner Shocks	
222582 Dual Stabilizer Kit - ES2000 Shocks	

OPTIONS	Notes:
<b>Level Lift</b>	
62687 Front Track Bar Drop 2.5"- 3.5"	
62698 Radius Arm Drop Brackets 2.5"- 3.5"	
62244 Rear Block Kit w/U-Bolts 4.0" 2/4WD	
62345 Rear Block Kit w/U-Bolts 5.0" 2/4WD	
62247 Rear U-Bolt kit 4.0" (14mm X 365mm)	
62243 Rear U-Bolt kit 5.0" (14mm X 400mm)	
<b>Traction Bars</b>	
72400B Rear Traction Bars - Pair	
72099B Rear Traction Bar Mounting Kit	

(2) Vehicles w/2 Pc rear driveshaft may require shim kit 52480 to reduce launch vibration and/or high speed driveline vibration.

(8) Vehicle will require alignment after kit is installed. Eccentric cam kit 599 required to make caster / camber adjustments.

(9) In order to install Max Tire Size recommendations, it may be required to retain factory wheel width/ backspacing/ offset. Some applications will require the removal of front inner fender mud flaps and/or other fender modifications. Its up to installer to verify tire fitment and clearance for safe operation of vehicle.

## Ford F-250/ F-350 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>F-250 / F350 - Diesel Engine</b>						
<b>8.0" LIFT Stage I w/Blocks and Add -A-Leafs</b>						
05-07	Front Coil Springs Front Coil Spacers Radius Arm Brackets Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 1"/ 1.5" Blocks Rear U-Bolts Rear Dual Add-A-Leaf	<b>K4043B</b> Kit w/ES Shocks OR <b>K4043BMX</b> Kit w/MX6 Shocks	1 1 1 1 Plus 1 OR 1	24515 Front Coils - Diesel 52423B-1 Kit Box 52413B-2 Kit Box 52423B-3 Kit Box 52421B-3 Front / Rear ES9000 Shocks 52417BMX-4 Front / Rear MX6 Shocks	Max Tire Size 37" x 13.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	2 5 8
<b>F-250 / F350 - V 10 Gas Engine</b>						
<b>8.0" LIFT Stage I w/Rear Leaf Springs</b>						
05-07	Front Coil Springs Front Coil Spacers Radius Arm Brackets Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 1"/ 1.5" Blocks Rear U-Bolts Rear Leaf Springs	<b>K4036B</b> Kit w/ES Shocks OR <b>K4036BMX</b> Kit w/MX6 Shocks	1 2 1 1 Plus 1 OR 1	24514 Front Coils - Gas 22415 Kit Box 52421B-1 Kit Box 52413B-2 Kit Box 52421B-3 Front / Rear ES9000 Shocks 52417BMX-4 Front / Rear MX6 Shocks	Max Tire Size 37" x 13.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	2 5 8
<b>F-250 / F350 - Diesel Engine</b>						
<b>8.0" LIFT Stage I w/Rear Leaf Springs</b>						
05-07	Front Coil Springs Front Coil Spacers Radius Arm Brackets Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 1"/ 1.5" Blocks Rear U-Bolts Rear Leaf Springs	<b>K4038B</b> Kit w/ES Shocks OR <b>K4038BMX</b> Kit w/MX6 Shocks	1 2 1 1 Plus 1 OR 1	24515 Front Coils - Diesel 22415 Rear Leaf Spring 52421B-1 Kit Box 52413B-2 Kit Box 52421B-3 Front / Rear ES9000 Shocks 52417BMX-4 Front / Rear MX6 Shocks	Max Tire Size 37" x 13.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	2 5 8

OPTIONS	Notes:
<b>Alignment Cambolt - Pair</b>	
599 Eccentric Alignment Cambolt Kit	5,8
<b>Driveline Options</b>	
52480 Driveline Shim Kit - 2 Pc Rr Driveshaft	2
<b>Multiple Shock Mount Kit</b>	
52450B 8" Mount Kit - No Shocks	3,4
<b>8" Multiple Shock Kit - Shock Options</b>	
927500 ES9000	4
MX6128 MX6 Adjustable	4
MX6066R MX6R Adjustable Reservoir	4
<b>Reservoir Mounting Kits - Stainless</b>	
63012 2" Body to 2" Body	4
63013 2" Body to 1.5" Hoop Tube	4

OPTIONS	Notes:
<b>Reservoir Mounting Kits - Aluminum</b>	
63016 MX6R Body to MX6R Reservoir	4
63017 MX6R Body to 1.5" Hoop Tube	4
<b>Steering Stabilizer Kits</b>	
222582 Dual Stabilizer Kit - ES2000 Shocks	
222582Z Dual Stabilizer Kit 0-8"	
<b>Traction Bars</b>	
72400B Rear Traction Bars - Pair	
72099B Rear Traction Bar Mounting Kit	

OPTIONS	Notes:
<b>Rear Leaf Spring</b>	
22415 5" Rear Leaf Spring - Single - 4WD	
23311 6" Rear Leaf Spring - Single - 4WD	
<b>Rear Lift Blocks Kits w/Bump Stop Pad - Pair</b>	
95-400SDB 4" Rear Block Kit	
95-550SDB 5.5" Rear Block Kit	
<b>Rear Add-A-Leaf - Pair</b>	
13126 1.5"-2.5" Rear Add-A-Leaf	
13128 2.5"-3.5" Rear Add-A-Leaf	

- (2) Vehicles w/2 Pc rear driveshaft may require shim kit 52480 to reduce launch vibration and/or high speed driveline vibration.  
 (3) Dual shock kits require loop to loop mount shocks.  
 (4) Four shocks must be ordered separately. Reservoir shocks require reservoir mounting kits - one pair required per shock - sold separately.  
 (5) Vehicle will require eccentric alignment cam kit 599.  
 (8) Vehicle will require alignment after kit is installed.

# SUSPENSION KITS

## Ford F-250/ F-350 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>F-250 / F350 - V 10 Gas Engine</b>						
<b>8.0" LIFT Stage II w/Rear Leaf Springs</b>						
05-07	Front Coil Springs Front Coil Spacers Radius Arms Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 1"/ 1.5" Blocks Rear U-Bolts Rear Leaf Springs	<b>K4033B</b> Kit w/ES Shocks OR <b>K4033BMX</b> Kit w/MX6 Shocks OR <b>K4033BMXR</b> Kit w/MX6R Shocks	1 2 1 1 1 Plus 1 OR 1 OR 1	24514 Front Coils - Gas 22415 Rear Leaf Spring 52417B-1 Kit Box 52417B-2 Kit Box 52417B-3 Kit Box 52421B-3 Front / Rear ES9000 Shocks 52417BMX-4 Front / Rear MX6 Shocks 52417BMXR-4 Front / Rear MX6 Resi Shocks	Max Tire Size 37" x 13.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	2 5 8
<b>F-250 / F350 - Diesel Engine</b>						
<b>8.0" LIFT Stage II w/Rear Leaf Springs</b>						
05-07	Front Coil Springs Front Coil Spacers Radius Arms Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 1"/ 1.5" Blocks Rear U-Bolts Rear Leaf Springs	<b>K4042B</b> Kit w/ES Shocks OR <b>K4042BMX</b> Kit w/MX6 Shocks OR <b>K4042BMXR</b> Kit w/MX6R Shocks	1 2 1 1 1 Plus 1 OR 1 OR 1	24515 Front Coils - Diesel 22415 Rear Leaf Spring 52417B-1 Kit Box 52417B-2 Kit Box 52417B-3 Kit Box 52421B-3 Front / Rear ES9000 Shocks 52417BMX-4 Front / Rear MX6 Shocks 52417BMXR-4 Front / Rear MX6 Resi Shocks	Max Tire Size 37" x 13.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	2 5 8

OPTIONS	Notes:
<b>Alignment Cambolt - Pair</b>	
599 Eccentric Alignment Cambolt Kit	5,8
<b>Driveline Options</b>	
52480 Driveline Shim Kit - 2 Pc Rr Driveshaft	2
<b>Multiple Shock Mount Kit</b>	
52450B 8" Mount Kit - No Shocks	3,4
<b>8" Multiple Shock Kit - Shock Options</b>	
927500 ES9000	4
MX6128 MX6 Adjustable	4
MX6066R MX6R Adjustable Reservoir	4
<b>Reservoir Mounting Kits - Stainless</b>	
63012 2" Body to 2" Body	4
63013 2" Body to 1.5" Hoop Tube	4

OPTIONS	Notes:
<b>Reservoir Mounting Kits - Aluminum</b>	
63016 MX6R Body to MX6R Reservoir	4
63017 MX6R Body to 1.5" Hoop Tube	4
<b>Steering Stabilizer Kits</b>	
222582 Dual Stabilizer Kit - ES2000 Shocks	
222582Z Dual Stabilizer Kit 0-8"	
<b>Traction Bars</b>	
72400B Rear Traction Bars - Pair	
72099B Rear Traction Bar Mounting Kit	

OPTIONS	Notes:
<b>Rear Leaf Spring</b>	
22415 5" Rear Leaf Spring - Single - 4WD	
23311 6" Rear Leaf Spring - Single - 4WD	
<b>Rear Lift Blocks Kits w/Bump Stop Pad - Pair</b>	
95-400SDB 4" Rear Block Kit	
95-550SDB 5.5" Rear Block Kit	
<b>Rear Add-A-Leaf - Pair</b>	
13126 1.5"-2.5" Rear Add-A-Leaf	
13128 2.5"-3.5" Rear Add-A-Leaf	

- (2) Vehicles w/2 Pc rear driveshaft may require shim kit 52480 to reduce launch vibration and/or high speed driveline vibration.
- (3) Dual shock kits require loop to loop mount shocks.
- (4) Four shocks must be ordered separately. Reservoir shocks require reservoir mounting kits - one pair required per shock - sold separately.
- (5) Vehicle will require eccentric alignment cam kit 599.
- (8) Vehicle will require alignment after kit is installed.



## Ford F-250/ F-350 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes	
<b>F-250 / F350 - V 10 Gas Engine</b>							
<b>6.0" LIFT Stage I w/Blocks and Add -A-Leafs</b>							
05-07	Front Coil Springs Radius Arm Brackets Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 1"/ 1.5" Blocks Rear U-Bolts Rear Add-A-Leaf	<b>K4035B</b> Kit w/ES Shocks OR <b>K4035BP</b> Kit w/Pro Runner Shocks OR <b>K4035BMX</b> Kit w/MX6 Shocks	1 1 1 Plus 1 OR 1 OR 2 2	24514 52413B-1 52413B-2 52416B-2 52413B-3 52413BP-3 MX6122 MX6018	Front Coils - Gas Kit Box Kit Box Kit Box Front / Rear ES9000 Shocks Front / Rear Pro Runner Shocks Front MX6 Shocks Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	2 5 8
<b>F-250/ F350 - Diesel Engine</b>							
<b>6.0" LIFT Stage I w/Blocks and Add -A-Leafs</b>							
05-07	Front Coil Springs Radius Arm Brackets Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 1"/ 1.5" Blocks Rear U-Bolts Rear Add-A-Leaf	<b>K4037B</b> Kit w/ES Shocks OR <b>K4037BP</b> Kit w/Pro Runner Shocks OR <b>K4037BMX</b> Kit w/MX6 Shocks	1 1 1 Plus 1 OR 1 OR 2 2	24515 52413B-1 52413B-2 52416B-2 52413B-3 52413BP-3 MX6122 MX6018	Front Coils - Diesel Kit Box Kit Box Kit Box Front / Rear ES9000 Shocks Front / Rear Pro Runner Shocks Front MX6 Shocks Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	2 5 8

OPTIONS	Notes:
<b>Alignment Cambolt - Pair</b>	
599 Eccentric Alignment Cambolt Kit	5,8
<b>Driveline Options</b>	
52480 Driveline Shim Kit - 2 Pc Rr Driveshaft	2
<b>Multiple Shock Mount Kit</b>	
52440B 6" Mount Kit - No Shocks	3,4
<b>6" Multiple Shock Kit - Shock Options</b>	
925509 ES9000	4
MX6129 MX6 Adjustable	4
MX6065R MX6R Adjustable Reservoir	4
<b>Reservoir Mounting Kits - Stainless</b>	
63012 2" Body to 2" Body	4
63013 2" Body to 1.5" Hoop Tube	4

OPTIONS	Notes:
<b>Reservoir Mounting Kits - Aluminum</b>	
63016 MX6R Body to MX6R Reservoir	4
63017 MX6R Body to 1.5" Hoop Tube	4
<b>Steering Stabilizer Kits</b>	
222582 Dual Stabilizer Kit - ES2000 Shocks	
222582Z Dual Stabilizer Kit 0-8"	
<b>Traction Bars</b>	
72400B Rear Traction Bars - Pair	
72099B Rear Traction Bar Mounting Kit	

OPTIONS	Notes:
<b>Rear Leaf Spring</b>	
22415 5" Rear Leaf Spring - Single - 4WD	
23311 6" Rear Leaf Spring - Single - 4WD	
<b>Rear Lift Blocks Kits w/Bump Stop Pad - Pair</b>	
95-400SDB 4" Rear Block Kit	
95-550SDB 5.5" Rear Block Kit	
<b>Rear Add-A-Leaf - Pair</b>	
13126 1.5"-2.5" Rear Add-A-Leaf	
13128 2.5"-3.5" Rear Add-A-Leaf	

- (2) Vehicles w/2 Pc rear driveshaft may require shim kit 52480 to reduce launch vibration and/or high speed driveline vibration.  
 (3) Dual shock kits require loop to loop mount shocks.  
 (4) Four shocks must be ordered separately. Reservoir shocks require reservoir mounting kits - one pair required per shock - sold separately.  
 (5) Vehicle will require eccentric alignment cam kit 599.  
 (8) Vehicle will require alignment after kit is installed.

# SUSPENSION KITS

## Ford F-250/ F-350 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>F-250 / F350 - V 10 Gas Engine</b>						
<b>6.0" LIFT Stage I w/Rear Leaf Springs</b>						
05-07	Front Coil Springs Radius Arm Brackets Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 1" Blocks Rear U-Bolts Rear Leaf Springs	<b>K4031B</b> Kit w/ES Shocks OR <b>K4031BP</b> Kit w/Pro Runner Shocks OR <b>K4031BMX</b> Kit w/MX6 Shocks	1 2 1 1 Plus 1 OR 1 OR 2 2	24514 Front Coils - Gas 22415 Rear Leaf Spring 52513B-1 Kit Box 52413B-2 Kit Box 52413B-3 Front / Rear ES9000 Shocks 52413BP-3 Front / Rear Pro Runner Shocks MX6122 Front MX6 Shocks MX6018 Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	2 5 8
<b>F-250/ F350 - Diesel Engine</b>						
<b>6.0" LIFT Stage I w/Rear Leaf Springs</b>						
05-07	Front Coil Springs Radius Arm Brackets Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 1" Blocks Rear U-Bolts Rear Leaf Springs	<b>K4034B</b> Kit w/ES Shocks OR <b>K4034BP</b> Kit w/Pro Runner Shocks OR <b>K4034BMX</b> Kit w/MX6 Shocks	1 2 1 1 Plus 1 OR 1 OR 2 2	24515 Front Coils - Diesel 22415 Rear Leaf Spring 52513B-1 Kit Box 52413B-2 Kit Box 52413B-3 Front / Rear ES9000 Shocks 52413BP-3 Front / Rear Pro Runner Shocks MX6122 Front MX6 Shocks MX6018 Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	2 5 8

OPTIONS	Notes:
<b>Alignment Cambolt - Pair</b>	
599 Eccentric Alignment Cambolt Kit	5,8
<b>Driveline Options</b>	
52480 Driveline Shim Kit - 2 Pc Rr Driveshaft	2
<b>Multiple Shock Mount Kit</b>	
52440B 6" Mount Kit - No Shocks	3,4
<b>6" Multiple Shock Kit - Shock Options</b>	
925509 ES9000	4
MX6129 MX6 Adjustable	4
MX6065R MX6R Adjustable Reservoir	4
<b>Reservoir Mounting Kits - Stainless</b>	
63012 2" Body to 2" Body	4
63013 2" Body to 1.5" Hoop Tube	4

OPTIONS	Notes:
<b>Reservoir Mounting Kits - Aluminum</b>	
63016 MX6R Body to MX6R Reservoir	4
63017 MX6R Body to 1.5" Hoop Tube	4
<b>Steering Stabilizer Kits</b>	
222582 Dual Stabilizer Kit - ES2000 Shocks	
222582Z Dual Stabilizer Kit 0-8"	
<b>Traction Bars</b>	
72400B Rear Traction Bars - Pair	
72099B Rear Traction Bar Mounting Kit	

OPTIONS	Notes:
<b>Rear Leaf Spring</b>	
22415 5" Rear Leaf Spring - Single - 4WD	
23311 6" Rear Leaf Spring - Single - 4WD	
<b>Rear Lift Blocks Kits w/Bump Stop Pad - Pair</b>	
95-400SDB 4" Rear Block Kit	
95-550SDB 5.5" Rear Block Kit	
<b>Rear Add-A-Leaf - Pair</b>	
13126 1.5"-2.5" Rear Add-A-Leaf	
13128 2.5"-3.5" Rear Add-A-Leaf	

- (2) Vehicles w/2 Pc rear driveshaft may require shim kit 52480 to reduce launch vibration and/or high speed driveline vibration.
- (3) Dual shock kits require loop to loop mount shocks.
- (4) Four shocks must be ordered separately. Reservoir shocks require reservoir mounting kits - one pair required per shock - sold separately.
- (5) Vehicle will require eccentric alignment cam kit 599.
- (8) Vehicle will require alignment after kit is installed.

## Ford F-250/ F-350 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes	
<b>F-250 / F350 - V 10 Gas Engine</b>							
<b>6.0" LIFT Stage II w/Blocks and Add -A-Leafs</b>							
05-07	Front Coil Springs	<b>K4032B</b>	1	24514	Front Coils - Gas	Max Tire Size 35" x 12.50"	2 5 8
	Radius Arms	Kit w/ES Shocks	1	52415B-1	Kit Box	Wheel Diameter 16" +	
	Front Track Bar Bracket	OR	1	52415B-2	Kit Box	Wheel Width 8" - 10"	
	Drop Pitman Arm	<b>K4032BP</b>	1	52416B-2	Kit Box	Backspace 4" - 5.75"	
	Sway Bar Links	Kit w/Pro Runner Shocks	Plus			Bolt Pattern 8 x 170mm	
	Related Hardware	OR	1	52413B-3	Front / Rear ES9000 Shocks	Bolt Code 70	
	Rear 1"/ 1.5" Blocks	<b>K4032BMX</b>	OR			Lug Nut Size 14mm x 1.5	
	Rear U-Bolts	Kit w/MX6 Shocks	1	52413BP-3	Front / Rear Pro Runner Shocks	Lug Nut Kit PXA26145	
	Rear Add-A-Leaf	OR	OR				
		<b>K4032BMXR</b>	2	MX6122	Front MX6 Shocks		
	Kit w/MX6 Shocks	2	MX6018	Rear MX6 Shocks			
	OR	OR					
		1	52415BMXR-3	Front / Rear MX6 Resi Shocks			
<b>F-250/ F350 - Diesel Engine</b>							
<b>6.0" LIFT Stage II w/Blocks and Add -A-Leafs</b>							
05-07	Front Coil Springs	<b>K4039B</b>	1	24515	Front Coils - Diesel	Max Tire Size 35" x 12.50"	2 5 8
	Radius Arms	Kit w/ES Shocks	1	52415B-1	Kit Box	Wheel Diameter 16" +	
	Front Track Bar Bracket	OR	1	52415B-2	Kit Box	Wheel Width 8" - 10"	
	Drop Pitman Arm	<b>K4039BP</b>	1	52416B-2	Kit Box	Backspace 4" - 5.75"	
	Sway Bar Links	Kit w/Pro Runner Shocks	Plus			Bolt Pattern 8 x 170mm	
	Related Hardware	OR	1	52413B-3	Front / Rear ES9000 Shocks	Bolt Code 70	
	Rear 1"/ 1.5" Blocks	<b>K4039BMX</b>	OR			Lug Nut Size 14mm x 1.5	
	Rear U-Bolts	Kit w/MX6 Shocks	1	52413BP-3	Front / Rear Pro Runner Shocks	Lug Nut Kit PXA26145	
	Rear Add-A-Leaf	OR	OR				
		<b>K4039BMXR</b>	2	MX6122	Front MX6 Shocks		
	Kit w/MX6R Shocks	2	MX6018	Rear MX6 Shocks			
	OR	OR					
		1	52415BMXR-3	Front / Rear MX6 Resi Shocks			

OPTIONS	Notes:
<b>Alignment Cambolt - Pair</b>	
599 Eccentric Alignment Cambolt Kit	5,8
<b>Driveline Options</b>	
52480 Driveline Shim Kit - 2 Pc Rr Driveshaft	2
<b>Multiple Shock Mount Kit</b>	
52440B 6" Mount Kit - No Shocks	3,4
<b>6" Multiple Shock Kit - Shock Options</b>	
925509 ES9000	4
MX6129 MX6 Adjustable	4
MX6065R MX6R Adjustable Reservoir	4
<b>Reservoir Mounting Kits - Stainless</b>	
63012 2" Body to 2" Body	4
63013 2" Body to 1.5" Hoop Tube	4

OPTIONS	Notes:
<b>Reservoir Mounting Kits - Aluminum</b>	
63016 MX6R Body to MX6R Reservoir	4
63017 MX6R Body to 1.5" Hoop Tube	4
<b>Steering Stabilizer Kits</b>	
222582 Dual Stabilizer Kit - ES2000 Shocks	
222582Z Dual Stabilizer Kit 0-8"	
<b>Traction Bars</b>	
72400B Rear Traction Bars - Pair	
72099B Rear Traction Bar Mounting Kit	

OPTIONS	Notes:
<b>Rear Leaf Spring</b>	
22415 5" Rear Leaf Spring - Single - 4WD	
23311 6" Rear Leaf Spring - Single - 4WD	
<b>Rear Lift Blocks Kits w/Bump Stop Pad - Pair</b>	
95-400SDB 4" Rear Block Kit	
95-550SDB 5.5" Rear Block Kit	
<b>Rear Add-A-Leaf - Pair</b>	
13126 1.5"-2.5" Rear Add-A-Leaf	
13128 2.5"-3.5" Rear Add-A-Leaf	

- (2) Vehicles w/2 Pc rear driveshaft may require shim kit 52480 to reduce launch vibration and/or high speed driveline vibration.  
 (3) Dual shock kits require loop to loop mount shocks.  
 (4) Four shocks must be ordered separately. Reservoir shocks require reservoir mounting kits - one pair required per shock - sold separately.  
 (5) Vehicle will require eccentric alignment cam kit 599.  
 (8) Vehicle will require alignment after kit is installed.

# SUSPENSION KITS

## Ford F-250/ F-350 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>F-250 / F350 - V 10 Gas Engine</b>						
<b>6.0" LIFT Stage II w/Rear Leaf Springs</b>						
05-07	Front Coil Springs Radius Arms Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 1" Blocks Rear U-Bolts Rear Leaf Springs	<b>K4040B</b> Kit w/ES Shocks OR <b>K4040BP</b> Kit w/Pro Runner Shocks OR <b>K4040BMX</b> Kit w/MX6 Shocks OR <b>K4040BMXR</b> Kit w/MX6R Shocks	1 2 1 1 Plus 1 OR 1 OR 2 2 OR 1	24514 Front Coils - Gas 22415 Rear Leaf Spring 52515B-1 Kit Box 52515B-2 Kit Box 52413B-3 Front / Rear ES9000 Shocks 52413BP-3 Front / Rear Pro Runner Shocks MX6122 Front MX6 Shocks MX6018 Rear MX6 Shocks 52415BMXR-3 Front / Rear MX6 Resi Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	2 5 8
<b>F-250/ F350 - Diesel Engine</b>						
<b>6.0" LIFT Stage II w/Rear Leaf Springs</b>						
05-07	Front Coil Springs Radius Arms Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 1" Blocks Rear U-Bolts Rear Leaf Springs	<b>K4041B</b> Kit w/ES Shocks OR <b>K4041BP</b> Kit w/Pro Runner Shocks OR <b>K4041BMX</b> Kit w/MX6 Shocks OR <b>K4041BMXR</b> Kit w/MX6R Shocks	1 2 1 1 Plus 1 OR 1 OR 2 2 OR 1	24515 Front Coils - Diesel 22415 Rear Leaf Spring 52515B-1 Kit Box 52515B-2 Kit Box 52413B-3 Front / Rear ES9000 Shocks 52413BP-3 Front / Rear Pro Runner Shocks MX6122 Front MX6 Shocks MX6018 Rear MX6 Shocks 52415BMXR-3 Front / Rear MX6 Resi Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	2 5 8

(8) Vehicle will require alignment after kit is installed.

(9) In order to install Max Tire Size recommendations, it may be required to retain factory wheel width/ backspacing/ offset. Some applications may require the removal of front inner fender mud flaps and/or other fender modifications. Its up to installer to verify tire fitment and clearance for safe operation of vehicle.

## Ford F-250/ F-350 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>F-250/ F350 - ALL</b>						
<b>2.0" LIFT w/Rear Blocks</b>						
05-07	Front Coil Spacers Front Track Bar Bracket Related Hardware Rear Blocks Rear U-Bolts	<b>K4030B</b> Kit w/ES Shocks OR <b>K4030BMX</b> Kit w/MX6 Shocks	1 Plus 1 OR 2 2	52212B-1 Kit Box 52212B-2 Front / Rear ES9000 Shocks MX6123 Front MX6 Shocks MX6018 Rear MX6 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	8 9
<b>F-250</b>						
<b>3.5" / 3.0" Level Lift Nitro Kit</b>						
05-07	Front Coil Spacers Track Bar Drop Front Shock Relocation Brackets 5" Rear Blocks w/ U-Bolts		1	62687K Front Coil Spacers Track Bar Drop Front Shock Relocation Brackets Rear Blocks w/ U-Bolts	Max Tire Size 35" - 37" ** Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	8 9
<b>F-350</b>						
<b>3.5" / 1.0" Level Lift Nitro Kit</b>						
05-07	Front Coil Spacers Track Bar Drop Front Shock Relocation Brackets 5" Rear Blocks w/ U-Bolts		1	62687K Front Coil Spacers Track Bar Drop Front Shock Relocation Brackets Rear Blocks w/ U-Bolts	Max Tire Size 35" - 37" ** Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	8 9

(8) Vehicle will require alignment after kit is installed.

(9) In order to install Max Tire Size recommendations, it may be required to retain factory wheel width/ backspacing/ offset. Some applications may require the removal of front inner fender mud flaps and/or other fender modifications. Its up to installer to verify tire fitment and clearance for safe operation of vehicle.

# SUSPENSION KITS

## Ford F-250/ F-350 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>F-250/ F350 - ALL</b>						
<b>2.5" Level Lift</b>						
05-07	Front Coil Spacers Track Bar Drop Front Shock Relocation Brackets		1	62665 Front Coil Spacers Track Bar Brop Shock Reloaction Brackets	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	8 9
<b>F-250/ F350 - ALL</b>						
<b>2.5" Level Lift</b>						
05-07	Front Coil Spacers Front Shock Relocation Brackets		1	62245 Front Coil Spacers Front Shock Relocation Brackets	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	8 9
<b>F-250/ F350 - ALL</b>						
<b>1.0" Level Lift</b>						
05-07	Front Lower Spring Spacer		1	62669 Front Lower Spring Spacer	Max Tire Size 33" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	8 9
<b>F-250/ F350 - ALL</b>						
<b>2.5" Poly Lift</b>						
05-07	Front Coil Spacers		1	PLF09119 Front Coil Spacers	Max Tire Size 33" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26145	8 9

FORD

OPTIONS	Notes:
Alignment Cambolt - Pair	
599 Eccentric Alignment Cambolt Kit	5,8
<b>Driveline Options</b>	
52480 Driveline Shim Kit - 2 Pc Rr Driveshaft	2
<b>Steering Stabilizer Kits</b>	
222582 Dual Stabilizer Kit - ES2000 Shocks	
222582Z Dual Stabilizer Kit 0-8"	

OPTIONS	Notes:
<b>Level Lift</b>	
62684 Front Track Bar Drop Brackst 2.5" - 3.5"	
62698 Front Raduis Arm Drop Brackets 2.5" - 3.5"	
62244 Rear Block Kit W/U-Bolts 4.0"	
62345 Rear Block Kit W/U-Bolts 5.0"	
62247 Rear U-Bolt Kit 4.0"	
62343 Rear U-Bolt Kit 5.0"	

OPTIONS	Notes:
<b>Traction Bars</b>	
72400B Rear Traction Bars - Pair	
72099B Rear Traction Bar Mounting Kit	

- (2) Vehicles w/2 Pc rear driveshaft may require shim kit 52480 to reduce launch vibration and/or high speed driveline vibration.
- (5) Vehicle will require eccentric alignment cam kit 599.
- (8) Vehicle will require alignment after kit is installed.
- (9) In order to install Max Tire Size recommendations, it may be required to retain factory wheel width/ backspacing/ offset. Some applications may require the removal of front inner fender mud flaps and/or other fender modifications. Its up to installer to verify tire fitment and clearance for safe operation of vehicle.

## Ford F-250/ F-350 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>F-250 / F350 - V-10 Gas &amp; Diesel Engines (w/3.5" Factory Rear Blocks)(2 Pc Rear Driveshaft)</b>						
<b>8.5" LIFT w/Rear Leaf Springs</b>						
4/99-04	Front Leaf Springs Front Hanger Drops Front Shackle Drops Front U-Bolts Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 1"/ 1.5" Blocks Rear U-Bolts Rear Leaf Springs	<b>K4026B</b> Kit w/ES Shocks OR <b>K4026BMX</b> Kit w/MX6 Shocks	2 2 1 1 Plus 1 OR 1	22610 Front Leaf Spring 22415 Rear Leaf Spring 52419B-1 Kit Box 52419B-2 Kit Box 52419B-3 Front / Rear ES9000 Shocks 52419BMX-3 Front / Rear MX6 Shocks	Max Tire Size 37" x 13.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size See Notes Lug Nut Kit See Notes	1 4 6 8
<b>F-250 / F350 - V-10 Gas &amp; Diesel Engines (w/3.5" Factory Rear Blocks)(2 Pc Rear Driveshaft)</b>						
<b>6.5" LIFT w/Rear Leaf Springs</b>						
4/99-04	Front Leaf Springs Front U-Bolts Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 1"/ 1.5" Blocks Rear U-Bolts Rear Leaf Springs	<b>K4016B</b> Kit w/ES Shocks OR <b>K4016BP</b> Kit w/ES Shocks OR <b>K4016BMX</b> Kit w/MX6 Shocks	2 2 1 1 Plus 1 OR 2 2 OR 2 2	22610 Front Leaf Spring 22415 Rear Leaf Spring 52418B-1 Kit Box 52418B-2 Kit Box 52418B-3 Front / Rear ES9000 Shocks ZX2013 Front Pro Runner Shocks ZX2004 Rear Pro Runner Shocks MX6121 Front MX6 Shocks MX6018 Rear MX6 Shocks	Max Tire Size 37" x 13.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size See Notes Lug Nut Kit See Notes	1 6 8 9
<b>F-250 / F350 - V-10 Gas &amp; Diesel Engines (w/2.5" Factory Rear Blocks)(1 Pc Rear Driveshaft)</b>						
<b>4.0" LIFT w/Rear Add-A-Leaf</b>						
4/99-04	Front Leaf Springs Front U-Bolts Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 2.5" Blocks Rear U-Bolts Rear Add-A-Leaf	<b>K4018B</b> Kit w/ES Shocks OR <b>K4018BMX</b> Kit w/MX6 Shocks	2 1 1 Plus 1 OR 2 2	22410 Front Leaf Spring 52616B-1 Kit Box 52416B-2 Kit Box 52416B-3 Front / Rear ES9000 Shocks MX6017 Front MX6 Shocks MX6083 Rear MX6 Shocks	Max Tire Size 37" x 13.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size See Notes Lug Nut Kit See Notes	1 6 8 9

OPTIONS	Notes:
<b>Driveline Options</b>	
52480 Driveline Shim Kit for 2 Pc Rear Driveshaft	1
<b>Multiple Front Shock Mount Kit</b>	
52410B 2-8.5" Shock Bracket Kit - No Shocks	2,3
52420B 2-8.5" Shock Hoop Kit- No Shocks	2,3
<b>8.5" Multiple Front Shock Mount Kit - Shock Options</b>	
929500 ES9000	3
MX6005 MX6 Adjustable	3
MX6067R MX6R Adjustable Reservoir	3
<b>6.5" Multiple Front Shock Mount Kit - Shock Options</b>	
929500 ES9000	3
MX6121 MX6 Adjustable	3
MX6066R MX6R Adjustable Reservoir	3

OPTIONS	Notes:
<b>4" Multiple Front Shock Mount Kit - Shock Options</b>	
926500 ES9000	3
MX6017 MX6 Adjustable	3
MX6065R MX6R Adjustable Reservoir	3
<b>Reservoir Mounting Kits - Stainless</b>	
63012 2" Body to 2" Body	3
63013 2" Body to 1.5" Hoop Tube	3
<b>Reservoir Mounting Kits - Aluminum</b>	
63016 MX6R Body to MX6R Reservoir	3
63017 MX6R Body to 1.5" Hoop Tube	3
<b>Rear Add-A-Leaf</b>	
13126 1.5"-2.5" Rear Add-A-Leaf - Pair	
13128 2.5"-3.5" Rear Add-A-Leaf - Pair	
<b>Rear Lift Blocks Kits w/Bump Stop Pad - Pair</b>	
95-400SDB 4" Rear Block Kit	
95-550SDB 5.5" Rear Block Kit	

OPTIONS	Notes:
<b>Spring Hanger Kit</b>	
52484B 6.5" to 8.5" Upgrade Kit - ES Shocks	
52484BMX 6.5" to 8.5" Upgrade Kit - MX6 Shocks	
52483 Spring Hanger Reinforcement Kit	
<b>Steering Stabilizers</b>	
222570 Single Stabilizer Kit - 4WD - ES2000	
222286 Dual Stabilizer Kit - 4WD - ES2000	
222581 Dual Stabilizer Kit - 4WD - ES2000	
222581Z Dual Stabilizer Kit - 4WD - Pro Runner	
<b>Traction Bars</b>	
72400B Rear Traction Bars - Pair	
72099B Rear Traction Bar Mounting Kit	
<b>U-Bolt Kits</b>	
58305 Rear Axle U-Bolt Kit - 4WD (Dana 80)	

- (1) Vehicles with 2 Pc rear driveshaft may require shim kit 52480 to reduce launch vibration and/or high speed driveline vibration.
- (2) Dual shock kits require loop to loop mount shocks.
- (3) Four shocks must be ordered separately. Reservoir shocks require reservoir mounting kits - one pair required per shock - sold separately.
- (6) Vehicle will require alignment after kit is installed.
- (8) Not recommended for Dual Rear Wheel applications.
- (9) 00-02 Vehicles require 14mm x 2.0 lug nuts. Use lug nut kit PXA26108.03-04 Vehicles require 14mm x 1.5 lug nuts. Use lug nut kit PXA26145

# SUSPENSION KITS

## Ford F-250/ F-350 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>F-250 / F350 - V-10 Gas &amp; Diesel Engines (w/2.5" Factory Rear Blocks)(2 Pc Rear Driveshaft)</b>						
<b>4.0" LIFT w/Rear Add-A-Leaf</b>						
4/99-04	Front Leaf Springs Front U-Bolts Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 1.5" Blocks Rear U-Bolts Rear Add-A-Leaf	<b>K4013B</b> Kit w/ES Shocks OR <b>K4013BMX</b> Kit w/MX6 Shocks	2 1 1 Plus 1 OR 2 2	22410 Front Leaf Spring 52416B-1 Kit Box 52416B-2 Kit Box 52416B-3 Front / Rear ES9000 Shocks MX6017 Front MX6 Shocks MX6018 Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size See Notes Lug Nut Kit See Notes	1 6 8 9
<b>F-250 / F350 - V-10 Gas &amp; Diesel Engines (w/3.5" Factory Rear Blocks)(2 Pc Rear Driveshaft)</b>						
<b>4.0" LIFT w/Rear Add-A-Leaf</b>						
4/99-04	Front Leaf Springs Front U-Bolts Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 1" Blocks Rear U-Bolts Rear Add-A-Leaf	<b>K4015B</b> Kit w/ES Shocks OR <b>K4015BMX</b> Kit w/MX6 Shocks	2 1 1 Plus 1 OR 2 2	22410 Front Leaf Spring 52414B-1 Kit Box 52416B-2 Kit Box 52416B-3 Front / Rear ES9000 Shocks MX6017 Front MX6 Shocks MX6018 Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size See Notes Lug Nut Kit See Notes	1 6 8 9
<b>F-250 / F350 - V-10 Gas &amp; Diesel Engines (w/3.5" Factory Rear Blocks)(2 Pc Rear Driveshaft)</b>						
<b>4.0" LIFT w/Rear Add-A-Leaf</b>						
98-3/99	Front Leaf Springs Front U-Bolts Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 1" Blocks Rear U-Bolts Rear Add-A-Leaf	<b>K4014B</b> Kit w/ES Shocks OR <b>K4014BMX</b> Kit w/MX6 Shocks	2 1 1 Plus 1 OR 2 2	22410 Front Leaf Spring 52412B-1 Kit Box 52416B-2 Kit Box 52416B-3 Front / Rear ES9000 Shocks MX6017 Front MX6 Shocks MX6018 Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size 14mm x 2.0 Lug Nut Kit PXA26108	1 6 8 9

OPTIONS	Notes:
<b>Driveline Options</b>	
52480 Driveline Shim Kit for 2 Pc Rear Driveshaft	1
<b>Multiple Front Shock Mount Kit</b>	
52410B 2-8.5" Shock Bracket Kit - No Shocks	2,3
52420B 2-8.5" Shock Hoop Kit - No Shocks	2,3
<b>8.5" Multiple Front Shock Mount Kit - Shock Options</b>	
929500 ES9000	3
MX6005 MX6 Adjustable	3
MX6067R MX6R Adjustable Reservoir	3
<b>6.5" Multiple Front Shock Mount Kit - Shock Options</b>	
929500 ES9000	3
MX6121 MX6 Adjustable	3
MX6066R MX6R Adjustable Reservoir	3

OPTIONS	Notes:
<b>4" Multiple Front Shock Mount Kit - Shock Options</b>	
926500 ES9000	3
MX6017 MX6 Adjustable	3
MX6065R MX6R Adjustable Reservoir	3
<b>Reservoir Mounting Kits - Stainless</b>	
63012 2" Body to 2" Body	3
63013 2" Body to 1.5" Hoop Tube	3
<b>Reservoir Mounting Kits - Aluminum</b>	
63016 MX6R Body to MX6R Reservoir	3
63017 MX6R Body to 1.5" Hoop Tube	3
<b>Rear Add-A-Leaf</b>	
13126 1.5"-2.5" Rear Add-A-Leaf - Pair	
13128 2.5"-3.5" Rear Add-A-Leaf - Pair	
<b>Rear Lift Blocks Kits w/Bump Stop Pad - Pair</b>	
95-400SDB 4" Rear Block Kit	
95-550SDB 5.5" Rear Block Kit	

OPTIONS	Notes:
<b>Spring Hanger Kit</b>	
52484B 6.5" to 8.5" Upgrade Kit - ES Shocks	
52484BMX 6.5" to 8.5" Upgrade Kit - MX6 Shocks	
52483 Spring Hanger Reinforcement Kit	
<b>Steering Stabilizers</b>	
222570 Single Stabilizer Kit - 4WD - ES2000	
222286 Dual Stabilizer Kit - 4WD - ES2000	
222581 Dual Stabilizer Kit - 4WD - ES2000	
222581Z Dual Stabilizer Kit - 4WD - Pro Runner	
<b>Traction Bars</b>	
72400B Rear Traction Bars - Pair	
72099B Rear Traction Bar Mounting Kit	
<b>U-Bolt Kits</b>	
58305 Rear Axle U-Bolt Kit - 4WD (Dana 80)	

- (1) Vehicles with 2 Pc rear driveshaft may require shim kit 52480 to reduce launch vibration and/or high speed driveline vibration.
- (2) Dual shock kits require loop to loop mount shocks.
- (3) Four shocks must be ordered separately. Reservoir shocks require reservoir mounting kits - one pair required per shock - sold separately.
- (6) Vehicle will require alignment after kit is installed.
- (8) Not recommended for Dual Rear Wheel applications.
- (9) 00-02 Vehicles require 14mm x 2.0 lug nuts. Use lug nut kit PXA26108.03-04 Vehicles require 14mm x 1.5 lug nuts. Use lug nut kit PXA26145



## Ford F-250/ F-350 — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>F-250 / F350 - ALL</b>						
<b>2.0" LIFT</b>						
4/99-04	Front Leaf Springs Front U-Bolts Related Hardware	<b>K4012</b> Kit w/ES Shocks OR <b>K4012MX</b> Kit w/MX6 Shocks	2 1 Plus 1 OR 2 2	22210 Front Leaf Spring 52210-1 Kit Box 52210-2 Front / Rear ES9000 Shocks MX6004 Front MX6 Shocks MX6018 Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size See Notes Lug Nut Kit See Notes	1 6 8 9
<b>F-250 / F350 - ALL</b>						
<b>2.0" LIFT</b>						
4/99-04	Front Hanger Drops Front Shackle Drops Related Hardware	<b>52482B</b> Kit w/ES Shocks OR <b>52482BMX</b> Kit w/MX6 ShocksT	1 Plus 1 OR 2 2	52482B-1 Kit Box 52210-2 Front / Rear ES9000 Shocks MX6004 Front MX6 Shocks MX6018 Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size See Notes Lug Nut Kit See Notes	1 6 9

OPTIONS		Notes:
Alignment Cambolt - Pair		
594	Eccentric Align Cam - Pair - 2WD	4
Pitman Arm (required for 2WD)		
FD400	32 spline	7
FD600	36 spline	7
Driveline Options		
52480	Driveline Shim Kit for 2 Pc Rear Driveshaft	1
Multiple Front Shock Mount Kit		
52410B	2-8.5" Shock Bracket Kit - No Shocks	2,3
52420B	2-8.5" Shock Hoop Kit- No Shocks	2,3
2" Multiple Front Shock Mount Kit - Shock Options		
924509	ES9000	3
MX6004	MX6 Adjustable	3
Reservoir Mounting Kits - Stainless		
63012	2" Body to 2" Body	3
63013	2" Body to 1.5" Hoop Tube	3
Reservoir Mounting Kits - Aluminum		
63016	MX6R Body to MX6R Reservoir	3
63017	MX6R Body to 1.5" Hoop Tube	3

OPTIONS		Notes:
Rear Add-A-Leaf		
13126	1.5"-2.5" Rear Add-A-Leaf - Pair	
13128	2.5"-3.5" Rear Add-A-Leaf - Pair	
Rear Lift Blocks Kits w/Bump Stop Pad - Pair		
95-400SDB	4" Rear Block Kit	
95-550SDB	5.5" Rear Block Kit	
Steering Stabilizers		
222570	Single Stabilizer Kit - 4WD - ES2000	
222286	Dual Stabilizer Kit - 4WD - ES2000	
222581	Dual Stabilizer Kit - 4WD - ES2000	
222581Z	Dual Stabilizer Kit - 4WD - Pro Runner	
222585	Single Stabilizer Kit - 2WD - ES2000	5
Traction Bars		
72400B	Rear Traction Bars - Pair	
72099B	Rear Traction Bar Mounting Kit	
U-Bolt Kits		
58305	Rear Axle U-Bolt Kit - 4WD (Dana 80)	

- (1) Vehicles with 2 Pc rear driveshaft may require shim kit 52480 to reduce launch vibration and/or high speed driveline vibration.
- (2) Dual shock kits require loop to loop mount shocks.
- (3) Four shocks must be ordered separately. Reservoir shocks require reservoir mounting kits - one pair required per shock - sold separately.
- (4) Vehicle will require eccentric alignment cam kit 594.
- (5) Steering Stabilizer kit 222585 fits 2wd vehicles with 6" Pro Comp lift only.
- (6) Vehicle will require alignment after kit is installed.
- (7) Pitman arm must be ordered separately. 2WD produced up to 3/99 use P/N FD400- after 3/99 verify steering shaft diameter and spline count. P/N FD400 has 32 splines and fits 1.313" diameter shaft. P/N FD600 has 36 splines and fits 1.375" diameter shaft.
- (8) Not recommended for Dual Rear Wheel applications.
- (9) 00-02 Vehicles require 14mm x 2.0 lug nuts. Use lug nut kit PXA26108. 03-04 Vehicles require 14mm x 1.5 lug nuts. Use lug nut kit PXA26145

# SUSPENSION KITS

## Ford F-250/ F-350 — 2WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes	
<b>F-250 / F350 - V-8/ V-10 Gas Engine</b>							
<b>6.0" LIFT W/Rear Add-A-Leaf</b>							
99-04	Front Coil Springs Radius Arm Brackets I Beam Brackets Sway Bar Drops Related Hardware Rear 1.5" Blocks Rear U-Bolts Rear Add-A-Leaf	<b>K4020B</b> Kit w/ES Shocks OR <b>K4020BMX</b> Kit w/MX6 Shocks	1 1 1 1 Plus 1 OR 2 2	24614 52612B-1 52612B-2 52416B-2 52612B-4 MX6089 MX6005	Front Coils - Gas Kit Box Kit Box Kit Box Front / Rear ES9000 Shocks Front MX6 Shocks Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size See Notes Lug Nut Kit See Notes	1 4 5 6 7 8 9
<b>F-250 / F350 - Diesel Engine</b>							
<b>6.0" LIFT W/Rear Add-A-Leaf</b>							
99-04	Front Coil Springs Radius Arm Brackets I Beam Brackets Sway Bar Drops Related Hardware Rear 1.5" Blocks Rear U-Bolts Rear Add-A-Leaf	<b>K4021B</b> Kit w/ES Shocks OR <b>K4021BMX</b> Kit w/MX6 Shocks	1 1 1 1 Plus 1 OR 2 2	24615 52612B-1 52612B-2 52416B-2 52612B-4 MX6089 MX6005	Front Coils - Diesel Kit Box Kit Box Kit Box Front / Rear ES9000 Shocks Front MX6 Shocks Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size See Notes Lug Nut Kit See Notes	1 4 5 6 7 8 9
<b>F-250 / F350 / F450 / F550 - ALL</b>							
<b>2.0" Poly Lift</b>							
99-10	Front Coil Spacers			PLF09101	Front Coil Spacers	Max Tire Size 32" x 11.50" Wheel Diameter OE" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size See Notes Lug Nut Kit See Notes	

OPTIONS		Notes:
Alignment Cambolt - Pair		
594	Eccentric Align Cam - Pair - 2WD	4
Pitman Arm (required for 2WD)		
FD400	32 spline	7
FD600	36 spline	7

OPTIONS		Notes:
Driveline Options		
52480	Driveline Shim Kit for 2 Pc Rear Driveshaft	1
Steering Stabilizers		
222585	Single Stabilizer Kit - 2WD - ES2000	5

- (1) Vehicles with 2 Pc rear driveshaft may require shim kit 52480 to reduce launch vibration and/or high speed driveline vibration.
- (2) Dual shock kits require loop to loop mount shocks.
- (3) Four shocks must be ordered separately. Reservoir shocks require reservoir mounting kits - one pair required per shock - sold separately.
- (4) Vehicle will require eccentric alignment cam kit 594.
- (5) Steering Stabilizer kit 222585 fits 2wd vehicles with 6" Pro Comp lift only.
- (6) Vehicle will require alignment after kit is installed.
- (7) Pitman arm must be ordered separately. 2WD produced up to 3/99 use P/N FD400- after 3/99 verify steering shaft diameter and spline count.  
P/N FD400 has 32 splines and fits 1.313" diameter shaft. P/N FD600 has 36 splines and fits 1.375" diameter shaft.
- (8) Not recommended for Dual Rear Wheel applications.
- (9) 00-02 Vehicles require 14mm x 2.0 lug nuts. Use lug nut kit PXA26108. 03-04 Vehicles require 14mm x 1.5 lug nuts. Use lug nut kit PXA26145

## Ford Bronco — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions		Wheel / Tire Specs:		Notes
<b>Bronco</b>								
<b>6.0" LIFT Stage I w/Rear Add-A-Leafs</b>								
90-96	Front Coil Springs Radius Arm Brackets I Beam Brackets Drop Pitman Arm Stainless Brake Lines Related Hardware Dual Rear Add-A-Leaf	<b>K4061B</b> Kit w/ES Shocks	1 1 1 1 1 2 2	24612 52180B 13130 7325 FD400 321510 326500	Front Coil Springs - Standard Cab Kit Box Rear Add-A-Leaf Stainless Brake Line Kit Drop Pitman Arm Front ES3000 Shocks Rear ES3000 Shocks	Max Tire Size Wheel Diameter Wheel Width Backspace Bolt Pattern Bolt Code Lug Nut Size Lug Nut Kit	35" x 12.50" 15" + 8" - 10" 3.25" - 4" 5 x 5.5" 85 1/2" PXA21183	1 2 3 4
<b>Bronco</b>								
<b>6.0" LIFT Stage II w/Rear Add-A-Leafs</b>								
90-96	Front Coil Springs Radius Arms I Beam Brackets Drop Pitman Arm Stainless Brake Lines Related Hardware Dual Rear Add-A-Leaf	<b>K4062B</b> Kit w/ES Shocks	1 1 1 1 1 2 2	24612 52080B-1 52080B-2 13130 7325 321510 326500	Front Coil Springs - Standard Cab Kit Box Kit Box Rear Add-A-Leaf Stainless Brake Line Kit Drop Pitman Arm Front ES3000 Shocks Rear ES3000 Shocks	Max Tire Size Wheel Diameter Wheel Width Backspace Bolt Pattern Bolt Code Lug Nut Size Lug Nut Kit	35" x 12.50" 15" + 8" - 10" 3.25" - 4" 5 x 5.5" 85 1/2" PXA21183	1 2 3 4
<b>Bronco</b>								
<b>4.0" LIFT Stage I w/Rear Add-A-Leafs</b>								
90-96	Front Coil Springs Radius Arm Brackets I Beam Brackets Drop Pitman Arm Stainless Brake Lines Related Hardware Add-A-Leaf	<b>K4053B</b> Kit w/ES Shocks	1 1 1 1 1 2 2	24412 52180B 13128 7325 FD400 319510 324509	Front Coil Springs - Standard Cab Kit Box Rear Add-A-Leaf Stainless Brake Line Kit Drop Pitman Arm Front ES3000 Shocks Rear ES3000 Shocks	Max Tire Size Wheel Diameter Wheel Width Backspace Bolt Pattern Bolt Code Lug Nut Size Lug Nut Kit	33" x 12.50" 15" + 8" - 10" 3.25" - 4" 5 x 5.5" 85 1/2" PXA21183	1 2 3 4
<b>Bronco</b>								
<b>4.0" LIFT Stage II w/Rear Add-A-Leafs</b>								
90-96	Front Coil Springs Radius Arms I Beam Brackets Drop Pitman Arm Stainless Brake Lines Related Hardware Add-A-Leaf	<b>K4054B</b> Kit w/ES Shocks	1 1 1 1 1 2 2	24412 52080B-1 52080B-2 13128 7325 319510 324509	Front Coil Springs - Standard Cab Kit Box Kit Box Rear Add-A-Leaf Stainless Brake Line Kit Drop Pitman Arm Front ES3000 Shocks Rear ES3000 Shocks	Max Tire Size Wheel Diameter Wheel Width Backspace Bolt Pattern Bolt Code Lug Nut Size Lug Nut Kit	33" x 12.50" 15" + 8" - 10" 3.25" - 4" 5 x 5.5" 85 1/2" PXA21183	1 2 3 4

FORD

OPTIONS	Notes:
Alignment Cam - Pair	
532 Eccentric Alignment Cam Kit - 4WD	1
Shock - Factory Front Quad Shocks	
324510 6" Lift ES3000	2
322510 4" Lift ES3000	2
Steering Stabilizers	
220537 Steering Stabilizer Kit (Non-Quad Front)	
220566 Steering Stabilizer Kit (Quad Front)	
220565 Dual Steering Stabilizer Kit (Quad Front)	

OPTIONS	Notes:
Rear Add-A-Leaf - Pairs	
13128 2.5"-3.5" Rear Add-A-Leaf - 4WD	
13130 3.5"-4.5" Rear Add-A-Leaf - 4WD	
Rear Leaf Spring	
23411 6" Rear Leaf Spring - Single - 4WD	
23211 4" Rear Leaf Spring - Single - 4WD	
U-Bolt Kits	
50438 Rear Axle U-Bolt Kit	

- (1) Vehicle will require eccentric alignment cam kit p/n 532.
- (2) Vehicles equipped with factory front quad shocks will require 2) additional front shocks. Required and sold separately.
- (3) Vehicle will require alignment after kit is installed.
- (4) Brake Hose Kit 7325 required when left front brake line has 3-way T-block (Non-ABS). Brake hose kit 7350 required when both front brake lines are identical (ABS).

# SUSPENSION KITS

## Ford Bronco — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>Bronco</b>						
<b>6.0" LIFT Stage I w/Rear Add-A-Leafs</b>						
81-89	Front Coil Springs Radius Arm Brackets I Beam Brackets Drop Pitman Arm Stainless Brake Lines Related Hardware Dual Rear Add-A-Leaf	<b>K4077B</b> Kit w/ES Shocks	1 1 1 1 1 2 2	24612 Front Coil Springs - Standard Cab 52180B Kit Box 13130 Rear Add-A-Leaf 7330 Stainless Brake Line Kit FD400 Drop Pitman Arm 321510 Front ES3000 Shocks 326500 Rear ES3000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 3
<b>Bronco</b>						
<b>6.0" LIFT Stage II w/Rear Add-A-Leafs</b>						
81-89	Front Coil Springs Radius Arms I Beam Brackets Drop Pitman Arm Stainless Brake Lines Related Hardware Dual Rear Add-A-Leaf	<b>K4078B</b> Kit w/ES Shocks	1 1 1 1 1 2 2	24612 Front Coil Springs - Standard Cab 52080B-1 Kit Box 52080B-2 Kit Box 13130 Rear Add-A-Leaf 7330 Stainless Brake Line Kit 321510 Front ES3000 Shocks 326500 Rear ES3000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 3
<b>Bronco</b>						
<b>4.0" LIFT Stage I w/Rear Add-A-Leafs</b>						
81-89	Front Coil Springs Radius Arm Brackets I Beam Brackets Drop Pitman Arm Stainless Brake Lines Related Hardware Add-A-Leaf	<b>K4069B</b> Kit w/ES Shocks	1 1 1 1 1 2 2	24412 Front Coil Springs - Standard Cab 52180B Kit Box 13128 Rear Add-A-Leaf 7330 Stainless Brake Line Kit FD400 Drop Pitman Arm 319510 Front ES3000 Shocks 324509 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 3
<b>Bronco</b>						
<b>4.0" LIFT Stage II w/Rear Add-A-Leafs</b>						
81-89	Front Coil Springs Radius Arms I Beam Brackets Drop Pitman Arm Stainless Brake Lines Related Hardware Add-A-Leaf	<b>K4070B</b> Kit w/ES Shocks	1 1 1 1 1 2 2	24412 Front Coil Springs - Standard Cab 52080B-1 Kit Box 52080B-2 Kit Box 13128 Rear Add-A-Leaf 7330 Stainless Brake Line Kit 319510 Front ES3000 Shocks 324509 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4" Bolt Pattern 5 x 5.5" Bolt Code 85 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 3

FORD

OPTIONS		Notes:
Alignment Cam - Pair		
532	Eccentric Alignment Cam Kit - 4WD	1
Shock - Factory Front Quad Shocks		
324510	6" Lift ES3000	2
322510	4" Lift ES3000	2
Steering Stabilizers		
220537	Steering Stabilizer Kit (Non-Quad Front)	
220566	Steering Stabilizer Kit (Quad Front)	
220565	Dual Steering Stabilizer Kit (Quad Front)	

OPTIONS		Notes:
Rear Add-A-Leaf - Pairs		
13128	2.5"-3.5" Rear Add-A-Leaf - 4WD	
13130	3.5"-4.5" Rear Add-A-Leaf - 4WD	
Rear Leaf Spring		
23411	6" Rear Leaf Spring - Single - 4WD	
23211	4" Rear Leaf Spring - Single - 4WD	
U-Bolt Kits		
50438	Rear Axle U-Bolt Kit	

- (1) Vehicle will require eccentric alignment cam kit p/n 532.
- (2) Vehicles equipped with factory front quad shocks will require 2) additional front shocks. Required and sold separately.
- (3) Vehicle will require alignment after kit is installed.
- (4) Brake Hose Kit 7325 required when left front brake line has 3-way T-block (Non-ABS). Brake hose kit 7350 required when both front brake lines are identical (ABS).



# SUSPENSION KITS

## Ford Excursion — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>EXCURSION - V-10 Gas &amp; Diesel - 4WD</b>						
<b>6.0" LIFT</b>						
00-06	Front Leaf Springs Front U-Bolts Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 2.5" Blocks Rear U-Bolts Rear Add-A-Leaf	<b>K4018B</b> Kit w/ES Shocks OR <b>K4018BMX</b> Kit w/MX6 Resi Shocks	2 1 1 Plus 1 OR 2 2	22410 Front Leaf Spring 52416B-1 Kit Box 52416B-2 Kit Box 52416B-3 Front / Rear ES9000 Shocks MX6017 Front MX6 Shocks MX6083 Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size See Notes Lug Nut Kit See Notes	6 8
<b>4.0" LIFT</b>						
00-06	Front Leaf Springs Front U-Bolts Front Track Bar Bracket Drop Pitman Arm Sway Bar Links Related Hardware Rear 2.5" Blocks Rear U-Bolts Rear Add-A-Leaf	<b>K4017B</b> Kit w/ES Shocks OR <b>K4017BMX</b> Kit w/MX6 Resi Shocks	2 1 1 Plus 1 OR 2 2	22210 Front Leaf Spring 52416B-1 Kit Box 52416B-2 Kit Box 52416B-3 Front / Rear ES9000 Shocks MX6017 Front MX6 Shocks MX6018 Rear MX6 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size See Notes Lug Nut Kit See Notes	6 8

OPTIONS	Notes:
Alignment Cambolt - Pair	
594 Eccentric Align Cam-Pair-2WD	4
Pitman Arm (required for 2WD)	
FD400 32 spline	7
FD600 36 spline	7
Multiple Front Shock Mount Kit	
52410B 4-6" Shock Bracket Kit-No Shocks	2,3
52420B 4-6" Shock Hoop Kit-No Shocks	2,3
6" Multiple Front Shock Mount Kit - Shock Options	
MX6017 MX6 Adjustable	3
MX6065R MX6R Adjustable Reservoir	3
4" Multiple Front Shock Mount Kit - Shock Options	
924500 ES9000	3
MX6004 MX6 Adjustable	3

OPTIONS	Notes:
Reservoir Mounting Kits - Stainless	
63012 2" Body to 2" Body	3
63013 2" Body to 1.5" Hoop Tube	3
Reservoir Mounting Kits - Aluminum	
63016 MX6R Body to MX6R Reservoir	3
63017 MX6R Body to 1.5" Hoop Tube	3
Rear Add-A-Leaf	
13126 1.5"-2.5" Rear Add-A-Leaf - Pair	
13128 2.5"-3.5" Rear Add-A-Leaf - Pair	
Rear Lift Blocks Kits w/Bump Stop Pad - Pair	
95-400SDB 4" Rear Block Kit	
95-550SDB 5.5" Rear Block Kit	

OPTIONS	Notes:
Spring Hanger Kit	
52482B-1 2" Spring hangers and shackles	
52482B 2" Lift - Front and Rear ES9000 shocks	
52482BMX 2" Lift - Front and Rear MX6 shocks	
52483 Spring Hanger Reinforcement Kit	
Steering Stabilizers	
222570 Single Stabilizer Kit - 4WD - ES2000	
222586 Dual Kit - 4WD - ES2000	
222585 Single Stabilizer Kit-2WD-ES2000	5
Traction Bars	
72400B Rear Traction Bars - Pair	
72099B Rear Traction Bar Mounting Kit	

- (2) Dual shock kits require loop to loop mount shocks.  
 (3) Four shocks must be ordered separately. Reservoir shocks require reservoir mounting kits - one pair required per shock - sold separately.  
 (4) Vehicle will require eccentric alignment cam kit 594.  
 (5) Steering Stabilizer kit 222585 fits 2wd vehicles with 6" Pro Comp lift only.  
 (6) Vehicle will require alignment after kit is installed.  
 (7) Pitman arm must be ordered separately. 2WD produced up to 3/99 use P/N FD400- after 3/99 verify steering shaft diameter and spline count.  
 P/N FD400 has 32 splines and fits 1.313" diameter shaft. P/N FD600 has 36 splines and fits 1.375" diameter shaft.  
 (8) 00-02 Vehicles require 14mm x 2.0 lug nuts. Use lug nut kit PXA26108. 03-04 Vehicles require 14mm x 1.5 lug nuts. Use lug nut kit PXA26145

## Ford Excursion — 2WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>EXCURSION - V-8 / V-10 Gas Engine - 2WD</b>						
<b>6.0" LIFT</b>						
99-04	Front Coil Springs Radius Arm Brackets I Beam Brackets Sway Bar Brackets Related Hardware Rear 1.5" Blocks Rear U-Bolts Rear Leaf Springs	<b>K4022B</b> Kit w/ES Shocks OR <b>K4022BMX</b> Kit w/MX6 Shocks	1 2 1 1 Plus 1 OR 2 2	24614 Front Coils - Gas 22415 Rear Leaf Spring 52614B-1 Kit Box 52614B-2 Kit Box 52612B-4 Front / Rear ES9000 Shocks MX6089 Front MX6 Shocks MX6005 Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size See Notes Lug Nut Kit See Notes	4 5 6 7 8
<b>EXCURSION - Diesel Engine - 2WD</b>						
<b>6.0" LIFT</b>						
99-04	Front Coil Springs Radius Arm Brackets I Beam Brackets Sway Bar Brackets Related Hardware Rear 1.5" Blocks Rear U-Bolts Rear Leaf Springs	<b>K4130B</b> Kit w/ES Shocks OR <b>K4130BMX</b> Kit w/MX6 Shocks	1 2 1 1 Plus 1 OR 2 2	24615 Front Coils - Diesel 22415 Rear Leaf Spring 52614B-1 Kit Box 52614B-2 Kit Box 52612B-4 Front / Rear ES9000 Shocks MX6089 Front MX6 Shocks MX6005 Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size See Notes Lug Nut Kit See Notes	4 5 6 7 8
<b>EXCURSION V-8 Gas &amp; Diesel Engine / V-10 Gas - 2WD</b>						
<b>2.0" Poly Lift</b>						
99-04	Front Coil Spacers			PLF09101 Front Coil Spacers	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 10" Backspace 4" - 5.75" Bolt Pattern 8 x 170mm Bolt Code 70 Lug Nut Size See Notes Lug Nut Kit See Notes	4 6 8

OPTIONS	Notes:
Alignment Cambolt - Pair	
594 Eccentric Align Cam - Pair - 2WD	4
Pitman Arm (required for 2WD)	
FD400 32 spline	7
FD600 36 spline	7

OPTIONS	Notes:
Driveline Options	
52480 Driveline Shim Kit for 2 Pc Rear Driveshaft	1
Steering Stabilizers	
222585 Single Stabilizer Kit - 2WD - ES2000	5

- (4) Vehicle will require eccentric alignment cam kit 594.  
 (5) Steering Stabilizer kit 222585 fits 2wd vehicles with 6" Pro Comp lift only.  
 (6) Vehicle will require alignment after kit is installed.  
 (7) Pitman arm must be ordered separately. 2WD produced up to 3/99 use P/N FD400- after 3/99 verify steering shaft diameter and spline count. P/N FD400 has 32 splines and fits 1.313" diameter shaft. P/N FD600 has 36 splines and fits 1.375" diameter shaft.  
 (8) 00-02 Vehicles require 14mm x 2.0 lug nuts. Use lug nut kit PXA26108. 03-04 Vehicles require 14mm x 1.5 lug nuts. Use lug nut kit PXA26145

# SUSPENSION KITS

## Jeep Wrangler JK 4-Door — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions		Wheel / Tire Specs:		Notes
<b>Wrangler JK 4 Door - Including RUBICON - 4WD</b>								
<b>6" LIFT Long Arm Kit</b>								
07-16	Front Coil Springs Rear Coil Springs Lower Long Control Arms Adj Upper Control Arms Adj Front Track Bar Extended Bump Stops RH Steering Knuckle Rear Track Bar Brackets Front Sway Bar Links Rear Sway Bar Links Related Brackets	<b>K3098B</b> Kit With ES Shocks OR <b>K3098BP</b> Kit With Pro Runner Shocks	1 1 1 1 1 1 1 1 1 2 2 2 2	55747B-1 55747B-2 55747B-3 55747B-4 55747B-5 JTB402 55617 55417 929511 929504 ZX2062 ZX2055	Kit Box Kit Box Kit Box Kit Box Kit Box Adj Front Track Bar Front Coils Rear Coils Front ES9000 Shocks Rear ES9000 Shocks Front Pro Runner Shocks Rear Pro Runner Shocks	Max Tire Size 37" x 13.50" Wheel Diameter 16" + Wheel Width 8" - 9" Backspace 3.25" - 4.75" Bolt Pattern 5 x 5" Bolt Code 73 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 3 5 7 7 8	
<b>Wrangler JK 4 Door All Models</b>								
<b>3.5" LIFT</b>								
07-16	Front Coil Springs Rear Coil Springs Front Track Bar Rear Track Bar Front Sway Bar Drops Related Brackets	<b>K3100B</b> Kit With ES Shocks OR <b>K3100BP</b> Kit With Pro Runner Shocks	1 Plus 2 2 OR 2 2	55801B 926511 926501 ZX2040 ZX2041	Kit Box Front ES9000 Shocks Rear ES9000 Shocks Front Pro Runner Shocks Rear Pro Runner Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 9" Backspace 3.25" - 4.75" Bolt Pattern 5 x 5" Bolt Code 73 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 3 4 5 6 7	
<b>Wrangler JK 4 DR All Models - 4WD</b>								
<b>3" LIFT Stage II</b>								
07-16	Front Coil Springs Rear Coil Springs Bump Stop Extensions HD-X Lower Control Arms Adj Upper Control Arms Adj Front Track Bar Rear Track Bar Bracket Front Sway Bar Links Rear Sway Bar Links Related Brackets	<b>K3090B</b> Kit With ES Shocks OR <b>K3090BP</b> Kit With Pro Runner Shocks OR <b>K3090BMX</b> Kit With MX6 Shocks	1 1 1 1 1 Plus 2 2 OR 2 2 OR 2 2	55727B-1 55727B-2 55397 55207 JTB402 926511 926501 ZX2040 ZX2041 MX6013 MX6151	Kit Box Kit Box Front Coils Rear Coils Adj Front Track Bar Front ES9000 Shocks Rear ES9000 Shocks Front Pro Runner Shocks Rear Pro Runner Shocks Front MX6 Shocks Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 9" Backspace 3.25" - 4.75" Bolt Pattern 5 x 5" Bolt Code 73 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 3 4 5 6 7 8	
<b>3" LIFT Stage I</b>								
07-16	Front Coil Springs Rear Coil Springs Bump Stop Extensions Rear Track Bar Bracket Front Sway Bar Links Rear Sway Bar Links Related Brackets	<b>K3089B</b> Kit With ES Shocks OR <b>K3089BMX</b> Kit With MX6 Shocks	1 1 1 Plus 2 2 OR 2 2	55717B 55397 55207 926511 926501 MX6013 MX6151	Kit Box Front Coils Rear Coils Front ES9000 Shocks Rear ES9000 Shocks Front MX6 Shocks Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 9" Backspace 3.25" - 4.75" Bolt Pattern 5 x 5" Bolt Code 73 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 3 4 5 6 7 8	
<b>Wrangler JK 4 Door All Models Excludes RUBICON</b>								
<b>2.5" LIFT</b>								
07-16	Front Coil Springs Rear Coil Springs Rear Track Bar Bracket Front Sway Bar Drops Related Brackets	<b>K3099B</b> Kit With ES Shocks OR <b>K3099BMX</b> Kit With MX6 Shocks	1 1 1 Plus 2 2 OR 2 2	55728B 55208 55209 924510 924507 MX6024 MX6155	Kit Box Front Coils Rear Coils Front ES9000 Shocks Rear ES9000 Shocks Front MX6 Shocks Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 9" Backspace 3.25" - 4.75" Bolt Pattern 5 x 5" Bolt Code 73 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 3 4 5 6 7	

JEEP

OPTIONS	Notes:
Adjustable Track Bar	
JTB402 Adjustable Track Bar - Front	
Alignment Cambolt - Pair	
20-65227 Eccentric Alignment Cambolt Kit - Front	6
20-65228 Eccentric Alignment Cambolt Kit - Rear	7

OPTIONS	Notes:
<b>Driveline Options - Front</b>	
55827B Non-CV Driveshaft - 2/4 DR (0"-4" Lift)	1,8
55837B CV Driveshaft - 2/4 DR (0"-6" Lift)	1,8
<b>Driveline Options - Rear</b>	
55767B Non-CV Driveshaft - 4 DR (0"-6" Lift)	1

OPTIONS	Notes:
<b>Steering Stabilizers</b>	
220500 Single Stabilizer Kit - ES2000 Shock	
222580Z Single Stabilizer Kit - Pro Runner	2
222586 Dual Stabilizer Kit - ES2000 Shocks	
<b>Flex Joint Service Kit for Stage II lower arms</b>	
55770 Set of 4 w adjustment tool	
<b>Exhaust Spacer Kit</b>	
55746B Exhaust Spacer Kit	



## Jeep Wrangler JK 2-Door — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>Wrangler JK 2 Door - 4WD</b>						
<b>4" LIFT Stage I</b>						
07-16	Front Coil Springs Rear Coil Springs Bump Stop Extensions Rear Track Bar Bracket Front Sway Bar Links Rear Sway Bar Links Related Brackets	<b>K3086B</b> Kit With ES Shocks OR <b>K3086BMX</b> Kit With MX6 Shocks	1 1 1 Plus 2 2 OR 2 2	55717B Kit Box 55397 Front Coils 55217 Rear Coils 926511 Front ES9000 Shocks 926501 Rear ES9000 Shocks MX6013 Front MX6 Shocks MX6151 Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 9" Backspace 3.25" - 4.75" Bolt Pattern 5 x 5" Bolt Code 73 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 3 4 5 6 7 8
<b>4" LIFT Stage II</b>						
07-16	Front Coil Springs Rear Coil Springs Bump Stop Extensions HD-X Lower Control Arms Adj Upper Control Arms Adj Front Track Bar Rear Track Bar Bracket Front Sway Bar Links Rear Sway Bar Links Related Brackets	<b>K3087B</b> Kit With ES Shocks OR <b>K3087BP</b> Kit With Pro Runner Shocks OR <b>K3087BMX</b> Kit With MX6 Shocks	1 1 1 1 Plus 2 2 OR 2 2 OR 2 2	55727B-1 Kit Box 55727B-2 Kit Box 55397 Front Coils 55217 Rear Coils JTB402 Adj Front Track Bar 926511 Front ES9000 Shocks 926501 Rear ES9000 Shocks ZX2040 Front Pro Runner Shocks ZX2041 Rear Pro Runner Shocks MX6013 Front MX6 Shocks MX6151 Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 9" Backspace 3.25" - 4.75" Bolt Pattern 5 x 5" Bolt Code 73 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 3 4 5 6 7 8
<b>Wrangler JK 2 Door All Models</b>						
<b>3.5" LIFT</b>						
07-16	Front Coil Springs Rear Coil Springs Front Track Bar Rear Track Bar Front Sway Bar Drops Related Brackets	<b>K3102B</b> Kit With ES Shocks OR <b>K3102BP</b> Kit With Pro Runner Shocks	1 Plus 2 2 OR 2 2	55802B Kit Box 926511 Front ES9000 Shocks 926501 Rear ES9000 Shocks ZX2040 Front Pro Runner Shocks ZX2041 Rear Pro Runner Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 9" Backspace 3.25" - 4.75" Bolt Pattern 5 x 5" Bolt Code 73 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 3 4 5 6 7 8
<b>Wrangler JK 2DR All Models except-RUBICON</b>						
<b>2.5" LIFT</b>						
07-16	Front Coil Springs Rear Coil Springs Rear Track Bar Bracket Front Sway Bar Drops Related Brackets	<b>K3101B</b> Kit With ES Shocks OR <b>K3101BP</b> Kit With MX6 Shocks	1 1 1 Plus 2 2 OR 2 2	55728B Kit Box 55210 Front Coils 55211 Rear Coils 924510 Front ES9000 Shocks 924507 Rear ES9000 Shocks MX6024 Front MX6 Shocks MX6155 Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 9" Backspace 3.25" - 4.75" Bolt Pattern 5 x 5" Bolt Code 73 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 3 4 5 6 7
<b>Wrangler JK All Models</b>						
<b>3"/2" Level Lift Nitro Kit</b>						
07-16	Front Coil Spacers Rear Coil Spacers Shock Extensions Bump Stop Extensions Rear Track Bar Bracket		1	66150K Front Coil Spacers Rear Coil Spacers Shock Extensions Bump Stop Extensions Rear Track Bar Bracket	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 9" Backspace 3.25" - 4.75" Bolt Pattern 5 x 5" Bolt Code 73 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 3 4 5 6 7

- (1) Driveline modifications may be required for height increases over 3.0" due to increased driveline angles.
- (2) Steering Stabilizer 222580Z will only fit vehicles with the 6" Long Arm kits K3098B/ K3098BP installed.
- (3) All ride height increases are approximate and will vary due to vehicle specification (Engine size, factory options, trail equipment, etc).
- (4) Use of a 35" x 12.5" tire may require fender modification.
- (5) Vehicle will require alignment after kit is installed.
- (6) Front cambolt kit 20-65227 is recommended for caster angle adjustments. In most cases, reducing positive caster to the minimum factory specification will reduce or eliminate the potential for steering wheel shimmy.
- (7) Rear cambolt kit 20-65228 can be used for tuning pinion angle for minor driveline vibration correction.
- (8) 12-14 Jeep JK 2DR and 4DR models will require exhaust spacer kit 55746B or a replacement front driveshaft, p/n 55837B, for proper front driveshaft clearance for lift heights greater than 2.5". Exhaust bypass required for long arm installation.

JEEP

# SUSPENSION KITS

## Jeep Wrangler LJ

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>Wrangler LJ - Including RUBICON 4WD</b>						
<b>4" LIFT Stage I Short Arm Kit</b>						
04-06	Front Coil Springs Rear Coil Springs Tubular Lower Control Arms Front Sway Bar Links Rear Track Bar Bracket Rear Sway Bar Links Related Brackets	<b>K3084B</b> Kit With ES Shocks OR <b>K3084BMX</b> Kit With MX6 Shocks	1 1 1 Plus 2 2 OR 2 2	55695B Kit Box 55497 Front Coils 55404 Rear Coils 324515 Front ES3000 Shocks 323509 Rear ES3000 Shocks MX6021 Front MX6 Shocks MX6023 Rear MX6 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 5 x 4.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	2 3 4 5 6 7 8 9
<b>4" LIFT Stage II Short Arm Kit</b>						
04-06	Front Coil Springs Rear Coil Springs Boxed Lower Control Arms Adj Front Track Bar Front Track Bar Bracket Drop Pitman Arm Front Sway Bar Disconnects Rear Track Bar Bracket Rear Sway Bar Links Related Brackets	<b>K3083B</b> Kit With ES Shocks OR <b>K3083BMX</b> Kit With MX6 Shocks	1 1 1 Plus 2 2 OR 2 2	55699B Kit Box 55497 Front Coils 55498 Rear Coils 324515 Front ES3000 Shocks 323509 Rear ES3000 Shocks MX6021 Front MX6 Shocks MX6106 Rear MX6 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 5 x 4.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	2 3 4 5 6 7 8 9
<b>Wrangler LJ - Including RUBICON - Automatic / 5 Spd Trans</b>						
<b>4" LIFT Long Arm Kit</b>						
04-06	Front Coil Springs Rear Coil Springs Lower Long Control Arms Adj Upper Control Arms Adj Front Track Bar Front Track Bar Bracket Drop Pitman Arm Front Sway Bar Disconnects Rear Sway Bar Links 4 Link Rear Conversion Related Brackets Removable Center Belly Pan	<b>K3095B</b> Kit With ES Shocks OR <b>K3095BP</b> Kit With Pro Runner Shocks OR <b>K3095BMX</b> Kit With MX6 Shocks	1 1 1 1 1 1 OR 1 Plus 2 2 OR 2 2 OR 2 2	55797B-1 Kit Box 55794B-2 Kit Box 55799B-3 Kit Box 55799B-4 Kit Box 55799B-5 Kit Box 55497 Front Coils 55498 Rear Coils 7450 Stainless Brake Lines 924515 Front ES9000 Shocks 924509 Rear ES9000 Shocks ZX2056 Front Pro Runner Shocks ZX2061 Rear Pro Runner Shocks MX6021 Front MX6 Shocks MX6106 Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 5 x 4.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 4 5 7

JEEP

OPTIONS	Notes:
Adjustable Track Bar - 2"-5" Lift	
JTB400 Adjust. Track Bar (Dana 30)-Front	
JTB403 Adjust. Track Bar (Dana 44)-Front	10
JTB401 Adjustable Track Bar - Rear	
55300 Track Bar Drop Bracket - Front	10
<b>Steering Components</b>	
YJ400 4.0" Pitman Arm	10
<b>Alignment Cambolt - Pair</b>	
20-65226 Eccentric Alignment Cambolt Kit - Front	7,8
20-65225 Eccentric Alignment Cambolt Kit - Rear	9

OPTIONS	Notes:
<b>Brakeline Options</b>	
7450 Stainless Brake Line Kit	
<b>Coil Spring Spacers - Pair - For use with Accessories</b>	
55496 .75" Coil Spacer - Aluminum-Pair	5
55415 1.5" Coil Spacer - Aluminum-Pair	2
<b>Control Arms - Pair</b>	
55100 Adj Upper Control Arms - Front	
55700 Adj Upper Control Arms - Rear	
55200 Boxed Lower Control Arms - Front	
55400 Boxed Lower Control Arms - Rear	
90-6048B Rplcmt Lwr Control Arm Bush Kit	6

OPTIONS	Notes:
<b>Driveline Options - 0"-4" Lift</b>	
4007 NP231 SYE T-Case Conversn Kit	2
<b>4 Link Rear Conversion</b>	
55800 4 Link Rear Conversion Kit	
<b>Steering Box Protector</b>	
55500 Steering Box Protector - TJ/ LJ	
<b>Steering Stabilizer</b>	
219505 Single Stabilizer - ES2000 Shock	
222579Z Single Stabilizer - Pro Runner Shock	
<b>Sway Bar Disconnects - 3"-5" Lift</b>	
55506 Sway Bar Disconnects - Front	

- (1) Use of a 35" x 12.50" tires will require wider replacement fender flares or steel flat fenders.
- (2) Driveline modifications may be required for height increases over 1.5" due to increased driveline angles. Transfer case SYE (Slip Yoke Eliminator) kit and CV rear drive shaft required for Long Arm Applications. Rubicon models will require CV drive shaft w flange adapter (not available from Pro Comp).
- (3) Vehicles with Auto Trans will require removal of front skid plate when using transfer case lowering hardware.
- (4) All ride height increases are approximate and will vary due to vehicle specification (Engine size, factory options, trail equipment, etc).
- (5) Coil spacer 55496 can be used to increase front ride height by .75".
- (6) Replacement Lower Control Arm Bushing kit 90-6048B.
- (7) Vehicle will require alignment after kit is installed.
- (8) Front cambolt kit 20-65226 is recommended for caster angle adjustments. In most cases, reducing positive caster to the minimum factory specification will reduce or eliminate the potential for steering wheel shimmy.
- (9) Rear cambolt kit 20-65225 can be used for tuning pinion angle for minor driveline vibration correction.
- (10) Installation of JTB403 track bar requires track bar drop bracket 55300 and drop Pitman arm YJ400.

## Jeep Wrangler TJ/ LJ

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>Wrangler TJ / LJ - Including RUBICON Kit - 4WD</b>						
<b>2" LIFT</b>						
97-06	Front Coil Springs Rear Coil Springs	<b>K3055</b> Kit With ES Shocks OR <b>K3055MX</b> Kit With MX6 Shocks	1 1 Plus 2 2 OR 2 2	55297 Front Coils 55298 Rear Coils 321515 Front ES3000 Shocks 321500 Rear ES3000 Shocks MX6093 Front MX6 Shocks MX6094 Rear MX6 Shocks	Max Tire Size 32" x 11.50" Wheel Diameter OE" + Wheel Width 7" - 10" Backspace 3.25" - 4.5" Bolt Pattern 5 x 4.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	2 3 4 5 7 8 9
<b>1.5" LIFT</b>						
97-06	Front Coil Spacers Rear Coil Spacers	<b>K3054</b> Kit With ES Shocks OR <b>K3054MX</b> Kit With MX6 Shocks	1 Plus 2 2 OR 2 2	55415 Front / Rear Coil Spacers 321515 Front ES3000 Shocks 321500 Rear ES3000 Shocks MX6028 Front MX6 Shocks MX6029 Rear MX6 Shocks	Max Tire Size 31" x 10.50" Wheel Diameter OE" + Wheel Width 7" - 10" Backspace 3.25" - 4.5" Bolt Pattern 5 x 4.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	2 4
<b>1.5"/ 1.5" Level Lift Nitro Kit</b>						
97-06	Front Coil Spacers Rear Coil Spacers		1	66150 Front / Rear Coil Spacers	Max Tire Size 31" x 10.50" Wheel Diameter OE" + Wheel Width 7" - 10" Backspace 3.25" - 4.5" Bolt Pattern 5 x 4.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	2 4
<b>1.75" Poly Lift</b>						
97-06	Coil Spacers		1	PLF09100 Front or Rear Coil Spacers	Max Tire Size 31" x 10.50" Wheel Diameter OE" + Wheel Width 7" - 10" Backspace 3.25" - 4.5" Bolt Pattern 5 x 4.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	2 4

OPTIONS	Notes:
<b>Adjustable Track Bar - 2"-5" Lift</b>	
JTB400 Adjust. Track Bar (Dana 30)-Front	
JTB403 Adjust. Track Bar (Dana 44)-Front	10
JTB401 Adjustable Track Bar - Rear	
55300 Track Bar Drop Bracket - Front	10
<b>Steering Components</b>	
YJ400 4.0" Pitman Arm	10
<b>Alignment Cambolt - Pair</b>	
20-65226 Eccentric Alignment Cambolt Kit - Front	7,8
20-65225 Eccentric Alignment Cambolt Kit - Rear	9

OPTIONS	Notes:
<b>Brakeline Options</b>	
7450 Stainless Brake Line Kit	
<b>Coil Spring Spacers - Pair - For use with Accessories</b>	
55496 .75" Coil Spacer - Aluminum-Pair	5
55415 1.5" Coil Spacer - Aluminum-Pair	2
<b>Control Arms - Pair</b>	
55100 Adj Upper Control Arms - Front	
55700 Adj Upper Control Arms - Rear	
55200 Boxed Lower Control Arms - Front	
55400 Boxed Lower Control Arms - Rear	
90-6048B Rplcmt Lwr Control Arm Bush Kit	6

OPTIONS	Notes:
<b>Driveline Options - 0"-4" Lift</b>	
4007 NP231 SYE T-Case Conversn Kit	2
4042 CV Style Driveshaft - Rear (TJ)	2
<b>4 Link Rear Conversion</b>	
55800 4 Link Rear Conversion Kit	
<b>Steering Box Protector</b>	
55500 Steering Box Protector - TJ/ LJ	
<b>Steering Stabilizer</b>	
219505 Single Stabilizer - ES2000 Shock	
222579Z Single Stabilizer - Pro Runner Shock	
<b>Sway Bar Disconnects - 3"-5" Lift</b>	
55506 Sway Bar Disconnects - Front	

- (1) Use of a 35" x 12.50" tires will require wider replacement fender flares or steel flat fenders.
- (2) Driveline modifications may be required for height increases over 1.5" due to increased driveline angles. Transfer case SYE (Slip Yoke Eliminator) kit and CV rear drive shaft required for Long Arm Applications. Rubicon models will require CV drive shaft w flange adapter (not avail from Pro Comp).
- (3) Vehicles with Auto Trans will require removal of front skid plate when using transfer case lowering hardware.
- (4) All ride height increases are approximate and will vary due to vehicle specification (Engine size, factory options, trail equipment, etc).
- (5) Coil spacer 55496 can be used to increase front ride height by .75".
- (6) Replacement Lower Control Arm Bushing kit 90-6048B.
- (7) Vehicle will require alignment after kit is installed.
- (8) Front cambolt kit 20-65226 is recommended for caster angle adjustments. In most cases, reducing positive caster to the minimum factory specification will reduce or eliminate the potential for steering wheel shimmy.
- (9) Rear cambolt kit 20-65225 can be used for tuning pinion angle for minor driveline vibration correction.
- (10) Installation of JTB403 track bar requires track bar drop bracket 55300 and drop Pitman arm YJ400.

JEEP

# SUSPENSION KITS

## Jeep Wrangler TJ

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>Wrangler TJ - Including RUBICON</b>						
<b>4" LIFT Stage I Short Arm Kit</b>						
03-06	Front Coil Springs Rear Coil Springs Tubular Lower Control Arms Front Sway Bar Links Rear Track Bar Bracket Rear Sway Bar Links Related Brackets	<b>K3076B</b> Kit With ES Shocks OR <b>K3077BMX</b> Hard Top Kit With MX6 Shocks OR <b>K3078BMX</b> Soft Top Kit With MX6 Shocks	1 1 1 Plus 2 2 OR 2 2 OR 2 2	55695B Kit Box 55497 Front Coils 55498 Rear Coils 324515 Front ES3000 Shocks 323509 Rear ES3000 Shocks MX6021 Front MX6 Shocks MX6023 Rear MX6 Shocks MX6021 Front MX6 Shocks MX6106 Rear MX6 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 5 x 4.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	2 3 4 5 6 7 8 9
<b>4" LIFT Stage II Short Arm Kit</b>						
97-06	Front Coil Springs Rear Coil Springs Boxed Lower Control Arms Adj Front Track Bar Front Track Bar Bracket Drop Pitman Arm Front Sway Bar Disconnects Rear Track Bar Bracket Rear Sway Bar Links Related Brackets	<b>K3083B</b> Kit With ES Shocks OR <b>K3083BMX</b> Kit With MX6 Shocks	1 1 1 Plus 2 2 OR 2 2	55699B Kit Box 55497 Front Coils 55498 Rear Coils 324515 Front ES3000 Shocks 323509 Rear ES3000 Shocks MX6021 Front MX6 Shocks MX6106 Rear MX6 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 5 x 4.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	2 3 4 5 6 7 8 9
<b>Wrangler TJ - Including RUBICON - Automatic / 5 Spd Trans</b>						
<b>4" LIFT Long Arm Kit</b>						
03-06	Front Coil Springs Rear Coil Springs Lower Long Control Arms Adj Upper Control Arms Adj Front Track Bar Front Track Bar Bracket Drop Pitman Arm Front Sway Bar Disconnects Rear Sway Bar Links 4 Link Rear Conversion Related Brackets Removable Center Belly Pan	<b>K3092B</b> Kit With ES Shocks OR <b>K3092BP</b> Kit With Pro Runner Shocks OR <b>K3092BMX</b> Kit With MX6 Shocks	1 1 1 1 1 1 1 Plus 2 2 OR 2 2 OR 2 2	55797B-1 Kit Box 55797B-2 Kit Box 55799B-3 Kit Box 55799B-4 Kit Box 55799B-5 Kit Box 55497 Front Coils 55498 Rear Coils 7450 Stainless Brake Lines 924515 Front ES9000 Shocks 924509 Rear ES9000 Shocks ZX2056 Front Pro Runner Shocks ZX2061 Rear Pro Runner Shocks MX6021 Front MX6 Shocks MX6106 Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 5 x 4.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 4 5 7

JEEP

OPTIONS	Notes:
Adjustable Track Bar - 2"-5" Lift	
JTB400 Adjust. Track Bar (Dana 30)-Front	
JTB403 Adjust. Track Bar (Dana 44)-Front	10
JTB401 Adjustable Track Bar - Rear	
55300 Track Bar Drop Bracket - Front	10
<b>Steering Components</b>	
YJ400 4.0" Pitman Arm	10
<b>Alignment Cambolt - Pair</b>	
20-65226 Eccentric Alignment Cambolt Kit - Front	7,8
20-65225 Eccentric Alignment Cambolt Kit - Rear	9

OPTIONS	Notes:
<b>Brakeline Options</b>	
7450 Stainless Brake Line Kit	
<b>Coil Spring Spacers - Pair - For use with Accessories</b>	
55496 .75" Coil Spacer - Aluminum-Pair	5
55415 1.5" Coil Spacer - Aluminum-Pair	2
<b>Control Arms - Pair</b>	
55100 Adj Upper Control Arms - Front	
55700 Adj Upper Control Arms - Rear	
55200 Boxed Lower Control Arms - Front	
55400 Boxed Lower Control Arms - Rear	
90-6048B Rplcmt Lwr Control Arm Bush Kit	6

OPTIONS	Notes:
<b>Driveline Options - 0"-4" Lift</b>	
4007 NP231 SYE T-Case Conversn Kit	2
4042 CV Style Driveshaft - Rear	2
<b>4 Link Rear Conversion</b>	
55800 4 Link Rear Conversion Kit	
<b>Steering Box Protector</b>	
55500 Steering Box Protector - TJ/ LJ	
<b>Steering Stabilizer</b>	
219505 Single Stabilizer - ES2000 Shock	
222579Z Single Stabilizer - Pro Runner Shock	
<b>Sway Bar Disconnects - 3"-5" Lift</b>	
55506 Sway Bar Disconnects - Front	

- (1) Use of a 35" x 12.50" tires will require wider replacement fender flares or steel flat fenders.
- (2) Driveline modifications may be required for height increases over 1.5" due to increased driveline angles. Transfer case SYE (Slip Yoke Eliminator) kit and CV rear drive shaft required for Long Arm Applications. Rubicon models will require CV drive shaft w flange adapter (not available from Pro Comp).
- (3) Vehicles with Auto Trans will require removal of front skid plate when using transfer case lowering hardware.
- (4) All ride height increases are approximate and will vary due to vehicle specification (Engine size, factory options, trail equipment, etc).
- (5) Coil spacer 55496 can be used to increase front ride height by .75".
- (6) Replacement Lower Control Arm Bushing kit 90-6048B.
- (7) Vehicle will require alignment after kit is installed.
- (8) Front cambolt kit 20-65226 is recommended for caster angle adjustments. In most cases, reducing positive caster to the minimum factory specification will reduce or eliminate the potential for steering wheel shimmy.
- (9) Rear cambolt kit 20-65225 can be used for tuning pinion angle for minor driveline vibration correction.
- (10) Installation of JTB403 track bar requires track bar drop bracket 55300 and drop Pitman arm YJ400.

## Jeep Wrangler TJ

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>Wrangler TJ</b>						
<b>4" LIFT Stage I Short Arm Kit</b>						
97-02	Front Coil Springs Rear Coil Springs Tubular Lower Control Arms Front Sway Bar Links Rear Track Bar Bracket Rear Sway Bar Links Related Brackets	<b>K3056B</b> Kit With ES Shocks OR <b>K3056BMX</b> Kit With MX6 Shocks	1 1 1 Plus 2 2 OR 2 2	55495B Kit Box 55497 Front Coils 55498 Rear Coils 324515 Front ES3000 Shocks 324509 Rear ES3000 Shocks MX6021 Front MX6 Shocks MX6023 Rear MX6 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 5 x 4.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	2 3 4 5 6 7 8 9
<b>Wrangler TJ - Automatic Transmission</b>						
<b>4" LIFT Long Arm Kit</b>						
97-02	Front Coil Springs Rear Coil Springs Lower Long Control Arms Adj Upper Control Arms Adj Front Track Bar Front Track Bar Bracket Drop Pitman Arm Front Sway Bar Disconnects Rear Sway Bar Links 4 Link Rear Conversion Related Brackets Removable Center Belly Pan	<b>K3088B</b> Kit With ES Shocks OR <b>K3088BP</b> Kit With Pro Runner Shocks OR <b>K3088BMX</b> Kit With MX6 Shocks	1 1 1 1 1 1 OR 1 Plus 2 2 OR 2 2 OR 2 2	55799B-1 Kit Box 55799B-2 Kit Box 55799B-3 Kit Box 55799B-4 Kit Box 55799B-5 Kit Box 55497 Front Coils 55498 Rear Coils 7450 Stainless Brake Lines 924515 Front ES9000 Shocks 924509 Rear ES9000 Shocks ZX2056 Front Pro Runner Shocks ZX2061 Rear Pro Runner Shocks MX6021 Front MX6 Shocks MX6106 Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 5 x 4.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 4 5 7

OPTIONS	Notes:
<b>Adjustable Track Bar - 2"-5" Lift</b>	
JTB400 Adjust. Track Bar (Dana 30)-Front	
JTB403 Adjust. Track Bar (Dana 44)-Front	10
JTB401 Adjustable Track Bar - Rear	
55300 Track Bar Drop Bracket - Front	10
<b>Steering Components</b>	
YJ400 4.0" Pitman Arm	10
<b>Alignment Cambolt - Pair</b>	
20-65226 Eccentric Alignment Cambolt Kit - Front	7,8
20-65225 Eccentric Alignment Cambolt Kit - Rear	9

OPTIONS	Notes:
<b>Brakeline Options</b>	
7450 Stainless Brake Line Kit	
<b>Coil Spring Spacers - Pair - For use with Accessories</b>	
55496 .75" Coil Spacer - Aluminum-Pair	5
55415 1.5" Coil Spacer - Aluminum-Pair	2
<b>Control Arms - Pair</b>	
55100 Adj Upper Control Arms - Front	
55700 Adj Upper Control Arms - Rear	
55200 Boxed Lower Control Arms - Front	
55400 Boxed Lower Control Arms - Rear	
90-6048B Rplcmt Lwr Control Arm Bush Kit	6

OPTIONS	Notes:
<b>Driveline Options - 0"-4" Lift</b>	
4007 NP231 SYE T-Case Conversn Kit	2
4042 CV Style Driveshaft - Rear	2
<b>4 Link Rear Conversion</b>	
55800 4 Link Rear Conversion Kit	
<b>Steering Box Protector</b>	
55500 Steering Box Protector - TJ/ LJ	
<b>Steering Stabilizer</b>	
219505 Single Stabilizer - ES2000 Shock	
222579Z Single Stabilizer - Pro Runner Shock	
<b>Sway Bar Disconnects - 3"-5" Lift</b>	
55506 Sway Bar Disconnects - Front	

JEEP

- (1) Use of a 35" x 12.50" tires will require wider replacement fender flares or steel flat fenders.
- (2) Driveline modifications may be required for height increases over 1.5" due to increased driveline angles. Transfer case SYE (Slip Yoke Eliminator) kit and CV rear drive shaft required for Long Arm Applications. Rubicon models will require CV drive shaft w flange adapter (not avail from Pro Comp).
- (3) Vehicles with Auto Trans will require removal of front skid plate when using transfer case lowering hardware.
- (4) All ride height increases are approximate and will vary due to vehicle specification (Engine size, factory options, trail equipment, etc).
- (5) Coil spacer 55496 can be used to increase front ride height by .75".
- (6) Replacement Lower Control Arm Bushing kit 90-6048B.
- (7) Vehicle will require alignment after kit is installed.
- (8) Front cambolt kit 20-65226 is recommended for caster angle adjustments. In most cases, reducing positive caster to the minimum factory specification will reduce or eliminate the potential for steering wheel shimmy.
- (9) Rear cambolt kit 20-65225 can be used for tuning pinion angle for minor driveline vibration correction.
- (10) Installation of JTB403 track bar requires track bar drop bracket 55300 and drop Pitman arm YJ400.

# SUSPENSION KITS

## Jeep Wrangler TJ

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>Wrangler TJ - 5 Speed Manual Trans</b>						
<b>4" LIFT Long Arm Kit</b>						
97-02	Front Coil Springs	<b>K3091B</b>	1	55798B-1 Kit Box	Max Tire Size 35" x 12.50"	1
	Rear Coil Springs	Kit With ES Shocks	1	55797B-2 Kit Box	Wheel Diameter 15" +	2
	Lower Long Control Arms	OR	1	55799B-3 Kit Box	Wheel Width 8" - 10"	4
	Adj Upper Control Arms	<b>K3091BP</b>	1	55799B-4 Kit Box	Backspace 3.25" - 4.5"	5
	Adj Front Track Bar	Kit With Pro Runner	1	55799B-5 Kit Box	Bolt Pattern 5 x 4.5"	7
	Front Track Bar Bracket	Shocks	1	55497 Front Coils	Bolt Code 65	
	Drop Pitman Arm	OR	1	55498 Rear Coils	Lug Nut Size 1/2"	
	Front Sway Bar Disconnects	<b>K3091BMX</b>	1	7450 Stainless Brake Lines	Lug Nut Kit PXA21183	
	Rear Sway Bar Links	Kit With MX6 Shocks	Plus			
	4 Link Rear Conversion		2	924515 Front ES9000 Shocks		
	Related Brackets		2	924509 Rear ES9000 Shocks		
	Removable Center Belly Pan		OR			
			2	ZX2056 Front Pro Runner Shocks		
			2	ZX2061 Rear Pro Runner Shocks		
			OR			
			2	MX6021 Front MX6 Shocks		
			2	MX6106 Rear MX6 Shocks		

OPTIONS	Notes:
<b>Adjustable Track Bar - 2"-5" Lift</b>	
JTB400 Adjust. Track Bar (Dana 30)-Front	
JTB403 Adjust. Track Bar (Dana 44)-Front	10
JTB401 Adjustable Track Bar - Rear	
55300 Track Bar Drop Bracket - Front	10
<b>Steering Components</b>	
YJ400 4.0" Pitman Arm	10
<b>Alignment Cambolt - Pair</b>	
20-65226 Eccentric Alignment Cambolt Kit - Front	7,8
20-65225 Eccentric Alignment Cambolt Kit - Rear	9

OPTIONS	Notes:
<b>Brakeline Options</b>	
7450 Stainless Brake Line Kit	
<b>Coil Spring Spacers - Pair - For use with Accessories</b>	
55496 .75" Coil Spacer - Aluminum-Pair	5
55415 1.5" Coil Spacer - Aluminum-Pair	2
<b>Control Arms - Pair</b>	
55100 Adj Upper Control Arms - Front	
55700 Adj Upper Control Arms - Rear	
55200 Boxed Lower Control Arms - Front	
55400 Boxed Lower Control Arms - Rear	
90-6048B Rplcmt Lwr Control Arm Bush Kit	6

OPTIONS	Notes:
<b>Driveline Options - 0"-4" Lift</b>	
4007 NP231 SYE T-Case Conversn Kit	2
4042 CV Style Driveshaft - Rear	2
<b>4 Link Rear Conversion</b>	
55800 4 Link Rear Conversion Kit	
<b>Steering Box Protector</b>	
55500 Steering Box Protector - TJ/ LJ	
<b>Steering Stabilizer</b>	
219505 Single Stabilizer - ES2000 Shock	
222579Z Single Stabilizer - Pro Runner Shock	
<b>Sway Bar Disconnects - 3"-5" Lift</b>	
55506 Sway Bar Disconnects - Front	

- (1) Use of a 35" x 12.50" tires will require wider replacement fender flares or steel flat fenders.
- (2) Driveline modifications may be required for height increases over 1.5" due to increased driveline angles. Transfer case SYE (Slip Yoke Eliminator) kit and CV rear drive shaft required for Long Arm Applications. Rubicon models will require CV drive shaft w flange adapter (not avail from Pro Comp).
- (3) Vehicles with Auto Trans will require removal of front skid plate when using transfer case lowering hardware.
- (4) All ride height increases are approximate and will vary due to vehicle specification (Engine size, factory options, trail equipment, etc).
- (5) Coil spacer 55496 can be used to increase front ride height by .75".
- (6) Replacement Lower Control Arm Bushing kit 90-6048B.
- (7) Vehicle will require alignment after kit is installed.
- (8) Front cambolt kit 20-65226 is recommended for caster angle adjustments. In most cases, reducing positive caster to the minimum factory specification will reduce or eliminate the potential for steering wheel shimmy.
- (9) Rear cambolt kit 20-65225 can be used for tuning pinion angle for minor driveline vibration correction.
- (10) Installation of JTB403 track bar requires track bar drop bracket 55300 and drop Pitman arm YJ400.

## Jeep Wrangler YJ

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>Wrangler YJ - Soft Top</b>						
<b>5" LIFT Coil Spring Conversion Kit</b>						
87-96	Front Coil Springs Rear Coil Springs Tubular Lower Control Arms Tubular Upper Control Arms Front Track Bar Bracket Drop Pitman Arm Front Sway Bar Links Rear Track Bar Bracket Rear Sway Bar Links Related Brackets Steering Stabilizer	<b>K3052B</b> Kit With ES Shocks OR <b>K3052BMX</b> Kit With MX6 Shocks	1 1 1 1 Plus 1 OR 2 2	55099B-1 Kit Box 55099B-2 Kit Box 55099B-3 Kit Box 55099B-4 Rear Coils 55099B-5 Kit Box 55099B-5 Front / Rear ES9000 Shocks MX6012 Front MX6 Shocks MX6070 Rear MX6 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 5 x 4.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 4 5
<b>4" LIFT</b>						
87-96	Front Leaf Springs Front U-Bolts Front Sway Bar Links Stainless Brake Lines Rear Leaf Springs Rear U-Bolts Related Brackets	<b>K3062B</b> Kit With ES Shocks OR <b>K3062BMX</b> Kit With MX6 Shocks	2 2 1 1 1 Plus 2 2 OR 2 2	51413 Front Leaf Spring - No Bushings 51423 Rear Leaf Spring - No Bushings 55089B Kit Box w/Bushings 50070 Rear U-Bolts 7425 Stainless Brake Lines YJ400 Drop Pitman Arm 329510 Front ES3000 Shocks 324509 Rear ES3000 Shocks MX6026 Front MX6 Shocks MX6027 Rear MX6 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 5 x 4.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 3 5
<b>2.5" LIFT</b>						
87-96	Front Leaf Springs Front U-Bolts Front Sway Bar Links Rear Leaf Springs Rear U-Bolts Related Brackets	<b>K3061B</b> Kit With ES Shocks OR <b>K3061BMX</b> Kit With MX6 Shocks	2 2 1 1 Plus 2 2 OR 2 2	51313 Front Leaf Spring - No Bushings 51323 Rear Leaf Spring - No Bushings 55089B Kit Box w/Bushings 50070 Rear U-Bolts 326510 Front ES3000 Shocks 322500 Rear ES3000 Shocks MX6013 Front MX6 Shocks MX6014 Rear MX6 Shocks	Max Tire Size 31" x 10.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 5 x 4.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 3 5

OPTIONS	Notes:
<b>Add-A-Leaf - Pair</b>	
13160 1.5" - 2.5" Add-a-Leaf	1,2
<b>Driveline Options 0"-4" Lift</b>	
4007 NP231 SYE T-Case Conversion Kit	4
4041 CV Style Driveshaft - Rear - 94-96	4
4040 CV Style Driveshaft - Rear - 87-93	4
55589 Transfer Case Lowering Kit	

OPTIONS	Notes:
<b>Brakeline Options</b>	
7425 YJ Brake Hose Kit - 4WD	
<b>Leaf Spring Bushing Kit - Set for 4 Springs</b>	
90-6026 Leaf Spring Bushing Kit	3
<b>Steering Box Brace Kit</b>	
55070B Steering Box Brace - Power Steering	
<b>Steering Components</b>	
YJ400 4.0" Pitman Arm - 4WD	

OPTIONS	Notes:
<b>Steering Stabilizer</b>	
219200 Single - ES2000 Shock K3061/K3062	
219201 Single - ES2000 Shock K3052/K3053	
<b>U-Bolt Kits</b>	
50060 Front Axle U-Bolt Kit - Dana 30	
50070 Rear Axle U-Bolt Kit - Dana 35	

- (1) Driveline modifications may be required for height increases over 1.5" due to increased driveline angles.
- (2) All ride height increases are approximate and will vary due to vehicle specification. (engine size, factory options, trail equipment, etc)
- (3) Leaf spring bushings are not installed in leaf springs. Leaf Spring Bushing kit 90-6026 is included in box kit 55089B.
- (4) Transfer Case slip yoke eliminator P/N 4007 and CV rear drive shaft required for 5" coil spring conversion - see options.
- (5) Vehicle will require alignment after kit is installed.

JEEP

# SUSPENSION KITS

## Jeep Cherokee XJ

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>Cherokee XJ - 2WD / 4WD</b>						
<b>3" LIFT</b>						
84-01	Front Coil Springs Tubular Lower Control Arms Front Track Bar Bracket Front Sway Bar Links Rear Add-A-Leafs Rear U-Bolts	<b>K3058B</b> Kit With ES Shocks OR <b>K3058BMX</b> Kit With MX6 Shocks	1 1 1 1 1 Plus 2 2 OR 2 2	55592 Front Coil Springs 55590B Kit Box 55597B Front Sway Bar Links 50050 Rear U-Bolts 13120 Rear Add-A-Leafs 324515 Front ES3000 Shocks 322500 Rear ES3000 Shocks MX6021 Front MX6 Shocks MX6034 Rear MX6 Shocks	Max Tire Size 31" x 10.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 5 x 4.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 3 4 5 6 8
<b>1.75" Poly Lift</b>						
84-01	Front Coil Spacers		1	PLJ09100 Front Coil Spacers	Max Tire Size 30" x 9.50" Wheel Diameter OE" + Wheel Width 7" - 10" Backspace 3.25" - 4.5" Bolt Pattern 5 x 4.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 5 8

OPTIONS	Notes:
Coil Spring Spacers - Pair - For use with Accessories	
55496 .75" Coil Spring Spacer - Aluminum	5,6
Control Arms - Pair	
55100 Adj Upper Control Arms - Front	
55200 Boxed Lower Control Arms - Front	
90-6039 Replacement Lwr Control Arm Bush Kit	7
Rear Leaf Spring - Single	
53111 3.5"-4.5" Rear Leaf Spring	5,6

OPTIONS	Notes:
Steering Stabilizer	
219200 Single Stabilizer - ES2000 Shock	
Track Bars Options - 2"-5" Lift	
JTB400 Adj Track Bar (Dana 30) - Front	
U-Bolt Kits	
50055 Rear Axle U-Bolt Kit - Dana 35	3
50050 Rear Axle U-Bolt Kit - Chrysler 8.25"	3

- (1) Driveline modifications may be required for height increases over 1.5" due to increased driveline angles.
- (3) Use 50055 for Dana 35 rear with 2.75" diameter axle. Use 50050 for Chrysler 8.25" rear with 3.25" diameter axle.
- (4) Vehicles equipped with light duty, double offset joint front driveshafts (rubber boot) must be replaced with constant velocity (CV) type if front driveline vibration occurs.
- (5) All ride height increases are approximate and will vary due to vehicle specifications. (engine size, factory options, trail equipment, etc)
- (6) Coil spacer 55496 can be used to increase front ride height by 1". Recommended when using rear leaf springs 53111.
- (7) Replacement Lower Control Arm Bushing kit 90-6039 - for 2) lower arms.
- (8) Vehicle will require alignment after kit is installed.

JEEP



## Jeep Grand Cherokee ZJ

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>Grand Cherokee - 2WD / 4WD</b>						
<b>3" LIFT</b>						
92-98	Front Coil Springs Rear Coil Springs Tubular Lower Control Arms Front Track Bar Bracket Front Sway Bar Links Rear Track Bar Bracket Related Brackets	<b>K3059B</b> Kit With ES Shocks OR <b>K3059BMX</b> Kit With MX6 Shocks	1 1 1 1 Plus 2 2 OR 2 2	55598 Front Coil Springs 55593 Rear Coil Springs 55591B Kit Box 55597B Front Sway Bar Links 324515 Front ES3000 Shocks 325409 Rear ES3000 Shocks MX6021 Front MX6 Shocks MX6032 Rear MX6 Shocks	Max Tire Size 31" x 10.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 5 x 4.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 4 5 8
<b>1.75" Poly Lift</b>						
84-01	Front Coil Spacers		1	PLJ09100 Front Coil Spacers	Max Tire Size 30" x 9.50" Wheel Diameter 15" + Wheel Width 7" - 10" Backspace 3.25" - 4.5" Bolt Pattern 5 x 4.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 5

OPTIONS	Notes:
Alignment Cambolts - Pair	
20-65226 Eccentric Alignment Cambolt Kit - Front	8
Control Arms - Pair	
55100 Adj Upper Control Arms - Front	
55200 Boxed Lower Control Arms - Front	
90-6048B Replacement Lwr Control Arm Bush Kit	7

OPTIONS	Notes:
Steering Stabilizer	
219200 Single Stabilizer - ES2000 Shock	
Track Bars Options - 2"-5" Lift	
JTB400 Adj Track Bar (Dana 30) - Front	

- (1) Driveline modifications may be required for height increases over 1.5" due to increased driveline angles.  
 (4) Vehicles equipped with light duty, double offset joint front driveshafts (rubber boot) must be replaced with a constant velocity (CV) type drive shaft if front driveline vibration occurs.  
 (5) All ride height increases are approximate and will vary due to vehicle specification. (engine size, factory options, trail equipment, etc)  
 (7) Replacement Lower Control Arm Bushing kit 90-6048B - for 4) lower arms.  
 (8) Vehicle will require alignment after kit is installed.

JEEP

# SUSPENSION KITS

## Jeep CJ

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>CJ w/Dana 44 Rear Axle</b>						
<b>4" LIFT</b>						
82-86	Front Leaf Springs Front U-Bolts Stainless Brake Lines Rear Leaf Springs Rear U-Bolts Related Brackets	<b>K3066</b> Kit With ES Shocks OR <b>K3066MX</b> Kit With MX6 Shocks	2 2 1 1 1 1 1 Plus 4 OR 4	51412 Front Leaf Spring 51422 Rear Leaf Spring 50010 Front U-Bolts 50030 Rear U-Bolts 7405 Stainless Brake Lines CJ400 Drop Pitman Arm 55076 T-Case Lowering Kit 324509 Front / Rear ES3000 Shocks MX6031 Front / Rear MX6 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 5 x 5.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 3
<b>CJ w/AMC 20 Rear Axle</b>						
82-86	Front Leaf Springs Front U-Bolts Stainless Brake Lines Rear Leaf Springs Rear U-Bolts Related Brackets	<b>K3064</b> Kit With ES Shocks OR <b>K3064BMX</b> Kit With MX6 Shocks	2 2 1 1 1 1 1 Plus 4 OR 4	51412 Front Leaf Spring 51422 Rear Leaf Spring 50010 Front U-Bolts 50020 Rear U-Bolts 7405 Stainless Brake Lines CJ400 Drop Pitman Arm 55076 T-Case Lowering Kit 324509 Front / Rear ES3000 Shocks MX6031 Front / Rear MX6 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 5 x 5.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 3
<b>CJ w/Dana 44 Rear Axle</b>						
<b>2.5" LIFT</b>						
82-86	Front Leaf Springs Front U-Bolts Stainless Brake Lines Rear Leaf Springs Rear U-Bolts Related Brackets	<b>K3065</b> Kit With ES Shocks OR <b>K3065MX</b> Kit With MX6 Shocks	2 2 1 1 Plus 2 2 OR 2 2	51212 Front Leaf Spring 51222 Rear Leaf Spring 50010 Front U-Bolts 50030 Rear U-Bolts 321500 Front ES3000 Shocks 322500 Rear ES3000 Shocks MX6010 Front MX6 Shocks MX6011 Rear MX6 Shocks	Max Tire Size 32" x 11.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 5 x 5.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 3
<b>CJ w/AMC 20 Rear Axle</b>						
82-86	Front Leaf Springs Front U-Bolts Stainless Brake Lines Rear Leaf Springs Rear U-Bolts Related Brackets	<b>K3063</b> Kit With ES Shocks OR <b>K3063MX</b> Kit With MX6 Shocks	2 2 1 1 Plus 2 2 OR 2 2	51212 Front Leaf Spring 51222 Rear Leaf Spring 50010 Front U-Bolts 50020 Rear U-Bolts 321500 Front ES3000 Shocks 322500 Rear ES3000 Shocks MX6010 Front MX6 Shocks MX6011 Rear MX6 Shocks	Max Tire Size 32" x 11.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 5 x 5.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 3

JEEP

OPTIONS	Notes:
Add-A-Leaf - Pair	
13120 1.5"-2.5" Add-A-Leaf 76-86 CJ	1,2
13170 1.5"-2.5" Add-A-Leaf 53-75 CJ/ DJ	1,2
<b>Brakeline Options</b>	
7405 CJ Brake Hose Kit - 4WD	
7410 Brake Hose Kit - 77-81 w/Disc Brakes	
<b>Driveline Options</b>	
55076 Transfer Case Lowering Kit - 76-86	1

OPTIONS	Notes:
<b>Steering Box Brace</b>	
55060B Box Brace - 76-86 CJ (Power Steering)	
<b>Steering Components</b>	
CJ400 4.0" Pitman Arm - 76-86 CJ (PS only)	
<b>Steering Stabilizer</b>	
220508 Single Stabilizer - ES2000 Shock	

OPTIONS	Notes:
<b>U-Bolt Kits</b>	
50010 Front Axle U-Bolt Kit - 72-86 (Dana 30)	
50040 Front Axle U-Bolt Kit - 53-71 (Dana 28)	
50020 Rear Axle U-Bolt Kit - 76-86 (AMC 20)	
50030 Rear Axle U-Bolt Kit - 69-75 (Dana 44)	
50020 Rear Axle U-Bolt Kit - 53-86 (AMC 20)	

- (1) Driveline modifications may be required for height increases over 1.5" due to increased driveline angles.  
 (2) All ride height increases are approximate and will vary due to vehicle specifications. (engine size, factory options, trail equipment, etc)  
 (3) Vehicle will require alignment after kit is installed.

## Jeep CJ

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>CJ w/Disk Brakes and AMC 20 Rear Axle</b>						
<b>4" LIFT</b>						
76-81	Front Leaf Springs Front U-Bolts Stainless Brake Lines Rear Leaf Springs Rear U-Bolts Related Brackets	<b>K3067</b> Kit With ES Shocks OR <b>K3067MX</b> Kit With MX6 Shocks	2 2 1 1 1 1 1 Plus 4 OR 4	51412 Front Leaf Spring 51422 Rear Leaf Spring 50010 Front U-Bolts 50020 Rear U-Bolts 7410 Stainless Brake Lines CJ400 Drop Pitman Arm 55076 T-Case Lowering Kit 324509 Front / Rear ES3000 Shocks MX6031 Front / Rear MX6 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 5 x 5.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 3
<b>CJ w/AMC 20 Rear Axle</b>						
76-81	Front Leaf Springs Front U-Bolts Stainless Brake Lines Rear Leaf Springs Rear U-Bolts Related Brackets	<b>K3068</b> Kit With ES Shocks OR <b>K3068MX</b> Kit With MX6 Shocks	2 2 1 1 1 1 Plus 4 OR 4	51412 Front Leaf Spring 51422 Rear Leaf Spring 50010 Front U-Bolts 50020 Rear U-Bolts CJ400 Drop Pitman Arm 55076 T-Case Lowering Kit 324509 Front / Rear ES3000 Shocks MX6031 Front / Rear MX6 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 5 x 5.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 3
<b>CJ w/AMC 20 Rear Axle</b>						
<b>2.5" LIFT</b>						
76-81	Front Leaf Springs Front U-Bolts Rear Leaf Springs Rear U-Bolts Related Brackets	<b>K3075</b> Kit With ES Shocks OR <b>K3075MX</b> Kit With MX6 Shocks	2 2 1 1 Plus 2 2 OR 2 2	51212 Front Leaf Spring 51222 Rear Leaf Spring 50010 Front U-Bolts 50020 Rear U-Bolts 319500 Front ES3000 Shocks 322500 Rear ES3000 Shocks MX6058 Front MX6 Shocks MX6010 Rear MX6 Shocks	Max Tire Size 32" x 11.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 5 x 5.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 3

OPTIONS	Notes:
<b>Add-A-Leaf - Pair</b>	
13120 1.5"-2.5" Add-A-Leaf 76-86 CJ	1,2
13170 1.5"-2.5" Add-A-Leaf 53-75 CJ/ DJ	1,2
<b>Brakeline Options</b>	
7405 CJ Brake Hose Kit - 4WD	
7410 Brake Hose Kit - 77-81 w/Disc Brakes	
<b>Driveline Options</b>	
55076 Transfer Case Lowering Kit - 76-86	1

OPTIONS	Notes:
<b>Steering Box Brace</b>	
55060B Box Brace - 76-86 CJ (Power Steering)	
<b>Steering Components</b>	
CJ400 4.0" Pitman Arm - 76-86 CJ (PS only)	
<b>Steering Stabilizer</b>	
220508 Single Stabilizer - ES2000 Shock	

OPTIONS	Notes:
<b>U-Bolt Kits</b>	
50010 Front Axle U-Bolt Kit - 72-86 (Dana 30)	
50040 Front Axle U-Bolt Kit - 53-71 (Dana 28)	
50020 Rear Axle U-Bolt Kit - 76-86 (AMC 20)	
50030 Rear Axle U-Bolt Kit - 69-75 (Dana 44)	
50020 Rear Axle U-Bolt Kit - 53-86 (AMC 20)	

JEEP

- (1) Driveline modifications may be required for height increases over 1.5" due to increased driveline angles.  
 (2) All ride height increases are approximate and will vary due to vehicle specifications. (engine size, factory options, trail equipment, etc)  
 (3) Vehicle will require alignment after kit is installed.

# SUSPENSION KITS

## Jeep CJ

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>CJ w/Dana 44 Rear Axle</b>						
<b>2.5" LIFT</b>						
72-75	Front Leaf Springs Front U-Bolts Rear Leaf Springs Rear U-Bolts Related Brackets	<b>K3069</b> Kit With ES Shocks OR <b>K3069MX</b> Kit With MX6 Shocks	2 2 1 1 Plus 4 OR 4	51213 Front Leaf Spring 51223 Rear Leaf Spring 50010 Front U-Bolts 50030 Rear U-Bolts 321500 Front / Rear ES3000 Shocks MX6030 Front / Rear MX6 Shocks	Max Tire Size 32" x 11.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 5 x 5.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 3
<b>2.5" LIFT</b>						
69-71	Front Leaf Springs Front U-Bolts Rear Leaf Springs Rear U-Bolts Related Brackets	<b>K3070</b> Kit With ES Shocks OR <b>K3070MX</b> Kit With MX6 Shocks	2 2 1 1 Plus 2 2 OR 4	51213 Front Leaf Spring 51223 Rear Leaf Spring 50040 Front U-Bolts 50030 Rear U-Bolts 320500 Front ES3000 Shocks 322500 Rear ES3000 Shocks MX6030 Front / Rear MX6 Shocks	Max Tire Size 32" x 11.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 5 x 5.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 3
<b>CJ w/AMC 20 Rear Axle</b>						
<b>2.5" LIFT</b>						
53-68	Front Leaf Springs Front U-Bolts Rear Leaf Springs Rear U-Bolts Related Brackets	<b>K3071</b> Kit With ES Shocks OR <b>K3071MX</b> Kit With MX6 Shocks	2 2 1 1 Plus 2 2 OR 4	51213 Front Leaf Spring 51223 Rear Leaf Spring 50040 Front U-Bolts 50020 Rear U-Bolts 320500 Front ES3000 Shocks 322500 Rear ES3000 Shocks MX6030 Front / Rear MX6 Shocks	Max Tire Size 32" x 11.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4.5" Bolt Pattern 5 x 5.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 2 3

JEEP

OPTIONS	Notes:
<b>Add-A-Leaf - Pair</b>	
13120 1.5"-2.5" Add-A-Leaf 76-86 CJ	1,2
13170 1.5"-2.5" Add-A-Leaf 53-75 CJ/ DJ	1,2
<b>Brakeline Options</b>	
7405 CJ Brake Hose Kit - 4WD	
7410 Brake Hose Kit - 77-81 w/Disc Brakes	
<b>Driveline Options</b>	
55076 Transfer Case Lowering Kit - 76-86	1

OPTIONS	Notes:
<b>Steering Box Brace</b>	
55060B Box Brace - 76-86 CJ (Power Steering)	
<b>Steering Components</b>	
CJ400 4.0" Pitman Arm - 76-86 CJ (PS only)	
<b>Steering Stabilizer</b>	
220508 Single Stabilizer - ES2000 Shock	

OPTIONS	Notes:
<b>U-Bolt Kits</b>	
50010 Front Axle U-Bolt Kit - 72-86 (Dana 30)	
50040 Front Axle U-Bolt Kit - 53-71 (Dana 28)	
50020 Rear Axle U-Bolt Kit - 76-86 (AMC 20)	
50030 Rear Axle U-Bolt Kit - 69-75 (Dana 44)	
50020 Rear Axle U-Bolt Kit - 53-86 (AMC 20)	

- (1) Driveline modifications may be required for height increases over 1.5" due to increased driveline angles.  
 (2) All ride height increases are approximate and will vary due to vehicle specifications. (engine size, factory options, trail equipment, etc)  
 (3) Vehicle will require alignment after kit is installed.

## TJ / LJ Wrangler — Right Hand Drive

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>Wrangler (TJ / LJ) Including RUBICON Kit - 4WD</b>						
<b>2" LIFT</b>						
97-06	Front Coil Springs Rear Coil Springs	<b>K3055</b> Kit With ES Shocks OR <b>K3055MX</b> Kit With MX6 Shocks	1 1 Plus 2 2 OR 2 2	55297 Front Coils 55298 Rear Coils 321515 Front ES3000 Shocks 321500 Rear ES3000 Shocks MX6093 Front MX6 Shocks MX6094 Rear MX6 Shocks	Max Tire Size 32" x 11.50" Wheel Diameter 15" + Wheel Width 7" - 8" Backspace 3.25" - 4.5" Bolt Pattern 5 x 4.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	2 4 7 8 9
<b>1.5" LIFT</b>						
97-06	Front Coil Spacers Rear Coil Spacers	<b>K3054</b> Kit With ES Shocks OR <b>K3054MX</b> Kit With MX6 Shocks	1 Plus 2 2 OR 2 2	55415 Front / Rear Coil Spacers 321515 Front ES3000 Shocks 321500 Rear ES3000 Shocks MX6028 Front MX6 Shocks MX6029 Rear MX6 Shocks	Max Tire Size 31" x 10.50" Wheel Diameter 15" + Wheel Width 7" - 8" Backspace 3.25" - 4.5" Bolt Pattern 5 x 4.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	2 4 7 8 9
<b>1.5" Level Lift</b>						
97-06	Front Coil Spacers Rear Coil Spacers		1	66150 Front / Rear Coil Spacers	Max Tire Size 31" x 10.50" Wheel Diameter 15" + Wheel Width 7" - 8" Backspace 3.25" - 4.5" Bolt Pattern 5 x 4.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	2 4 7 8 9
<b>1.75" Poly Lift</b>						
97-06	Coil Spacers		1	PLJ09100 Front or Rear Coil Spacers	Max Tire Size 31" x 10.50" Wheel Diameter 15" + Wheel Width 7" - 8" Backspace 3.25" - 4.5" Bolt Pattern 5 x 4.5" Bolt Code 65 Lug Nut Size 1/2" Lug Nut Kit PXA21183	2 4 7 8 9

- (2) Driveline modifications may be required due to increased driveline angles.
- (3) Vehicles with Auto Trans will require removal of front skid plate when using transfer case lowering hardware.
- (4) All ride height increases are approximate and will vary due to vehicle specification (Engine size, factory options, trail equipment, etc).
- (5) Coil spacer 55496 can be used to increase front ride height by .75".
- (6) Replacement Lower Control Arm Bushing kit 90-6048B.
- (7) Rear cambolt kit 20-65225 can be used for tuning pinion angle for minor driveline vibration correction.
- (8) Front cambolt kit 20-65226 can be used for tuning pinion angle and caster angle for minor steering vibration correction.
- (9) Vehicle will require alignment after kit is installed.

JEEP

# SUSPENSION KITS

## JK Wrangler — Right Hand Drive

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>Wrangler JK 2 Door Non-RUBICON - 4WD</b>						
<b>4" LIFT Stage I w/ Rear Spacers (Right Hand Drive)</b>						
07-16	Front Coil Springs Rear Coil Springs Extended Bump Stops Rear Track Bar Bracket Front Sway Bar Links Rear Sway Bar Links Related Brackets	<b>K3086BRH</b> Kit With ES Shocks	1 1 1 2 2	55717BRH Kit Box 55397 Front Coils 55217 Rear Coils 926511 Front ES9000 Shocks 926501 Rear ES9000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 9" Backspace 3.25" - 4.75" Bolt Pattern 5 x 5" Bolt Code 73 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 3 4 5 6 7 8
<b>4" LIFT Stage II (Right Hand Drive)</b>						
07-16	Front Coil Springs Rear Coil Springs Extended Bump Stops HD-X Lower Control Arms Adj Upper Control Arms Adj Front Track Bar Rear Track Bar Bracket Front Sway Bar Links Rear Sway Bar Links Related Brackets	<b>K3087BRH</b> Kit With ES Shocks	1 1 1 1 1 2 2	55727BRH-1 Kit Box 55727BRH-2 Kit Box 55397 Front Coils 55217 Rear Coils JTB402RH Adj Front Track Bar 926511 Front ES9000 Shocks 926501 Rear ES9000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 9" Backspace 3.25" - 4.75" Bolt Pattern 5 x 5" Bolt Code 73 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 3 4 5 6 7 8
<b>Wrangler JK All Models</b>						
<b>1.75" Poly Lift</b>						
07-16	Front Coil Spacers Rear Coil Spacers		1	PLF09137 Front / Rear Coil Spacers	Max Tire Size 33" x 11.50" Wheel Diameter 16" + Wheel Width 8" - 9" Backspace 3.25" - 4.75" Bolt Pattern 5 x 5" Bolt Code 73 Lug Nut Size 1/2" Lug Nut Kit PXA21183	3 6

JEEP

OPTIONS	Notes:
Adjustable Track Bar	
JTB402RH Adjustable Track Bar - Front	
Alignment Cambolt - Pair	
20-65227 Eccentric Alignment Cambolt Kit - Front	6
20-65228 Eccentric Alignment Cambolt Kit - Rear	5

OPTIONS	Notes:
Driveline Options - Front	
55827B Non-CV Driveshaft - 2/4 DR (0"-6" Lift)	1
55837B CV Driveshaft - 2/4 DR (0"-6" Lift)	1
Driveline Options - Rear	
55767B Non-CV Driveshaft - 4 DR (0"-6" Lift)	1
Steering Stabilizers	
220500 Single Kit - ES2000 Shock	

- (1) Driveline modifications may be required for height increases over 3.0" due to increased driveline angles.
- (3) All ride height increases are approximate and will vary due to vehicle specification (Engine size, factory options, trail equipment, etc).
- (4) Use of a 35" x 12.5" tire may require fender modification.
- (5) Vehicle will require alignment after kit is installed.
- (6) Front cambolt kit 20-65227 is recommended for caster angle adjustments. In most cases, reducing positive caster to the minimum factory specification will reduce or eliminate the potential for steering wheel shimmy.
- (7) Rear cambolt kit 20-65228 can be used for tuning pinion angle for minor driveline vibration correction.
- (8) 12-14 Jeep JK 2DR and 4DR models will require exhaust spacer kit 55746B or a replacement front driveshaft, p/n 55837B, for proper front driveshaft clearance for lift heights greater than 2.5".

## JK Wrangler — Right Hand Drive

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>Wrangler JK 4 DR All Models &amp; 2DR RUBICON - 4WD</b>						
<b>4" LIFT Stage II (Right Hand Drive)</b>						
07-16	Front Coil Springs Rear Coil Springs Extended Bump Stops HD-X Lower Control Arms Adj Upper Control Arms Adj Front Track Bar Rear Track Bar Bracket Front Sway Bar Links Rear Sway Bar Links Related Brackets	<b>K3090BRH</b> Kit With ES Shocks	1 1 1 1 1 2 2	55727BRH-1 Kit Box 55727BRH-2 Kit Box 55397 Front Coils 55207 Rear Coils JTB402RH Adj Front Track Bar 926511 Front ES9000 Shocks 926501 Rear ES9000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 18" + Wheel Width 8" - 9" Backspace 3.25" - 4.75" Bolt Pattern 5 x 5" Bolt Code 73 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 3 4 5 6 7 8
<b>Wrangler JK All Models Exc. RUBICON</b>						
<b>2.5" LIFT (Right Hand Drive)</b>						
07-16	Front Coil Springs Rear Coil Springs Related Brackets	<b>K3099BRH</b> Kit With ES Shocks	1 1 1 2 2	55728BRH Kit Box 55399 Front Coils 55207 Rear Coils 924510 Front ES9000 Shocks 924507 Rear ES9000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter OE" + Wheel Width 8" - 9" Backspace 3.25" - 4.75" Bolt Pattern 5 x 5" Bolt Code 73 Lug Nut Size 1/2" Lug Nut Kit PXA21183	1 3 4 5 6 7 8

OPTIONS	Notes:
Adjustable Track Bar	
JTB402RH Adjustable Track Bar - Front	
Alignment Cambolt - Pair	
20-65227 Eccentric Alignment Cambolt Kit - Front	6
20-65228 Eccentric Alignment Cambolt Kit - Rear	5

OPTIONS	Notes:
Driveline Options - Front	
55827B Non-CV Driveshaft - 2/4 DR (0"-6" Lift)	1
55837B CV Driveshaft - 2/4 DR (0"-6" Lift)	1
Driveline Options - Rear	
55767B Non-CV Driveshaft - 4 DR (0"-6" Lift)	1
Steering Stabilizers	
220500 Single Kit - ES2000 Shock	

- (1) Driveline modifications may be required for height increases over 3.0" due to increased driveline angles.
- (3) All ride height increases are approximate and will vary due to vehicle specification (Engine size, factory options, trail equipment, etc).
- (4) Use of a 35" x 12.5" tire may require fender modification.
- (5) Vehicle will require alignment after kit is installed.
- (6) Front cambolt kit 20-65227 is recommended for caster angle adjustments. In most cases, reducing positive caster to the minimum factory specification will reduce or eliminate the potential for steering wheel shimmy.
- (7) Rear cambolt kit 20-65228 can be used for tuning pinion angle for minor driveline vibration correction.
- (8) 12-13 Jeep JK 2DR and 4DR models will require a replacement front driveshaft p/n 55837B or an exhaust modification for proper front driveshaft clearance for lift heights greater than 2.5". Pro Comp offers replacement exhaust cross over, EXP55748B, or there are other exhaust options available.

JEEP

# SUSPENSION KITS

## Nissan Titan — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>Titan - 4WD</b>						
<b>6.0" LIFT</b>						
04-15	Steering Knuckles Drop Crossmembers Diff Drop Brackets Sway Bar Links Related Hardware Rear 3.0" Blocks Rear U-Bolts	<b>K6001B</b> Kit w/Front Strut Spacers and Rear ES Shocks OR <b>K6001BP</b> Kit w/Front strut Spacers and Rear Pro Runner Shocks OR <b>K6001BPS</b> Kit w/Front Stut Spacers and Front / Rear Pro Runner Shocks OR <b>K6001BPX</b> Kit w/Front MX2.75 Coilovers and Rear Pro Runner Shocks OR <b>K6001BMX</b> Kit w/Front MX2.75 Coilovers and Rear MX6 Shocks	1 1 1 Plus 1 OR 1 OR 1 2 OR 1 1 OR 1	59001B-1 Kit Box 59001B-2 Kit Box 59001B-3 Kit Box 59001B-4 Front Strut Spacers wRear ES9000 59001BP-4 Front Strut Spacers wRear Pro Runner Shocks 59001BP-4 Front Strut Spacers wRear Pro Runner Shocks ZX2110 Front Pro Runner SS Struts 59001BPX-4 Front MX2.75 Coilover wRear Pro Runner Shocks 59001BPX-5 Front MX2.75 Coilover wRear Pro Runner Shocks 59001BMX-4 Front MX2.75 Coilover wRear MX6 Shocks 59001BMX-5 Front MX2.75 Coilover wRear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 9.5" Backspace 4.25" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.25 Lug Nut Kit PXA21124	1 3 5 6
<b>1.5" Level Lift</b>						
04-15	Front Strut Spacers		1	64160 Front Strut Spacers	Max Tire Size 33" x 12.50" Wheel Diameter OE" + Wheel Width 8" - 9.5" Backspace 4.25" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	3 4 5
<b>2.0" Level Lift</b>						
04-07	Front Strut Spacers		1	64150 Front Strut Spacers	Max Tire Size 33" x 12.50" Wheel Diameter OE" + Wheel Width 8" - 9.5" Backspace 4.25" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.25 Lug Nut Kit PXA21124	3 4 5
<b>2.0" Poly Lift</b>						
04-07	Front Strut Spacers		1	PLN09104 Front Strut Spacers	Max Tire Size 33" x 12.50" Wheel Diameter OE" + Wheel Width 8" - 9.5" Backspace 4.25" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.25 Lug Nut Kit PXA21124	3 4 5

NISSAN

OPTIONS	Notes:
<b>Driveline Options</b>	
59003B Shim Kit for 2 Pc Rr Driveshaft	2
<b>Front Coil Over Upgrade</b>	
59002BMX Stage 1 to Stage 2 Conversion - Titan	

OPTIONS	Notes:
<b>Rear Traction Bars</b>	
72300B Rear Traction Bars - Pair - Titan	
79090B Rear Traction Bar Mounting Kit - Titan	

OPTIONS	Notes:
<b>Level Lift</b>	
64151 Rear Block Kit 1" (04-12) 2/4 WD	
<b>Add-A-laef</b>	
57096b-5 Rear Add-A-Leaf 1.5"	6

- (1) OE wheels can be used. 08-14 models require 18" or larger diameter wheels. 04-07 models require 17" or larger diameter wheels.
- (2) Vehicles with 2 Pc rear driveshaft shim kit 59003B may be required to reduce launch vibration and/or high speed driveline vibrations.
- (3) Vehicle will require alignment after Kit installation.
- (4) In order to install Max Tire Size recommendations, it may be required to retain the factory wheel width/ backspacing/ offset. Some applications may require the removal of the front inner mud flaps and/or other fender modifications. Its up to the installer to verify tire fitment and clearance for safe operation of vehicle.
- (5) Not for use on Pro 4X Model. Front Pro Runner ZX2011/ZX2110 not for Pro 4X.
- (6) Pro 4X Model may require an Add-A-Leaf to increase rear ride height.



## Nissan Titan — 2WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>Titan - 2WD</b>						
<b>6.0" LIFT</b>						
04-15	Steering Knuckles Drop Crossmembers Diff Drop Brackets Sway Bar Links Related Hardware Rear 3.0" Blocks Rear U-Bolts	<b>K6002B</b> Kit w/Front Strut Spacers and Rear ES Shocks OR <b>K6002BP</b> Kit w/Front Strut Spacers and Rear Pro Runner Shocks OR <b>K6002BPS</b> Kit w/front Strut Spacers and Front /Rear Pro Runner Shocks OR <b>K6002BPX</b> Kit w/Front MX2.75 Coilovers and Rear Pro Runner Shocks OR <b>K6002BMX</b> Kit w/Front MX2.75 Coilovers and Rear MX6 Shocks	1 1 1 Plus 1 OR 1 OR 1 2 OR 1 1 OR 1	59004B-1 Kit Box 59001B-2 Kit Box 59001B-3 Kit Box 59004B-4 Front Strut Spacers w/Rear ES9000 59004BP-4 Front Strut Spacers w/Rear Pro Runner Shocks 59004BP-4 Front Strut Spacers w/Rear Pro Runner Shocks ZX2110 Front Pro Runner SS Struts 59004BPX-4 Front MX2.75 Coilover w/Rear Pro Runner Shocks 59004BPX-5 Front MX2.75 Coilover w/Rear Pro Runner Shocks 59001BMX-4 Front MX2.75 Coilover w/Rear MX6 Shocks 59001BMX-5 Front MX2.75 Coilover w/Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 9.5" Wheel Backspace 4.25" - 5" Wheel Bolt Pattern 6 x 5.5" Wheel Bolt Code 83 Lug Nut Size 12mm x 1.25 Lug Nut Kit PXA21124	1 3 5 6
<b>1.5" Level Lift</b>						
04-15	Front Strut Spacers		1	64160 Front Strut Spacers	Max Tire Size 33" x 12.50" Wheel Diameter OE" + Wheel Width 8" - 9.5" Backspace 4.25" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.25 Lug Nut Kit PXA21124	3 4 5
<b>2.0" Level Lift</b>						
04-07	Front Strut Spacers		1	64150 Front Strut Spacers	Max Tire Size 33" x 12.50" Wheel Diameter OE" + Wheel Width 8" - 9.5" Backspace 4.25" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.25 Lug Nut Kit PXA21124	3 4 5
<b>2.0" Poly Lift</b>						
04-07	Front Strut Spacers		1	PLN09104 Front Strut Spacers	Max Tire Size 33" x 12.50" Wheel Diameter OE" + Wheel Width 8" - 9.5" Backspace 4.25" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.25 Lug Nut Kit PXA21124	3 4 5

NISSAN

OPTIONS	Notes:
<b>Driveline Options</b>	
59003B Shim Kit for 2 Pc Rr Driveshaft	2
<b>Front Coil Over Upgrade</b>	
59002BMX Stage 1 to Stage 2 Conversion - Titan	

OPTIONS	Notes:
<b>Rear Traction Bars</b>	
72300B Rear Traction Bars - Pair - Titan	
79090B Rear Traction Bar Mounting Kit - Titan	

OPTIONS	Notes:
<b>Level Lift</b>	
64151 Rear Block Kit 1" (04-12) 2/4 WD	
<b>Add-A-laef</b>	
57096b-5 Rear Add-A-Leaf 1.5"	6

- (1) OE wheels can be used. 08-14 models require 18" or larger diameter wheels. 04-07 models require 17" or larger diameter wheels.
- (2) Vehicles with 2 Pc rear driveshaft shim kit 59003B may be required to reduce launch vibration and/or high speed driveline vibrations.
- (3) Vehicle will require alignment after Kit installation.
- (4) In order to install Max Tire Size recommendations, it may be required to retain the factory wheel width/ backspacing/ offset. Some applications may require the removal of the front inner mud flaps and/or other fender modifications. Its up to the installer to verify tire fitment and clearance for safe operation of vehicle.
- (5) Not for use on Pro 4X Model. Front Pro Runner ZX2011/ZX2110 not for Pro 4X.
- (6) Pro 4X Model may require an Add-A-Leaf to increase rear ride height.

# SUSPENSION KITS

## Toyota Hilux/ Vigo

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>Hilux / Vigo</b>						
<b>6.0" LIFT</b>						
05-14	Steering Knuckles Drop Crossmembers Diff Drop Brackets Sway Bar Drops Related Hardware Rear 2.5" Blocks Rear U-Bolts Rear Add-A-Leafs	<b>K5084B</b>	1 1 1 1 Plus 1	57597B-1 Kit Box 57597B-2 Kit Box 57597B-3 Kit Box 13120 Add-A-Leaf 57597B-4 Front Strut Spacers w/Rear ES9000 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 17" + Wheel Width 7" - 9" Backspace 4" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	1 2 3
<b>3.0" LIFT</b>						
05-14	Front Coil Springs Front Spring Seat Shocks Differential Mount Spacers Sway Bar Brackets Related Hardware Rear 1.5" Blocks Rear U-Bolts	<b>K5083B</b>	1 1 2 2	57497 Front Coil Springs 58075 Rear Block Kit w/U-Bolts 622054 ES6000 Spring Seat Shocks 923504 ES9000 Rear Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 16" + Wheel Width 7" - 8" Backspace 3.25" - 4.5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	1 2
<b>3.0" Level Lift Nitro Kit</b>						
05-14	Front Strut Spacers Differential Mount Spacers Related Hardware 1" Rear Blocks Rear U-Bolts		1	65205K Front Strut Spacers Front Diff Spacers Rear Blocks w/ U-Bolts	Max Tire Size 32" x 11.50" Wheel Diameter 16" + Wheel Width 8" - 9" Backspace 4" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	2
<b>2.25" Level Lift</b>						
05-14	Front Strut Spacers Differential Mount Spacers Related Hardware		1	65205 Front Strut Spacers Front Diff Spacers	Max Tire Size 32" x 11.50" Wheel Diameter OE" + Wheel Width 7" - 8" Backspace 3.25" - 4.5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	2

- (1) OE wheels will not fit . 05-13 models require 17" or larger diameter wheels.
- (2) Vehicle will require alignment after kit is installed.
- (3) Use of maximum tire size recommendation may require the removal of the front inner fender mud flaps and/or other fender modifications.

## Toyota Tacoma — 4WD/ 2WD Pre Runner

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes	
<b>Tacoma w/Vehicle Stability Control (VSC) - 4WD / 2WD Pre Runner</b>							
<b>6.0" LIFT</b>							
2016	Steering Knuckles Drop Crossmembers Diff Drop Brackets Sway Bar Drops Related Hardware Rear 2.5" Blocks Rear U-Bolts Rear Add-A-Leafs	<b>K5089B</b> Kit W/ Front Strut Spacers and Rear ES Shocks OR <b>K5089BP</b> Kit W/ Front Strut Spacers and Rear Pro Runner Shocks OR <b>K5089BPS</b> Kit W/ Front Strut Spacers and Front / Rear Pro Runner Shocks OR <b>K5089BPX</b> Kit W/ Front MX2.75 Coil-overs and Rear Pro Runner Shocks	1 1 1 1 Plus 1 OR 1 OR 1 2 OR 1 1	57397B-1 57396B-2 57397B-3 13120 57096B-4 57096BP-4 57096BP-4 ZX2080 57096BPX-4 57096BPX-5	Kit Box Kit Box Kit Box Kit Box Front Strut Spacers W/ Rear ES9000 Shocks Front Strut Spacers W/ Rear Pro Runner Shocks Front Strut Spacers W/ Rear Pro Runner Shocks Front Pro Runner SS Struts Front MX2.75 Coil-over W/ Rear Pro Runner Shocks Front MX2.75 Coil-over W/ Rear Pro Runner Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 18" + Wheel Width 8" - 9" Backspace 4" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	2 3 4 5 6

- (2) OE wheels will not fit . 09-16 VSC models require 18" or larger diameter wheels.
- (3) Use of maximum tire size recommendation may require the removal of the front inner fender mud flaps and/or other fender modications.
- (4) Use of transmission crossmember kit 57091 may be required for vehicles experiencing driveline vibration that cannot be corrected by supplied spacers.
- (5) Vehicle will require alignment after kit is installed.
- (6) Excludes TRD PRO Off-Road Suspension Package

# Toyota Tacoma — 4WD/ 2WD Pre Runner

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes	
<b>Tacoma w/Vehicle Stability Control (VSC) - 4WD / 2WD Pre Runner</b>							
<b>6.0" LIFT</b>							
12-15	Steering Knuckles Drop Crossmembers Diff Drop Brackets Sway Bar Drops Related Hardware Rear 2.5" Blocks Rear U-Bolts Rear Add-A-Leafs	<b>K5080B</b> Kit w/Front Strut Spacers and Rear ES Shocks OR <b>K5080BP</b> Kit w/Front Strut Spacers and Rear Pro Runner Shocks OR <b>K5080BPS</b> Kit w/Front Strut Spacers and Front / Rear Pro Runner Shocks OR <b>K5080BPX</b> Kit w/Front MX2.75 Coilovers and Rear Pro Runner Shocks OR <b>K5080BMX</b> Kit w/Front MX2.75 Coilovers and Rear MX6 Shocks	1 1 1 1 Plus 1 OR 1 OR 1 2 OR 1 1 OR 1 1	57396B-1 57396B-2 57096B-3 13120 57096B-4 57096BP-4 57096BP-4 ZX2080 57096BPX-4 57096BPX-5 57096BMX-4 57096BMX-5	Kit Box Kit Box Kit Box Add-A-Leaf Front Strut Spacers w/Rear ES9000 Shocks Front Strut Spacers w/Rear Pro Runner Shocks Front Strut Spacers w/Rear Pro Runner Shocks Front Pro Runner SS Struts Front MX2.75 Coilover w/Rear Pro Runner Shocks Front MX2.75 Coilover w/Rear Pro Runner Shocks Front MX2.75 Coilover w/Rear MX6 Shocks Front MX2.75 Coilover w/Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 18" + Wheel Width 8" - 9" Backspace 4" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	2 3 4 5

<b>Tacoma w/Vehicle Stability Control (VSC) - 4WD / 2WD Pre Runner</b>							
<b>6.0" LIFT</b>							
05-11	Steering Knuckles Drop Crossmembers Diff Drop Brackets Sway Bar Drops Related Hardware Rear 2.5" Blocks Rear U-Bolts Rear Add-A-Leafs	<b>K5073B</b> Kit w/Front Strut Spacers and Rear ES Shocks <b>K5073BP</b> Kit w/Front Strut Spacers and Rear Pro Runner Shocks OR <b>K5073BPS</b> Kit w/Front Strut Spacers and Front / Rear Pro Runner Shocks OR <b>K5073BPX</b> Kit w/Front MX2.75 Coilovers and Rear Pro Runner Shocks OR <b>K5073BMX</b> Kit w/Front MX2.75 Coilovers and Rear MX6 Shocks	1 1 1 1 Plus 1 OR 1 OR 1 2 OR 1 1 OR 1 1	57396B-1 57396B-2 57096B-3 57096B-5 57096B-4 57096BP-4 57096BP-4 ZX2080 57096BPX-4 57096BPX-5 57096BMX-4 57096BMX-5	Kit Box Kit Box Kit Box Kit Box Front Strut Spacers w/Rear ES9000 Shocks Front Strut Spacers w/Rear Pro Runner Shocks Front Strut Spacers w/Rear Pro Runner Shocks Front Pro Runner SS Struts Front MX2.75 Coilover w/Rear Pro Runner Shocks Front MX2.75 Coilover w/Rear Pro Runner Shocks Front MX2.75 Coilover w/Rear MX6 Shocks Front MX2.75 Coilover w/Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 18" + Wheel Width 8" - 9" Backspace 4" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	1 2 3 4 5

OPTIONS	Notes:
Driveline Options	
57091B Transmission Drop Cross Member	5
Front Coil Over Upgrade 6" Pro Comp Kit only	
57097BMX Stage 1 to Stage 2 Conversion Kit	
Front Skid Plate 6" Pro Comp Kit only	
57196 Stainless Steel Skid Plate	

OPTIONS	Notes:
Rear Traction Bars 6" Pro Comp Kit only	
72500B Rear Traction Bars - Pair	
72083B Rear Traction Bar Mounting Kit	
Rear Add-A-Leaf - Pair	
13120 1.5" Rear Add-A-Leaf (short)	
57096B-5 1.5"-2" Rear Add-A-Leaf (long)	
Rear Block Kit	
58075 1.5" Rear Block Kit w/ U-Bolts	

OPTIONS	Notes:
Carrier Bearing Support (2WD Pre Runner)	
91-9403B Reinforcement Bracket Kit	
Level Lift Kit	
65151 1" Rear Block Kit w/ U-Bolts	
Upper Control Arm	
57002B Uniball Upper Arm - Pair	

- (1) OE wheels will not fit. 05-08 Non-VSC models require 17" or larger diameter wheels.
- (2) OE wheels will not fit. 09-14 VSC models require 18" or larger diameter wheels.
- (3) Use of maximum tire size recommendation may require the removal of the front inner fender mud flaps and/or other fender modifications.
- (4) Use of transmission crossmember kit 57091 may be required for vehicles experiencing driveline vibration that cannot be corrected by supplied spacers.
- (5) Vehicle will require alignment after kit is installed.

## Toyota Tacoma — 4WD/ 2WD Pre Runner

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes	
<b>Tacoma W/O Vehicle Stability Control (No VSC) - 4WD / 2WD Pre Runner</b>							
<b>6.0" LIFT</b>							
05-08	Steering Knuckles Drop Crossmembers Diff Drop Brackets Sway Bar Drops Related Hardware Rear 2.5" Blocks Rear U-Bolts Rear Add-A-Leafs	<b>K5066B</b> Kit w/Front Strut Spacers and Rear ES Shocks OR <b>K5066BP</b> Kit w/Front Strut Spacers and Rear Pro Runner Shocks OR <b>K5066BPS</b> Kit w/Front Strut Spacers and Front / Rear Pro Runner Shocks OR <b>K5066BPX</b> Kit w/Front MX2.75 Coilovers and Rear Pro Runner Shocks OR <b>K5066BMX</b> Kit w/Front MX2.75 Coilovers and Rear MX6 Shocks	1 1 1 1 Plus 1 OR 1 OR 1 OR 1 OR 1 OR 1	57096B-1 57096B-2 57096B-3 57096B-5 57096B-4 57096BP-4 57096BP-4 ZX2080 57096BPX-4 57096BPX-5 57096BMX-4 57096BMX-5	Kit Box Kit Box Kit Box Kit Box Front Strut Spacers w/Rear ES9000 Shocks Front Strut Spacers w/Rear Pro Runner Shocks Front Strut Spacers w/Rear Pro Runner Shocks Front Pro Runner SS Struts Front MX2.75 Coilover w/Rear Pro Runner Shocks Front MX2.75 Coilover w/Rear Pro Runner Shocks Front MX2.75 Coilover w/Rear MX6 Shocks Front MX2.75 Coilover w/Rear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 17" + Wheel Width 8" - 9" Backspace 4" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	1 3 4 5
<b>Tacoma - 4WD / 2WD Pre Runner</b>							
<b>3.0" LIFT</b>							
05-16	Front Coil Springs Front Spring Seat Shocks Differential Mount Spacers Sway Bar Brackets Related Hardware Rear 1.5" Blocks Rear U-Bolts	<b>K5081B</b>	1 1 2 2	57491 58075 622053 925518	Front Coil Springs Rear Block Kit w/U-Bolts ES6000 Spring Seat Shocks ES9000 Rear Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 9" Backspace 4" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	3 5 6
<b>3.0" LIFT</b>							
05-11	Front Coil Springs Front Spring Seat Shocks Differential Mount Spacers Sway Bar Brackets Related Hardware Rear Add-A-Leafs	<b>K5075B</b>	1 1 2 2	57491 57096B-5 622053 925518	Front Coil Springs Rear Add-A-Leafs ES6000 Spring Seat Shocks ES9000 Rear Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 9" Backspace 4" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	3 5 6

OPTIONS	Notes:
<b>Driveline Options</b>	
57091B Transmission Drop Cross Member	5
<b>Front Coil Over Upgrade 6" Pro Comp Kit only</b>	
57097BMX Stage 1 to Stage 2 Conversion Kit	
<b>Front Skid Plate 6" Pro Comp Kit only</b>	
57196 Stainless Steel Skid Plate	

OPTIONS	Notes:
<b>Rear Traction Bars 6" Pro Comp Kit only</b>	
72500B Rear Traction Bars - Pair	
72083B Rear Traction Bar Mounting Kit	
<b>Rear Add-A-Leaf - Pair</b>	
13120 1.5" Rear Add-A-Leaf (short)	
57096B-5 1.5"-2" Rear Add-A-Leaf (long)	
<b>Rear Block Kit</b>	
58075 1.5" Rear Block Kit w/ U-Bolts	

OPTIONS	Notes:
<b>Carrier Bearing Support (2WD Pre Runner)</b>	
91-9403B Reinforcement Bracket Kit	
<b>Level Lift Kit</b>	
65151 1" Rear Block Kit w/ U-Bolts	
<b>Upper Control Arm</b>	
57002B Uniball Upper Arm - Pair	

- (1) OE wheels will not fit . 05-08 Non-VSC models require 17" or larger diameter wheels.
- (2) OE wheels will not fit . 09-14 VSC models require 18" or larger diameter wheels.
- (3) Use of maximum tire size recommendation may require the removal of the front inner fender mud flaps and/or other fender modifications.
- (4) Use of transmission crossmember kit 57091 may be required for vehicles experiencing driveline vibration that cannot be corrected by supplied spacers.
- (5) Vehicle will require alignment after kit is installed.
- (6) Excludes 2014-15 TRD Off Road Suspension package.

# SUSPENSION KITS

## Toyota Tacoma — 4WD/ 2WD Pre Runner

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>Tacoma - 4WD / 2WD Pre Runner</b>						
<b>3.0" Level Lift Nitro Kit</b>						
05-16	Front Strut Spacers Diff / Skid plate spacers Related Hardware Rear 1.0" Blocks Rear U-Bolts		1	65205K Front Strut Spacers Rear Blocks w/U-Bolts	Max Tire Size 33" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 9" Backspace 4" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	3 5 6
<b>2.5" LIFT - Uniball Upper Arms / Black Series Coil Overs</b>						
05-16	Uniball Upper A Arms Black Series Front Coil Over Black Series 2.0 rear shocks	57102K Kit W/ Uniball Upper A Arms Black Series Front Coil Over and Black Series 2.0 rear shocks	1 2 2	57002B Uniball Upper A Arms ZX4080 P2.75 Coilover ZX3012 P2 Series shock	Max Tire Size 33" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 9" Backspace 4" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	3 5
<b>2.5" LIFT - Uniball Upper Arms / Pro Runner Struts</b>						
05-16	Uniball Upper A Arms Pro Runner SS Monotube Front Struts Pro Runner rear shocks	57202K Kit W/ Uniball Upper A Arms Front / Rear Pro Runner Shocks	1 2 2	57002B Uniball Upper A Arms ZX2080 Pro Runner SS Monotube Strut ZX2012 Pro Runner Monotube Shock	Max Tire Size 33" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 9" Backspace 4" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	3 5
<b>2.25" Level Lift</b>						
05-16	Front Strut Spacers Diff Spacer		1	65205 Front Strut Spacers	Max Tire Size 32" x 11.50" Wheel Diameter 16" + Wheel Width 8" - 9" Backspace 4" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	3 5 6
<b>2.5" Poly Lift</b>						
05-16	Front Strut Spacers		1	PLT09116 Front Strut Spacers	Max Tire Size 33" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 9" Backspace 4" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	3 5 6
<b>Tacoma - 2WD 5 Lug</b>						
<b>2.75" Level Lift Nitro Kit</b>						
05-15	Front Strut Spacers Rear Add-A-Leafs Rear U-Bolts Related Hardware		1	65660K Front Strut Spacers Rear Add-A-Leaf	Max Tire Size 31" x 11.50" Wheel Diameter 16" + Wheel Width 8" - 9" Backspace 4" - 5" Bolt Pattern 5 x 4.5 Bolt Code 65 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	3 5

### OPTIONS

### Notes:

Rear Add-A-Leaf - Pair

13120 1.5" Rear Add-A-Leaf (short)

57096B-5 1.5"-2" Rear Add-A-Leaf (long)

### OPTIONS

### Notes:

Level Lift

65151 Rear Block Kit w/U-Bolts 1.0" (95-14) 2/4WD 5-6 Lug

Rear Block Kit

58075 1.5" Rear Block Kit w/ U-Bolts

(3) Use of maximum tire size recommendation may require the removal of the front inner fender mud flaps and/or other fender modifications.

(5) Vehicle will require alignment after kit is installed. (6) Excludes 2015 TRD PRO Off Road Suspension package.

## Toyota Tacoma — 4WD/ 2WD Pre Runner

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>Tacoma - 4WD / 2WD Pre Runner</b>						
<b>4.0" LIFT</b>						
96-04	Steering Knuckle Spacers Drop Crossmembers Diff Drop Brackets Sway Bar Drops Power Steering lines Related Hardware Rear 3.5" Blocks Rear U-Bolts	<b>K5050B</b> Kit w/ES Shocks OR <b>K5050BMX</b> Kit w/Front ES and Rear MX6 Shocks	1 1 1 1 Plus 2 2 OR 2 2	57095B-1 Kit Box 57095B-2 Kit Box 57589 Rear Block Kit 7213 Stainless Brake Lines 618053 Front ES6000 Spring Seat Shocks 326006 Rear ES3000 Shocks 618053 Front ES6000 Spring Seat Shocks MX6084 Rear MX6 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 7" - 8" Backspace 3.25" - 4.5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	1 2
<b>2.5" Level Lift</b>						
96-04	Front Strut Spacers Front Diff Spacers Related Hardware		1	65170 Front Strut Spacers Front Diff Spacers	Max Tire Size 32" x 11.50" Wheel Diameter OE" + Wheel Width 7" - 8" Backspace 3.25" - 4.5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	2
<b>2.0" Level Lift</b>						
96-04	Front Strut Spacers Front Diff Spacers Related Hardware		1	65200 Front Strut Spacers Front Diff Spacers	Max Tire Size 32" x 11.50" Wheel Diameter OE" + Wheel Width 7" - 8" Backspace 3.25" - 4.5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	2
<b>2.5" Poly Lift</b>						
96-04	Front Strut Spacers		1	PLT09103 Front Strut Spacers	Max Tire Size 32" x 11.50" Wheel Diameter OE" + Wheel Width 7" - 8" Backspace 3.25" - 4.5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	2

OPTIONS	Notes:
Front Skid Plate	
57195 Stainless Steel Skid Plate	
Rear Add-A-Leaf - Pair	
13120 1.5"-2.5" Rear Add-A-Leaf	
Rear Traction Bars	
71000B Rear Traction Bars - Pair	
77182B Rear Traction Bar Mounting Kit	
Level Lift	
65151 Rear Block Kt w/U-Bolts 1.0" (95-14) 2/4WD	

- (1) Use of a 33" x 12.5" tire may require the removal of the front inner fender mud flaps and/or other fender modifications.  
 (2) Vehicle will require alignment after kit is installed.

# SUSPENSION KITS

## Toyota Tundra — 4WD/ 2WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>Tundra - 4WD / 2WD</b>						
<b>4.0" LONG TRAVEL KIT</b>						
07-16	Upper / Lower Arms Tie Rod Ends Sway bar brackets / Links Front Brake Lines Rear Wheel Spacers Rear Brake Lines Rear Shackles Front Skid Plate Front Axles Rear Spring Packs Front Coil Over Shocks Reservoir Rear Shocks	<b>K5150B</b> Performance Long Travel System with Internal Bypass Reservoir Front Coil Over Shocks Internal Bypass Reservoir Rear Shocks	1 1 1 1 1 1 2 2 2	57086BMX-1 Kit Box 57086BMX-2 Kit Box 57086BMX-3 Kit Box 57086BMX-4 Kit Box 57086BMX-5 Kit Box 57086BMX-6 Kit Box 31223 Rear Spring Packs ZX5078 Internal Bypass Reservoir Coil Over Shocks ZX5024 Internal Bypass Reservoir Rear Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 18" + Wheel Width 8" - 9" Backspace 4" - 6" Bolt Pattern 5 x 150mm Bolt Code 55 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26143	2 3 4 9
<div style="border: 1px solid black; padding: 5px; width: fit-content; margin: 0 auto;">                     Due to the increase in track width and wheel travel, fender modification is required for clearance of 35" tires. See Options for Wide Fender kits for 2014-16 model years                 </div>						
<b>7.0" LIFT</b>						
07-16	"Drop Crossmembers Steering Knuckles Bump Stop Extensions Diff Drop Brackets Front Preload Spacers Sway Bar DropsRelated Hardware Rear 3" Blocks Rear U-Bolts Rear Add-A-Leafs"	<b>K5085B</b> Kit W/ Front Strut Spacers and Rear ES Shocks	1 1 1 1 Plus 1	57048B-1 Kit Box 57048B-2 Kit Box 57048B-3 Kit Box 57096B-5 Kit Box 90-4642B Pre load Spacers 57048B-4 Front Strut Spacers W/ Rear ES9000 Shocks	Max Tire Size 37" x 12.50" Wheel Diameter 18" + Wheel Width 8" - 9" Wheel 5.75" - 6" Backspace 5 x 150mm Wheel Bolt 55 Pattern 14mm x 1.5 Wheel Bolt Code PXA26143 Lug Nut Size Lug Nut Kit	1 2 3 4 7 8

TOYOTA

OPTIONS	Notes:
Front Coil Over Upgrade	
57057BMX Stage 1 to Stage 2 Conversion Kit	
Front Skid Plate - K5069 / K5079	
57197 Stainless Steel Skid Plate (07-14)	

OPTIONS	Notes:
Rear Traction Bars	
72500B Rear Traction Bars - Pair	
72077B Rear Traction Bar Mounting Kit	

OPTIONS	Notes:
Upper Control Arm	
57001B Uniball Upper Arm - Pair	
Wide Fender Kit (14-16 models only)	
57087 Front Kit	
57088 Rear Kit	

- |  |  |
|--|--|
| <ul style="list-style-type: none"> <li>(1) OE wheels will not fit 07-16 models require 18" wheels with up to 5.5" backspace or 20" wheels with up to 6" backspace.</li> <li>(2) Use of a 35" x 12.5" tire may require the removal of the front inner fender mud flaps and / or other fender modifications.</li> <li>(3) Speedometer and ABS recalibration will be necessary if larger tires (10% more than stock diameter) are installed.</li> <li>(4) Vehicle will require alignment after kit is installed.</li> <li>(5) In order to install Max Tire Size recommendations, it may be required to retain the factory wheel width/ backspacing/ offset. Some applications may require the removal of the front inner fender mud flaps and/or other fender modifications.</li> </ul> | <ul style="list-style-type: none"> <li>(6) No Cutting Required of factory crossmembers for installation.</li> <li>(7) 20" wheels with 5.75" to 6" of backspacing required for best clearance with 35" x 12.5" tires. 18" wheels with up to 5" backspacing can be used with 33" x12.5" tires.</li> <li>(8) Excluding 2015 TRD Pro Off Road suspension package.</li> <li>(9) Factory front fenders and rear bedsides must be cut for installation of wide fender kit. Part numbers 57087 and 57088 are for 2014-2016 model years only. Fiberglass replacement fenders and bedsides can be used for clearance of 35" tires.</li> <li>(10) 57001B Upper arms are not compatible with K5069/ K5079 or K5150 4" and 6" lift kits.</li> </ul> |
|--|--|



## Toyota Tundra — 4WD/ 2WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions		Wheel / Tire Specs:		Notes
<b>6.0" LIFT</b>								
07-16	Steering Knuckles Drop Crossmembers Bump Stop Extensions Diff Drop Brackets Sway Bar Drops Related Hardware Rear 3" Blocks Rear U-Bolts Rear Add-A-Leafs	<b>K5069B</b>	1	57047B-1	Kit Box	Max Tire Size Wheel Diameter Wheel Width Backspace Bolt Pattern Bolt Code Lug Nut Size Lug Nut Kit	35" x 12.50"	1
		Kit w/Front Strut Spacers and Rear ES Shocks	1	57047B-2	Kit Box		18" +	2
		OR	1	57047B-3	Kit Box		8" - 9"	3
		OR	1	57096B-5	Kit Box		4" - 6"	4
		<b>K5069BP</b>	Plus				5 x 150mm	
		Kit w/Front Strut Spacers and Rear Pro Runner Shocks	1	57047B-4	Front Strut Spacers w/Rear ES9000 Shocks		55	
		OR	1	57047BP-4	Front Strut Spacers w/Rear Pro Runner Shocks		14mm x 1.5	
		OR	1	57047BP-4	Front Strut Spacers w/Rear Pro Runner Shocks		PXA26143	
		OR	2	ZX2078	Front Pro Runner SS Struts			
		OR	1	57047BPX-4	Front MX2.75 Coilover w/Rear Pro Runner Shocks			
		OR	1	57047BPX-5	Front MX2.75 Coilover w/Rear Pro Runner Shocks			
		<b>K5069BPS</b>	OR					
		Kit w/Front MX2.75 Coilovers and Rear Pro Runner Shocks	1	57047BMX-4	Front MX2.75 Coilover w/Rear MX6 Shocks			
		OR	1	57047BMX-5	Front MX2.75 Coilover w/Rear MX6 Shocks			
<b>K5069BPX</b>	OR							
Kit w/Front MX2.75 Coilovers and Rear MX6 Shocks								
<b>K5069BMX</b>								
Kit w/Front MX2.75 Coilovers and Rear MX6 Shocks								
<b>4.0" LIFT - Upper A Arms / Strut Spacers</b>								
07-16	Steering Knuckles Drop Crossmembers Bump Stop Extensions Diff Drop Brackets Sway Bar Drops Related Hardware Rear 1" Blocks Rear U-Bolts Rear Add-A-Leafs	<b>K5079B</b>	1	57048B-1	Kit Box	Max Tire Size Wheel Diameter Wheel Width Backspace Bolt Pattern Bolt Code Lug Nut Size Lug Nut Kit	35" x 12.50"	2
		Kit w/Front Strut Spacers and Rear ES Shocks	1	57048B-2	Kit Box		20" +	3
		OR	1	57048B-3	Kit Box		8" - 9"	4
		OR	1	57096B-5	Kit Box		5.75" - 6"	6
		Plus					5 x 150mm	7
		1	57048B-4	Front Strut Spacers w/Rear ES9000 Shocks	55		14mm x 1.5	
<b>4.0" LIFT - Upper A Arms / Strut Spacers</b>								
07-16	Upper A Arms w ball joints Strut Spacers Spring Preload spacers Sway Bar Drops Related Hardware Rear 2.5" Blocks Rear U-Bolts	<b>K5088B</b>	1	57044B	Kit Box	Max Tire Size Wheel Diameter Wheel Width Backspace Bolt Pattern Bolt Code Lug Nut Size Lug Nut Kit	33" x 12.50"	3
		Kit W/ Front Strut Spacers and Rear ES Shocks	2	927591	Rear ES9000 Shocks		17" +	4
<b>2.5" LIFT - Uniball Upper Arms / Black Series Coil Overs</b>								
07-16	Uniball Upper A Arms Black Series Front Coil Over Black Series 2.0 rear shocks	<b>57101K</b>	1	57001B	Uniball Upper A Arms	Max Tire Size Wheel Diameter Wheel Width Backspace Bolt Pattern Bolt Code Lug Nut Size Lug Nut Kit	33" x 12.50"	3
		Kit W/ Uniball Upper A Arms	2	ZX4078	P2.75 Coilover		17" +	4
		Black Series Front Coil Over and Black Series 2.0 rear shocks	2	ZX3024	P2 Series shock		8" - 9"	5
<b>2.5" LIFT - Uniball Upper Arms / Pro Runner Struts</b>								
07-16	Uniball Upper A Arms Pro Runner SS Monotube Front Struts Pro Runner rear shocks	<b>57201K</b>	1	57001B	Uniball Upper A Arms	Max Tire Size Wheel Diameter Wheel Width Backspace Bolt Pattern Bolt Code Lug Nut Size Lug Nut Kit	33" x 12.50"	3
		Kit W/ Uniball Upper A Arms	2	ZX2078	Pro Runner SS Monotube Strut		17" +	4
		Front / Rear Pro Runner Shocks	2	ZX2024	Pro Runner Monotube Shock		8" - 9"	5

TOYOTA

- (3) Speedometer and ABS recalibration will be necessary if larger tires (10% more than stock diameter) are installed.  
 (4) Vehicle will require alignment after kit is installed.  
 (5) In order to install Max Tire Size recommendations, it may be required to retain the factory wheel width/ backspacing/ offset. Some applications may require the removal of the front inner fender mud flaps and/or other fender modifications.

# SUSPENSION KITS

## Toyota Tundra — 4WD/ 2WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>Tundra - 4WD / 2WD</b>						
<b>3.0" Level Lift Nitro Kit</b>						
07-16	Front Strut Spacers Diff Drop Spacers Related Hardware Rear 1" Blocks Rear U-Bolts		1	65225K Front Strut Spacers Rear Block Kit	Max Tire Size 33" x 12.50" Wheel Diameter 18" + Wheel Width 8" - 9" Backspace 4" - 6" Bolt Pattern 5 x 150mm Bolt Code 55 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26143	3 4 5 8
<b>2.5" Level Lift</b>						
07-16	Front Strut Spacers Diff Drop Spacers		1	65225 Front Strut Spacers	Max Tire Size 33" x 12.50" Wheel Diameter 18" + Wheel Width 8" - 9" Backspace 4" - 6" Bolt Pattern 5 x 150mm Bolt Code 55 Lug Nut Size 14mm x 1.5 Lug Nut Kit PXA26143	3 4 5 8
<b>3.0" Level Lift</b>						
00-06	Front Strut Spacers Diff Drop Spacers		1	65150 Front Strut Spacers	Max Tire Size 33" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 9" Backspace 4" - 6" Bolt Pattern 6 x 5.5 Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	3 4 5
<b>2.5" Level Lift</b>						
00-06	Front Strut Spacers Diff Drop Spacers		1	65175 Front Strut Spacers	Max Tire Size 32" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 9" Backspace 4" - 6" Bolt Pattern 6 x 5.5 Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	3 4 5
<b>2.5" Poly Lift</b>						
00-06	Front Strut Spacers		1	PLT09103 Front Strut Spacers	Max Tire Size 32" x 12.50" Wheel Diameter OE" + Wheel Width 8" - 9" Backspace 4" - 6" Bolt Pattern 6 X 5.5 Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	3 4 5

### OPTIONS

### Notes:

#### Level Lift

65151 Rear Blocks w/U-Bolts 1.0" (99-14)

- (1) OE wheels will not fit . 07-14 models require 18" wheels with up to 5.5" backspace or 20" wheels with up to 6" backspace.
- (2) Use of a 35" x 12.5" tire may require the removal of the front inner fender mud flaps and / or other fender modifications.
- (3) Speedometer and ABS recalibration will be necessary if larger tires (10% more than stock diameter) are installed.
- (4) Vehicle will require alignment after kit is installed.
- (5) In order to install Max Tire Size recommendations, it may be required to retain the factory wheel width/ backspacing/ offset. Some applications may require the removal of the front inner fender mud flaps and/or other fender modifications.
- (6) No Cutting Required of factory crossmembers for installation.
- (7) 20" wheels with 5.75"-6" of backspacing req. for best clearance with 35" x 12.5" tires. 18" wheels with up to 5" backspacing can be used with 33" x12.5" tires.



# SUSPENSION KITS

## Toyota Pickup

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes	
<b>Pickup 4WD</b>							
<b>4.0" LIFT Stage I w/2.5" Wide Rear U-Bolts</b>							
86-95	Steering Knuckle Spacers Lower Arm Drop Brackets Diff Drop Brackets Bump Stop Extensions Sway Bar Drops Related Hardware Rear 3.5" Blocks Rear 2.5" Dia. U-Bolts	<b>K5054B</b> Kit w/ES Shocks OR <b>K5054BMX</b> Kit w/MX6 Shocks	1 1 1 1 Plus 2 2 OR 2 2	57089B-1 57089B-2 57589 7210 318514 326506 MX6048 MX6049	Kit Box Kit Box Rear Blocks Stainless Brake Lines Front ES3000 Shocks Rear ES3000 Shocks Front MX6 Shocks Rear MX6 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 7" - 8" Backspace 3.25" - 4" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	1 2
<b>4.0" LIFT Stage I w/3.25" Wide Rear U-Bolts</b>							
86-95	Steering Knuckle Spacers Lower Arm Drop Brackets Diff Drop Brackets Bump Stop Extensions Sway Bar Drops Related Hardware Rear 3.5" Blocks Rear 3.25" Dia. U-Bolts	<b>K5056B</b> Kit w/ES Shocks OR <b>K5056BMX</b> Kit w/MX6 Shocks	1 1 1 1 Plus 2 2 OR 2 2	57089B-1 57089B-2 57789 7210 318514 326506 MX6048 MX6049	Kit Box Kit Box Rear Blocks Stainless Brake Lines Front ES3000 Shocks Rear ES3000 Shocks Front MX6 Shocks Rear MX6 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 7" - 8" Backspace 3.25" - 4" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	1 2
<b>4.0" LIFT Stage II w/2.5" Wide Rear U-Bolts</b>							
86-95	Steering Knuckle Spacers Lower Arm Drop Brackets w / Reinforced Bump Stop Extensions Compression Struts Diff Drop Brackets Sway Bar Drops Related Hardware Rear 3.5" Blocks Rear 2.5" Dia. U-Bolts	<b>K5055B</b> Kit w/ES Shocks OR <b>K5055BMX</b> Kit w/MX6 Shocks	1 1 1 1 Plus 2 2 OR 2 2	57289B-1 57089B-2 57589 7210 318514 326506 MX6048 MX6049	Kit Box Kit Box Rear Blocks Stainless Brake Lines Front ES3000 Shocks Rear ES3000 Shocks Front MX6 Shocks Rear MX6 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 7" - 8" Backspace 3.25" - 4" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	1 2
<b>4.0" LIFT Stage II w/3.25" Wide Rear U-Bolts</b>							
86-95	Steering Knuckle Spacers Lower Arm Drop Brackets w / Reinforced Bump Stop Extensions Compression Struts Diff Drop Brackets Sway Bar Drops Related Hardware Rear 3.5" Blocks Rear 3.25" Dia. U-Bolts	<b>K5057B</b> Kit w/ES Shocks OR <b>K5057BMX</b> Kit w/MX6 Shocks	1 1 1 1 Plus 2 2 OR 2 2	57289B-1 57089B-2 57789 7210 318514 326506 MX6048 MX6049	Kit Box Kit Box Rear Blocks Stainless Brake Lines Front ES3000 Shocks Rear ES3000 Shocks Front MX6 Shocks Rear MX6 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 7" - 8" Backspace 3.25" - 4" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	1 2

TOYOTA

OPTIONS	Notes:
Front Skid Plate	
57190 Stainless Steel Skid Plate - 86-95 - 4WD	
Rear Add-A-Leaf - Pair	
13120 1.5"-2.5" Rear Add-A-Leaf	

OPTIONS	Notes:
Rear Leaf Spring - Single	
33311 Rear Leaf Spring - 79-88 - 4WD	
Rear U-Bolt Kit	
50365 9/16"-18 x 2.40 x 8.09	

OPTIONS	Notes:
Steering Components	
TOY400 4" Drop Drag Link - 79-85 - 4WD	

(1) On some V6 Models, an aftermarket CV style driveshaft may be required if the original equipment driveshaft binds at the CV joint after the lift kit is installed.  
 (2) Vehicle will require alignment after kit is installed.

## Toyota Pickup

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>Pickup - 4WD</b>						
<b>4.0" LIFT w/Rear Blocks</b>						
79-85	Front Leaf Springs Front U-Bolts Related Hardware Rear 3.5" Blocks Rear 2.5" Dia. U-Bolts	<b>K5059B</b> Kit w/ES Shocks	1 1 1 1 1 1 2 2	31211L Front Leaf Spring - Left 31212R Front Leaf Spring - Right 51315B Box Kit 57589 Rear Blocks 7210 Stainless Brake Lines TOY400 Drop Drag Link 321518 Front ES3000 Shocks 326500 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 7" - 8" Backspace 3.25" - 4" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	2
<b>4" Lift w/Rear Leaf Springs</b>						
79-85	Front Leaf Springs Front U-Bolts Related Hardware Rear Leaf Springs	<b>K5062B</b> Kit w/ES Shocks	1 1 2 1 1 1 2 2	31211L Front Leaf Spring - Left 31212R Front Leaf Spring - Right 33311 Rear Leaf Spring 51315B Box Kit 7210 Stainless Brake Lines TOY400 Drop Drag Link 321518 Front ES3000 Shocks 326500 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 7" - 8" Backspace 3.25" - 4" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	2
<b>3" Lift w/Rear Add-A-Leafs</b>						
79-85	Front Leaf Springs Front U-Bolts Related Hardware Rear Add-A-Leafs	<b>K5058B</b> Kit w/ES Shocks	1 1 1 1 2 2	31221L Front Leaf Spring - Left 31222R Front Leaf Spring - Right 51315B Box Kit 13120 Rear Add-A-Leafs 321518 Front ES3000 Shocks 326500 Rear ES3000 Shocks	Max Tire Size 32" x 11.50" Wheel Diameter 15" + Wheel Width 7" - 8" Backspace 3.25" - 4" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	2

- (1) On some V6 Models, an aftermarket CV style driveshaft may be required if the original equipment driveshaft binds at the CV joint after the lift kit is installed.  
 (2) Vehicle will require alignment after kit is installed.

# SUSPENSION KITS

## Toyota FJ

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>FJ Cruiser - 4WD / 2WD</b>						
<b>6.0" LIFT</b>						
10-16	Steering Knuckles Drop Crossmembers Diff Drop Brackets Sway Bar Drop Brackets Related Hardware Rear Coil Springs	<b>K5078B</b> Kit w/Front Strut Spacers and Rear ES Shocks OR <b>K5078BMX</b> Kit w/Front MX2.75 Coilovers and Rear MX6 Shocks	1 1 1 1 Plus 1 OR 1 1	57010B-1 Kit Box 57007B-2 Kit Box 57010B-3 Kit Box 57007B-4 Kit Box 57007B-5 Front Strut Spacers w/Rear ES9000 Shocks 57007BMX-5 Front MX2.75 Coilover wRear MX6 Shocks 57007BMX-6 Front MX2.75 Coilover wRear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 18" + Wheel Width 8" - 9" Backspace 4" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	1 2 3 4
<b>6.0" LIFT</b>						
07-09	Steering Knuckles Drop Crossmembers Diff Drop Brackets Sway Bar Drop Brackets Related Hardware Rear Coil Springs	<b>K5067B</b> Kit w/Front Strut Spacers and Rear ES Shocks OR <b>K5067BMX</b> Kit w/Front MX2.75 Coilovers and Rear MX6 Shocks	1 1 1 1 Plus 1 OR 1 1	57007B-1 Kit Box 57007B-2 Kit Box 57007B-3 Kit Box 57007B-4 Kit Box 57007B-5 Front Strut Spacers w/Rear ES9000 Shocks 57007BMX-5 Front MX2.75 Coilover wRear MX6 Shocks 57007BMX-6 Front MX2.75 Coilover wRear MX6 Shocks	Max Tire Size 35" x 12.50" Wheel Diameter 18" + Wheel Width 8" - 9" Backspace 4" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	1 2 3
<b>3.0" LIFT</b>						
07-16	Front Coil Springs Front Spring Seat Shocks Sway Bar Brackets Related Hardware Rear Coil Springs	<b>K5074B</b> Kit w/ES Shocks	1 1 2 2	57491 Front Coil Springs 57492 Rear Coil Springs 622053 ES6000 Spring Seat Shocks 923553 Rear ES9000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 9" Backspace 4" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	2 3 4
<b>FJ Cruiser - 4WD / 2WD</b>						
<b>3"/ 2" Level Lift Nitro Kit</b>						
07-16	Front Strut Spacers Rear Coil Spacers Diff / Skid plate spacers Related Hardware		1	65210K Front Strut Spacers Rear Coil Spacers Diff / Skid plate spacers	Max Tire Size 33" x 12.50" Wheel Diameter 16" + Wheel Width 8" - 9" Backspace 4" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	2 3 4
<b>2.25" Level Lift</b>						
07-16	Front Strut Spacers Diff / Skid plate spacers		1	65205 Front Strut Spacers Diff / Skid plate spacers	Max Tire Size 32" x 11.50" Wheel Diameter 16" + Wheel Width 8" - 9" Backspace 4" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	2 3 4
<b>2.5" Poly Lift</b>						
07-16	Front Strut Spacers		1	PLT09116 Front Strut Spacers	Max Tire Size 32" x 11.50" Wheel Diameter 16" + Wheel Width 8" - 9" Backspace 4" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	2 3 4

### OPTIONS

### Notes:

Front Coil Over Upgrade

57008BMX Stage 1 to Stage 2 Conversion Kit

- (1) OE wheels will not fit. 07-13 models require 18" or larger diameter wheels.
- (2) Use of maximum tire size recommendation may require the removal of the front inner fender mud flaps and/or other fender modifications.
- (3) Vehicle will require alignment after kit is installed.
- (4) Excluding models with Electronic / Hydraulic ride adjusting features.

## Toyota FJ 40 Land Cruiser

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>FJ40 Land Cruiser - 4WD</b>						
<b>2.5" LIFT</b>						
75-80	Front Leaf Springs Front U-Bolts Rear Leaf Springs Rear U-Bolts	<b>K5063</b> Kit w/ES Shocks	2 2 1 Plus 2 2	31252 Front Leaf Spring 31253 Rear Leaf Spring 50090 Front / Rear U-Bolts 321500 Front ES3000 Shocks 324509 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	
<b>2.5" LIFT</b>						
64-74	Front Leaf Springs Front U-Bolts Rear Leaf Springs Rear U-Bolts	<b>K5064</b> Kit w/ES Shocks	2 2 1 Plus 2 2	31252 Front Leaf Spring 31253 Rear Leaf Spring 50090 Front / Rear U-Bolts 321500 Front ES3000 Shocks 322500 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 8" - 10" Backspace 3.25" - 4" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	

# SUSPENSION KITS

## Toyota 4 Runner — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>4 Runner - 4WD / 2WD</b>						
<b>3"/ 2" Level Lift Nitro Kit</b>						
03-16	Front Strut Spacers Rear Coil Spacers Diff / Skid plate spacers Related Hardware		1	65210K 3" Front Strut Spacers 2" Rear Coil Spacers Diff / Skid plate spacers	Max Tire Size 32" x 11.50" Wheel Diameter OE" + Wheel Width 8" - 9" Backspace 4" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	2 3 4
<b>2.25" Level Lift</b>						
03-16	Front Strut Spacers Diff / Skid plate spacers		1	65205 Front Strut Spacers Diff / Skid plate spacers	Max Tire Size 32" x 11.50" Wheel Diameter OE" + Wheel Width 8" - 9" Backspace 4" - 5" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	2 3 4
<b>4 Runner - 4WD</b>						
<b>4.0" LIFT Stage I -w/Rear Coils</b>						
90-95	Steering Knuckle Spacers Lower Arm Drop Brackets Diff Drop Brackets Bump Stop Extensions Sway Bar Drops Related Hardware Rear Coil Springs	<b>K5060B</b> Kit w/ES Shocks	1 1 1 1 Plus 2 2	57089B-1 57089B-2 57489B 7210 318514 326513 Kit Box Kit Box Kit Box Rear Coil Springs Stainless Brake Lines Front ES3000 Shocks Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 7" - 8" Backspace 3.25" - 4" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	1 2
<b>4.0" LIFT Stage II -w/Rear Coils</b>						
90-95	Steering Knuckle Spacers Lower Arm Drop Brackets w / Reinforced Bump Stop Extensions Compression Struts Diff Drop Brackets Sway Bar Drops Related Hardware Rear Coil Springs	<b>K5061B</b> Kit w/ES Shocks	1 1 1 1 Plus 2 2	57289B-1 57089B-2 57489B 57490 7210 318514 326513 Kit Box Kit Box Kit Box Rear Coil Springs Stainless Brake Lines Front ES3000 Shocks Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 7" - 8" Backspace 3.25" - 4" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	1 2

TOYOTA

OPTIONS	Notes:
Front Skid Plate	
57190	Stainless Steel Skid Plate - 86-95 - 4WD
Rear Add-A-Leaf - Pair	
13120	1.5"-2.5" Rear Add-A-Leaf
Rear U-Bolt Kit	
50365	9/16"-18 x 2.40 x 8.09

- (1) On some V6 Models, an aftermarket CV style driveshaft may be required if the original equipment driveshaft binds at the CV joint after the lift kit is installed.
- (2) Vehicle will require alignment after kit is installed.
- (3) Use of maximum tire size recommendation may require the removal of the front inner fender mud flaps and/or other fender modifications.
- (4) Excluding models with Electronic / Hydraulic ride adjusting features.



## Toyota 4 Runner — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>4 Runner - 4WD</b>						
<b>4.0" LIFT Stage I w/2.5" Wide Rear U-Bolts</b>						
86-89	Steering Knuckle Spacers Lower Arm Drop Brackets Diff Drop Brackets Bump Stop Extensions Sway Bar Drops Related Hardware Rear 3.5" Blocks Rear 2.5" Wide U-Bolts	<b>K5054B</b> Kit w/ES Shocks OR <b>K5054BMX</b> Kit w/MX6 Shocks	1 1 1 1 Plus 2 2 OR 2 2	57089B-1 Kit Box 57089B-2 Kit Box 57589 Rear Blocks 7210 Stainless Brake Lines 318514 Front ES3000 Shocks 326506 Rear ES3000 Shocks MX6048 Front MX6 Shocks MX6049 Rear MX6 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 7" - 8" Backspace 3.25" - 4" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	1 2
<b>4.0" LIFT Stage I w/3.25" Wide Rear U-Bolts</b>						
86-89	Steering Knuckle Spacers Lower Arm Drop Brackets Diff Drop Brackets Bump Stop Extensions Sway Bar Drops Related Hardware Rear 3.5" Blocks Rear 3.25" Wide U-Bolts	<b>K5056B</b> Kit w/ES Shocks OR <b>K5056BMX</b> Kit w/MX6 Shocks	1 1 1 1 Plus 2 2 OR 2 2	57089B-1 Kit Box 57089B-2 Kit Box 57789 Rear Blocks 7210 Stainless Brake Lines 318514 Front ES3000 Shocks 326506 Rear ES3000 Shocks MX6048 Front MX6 Shocks MX6049 Rear MX6 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 7" - 8" Backspace 3.25" - 4" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	1 2
<b>4.0" LIFT Stage II w/2.5" Wide Rear U-Bolts</b>						
86-89	Steering Knuckle Spacers Lower Arm Drop Brackets w / Reinforced Bump Stop Extensions Compression Struts Diff Drop Brackets Sway Bar Drops Related Hardware Rear 3.5" Blocks Rear 2.5" Wide U-Bolts	<b>K5055B</b> Kit w/ES Shocks OR <b>K5055BMX</b> Kit w/MX6 Shocks	1 1 1 1 Plus 2 2 OR 2 2	57289B-1 Kit Box 57089B-2 Kit Box 57589 Rear Blocks 7210 Stainless Brake Lines 318514 Front ES3000 Shocks 326506 Rear ES3000 Shocks MX6048 Front MX6 Shocks MX6049 Rear MX6 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 7" - 8" Backspace 3.25" - 4" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	1 2
<b>4.0" LIFT Stage II w/3.25" Wide Rear U-Bolts</b>						
86-89	Steering Knuckle Spacers Lower Arm Drop Brackets w / Reinforced Bump Stop Extensions Compression Struts Diff Drop Brackets Sway Bar Drops Related Hardware Rear 3.5" Blocks Rear 3.25" Wide U-Bolts	<b>K5057B</b> Kit w/ES Shocks OR <b>K5057BMX</b> Kit w/MX6 Shocks	1 1 1 1 Plus 2 2 OR 2 2	57289B-1 Kit Box 57089B-2 Kit Box 57789 Rear Blocks 7210 Stainless Brake Lines 318514 Front ES3000 Shocks 326506 Rear ES3000 Shocks MX6048 Front MX6 Shocks MX6049 Rear MX6 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 7" - 8" Backspace 3.25" - 4" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	1 2

TOYOTA

OPTIONS	Notes:
Rear Add-A-Leaf - Pair	
13120 1.5"-2.5" Rear Add-A-Leaf	
Rear Leaf Spring - Single	
33311 4" Rear Leaf Spring - 79-88 - 4WD	

OPTIONS	Notes:
Rear U-Bolt Kit	
50365 9/16"-18 x 2.40 x 8.09	
Steering Components	
TOY400 4" Drop Drag Link - 79-85 - 4WD	

- (1) On some V6 Models, an aftermarket CV style driveshaft may be required if the original equipment driveshaft binds at the CV joint after the lift kit is installed.
- (2) Vehicle will require alignment after kit is installed.
- (3) Use of maximum tire size recommendation may require the removal of the front inner fender mud flaps and/or other fender modifications.
- (4) Excluding models with Electronic / Hydraulic ride adjusting features.

# SUSPENSION KITS

## Toyota 4 Runner — 4WD

Year	Consists of	Complete Kits	Qty.	Base Kit Components and Descriptions	Wheel / Tire Specs:	Notes
<b>4 Runner - 4WD</b>						
<b>4.0" LIFT w/Rear Blocks</b>						
79-85	Front Leaf Springs Front U-Bolts Related Hardware Rear 3.5" Blocks Rear 2.5" Wide U-Bolts	<b>K5059B</b> Kit w/ES Shocks	1 1 1 1 1 1 Plus 2 2	31211L Front Leaf Spring - Left 31212R Front Leaf Spring - Right 51315B Box Kit 57589 Rear Blocks 7210 Stainless Brake Lines TOY400 Drop Drag Link 321518 Front ES3000 Shocks 326500 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 7" - 8" Backspace 3.25" - 4" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	2
<b>4" Lift w/Rear Leaf Springs</b>						
79-85	Front Leaf Springs Front U-Bolts Related Hardware Rear Leaf Springs	<b>K5062B</b> Kit w/ES Shocks	1 1 2 1 1 1 Plus 2 2	31211L Front Leaf Spring - Left 31212R Front Leaf Spring - Right 33311 Rear Leaf Spring 51315B Box Kit 7210 Stainless Brake Lines TOY400 Drop Drag Link 321518 Front ES3000 Shocks 326500 Rear ES3000 Shocks	Max Tire Size 33" x 12.50" Wheel Diameter 15" + Wheel Width 7" - 8" Backspace 3.25" - 4" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	2
<b>3" LIFT w/Add-A-Leafs</b>						
79-85	Front Leaf Springs Front U-Bolts Related Hardware Rear Add-A-Leafs	<b>K5058B</b> Kit w/ES Shocks	1 1 1 1 Plus 2 2	31221L Front Leaf Spring - Left 31222R Front Leaf Spring - Right 51315B Box Kit 13120 Rear Add-A-Leafs 321518 Front ES3000 Shocks 326500 Rear ES3000 Shocks	Max Tire Size 32" x 11.50" Wheel Diameter 15" + Wheel Width 7" - 8" Backspace 3.25" - 4" Bolt Pattern 6 x 5.5" Bolt Code 83 Lug Nut Size 12mm x 1.5 Lug Nut Kit PXA21134	2

OPTIONS	Notes:
Rear Add-A-Leaf - Pair	
13120 1.5"-2.5" Rear Add-A-Leaf	
Rear Leaf Spring - Single	
33311 4" Rear Leaf Spring - 79-88 - 4WD	

OPTIONS	Notes:
Rear U-Bolt Kit	
50365 9/16"-18 x 2.40 x 8.09	
Steering Components	
TOY400 4" Drop Drag Link - 79-85 - 4WD	

- (1) On some V6 Models, an aftermarket CV style driveshaft may be required if the original equipment driveshaft binds at the CV joint after the lift kit is installed.
- (2) Vehicle will require alignment after kit is installed.
- (3) Use of maximum tire size recommendation may require the removal of the front inner fender mud flaps and/or other fender modifications.
- (4) Excluding models with Electronic / Hydraulic ride adjusting features.

## Stainless Steel Skid Plate Kits

Application	Year	Lift Ht.	Suspension System	Skid Plate Kit	Notes:
<b>CHEVY / GMC</b>					
Silverado/ Sierra 1500 - 2WD/ 4WD	07-16	6"	51007/ 51014/ 51017	51104	1
Silverado/ Sierra 1500 - 2WD/ 4WD (A-Arm Kit)	99-07	6"	51099/ 51001/ 51002/ 51011/ 51021/ 51022/ 51023/ 51028	51199	1
Silverado/ Sierra 1500 - 2WD/ 4WD (Knuckle Kit)	99-07	5"	51020/ 51024/ 51025/ 51086	51199	1
Avalanche/ Suburban/ Tahoe/ Yukon 1500 - 2WD/ 4WD	07-14	6"	51907/ 51947	51104	1
Avalanche/ Suburban/ Tahoe/ Yukon 1500 - 2WD/ 4WD (A-Arm Kit)	00-06	6"	51099/ 51001/ 51002/ 51011/ 51021/ 51022/ 51023/ 51028	51199	1
Avalanche/ Suburban/ Tahoe/ Yukon 1500 - 2WD/ 4WD (Knuckle Kit)	00-06	5"	51020/ 51024/ 51025/ 51086	51199	1
Silverado/ Sierra 2500HD - 2WD/ 4WD (A-Arm Kit)	99-10	6"	51800	51100	1
Silverado/ Sierra 2500HD - 2WD/ 4WD (Knuckle Kit)	99-10	6"	51801	51101	1
Avalanche/ Suburban/ Yukon XL 2500 - 2WD/ 4WD (A-Arm Kit)	99-13	6"	51800	51100	1
Avalanche/ Suburban/ Yukon XL 2500 - 2WD/ 4WD (Knuckle Kit)	99-13	6"	51801	51101	1
<b>FORD</b>					
F150 PU/ Lincoln Mark LT PU - 4WD	09-13	6"	52209	52109	1
F150 PU/ Lincoln Mark LT PU - 4WD	04-08	6"	52204	52104	1
<b>TOYOTA</b>					
Pickup/ 4 Runner - 4WD	86-95	4"	57089/ 57289	57190	1
Tacoma - 2WD/ 4WD	05-15	6"	57096	57196	1
Tacoma - 2WD/ 4WD	96-04	4"	57095	57195	1
Tundra - 2WD/ 4WD	07-16	6"	57047	57197	1

(1) Skid plate kits only fit vehicles with Pro Comp suspension systems installed.

## Traction Bars and Mount Kits

Application	Year	Bar Length	Bar Part No.	Mount Kit No. (1)	Notes:
<b>CHEVY / GMC</b>					
Silverado/ Sierra 1500 - 4WD (Extra Cab / Crew Cab)	99-07	50"	71000B	71199B	1
Silverado/ Sierra 1500/ 2500 - 4WD ( Extra Cab Short Bed)	88-99	50"	71000B	71182B	1,2
Tahoe/ Yukon SUV (4 Door) 1500 - 4WD	95-99	50"	71000B	71199B	1,2
Silverado/ Sierra 2500HD - 4WD (Crew Cab)	11-16	50"	72500B	71201B	
Silverado/ Sierra 1500HD/ 2500HD - 4WD (Crew Cab Long Bed)	99-10	64"	72400B	71200B	
Silverado/ Sierra 1500HD/ 2500HD - 4WD	99-10	50"	71000B	71200B	
<b>DODGE</b>					
Ram 1500 - 4WD	06-08	50"	72500B	75006B	1
Ram 2500/ 3500 - 4WD (Mega Cab/ Crew Cab Long Bed)	03-10	74"	72501B	72098B	1
Ram 2500/ 3500 - 4WD (Crew Cab Short Bed)	03-10	50"	72500B	72098B	1
<b>FORD/ LINCOLN</b>					
F150/ Lincoln Mark LT - 2WD/ 4WD (Std Cab/ Super Cab)	04-14	50"	72500B	72095B	1
F150/ Lincoln Mark LT - 2WD/ 4WD (Super Crew Cab)	04-14	50"	72500B	72096B	1
F250/ F350 - 4WD (Crew Cab SB Only) Tube Style w/Pro Comp Logo	11-16	50"	72300B	72101B	
F250/ F350 - 4WD (Crew Cab SB Only) Plate-style	11-16	50"	72301B	72101B	
F250/ F350 - 4WD (Xtr Cab/ Crew Cab)	99-10	67"	72400B	72099B	
F250/ F350 - 4WD (Xtr Cab/ Crew Cab)	80-97	67"	72400B	72099B	
<b>NISSAN</b>					
Titan - 2WD/ 4WD	04-15	50"	72300B	79090B	1
<b>TOYOTA</b>					
Tacoma - 2WD/ 4WD (Xtr Cab)	05-16	50"	72500B	72083B	1
Tacoma - 2WD/ 4WD (Xtr Cab)	96-04	63"	71000B	77182B	1
Tundra - 2WD/ 4WD (Dbl. Cab/ Crew Cab)	07-16	50"	72500B	72077B	1

(1) Lift blocks required for installaion of traction bar mount kits.  
 (2) Includes standard cab & extended cab vehicles with 8 ft bed.

## Brake Line Kits

Application	Year	Lift Height	Complete Kit	Left Front	Right Front	Rear	Notes:
<b>CHEVY / GMC</b>							
Silverado/ Sierra/ Blazer/ Jimmy/ Suburban 1500 - 4WD	87-99	4"-6"	7225	24.00" (AB)	24.00" (AB)	17.50" (E)	1
	78.5-86.5	4"-6"	7220	25.00" (AB)	25.00" (AB)	17.25" (E)	1
	73-78.5	4"-6"	7215	23.50" (AB)	23.50" (AB)	17.25" (E)	1
Silverado/ Sierra PU 1500 - 2WD	88-99	6"	7225	24.00" (AB)	24.00" (AB)	-	1
S-10/ S15 PU & SUV - 2WD	83-08	3"	7224	24.75" (AB)	24.75" (AB)	-	1
<b>DODGE</b>							
Ram 1500 - 4WD	06-16	6"	7525	21.00" (AB)	21.00" (AB)	-	1
<b>FORD</b>							
Bronco w/ABS - 2WD/ 4WD	90-96	4"-6"	7350	23.00" (A)	23.00" (A)	22.00" (E)	1,2
	90-96	4"-6"	7325	23.00" (A)	23.00" (A)	22.00" (E)	1,2
	Bronco - 2WD /4WD	80-89	4"-6"	7330	26.00" (AB)	26.00" (AB)	24.75" (E)
78-79		4"	7335	21.00" (F)	-	29.00" (E)	1
Bronco - 4WD	66-77	4"	7340	21.50" (F)	-	20.50" (E)	1
Explorer - 2WD/ 4WD	91-94	5"	7305	28.00" (A)	28.00" (A)	29.75" (E)	1
F150 w/ABS - 2WD/ 4WD	90-96	4"-6"	7350	23.00" (A)	23.00" (A)	22.00" (E)	1,2
	90-96	4"-6"	7325	23.00" (A)	23.00" (A)	22.00" (E)	1,2
	F150 - 2WD/ 4WD	80-89	4"-6"	7330	26.00" (AB)	26.00" (AB)	24.75" (E)
78-79		4"	7335	21.00" (F)	-	29.00" (E)	1
Ranger/ Bronco II - 2WD/ 4WD		89-96	5"	7310	25.25" (A)	26.00" (B)	26.25" (E)
	86-88 / 97	5"	7315	29.50" (A)	29.50" (B)	24.50" (E)	1
	83-85	5"	7320	27.75" (AB)	27.75" (AB)	29.75" (E)	1
<b>JEEP</b>							
CJ5/ CJ7 - 4WD ( w/Drum Brakes)	82-86	4"	7405	18.00" (AB)	18.00" (AB)	18.00" (E)	1
CJ5/ CJ7 - 4WD (w/Disk Brakes)	77-81	4"	7410	18.00" (AB)	18.00" (AB)	18.00" (E)	1
J10/ J20 - 4WD	79-91	4"	7415	21.00" (AB)	21.00" (AB)	23.25" (E)	1
	74-78	4"	7420	21.00" (AB)	21.00" (AB)	23.25" (E)	1
JK	07-08	4"-6"	7530	28.00" (AB)	28.00" (AB)	-	1
YJ	87-96	4"	7425	24.00" (AB)	24.00" (AB)	17.00" (E)	1
TJ/ LJ	97-06	4"	7450	19.50" (AB)	19.50" (AB)	21.50" (E)	1
<b>NISSAN</b>							
Titan PU/ Armada - 2WD/ 4WD	04-16	6"	7460	22.50" (AB)	22.50" (AB)	-	1
<b>TOYOTA - 4WD</b>							
Pickup/ 4Runner - 4WD	79-95	4"	7210	22.50" (AB)	22.50" (AB)	20.50" (E)	1
T100 PU - 4WD	93-94	4"	7212	21.00" (AB)	21.00" (AB)	23.00" (E)	1
Tacoma PU - 4WD	96-04	4"	7213	25.25" (AB)	25.25" (AB)	24.00" (E)	1

- (1) Replacement brake lines can be ordered individually by using kit part number and the letter designation for the front or rear line.  
(2) Brake Hose Kit 7325 required when left front brake line has a 3-way T-block (Non-ABS). Brake hose kit 7350 required when both front brake lines are identical.(ABS)  
A = Left Front Brake Line B = Right Front Brake Line AB = Left Front and Right Front Brake Line identical E = Center Rear Brake Line F = Center Front Brake Line

## Front Leaf Springs

Application	Year	Lift Height	Spring Width	No. of Leafs	Spring Rate lbs/in	Part No.
<b>CHEVY/ GMC</b>						
Silverado/ Sierra PU / Blazer/ Jimmy/ Suburban 1500/ 2500 - 4WD	73-91	2.5"	2.5"	5	526	11211
		4"	2.5"	5	550	11411
		6"	2.5"	6	589	11511
<b>FORD</b>						
Excursion - 4WD	00-06	4"	3"	5	430	22210
		6"	3"	5	435	22410
F250/ F350 P/U - 4WD	99-04	2"	3"	5	430	22210
		4"	3"	5	435	22410
		6.5"	3"	6	490	22610
<b>JEEP</b>						
CJ Series/ DJ Series - 2WD/ 4WD	53-75	2.5"	1.77"	6	304	51213
CJ5/ CJ7 - 4WD	76-86	2.5"	2"	5	275	51212
		4"	2"	5	245	51412
Wrangler YJ - 4WD (1)	87-96	2.5"	2.5"	4	195	51313
		4"	2.5"	5	287	51413
<b>TOYOTA</b>						
Pickup / 4Runner - 4WD (Left)	79-85	4"	2.37"	3	340	31211L
Pickup / 4Runner - 4WD (Right)	79-85	4"	2.37"	3	340	31212R
Pickup / 4Runner - 4WD (Left)	79-85	3"	2.37"	3	301	31221L
Pickup / 4Runner - 4WD (Right)	79-85	3"	2.37"	3	301	31222R
FJ40 - 4WD	64-80	2.5"	2.75"	6	385	31252

# Rear Leaf Springs

Application	Year	Lift Height	Spring Width	No. of Leafs	Spring Rate lbs/in	Part No.
<b>CHEVY/ GMC</b>						
Silverado/ Sierra PU - 1500/ 2500/ 3500 - 4WD	88-98	3"-3.5"	2.5"	5	191	13211
		5"-5.5"	2.5"	5	198	13711
Silverado/ Sierra PU - 1500/ 2500 - 4WD (w/ 52" rear spring)	69-87	4"	2.5"	6	283	13311
		6"	2.5"	6	342	13411
Blazer/ Jimmy / Tahoe/ Yukon - 4WD (2 Door)	92-98	4"	2.5"	6	283	13311
		6"	2.5"	6	342	13411
Blazer/ Jimmy - 4WD	73-91	4"	2.5"	6	283	13311
		6"	2.5"	6	342	13411
Blazer/ Jimmy - 4WD	69-72	2"	2.5"	6	283	13311
		4"	2.5"	6	342	13411
Suburban - 4WD (w/ 52" rear spring)	69-91	2"	2.5"	6	283	13311
		4"	2.5"	6	342	13411
Silverado/ Sierra PU - 2500/ 3500 - 4WD (w/ 56" rear spring)	69-87	4"	2.5"	6	378	13511
		6"	2.5"	6	381	13611
Suburban - 4WD (w/ 56" rear spring)	69-91	4"	2.5"	6	378	13511
		6"	2.5"	6	381	13611
<b>FORD</b>						
Bronco - 4WD	78-96	4"	3.0"	6	332	23211
		6"	3.0"	6	319	23411
Excursion - 4WD	00-06	6"	3.0"	5	440	23311
F100/ F150 - 4WD	73-96	4"	3.0"	6	332	23211
		6"	3.0"	6	319	23411
F250/ F350 - 4WD	08-10	5"	3.0"	5	418	22518
F250/ F350 - 4WD	99-07	5"	3.0"	6	375	22415
		6"	3.0"	5	440	23311
F250/ F350 - 4WD	80-98	3" - 4"	3.0"	6	332	23211
		5" - 6"	3.0"	6	319	23411
F250 - 4WD (Low Boy Series)	77.5-79	3" - 4"	3.0"	6	332	23211
		5" - 6"	3.0"	6	319	23411
<b>JEEP</b>						
Cherokee XJ - 2WD/ 4WD	84-01	2.5"	2.5"	4	235	53111
CJ5/ CJ6 Series/ DJ5 Series - 4WD	53-75	2.5"	1.77"	6	290	51223
CJ5/ CJ7 - 4WD	76-86	2.5"	2.5"	5	293	51222
		4"	2.5"	5	330	51422
Wrangler YJ - 4WD (1)	87-96	2.5"	2.5"	4	188	51323
		4"	2.5"	4	228	51423
<b>TOYOTA</b>						
Pickup - 4WD	79-88	3"-4"	2.37"	4	213	33311
Tacoma PU - 4WD	95-97	3"-5"	2.37"	4	162	33211
TOYOTA FJ40 - 4WD	64-80	2.5"	2.75"	5	360	31253

LEAF SPRING

REPLACEMENT LEAF SPRING BUSHINGS
90-3801 Hardware Pack: Replacement bushings for 53111
90-3802 Hardware Pack: Replacement bushings for 23211 / 23411
90-3803 Hardware Pack: Replacement bushings for 13211 / 13311 / 13411 / 13511
90-3804 Hardware Pack: Replacement bushings for 13611 / 13711
90-3805 Hardware Pack: Replacement bushings for 23311
90-3806 Hardware Pack: Replacement bushings for 22210 / 22410 / 22415 / 22610
90-3807 Hardware Pack: Replacement bushings for 22518

(1) Wrangler springs sold with out bushings. Order 69261 for 2 springs (Set of 4 springs, use 90-6026)  
Leaf springs sold individually. Maximum height achieved will depend upon accessories and weight carried.

## Add-a-Leaf

Application	Year	Short Kit	Long Kit	Dual Kit	Notes:
<b>CHEVY/ GMC</b>					
Blazer/ Jimmy/ Suburban/ Tahoe/ Yukon - 1500/ 2500 - 2WD/ 4WD	92-99	-	13124	-	1,2,3
	73-91	13122	51099B-5	-	1,2,3
	69-72	13122	51099B-5	-	1,2,3
Luv - 2WD	72-82	13120	-	-	1,2,3
Silverado/ Sierra - 1500/ 2500 - 2WD/ 4WD	99-07	-	51099B-5	-	1,2,3
	88-99	-	13124	-	1,2,3
	73-87	13122	51099B-5	-	1,2,3
	69-72	13122	-	-	1,2,3
S-10/ S-15 (Incl. Blazer/ Jimmy) - 2WD/ 4WD	82-98	13120	51099B-5	-	1,2,3
Van - 1500/ 2500/ 3500 - 2WD	71-96	-	51099B-5	-	1,2,3
<b>DODGE</b>					
Ram 1500 - 2WD/ 4WD	94-01	13120	-	-	1,2,3
	61-93	13122	-	-	1,2,3
Ram 2500/ 3500 - 2WD/ 4WD	61-93	13122	-	-	1,2,3
Ramcharger/ Trailduster - 2WD/ 4WD	61-93	13122	-	-	1,2,3
Van (B-Series) - 2WD	71-92	13122	-	-	1,2,3
<b>FORD</b>					
Bronco - 2WD/ 4WD	78-96	-	13128	-	1,2,3
	66-77	13122	-	-	1,2,3
Courier - 2WD/ 4WD	72-84	13120	-	-	1,2,3
Excursion - 2WD/ 4WD	00-06	13126	13128	-	1,2,3
Explorer - 2WD	95-02	-	-	13135	1,2,3
	83-97	13120	-	-	1,2,3
F150/ Lincoln Mark LT - 2WD/ 4WD	09-14	-	13137	-	1,2,3
	04-08	-	13134	-	1,2,3
F150/ F250 (7 Lug) - 2WD/ 4WD (w/ 2.5" rear spring)	97-03	-	13132	-	1,2,3
F100/ F150 - 2WD/ 4WD (w/ 3" rear spring)	73-96	-	13128	13130	1,2,3
F100/ F150 - 2WD/ 4WD (w/ 2.5" rear spring)	62-96	13122	-	-	1,2,3
F250/ F350 - 2WD/ 4WD	08-16	-	52800B-4	-	1,2,3
	99-07	13126	13128	-	1,2,3
	73-97	-	13128	13130	1,2,3
F250 - 4WD (w/ 2.5" rear spring)	67-77	13122	-	-	1,2,3
F250 - 2WD (w/ 2.5" rear spring)	57-79	13122	-	-	1,2,3
Ranger - 2WD	99-02	13120	13133	-	1,2,3
	83-97	13120	-	-	1,2,3
Van (E-Series) - 2WD	65-96	13122	-	-	1,2,3
<b>INTERNATIONAL</b>					
Pickup/ Travelall - 4WD	60-75	13122	-	-	1,2,3
<b>JEEP</b>					
Cherokee XJ/ Wagoneer XJ/ Comanche MJ - 2WD/ 4WD	84-01	13120	-	-	1,2,3
CJ-5/ CJ-7/ CJ-8 - 4WD	76-86	13120	-	-	1,2,3
CJ series/ DJ series/ MB/ M38/ M38A1 - 2WD/ 4WD	41-75	13170	-	-	1,2,3
Grand Cherokee/ Grand Wagoneer/ J10/ J20 - 4WD	63-92	13122	-	-	1,2,3
Jeepster/ C101 Series (Incl. Multi leaf spring) - 2WD/ 4WD	67-73	13120	-	-	1,2,3
Wrangler YJ - 2WD/ 4WD	87-96	13160	-	-	1,2,3
<b>LAND ROVER/ RANGE ROVER</b>					
Land Rover/ Range Rover - 4WD	59-81	13120	-	-	1,2,3
<b>MINI</b>					
Montero/ Pajero - 2WD/ 4WD	86-91	13120	-	-	1,2,3
Pickup Series - 2WD/ 4WD	82-84	13120	-	-	1,2,3
<b>NISSAN</b>					
Pickup Series/ Pathfinder - 2WD/ 4WD	68-97	13120	-	-	1,2,3
<b>TOYOTA</b>					
4Runner - 2WD/ 4WD (w/ 2.5" rear spring)	86-89	13120	-	-	1,2,3
Pickup Series - 2WD/ 4WD (w/ 2.5" rear spring)	70-95	13120	-	-	1,2,3
Tacoma - 2WD/ 4WD	96-11	57096B-5	-	-	1,2,3
Tundra - 2WD/ 4WD	00-16	57096B-5	-	-	1,2,3

- (1) Sold in pairs. Hardware pack included in kit.
- (2) Maximum height achieved will depend upon accessories, weight carried, and the age of the existing leaf spring.
- (3) Add-A-Leaf kits will not work with steel or fiberglass mono-style leaves.



## Leaf Spring Accessories

Application	Spring Width	Part No. - Bulk	Part No. - Pair	Notes:
<b>Spring Clips</b>				
Leaf Spring Bend Clip (Clamp & Plate)	3.0"	98-300	98-300B	5
	2.5"	98-250	98-250B	
<b>Centering Pin</b>				
Leaf Spring Centering Pin (Bulk pins do not come w/ hardware.) (Pair pins include hardware.)	5.0"	97-516	97-516B	
	4.5"	97-380	97-380B	
	4.5"	97-716	97-716B	
	3.5"	97-120	N/A	
	165mm	97-165	N/A	
<b>Degree Shims</b>				
Leaf Spring Degree Shim	2.0"	99-200	99-200B	4, 6
	3.0"	99-250	99-250B	
	3.0"	99-400	99-400B	
	3.0"	99-600	99-600B	

- (4) Degree shims may be required to realign rear driveshaft angles. Degree shims are sold separately and in pairs.
- (5) Spring clips may be required to keep leaf pack aligned. Spring clips are sold separately and in pairs.
- (6) Single and pair part numbers are packaged on a card for showroom display. Pro Comp degree shims are constructed of alloy aluminum and are designed to align driveshaft angles with aftermarket leaf springs. Pro Comp shims centering pin hole diameter is 5/16" (some reaming of holes may be necessary). Pro Comp does not recommend using more than 3 degree shims on any front axle.

## Leaf Springs/Add-a-Leaf Specifications

Part No.	Flat Length (Inches)	Free Length (Inches)	Camber (Inches)	Front Eyelet (Inches)	Rear Eyelet (Inches)	Leaf Width (Inches)	No. of Leaves	Weight (Lbs)	Spring Rate (Lbs/ Inches)	Spring Location
<b>LEAF SPRING SPECIFICATIONS</b>										
11211	47.00	45.75	3.93	1.50	1.12	2.50	5	43.12	526	Front
11411	47.00	45.62	4.52	1.50	1.12	2.50	5	45.06	550	Front
11511	47.62	45.62	6.69	1.50	1.12	2.50	6	48.30	589	Front
13211	65.66	61.50	9.50	0.57	0.57	2.50	5	78.20	191 / 512	Rear
13311	53.07	48.74	9.17	0.57	0.57	2.50	6	59.75	289 / 520	Rear
13411	54.56	48.58	10.92	0.57	0.57	2.50	6	63.14	333 / 520	Rear
13511	57.48	52.82	9.84	0.57	0.57	2.50	6	74.00	394 / 579	Rear
13611	58.54	52.84	10.78	0.57	0.57	2.50	6	76.78	397 / 586	Rear
13711	66.53	60.89	11.45	0.57	0.57	2.50	5	81.26	198 / 491	Rear
22210	58.80	53.50	6.00	2.00	1.75	3.00	5	69.00	430	Front
22410	58.80	52.00	8.10	2.00	1.75	3.00	5	70.48	435	Front
22415	62.67	54.50	10.70	2.00	1.75	3.00	6	78.00	375	Rear
22518	67.25	63.49	10.36	1.81	1.63	3.00	5	78.00	418	Rear
22610	59.30	50.75	9.75	2.00	1.75	3.00	6	79.00	490	Front
23211	56.92	53.03	8.89	0.57	0.65	3.00	6	77.88	340 / 525	Rear
23311	60.10	52.74	12.28	0.65	0.73	3.00	5	83.02	440 / 636	Rear
23411	58.58	25.64	11.14	0.57	0.65	3.00	6	79.02	333 / 462	Rear
31211L	45.88	42.50	7.08	1.17	1.17	2.36	3	28.14	340	Front
31212R	45.88	42.75	6.57	1.17	1.17	2.36	3	28.24	340	Front
31221L	45.50	43.25	5.62	1.17	1.17	2.36	3	28.14	301	Front
31222R	45.50	43.50	5.00	1.17	1.17	2.36	3	25.76	301	Front
31252	44.30	41.62	6.40	1.37	1.37	2.75	6	43.20	385	Front
31253	44.87	41.25	7.91	1.38	1.38	2.75	5	41.20	360	Rear
33211	51.96	74.12	9.44	1.25	1.25	60mm	4	35.86	162 / 340	Rear
33311	48.22	42.44	9.56	1.25	1.25	60mm	4	30.84	209 / 310	Rear
51212	45.00	42.50	6.37	1.50	1.00	2.00	5	28.28	274	Front
51213	40.62	38.12	6.06	0.87	0.87	1.77	6	24.74	304	Front
51222	45.62	43.00	6.50	1.50	1.00	2.50	5	34.24	293	Rear
51223	46.75	43.25	6.92	0.87	0.87	1.77	6	31.64	290	Rear
51313	46.00	41.37	8.56	1.50	1.50	2.50	4	27.88	195	Front
51323	45.87	42.37	7.40	1.50	1.50	2.50	4	28.60	188	Rear
51412	45.12	41.00	8.60	1.00	1.50	2.00	5	27.50	245	Front
51413	46.00	42.10	7.97	1.50	1.50	2.50	5	33.74	287	Front
51422	46.19	42.25	8.47	1.50	1.00	2.50	5	36.00	330	Rear
51423	45.87	42.12	7.90	1.50	1.50	2.50	4	28.52	228	Rear
53111	52.12	47.95	8.22	0.57	0.65	2.50	4	37.00	141 / 235	Rear

LEAF SPRING

Part No.	Flat Length (Inches)	Eye To Center Pin (Inches)	Leaf Width (Inches)	Leaf Thickness (Inches)	Camber (Inches)	Weight (Lbs)	Spring Rate (Lbs/ Inches)	Leaf Type	Add-A-Leaf Kit Part No.
<b>ADD-A-LEAF SPECIFICATIONS</b>									
13120-1	21.50	10.75 / 10.75	2.25	0.375	2.250	4.00	1154	Taper	13120
13122-1	27.70	13.85 / 13.85	2.25	0.625	1.900	9.10	2525	Taper	13122
13124-1	50.25	25.12 / 25.12	2.50	0.320	7.620	10.66	78	Square	13124
13125-1	46.25	23.12 / 23.12	2.50	0.320	6.250	10.75	76	Square	13124
13126-1	46.37	21.25 / 25.12	3.00	0.350	7.750	12.94	171	Square	13130
13127-1	46.25	23.12 / 23.12	2.50	0.320	6.250	10.75	76	Square	13124
12128-1	49.75	22.25 / 27.50	3.00	0.325	8.000	13.94	105	Square	13130
13129-1	36.00	18.00 / 18.00	2.50	0.313	4.290	11.50	-	Square	13129
13132-1	45.25	24.75 / 20.50	2.50	0.375	7.000	11.42	165	Diamond-P	13132
13133-1	48.55	25.12 / 23.42	2.50	0.320	6.750	10.50	91	Square	13133
13134-1	44.00	19.5 / 24.5	3.00	0.313	8.070	16.50	105	Square	13134
13135-1	48.55	25.12 / 23.42	2.50	0.320	6.750	10.50	91	Square	13135
13135-2	40.00	22.00 / 18.00	2.50	0.320	4.750	8.60	131	Square	13135
13136-1	41.66	17.825 / 23.63	3.00	0.343	6.213	15.25	138	Square	52423B-3
13137-1	44.00	21.00" / 22.50"	3.00	0.313	8.070	11.22	105	Square	13137
13150-1	40.75	20.375 / 20.375	3.00	0.350	5.375	17.00	210	Square	13150
13150-2	38.75	19.395 / 19.395	3.00	0.350	5.375	11.50	230	Square	13150
13160-1	45.00	22.50 / 22.50	2.50	0.250	6.750	8.02	58	Square	13160
13170-1	23.00	11.50 / 11.50	1.75	0.430	2.500	3.78	1250	Radius Taper	13170

## Coil Spring Specifications

Part No.	Free Length (Inches)	Spring Rate (Lbs/ Inches)	Spring I.D. (Inches)	Wire Diameter (Inches)	Weight (Lbs)	Spring Location
<b>COIL SPRING SPECIFICATIONS</b>						
14121-2	20.25	285	5.1	0.718	18.50	Rear
14122-1	18.93	285	5.1	0.718	18.00	Rear
14514-1	21.87	1065	4.04	0.906	27.00	Front
14516-1	21.25	1042	4.06	0.906	26.50	Front
14157-1	20.94	1050	5.1	0.718	16.95	Rear
24121-1	19.15	790	4.1	0.875	28.00	Front
24122-1	19.15	790	4.1	0.875	28.00	Front
24212-1	17.50	400	4.04	0.718	16.75	Front
24412-1	18.90	475	4.04	0.781	24.04	Front
24413-1	19.61	485	4.04	0.812	25.22	Front
24513-1	17.50	450	3.57	0.718	18.62	Front
24514-1	24.83	405	4.03	0.812	31.00	Front
24515-1	24.57	495	4.03	0.843	31.00	Front
24612-1	20.34	450	4.04	0.782	29.22	Front
24613-1	21.12	430	4.06	0.812	25.50	Front
24614-1	21.50	640	3.81	0.843	30.72	Front
24615-1	21.60	740	4.02	.906 - .937	29.00	Front
24618-1	16.50	560	3.27	0.718	16.05	Front
52160-1	21.00	825	4.025	0.937	34.69	Front
55099B-3	13.98	180	3.875	0.562	10.50	Front
55207-1	16.50	207	3.96	0.675	9.62	Rear
55217-1	15.88	207	3.96	0.625	10.50	Rear
55297-1	17.87	170	4.04	0.593	13.22	Front
55298-1	13.54	175	5.38	0.593	8.72	Rear
55404-1	16.10	200	5.37	0.656	13.45	Rear
55417-1	18.88	207	4.94	0.656	14.25	Rear
55497-1	20.73	175	4.04	0.625	18.22	Front
55498-1	15.80	175	5.38	0.625	10.72	Rear
55592-1	18.30	230	4.04	0.625	14.17	Front
55593-1	15.82	188	3.85	0.562	8.86	Rear
55594-1	16.33	148	3.9	0.531	9.50	Rear
55595-1	17.25	153	3.94	0.531	9.50	Rear
55596-1	14.82	188	3.87	0.562	10.50	Front
55598-1	19.40	220	4.09	0.625	17.50	Front
55617-1	21.88	170	4.04	0.625	17.25	Front
56160-1	24.50	425	5.1	0.875	41.50	Front
56170-1	25.50	295	5.1	0.813	41.50	Front
57407-1	17.14	725	3.375	0.781	20.50	Front
57490-1	18.87	140	4.16	0.593	10.72	Rear
57491-2	15.74	718	2.875	0.781	15.50	Front
57492-2	15.24	273	5.1	0.687	13.00	Rear
57492-2	15.24	273	5.1	0.687	13.00	Rear

## Replacement Spring Bushings — Front

Application	Year	Spring		Front Eye				Rear Eye		KIT			
		Lift Ht.	P/N	Bushing	Sleeve	Bushing	Sleeve	1 Spring	2 Springs				
<b>REPLACEMENT SPRING BUSHINGS - FRONT</b>													
<b>CHEVY/ GMC</b>													
Silverado/ Sierra PU / Blazer/ Jimmy/ Suburban 1500/ 2500 - 4WD	73-91	2.5"	11211	612011	x2	51034	x1	512021	x2	51058	x1	-	69201
		4"	11411	612011	x2	51034	x1	512021	x2	51058	x1	-	69201
		6"	11511	612011	x2	51034	x1	512021	x2	51058	x1	-	69201
<b>FORD</b>													
Excursion - 4WD	00-06	4"	22210	12164402	x1	-	-	12185102	x1	-	-	90-3806	-
		6"	22410	12164402	x1	-	-	12185102	x1	-	-	90-3806	-
F250/ F350 P/U - 4WD	99-04	2"	22210	12164402	x1	-	-	12185102	x1	-	-	90-3806	-
		4"	22410	12164402	x1	-	-	12185102	x1	-	-	90-3806	-
		6.5"	22610	12164402	x1	-	-	12185102	x1	-	-	90-3806	-
<b>JEEP</b>													
CJ Series/ DJ Series - 2WD/ 4WD	53-75	2.5"	51213	632051	x2	51096	x1	632051	x2	51096	x1	-	69241
CJ5/ CJ7 - 4WD	76-86	2.5"	51212	632011	x2	55089-2	x1	632021	x2	-	-	-	69231
		4"	51412	632011	x2	55089-2	x1	632021	x2	-	-	-	69231
Wrangler YJ - 4WD	87-96	2.5"	51313	632031	x2	55089-2	x1	632031	x2	55089-1	x1	-	69261
		4"	51413	632031	x2	55089-2	x1	632031	x2	55089-1	x1	-	69261
<b>TOYOTA</b>													
Pickup / 4Runner - 4WD (Left)	79-85	4"	31211L	650211	x2	-	-	650211	x2	-	-	-	69271
Pickup / 4Runner - 4WD (Right)	79-85	4"	31212R	650211	x2	-	-	650211	x2	-	-	-	69271
Pickup / 4Runner - 4WD (Left)	79-85	3"	31221L	650211	x2	-	-	650211	x2	-	-	-	69271
Pickup / 4Runner - 4WD (Right)	79-85	3"	31222R	650211	x2	-	-	650211	x2	-	-	-	69271
FJ40 - 4WD	64-80	2.5"	31252	652021	x2	-	-	652021	x2	-	-	-	69221

# Replacement Spring Bushings — Rear

Application	Year	Spring		Front Eye		Rear Eye		KIT					
		Lift Ht.	P/N	Bushing	Sleeve	Bushing	Sleeve	1 Spring	2 Springs				
<b>REPLACEMENT SPRING BUSHINGS - REAR</b>													
<b>CHEVY/ GMC</b>													
Silverado/ Sierra PU - 1500/ 2500/ 3500 - 4WD	88-98	3"-3.5"	13211	12143831	x1	-	12143831	x1	-	90-3803	-		
		5"-5.5"	13711	12144451	x1	-	12144451	x1	-	90-3804	-		
Silverado/ Sierra PU - 1500/ 2500 - 4WD (w/ 52" rear spring)	69-87	4"	13311	12143831	x1	-	12143831	x1	-	90-3803	-		
		6"	13411	12143831	x1	-	12143831	x1	-	90-3803	-		
Blazer/ Jimmy / Tahoe/ Yukton - 4WD (2 Door)	92-98	4"	13311	12143831	x1	-	12143831	x1	-	90-3803	-		
		6"	13411	12143831	x1	-	12143831	x1	-	90-3803	-		
Blazer/ Jimmy - 4WD	73-91	4"	13311	12143831	x1	-	12143831	x1	-	90-3803	-		
		6"	13411	12143831	x1	-	12143831	x1	-	90-3803	-		
Blazer/ Jimmy - 4WD	69-72	2"	13311	12143831	x1	-	12143831	x1	-	90-3803	-		
		4"	13411	12143831	x1	-	12143831	x1	-	90-3803	-		
Suburban - 4WD (w/ 52" rear spring)	69-91	2"	13311	12143831	x1	-	12143831	x1	-	90-3803	-		
		4"	13411	12143831	x1	-	12143831	x1	-	90-3803	-		
Silverado/ Sierra PU - 2500/ 3500 - 4WD (w/ 56" rear spring)	69-87	4"	13511	12143831	x1	-	12143831	x1	-	90-3803	-		
		6"	13611	12144451	x1	-	12144451	x1	-	90-3804	-		
Suburban - 4WD (w/ 56" rear spring)	69-91	4"	13511	12143831	x1	-	12143831	x1	-	90-3803	-		
		6"	13611	12144451	x1	-	12144451	x1	-	90-3804	-		
<b>FORD</b>													
Bronco - 4WD	78-96	4"	23211	12143511	x1	-	12163811	x1	-	90-3802	-		
		6"	23411	12143511	x1	-	12163811	x1	-	90-3802	-		
Excursion - 4WD	00-06	6"	23311	12164111	x1	-	12185121	x1	-	90-3805	-		
F100/ F150 - 4WD	73-96	4"	23211	12143511	x1	-	12163811	x1	-	90-3802	-		
		6"	23411	12143511	x1	-	12163811	x1	-	90-3802	-		
F250/ F350 - 4WD	08-10	5"	22518	12164111	x1	-	12204601	-	-	90-3807	-		
F250/ F350 - 4WD	99-07	5"	22415	12164402	x1	-	12185102	x1	-	90-3806	-		
		6"	23311	12164111	x1	-	12185121	x1	-	90-3805	-		
F250/ F350 - 4WD	80-98	3" - 4"	23211	12143511	x1	-	12163811	x1	-	90-3802	-		
		5" - 6"	23411	12143511	x1	-	12163811	x1	-	90-3802	-		
F250 - 4WD (Low Boy Series)	77.5-79	3" - 4"	23211	12143511	x1	-	12163811	x1	-	90-3802	-		
		5" - 6"	23411	12143511	x1	-	12163811	x1	-	90-3802	-		
<b>JEEP</b>													
Cherokee XJ - 2WD/ 4WD	84-01	2.5"	53111	12143211	x1	-	12145111	x1	-	-	90-3801		
CJ5/ CJ6 Series/ DJ5 Series - 4WD	53-75	2.5"	51223	632051	x2	51096	x1	632051	x2	51096	x1	-	69241
CJ5/ CJ7 - 4WD	76-86	2.5"	51222	632031	x2	55089-2	x1	632041	x2	-	-	69251	
		4"	51422	632031	x2	55089-2	x1	632041	x2	-	-	69251	
Wrangler YJ - 4WD (1)	87-96	2.5"	51323	632031	x2	55089-2	x1	632031	x2	55089-1	x1	-	69261
		4"	51423	632031	x2	55089-2	x1	632031	x2	55089-1	x1	-	69261
<b>TOYOTA</b>													
Pickup - 4WD	79-88	3"-4"	33311	632061	x2	-	632061	x2	-	-	-		
Tacoma PU - 4WD	95-97	3"-5"	33211	233320	x1	-	233320	x1	-	-	-		
TOYOTA FJ40 - 4WD	64-80	2.5"	31253	652021	x2	-	652021	x2	-	-	69221		

BUSHINGS

Notes: (1) YJ springs do not come with bushings. Bushings included in suspension box kit #55089B

## Drivelines — Front

Application	Year	Lift Height	Driveshaft Type	Complete Driveshaft	Driveshaft Spacer	CV Spacer
<b>CHEVY/ GMC</b>						
Silverado/ Sierra - 1500 - 4WD (6 spd automatic)	14-16	6"	CV Style	51257	-	-
Silverado/ Sierra/ Suburban/ Tahoe/ Yukon - 1500 - 4WD (6 spd automatic)	10-13	6"	CV Style	51245	-	-
Silverado/ Sierra/ Suburban/ Tahoe/ Yukon - 1500 - 4WD (4 spd automatic)	07-09	6"	CV Style	51249	-	-
Silverado/ Sierra 1500 - 4WD (4 spd automatic)	99-06	6"	CV Style	51256	-	90-4077
Suburban/ Tahoe/ Yukon - 1500/ 2500 - 4WD / AWD (Borg Warner Case #4482)	04-06	6"	CV Style	51257	-	-
Silverado/ Sierra - 2500HD/ 3500HD 4WD w diesel / Allison 6 spd automatic - (A-Arm Drop Kit)	99-10	6"	CV Style	51258	-	-
Silverado/ Sierra - 1500HD/ 2500HD 4WD w 6.0L/ 8.1L - (A-Arm Drop Kit)	99-10	6"	CV Style	51257	-	90-4274
<b>DODGE</b>						
Ram 1500 - 4WD (2)	06-09	6"	-	-	90-4127	-
<b>FORD</b>						
F150/ Lincoln Mark LT - 4WD	09-10	6"	-	-	90-4248	-
	04-08	6"	CV Style	52208	-	-
F250/ F350 - 4WD	99-04	8.5"	-	-	90-4107B	-
<b>JEEP</b>						
JK (2 Door/ 4 Door) - 4WD	07-16	0"-4"	Non CV Style	55827B	-	-
	07-16	0"-6"	CV Style	55837B	-	-
YJ - 4WD	87-93	0"-5"	CV Style	4040 (1)	-	-
	94-95	0"-5"	CV Style	4041 (1)	-	-
TJ - 4WD	96-06	0"-4"	CV Style	4042 (1)	-	-

## Drivelines — Rear

Application	Year	Lift Height	Driveshaft Type	Complete Driveshaft	Driveshaft Spacer	CV Spacer
<b>FORD</b>						
F150/ Lincoln Mark LT - 4WD	04-13	6"	-	-	90-4107B	-
<b>JEEP</b>						
JK (4 Door) - 2WD/ 4WD	07-16	0"-4"	Non CV Style	55767B	-	-
<b>TOYOTA</b>						
FJ Cruiser - 4WD	06-09	6"	-	-	90-4143	-

### Notes:

- (1) Requires Transfer Case Tail Shaft Conversion Kit 4007.
- (2) This kit does not fit Vehicles with 46RE transmissions, 5600 6-speed transmission and models with 4 bolts holding the transfer case to the transmission.
- (3) Trans drop 52828B can only be used on vehicles with Pro Comp Stage II kits. Trans drop will not fit vehicle with Stage I radius arm drop brackets.
- (4) Fits 97-02 Jeep Wrangler.

## Driveline Correction

Application	Year	Lift Height	Transfer Case Index Ring Kit	Transfer Case Conversion	Carrier Bearing Shim Kit	Trans Drop
<b>TRANSFER CASE CONVERSION / CARRIER BEARING SHIM KITS</b>						
<b>CHEVY/ GMC</b>						
Silverado/ Sierra - 1500HD/ 2500HD - 4WD	99-10	6"	-	-	51255	-
<b>DODGE</b>						
Ram 1500 - 4WD	06-10	6"	56701 (2)	-	-	-
Ram 2500/ 3500 - 4WD	94-10	2"-5"	-	-	51255	-
Ram 2500/ 3500 (Gas) - 4WD	03-05	6"	-	-	-	90-5140B
	06-08	6"	-	-	-	90-5143B
Ram 2500/ 3500 (5.9L Diesel) - 4WD	03-05	6"	-	-	-	90-5146B
	06-08	6"	-	-	-	90-5149B
Ram 2500/ 3500 (6.7L Diesel) - 4WD	07-10	6"	-	-	-	90-5152B
<b>FORD</b>						
F250/ F350/ Excursion - 4WD	08-10	8"	-	-	-	52828B (3)
	99-07	0"-8.5"	-	-	52480	-
<b>JEEP</b>						
YJ/ TJ (NP231) - 4WD	87-06	0"-5"	-	4007	-	55589 (4)
<b>NISSAN</b>						
Titan/ Armada - 2WD/ 4WD	04-15	6"	-	-	59003B	-
<b>TOYOTA</b>						
Tundra - 4WD	07-16	6"	-	-	90-6613	-

## Notes:

- (1) Requires Transfer Case Tail Shaft Conversion Kit 4007.
- (2) This kit does not fit Vehicles with 46RE transmissions, 5600 6-speed transmission and models with 4 bolts holding the transfer case to the transmission.
- (3) Trans drop 52828B can only be used on vehicles with Pro Comp Stage II kits. Trans drop will not fit vehicle with Stage I radius arm drop brackets.
- (4) Fits 97-02 Jeep Wrangler.

## Steering Components

Application	Year	Drop	Drag Link	Pitman Arm	Steering Arm	Notes:
<b>CHEVY/ GMC</b>						
Silverado/ Sierra 1500/ 2500 - 4WD (w/Dana 44 & Corporate axle only)	73-91	4"	GDL40	-	GM400	4,5
Blazer/ Jimmy/ Suburban 1500/ 2500 - 4WD (w/Dana 44 & Corporate axle only)	73-91	4"	GDL40	-	GM400	4,5
<b>DODGE</b>						
Ram 2500/ 3500 - 4WD	2009	4"	-	DC600	-	1
Ram 2500/ 3500 - 4WD	03-08	3"	-	DC400	-	1
		4"	-	DC500	-	1
<b>FORD</b>						
Bronco - 2WD/ 4WD	81-98	4"	-	FD400	-	1,2
Excursion - 2WD	00-05	4"	-	FD600	-	1,3
Excursion - 4WD	00-05	4"	-	FD500	-	1,3
F100/ F150 - 2WD/ 4WD (Twin I-beam w/Power steering)	81-98	4"	-	FD400	-	1,2
F250/ F350 - 4WD	11-16	4"	-	FD800	-	1
F250/ F350 - 4WD	05-10	4"	-	FD700	-	1
F250/ F350 - 2WD	99-04	4"	-	FD600	-	1,3
F250/ F350 - 4WD	4/99-04	4"	-	FD500	-	1,3
F250/ F350 - 4WD	98-3/99	4"	-	FD400	-	1,2
Ranger/ Bronco II/ Explorer - 2WD/ 4WD	83-97	4"	-	FD400	-	1,2
<b>JEEP</b>						
YJ/ TJ/ LJ - 4WD	87-06	4"	-	YJ400	-	1
TJ/ LJ (Right Hand Drive) - 4WD	97-06	4"	-	CJ400	-	1
CJ5/ CJ7/ CJ8 - 4WD	76-86	4"	-	CJ400	-	1
<b>TOYOTA</b>						
Pickup/ 4Runner - 4WD	79-95	4"	TOY400	-	-	-

## Steering Protection/Bracing

Application	Year	Steering Box Protector	Steering Box Brace Kit	Notes:
<b>JEEP</b>				
Wrangler TJ/ LJ - 4WD	97-06	55500	-	1
Wrangler YJ - 4WD	87-96	-	55070B	1
CJ5/ CJ7/ CJ8 - 4WD	76-86	-	55060B	1

- (1) Power Steering Only.
- (2) FD400 fits steering box shaft with 1.313" diameter. Has four key ways in shape of "+".
- (3) FD500/ FD600 fits steering box shaft with 1.375" diameter. Has four key ways in shape of "x".
- (4) Replacement Drag Link end GDL40 is available seperately.
- (5) Steering Arm Nut Kit GM400K is available seperately.



## Alignment Eccentrics/ Cambolts (Pairs)

	Year	Front/ Rear	Camber/ Caster	Pinion Angle	Notes:
<b>CHEVY/ GMC</b>					
Avalanche/ Silverado/ Sierra/ Suburban/ Tahoe/ Yukon/ Yukon XL - 1500/ 2500 - 4WD	99-07	Front	90-6170	-	-
Silverado/ Sierra - 1500HD/ 2500HD - 2WD/ 4WD	99-10	Front	90-6170	-	-
<b>FORD</b>					
Bronco - 4WD	83-96	Front	532	-	-
F150/ Lincoln Mark LT - 2WD/ 4WD	09-14	Front	90-6700	-	-
F150/ Lincoln Mark LT - 2WD/ 4WD	04-08	Front	90-6324	-	-
F150 - 4WD	83-96	Front	532	-	-
F150 - 2WD	87-96	Front	594	-	-
F250/ F350 - 4WD	05-16	Front	599	-	-
F250/ F350 - 2WD	99-04	Front	594	-	-
Ranger/ Bronco II/ Explorer - 2WD/ 4WD	88.5-97	Front	594	-	-
<b>JEEP</b>					
Cherokee XJ - 2WD/ 4WD	84-01	Front	20-65226	-	-
Grand Cherokee ZJ - 2WD/ 4WD	92-98	Front	20-65226	-	-
Wrangler JK - 2WD/ 4WD	07-16	Front	20-65227	-	-
		Rear	-	20-65228	-
Wrangler TJ/ LJ - 2WD/ 4WD	97-06	Front	20-65226	-	-
		Rear	-	20-65225	-
<b>NISSAN</b>					
Titan 2WD/ 4WD w/ P.C. KIT	04-15	Front	90-6410	-	-

# SUSPENSION ACCESSORIES

## Accu Pro Calibration Tools

	Year	Part No.	Engine	DTC	Tire Size	Rear Gear
<b>CHEVY / GMC / CADILLAC / HUMMER</b>						
Sierra/ Silverado - 1500	2015	PC32010-1	4.3/5.3	Yes	24"-54"	No
Suburban/Tahoe/Yukon	2015	PC32010-1	5.3	Yes	24"-54"	Yes
Avalanche/ Escalade/ Sierra/ Silverado/ Suburban/Tahoe/Yukon - 1500	11-14	PC32010-1	4.8/ 5.3/ 6.2	Yes	24"-54"	Yes
Avalanche/ Escalade/ Sierra/ Silverado/ Suburban/ Tahoe/ Trailblazer SS/ Yukon - 1500/2500/3500	07-10	PC32004-1	4.8/ 5.3/ 6.0	Yes	24"-54"	Yes
Sierra HD/ Silverado HD	11-15	PC32003-1	6.6 Duramax	Yes	24"-54"	Yes
Sierra HD/ Silverado HD	06-10	PC32003-1	6.6 Duramax	Yes	26"-36"	Yes
Sierra HD/ Silverado HD	01-05	PC32001-1	6.6 Duramax	Yes	24"-44"	No
Sierra/ Silverado/ Suburban/ Blazer/ S10/ Sonoma/ Jimmy/ Tahoe/ Yukon	96-01	PC32000-1	4.3/ 5.0/ 5.7/ 7.4	Yes	24"-34"	Yes
Sierra/ Silverado/ Suburban/ Tahoe/ Yukon	99-01	PC32000-1	4.3/4.8/ 5.3/ 6.0	Yes	24"-34"	Yes
Avalanche/ Sierra/ Silverado/ Suburban	01-07	PC32000-1	8.1	Yes	24"-54"	Yes
Avalanche/Sierra/ Silverado (07 Classic)/ Suburban/ Yukon/ Escalade/ Escalade EXT/ Escalade ESV	02-07	PC32000-1	4.3/4.8/5.3/6.0	Yes	24"-54"	Yes
<b>FORD / LINCOLN / MERCURY</b>						
F150 including EcoBoost	2015		2.7/ 3.5/ 3.7/5.0	Yes	24"-54"	No
F150 including EcoBoost	11-14	PC42010-1	3.5/ 3.7/5.0 /6.2	Yes	24"-54"	Yes
F150/ Mark LT	04-10	PC42003-1	4.2/ 4.6/ 5.4	Yes	24"-54"	Yes
F150/ F150 - Heritage/ Expedition/ E-Series Van/Lightning	99-04	PC42000-1	4.6/ 5.4	Yes	24"-54"	Yes
F250-F550	11-12	PC42005-1	6.7 P. Stroke	Yes	24"-37"	-
F250-F550	11-14	PC42010-1	6.2	Yes	31.5"-34"	Yes
F250-F550	08-10	PC42005-1	6.4 P. Stroke	Yes	31.5"-33.5"	No
F250-F550/ E-Series Van (06-08)	06-07	PC42005-1	6.0 P. Stroke	Yes	29"-43"	No
F250-F350	08-10	PC42008-1	6.8	Yes	30.5"-35"	No
F250-F350	08-10	PC42003-1	5.4	Yes	30.5"-35"	No
F250-F350/ E-Series Van (05-09)	05-07	PC42008-1	6.8	Yes	29"-43"	No
F250-F350	05-07	PC42003-1	5.4	Yes	29"-43"	No
F250-F550/ Excursion/E-Series Van	03-05	PC42002-1	6.0 P. Stroke	Yes	24"-37"	-
F250-F550 / Excursion (00-05)	99-04	PC42000-1	5.4/ 6.8	Yes	29"-43"	No
F250-F550/ Excursion	99-03	PC42001-1	7.3 P. Stroke	Yes	29"-43"	No
Expedition/ Navigator	05-11	PC42003-1	5.4	Yes	24"-54"	Yes
<b>DODGE / CHRYSLER</b>						
Ram 1500/ 2500 EcoDiesel	14-15	PC52009-1	3.0 Diesel	Yes	22.5"-44"	Yes
Ram 1500	13-15	PC52001-1	3.6	Yes	22.5"-44"	Yes
Ram 1500/ 2500/ Durango (04-05, 2011)	06-15	PC52001-1	5.7 Hemi	Yes	22.5"-44"	Yes
Durango	06-09	PC52001-1	5.7 Hemi	Yes	29"-30.5"	Yes
Ram 1500/ 2500/ Aspen/ Dakota	05-12	PC52001-1	3.7/ 4.7	Yes	22.5"-44"	Yes
Durango	07-09	PC52001-1	4.7	Yes	29"-30.5"	Yes
Durango	05-06	PC52001-1	4.7	Yes	22.5"-44"	Yes
Durango	06-09	PC52001-1	3.7	Yes	29"-30.5"	Yes
Durango	04-05	PC52001-1	3.7	Yes	22.5"-44"	Yes
Ram/ Dakota/ Durango	98-03	PC52000-1	5.2/ 5.9	Yes	22.5"-44"	No
Ram 2500/ 3500	07-15	PC52009-1	6.7 Cummins	Yes	22.5"-44"	No
Ram 2500/ 3500	2007	PC52007-1	5.9 Cummins	Yes	22.5"-44"	No
Ram 2500/ 3500	2006	PC52006-1	5.9 Cummins	Yes	22.5"-44"	No
Ram 2500/ 3500	2005	PC52005-1	5.9 Cummins	Yes	22.5"-44"	No
Ram 2500/ 3500	2004	PC52004-1	5.9 Cummins	Yes	22.5"-44"	No
Ram 2500/ 3500	2003	PC52003-1	5.9 Cummins	Yes	22.5"-44"	No
Ram 2500/ 3500	98.5-02	PC52008-1	5.9 Cummins	Yes	22.5"-44"	No
<b>JEEP</b>						
Grand Cherokee/ Commander	05-15	PC52001-1	5.7 Hemi	Yes	22.5"-44"	Yes
Grand Cherokee/ Commander	05-09	PC52001-1	4.7	Yes	22.5"-44"	Yes
Grand Cherokee/ Commander	05-10	PC52001-1	3.7	Yes	22.5"-44"	Yes
Grand Cherokee/ Commander	06-10	PC52001-1	6.1 Hemi	Yes	22.5"-44"	Yes
Wrangler	07-15	PC52001-1	3.8 / 3.6	Yes	22.5"-44"	Yes

1) Vehicles equipped with Kelsey-Hayes brake controller only

## Recovery Accessories

Application	Part No.	Width (Inches)	Length (Feet)	Weight Rating (Lbs/In.)
<b>RECOVERY STRAPS</b>				
Light Duty - No Hooks	101500	1	15	10,000
Light Duty - w/Hooks	101550	1	15	10,000
Heavy Duty	220000	2	20	20,000
Heavy Duty	230000	2	30	20,000
Heavy Duty	330000	3	30	30,000
Heavy Duty	430000	4	30	40,000
Tree Trunk Protector	306000	3	6	30,000

Application	2 Hole Black	2 Hole Chrome	3 Hole Black	3 Hole Chrome
<b>RECOVERY HOOKS - SINGLES</b>				
Recovery Hook - Bulk	TH6B	TH6C	TH7B	TH7C
Recovery Hook - Kit w/Hardware	TH6BC	TH6CC	TH7BC	TH7CC
Recovery Hook - Hardware Only (2 Bolts/ 1 Clip)	TH6H	-	-	-

Application	Part No.
<b>RECEIVER SHACKLE</b>	
2" Receiver Shackle - Universal	69312

## Jeep Bumpers

Application	Year	Front	Rear
TJ - Bumper w/D-Ring Mounts	97-06	66162	66168*
YJ - Bumper w/D-Ring Mounts	87-96	66162	66168
CJ - Bumper w/D-Ring Mounts	76-86	66162	66167
TJ - Bumper W/O D-Ring Mounts	97-06	66164	66165*
YJ - Bumper W/O D-Ring Mounts	87-06	66164	66165
CJ - Bumper W/O D-Ring Mounts	76-86	66164	66163

\* Drilling required on 97-00 TJ.

## Limit Straps

Description	Length	Part Number
Universal (Triple Thick)	11"	5113
Universal	16"	5162
Universal	17"	5172
Universal	18"	5182
Universal	20"	5202
Universal (Triple Thick)	21.5"	5213
Universal	22"	5222
Universal (Triple Thick)	22"	5223
Universal	24"	5242
Universal	26"	5262
Universal	29"	5292
Universal	31"	5312
Universal Weld -on Tab kit (w/ hardware)		5400

Limit strap is approximately .5" to 1' shorter than the full extension of the suspension to allow for stretch.

\* Drilling required on 97-00 TJ.

# SUSPENSION ACCESSORIES

## Block & U-Bolt Kits

Application	Year	1.5"		2.5"		3.0"		3.5"		4.0"		5.5"		Notes
		KIT Blocks	Hardware U-Bolt	KIT Blocks	Hardware U-Bolt	KIT Blocks	Hardware U-Bolt	KIT Blocks	Hardware U-Bolt	KIT Blocks	Hardware U-Bolt	KIT Blocks	Hardware U-Bolt	
<b>CHEVY / GMC - 4WD</b>														
Silverado PU / Sierra PU - 2500HD	11-16	-	-	-	-	-	20-65750	-	-	-	-	-	-	
		-	-	-	-	95-308B	13-90348	-	-	-	-	-	-	1,2,3
Silverado PU / Sierra PU / Blazer/Jimmy	88-10	-	-	-	-	-	-	-	-	58404	20-65471	58554	20-65471	
Suburban/ Tahoe/ Yukon - 1500/ 2500	92-99	-	-	-	-	-	-	-	-	95-400B	13-90347	95-550B	13-90347	1,2,3
Silverado PU / Sierra PU - 1500	99-13	-	-	-	-	-	-	-	-		20-65302	-	-	
		-	-	-	-	-	-	-	-	95-400	13-90087	-	-	1,2,3
Silverado PU / Sierra PU - 1500	73-87	-	-	58251	20-65471	-	-	-	-	58401	20-65471	58551	20-65471	
		-	-	95-250B	13-90217	-	-	-	-	95-400B	13-90243	95-550B	13-90243	1,2,3
Blazer/ Jimmy/ Suburban - 1500	73-91	-	-	58251	20-65471	-	-	-	-	58401	20-65471	58551	20-65471	
		-	-	95-250B	13-90217	-	-	-	-	95-400B	13-90243	95-550B	13-90243	1,2,3
Silverado PU / Sierra PU / Suburban - 2500	73-91	-	-	58252	20-65471	-	-	-	-	58402	20-65471	58552	13-90256	
		-	-	95-250B	13-90230	-	-	-	-	95-400B	13-90256	95-550B	20-65471	1,2,3
<b>CHEVY / GMC - 2WD</b>														
Silverado/ Sierra PU - 1500	99-14	-	-	-	-	-	-	-	-	-	20-65302	-	-	
		-	-	-	-	-	-	-	-	95-400	13-90087	-	-	1,2,3
Silverado/ Sierra PU - 1500	88-98	-	-	58250	20-65302	-	-	-	-	-	-	-	-	
		-	-	95-250	13-90126	-	-	-	-	-	-	-	-	1,2,3
<b>DODGE - 4WD</b>														
Ram 2500/ 3500 PU (Gas)	03-04	58156	20-65302	-	-	-	-	-	-	-	-	-	-	
		95-150D	13-90326	-	-	-	-	-	-	-	-	-	-	1,2,3
Ram 2500/ 3500 PU (Diesel)	03-08	-	-	-	-	-	13-90330	-	-	-	-	-	-	
		-	-	-	-	95-300D	20-65302	-	-	-	-	-	-	1,2,3
<b>DODGE - 2WD</b>														
Ram 1500 PU	94-99	22260	20-65302	-	-	-	-	-	-	-	-	-	-	
		95-150	13-90126	-	-	-	-	-	-	-	-	-	-	1,2,3

**Rear Block Kit Notes:**

- (1) Lift blocks are for rear axle use only. Do not use lift blocks on the front of any vehicle.
- (2) Use of lift blocks will require use of longer u-bolts. U-bolts are sold separately.
- (3) Lift blocks ending in "D" are Dodge applications.
- (4) Lift blocks ending in "F" are Ford applications.
- (5) Lift blocks ending in "SD" are Ford F250/ F350 applications.

## Block & U-Bolt Kits (cont.'d)

Application	Year	1.5"		2.5"		3.0"		3.5"		4.0"		5.5"		Notes
		KIT Blocks	Hardware U-Bolt	KIT Blocks	Hardware U-Bolt	KIT Blocks	Hardware U-Bolt	KIT Blocks	Hardware U-Bolt	KIT Blocks	Hardware U-Bolt	KIT Blocks	Hardware U-Bolt	
<b>FORD - 4WD</b>														
F-250 / 350	11-16	-	-	-	-	-	-	-	-	-	20-65471	-	20-65471	
		-	-	-	-	-	-	-	-	95-406SD 95-407SD	13-90540	95-556SD 95-557SD	13-90560	1,2,3,4,5
F-250 / F350	99-10	20-65471		-	-	-	-	-	-	-	20-65471	-	-	
		95-150F	13-90180	-	-	-	-	-	-	95-400SD	13-90190	-	-	1,2,3
F150 PU	09-14	-	-	-	-	-	-	-	-	-	20-65302	-	-	
		-	-	-	-	-	-	-	-	95-404F	13-90390	-	-	1,2,3
F150 PU	04-08	-	-	-	-	-	20-65302	-	-	-	-	-	-	
		-	-	-	-	95-254F	13-90390	-	-	-	-	-	-	1,2,3
F150 PU	80-96	-	-	22255	20-65302	-	-	-	-	22256	20-65302	-	-	
		-	-	95-250B	13-90464	-	-	-	-	95-400B	13-90477	-	-	1,2,3
Bronco	80-96	-	-	22257	20-65302	-	-	-	-	22258	20-65302	-	-	
		-	-	95-250B	13-90451	-	-	-	-	95-400B	13-90464	-	-	1,2,3
Ranger - 2WD/ 4WD	83-97	-	-	22250	20-65991	-	-	22251	20-65991	-	-	-	-	
		-	-	95-250B	13-90113	-	-	95-350B	13-90113	-	-	-	-	1,2,3
<b>TOYOTA - 4WD</b>														
4Runner (3.125" OD Axle)	89-94	-	-	-	-	-	-	57789	20-65302	-	-	-	-	
		-	-	-	-	-	-	95-352B	13-90139	-	-	-	-	1,2,3
4Runner (2.5" OD Axle)	79-89	-	-	-	-	-	-	57589	20-65302	-	-	-	-	
		-	-	-	-	-	-	95-350B	13-90126	-	-	-	-	1,2,3
Pickup (3.125" OD Axle)	89-94	-	-	-	-	-	-	57789	20-65302	-	-	-	-	
		-	-	-	-	-	-	95-352B	13-90139	-	-	-	-	1,2,3
Pickup (2.5" OD Axle)	79-85	-	-	-	-	-	-	57589	20-65302	-	-	-	-	
		-	-	-	-	-	-	95-350B	13-90126	-	-	-	-	1,2,3
Tacoma	05-15	-	-	20-65302		-	-	-	-	-	-	-	-	
		-	-	95-250	13-90126	-	-	-	-	-	-	-	-	1,2,3
Tacoma	96-99	-	-	-	-	-	-	57589	20-65302	-	-	-	-	
		-	-	-	-	-	-	95-350B	13-90126	-	-	-	-	1,2,3
T100 PU	93-98	-	-	-	-	-	-	57589	20-65302	-	-	-	-	
		-	-	-	-	-	-	95-350B	13-90126	-	-	-	-	1,2,3


**Rear Block Kit Notes:**

- (1) Lift blocks are for rear axle use only. Do not use lift blocks on the front of any vehicle.
- (2) Use of lift blocks will require use of longer u-bolts. U-bolts are sold separately.
- (3) Lift blocks ending in "D" are Dodge applications.
- (4) Lift blocks ending in "F" are Ford applications.
- (5) Lift blocks ending in "SD" are Ford F250/ F350 applications.

# SUSPENSION ACCESSORIES

## U-Bolt Kits

Application	Year	Front Axle			Rear Axle		
		Axle Type	Lift Method	Front Kit No.	Axle Type	Lift Method	Rear Kit No.
<b>CHEVY / GMC</b>							
Silverado/ Sierra/ Blazer / Jimmy / Suburban 1500/ 2500	88-98	-	-	-	GM10 Bolt	Blocks 2"-3"	50126
						Blocks 3"-4"	50087
						Blocks 4"-5.5"	50347
Silverado/ Sierra/ Blazer / Jimmy / Suburban 1500/ 2500	87.5-91	GM10 Bolt	Springs	58301	GM10 Bolt	Springs/ Add-a-leaf	50178
	76.5-87.5	GM10 Bolt	Springs	58201		Blocks 2"-3"	50204
	73-76.5	Dana 44	Springs	58101		Blocks 4"-5.5"	50243
					GM12 Bolt	Springs/ Add-a-leaf	50178
						Blocks 2"-3"	50204
						Blocks 4"-5.5"	50243
					GM14 Bolt	Springs/ Add-a-leaf	50165
						Blocks 2"-3"	50230
Silverado/ Sierra - 1500HD/ 2500HD	99-10	-	-	-	GM14 Bolt	Blocks 2"-3"	50360
						Blocks 4"-5.5"	50347
<b>DODGE</b>							
Ram 1500 / 2500/ 3500	72-10	-	-	-	Chrysler 9.25"	Blocks 1"-1.5"	50126
	03-10	-	-	-		Blocks 2"-3"	50191
					AAM 10.5"	Blocks 2"-3"	50328
<b>FORD</b>							
Bronco	81-96	-	-	-	Ford 8.8"	Springs/ Add-a-leaf	50334
						Blocks 2"-3"	50451
						Blocks 4"-5.5"	50464
F100/ F150/ F250 (7 Lug)	81-10	-	-	-	Ford 9.75"	Blocks 2"-3"	50139
						Blocks 4"-5.5"	50390
					Ford 8.8"	Springs/ Add-a-leaf	50438 OR 22259
						Blocks 2"-3"	50464
F250/ F350/ Excursion	98-10					Blocks 4"-5.5"	50477
		Dana 60R	Springs/ Add-a-leaf	50510 (Semi-Rnd)	Ford 10.25"	Springs/ Add-a-leaf	50191
		Dana 50	Springs/ Add-a-leaf	50356 (Square)		Blocks 2"-3"	50190
						Blocks 4"-5"	50180
						Blocks 5"-6"	50290
Ranger / Bronco II / Explorer	83-02	-	-	-	Dana 80	Blocks 2"-3"	58305
					Ford 7.5"	Springs/ Add-a-leaf	50295
					Ford 8.8"	Blocks 2.5"-3.5"	50113
<b>JEEP</b>							
Cherokee XJ	84-01	-	-	-	Dana 35	Springs/ Add-a-leaf	50050
					Chrysler 8.25"	Springs/ Add-a-leaf	50055
CJ - All	72-86	Dana 30	Springs	50010	AMC 20	Springs/ Add-a-leaf	50020
CJ - All	53-71	Dana 25/ Dana 27	Springs	50040	Dana 44	Springs/ Add-a-leaf	50030
YJ	87-96	Dana 30R	Springs	50060	Dana 35	Springs/ Add-a-leaf	50070
<b>NISSAN</b>							
Titan	04-10	-	-	-	Nissan	Blocks 3"-4"	50087
<b>TOYOTA</b>							
Landcruiser FJ40	64-80	Toyota 8.0"	Springs	Included in 50090	Toyota 8.0"	Springs	50090
Pickup (2.5" OD Rear Axle)	86-95	Toyota 8.0"	Springs	51315	Toyota 8.0"	Blocks 3"-4"	50126
Pickup (3.25" OD Rear Axle)					Toyota 8.0"	Blocks 3"-4"	50365
4Runner (2.5" OD Rear Axle)	79-89	Toyota 8.0"	Springs	51315	Toyota 8.0"	Blocks 3"-4"	50126
4Runner (3.25" OD Rear Axle)					Toyota 8.0"	Blocks 3"-4"	50365
Tacoma - 2WD/ 4WD	96-10	-	-	-	Toyota 7.5"	Blocks 3"-4"	50126
T100	93-98	-	-	-	Toyota 7.5"	Blocks 3"-4"	50126
Tundra	07-09	-	-	-	Toyota 7.5"	Blocks 3"-4"	50087

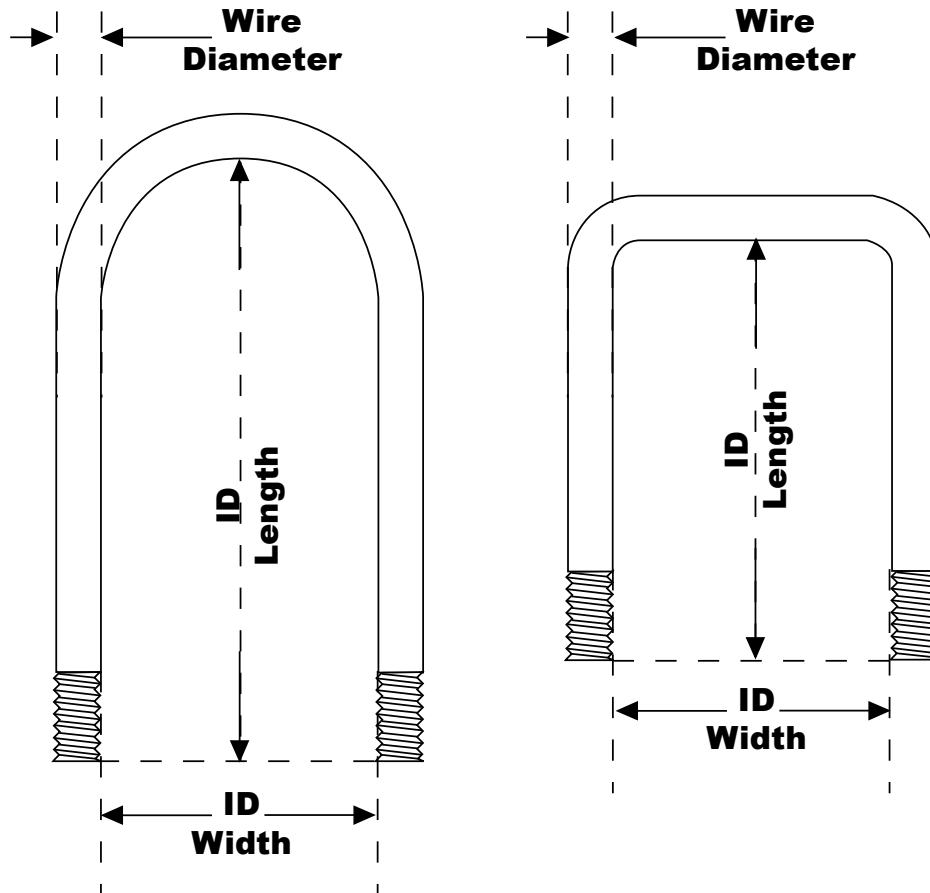

## U-Bolt Hardware

U-Bolt	U-Bolt w/Hardware	Thread Size	ID Width	ID Length	Bend	Used in Kit Number
<b>5/16" U-Bolts</b>						
020103	-	5/16"-18	x 1.00"	x 1.5625"	ROUND	
020107	-	5/16"-18	x 1.063	x 1.75"	ROUND	
020100	-	5/16"-18	x 1.25"	x 2.00"	ROUND	
<b>3/8" U-Bolts</b>						
020106	-	3/8"-16	x 1.4375"	x 2.50"	ROUND	
020101	-	3/8"-16	x 2.75"	x 3.250"	ROUND	
020102	-	3/8"-16	x 3.562"	x 4.300"	ROUND	
020105	-	3/8"-16	x 3.125"	x 3.6875"	ROUND	
<b>7/16" U-Bolts</b>						
020108	-	7/16"-20	x 3.8438"	x 5.750"	ROUND	
13-90090	13-90090A	7/16"-20	x 4.315"	x 4.80"	SQUARE	
<b>1/2" U-Bolts</b>						
13-90308	13-90308A	1/2" - 20	x 2.3125"	x 6.50"	ROUND	50040
13-90074	13-90074A	1/2" - 20	x 2.500"	x 7.00"	ROUND	50060 / 55089
13-90269	13-90269A	1/2" - 20	x 2.5625"	x 6.50"	ROUND	50010 / 50020 / 50070
13-90508	13-90508A	1/2" - 20	x 2.750"	x 7.50"	ROUND	50055
13-90295	13-90295A	1/2" - 20	x 2.875"	x 6.75"	ROUND	50030 / 50040 / 50295
13-90113	13-90113A	1/2" - 20	x 2.900"	x 9.875"	ROUND	22250 / 22251 / 50113
13-90496	13-90496A	1/2" - 20	x 3.062"	x 4.625"	ROUND	55099
13-90504	13-90504A	1/2" - 20	x 3.062"	x 6.00"	ROUND	55099

# SUSPENSION ACCESSORIES

## U-Bolt Hardware (cont.d)

U-Bolt	U-Bolt w/Hardware	Thread Size	ID Width	ID Length	Bend	Used in Kit Number
13-90282	13-90282A	1/2" - 20	x 3.250"	x 6.75"	ROUND	50010 / 50050
13-90061	13-90061A	1/2" - 20	x 3.250"	x 7.50"	ROUND	50060 / 50061 / 55089
13-90481	13-90481A	1/2" - 20	x 3.3125"	x 6.00"	ROUND	55099
<b>9/16" U-Bolts</b>						
13-90365	13-90365A	9/16" - 18	x 2.4375"	x 7.8215"	SQUARE	50365 / 51315
13-90370	13-90370A	9/16" - 18	x 2.4375"	x 6.625"	SQUARE	51315
13-90126	13-90126A	9/16" - 18	x 2.525"	x 10.00"	SQUARE	22260 / 50126 / 57096 / 57396 / 57589 / 58250 / 58260 / 57094
13-90087	13-90087A	9/16" - 18	x 2.650"	x 12.50"	SQUARE	50087 / 51007 / 51017 / 51020 / 51084 / 51099 / 59001 / 59004/
13-90360	13-90360A	9/16" - 18	x 2.650"	x 13.00"	SQUARE	56494 / 51019
13-90356	13-90356A	9/16" - 18	x 3.125"	x 9.25"	SQUARE	52210 / 52412 / 52414 / 52418 / 52419
13-90510	13-90510A	9/16" - 18	x 3.125"	x 9.25"	SEMI-ROUND	52416 / 52616
13-90530	13-90530A	9/16" - 18	x 3.125"	x 11.625"	SEMI-ROUND	52408 / 52418 / 52419
13-90321	13-90321A	9/16" - 18	x 3.250"	x 6.812"	ROUND	50090
13-90334	13-90334A	9/16" - 18	x 3.250"	x 7.75"	ROUND	50090 / 50334
13-90438	13-90438A	9/16" - 18	x 3.250"	x 10.625"	ROUND	22252 / 22253 / 22259 / 50438 / 52203
13-90451	13-90451A	9/16" - 18	x 3.250"	x 11.50"	ROUND	22257
13-90464	13-90464A	9/16" - 18	x 3.250"	x 12.50"	ROUND	22254 / 22255 / 22258
13-90477	13-90477A	9/16" - 18	x 3.250"	x 14.50"	ROUND	22256
13-90340	13-90340A	9/16" - 18	x 3.300"	x 5.50"	ROUND	
13-90139	13-90139A	9/16" - 18	x 3.343"	x 10.00"	SQUARE	57789
13-90390	13-90390A	9/16" - 18	x 3.375"	x 12.50"	SQUARE	52204 / 52205
13-90326	13-90326A	9/16" - 18	x 3.687"	x 11.00"	ROUND	56706 / 56726 / 58156
13-90330	13-90330A	9/16" - 18	x 3.660"	x 13.50"	ROUND	56708 / 56710
13-90550	13-90550A	9/16" - 18	x 4.305"	x 6.00"	ROUND	52449
<b>5/8" U-Bolts</b>						
13-90347	13-90347A	5/8" - 18	x 2.625"	x 14.00"	SQUARE	51098 / 51800 / 51801 / 51893 / 51894 / 58404 / 58554 / 58663
13-90204	13-90204A	5/8" - 18	x 2.9375"	x 7.812"	ROUND	58201 / 58301 / 58204
13-90217	13-90217A	5/8" - 18	x 3.00"	x 10.625"	ROUND	58251
13-90256	13-90256A	5/8" - 18	x 3.3125"	x 13.50"	ROUND	52614 / 58402 / 58552
13-90178	13-90178A	5/8" - 18	x 2.812"	x 7.50"	ROUND	50178 / 58101
13-90243	13-90243A	5/8" - 18	x 3.0625"	x 13.50"	ROUND	58401 / 58551
13-90230	13-90230A	5/8" - 18	x 3.375"	x 11.00"	ROUND	50230 / 58252
13-90180	13-90180A	5/8" - 18	x 3.550"	x 15.75"	ROUND	52412 / 52414 / 52415 / 52419 / 52421 / 52434 / 52484 / 52800 / 52801 / 52838
13-90190	13-90190A	5/8" - 18	x 3.550"	x 14.50"	ROUND	50190 / 52416 / 52418 / 52432 / 52513 / 52515 / 52820 / 52860
13-90290	13-90290A	5/8" - 18	x 3.550"	x 17.5"	ROUND	
13-90165	13-90165A	5/8" - 18	x 3.6875"	x 9.00"	ROUND	50165 / 58101
13-90191	13-90191A	5/8" - 18	x 3.687"	x 10.125"	ROUND	56702 / 56746 / 58201 / 58301
13-90260	13-90260A	5/8" - 18	x 4.062"	x 16.00"	ROUND	58305
13-90328	13-90328A	5/8" - 18	x 4.250"	x 14.125"	ROUND	50328 / 56708 / 56710
<b>3/4" U-Bolts</b>						
13-90348	-	3/4" -16	x 3.08	x 15.25"	ROUND	51802 / 50350
13-90350	-	3/4" -16	x 3.08	x 16.25"	SQUARE	51802 / 50350
<b>3/8" Studs</b>						
13-90410	-	3/8"-24	x 6.9063"		STUD	
13-90400	-	3/8"-24	x 8.250"		STUD	
13-90412	-	3/8"-24	x 10.00"		STUD	
13-90420	-	3/8"-24	x 14.50"		STUD	
<b>U-Bolt Hardware Packs</b>						
20-65991	-	1/2" - 20				Hardware Pack (4 Nuts & Washers)
20-65302	-	9/16" - 18				Hardware Pack (4 Nuts & Washers)
20-65471	-	5/8" - 18				Hardware Pack (4 Nuts & Washers)
20-65750	-	3/4" - 16				Hardware Pack (4 Nuts & Washers)

BLOCK/UBOLTS



## Blocks

Block Part Number	Block Height	Qty	Block Style	Block Material	Pin Size	Pin Location	Notes:
95-100	1"	Single	Flat	Aluminum	9/16" x 1.0	Centered	1,2
95-100B	1"	Pair	Flat	Aluminum	9/16" x 1.0	Centered	1,2
95-100F	1"	Single	Flat	Aluminum	5/8" x 1.0	Centered	1,2,4
95-100FB	1"	Pair	Flat	Aluminum	5/8" x 1.0	Centered	1,2,4
95-150	1.5"	Single	Flat	Aluminum	9/16" x 1.0	Centered	1,2
95-150B	1.5"	Pair	Flat	Aluminum	9/16" x 1.0	Centered	1,2
95-150D	1.5"	Single	Flat	Aluminum	3/4" x 1.0	Centered	1,2,3
95-150DB	1.5"	Pair	Flat	Aluminum	3/4" x 1.0	Centered	1,2,3
95-150F	1.5"	Single	Flat	Aluminum	5/8" x 1.0	Centered	1,2,4
95-150FB	1.5"	Pair	Flat	Aluminum	5/8" x 1.0	Centered	1,2,4
95-251	2.5"	Single	Tapered	Cast Iron	9/16" x 1.0	Centered	1,2
95-250B	2.5"	Pair	Tapered	Cast Iron	9/16" x 1.0	Centered	1,2
95-250F	2.5"	Single	Tapered	Cast Iron	5/8" x 1.0	Centered	1,2,4
95-250FB	2.5"	Pair	Tapered	Cast Iron	5/8" x 1.0	Centered	1,2,4
95-254F	2.5"	Single	Flat	Aluminum	Dual 3/4" x 1.0	Dual	1,2,4
95-254FB	2.5"	Pair	Flat	Aluminum	Dual 3/4" x 1.0	Dual	1,2,4
95-300	3"	Single	Flat	Aluminum	Offset 9/16" x 1.0	Offset	1,2
95-300B	3"	Pair	Flat	Aluminum	Offset 9/16" x 1.0	Offset	1,2
95-300D	3"	Single	Flat	Aluminum	3/4" x 1.0	Centered	1,2,3
95-300DB	3"	Pair	Flat	Aluminum	3/4" x 1.0	Centered	1,2,3
95-300F	3"	Single	Flat	Aluminum	Dual 3/4" x 1.0	Dual	1,2,4
95-300FB	3"	Pair	Flat	Aluminum	Dual 3/4" x 1.0	Dual	1,2,4
95-304D	3"	Single	Flat	Aluminum	9/16" x 1.0	Centered	1,2,3
95-308	3"	Single	Tapered	Cast Iron	0.7	Centered	1,2,3
95-351	3.5"	Single	Tapered	Cast Iron	9/16" x 1.0	Centered	1,2
95-350B	3.5"	Pair	Tapered	Cast Iron	9/16" x 1.0	Centered	1,2
95-401	4"	Single	Tapered	Cast Iron	9/16" x 1.0	Centered	1,2
95-400B	4"	Pair	Tapered	Cast Iron	9/16" x 1.0	Centered	1,2
95-401SD	4"	Single	Flat	Cast Iron w/Bumpstop	9/16" x 1.0	Centered	1,2,5
95-400SDB	4"	Pair	Flat	Cast Iron w/Bumpstop	9/16" x 1.0	Centered	1,2,5
95-402SD	4"	Single	Tapered	Cast Iron	5/8" x 1.0	Centered	1,2,5
95-403SD	4"	Single	Tapered	Cast Iron	5/8" x 1.0	Centered	1,2,5
95-405F	4"	Single	Flat	Cast Iron w/Bumpstop	Dual 3/4" x 1.0	Dual	1,2,4
95-404FB	4"	Pair	Flat	Cast Iron w/Bumpstop	Dual 3/4" x 1.0	Dual	1,2,4
95-406SD	4"	Single	Flat	Cast Iron	Dual 3/4" x 1.0	Centered	1,2,5
95-407SD	4"	Single	Flat	Cast Iron	Dual 3/4" x 1.0	Centered	1,2,5
95-500	5"	Single	Tapered	Cast Iron	9/16" x 1.0	Centered	1,2
95-500B	5"	Pair	Tapered	Cast Iron	9/16" x 1.0	Centered	1,2
95-502SD	5"	Single	Tapered	Cast Iron	5/8" x 1.0	Centered	1,2,5
95-503SD	5"	Single	Tapered	Cast Iron	5/8" x 1.0	Centered	1,2,5
95-551	5.5"	Single	Tapered	Cast Iron	9/16" x 1.0	Centered	1,2
95-550B	5.5"	Pair	Tapered	Cast Iron	9/16" x 1.0	Centered	1,2
95-551SD	5.5"	Single	Flat	Cast Iron w/Bumpstop	9/16" x 1.0	Centered	1,2,5
95-550SDB	5.5"	Pair	Flat	Cast Iron w/Bumpstop	9/16" x 1.0	Centered	1,2,5
95-555F	5.5"	Single	Flat	Cast Iron w/Bumpstop	Dual 3/4" x 1.0	Dual	1,2,4
95-554FB	5.5"	Pair	Flat	Cast Iron w/Bumpstop	Dual 3/4" x 1.0	Dual	1,2,4

**Notes:**

- (1) Lift blocks are for rear axle use only. Do not use lift blocks on the front of any vehicle.
- (2) Use of lift blocks will require use of longer u-bolts. U-bolts are sold separately.
- (3) Lift blocks ending in "D" are Dodge applications.
- (4) Lift blocks ending in "F" are Ford applications.
- (5) Lift blocks ending in "SD" are Ford F250/ F350 applications.



# LIGHTING





**PROCOMP**

off-road driven!™

## LED Sport Lights (Pair Pack)

Model	Part No.	Available Beam	No. of LEDs	Power (watts)	IP Rating	AMP Draw	Raw Lumens*	Color	Beam Distance(M)	Peak Beam Intensity (cd)	Width	Height w/Mount	Depth
S4	76406p	Flood	4	20	IP67	1.36 / 0.68	1,820	CE	153	3,501	2.9"	3"	3.1"
S4	76407p	Spot	4	12	IP67	1.37 / 0.68	1,180	CE	548	21,468	2.9"	3"	3.1"

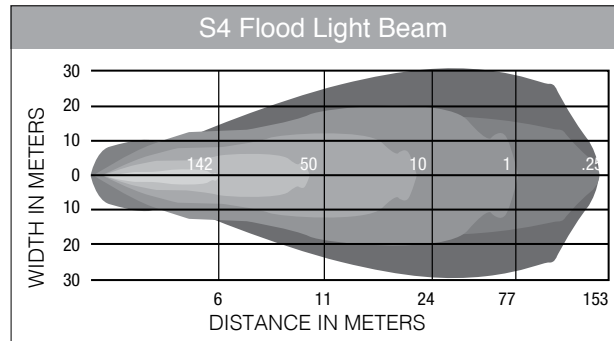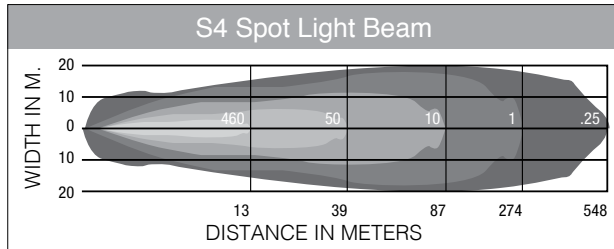

## Steerable S4 Light Kits

Application	Part No.
Steerable LED Mount Kit with S4 Flood lights	76408P
Steerable LED Mount Kit with S4 Spot lights	76409P

Each kit includes two mounts and two S4 lights.

## Dual Sport Light Kit (for Jeep JK)

Application	Part No.
Jeep JK Dual Sport Light Kit	76410P

Each kit includes two mounts, two S4 flood lights and two S4 spot lights.

## S4 Light Mounts (for Jeep JK)

Application	Part No.
Jeep JK Single A-Pillar Mounting Bracket	75303
Jeep JK A-Pillar Mounting Bracket Double	75305
Jeep JK Pillar LED Bracket (Post Mount)	75306
Jeep JK Rear LED Mount Driver Side	75307
Jeep JK Rear LED Mount Pass. Side	75309
Jeep JK OE Fog Lamp LED Bracket Kit	75404


\*For use with 76406P / 76407P Sport Lights

## 7" Round LED Headlamps

Application	Part No.
7" Round LED Headlamps	76402P

## HID Lights

Model	Part No.	Available Beam	No. of LEDs	Power (watts)	IP Rating	AMP Draw	Raw Lumens*	Color	Beam Distance(M)	Peak Beam Intensity (cd)	Outer Diameter	Height w/Mount	Depth
4" HID	9640	Flood	H3/Xenon	35	IP68	3.15	3,200	6,000K	316	25,000	5.7"	7.28"	4.4"
4" HID	9641	Spot	H3/Xenon	35	IP68	3.15	3,200	6,000K	346	30,000	5.7"	7.28"	4.4"
7" HID	9670	Flood	H3/Xenon	35	IP68	3.15	3,200	6,000K	447	50,000	8.07"	10.04"	5.7"
7" HID	9671	Spot	H3/Xenon	35	IP68	3.15	3,200	6,000K	465	54,000	8.07"	10.04"	5.7"

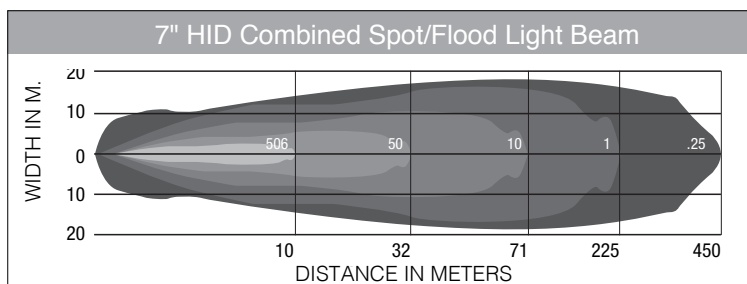

## Halogen Lights

Size	Part No.	Housing	Type	Watts	Bulb	Wiring Harness	Height w/Mount	Diameter/Width	Beam Dist. (M)	REPLACEMENT PARTS					
										Lens	Bulb	Cover	Ring	Bracket	
<b>ROUND LIGHTS</b>															
5"	9550	Chrome	Spot	55W	H3	NO	6.375"	5.5"	2.5"	550	9766	512	-	-	
5"	9561	Black	Fluted	55W	H3	NO	6.375"	5.5"	2.5"	550	9766	512	-	-	
5"	9551	Black	Spot	55W	H3	NO	6.375"	5.5"	2.5"	550	9766	512	-	-	
6"	9160	SS	Spot	130W	H3	NO	7.325"	6.125"	5.25"	034	9768	612	-	-	
6"	9003	Chrome	Spot	100W	H3	NO	7.325"	6.125"	5.25"	034	-	606	-	-	
6"	9004	Black	Spot	100W	H3	NO	7.325"	6.125"	5.25"	034	-	606	-	-	
8"	9130	Chrome	Driving/Spot	130W	H3	NO	9"	8"	3.875"	130	9768	812	-	-	
8"	9131	Black	Driving/Spot	130W	H3	NO	9"	8"	3.875"	130	9768	812	-	-	
<b>MOTORSPORTS SERIES</b>															
7"	9851	Black	Driving	100W	H3	NO	8"	7.125"	2.5"	909	098	-	914	908	
9"	9911	Black	Driving	55W	H11	NO	9"	8.6"	5"	911	011	903	913	-	
<b>RECTANGULAR LIGHTS</b>															
4x6 (Pair)	9250	Black	Fog/Amber	55W (ea)	H3	YES	3.375"	5.75"	2.625"	025	9766	-	-	-	
4x6 (Pair)	9200	Black	Driving/Clear	55W (ea)	H3	YES	3.375"	5.75"	2.625"	-	9766	-	-	-	
5x7	9101	Black	Driving	55W	H3	NO	5.375"	7.625"	3.75"	100	-	712	-	-	
6x9	9002	Black	Driving	100W	H3	NO	7"	8.375"	3.5"	012	-	906	-	-	
<b>HANDHELD SPOT</b>															
	9011	Black	Spot	55W	H3	NO	10.25"	5"	2.25"	-	9766	-			

## Light Racks

Application	Year	2/4WD	Part No.
<b>FORD</b>			
F150	04-08	2WD/ 4WD	24700
F250/ F350	99-07	2WD/ 4WD	24500
<b>JEEP</b>			
Wrangler JK	07-13	2WD/ 4WD	23700
<b>NISSAN</b>			
Titan/ Armada	04-12	2WD/ 4WD	27000
<b>TOYOTA</b>			
Tacoma/ PreRunner	05-12	2WD/ 4WD	25000



## Light Bulbs

Application	Part No.
55 Watt - H3	9766
130 Watt - H3	9768
55 Watt - H11 - Motorsports	011
100 Watt - H3 - Motorsports	098

## Light Switch Kits

Application	Part No.
<b>SINGLE KIT - FOR 2 LIGHTS</b>	
Mini Switch	9301
Heavy Duty Swtch w/Relay	9300
<b>DUAL KIT - FOR 4 LIGHTS</b>	
Heavy Duty Swtch w/Relay	9400
<b>SINGLE KIT (Includes switch, relay and wire)</b>	
LED Switch Kit	76200
<b>TOYOTA</b>	
Tacoma/ PreRunner	25000





## The Pro Comp Promise Warranty

At Pro Comp, we know you have many choices when selecting products to personalize your vehicle. You should demand nothing but the highest quality available and have total confidence that the products you selected are the best in the industry. It is for these reasons that Pro Comp Suspension products are backed by the best warranty in the industry...the Pro Comp Promise!

Pro Comp promises that its products will last a lifetime or we will replace it free of charge. It's that simple! Because of our commitment to quality and manufacturing excellence, we are able to stand behind our products. FOREVER.

It is Pro Comp's Promise that if one of our suspension products breaks not due to misuse, neglect or vandalism, we will replace it. Whether you are the original purchaser or not, you can be assured that we will make it right. The Pro Comp Promise covers all suspension products including shocks and steering stabilizers. Buy Pro Comp Suspension today and enjoy it for the rest of your life.

That's our Pro Comp Promise.

### NOTICE TO OWNER, OPERATOR, DEALER AND INSTALLER

Vehicles that have been enhanced for off-road performance often have unique handling characteristics due to the higher center of gravity and larger tires. This vehicle may handle, react and stop differently than many passenger cars or unmodified vehicles, both on and off-road. You must drive your vehicle safely! Extreme care should always be taken to prevent vehicle rollover or loss of control, which can result in serious injury or even death. Always avoid sudden sharp turns or abrupt maneuvers and allow more time and distance for braking! Pro Comp reminds you to fasten your seat belts at all times and reduce speed! We will gladly answer any questions concerning the design, function, maintenance and correct use of our products.

Please make sure that the Dealer / Installer explains and delivers all warning notices, warranty forms and instruction sheets included with Pro Comp product.

### WARRANTY AND RETURN POLICY

Pro Comp warrants its full line of products to be free from defects in workmanship and materials for the life of the product. Pro Comp's obligation under this warranty is limited to repair or replacement, at Pro Comp's option, of the defective product. Any and all costs of removal, installation, freight or incidental or consequential damages are expressly excluded from this warranty. Pro Comp is not responsible for damages

and / or warranty of other vehicle parts related or non-related to the installation of Pro Comp product. A consumer who makes the decision to modify his vehicle with aftermarket components of any kind will assume all risk and responsibility for potential damages incurred as a result of their chosen modifications. Warranty coverage does not include consumer opinions regarding ride comfort, fitment and design. Warranty claims can be made directly with Pro Comp or at any factory authorized Pro Comp dealer.

### IMPORTANT

To validate the warranty on this purchase please be sure to mail in the warranty card.

Claims not covered under warranty

- Parts subject to normal wear; this includes bushings, bump stops, ball joints, tie rod ends and Heim joints.
- Finish after 90 days.
- Damage caused as a result of not following recommendations or requirements called out in the installation manuals.

Pro Comp MX Series Coilover shocks are considered a serviceable shock with a one-year warranty against leakage only. Rebuild service and replacement parts will be available and sold separately by Pro Comp. Contact Pro Comp for specific service charges. Pro Comp accepts no responsibility for any altered product, improper installation, lack of or improper maintenance or improper use of our products.



## The Lift Shield Warranty

### WHAT IS COVERED

**ENGINE** – All internal lubricated parts, timing belt, pulleys and cover; oil pump; water pump; manifolds; harmonics balancer; engine mounts; turbocharger housing, internal parts and vanes. Note: Cases, housings engine block and cylinder heads are only covered if damaged by the failure of an internal lubricated part.

**AUTOMATIC TRANSMISSION/TRANSFER CASE** – All internal lubricated parts, torque converter, vacuum modulator.

**MANUAL TRANSMISSION/TRANSFER CASE** – All internal lubricated parts. Does not include manual clutch, pressure plate, throw –out bearings, pilot bearing or bushing, clutch master or slave cylinders.

**REAR-WHEEL DRIVE** – All internal lubricated parts, propeller shafts, supports and U-joints, axle shafts and bearings.

**FRONT-WHEEL DRIVE** –All internal lubricated parts, propeller shafts, axle shafts, constant velocity joints, front hub bearings.

Upon payment of the \$100 deductible per visit and before the expiration of this agreement, the necessary repairs to the components listed above will be reimbursed without additional charge to you. Replacement of any part may be made with new parts or parts of like kind and quality at the time of breakdown, at the option of the Manufacturer.

### WHAT IS NOT COVERED

This Limited Warranty Agreement will cover only those items listed under "What is Covered", and does not cover the following: Incidental or consequential damages or loss caused by breakdown of components (or otherwise) including property damage, personal injury, inconvenience, loss of vehicle use and commercial loss.

Commercial use is excluded and will void coverage under this Limited Warranty Agreement. Repairs required because of collision, abuse, overheating, or operation without proper lubrication or coolant, road conditions, misuse, negligence, alterations, racing, accidents, fires, floods, riots, acts of God, vandalism, upset, theft, lack of reasonable and proper maintenance, abuse through towing or improper load capacity, abuse through continued operation of an impaired vehicle, or any other losses normally covered by casualty insurance. Repairs that would be covered by the vehicle original manufacturers' warranty unless written evidence is submitted that a claim made under the original manufacturers' warranty was denied due to a lift kit installed by the Seller. Excessive oil consumption, loss of compression, or gradual reduction in operating performance after purchase, any repairs on vehicles whose mileage has been altered or whose odometer has

been tampered with. Repairs covered by this Limited Warranty Agreement in excess of the then current NADA wholesale value of your vehicle prior to the breakdown of the covered component. The total of all benefits paid or payable under this Limited Warranty Agreement shall not exceed the price paid for the vehicle. Repairs performed by someone other than the seller. Rental or towing expenses.

**MECHANICAL** – Service adjustment/cleaning, carburetor, throttle body assembly (except injectors), contaminated fuel system, air conditioning recharge, refrigerant, coolant, battery cables, belts, hoses, brakes (front hubs, drums, shoes, lining, disc rotors and pads), exhaust system (including catalytic converter), filters, fluids, lights (bulbs, sealed beam and lenses), lubricants, manual clutch disc, strut studs, wiper blades, shop supplies and hazardous waste removal. Repairs, retrofit, or replacement of any components caused by or due to compliance with any law or legislation including the 1990 Clean Air Act.

**EXTERIOR** – Service adjustments (glass and body parts), bright metal, bumpers, body panels, door handles, hinges, glass, moldings, outside ornamentation, convertible or vinyl tops, paint, rust, sheet metal, sideview, mirrors (glass and housing), air and water leaks, weather-strip, wheel covers/ornaments and wind noise. Physical damage, alignment of bumper and body parts.

**INTERIOR** – Buttons, carpet, dash pad, door and window handles, knobs, rearview mirror (glass and housing), trim and upholstery. Radios, tape players, compact disc players, graphic equalizers, speakers, cellular telephones, theft deterrent systems, and radar detectors.

**MAINTENANCE RESPONSIBILITIES:** Failure to perform the vehicle manufacturer's recommended maintenance will result in loss of your protection under the Limited Warranty Agreement. Maintenance records from the date of the delivery supported by the receipts indicating dated, mileage and services performed must be kept by the vehicle purchaser and made available to Manufacturer on request.

**CHANGE OF VEHICLE OWNERSHIP:** The Coverage provided by this Limited Warranty Agreement applies only to the covered vehicle while owned by the person whose name appears on this agreement. This agreement is non-transferrable.

**WHAT TO DO IF REPAIRS ARE NEEDED:** You must deliver your vehicle to YOUR Vehicle's Factory Authorized Repair Facility.

Contact the Lift Shield Claims Administration office at (800) 335-8769 for claims authorization. Claims MUST be authorized by the claims office prior to any repair being performed.



400 W. Artesia Blvd.  
Compton, CA 90220  
Toll Free 800.776.0767  
**[www.ProCompUSA.com](http://www.ProCompUSA.com)**

