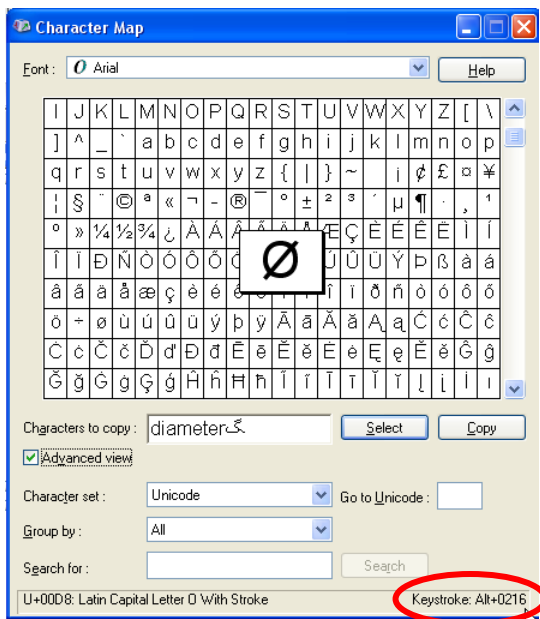

Autodesk Products Tip & Tricks

Product: Revit 2010
Topic: Symbols in Revit Text
Written by: Kristen Fierro, Senior Applications Engineer
Date: June 29, 2009

When symbols are needed in a string of Revit text, symbols from the Microsoft Character map will need to be used. To access this use either *Start - Programs - Accessories - Character Map* or click Start, Run, and type Charmap.



Select the desired symbol. The keystroke for that symbol can be found in the bottom right hand corner of this dialog box. Switch back to Revit. When placing text, type this keystroke in using a keypad.

16"Ø

Note: The numbers across the top of the keyboard will not work. If there are difficulties with the keyboard access described above use a copy and paste approach. While in the character map, select the symbol, hit the select button next to *characters to copy* and then select *copy*. Then use *control+v* while typing the text in Revit.

