

P-37201

ONE MAN BRAKE BLEEDER KIT

- 3-PC. NYLON ADAPTERS FIT ALL BRAKES.
- PLASTIC BOTTLE COLLECTS DISCHARGED FLUID.
- MAGNETIC PAD HOLDS COLLECTION BOTTLE TO METAL FRAME.
- EVERYTHING 1- PERSON NEEDS TO QUICKLY BLEED BRAKES WITH NO MESS.
- IDEAL FOR PROFESSIONAL MECHANICS AND DIY'ERS.



MADE IN TAIWAN


NOTE: - DISPOSE OF OLD FLUID BY FOLLOWING ENVIRONMENTAL STANDARDS.

INSTRUCTIONS

NOTE: It is important to follow the sequence designated by your vehicle's manufacturer for bleeding brakes on your vehicle's make and model.

CAUTION: Due to the corrosiveness of brake fluid, avoid contact with the skin, eyes, clothing and paintwork. You may choose to wear eye protection. For ease of each and convenience, you may choose to jack up your vehicle. Use secured and adequate supports such as jack stands. BE SURE TO DISPOSE OF OLD FLUID BY FOLLOWING ENVIRONMENTAL STANDARDS.

1. Fill the master cylinder. keep the master cylinder topped-off during brake bleeding.
2. Remove the bleeder screw from the wheel cylinder and clean. Replace the screw finger tight.
3. Place one end of the long hose into outside portion of the lid connector. Connect the brake bleeder fitting adapter to the other end of long hose.
4. Open the bleeder screw 1-1/2 turns. Attach the brake bleeder fitting adapter to the opened bleeder screw.
5. Pump the brake pedal slowly to discharge excess air and old fluid. Inspect long tube for air bubbles. Continue process until all bubbles disappear. Remove the adapter attached to the bleeder screw and replace the screw tightening it to original position.
6. Follow same procedure for other cylinders.

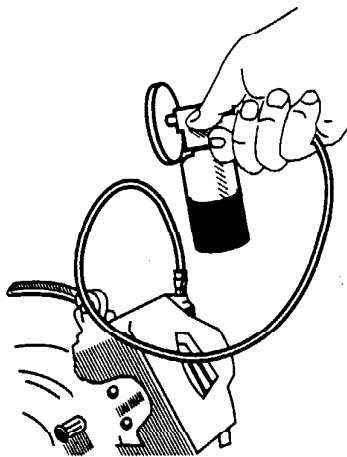

**ALWAYS WEAR
SAFETY GOGGLES**

