



CPEi 300 Series



MOTOSTART

DRAFT
MOTOwI⁴


MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners.

© Motorola, Inc., 2007.




68P09281A65-A

Getting to know your CPEi 300

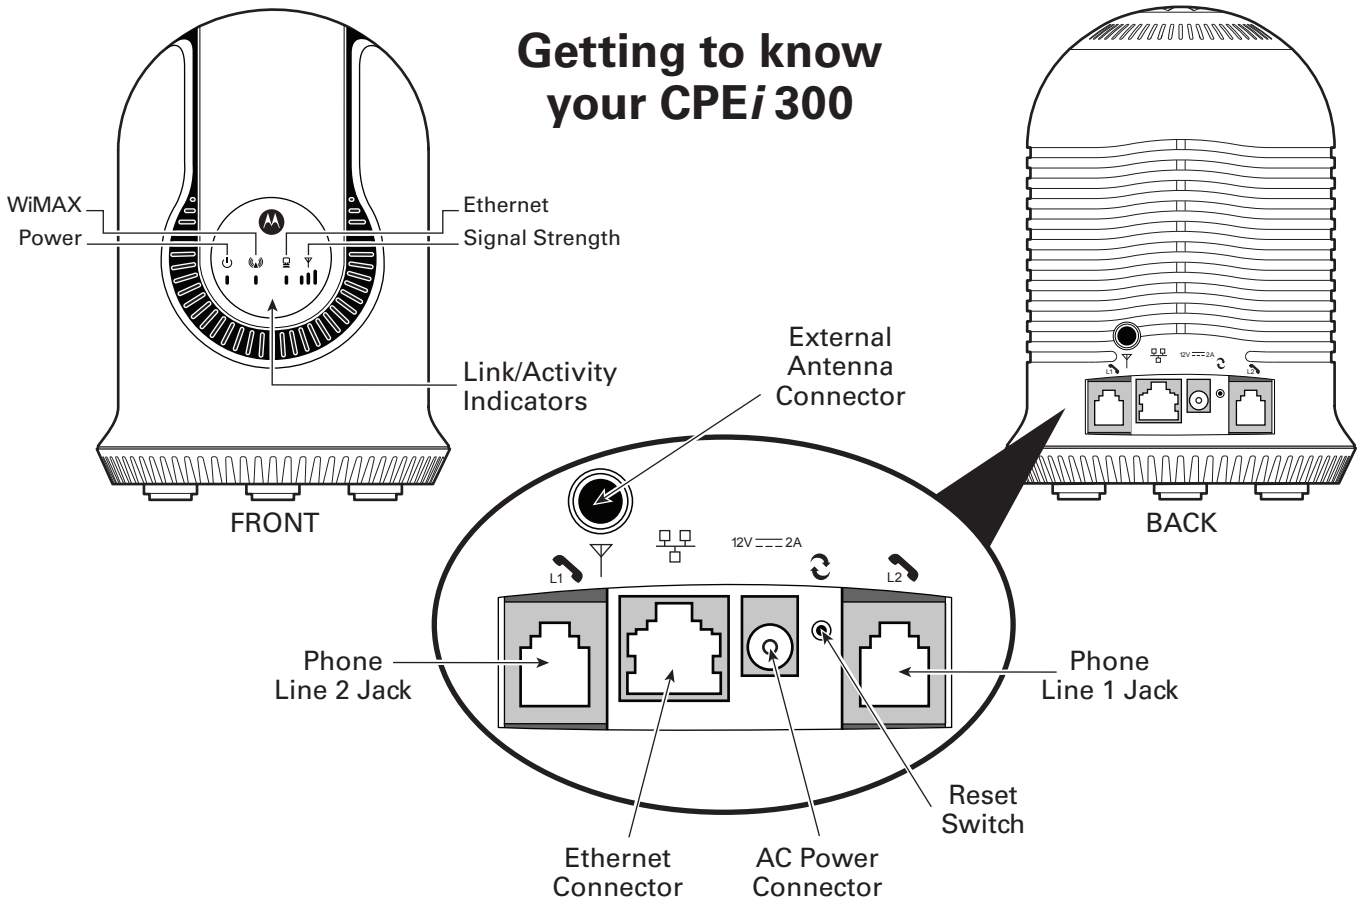

Cable Connection Guide

Connect the cables in numerical order as shown.

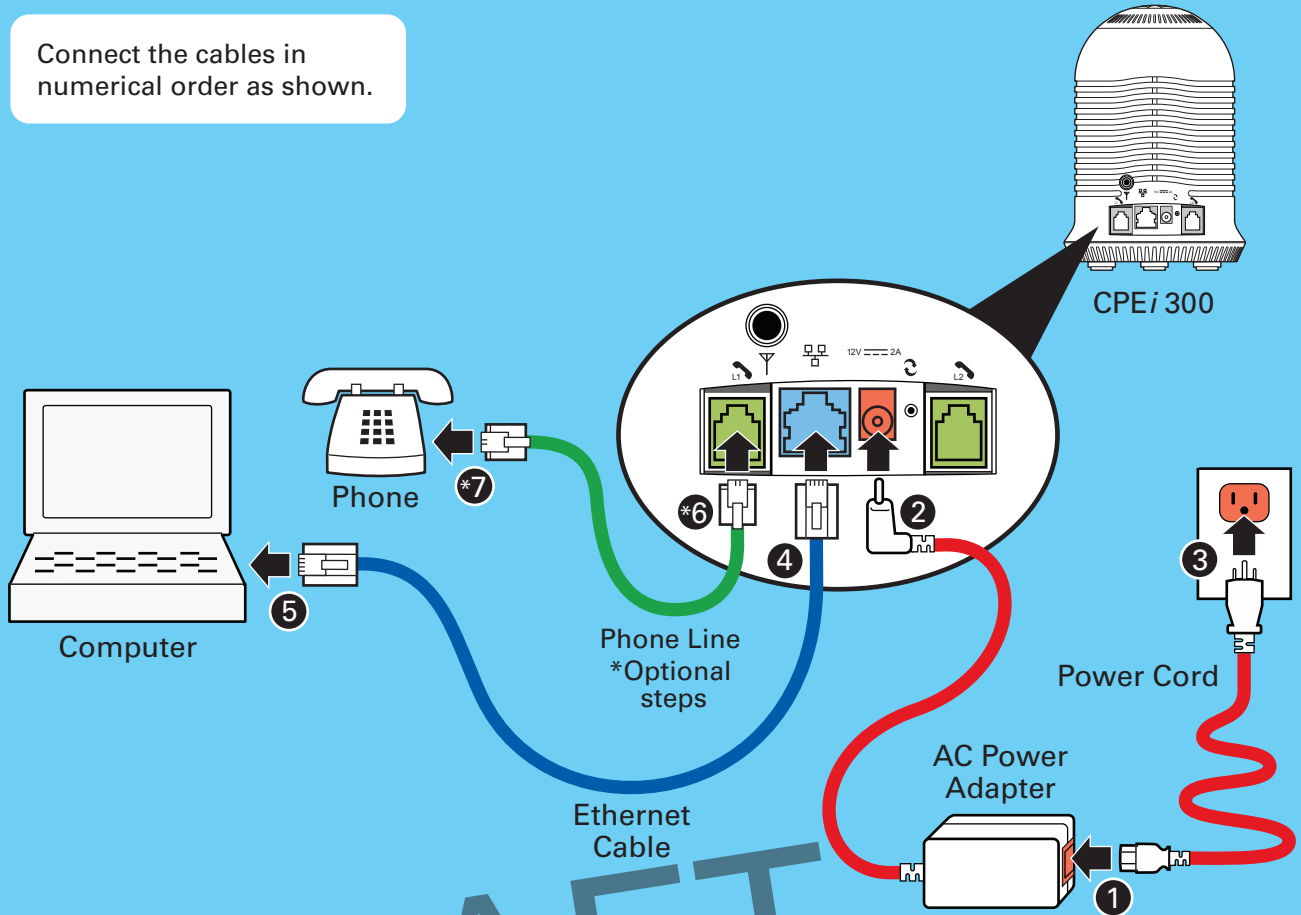

DRAFT

Procedure to Install the Unit

No computer software applications or drivers are required to complete installation.

- 1 Connect the power cord and power adapter together.
- 2 Plug the power adapter into the power connector on the back of the unit.
- 3 Plug the power cord into an AC outlet. The unit will turn on.
- 4 Plug one end of the Ethernet cable into the Ethernet connector on the back of the unit.
- 5 Plug the other end of the Ethernet cable into the Ethernet connector of your computer.
- 6 Plug one end of the phone line into an activated phone line connector on the back of the unit. Phone line activation is dependent upon your service contract.
- 7 Plug the other end of the phone line into the phone line connector of your telephone.
- 8 At your computer, open your browser and enter <http://mywimax>. (with a dot at the end) into the address field and press the Enter key. A wizard will start up to guide you through the installation.
- 9 Follow the directions in the wizard to complete the installation. When using the wizard for the first time, use the default value provided by the wizard as the password.