

## JUNO PENDANT STEM KITS

**Step 1.** Assemble pendant kits per Figures 1 & 2.


**Step 2.** Assemble bracket to Trac per Figure 3.

**Step 3.** Hang Trac onto stem by slipping the bracket over the nut on the end of the stem. Tighten the nuts to secure Trac (Figure 4).

**Step 4.** On Trac-Master® Trac, tighten the locking screw to stop pendant from sliding on Trac.

**Step 5.** Use two kits for 2', 4' and 6' trac sections, three kits for 8' trac section and four kits for 12' trac sections.


### T90 – T-BAR PENDANT STEM KIT

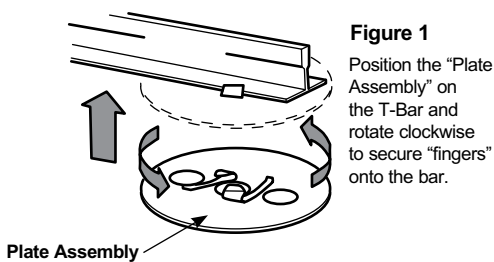

**Figure 1**  
Position the "Plate Assembly" on the T-Bar and rotate clockwise to secure "fingers" onto the bar.





**Figure 2**  
Assemble parts as shown in diagram and hook onto "Plate Assembly"

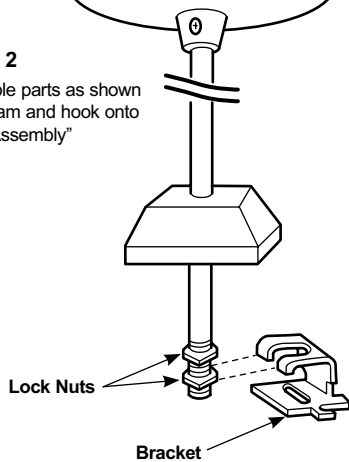

### T91 – RIGID CEILING PENDANT STEM KIT


**Figure 1**  
Attach "Mounting Strap" to Junction Box

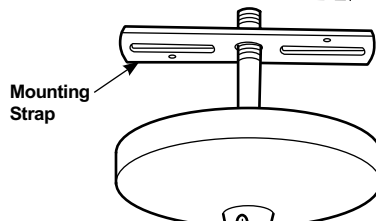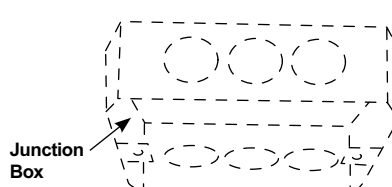

**Figure 2**  
Assemble parts as shown in diagram and attach to "Mounting Strap" in Junction Box

### T93 – WIREWAY COVER FOR ELECTRIFIED TRAC


When electrifying the Trac, replace the small, square bracket cover with the T93 Wireway Cover to conceal the wires.

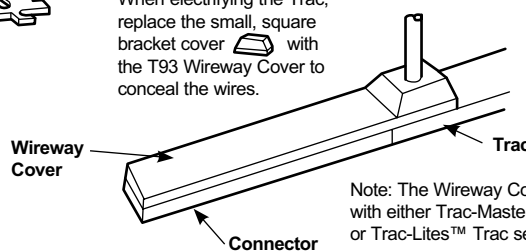


Note: The Wireway Cover can be used with either Trac-Master® (Single Circuit) or Trac-Lites™ Trac sections.

### TRAC-MASTER® TRAC

**Figure 3**

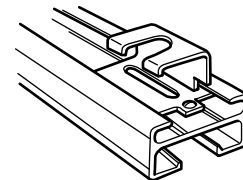

Slide the bracket down the wireway channel to position desired and lock in place

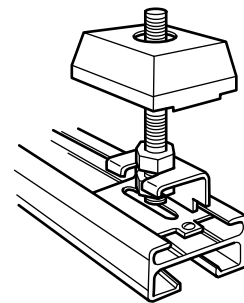


**Figure 4**


To hang Trac, slip bracket over the nut on bottom of stem

### TRAC-LITES™ TRAC

**Figure 3**

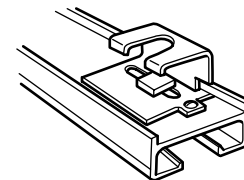

Use square headed bolt and acorn nut to attach bracket to Trac utilizing existing holes or those drilled by installer

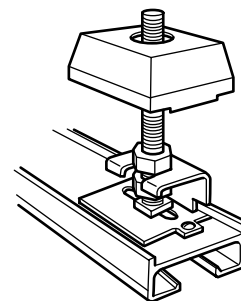

**Figure 4**

To hang Trac, slip bracket over the nut on bottom of stem