


MONOPRICE

How to:


## Connect a Cat5e/Cat6 RJ-45 Toolless Keystone Jack




**Step 1.** Strip about 1" off of the outer jacket of the cable. If using Cat6 cable, trim off the spleen so that it doesn't get in the way of the wires.

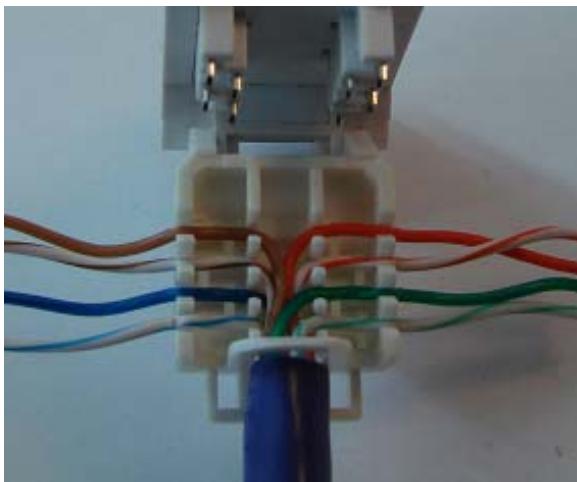


**Step 2.** Open the lid of the keystone and insert the wires through the loop at the end. Untwist and splay out the wires and sort them through the appropriate slots on the lid. Follow the color coding diagram on the side of the lid for the proper wiring standard you wish to use.

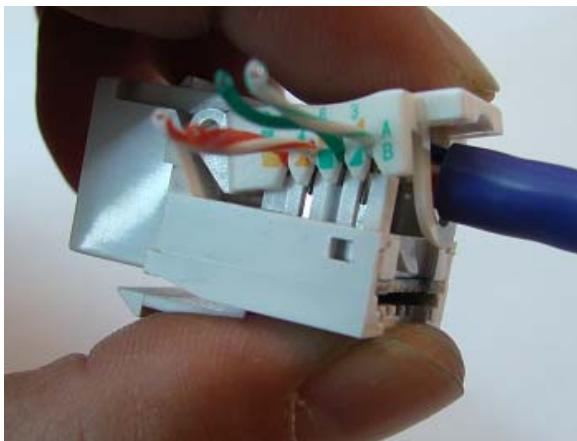

**Step 3.** Close the lid and squeeze tightly.

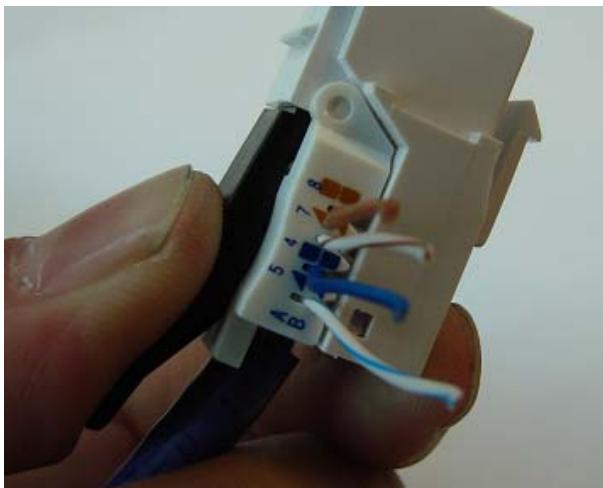

**Step 4.** Use the included lever to snap the lid all the way down.

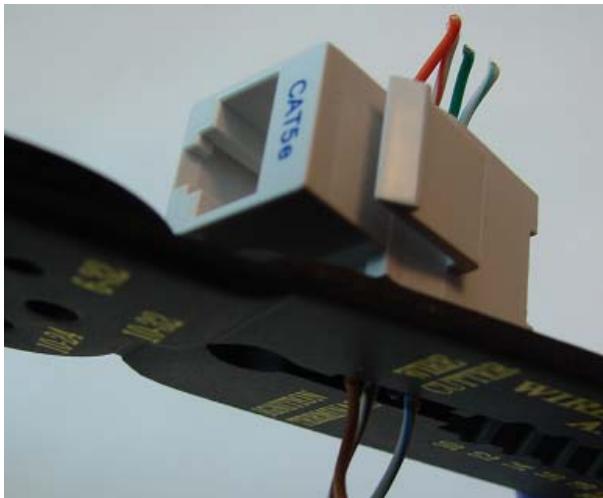

**Step 5.** Trim away the excess wires from both sides of the keystone.



**Step 6.** If your model came with a zip tie, use it to secure the cable jacket to the keystone.