



# Polaroid M203/M403 QUICK GUIDE

## SET UP

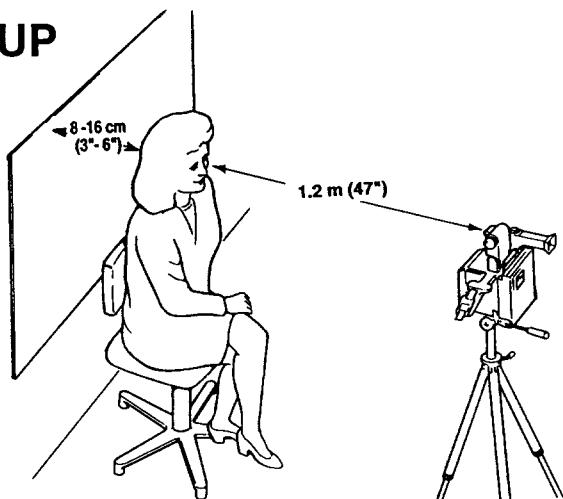


## FILM LOADING STEPS 1 THRU 5

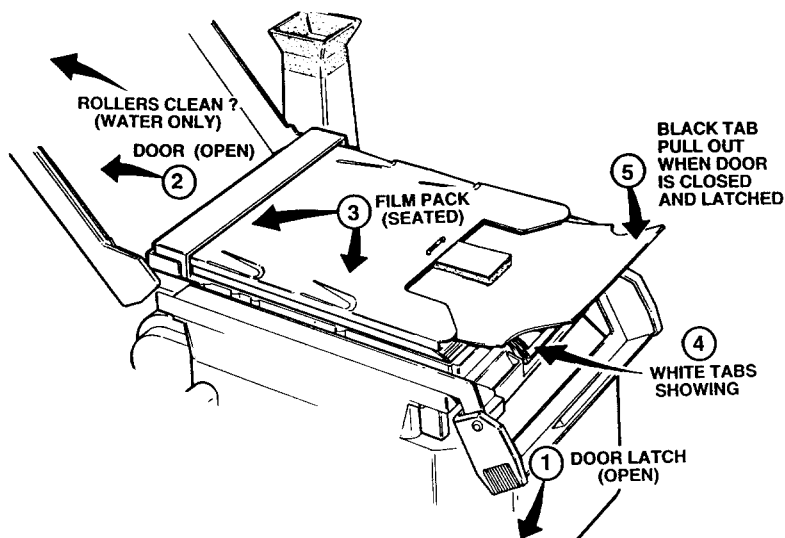

# QUICK GUIDE - TYPICAL CAMERA SETUP - M203 / M403


## 1 FLASH SETTING

ISO 3000  
**BLACK & WHITE FILM** (ISO 3000)  
OR  
ISO 100 (OR 80)  
**COLOR FILM** (OR B&W ISO 100)

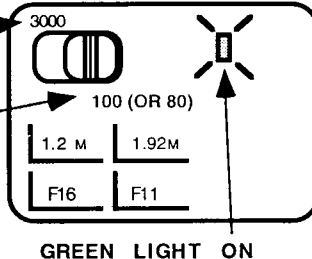

## 2 SET TIMER

SEE FILM PACK FOR APPROPRIATE  
DEVELOPMENT TIME

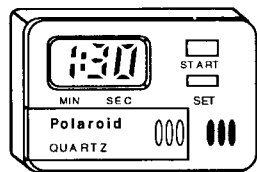


## 3 CAMERA SETTINGS

✓ APERTURE **16**  
(LIGHTEN / DARKEN)

✓ CAMERA ON / OFF  
(0 = OFF, **1** = ON)

✓ DISTANCE  
**1.2**


✓ SHUTTER SPEED  
**125**

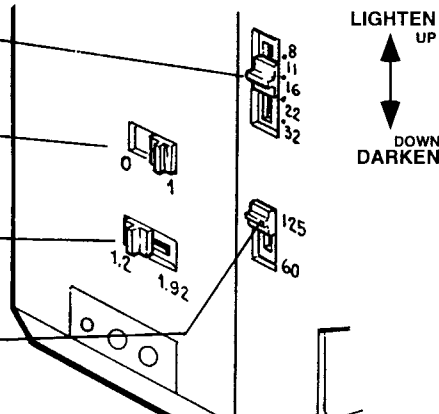

## 4 FLASH READY


✓ STROBE UP WITH  
REFLECTOR FACING  
FORWARD

✓ GREEN LIGHT ON  
(BACK OF STROBE)

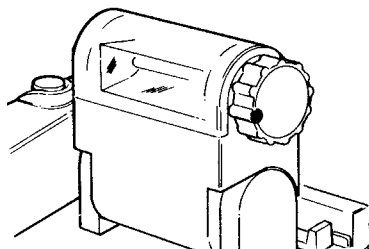


## 5 PORTRAIT SELECTOR

✓ IF YOU CHANGE THE  
PORTRAIT SELECTOR SWITCH  
YOU MUST THEN CYCLE THE  
SHUTTER ONCE WITH THE LENS  
CAPS **ON** (OR DARKSLIDE IN)

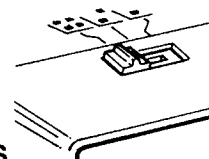


## 6 REMOVE

✓ DARKSLIDE  
OUT

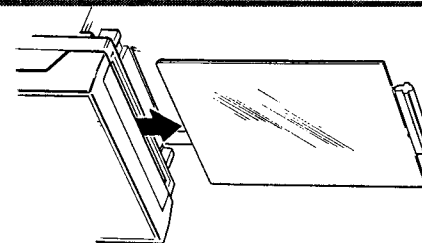


✓ LENS CAPS  
OFF

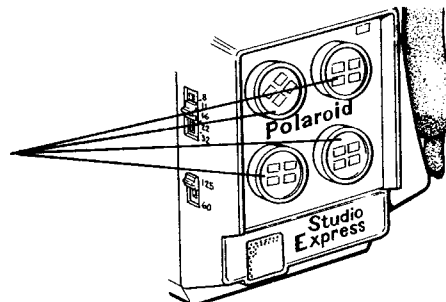

## 7 VIEW FINDER

✓ FRAME SUBJECT

✓ CHECK DISTANCE  
(PRESS BLUE  
BUTTON 1/2 WAY)

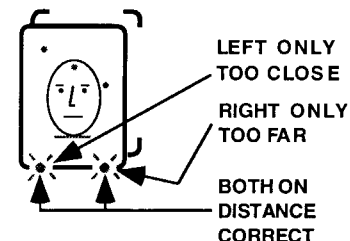

## 8 TAKE PICTURE

BLUE BUTTON FULLY PRESSED

