

Manufactured in the USA

Retrax

917 South 46th Street
Grand Forks, ND 58201
P: (701) 746-5596 F: 746-5598
www.retrax.com
retrax@retrax.com
1-800-206-4070



Scan here to view a brief video on how to install a RETRAX cover.



Make sure that you have a QR code reader application installed on your smartphone.


Table of Contents

NOTE: Some models require specific steps and parts. Please check below; if your model is listed, follow the instructions on that page!

Pre-assembly guidelines	Pg. 1
Steps 1-4 (cover assembly)	Pg. 2
Steps 5 & 6 (clamp install & measurements)	Pg. 3
Steps 7 & 8 (adjustments & final steps)	Pg. 4
Maintenance & Use	Pg. 5
Warranty Statement	Pg. 6
POWERTRAX	Pg. 7-8
Dodge Ram Box 2009-up	Pg. 9-10
Honda Ridgeline 2006-2015	Pg. 11-13
Nissan Frontier 2005-up	Pg. 14
Nissan Titan 2004-2015	Pg. 15
Nissan Titan 2016-up	Pg. 16
Toyota Tacoma 2005–2015	Pg. 17
Toyota Tacoma 2016-up	Pg. 18-20
Toyota Tundra 2007-up w/ Deck Rail System	Pg. 21

IMPORTANT: Follow these instructions **BEFORE** installing the **RETRAX** cover.

Use caution when cutting the wire ties holding the wire harness together so you do not cut wires. Inspect wiring. Do not install damaged wires as they could become a hazard.

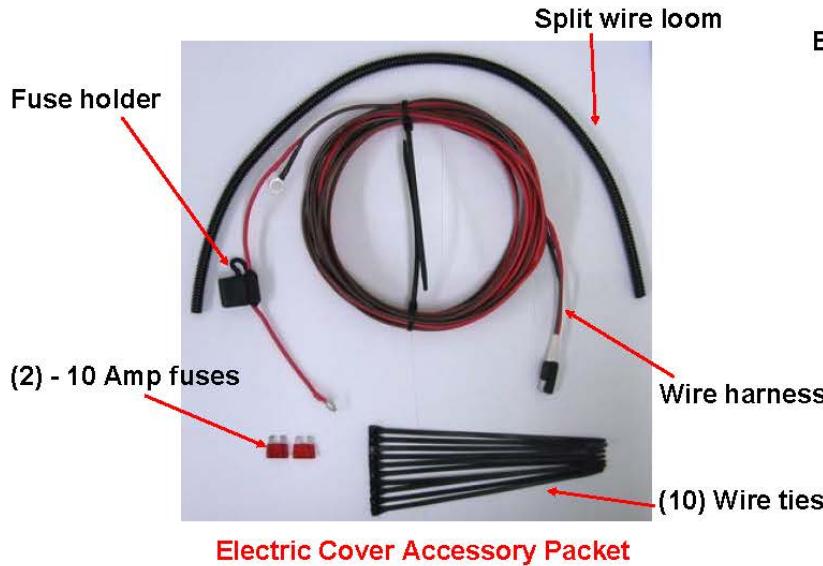

STEP 1-3: Routing wiring harness from battery to truck bed

1. Using a Wire tie, secure the fuse holder end of the wire harness near the battery (red wire and brown wire) **Note: Do not connect the wiring harness to your battery yet.**
2. Route the wire harness to the driver side of the truck if it is not already. (Using wire ties, secure the wiring harness so it does not come into contact with moving parts or exhaust pipes.)
3. Route the wiring harness down along the frame rails to the truck box as shown on the right. Keep the wires as high as possible to prevent damage while driving. Secure the wiring harness with wire ties every 2-3 feet.

STEP 4: Wiring Options

OPTION 1: Route 24" of wire to driver side cab end of drain holes in the bed. Use split wire loom to wrap around the wires as a barrier between the wires and the drain tube hole. (NOTE: this may require a larger hole than normal.)

OPTION 2: Route the wiring in the gap between the cab and truck bed (leave about 24" in truck bed). The wires will be hidden under the front weatherstripping of the **RETRAX** cover.

Wiring Harness Routing Along Frame Rail



← Proceed with the RETRAX standard instructions on steps 1-8 Then → refer back to this page for connection of wiring. Disregard all references to 'lock' - Not applicable for POWERTRAX.

NOTE: The electric cover has no lock assembly. Cover will not move out of the canister at this point of installation.


STEP 5: Connect the wiring harness to electronics box and battery

A. There is a white label wrapped with the letter "P" on it to ensure proper connections are made. (Ensure the connectors labeled P are securely connected. (Connectors labeled "M" will come attached.)

B. Connect the wires to the battery and install a fuse in the fuse holder. The **RED** wire (with the fuse holder) to the **POSITIVE** post, and the **BROWN** wire will connect to the **NEGATIVE** post.



For proper cover operation, ensure rails are positioned correctly (must be parallel). See step 6 & 7 in standard instructions).

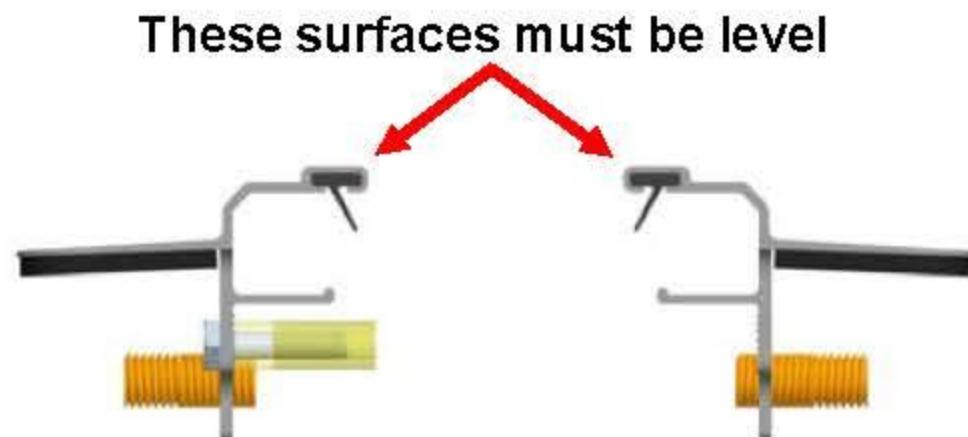

Operation of the POWERTRAX



NOTE: The **RETRAX** cover has superior quality rail weather-strip seals. The weather-strip seals will have an initial 48 hour break in period. Please inform the end user to help the cover to the tailgate each time the cover is opened for the first 48 hours or until it is able to close completely on its own.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Notice:

The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



917 South 46th Street
Grand Forks, ND 58201
P: (701) 746-5596 **F:** 746-5598
www.retrax.com
retrax@retrax.com
1-800-206-4070

