



eZGo Anywhere™ Standard On-Board Unit Installation Instructions

412101 07/08

This document describes procedures to perform the following tasks:

- Install and remove the eZGo Anywhere™ Standard On-Board Unit (OBU) in your vehicle.

General Installation Information

Placement: For optimum performance, your eZGo Anywhere OBU must be installed at least 2 inches (5.1 cm) from the metal of the windshield frame and 1 inch (2.5 cm) from the rearview mirror support post. See the *eZGo Anywhere Standard OBU Placement Guide* to ensure that the OBU is installed on the windshield correctly. This guide is included in these instructions.

Metallized Windshields: Some vehicle windshields contain a metallic treatment that could prevent an interior windshield-mounted OBU from working correctly. If you have a vehicle with a metallized windshield, you may need to install an exterior eZGo OBU on your vehicle instead of the interior windshield-mounted OBU. Contact your local OBU customer service center for more information.

Tinted Windshields: Some vehicles have a metallic tint across the top of the windshield that might interfere with reading the OBU. If your windshield has this metallic tint, install the OBU at least 2 inches (5.1 cm) below the tinted area. Nonmetallic tint does not affect OBU performance.

Metal Sun Visors: Some vehicles have an exterior-mounted sun visor that might interfere with reading the OBU. If your vehicle has this visor, mount the OBU at least 2 inches (5.1 cm) below the visor.

Required Supplies

- The *eZGo Anywhere Standard OBU Placement Guide* included with these instructions
- Commercial glass cleaner for cleaning windshield

eZGo Anywhere OBU Installation and Removal Procedures

To install the eZGo Anywhere OBU

The eZGo Anywhere OBU is supplied with 3M™ Dual Lock™ mounting strips.

1. Determine the OBU installation location for your vehicle using the *eZGo Anywhere Standard OBU Placement Guide* for your vehicle.
2. Use glass cleaner to clean the interior surface of the windshield where the OBU will be located.
3. Peel off the double-faced barrier on the mounting strips and press the OBU against the windshield for 10 seconds.


Note: When you install the OBU on the windshield for the first time, leave it in place for at least 48 hours to allow the adhesive to cure.

To remove your OBU from the windshield, grip your OBU at the top and bottom sides. Gently lift the OBU away from the windshield on one end until the OBU is free from the windshield. Be careful not to hit the rearview mirror.

Note: This equipment may not be modified, altered, or changed in any way without permission from TransCore, LP. Unauthorized modification may void the equipment authorization from the FCC and will void the TransCore warranty.


Note: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

eZGo Anywhere Standard OBU Placement Guide

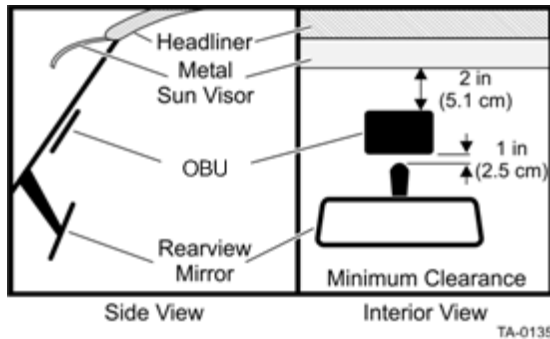


Choose this option if your mirror post is attached low on the windshield.

Use this placement guide to locate the approximate position of the standard OBU. If the upper portion of your windshield is tinted with aftermarket-conductive tint, use the next option. Follow the installation instructions to mount the OBU.

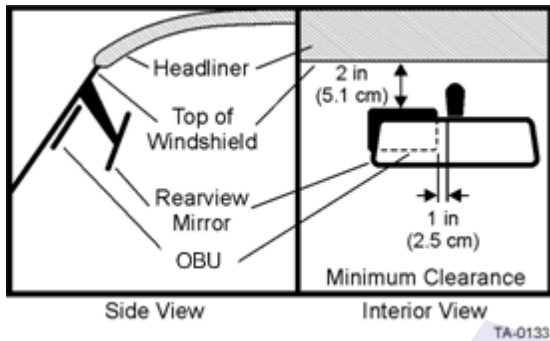

Choose this option if your mirror post is attached high on the windshield.

Use this placement guide to locate the approximate position of the standard OBU. If the upper portion of your windshield is tinted with aftermarket-conductive tint, place the OBU at least 2 inches (5.1 cm) below the tinted area. Follow the installation instructions to mount the OBU.

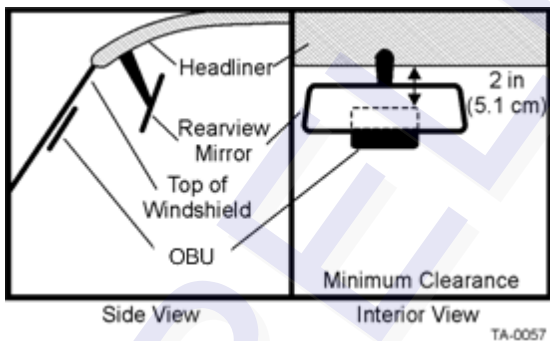

Choose this option if your mirror post is attached to the headliner.

Use this placement guide to locate the approximate position of the standard OBU. If the upper portion of your windshield is tinted with aftermarket-conductive tint, place the OBU at least 2 inches (5.1 cm) below the tinted area. Follow the installation instructions to mount the OBU.

TRANSCORE.

www.transcore.com

© 2008 TC IP, Ltd. All rights reserved. TRANSCORE is a registered trademark and eZGo Anywhere is a trademark of TC IP, Ltd., and are used under license. All other trademarks listed are the property of their respective owners. Contents subject to change. Printed in the U.S.A. Products covered by this document are protected by one or more of the following U.S. patents 4,739,328; 5,030,807; 5,113,156; 5,606,322; 6,061,614; 6,107,917; and foreign equivalent patents. Other patents pending.

412101 07/08