


BATTERY INSERTION




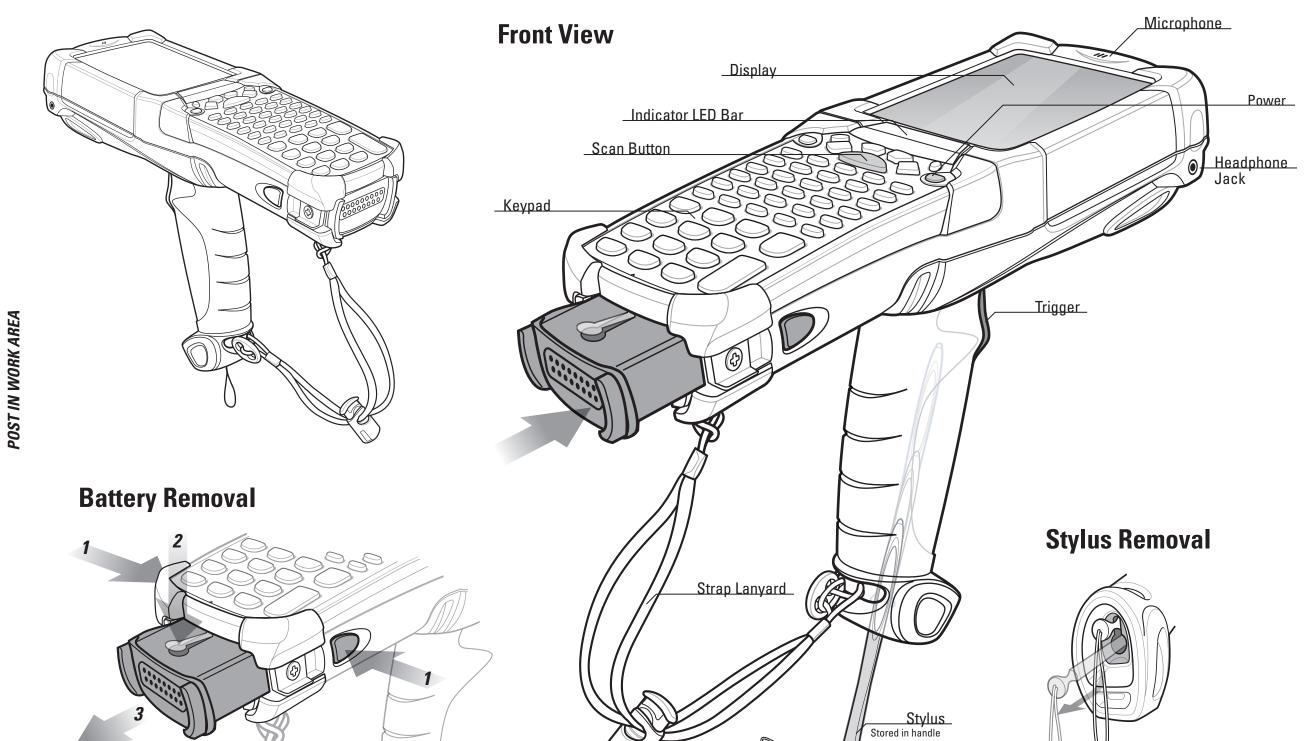


SNAP-ON ACCESSORY INSTALLATION

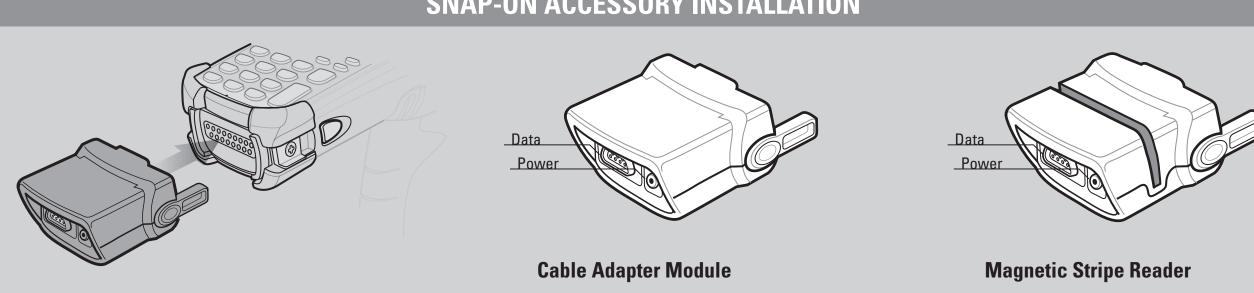



CHARGING INSTRUCTIONS

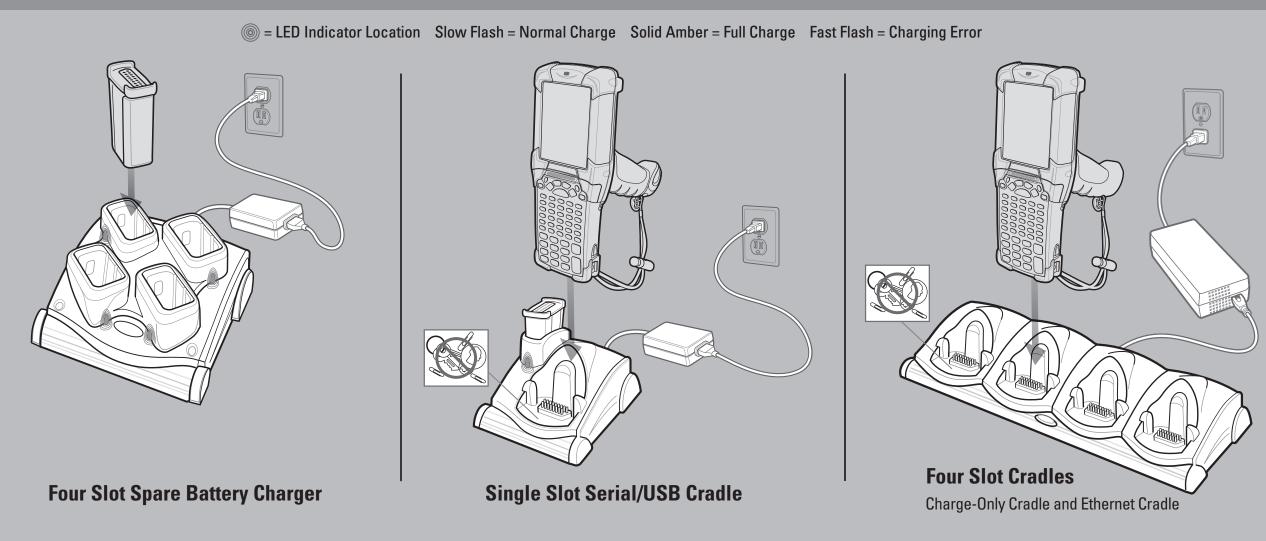

OPTIMUM IMAGING AND SCANNING POSITIONS

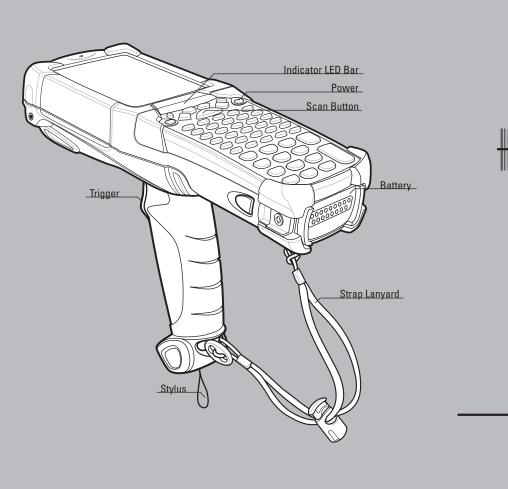

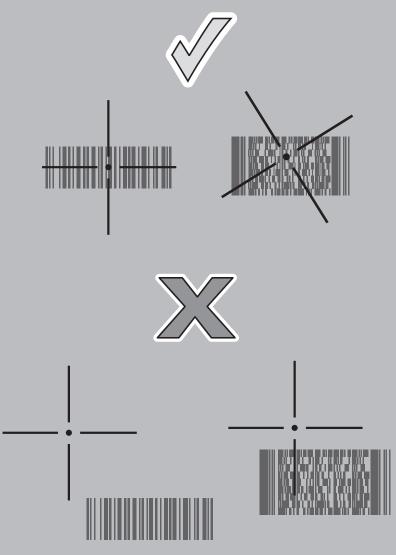


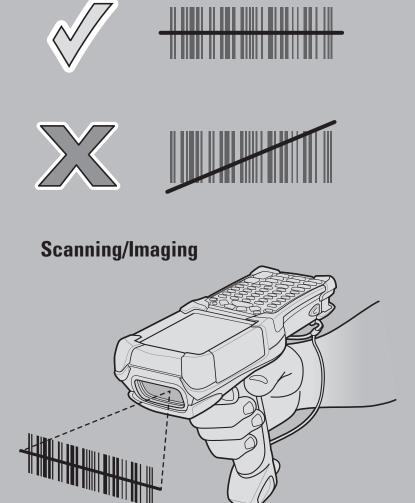

OPTIMUM UPRIGHT BODY POSTURE

AVOID EXTREME WRIST ANGLES



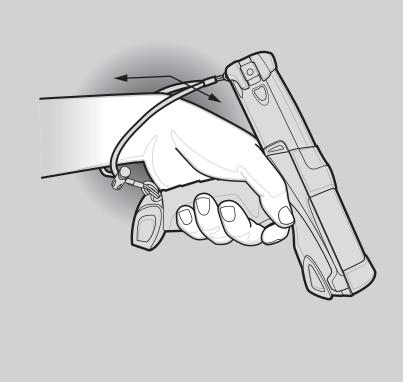




ALTERNATE LEFT AND RIGHT HANDS
TAKING BREAKS AND TASK ROTATION RECOMMENDED

OPTIMUM BODY POSTURE







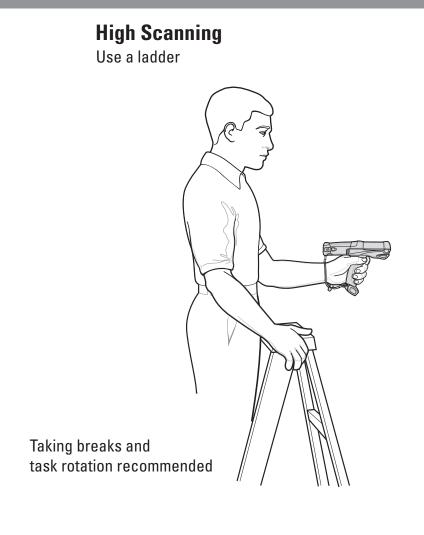

http://www.motorola.com/mc9190g