




INTELLITOUCH ONLY

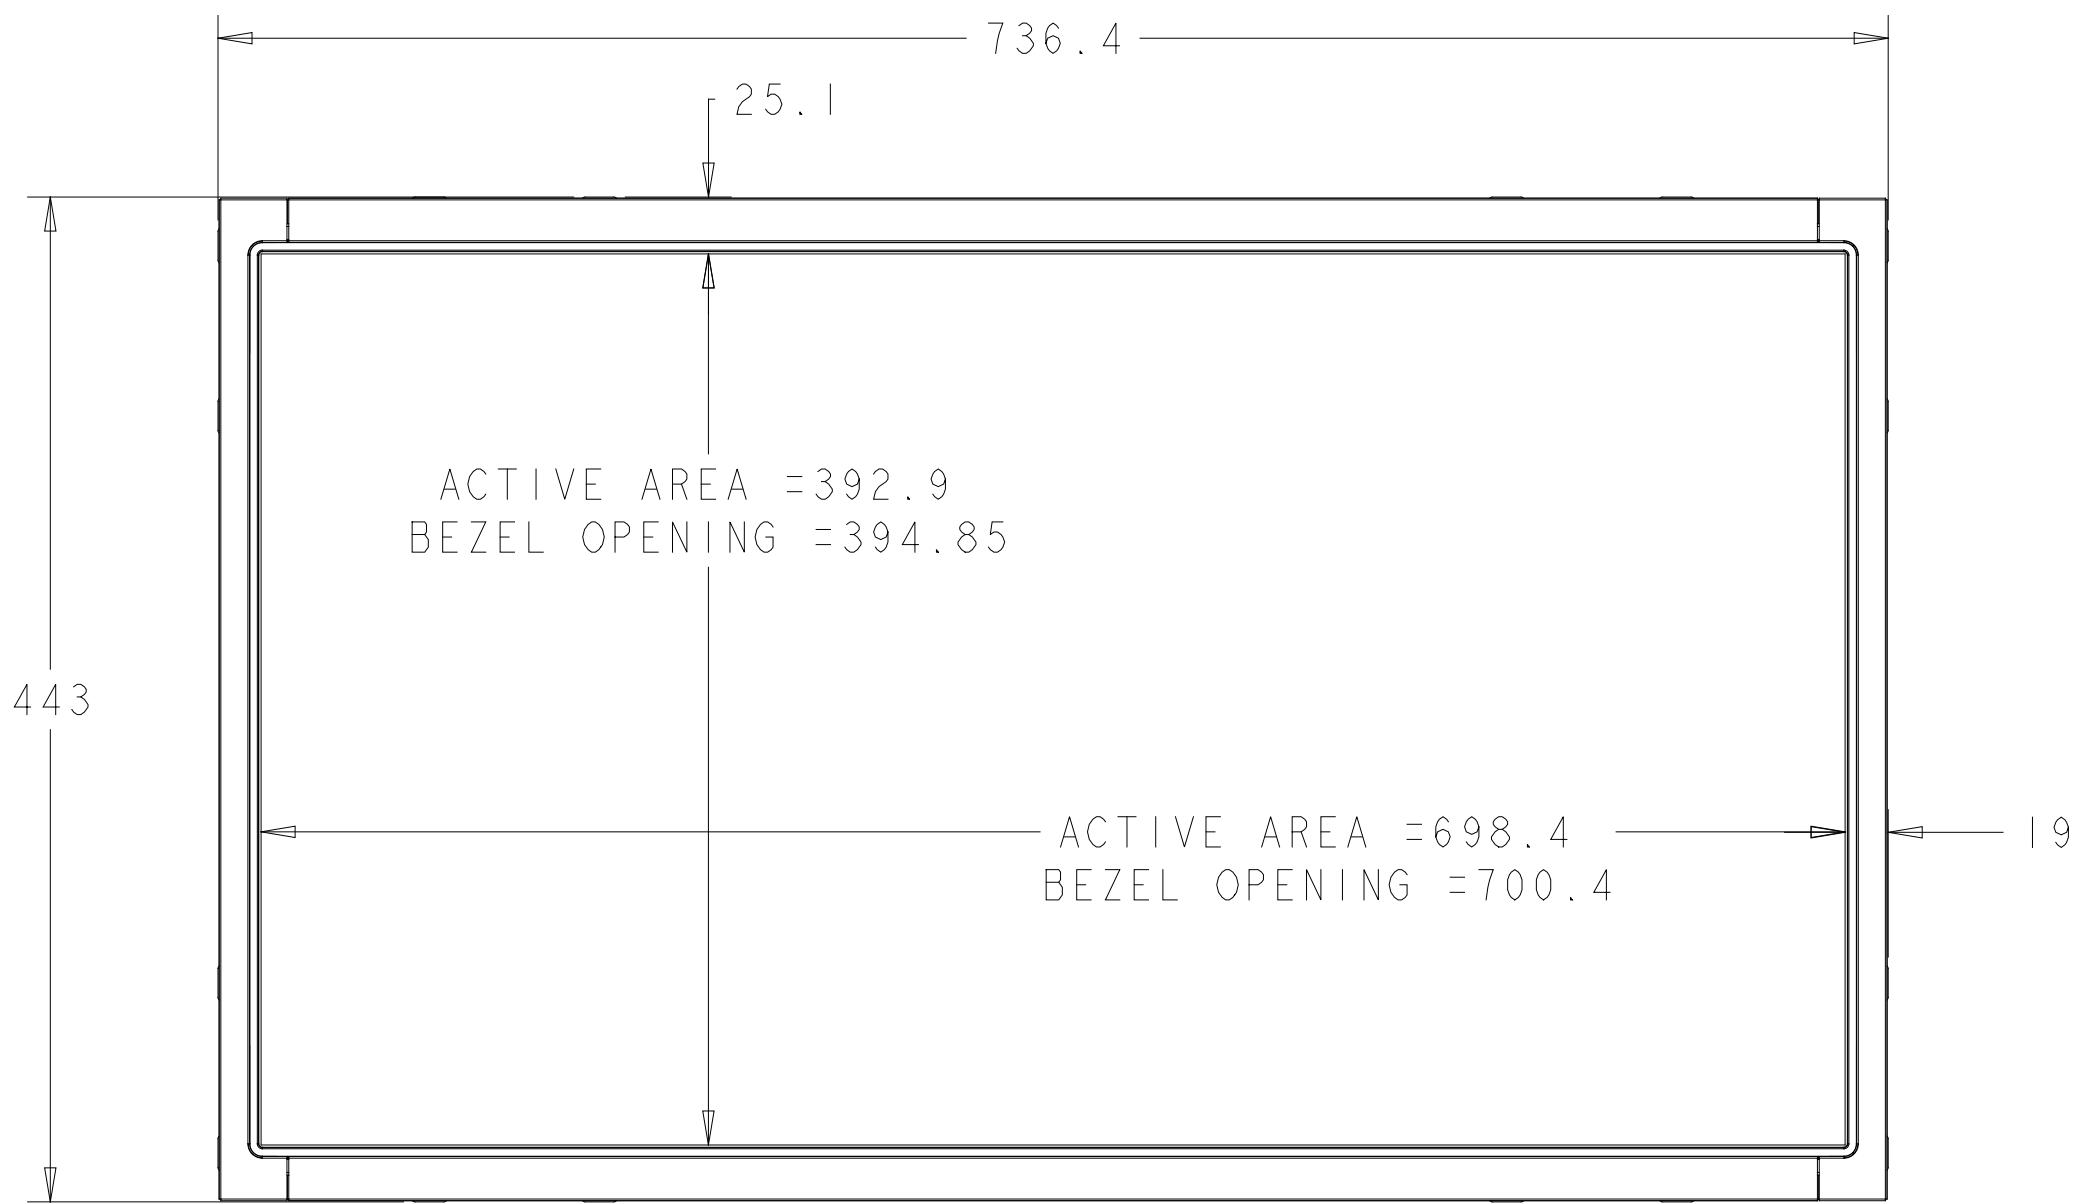



FRONT

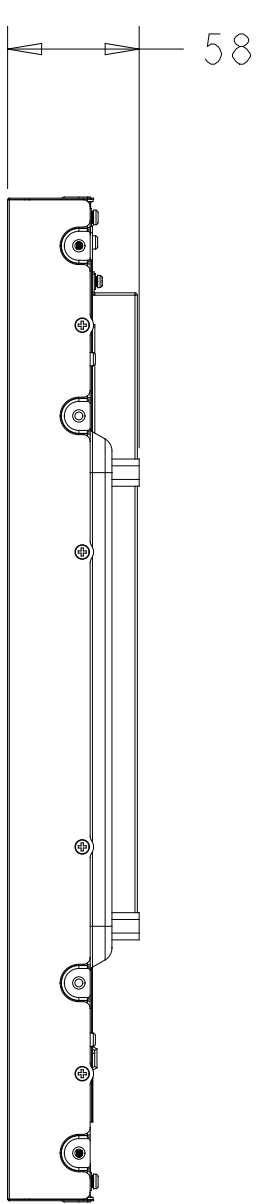


SIDE

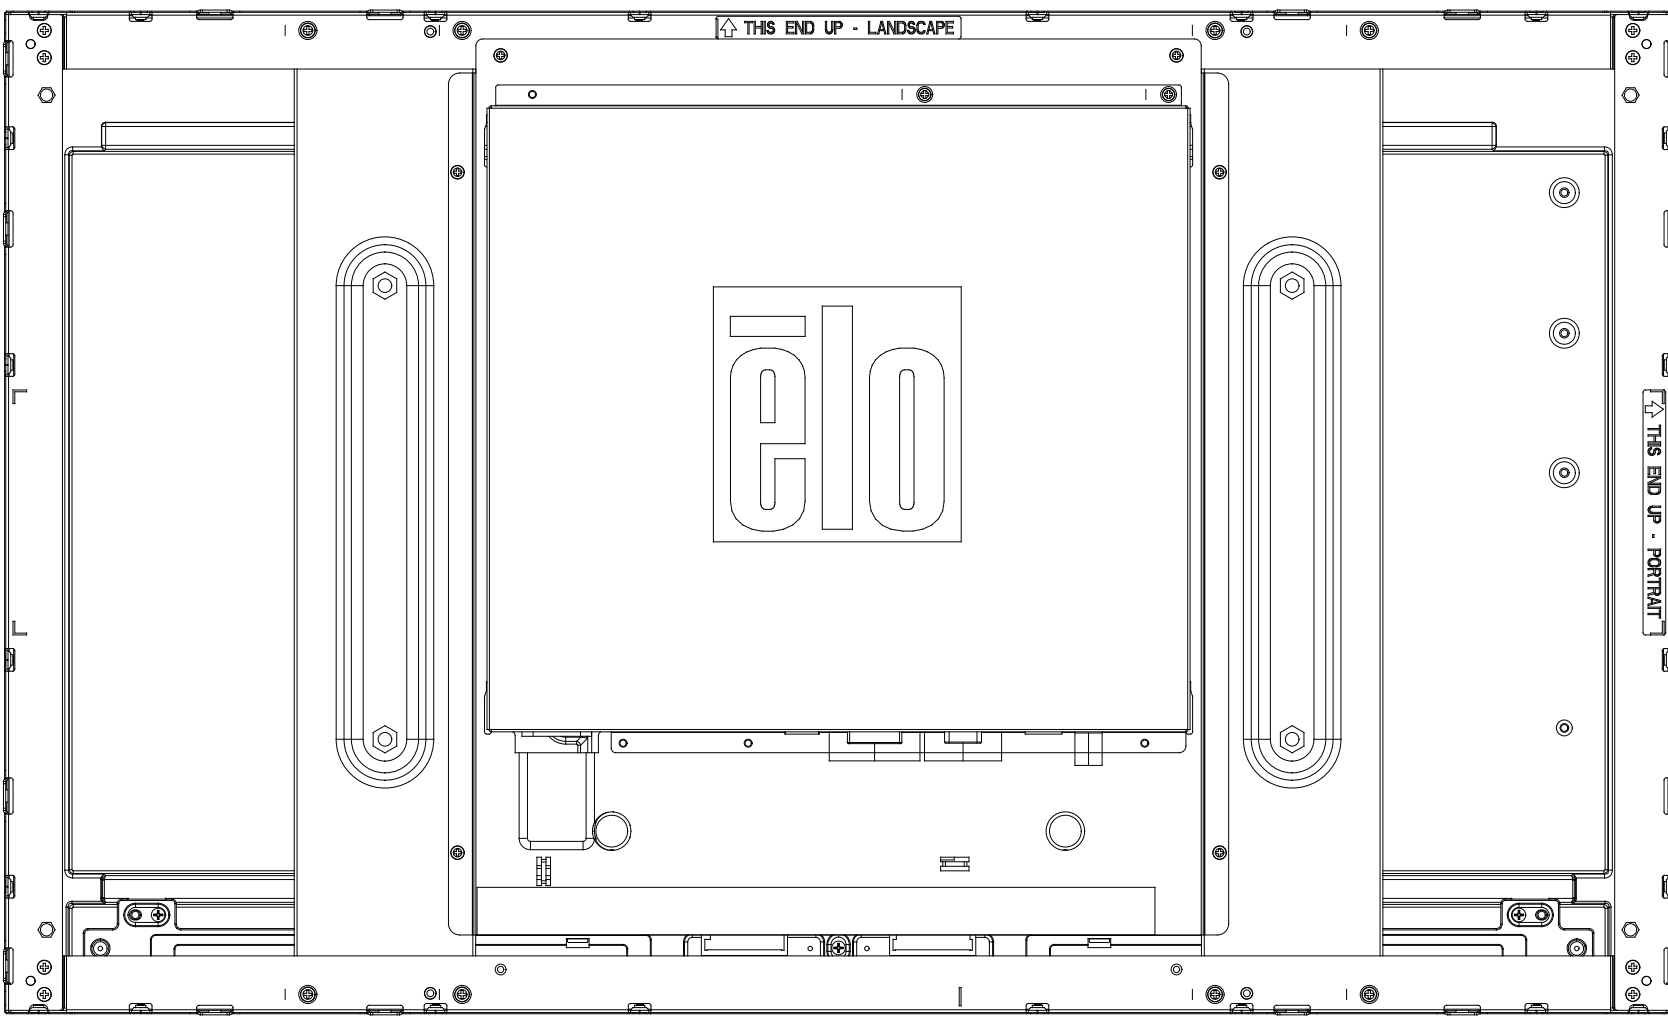

REAR

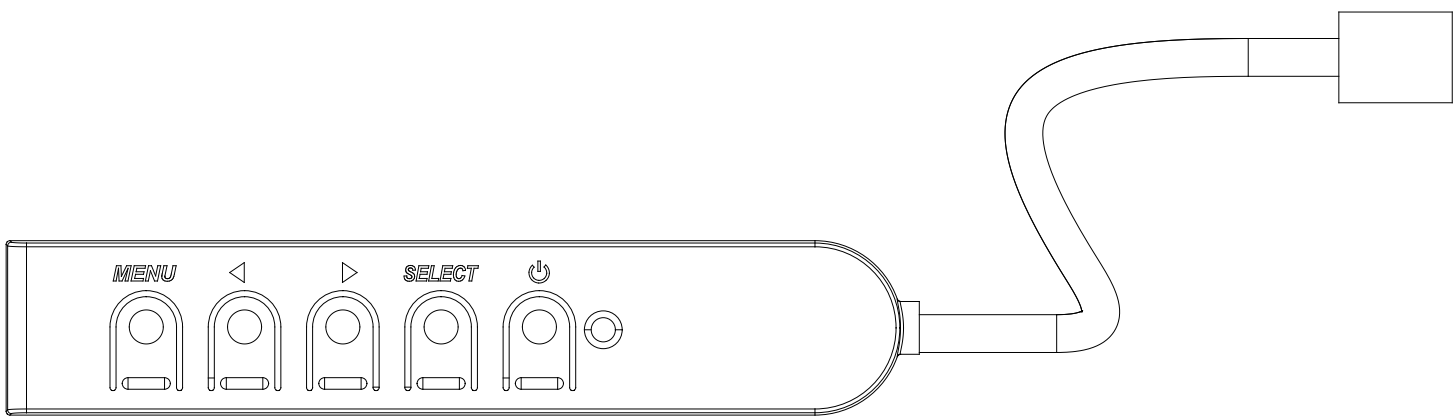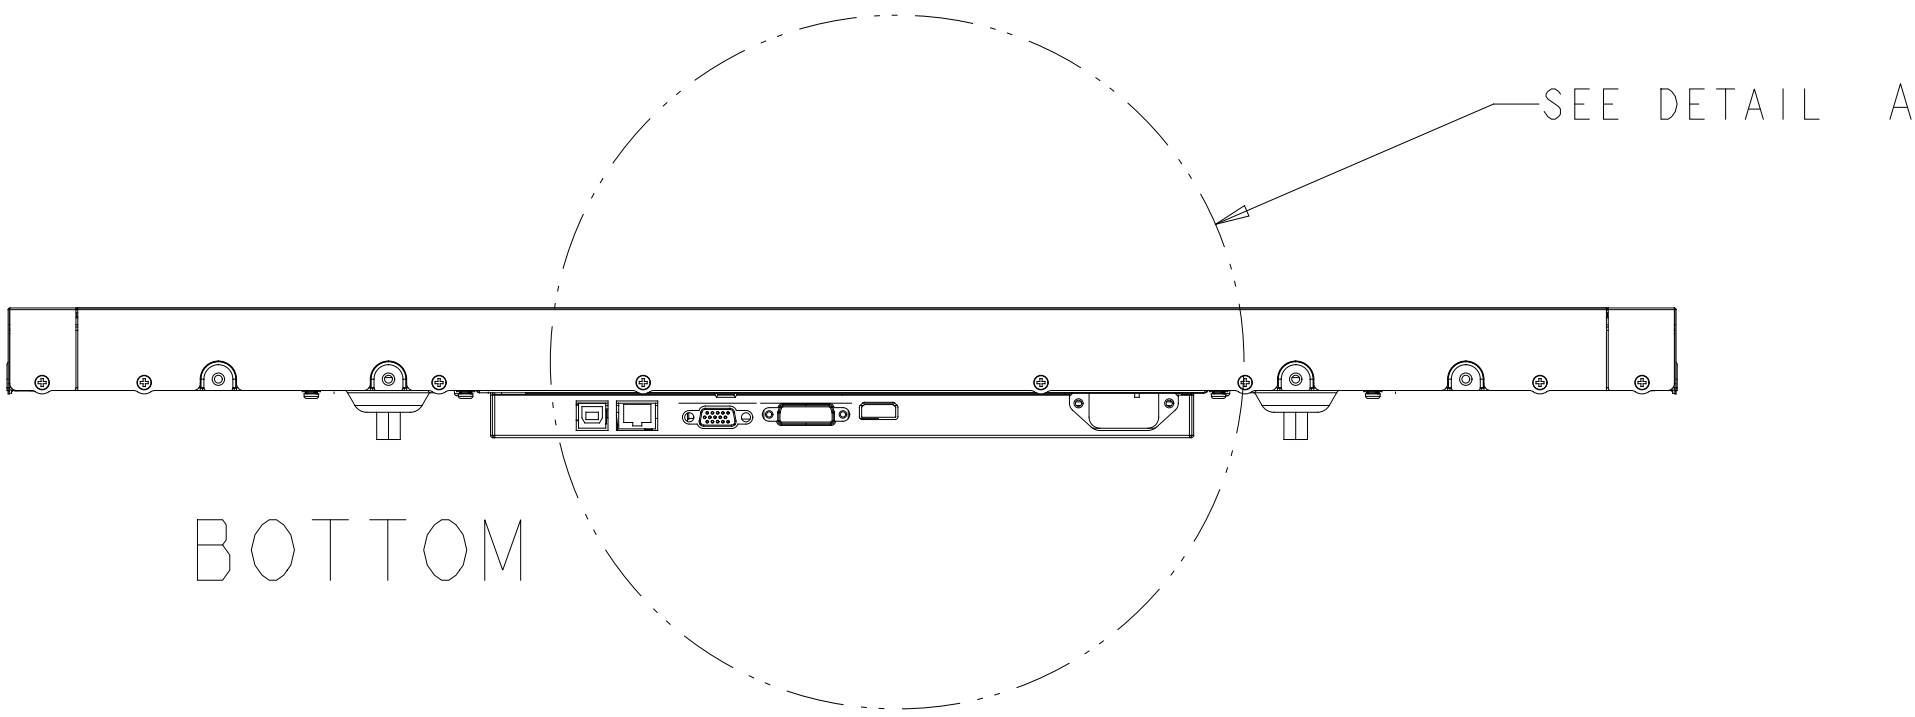


OPTIONAL OSD REMOTE
P/N E483757
(1 INCLUDED WITH TOUCHMONITOR)

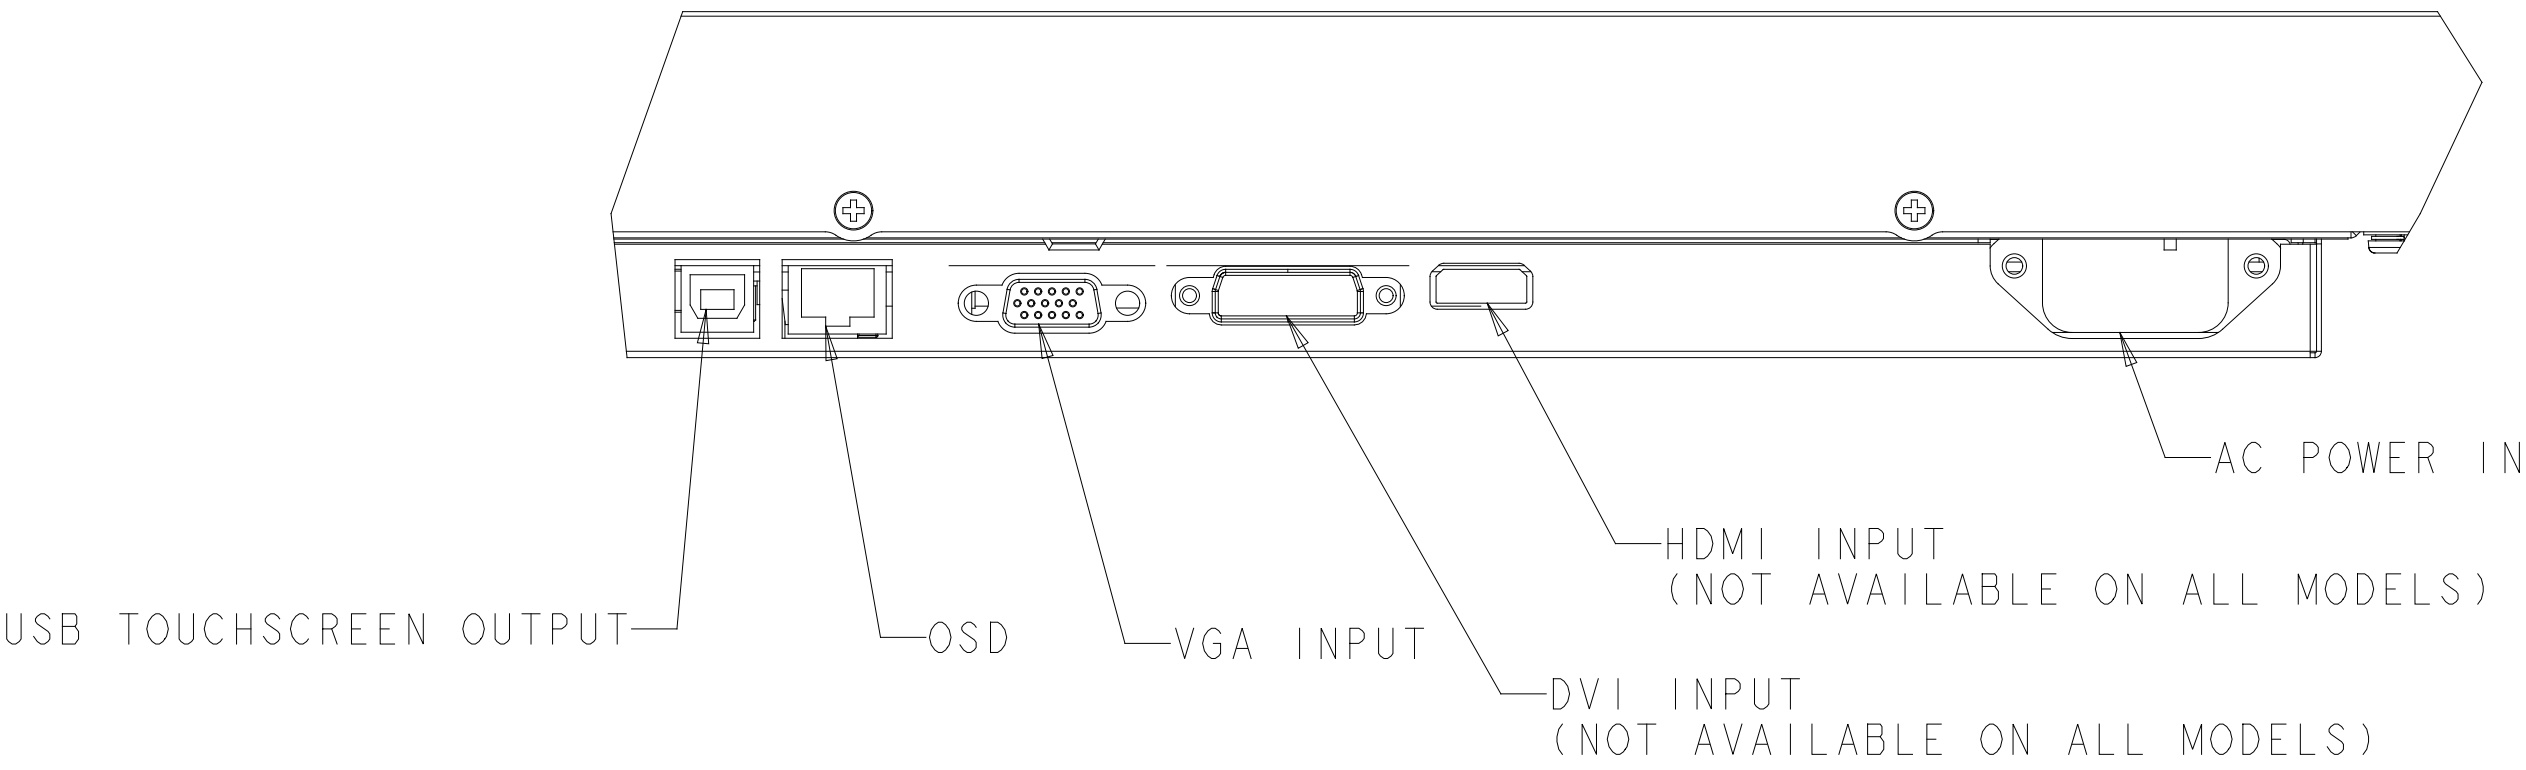


DETAIL A
SCALE 4:5


INTELLITOUCH ONLY

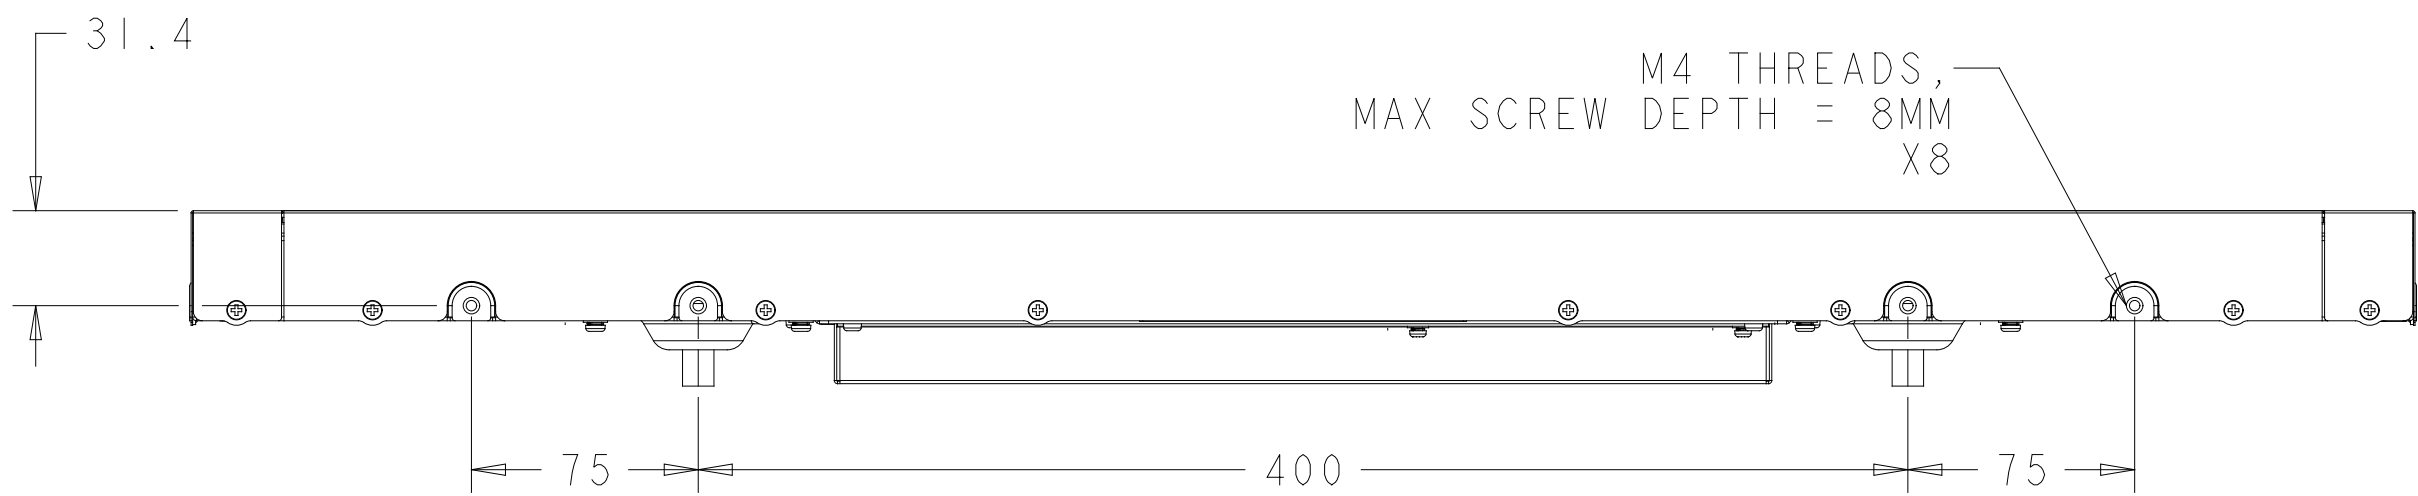

SIDE MOUNT HORIZONTAL (TOP/BOTTOM)

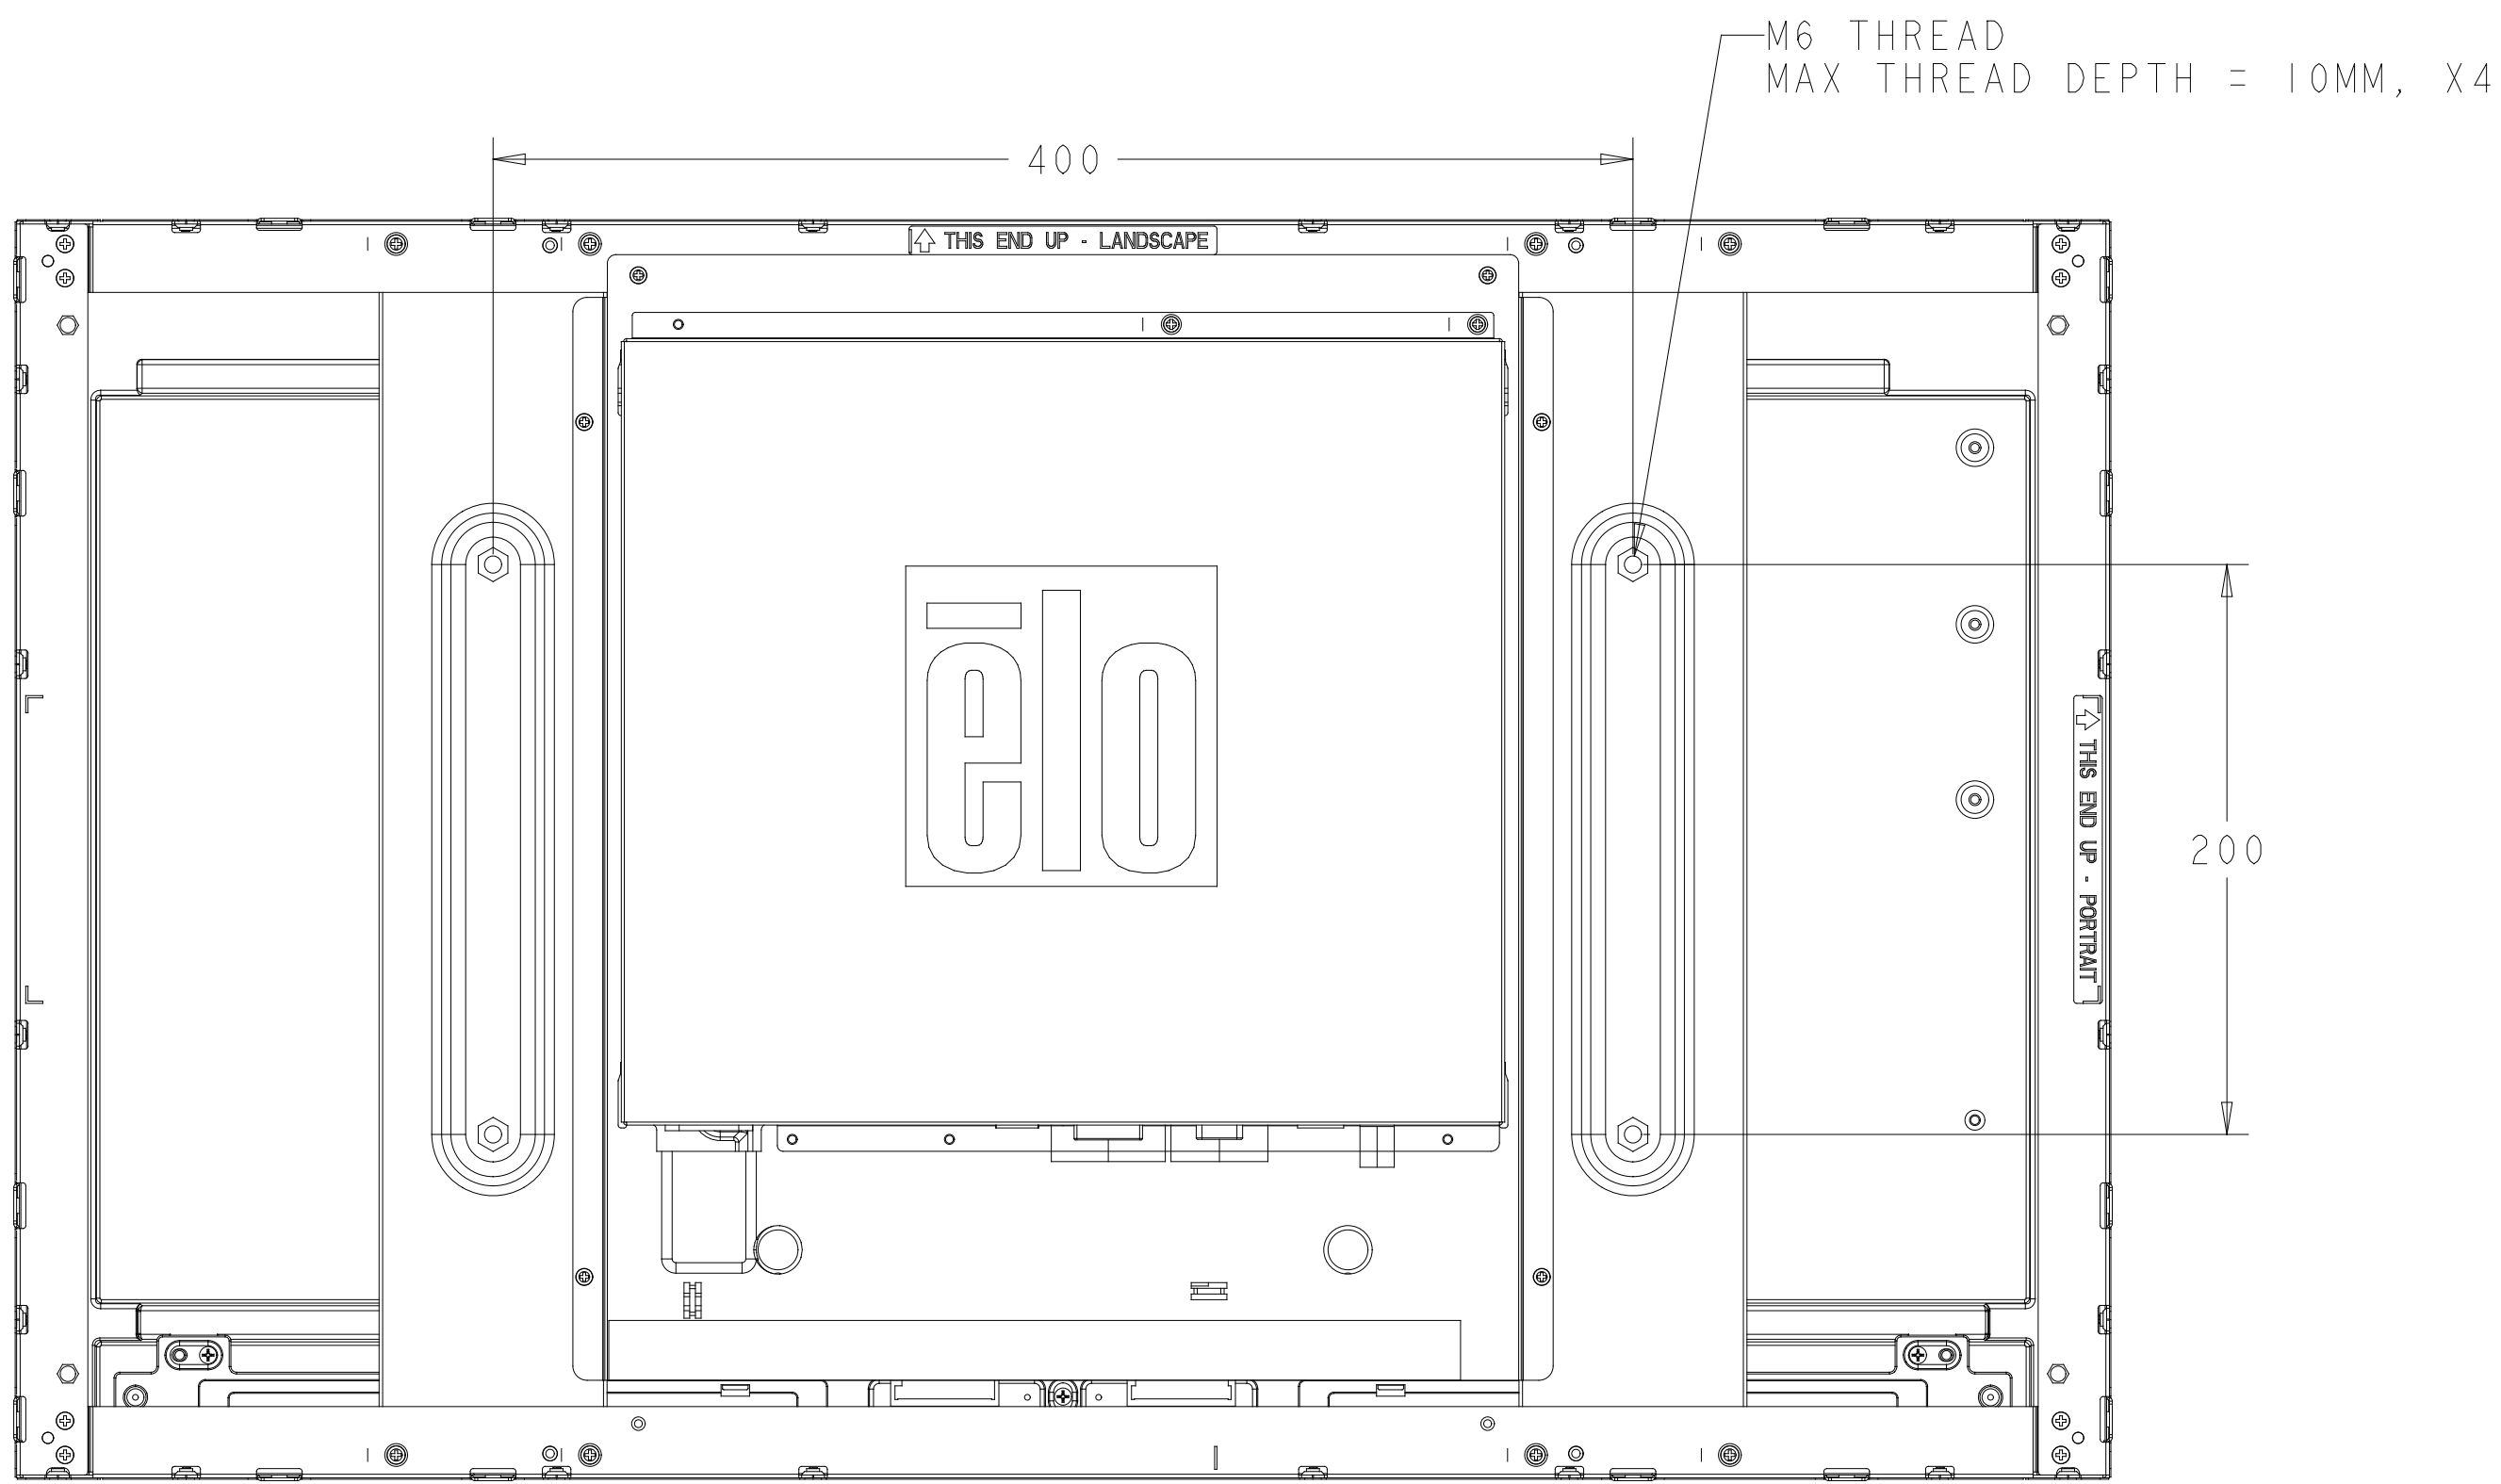


VESA MOUNT PER MIS-F, 400, 200, 6

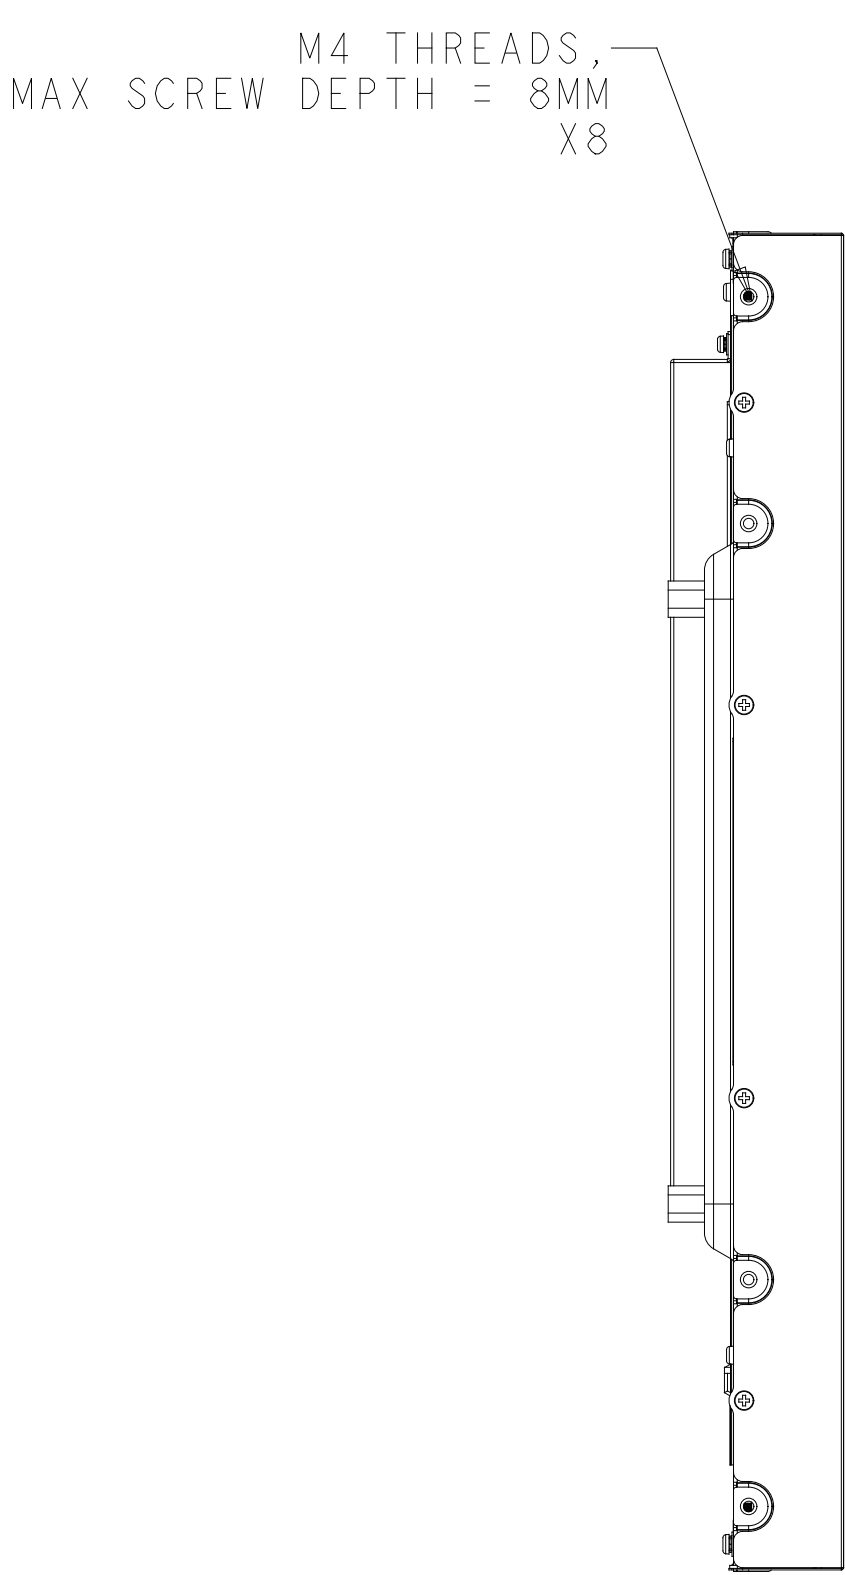

SIDE MOUNT VERTICAL (LEFT/RIGHT)



INTELLITOUCH ONLY

MOUNTING WITH ADJUSTABLE BRACKETS (8 PROVIDED)

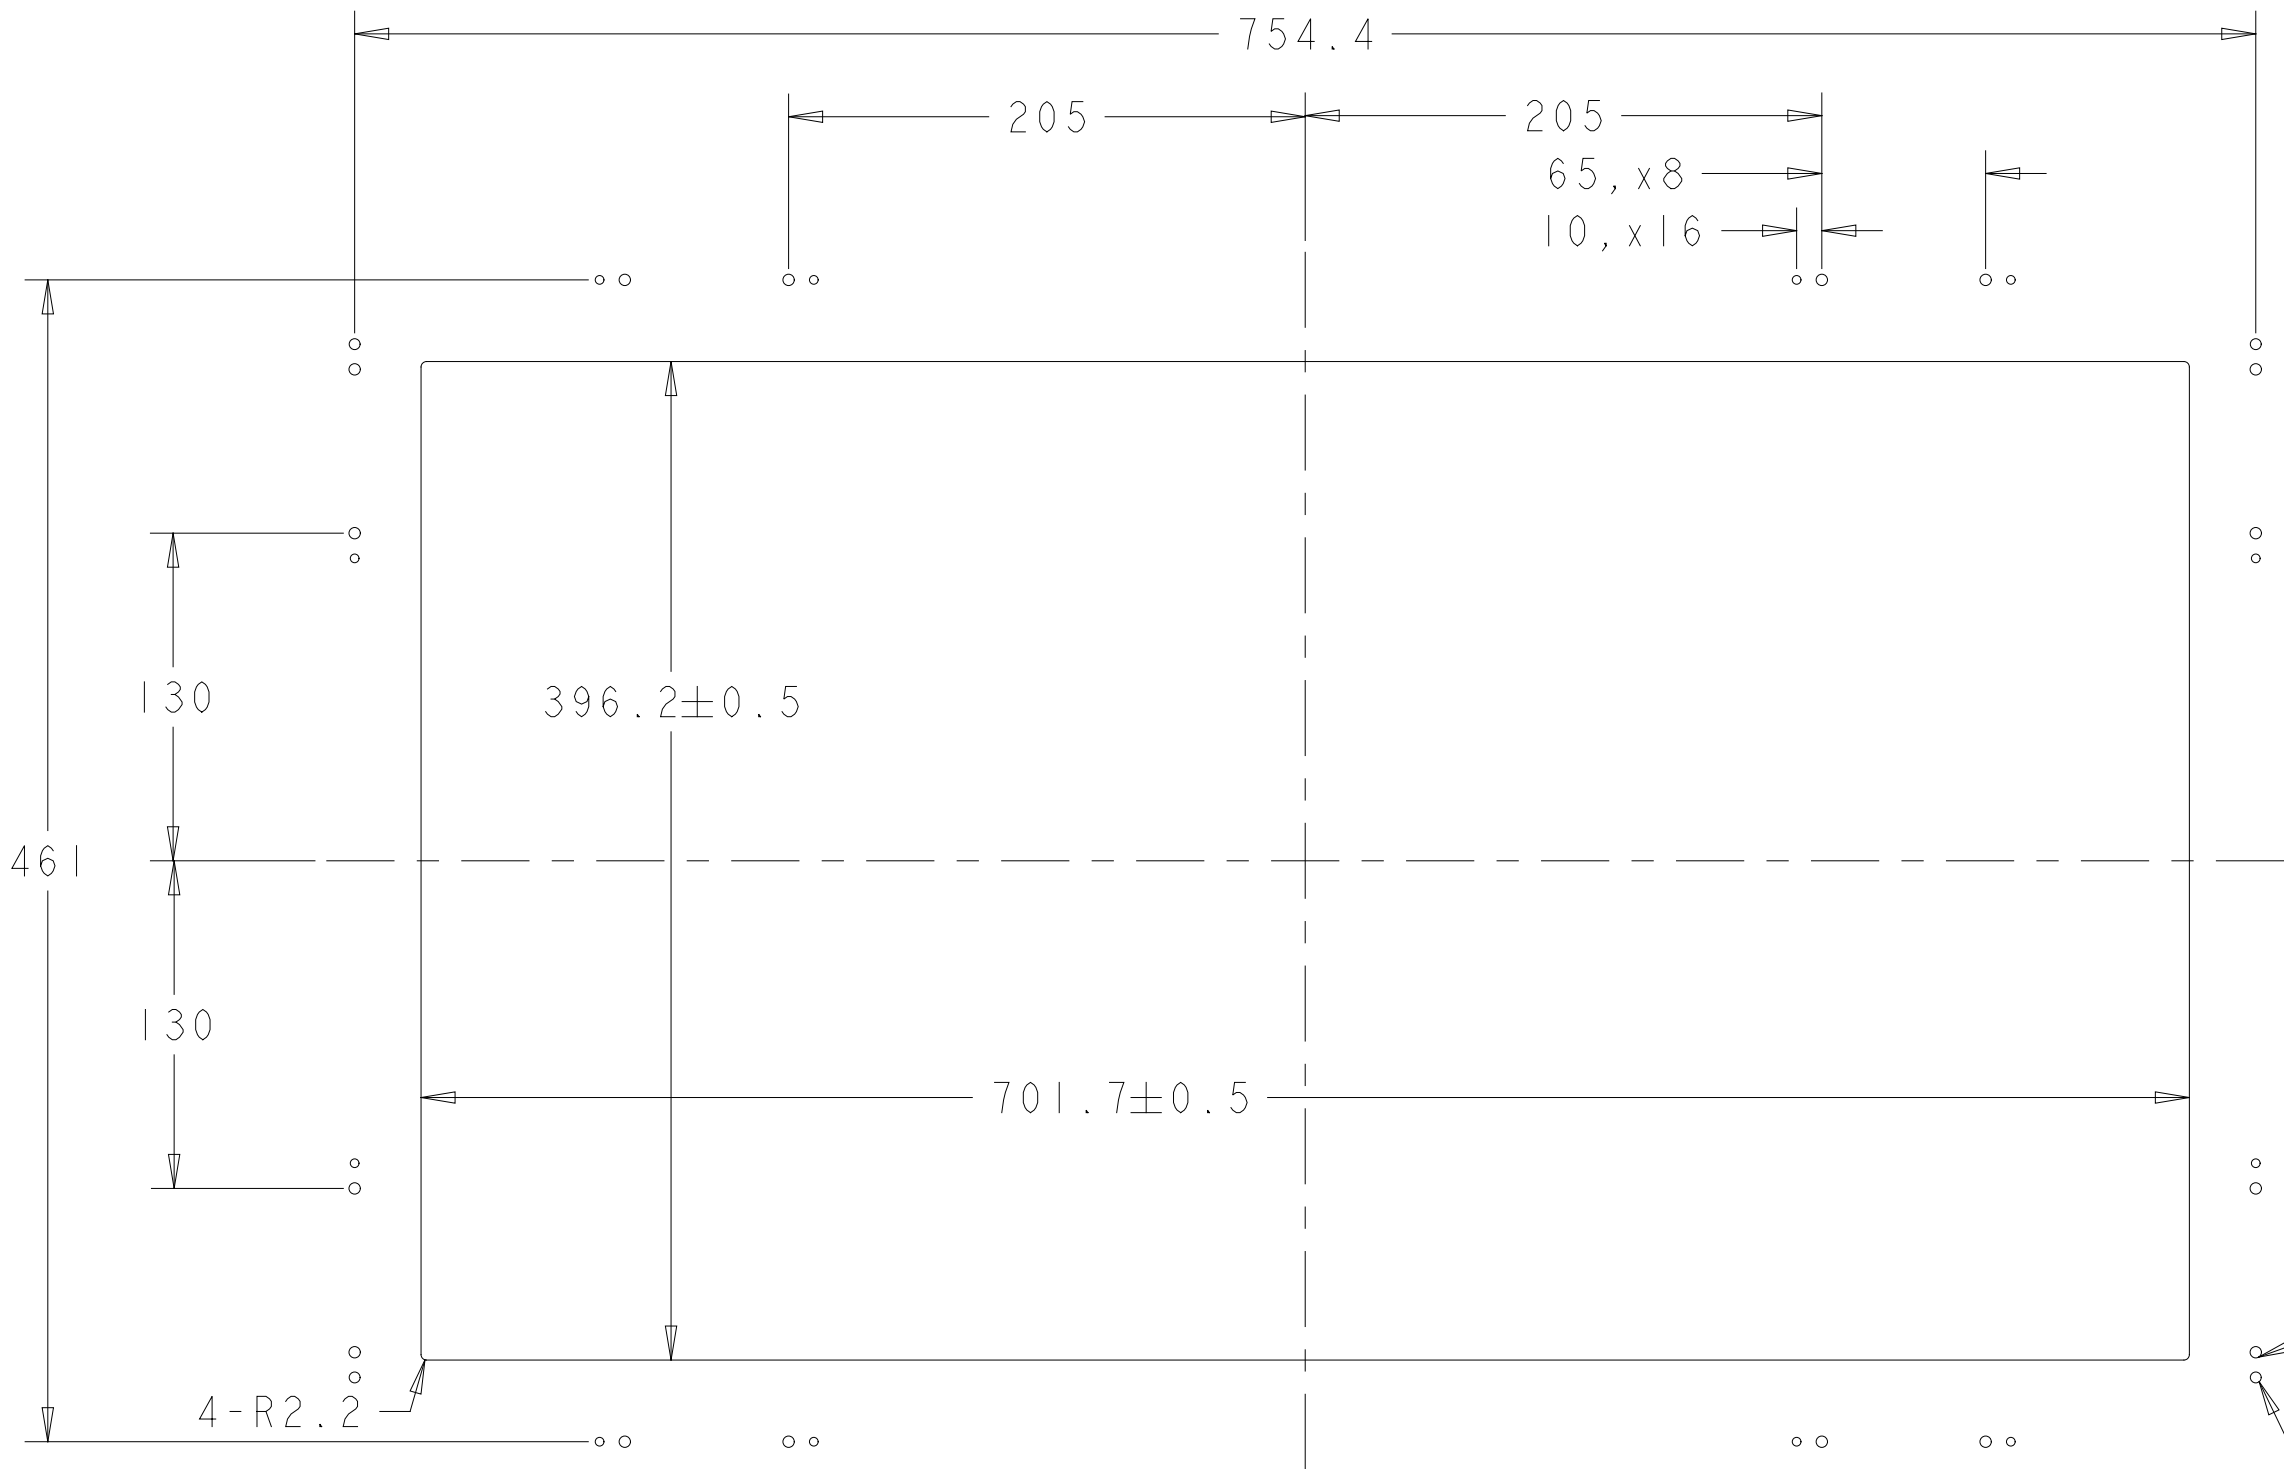


RECOMMENDED CUSTOMER PANEL CUT-OUT

- MOUNTING HOLES, x16,
FOR FRONT-ENTRY SCREWS:
CLEARANCE HOLES FOR M4
MACHINE SCREWS
- MOUNTING HOLES, x16,
FOR REAR-ENTRY SCREWS:
1. IF CUSTOMER PANEL IS WOOD,
PILOT HOLES FOR 4MM WOOD SCREWS.
2. IF CUSTOMER PANEL IS METAL,
BLIND TAPPED M4 THREADED HOLES FOR M4 STUDS.

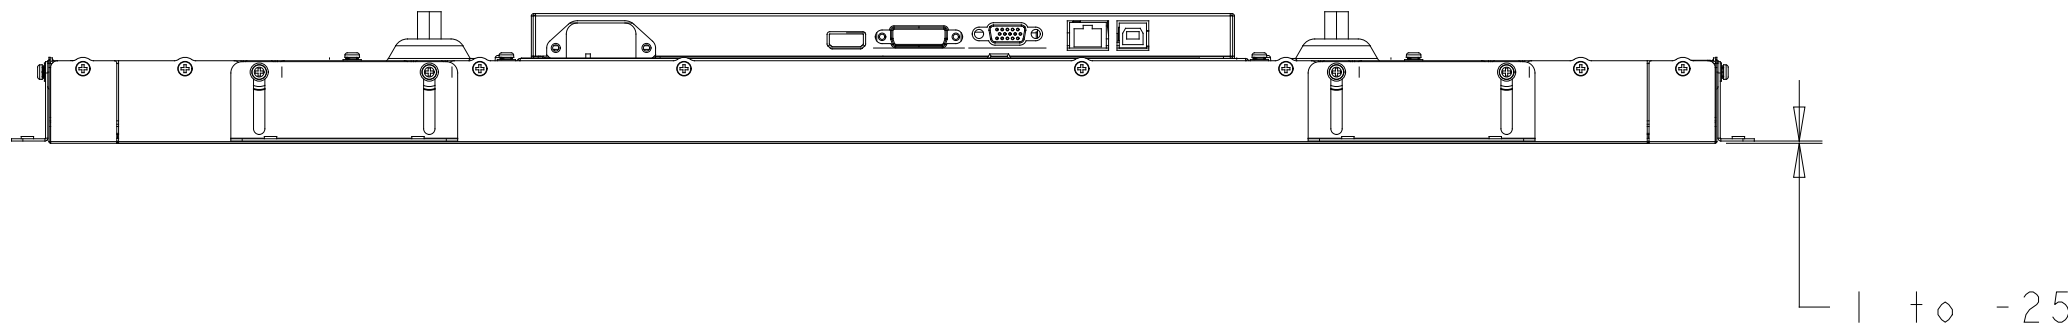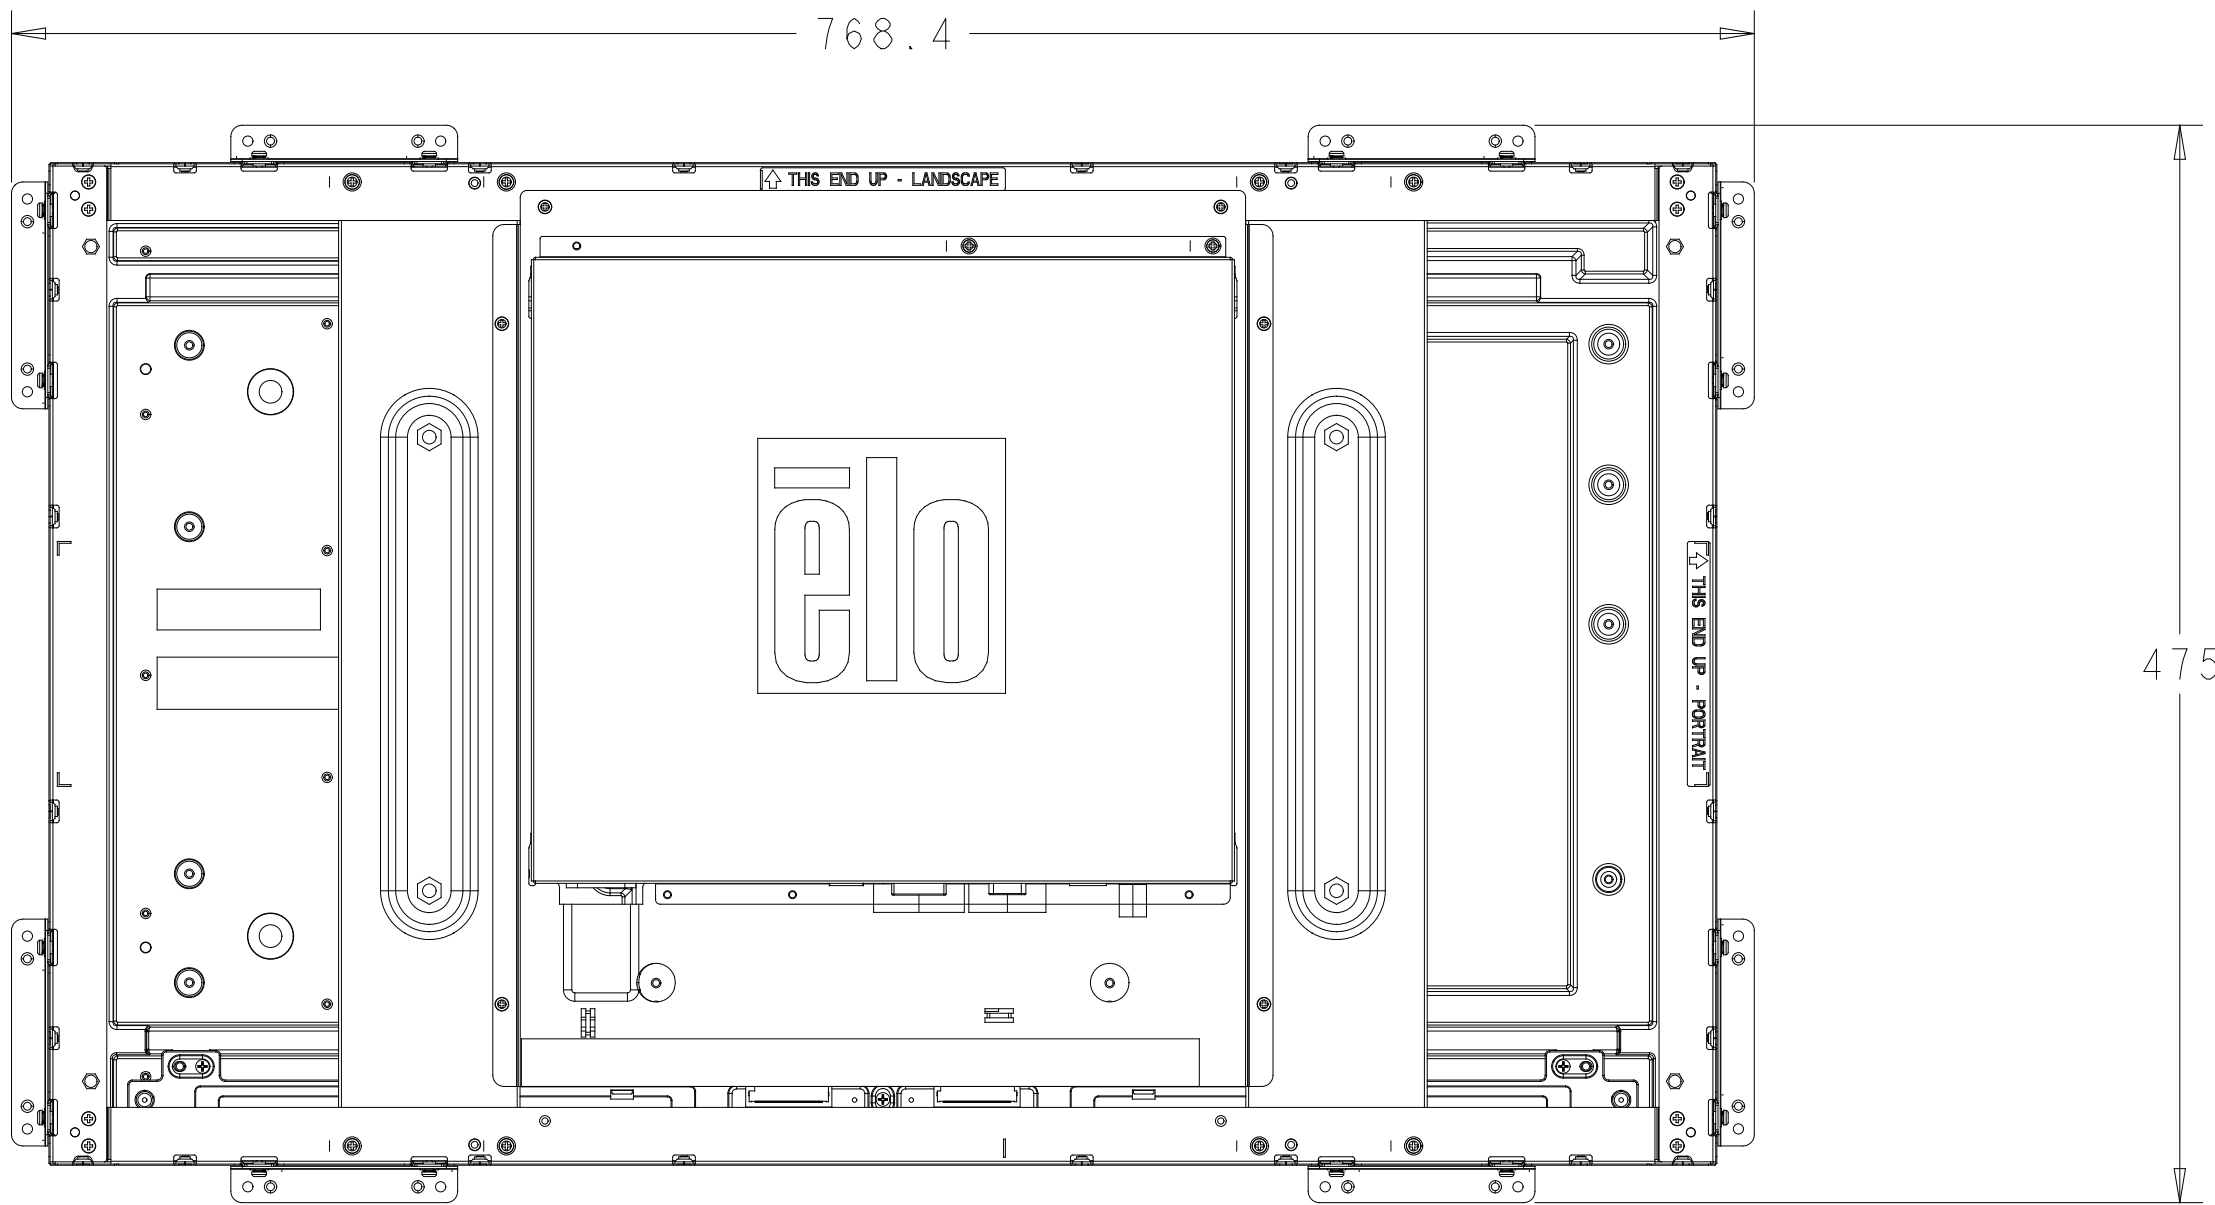


PCAP ONLY


DETAIL B
SCALE 1:1

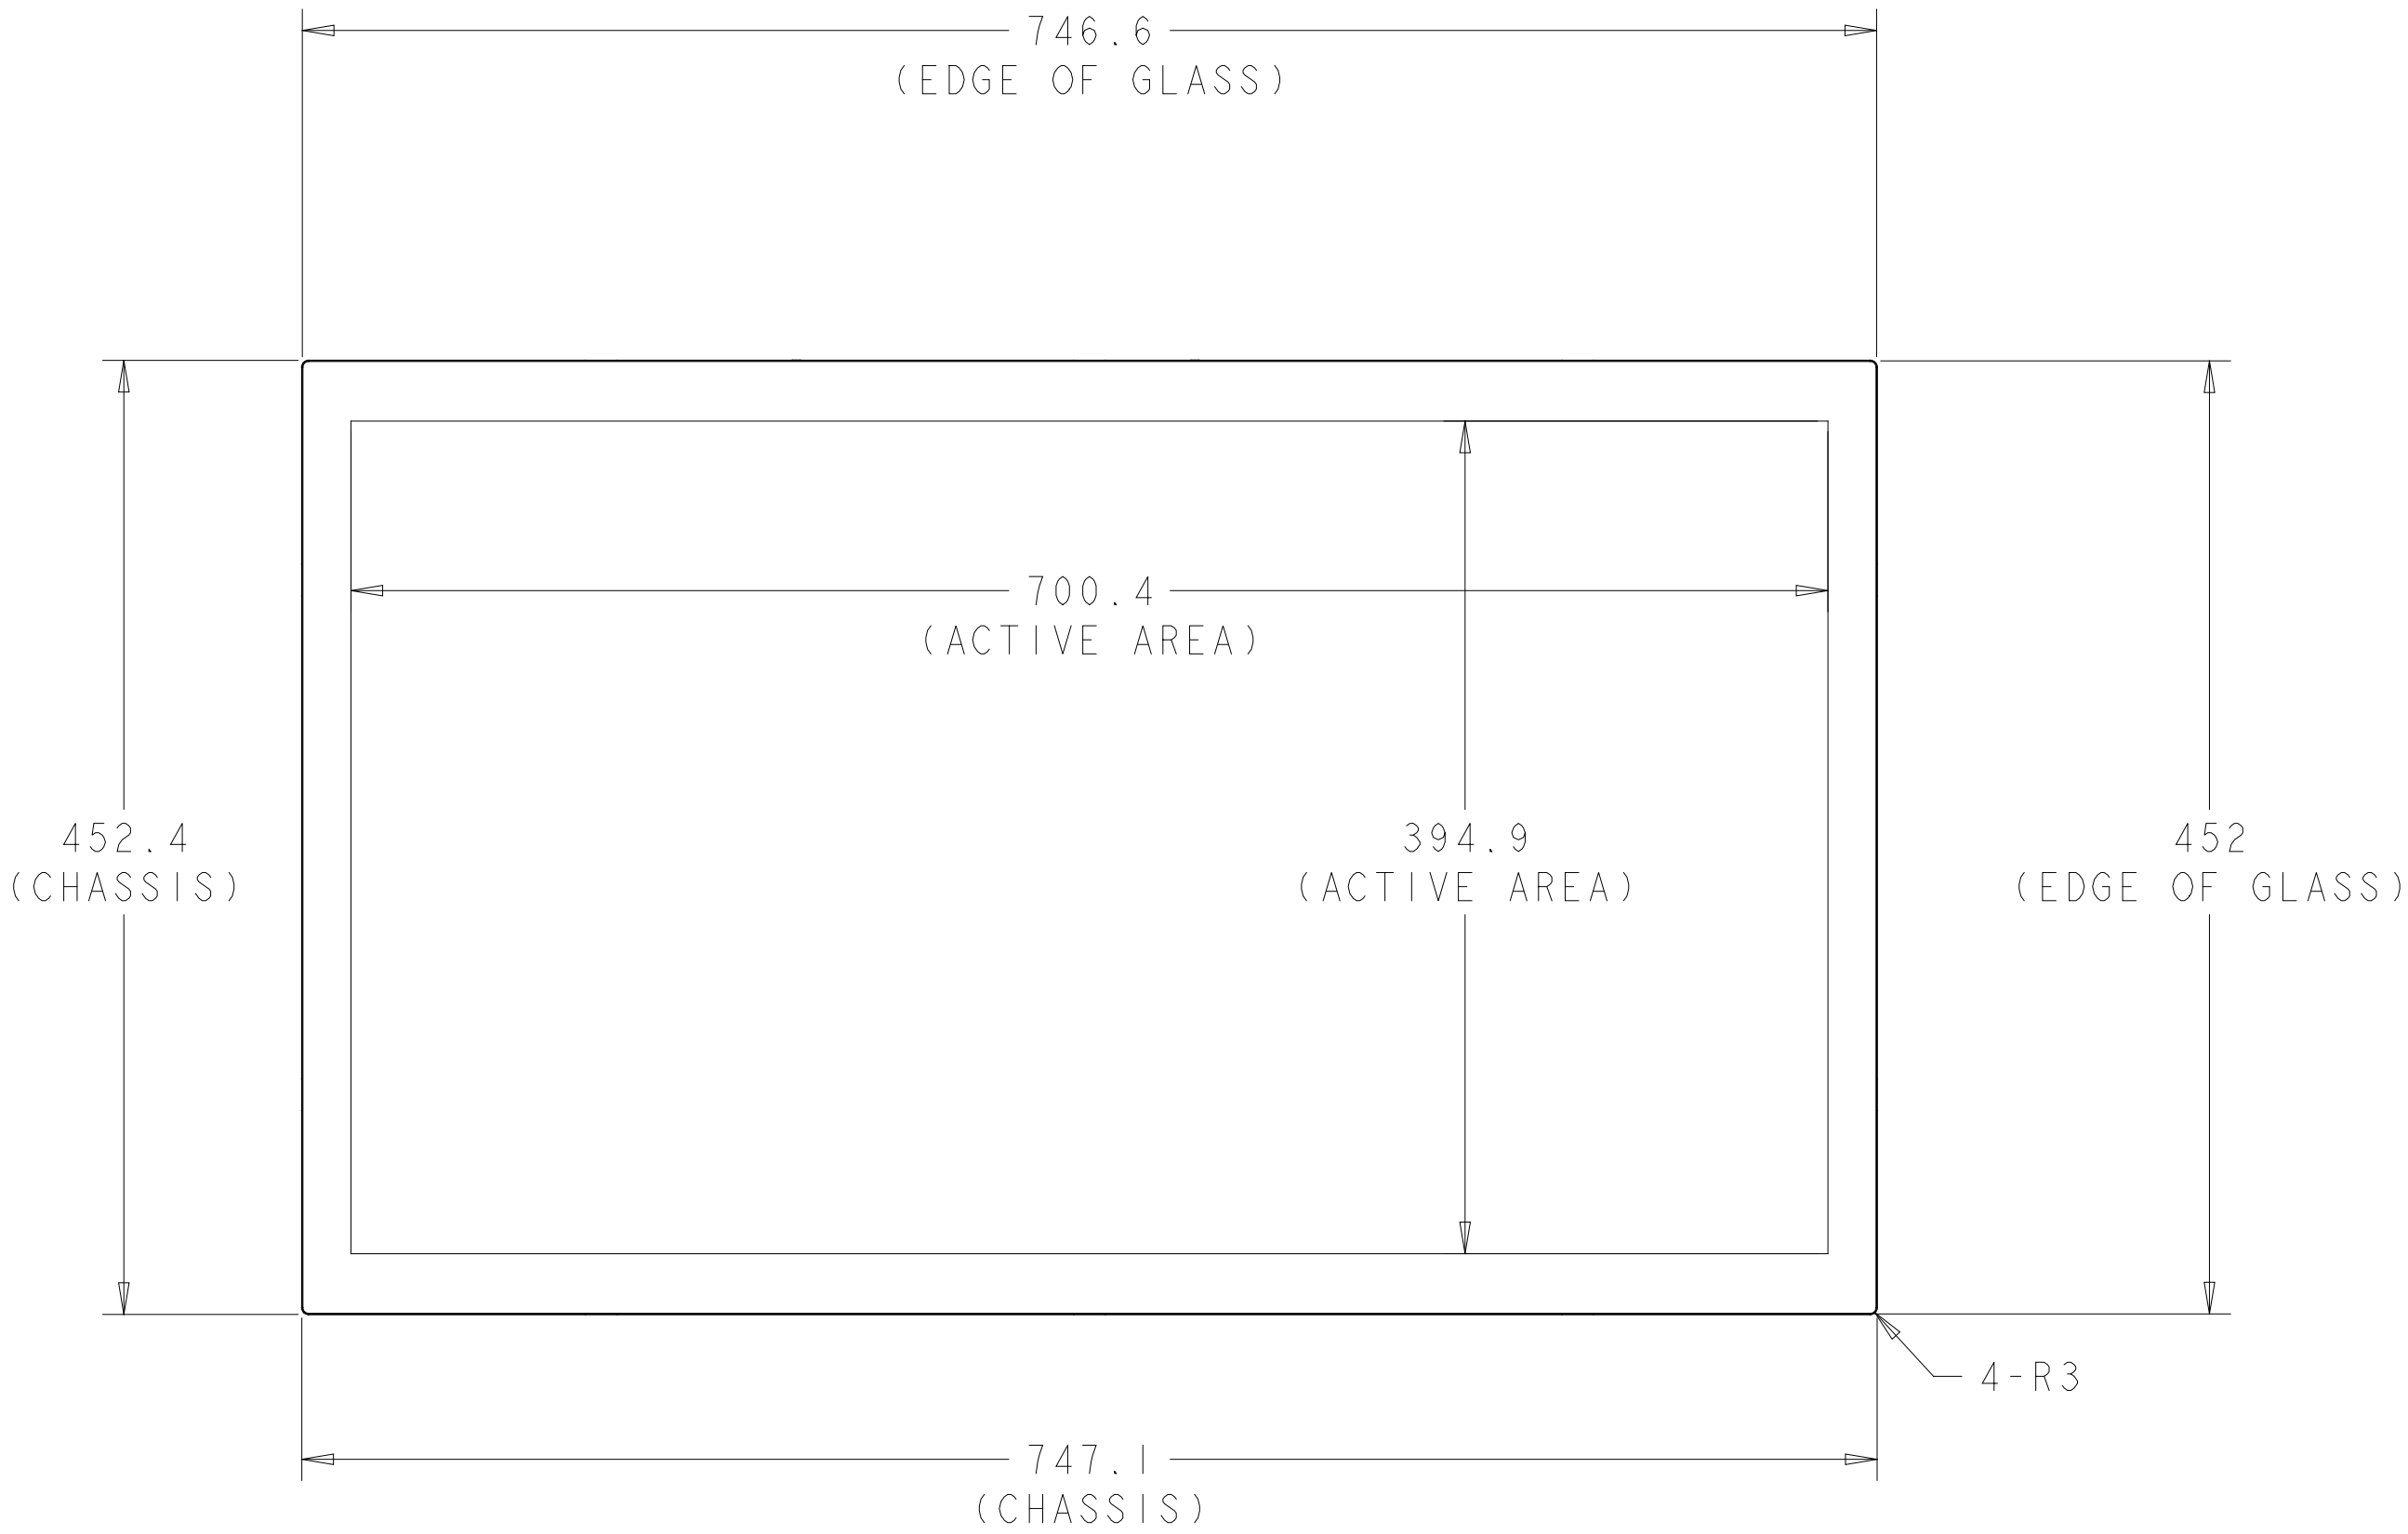


FRONT

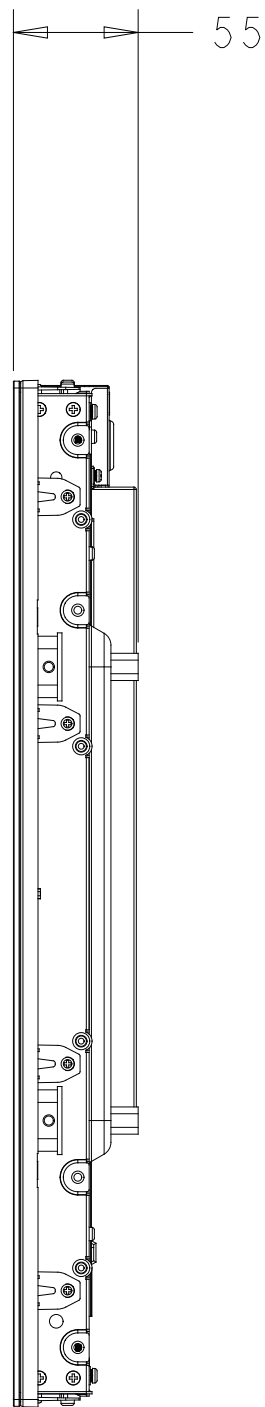

SIDE

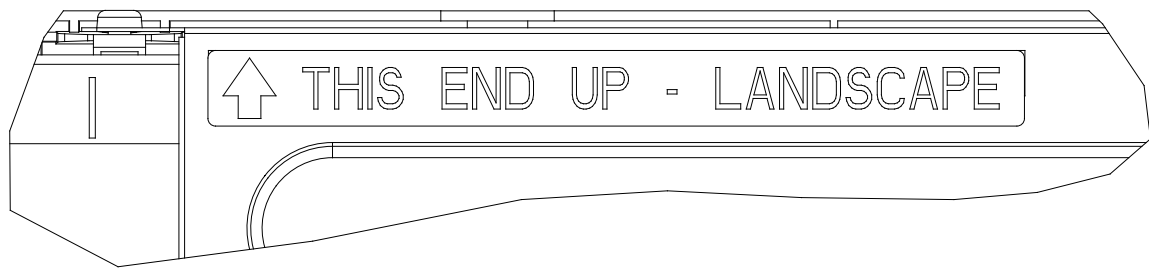


SEE DETAIL B

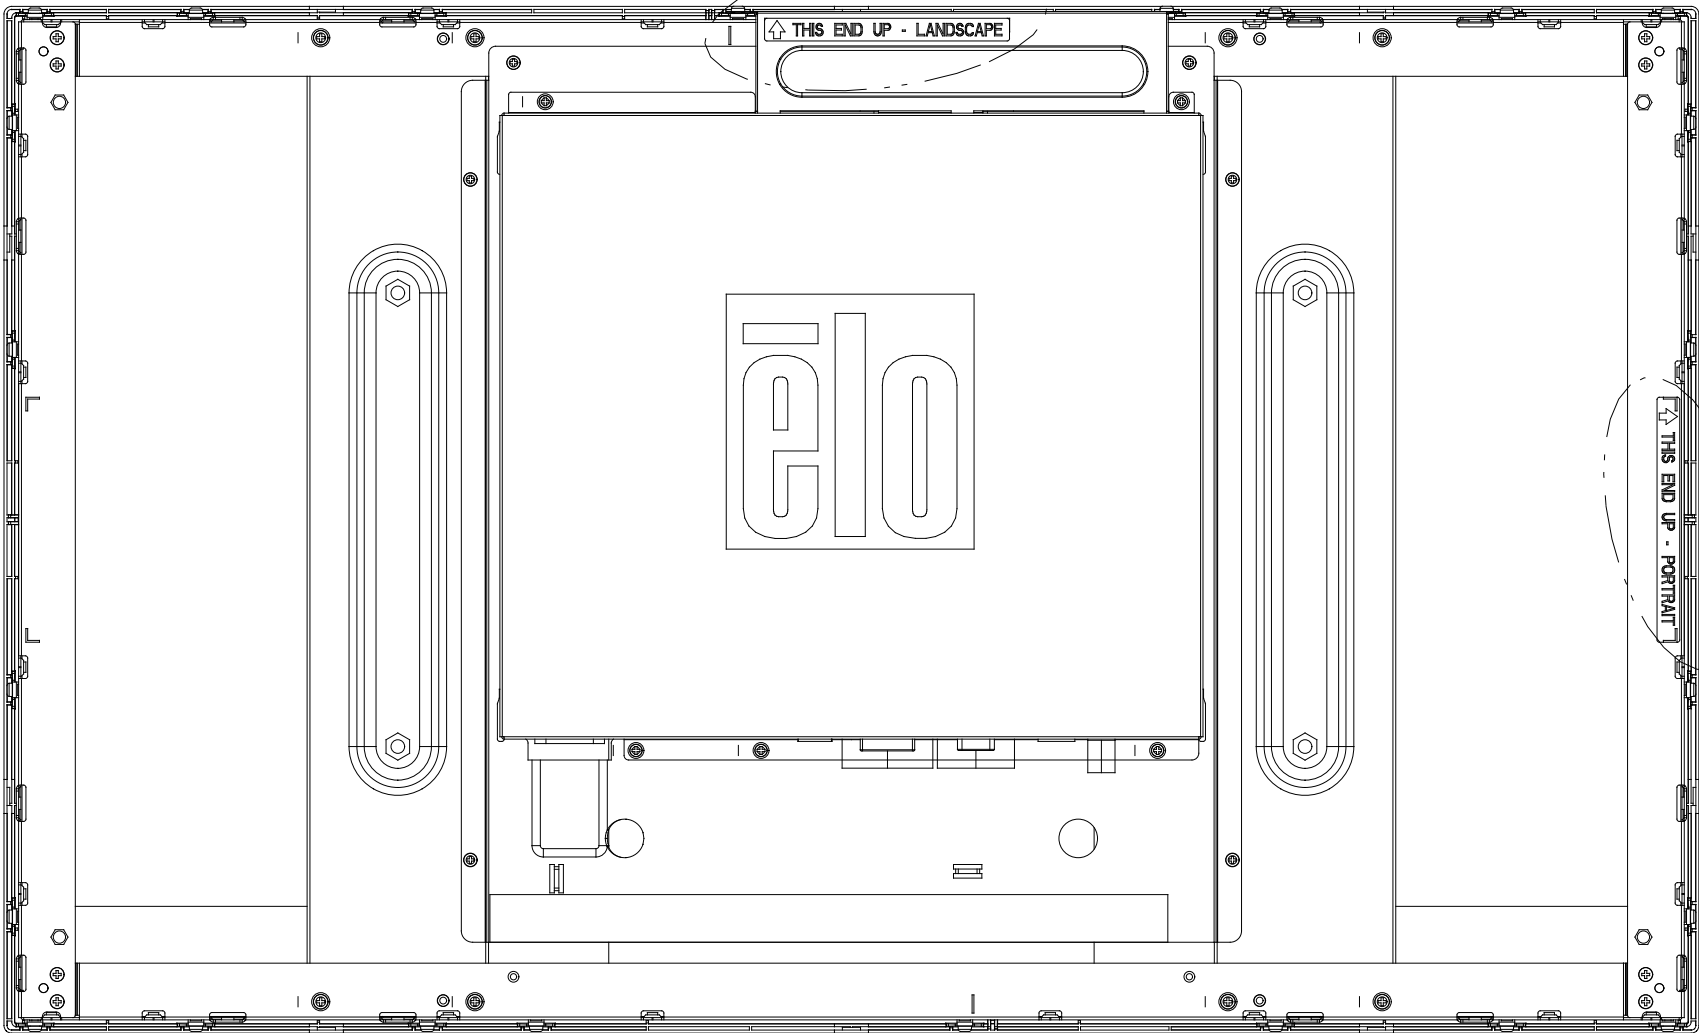


SEE DETAIL C

REAR

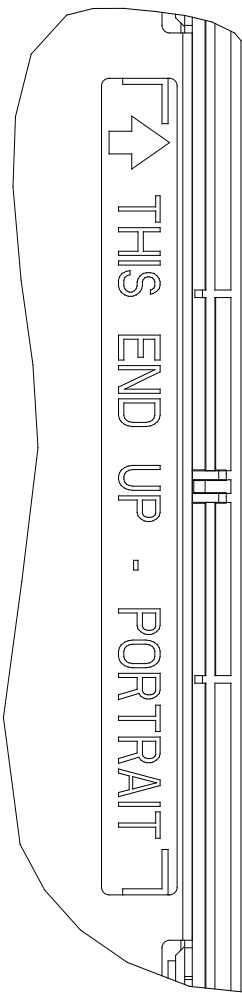


DETAIL C
SCALE 1:1

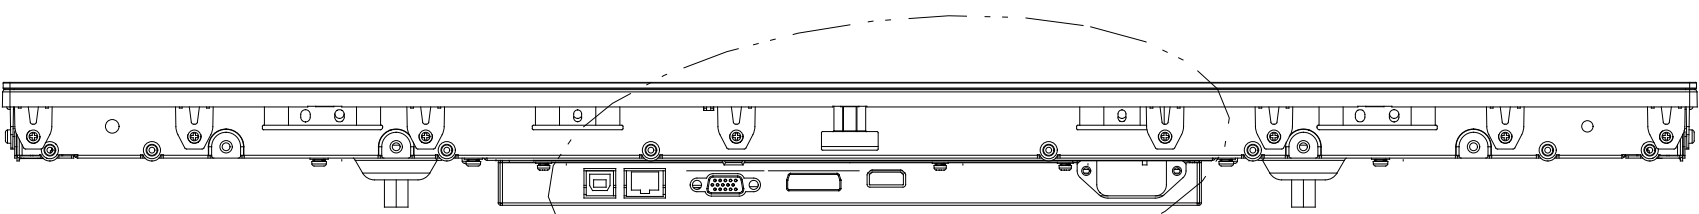

SEE DETAIL D


BOTTOM

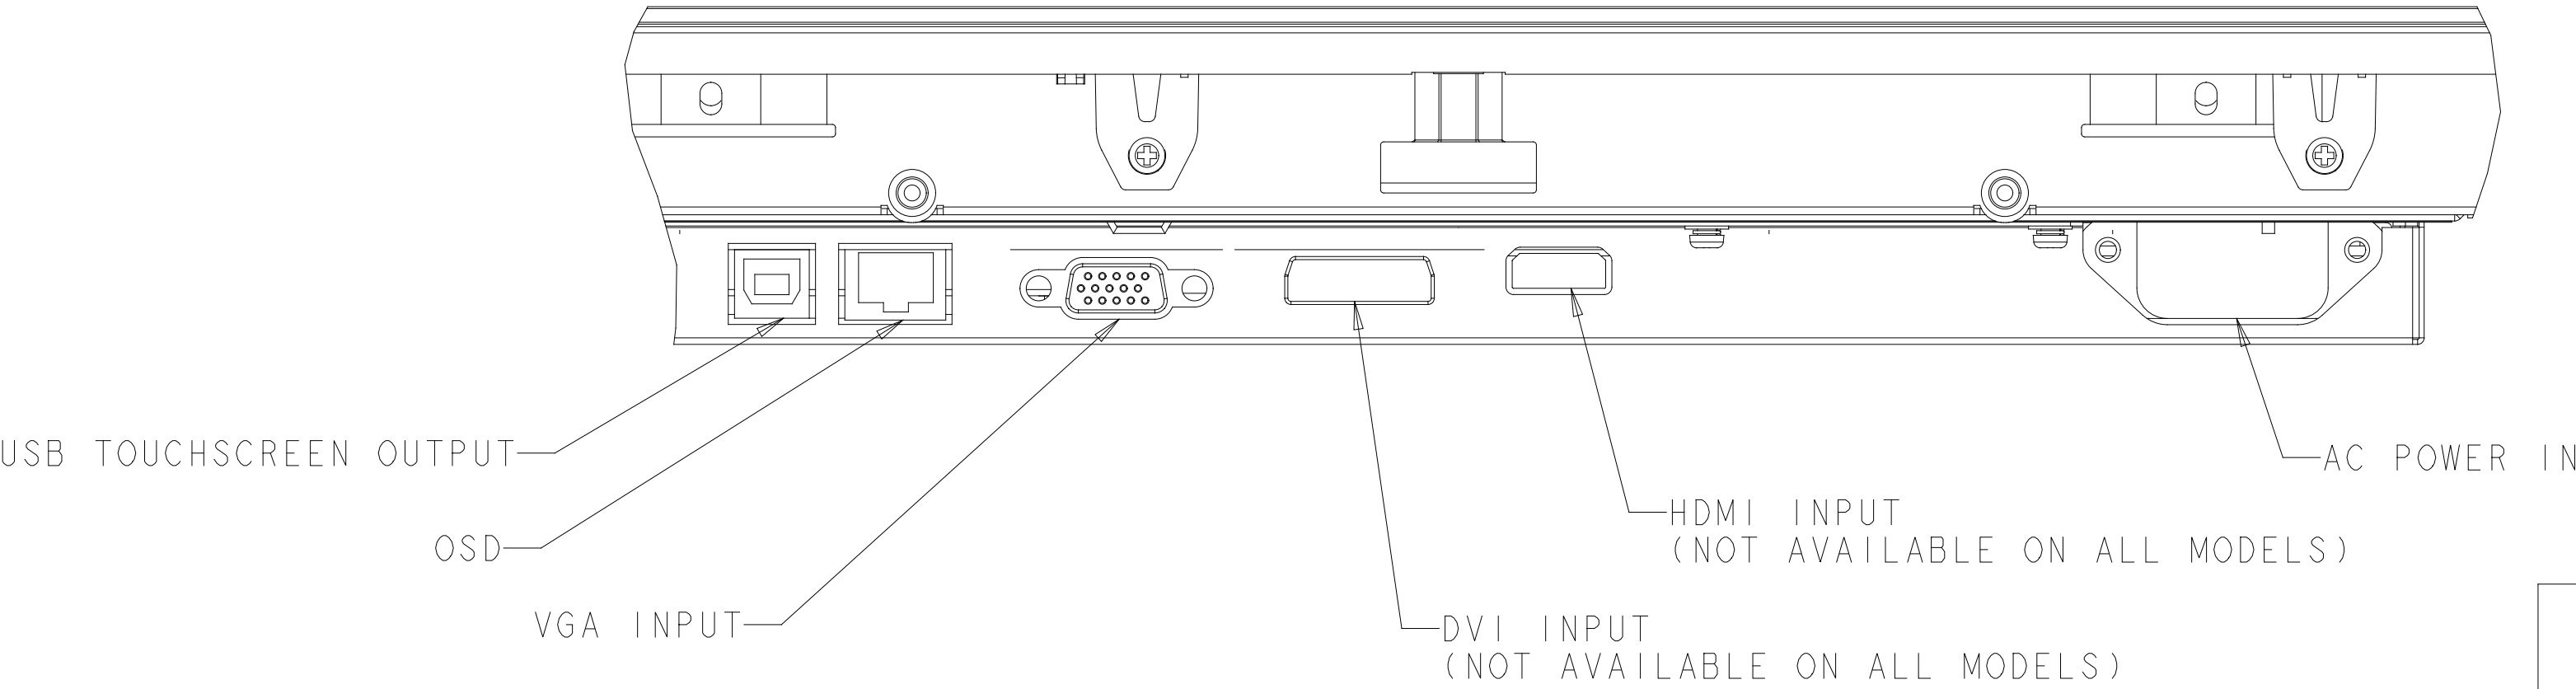


DETAIL D
SCALE 1:1

PCAP ONLY


- INSTALLATION NOTES:
- 1. DURING HANDLING AND INSTALLATION, DO NOT REST WEIGHT OF MONITOR ON EXPOSED TOUCHSCREEN EDGE. AVOID EXCESSIVE PRESSURE OR SHARP IMPACTS ON TOUCHSCREEN EDGE. DAMAGE TO TOUCHSCREEN AMY OCCUR.
 - 2. MONITOR SHOULD BE MOUNTED WITH TOUCHSCREEN FLUSH TO CUSTOMER KIOSK FRONT SURFACE(WITHIN $\pm 0.3\text{mm}$ TOLERANCE).
 - 3. KIOSK DESIGN SHOULD PROTECT TOUCHSCREEN EDGE TO AVOID ACCIDENTAL DAMAGE DURING USE AND CLEANING.

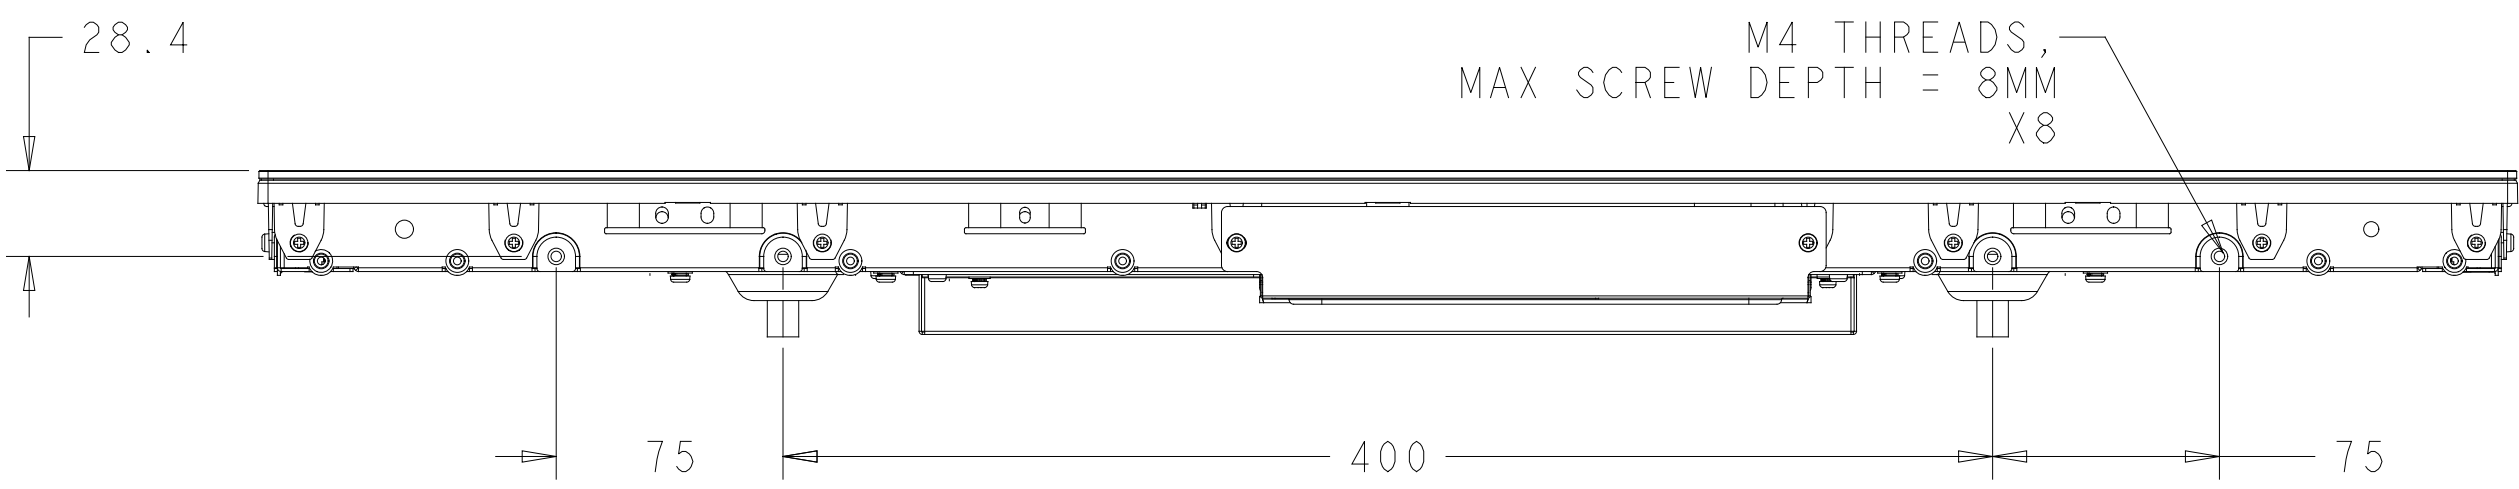

SIDE MOUNT HORIZONTAL (TOP/BOTTOM)

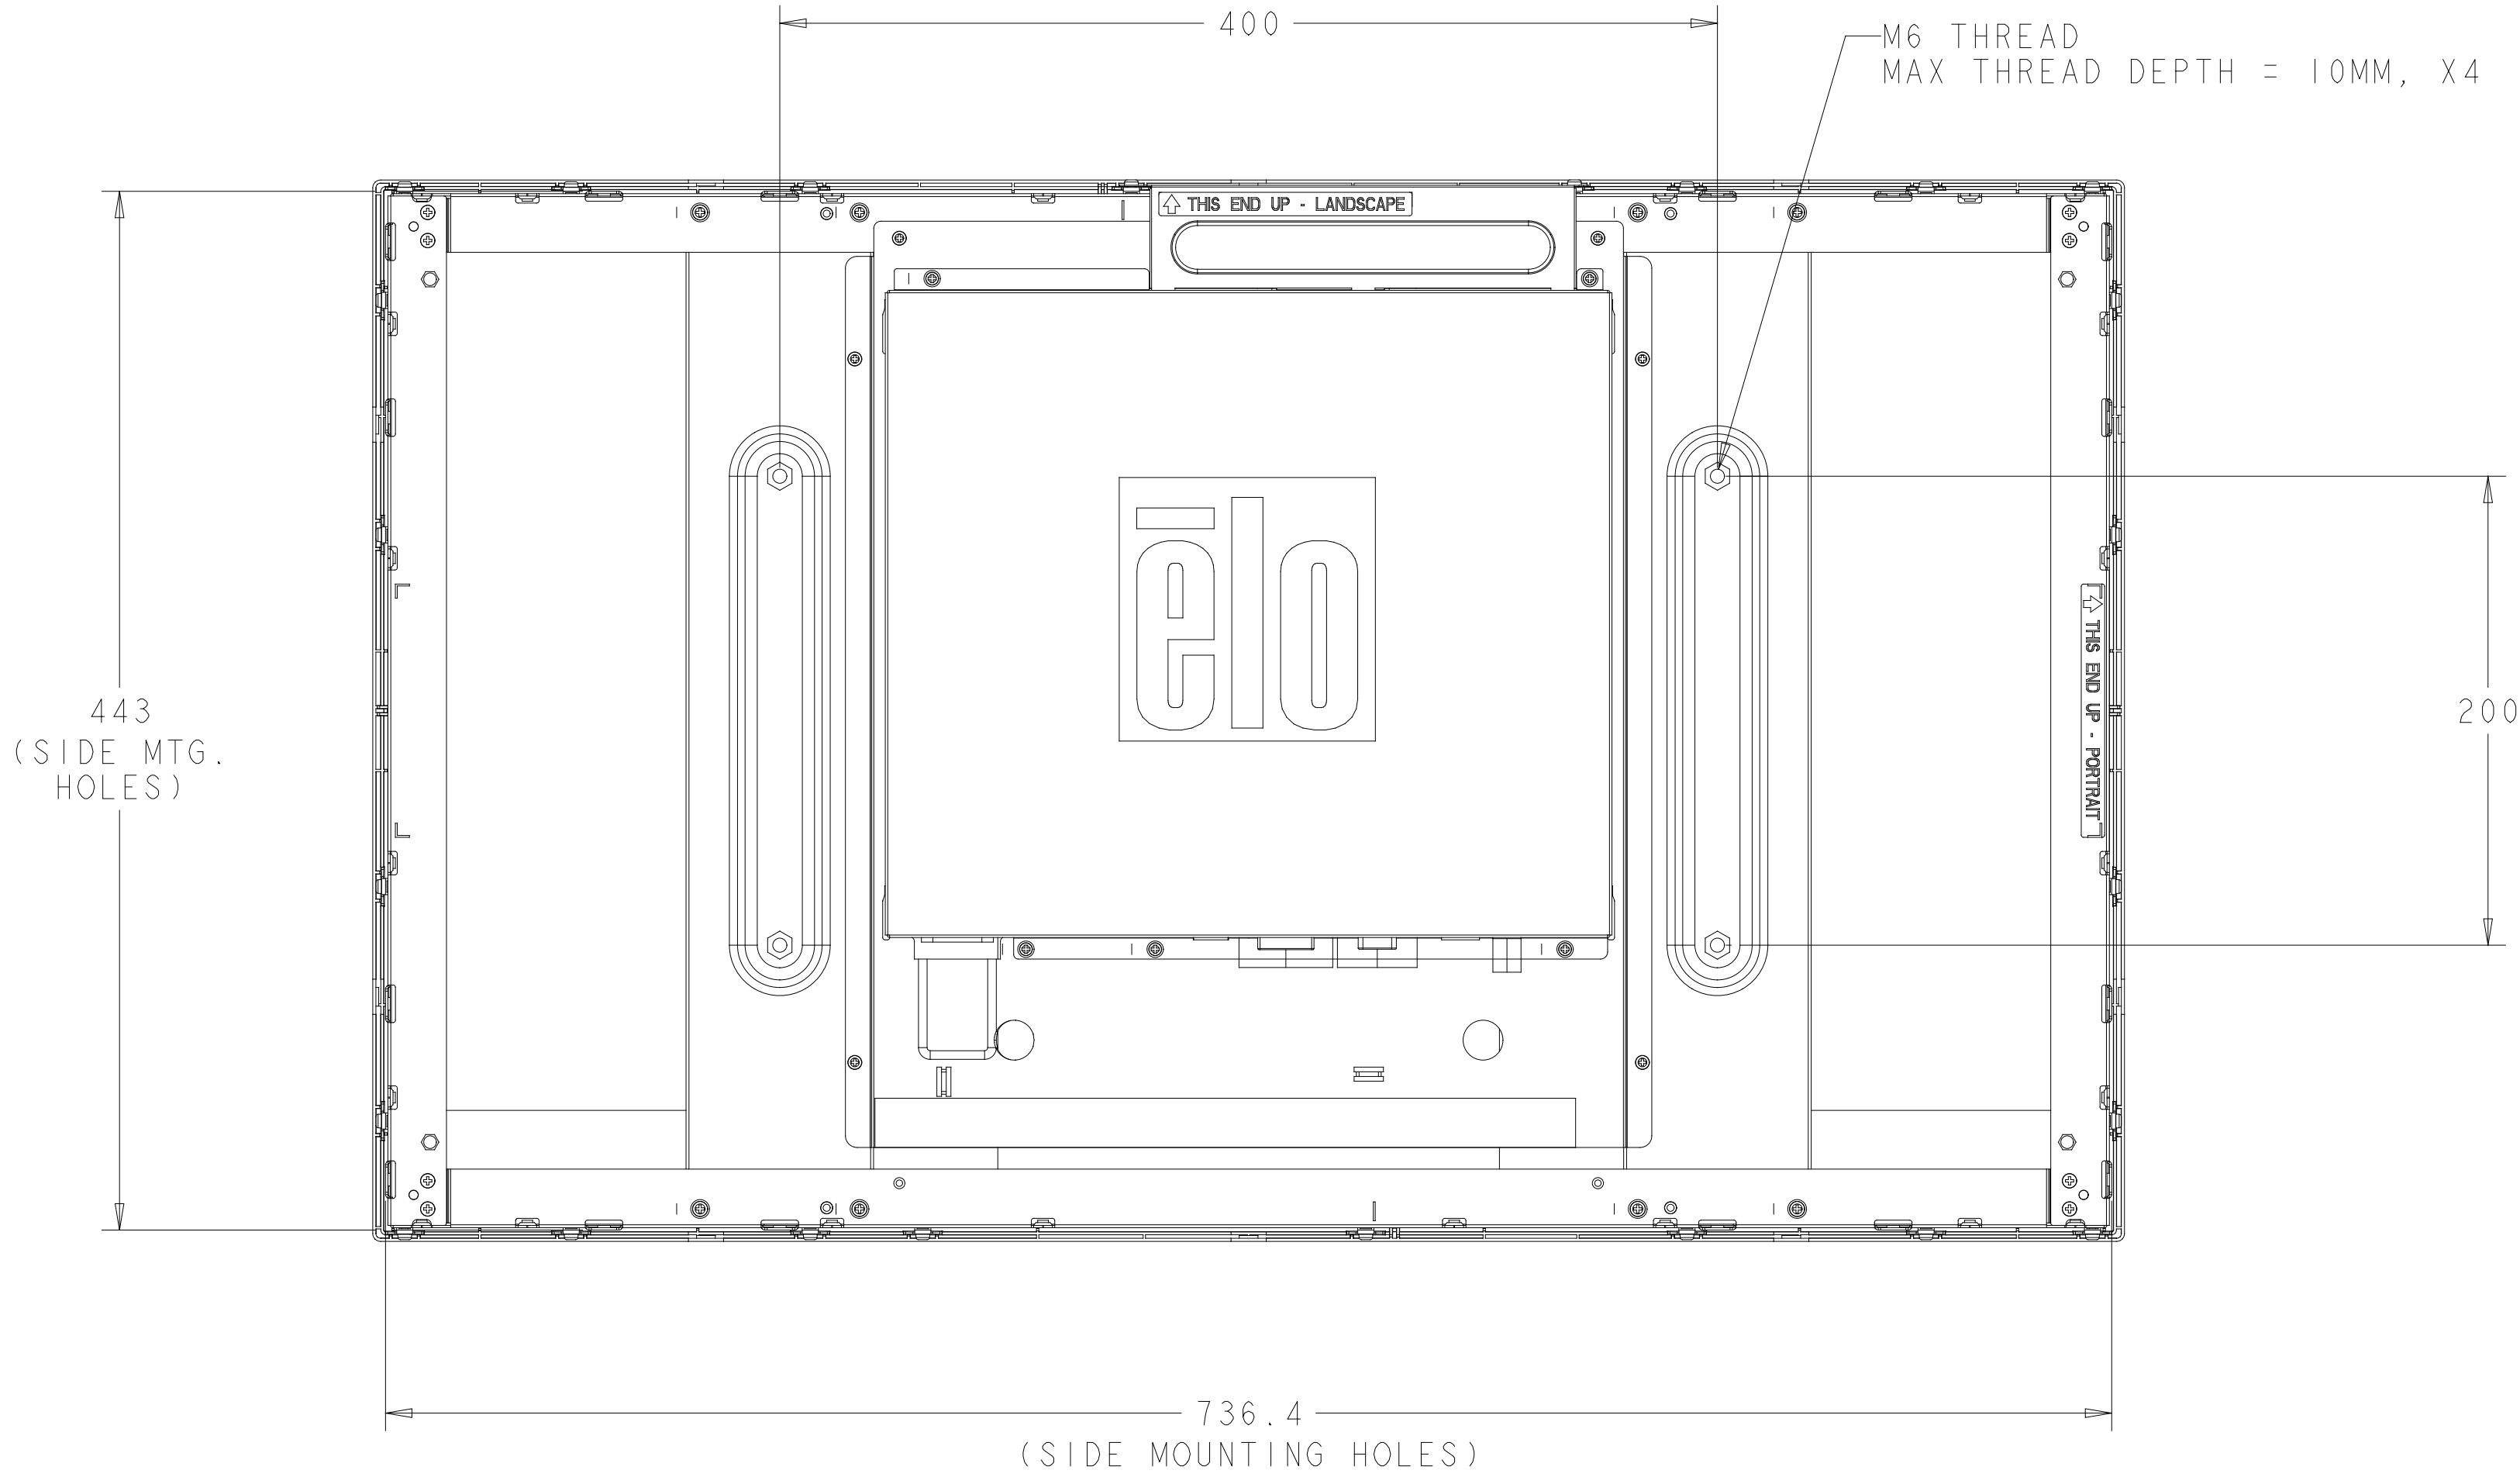


VESA MOUNT PER MIS-E, 400, 200, 6


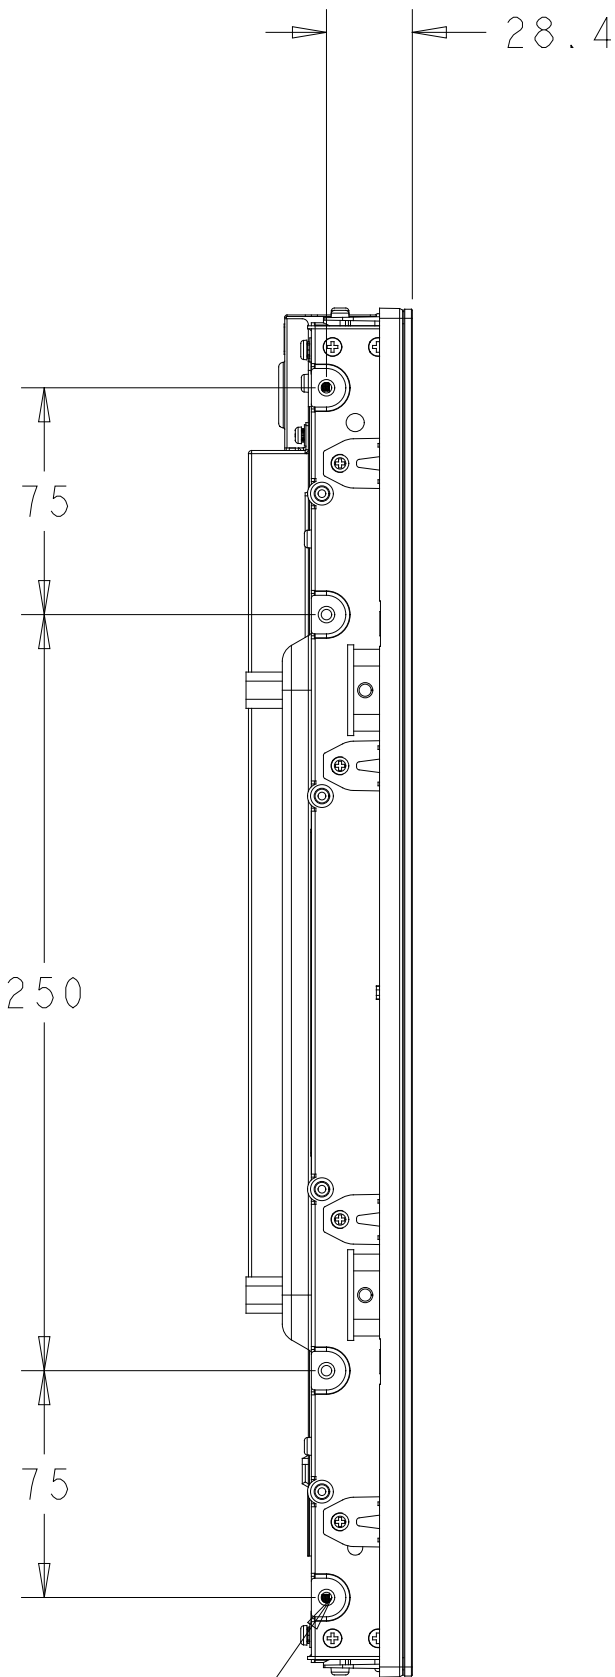


SIDE MOUNT VERTICAL (LEFT/RIGHT)

OPTIONAL PROJECTED CAPACITIVE FLUSHMOUNT KIT, P/N E3I2503
ORDER SEPARATELY, CUSTOMER ASSEMBLED

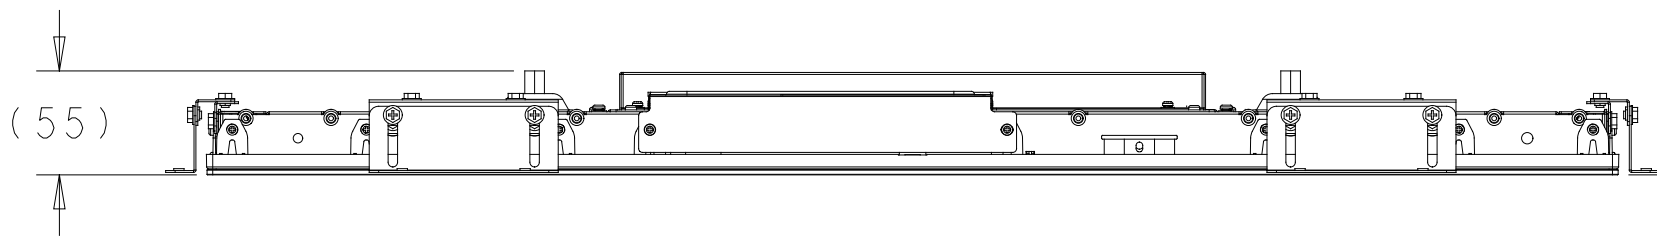

CUSTOMER PANEL THICKNESS:
1.3MM TO
26.3MM

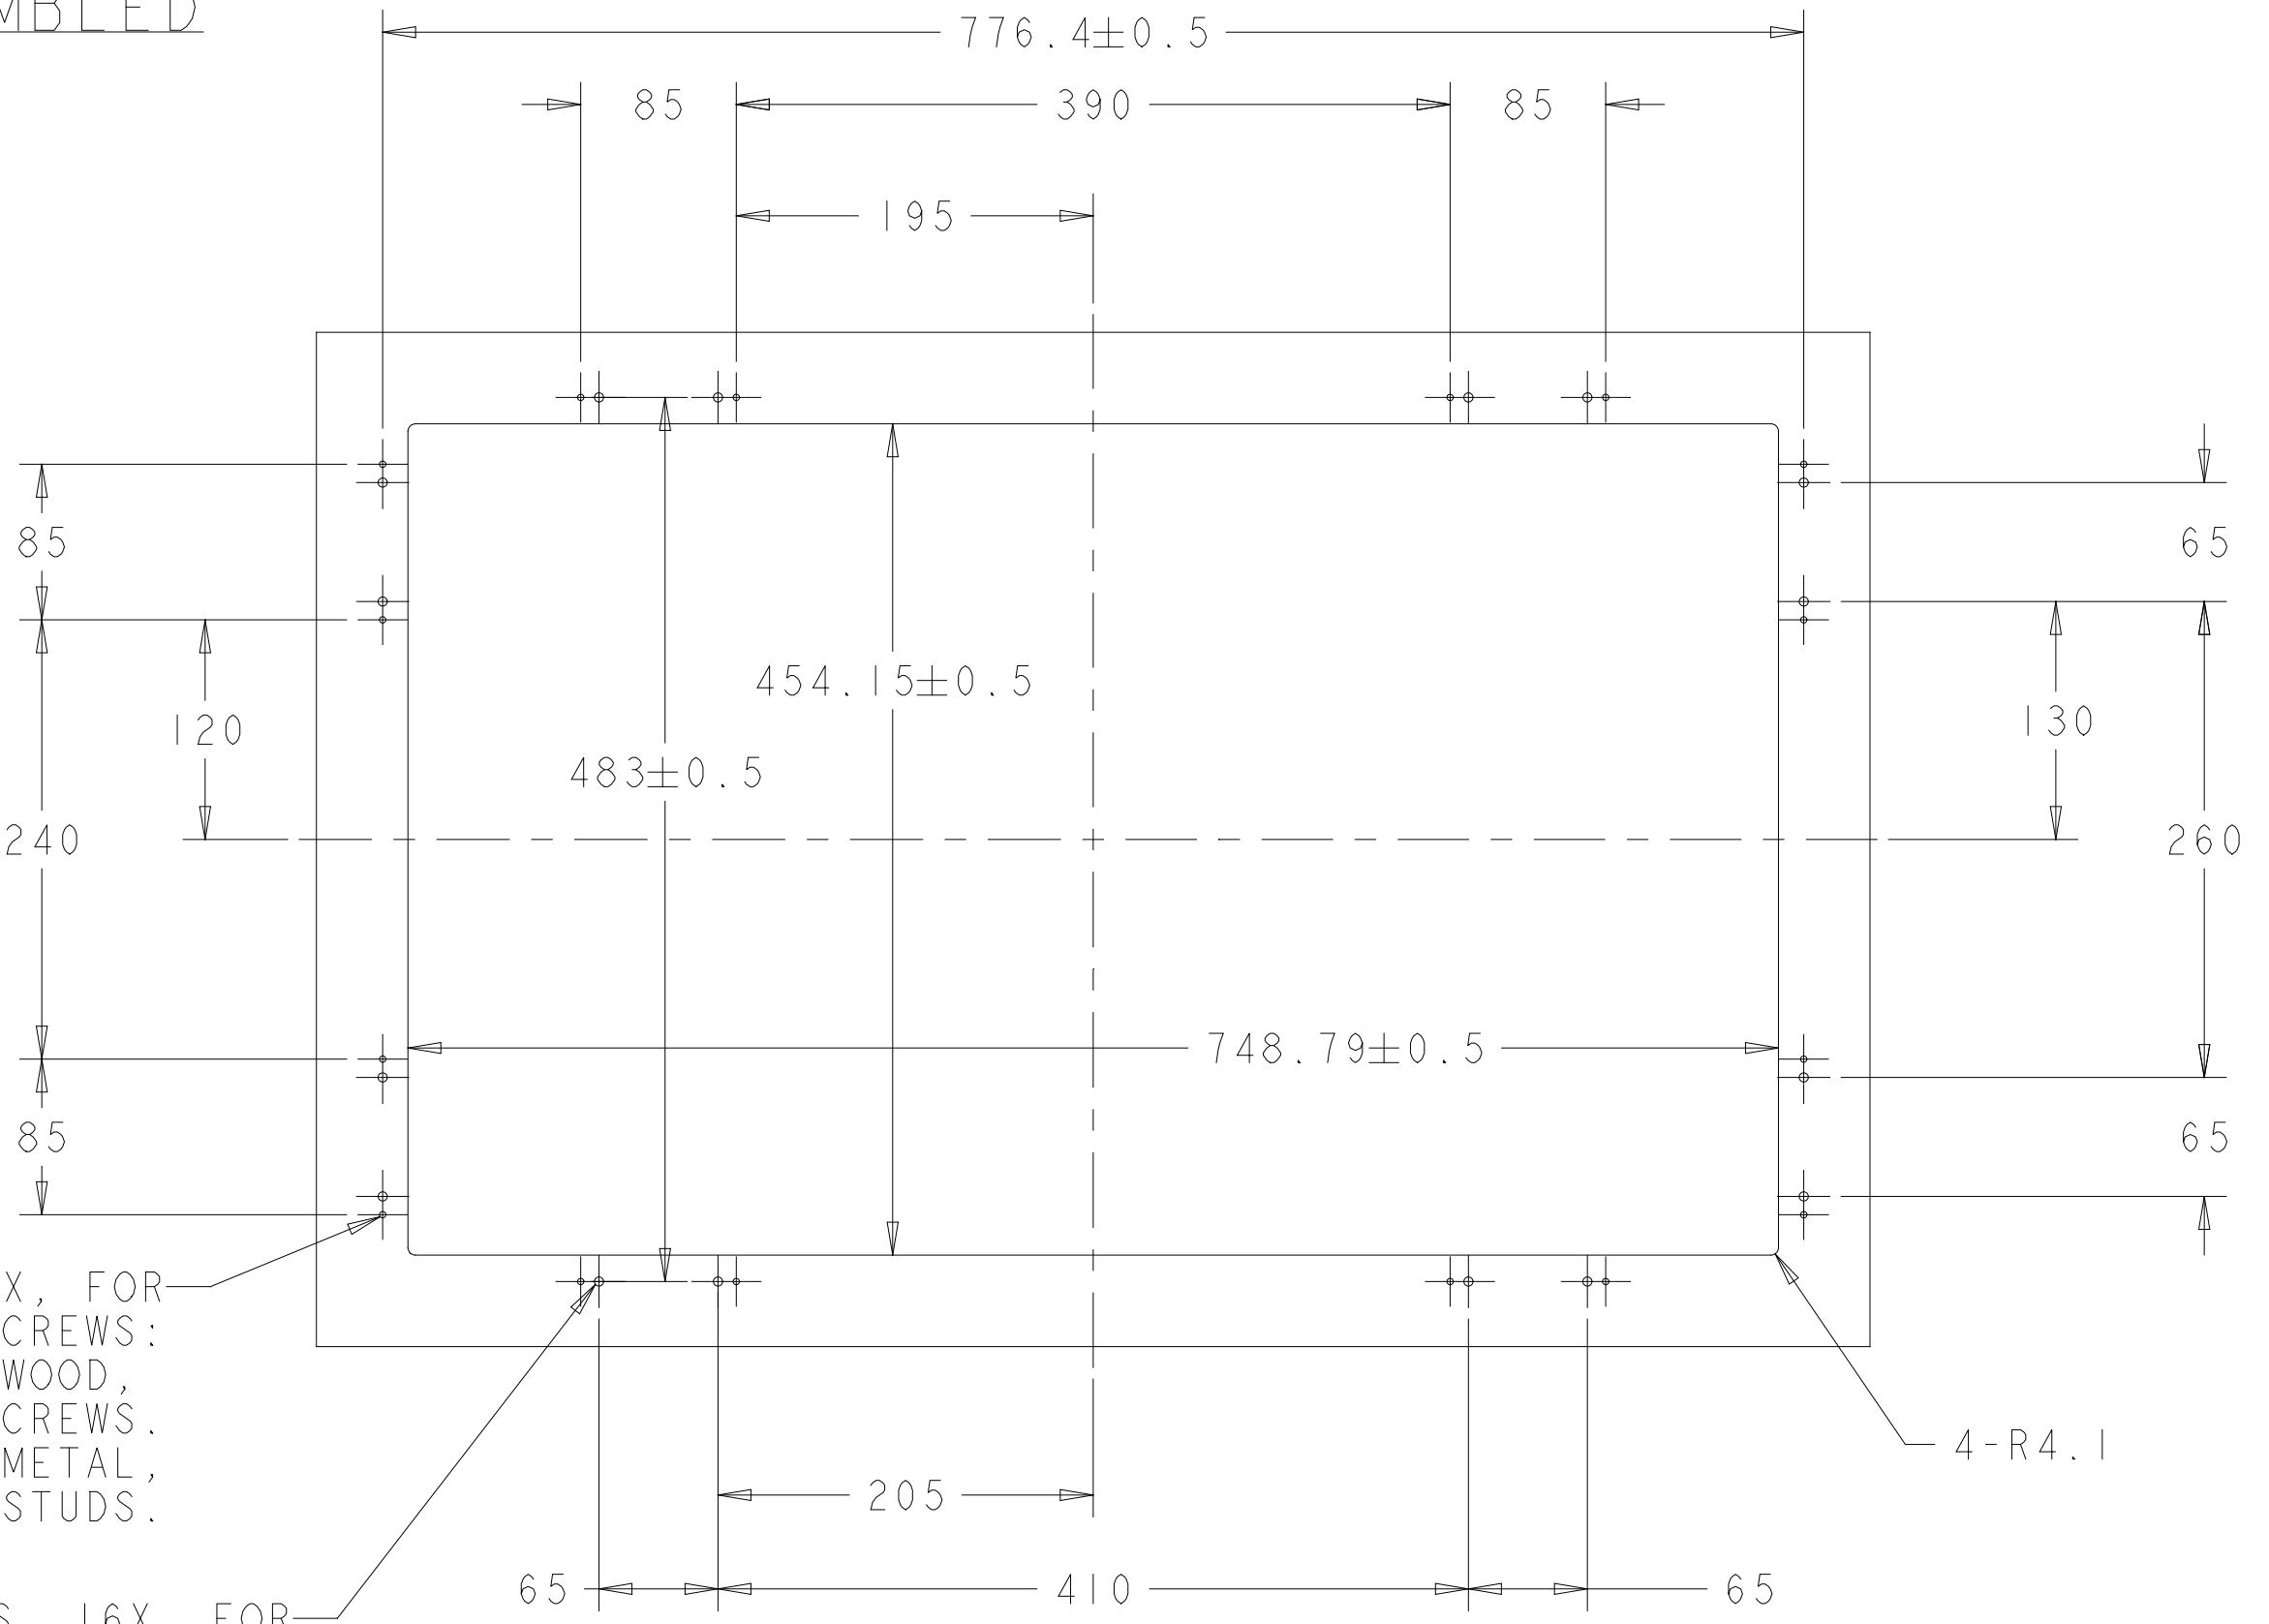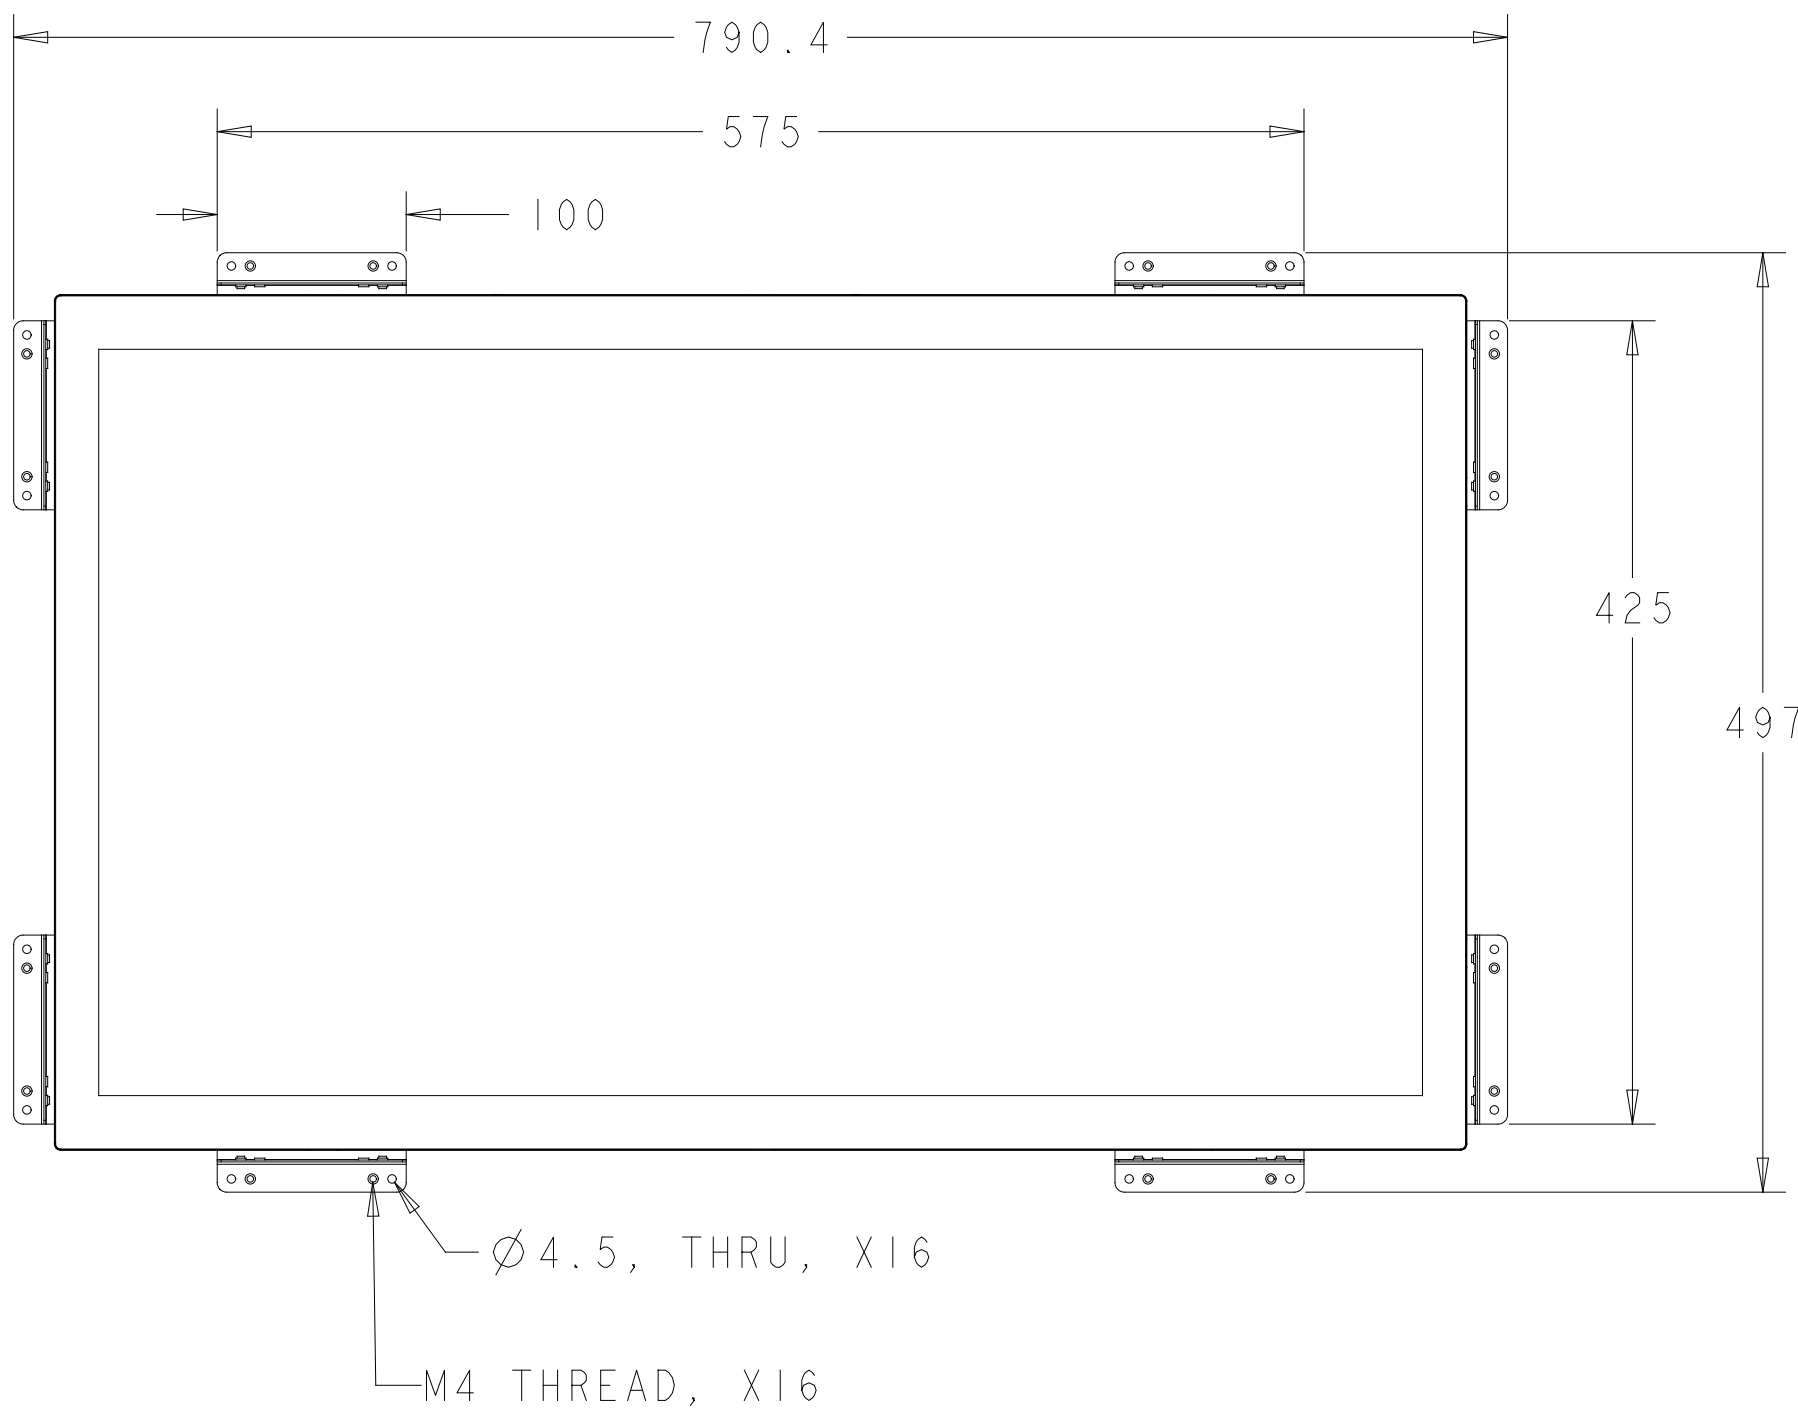



MOUNTING HOLES, 16X, FOR
REAR-ENTRY SCREWS:
1. IF CUSTOMER PANEL IS WOOD,
PILOT HOLES FOR 4MM WOOD SCREWS.
2. IF CUSTOMER PANEL IS METAL,
BLIND TAPPED M4 THREADED HOLES OR M4 STUDS.

MOUNTING HOLES, 16X, FOR
FRONT-ENTRY SCREWS:
CLEARANCE HOLES FOR M4
MACHINE SCREWS

RECOMMENDED CUSTOMER PANEL CUTOUT

INSTALLATION INSTRUCTIONS:

1. ATTACH BRACKETS "A" TO TOUCHMONITOR WITH QTY 2 M4 HEX HEAD SCREWS (INCLUDED), 8X
2. ATTACH BRACKETS "B" TO TOUCHMONITOR WITH QTY 2 M4 HEX HEAD SCREWS (INCLUDED), 8X
3. ATTACH BRACKETS "C" LOOSELY TO TOUCHMONITOR WITH QTY 2 M4 HEAD HEAD SCREWS (INCLUDED), 8X
4. ADJUST DEPTH OF BRACKET "C" SUCH THAT FACE OF BRACKET SITS BELOW TOUCHSCREEN SURFACE APPROXIMATELY THE SAME DISTANCE AS THE CUSTOMER PANEL THICKNESS. TIGHTEN SCREWS HOLDING BRACKET "C".
5. INSTALL TOUCHMONITOR INTO CUSTOMER PANEL OPENING FROM BACK SIDE, TAKING CARE NOT TO DAMAGE TOUCHSCREEN GLASS EDGE. CENTER TOUCHMONITOR IN OPENING USING SHIMS.
6. SECURE TOUCHMONITOR TO CUSTOMER PANEL USING CUSTOMER-SUPPLIED HARDWARE. ADJUST BRACKETS "C" IF GLASS IS NOT FLUSH TO CUSTOMER PANEL.
7. SEAL GAP BETWEEN TOUCHSCREEN GLASS AND CUSTOMER PANEL USING SILICONE. MASK OFF TOUCHSCREEN SURFACE TO ENSURE NO SEALANT LEAKS ONTO FRONT OF GLASS.

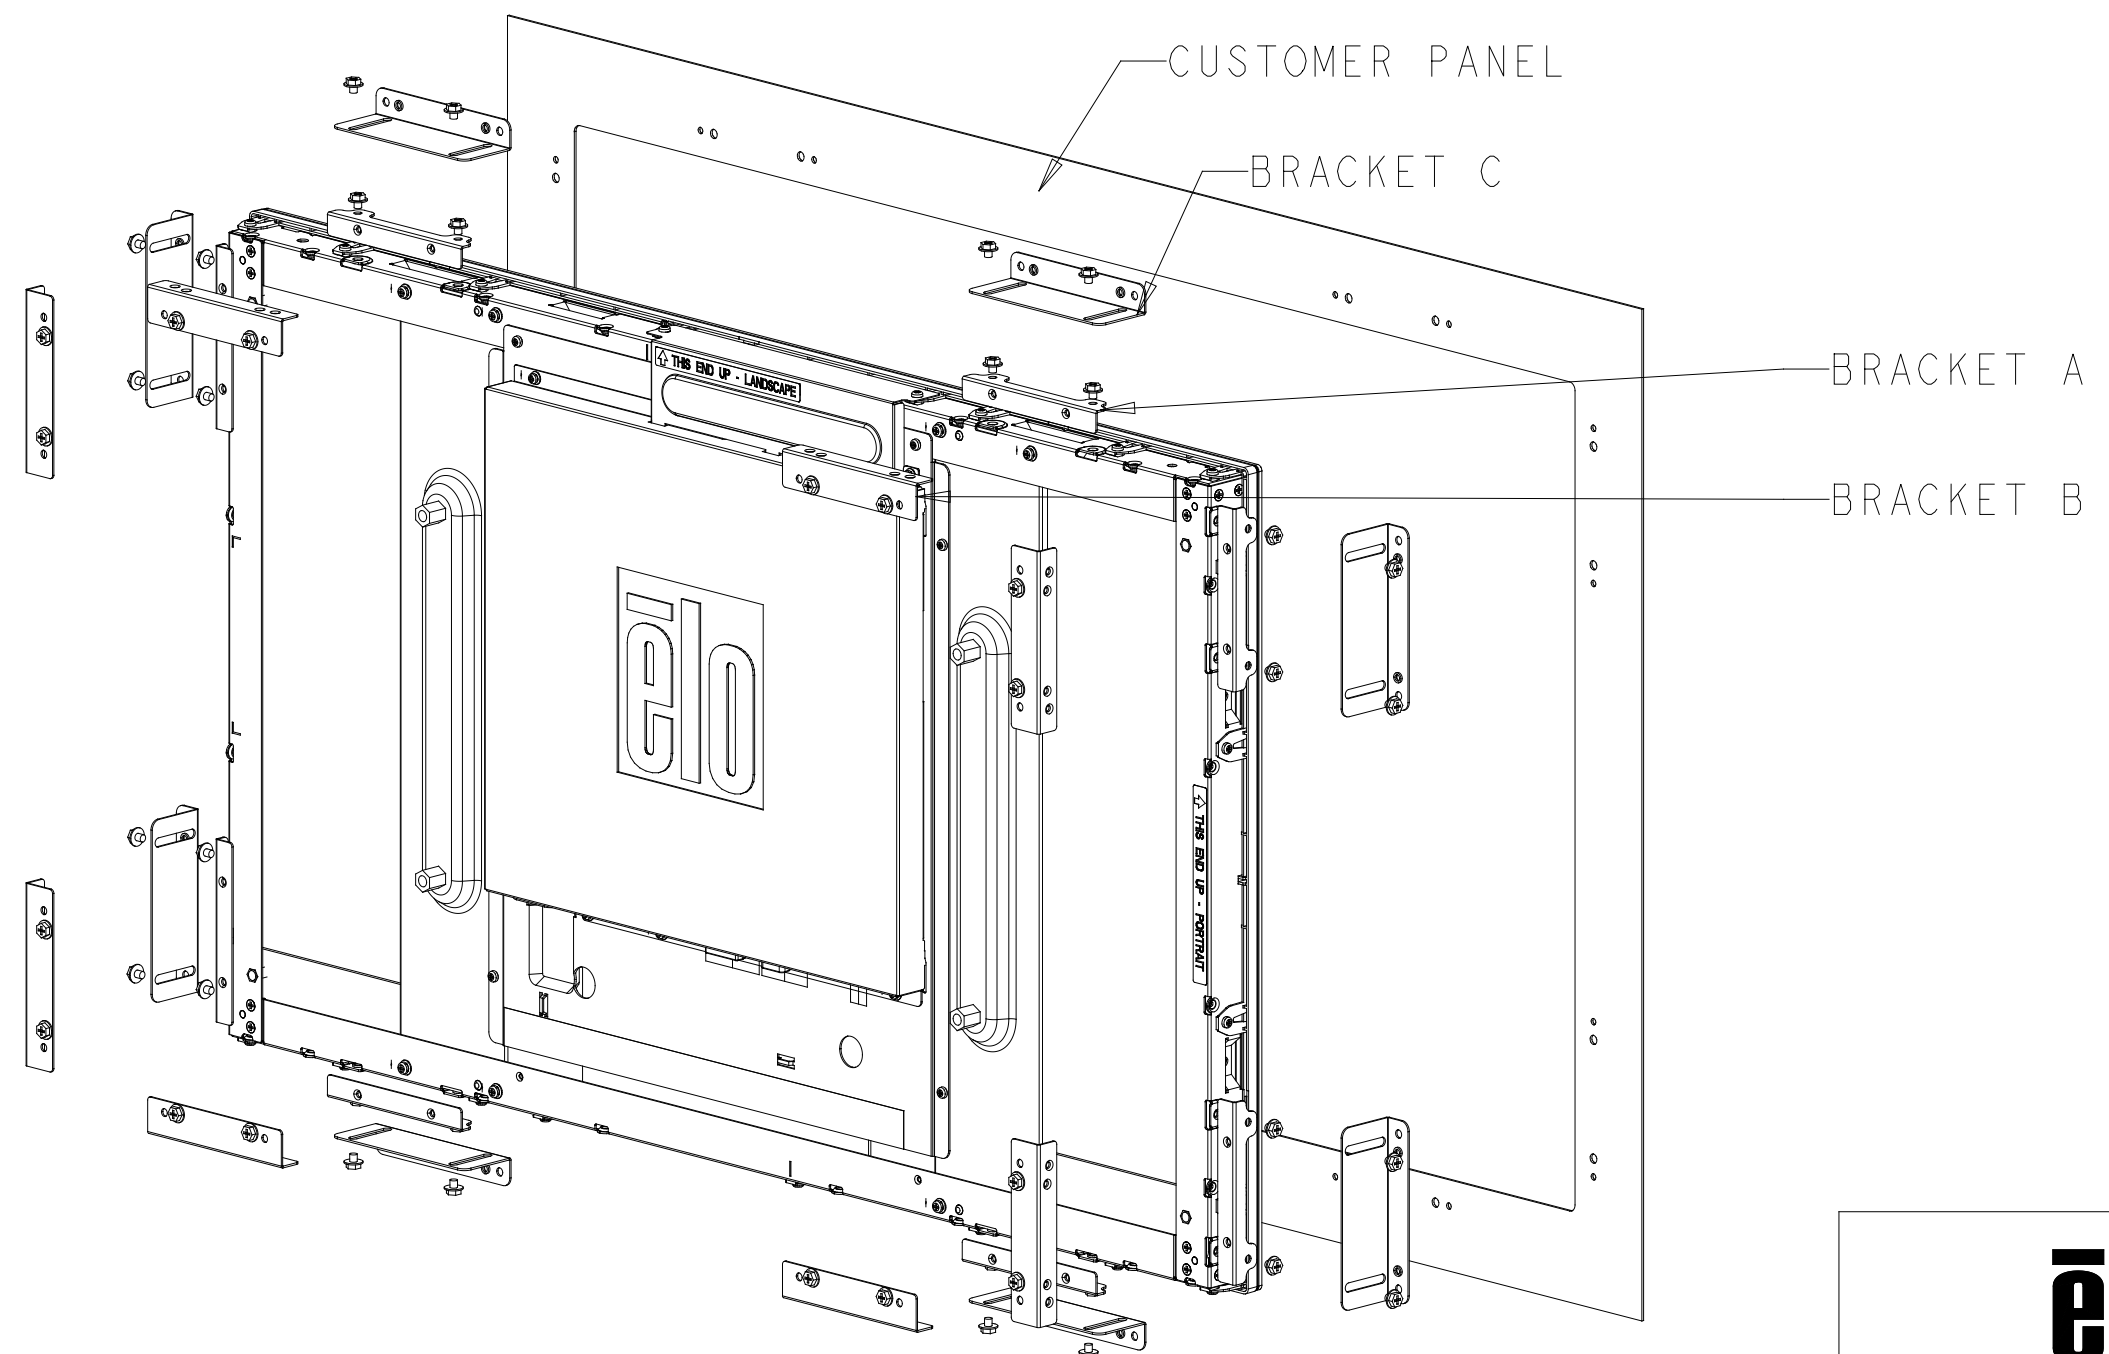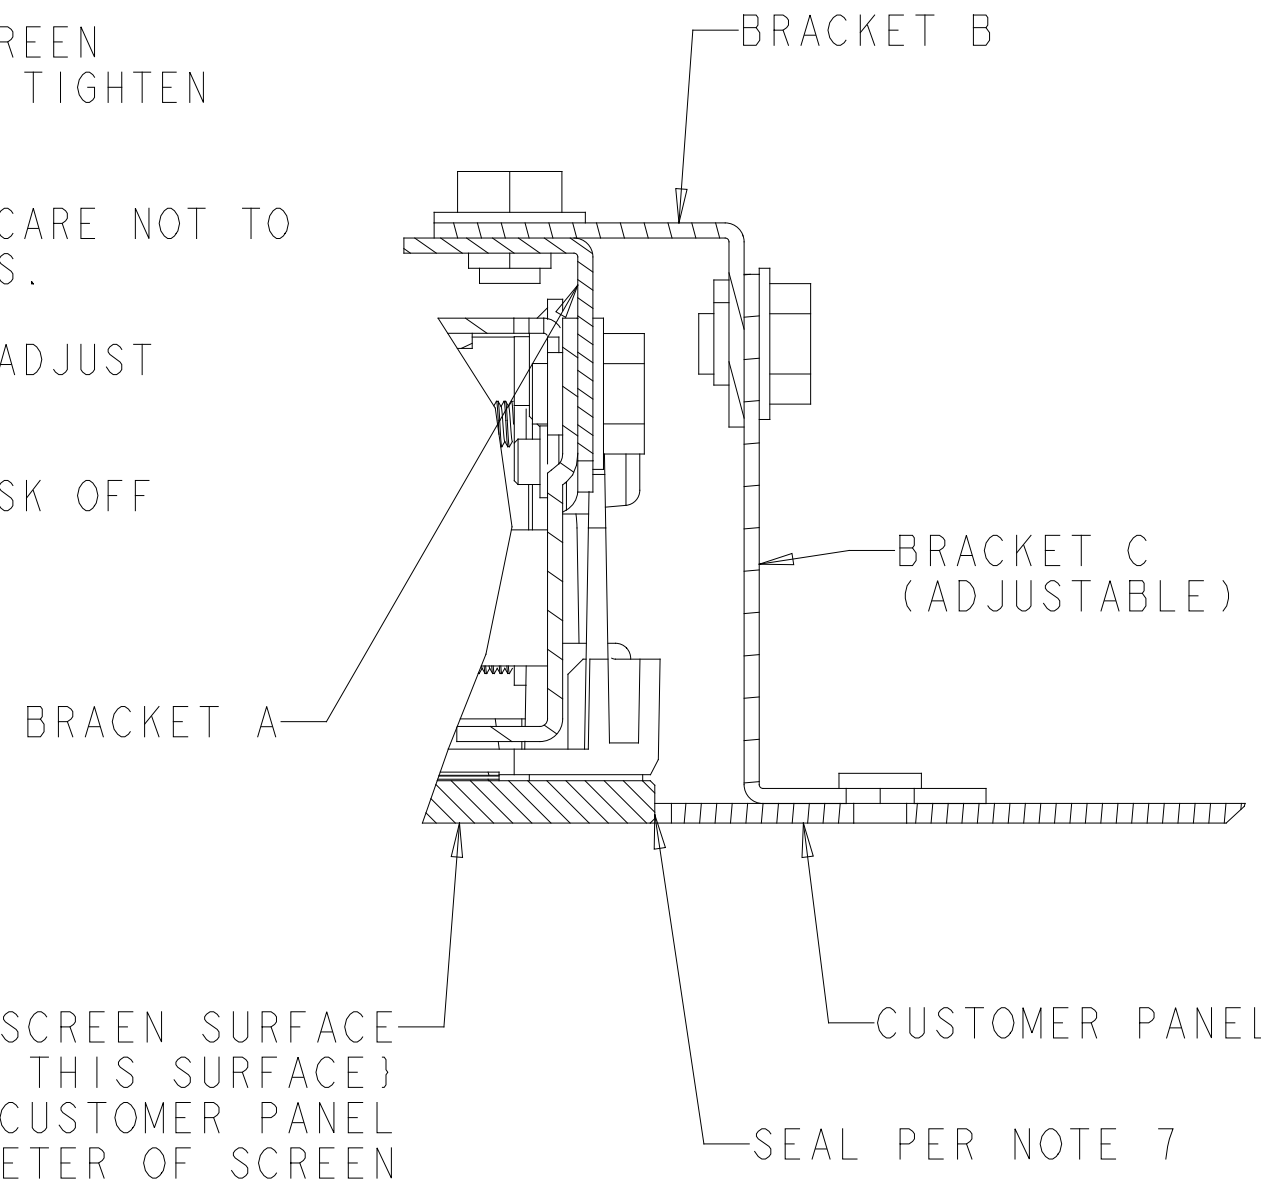

CAUTION: WHEN ASSEMBLED, THIS SURFACE
SHOULD NOT PROTRUDE BEYOND CUSTOMER PANEL
SURFACE ANYWHERE AROUND PERIMETER OF SCREEN

DIMENSIONS ARE IN MILLIMETERS