

Log Set Assembly: LOGS-ESCAPE36

LOG PLACEMENT INSTRUCTIONS

Models: Escape-36DV

CAUTION: Logs are fragile! Carefully remove the logs from the packaging.

NOTE: If logs rub against one another during positioning, the white inner material may become visible. Touch-up paint may be applied to the white areas using a small brush or swab. **DO NOT** spray paint directly on surface of the logs. Reference service parts list for log touch-up paint.



Step 1.

Place the grate onto the burner. The back of the right tine drops into the hole on the right rear of the burner. The shorter left tine is pushed back into the half-hole on the left side of the burner. Be sure to push the grate all the way down to the floor and firmly back into its holder.



LOG #1

(SRV2012-081) (TWO):

There are quantity two (2) of log #1. Place one of the logs on the floor of the fireplace on the left side of the burner between the burner and the left tine of the grate. Place the second log on the right side of the burner between the burner and the right tine of the grate. The second log can be slightly resting on the edge of the burner.



LOG #2

(SRV2012-082):


Place log #2 on the left side of the burner with the black end of the log on top of the pilot bracket. The log will rest touching the side of the fire-box. The purpose of this log is to help disguise the pilot. Do NOT have the log touching the pilot or pilot operation may be affected.



LOG #3

(SRV2012-083):

Place Log #3 onto the back of the burner. The left end of the log sits on the bent up tab and top of the burner surface. The back of the log is pushed up against the back metal wall of the burner on the left side and the bent up tab on the right side. The left end of the log is flush with the left edge of the metal wall.

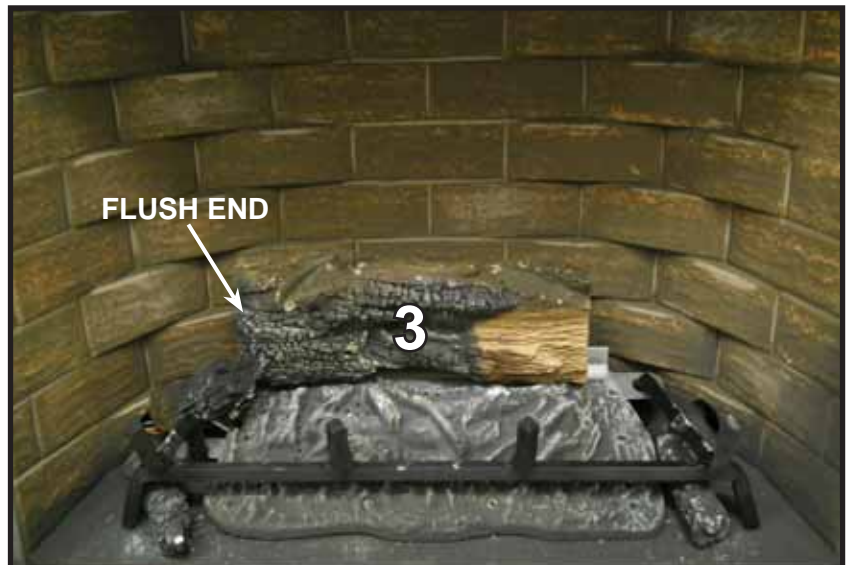

LOG #4

(SRV2012-084):

Place log #4 on top of the burner in front of log 3. The triangle shaped groove in the bottom fits onto the right tine of the grate. The left end of the log will fit the contour of the burner between the ports. Do NOT cover the burner ports.



LOG #5

(SRV2012-085):

Place log #5 in front of log #4. The groove in the bottom end of the log fits into the right vertical tine of the grate. The back of the log rests in the groove on top of log #3.



LOG #6

(SRV2012-086):

Place log #6 on the left side of the grate with the groove on the end of the log fitting into the vertical left tine of the grate. The burned end of the log rests in the groove on the left side of log #3.



LOG #7

(SRV2012-087):

Place log #7 on top of log #6. The groove in the front side of the log fits into the second vertical tine from the left of the grate. The center of the log rests in the flat spot on log #6.



LOG #8

(SRV2012-088):

Place Log #8 on top of Log #5. The flat bottom of Log #8 sits on the large flat area of Log #5. The burned end of Log #8 rests on the second vertical tine from the right of the grate. The tine fits on the burned out groove on the left end of the log.

Final Step:

Place MYSTIC EMBERS generously around on the floor of the fireplace. Some can be spread out on the burner surface to blend the transition. Place embers around the pilot wires to disguise the wires from view.

Save the log instructions for future use.

