


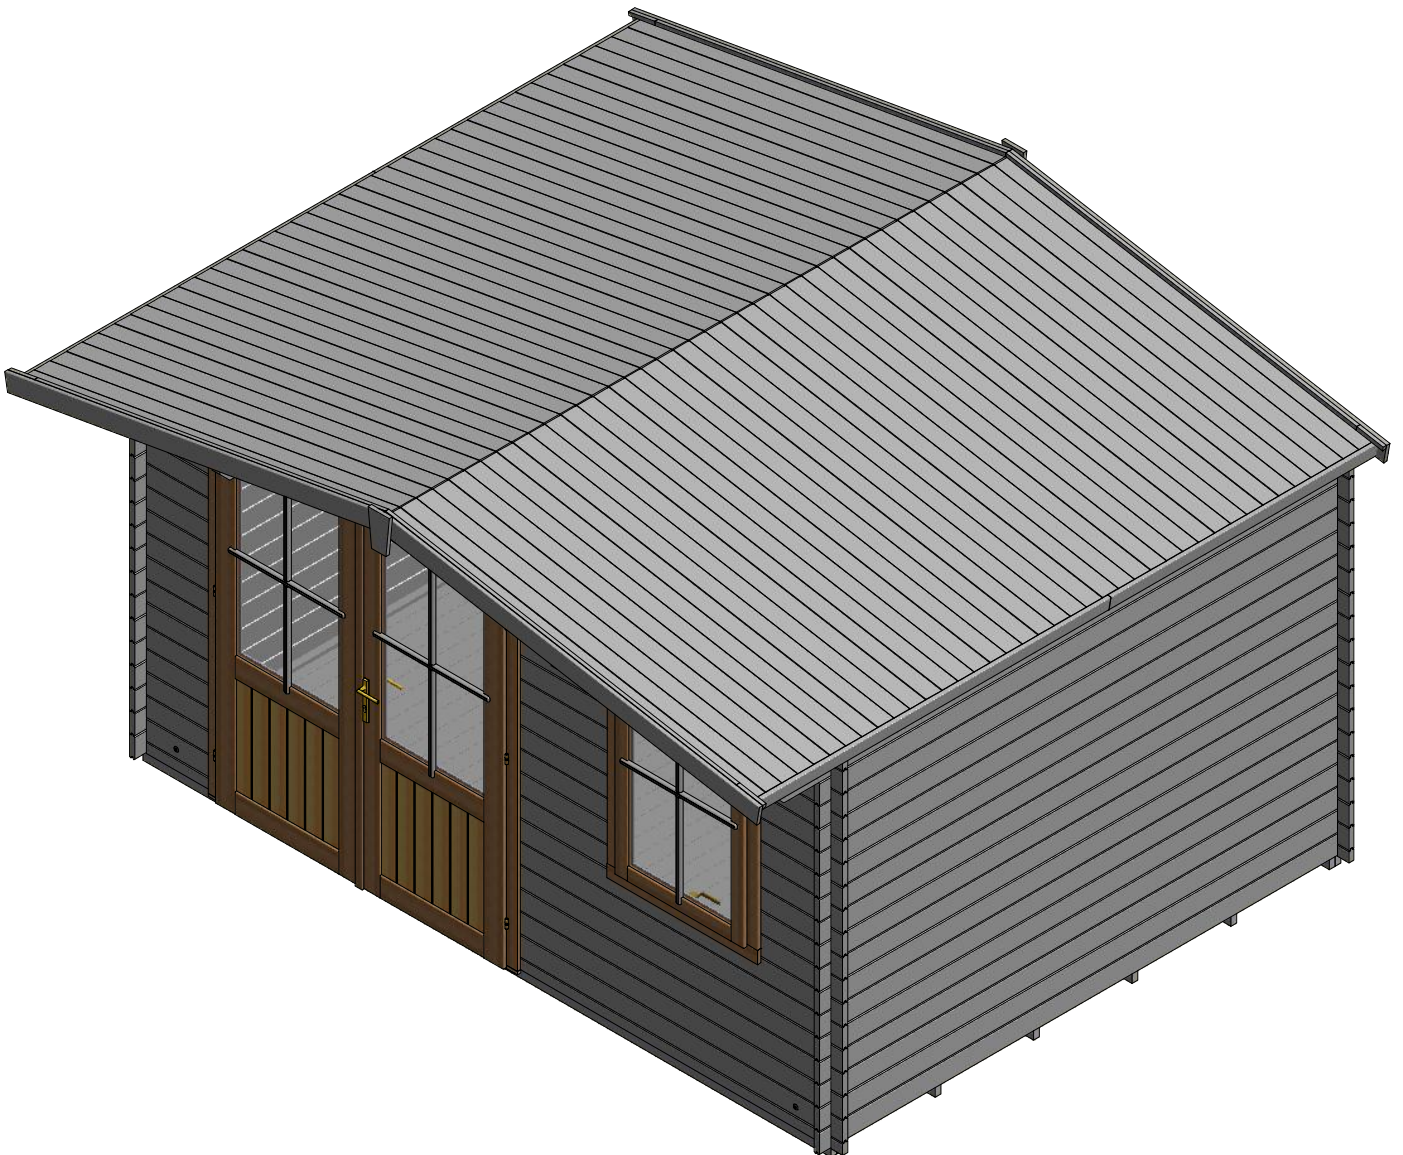

INSTALLATION MANUAL

Rhine 40/30 (28mm)

Log cabin



Important!



If you have bought shingles, please use our provided shingle installation instructions.

Unique Cabin Reference Number.

Component details for Rhine 40/30 (28mm)



EN.3860

8 of required
Bearers
Pressure treated

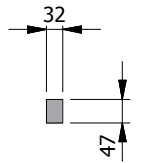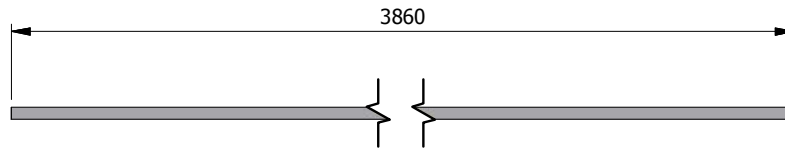



A28.510.70.0.0

28 of required
Wall log

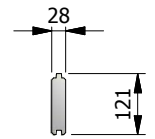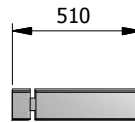



A28.510.0.0.0

11 of required
Wall log

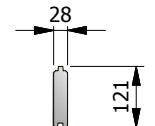



A28.1810.70.0.0

6 of required
Wall log

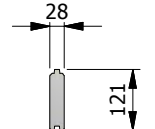



A28.3000.70.70.0

32 of required
Wall log

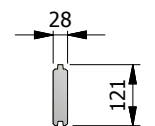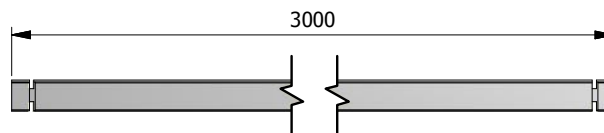



A28.3250.70.320.0

2 of required
Wall log

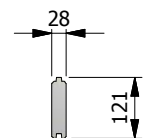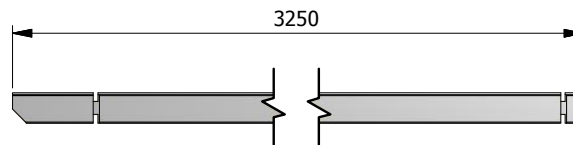



A28.4000.70.70.0

18 of required
Wall log
(Inc. one spare)

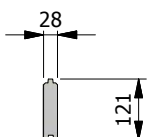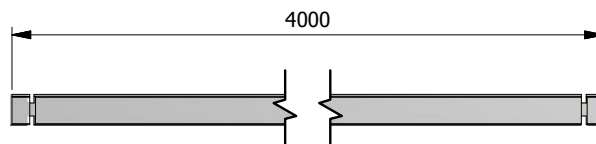



B28.510.70.0.0

1 of required
Bottom wall log

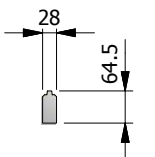



B28.1810.70.0.0

1 of required
Bottom wall log

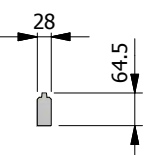

B28.4000.70.70.0



1 of required
Wall log

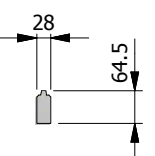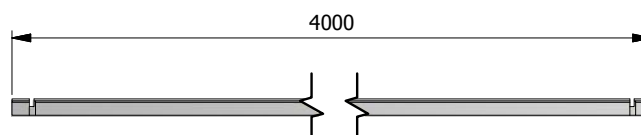

Component details for Rhine 40/30 (28mm)



XN28.8L.3500.70.570.0

1 of required
Top wall log

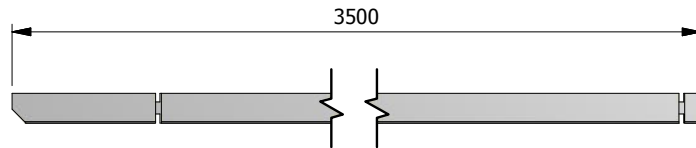



XN28.8R.3500.70.570.0

1 of required
Wall log

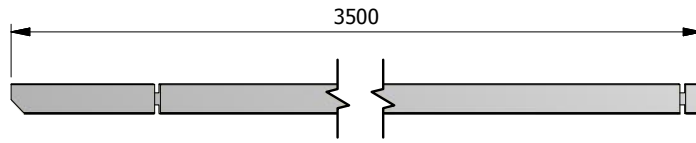



P45.3500.65.565.0

1 of required
Purlin

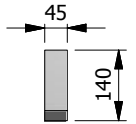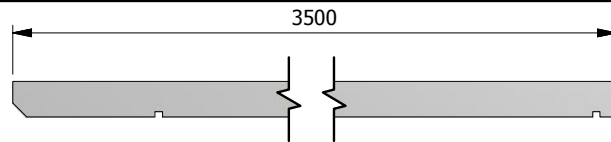



P45.8L.3500.65.565.0

1 of required
Purlin

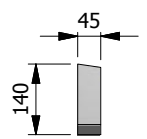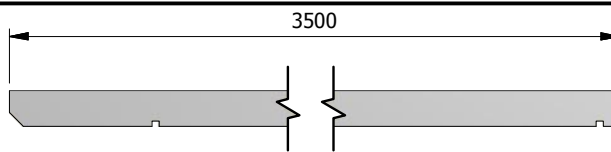



P45.8R.3500.65.565.0

1 of required
Wall log

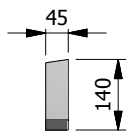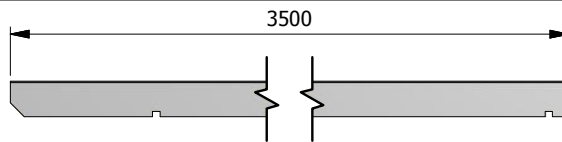



HN.2000

4 of required
Eaves edging
(required to be cut to size on site)





J.1960.B

4 of required
Storm brace





J.3000

7 of required
Floor trims and
roof edge reinforcement
(required to be cut to size on site)





N.1960

10 of required
Apex trims and wind brace
(required to be cut to size on site)



Z.195.A



2 of required
Trapezoid

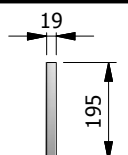

Component details for Rhine 40/30 (28mm)



ZN.2150.C10

4 of required
Fascia boards



AP.28.4000.RHINE.DW.



2 of required
Apex

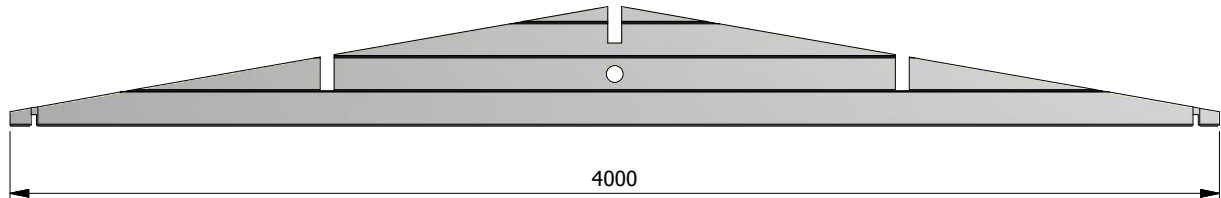

Component details for Rhine 40/30 (28mm)



F.2080

80 of required
Roof Board



F.2770

44 of required
Floor Board
(Inc. one spare)




Double door - 28mm

1 of required



E9 Window 28mm


1 of required

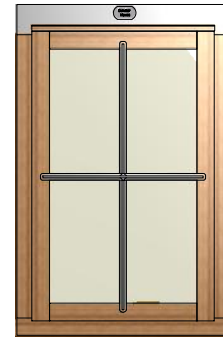

FIXINGS & ACCESSORIES	
ITEM	QTY
20 mm screws to vents	9
35 mm screws trapezoids, Eaves edging, roof (J) trim, fascia board to wind brace, SMB brackets	120
50 mm screws for fascia boards to Purlins & bearers	28
55mm screws for floor trim (J)	28
70 mm screws for bottom logs & door frame & Purlins	44
60 mm M6 bolt	8
M6x25 mm Washers	16
M6 Nuts	8
40mm nails for floor and roof boards	700
SMB075 (28) Interlocking Window to Log Connecting bracket	8
SMB077 (28) Interlocking Door to Log Connecting bracket	16
Sets of vents	2
Door handles and accessories	1
Window handle set & accessories	1
Generic Assembly Instructions for Log Cabins	1


Log Cabin Bearer Layout Rhine 40/30

We suggest preparing minimum overall base dimension of 4060x3060mm

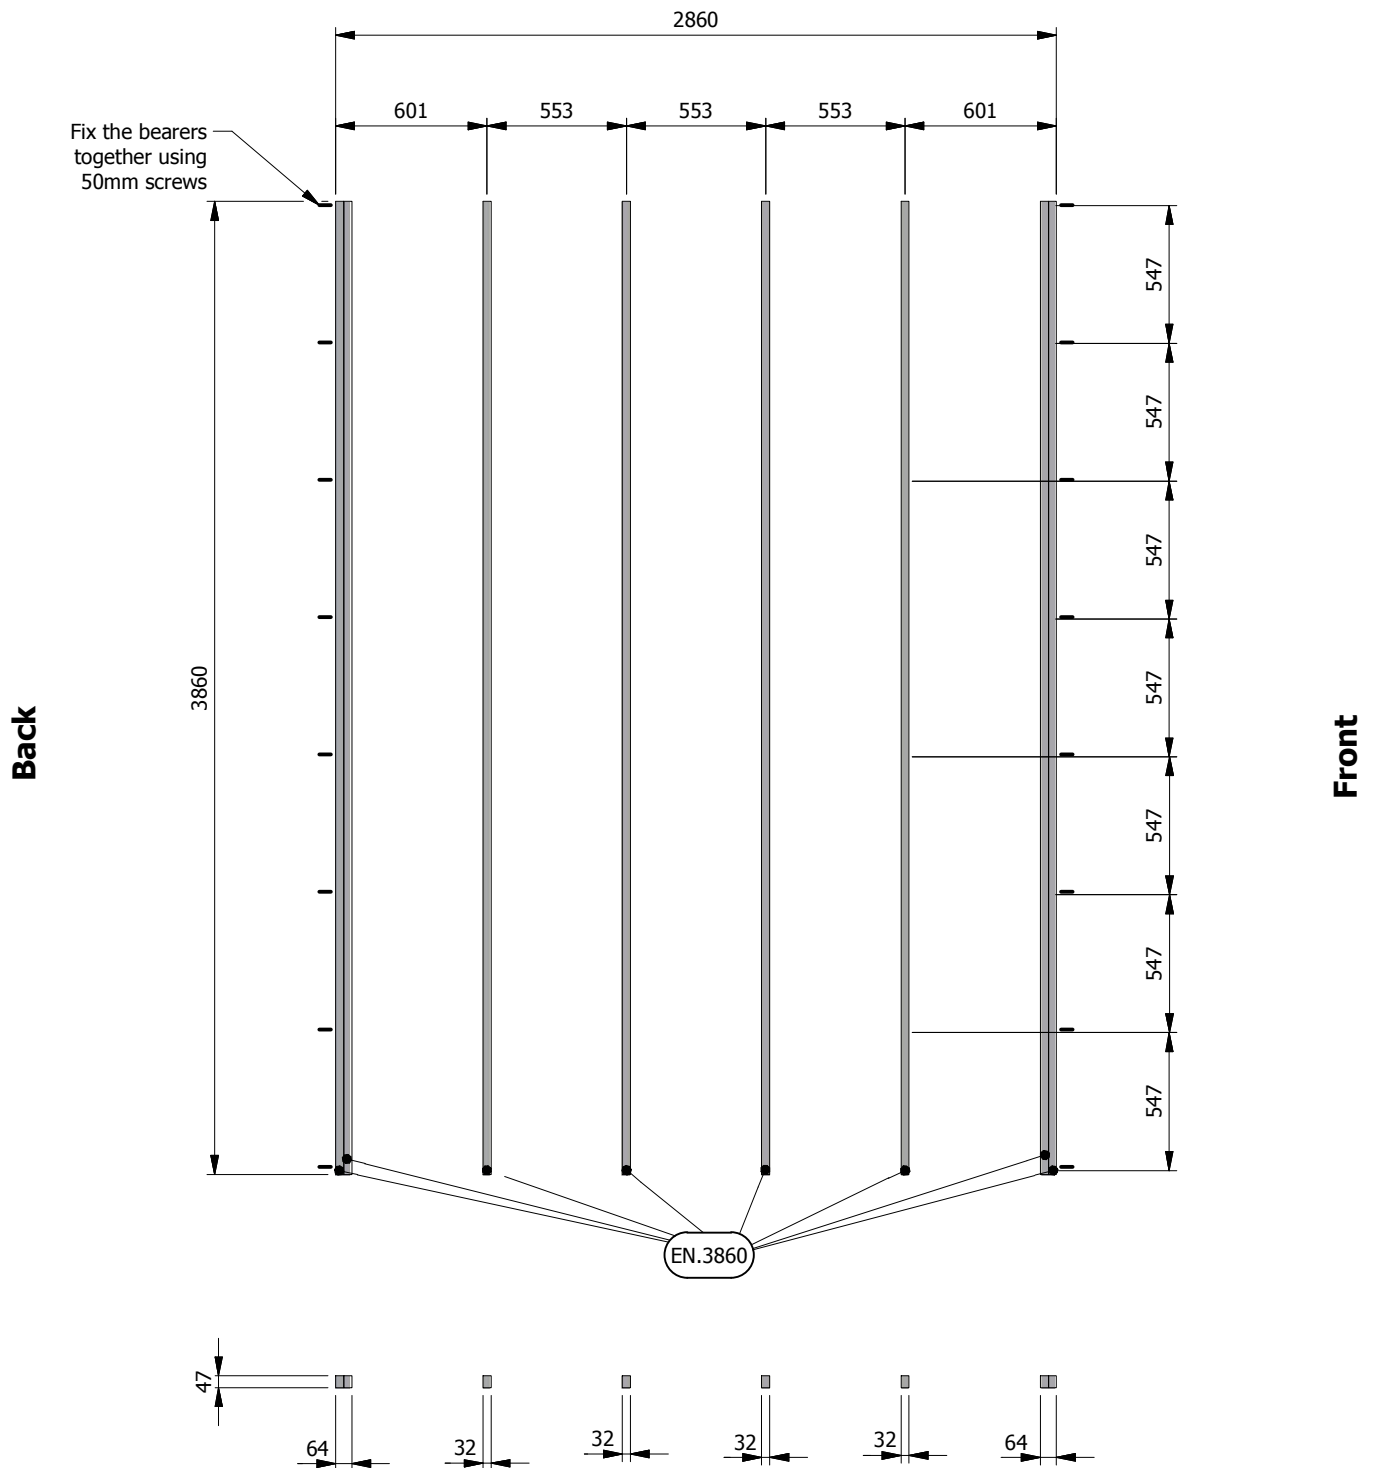


Wall Layout for Rhine 40/30 (28mm)

Front Wall

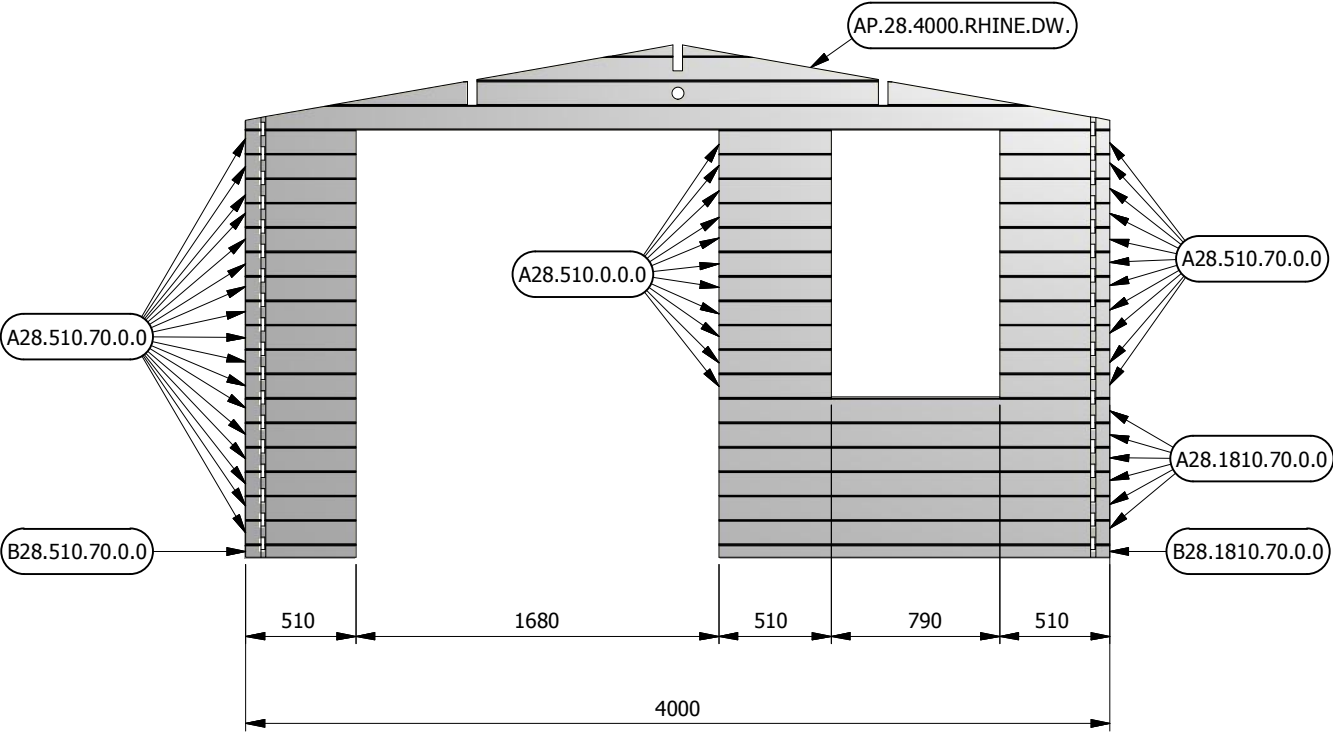


Rear Wall

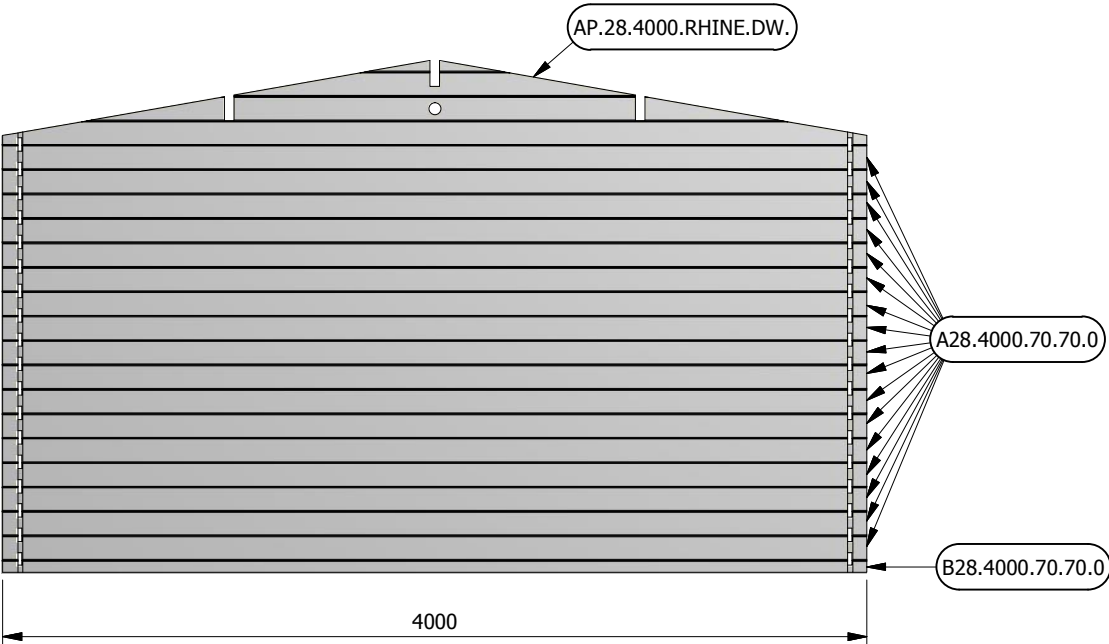


Wall Layout for Rhine 40/30 (28mm)


Side Wall

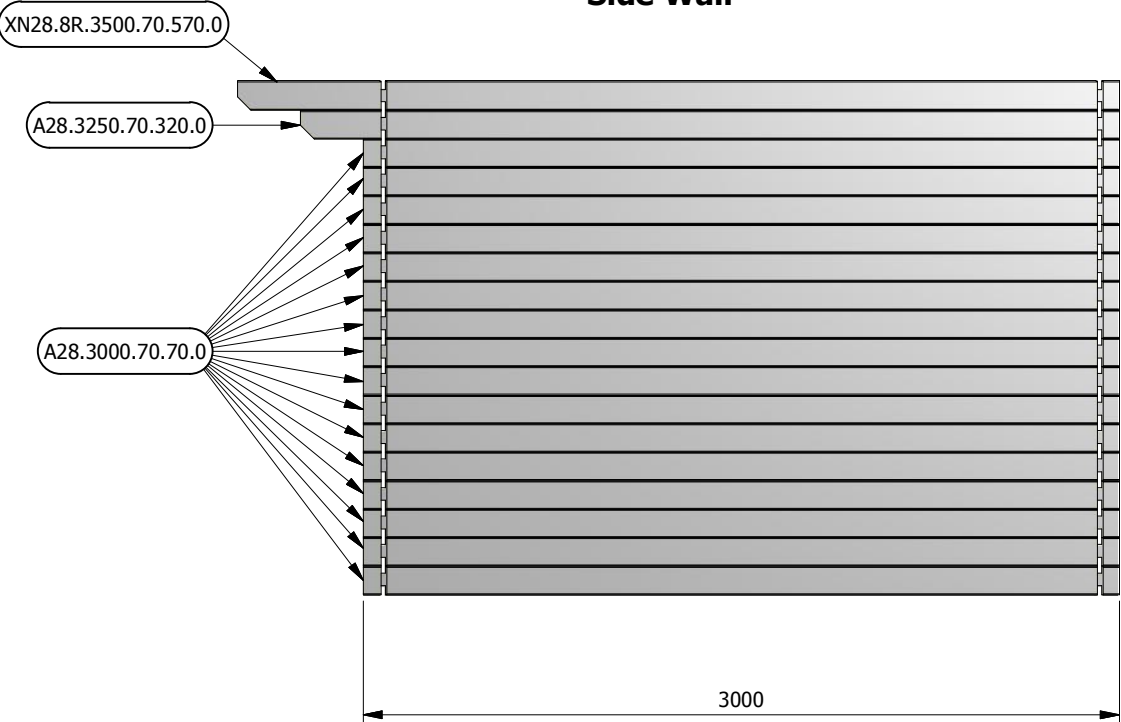


Side Wall

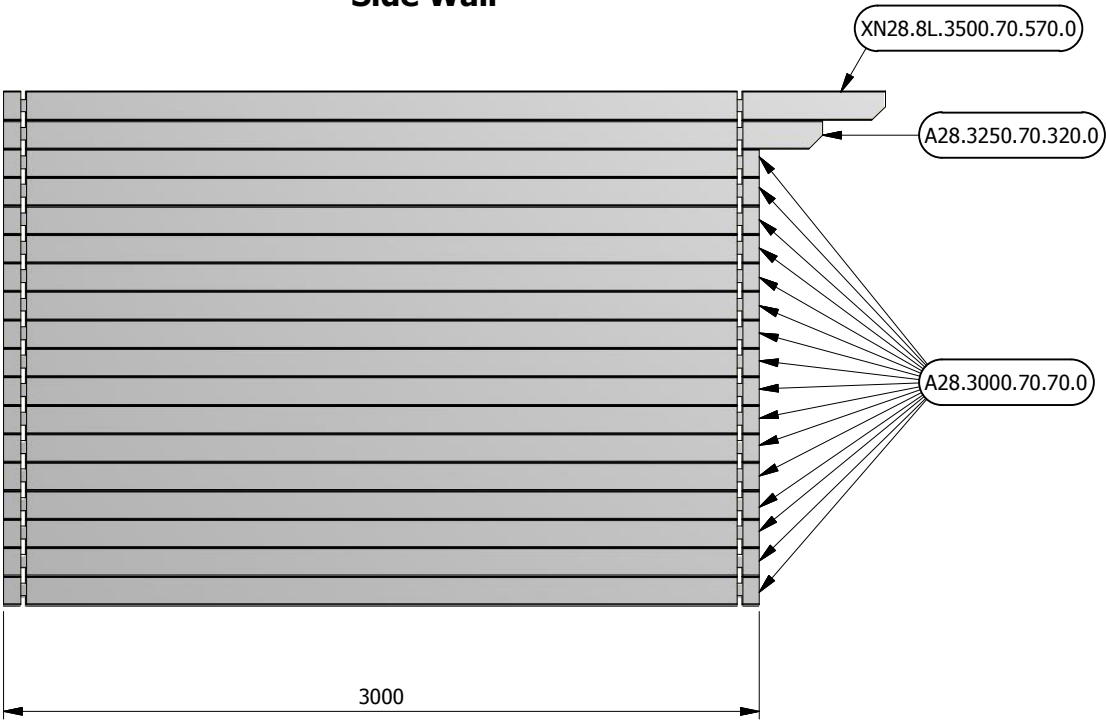

Purlin and Roof Installation for Rhine 40/30 (28mm)

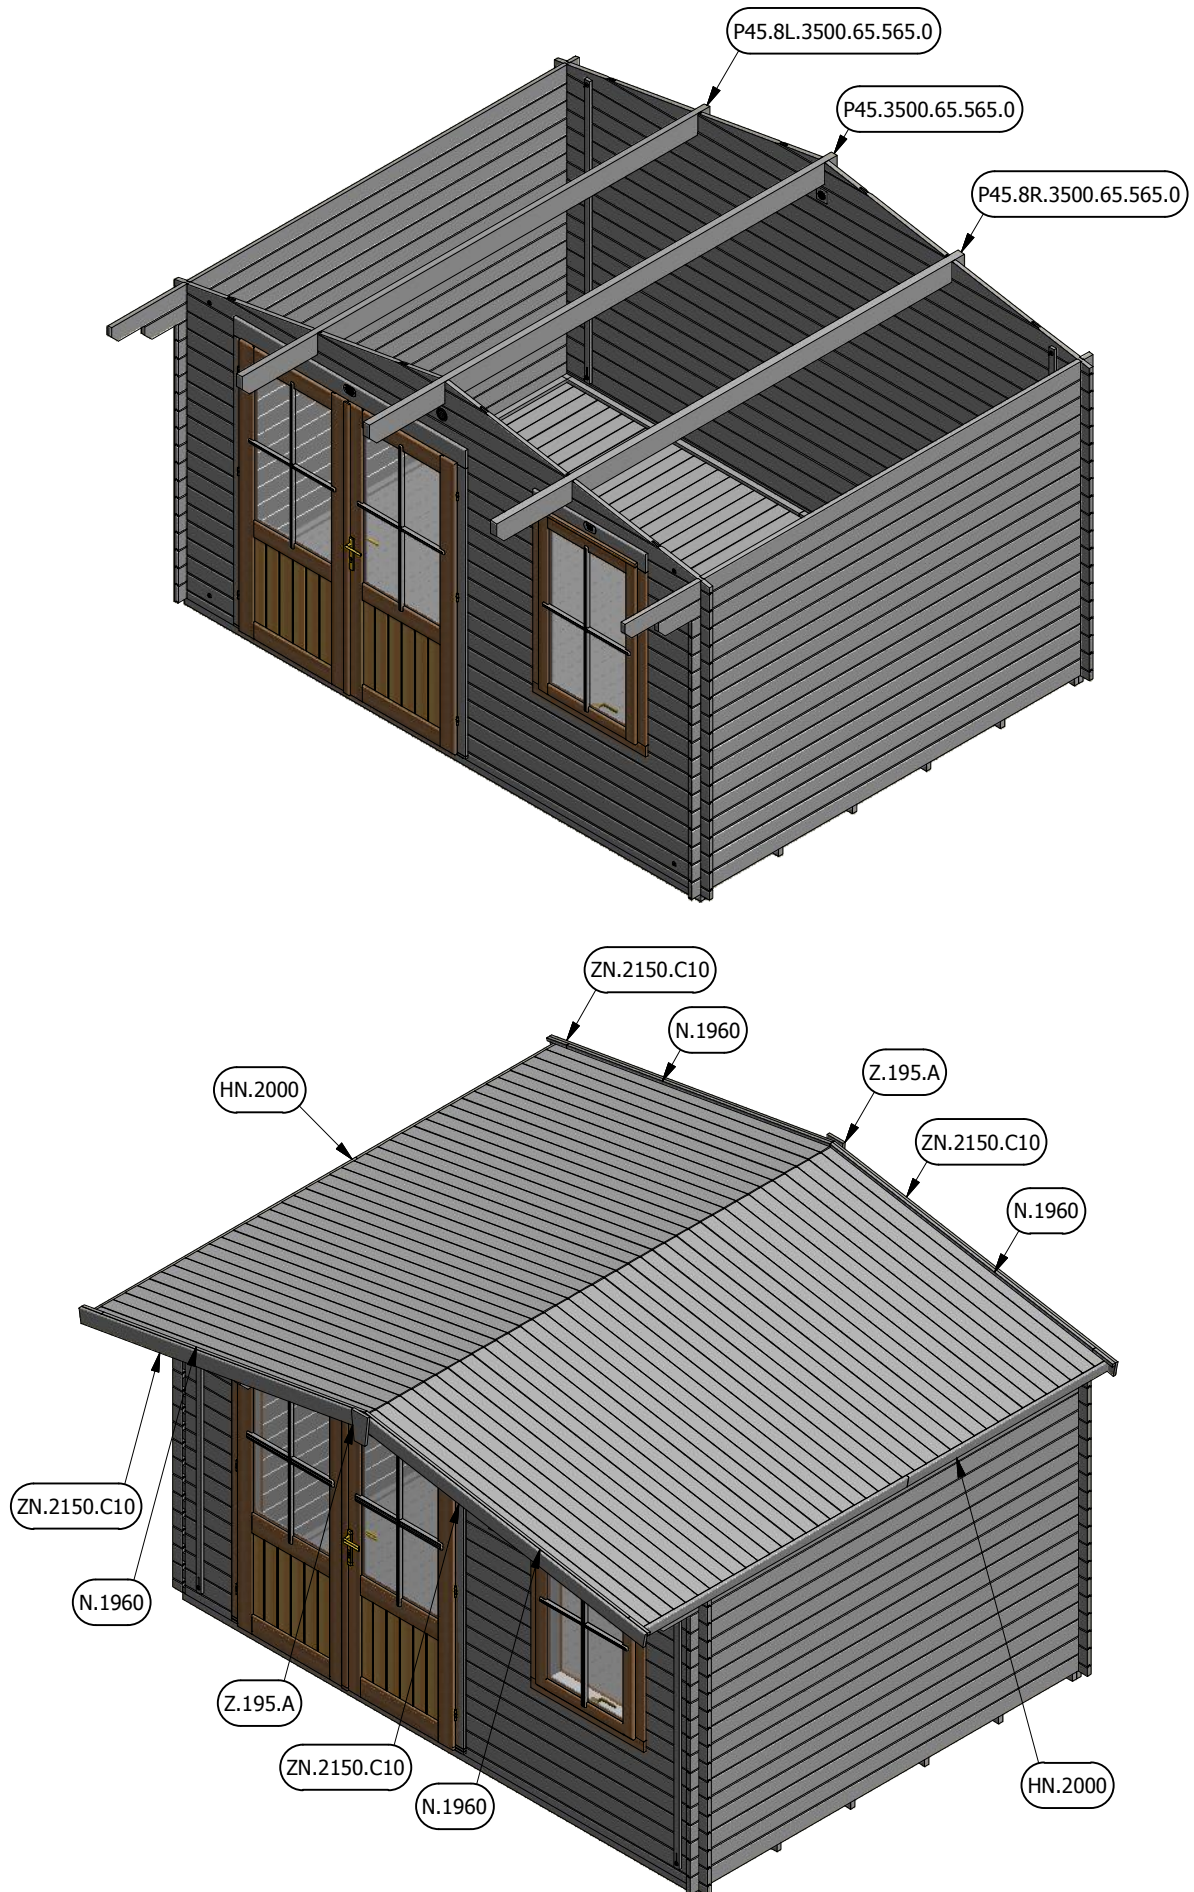

Roof Insulation Panel Layout for Premium Plus Rhine 40/30

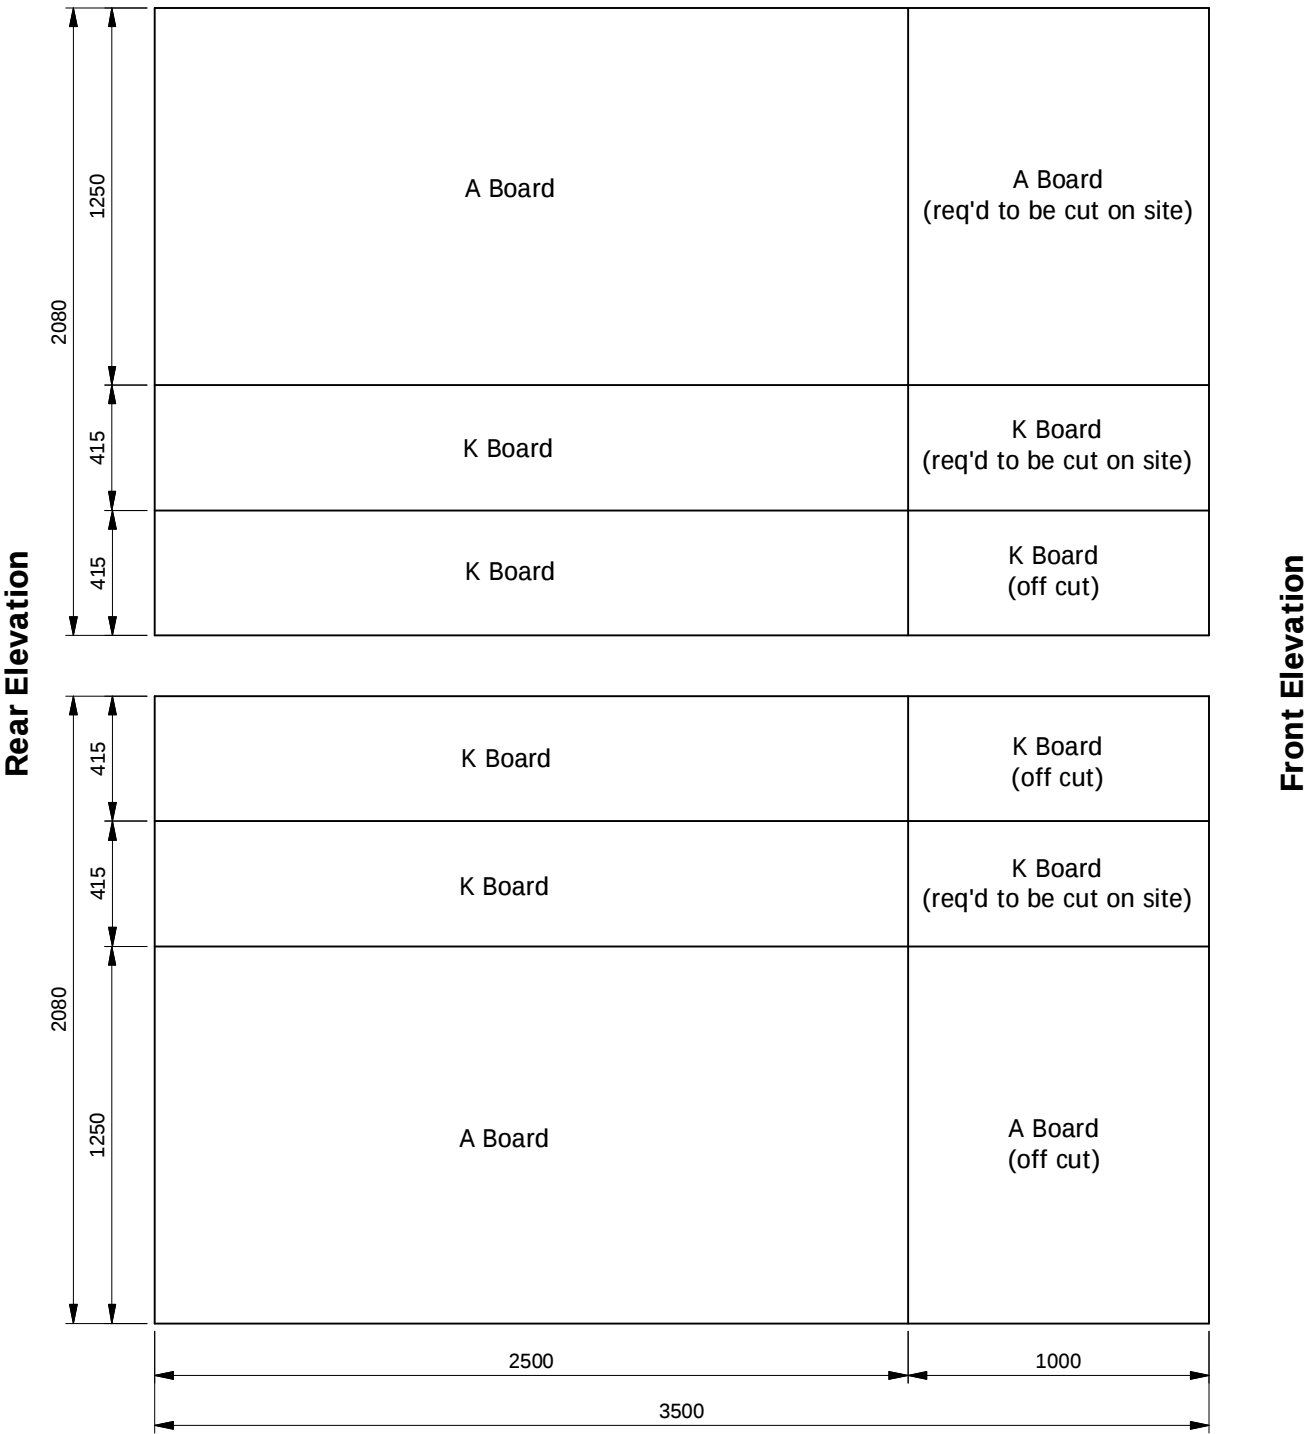

INSULATION BOARDS	
Description	Qty
Panel A (1250x2500mm)	3
Panel K (415x2500mm)	6

SCREWS AND METAL BRACKETS	
Description	Qty
Diameter 3x50mm Screws for roof insulation	150
Diameter 3x20mm Screws for metal brackets	50
Metal brackets	12