



# WeatherTech®


## Application Guide

PRODUCT DATA FOR ALL WEATHERTECH®  
AUTOMOTIVE ACCESSORIES

0612



TechLiner™  
COMING SOON!

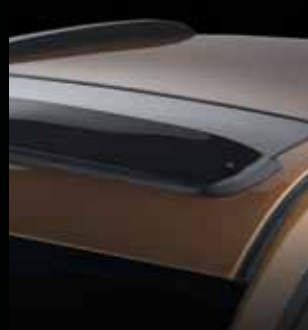



Today, America needs fresh leadership to lead us as a nation out of this economic crisis. Leadership must come not only from our political leaders but also from the average citizen. The exporting of American jobs is a trend that must be stopped and reversed. When I walk into my local hardware store, I typically find 85% of the goods for sale are manufactured 7,000 miles away. Recognizable American brands have been forced by shortsighted management and buyers at large national chains to build factories overseas just to save a lousy \$.50 on a tape measure. To these ruthless buyers, it is all about the money. Rarely are product quality, the political system, human rights, animal rights and environmental costs to the planet considered, not to mention the cost to our society of exporting not only jobs, but an entire factory!

At MacNeil Automotive, we are doing our part for the American economy and for our 300 million fellow citizens and neighbors. My philosophy is that if my neighbor doesn't have a job, sooner or later I won't have a job either. For example, we used to have our All-Weather Floor Mats manufactured in England by a company that used antiquated, inefficient equipment. They made a decent floor mat for us, but we thought we could build a better floor mat for our customers using modern American technology, American raw materials and skilled American workers. So in 2007 we transferred all of our floor mat manufacturing back to the United States. Today, we build the best fitting, highest quality automotive floor mats in the world, right here in America.

Our machine shop is equipped with 20 CNC machining centers including four 4 axis mills and one 5 axis mill that produce between 30 to 50 injection and thermoforming molds per month. We have one shift of highly skilled American Journeymen toolmakers and apprentices, but our machines run 24 hours a day, 7 days a week. There is not a more efficient tool and mold making operation in the world - and guess what, it's right here in America.

Furthermore, all of our CNC mills are manufactured in Oxnard, CA by Haas. Our 1,000 ton injection molding machines are made in Bolton, Ontario of American and Canadian components. Our thermoforming machinery is made in Carol Stream, IL. The raw steel and aluminum billets which make up our tooling are sourced from American steel and aluminum mills such as Vista Metals in Fontana, CA. The raw materials that make up our All-Weather Floor Mats, FloorLiners, Cargo Liners and Mud Flaps are manufactured in Bellevue OH, Arlington TX, Wichita KS and Jasper TN. Our forklifts are made in Columbus IN and Greene NY. Our warehouse racking is manufactured in Tatamy PA.

At MacNeil Automotive, we are also very aware of sustainability and our responsibility to the environment. We are proactive in controlling waste and recycling all of the unused raw materials from the manufacture of our tooling and products including: aluminum, steel, rubber, TPO, TPE, paper and cardboard.

As you can see, we are as dedicated to designing, developing and manufacturing the finest automotive accessories for our consumer and OEM clients as we are passionate about supporting the American economy, preserving the American industrial infrastructure, and keeping the "money" in our family, a family of 300 million people from all over America.

Our commitment and dedication to our customer is further exemplified by our certification to ISO 9001:2008 Quality Management Standards with the additional Automotive Qualification ISO/TS 16949:2009. This ensures our customers of the highest quality products as well as the systems necessary to continually exceed expectations in every regard.

Life is simple; be good to your fellow man, be kind to animals and the environment, and place building a quality product, supporting your country and your fellow American worker before profit. And, one last thing - let's all do our best to balance family time with work time as our children are the future of America.



Sincerely,

David MacNeil, Founder/CEO



## Specialists in Original Equipment and Aftermarket Automotive Accessories



**Wholesale Phone**  
800 943 9250 • 630 769 1500

**Wholesale Fax**  
630 769 0300

**Wholesale Email**  
wholesale@weathertech.com

**Wholesale Web**  
www.weathertechdirect.com

**WeatherTech® Headquarters**  
1 MacNeil Court, Bolingbrook, IL 60440

**BEN BATENIC**  
Vice President of Sales  
e: [bjbatenic@weathertech.com](mailto:bjbatenic@weathertech.com)

**PAULA STREL CZYK**  
Operations Logistics / Wholesale Director  
e: [pstrelczyk@weathertech.com](mailto:pstrelczyk@weathertech.com)  
x: 434

**PATT MARTIN**  
Operations Logistics / Retail Director  
e: [pamartin@weathertech.com](mailto:pamartin@weathertech.com)  
x: 412

**DEL HOLLINGSWORTH**  
Wholesale Manager / OEM Sales  
e: [del@weathertech.com](mailto:del@weathertech.com)  
x: 430

**THOMAS VIRZI**  
Wholesale Sales / Export Director  
e: [trvirzi@weathertech.com](mailto:trvirzi@weathertech.com)  
x: 451

**BRITTANY MULLENS**  
Wholesale Sales / Diamond Dealer Manager  
e: [bmullens@weathertech.com](mailto:bmullens@weathertech.com)  
x: 453

**STEVE LIPA**  
New Products Director  
e: [slipa@weathertech.com](mailto:slipa@weathertech.com)  
x: 484

**HALEY BOURGE**  
Wholesale / Dropship Account Specialist  
e: [hbourge@weathertech.com](mailto:hbourge@weathertech.com)  
x: 423

**MIKE CARINI**  
Dealer Development Manager / Data Analyst  
e: [mcarini@weathertech.com](mailto:mcارين@weathertech.com)  
x: 416

**SHEILA ORSA**  
Wholesale / Dropship Account Specialist  
e: [sorsa@weathertech.com](mailto:sorsa@weathertech.com)  
x: 473

**FABIOLA VERA**  
Dropship Account Specialist / Bilingual  
e: [fvera@weathertech.com](mailto:fvera@weathertech.com)  
x: 426

**PETER SALAWA**  
Wholesale / Dropship Account Specialist  
e: [psalawa@weathertech.com](mailto:psalawa@weathertech.com)  
x: 421

**MELISSA GRADY**  
Wholesale / Dropship Account Specialist  
e: [mgrady@weathertech.com](mailto:mgrady@weathertech.com)  
x: 435

### OUTSIDE SALES TEAM

**RICK HERMANN**  
National Outside Sales Director  
e: [rhermann@weathertech.com](mailto:rhermann@weathertech.com)

**KIRK CORRELL**  
West / Northwest Sales Manager  
e: [kcurrell@weathertech.com](mailto:kcurrell@weathertech.com)

**ZACH PLY**  
West / Southwest Sales Manager  
e: [zply@weathertech.com](mailto:zply@weathertech.com)

**MIKE PEPPLE**  
South / Southwest Sales Manager  
e: [mcepple@weathertech.com](mailto:mcepple@weathertech.com)

**FRED PHINNEY**  
South / Southeast Sales Manager  
e: [fphinney@weathertech.com](mailto:fphinney@weathertech.com)

**GARY ALFANO**  
East / Northeast Outside Sales Manager  
e: [galfano@weathertech.com](mailto:galfano@weathertech.com)

**STEVE PORCELIUS**  
Great Lakes / MW States Sales Associate  
e: [sporcelius@weathertech.com](mailto:sporcelius@weathertech.com)

**JOHN EBBITT**  
Mid/Upper East Coast Sales Associate  
e: [jebbitt@weathertech.com](mailto:jebbitt@weathertech.com)

**DAVE HAMILTON**  
Mid/Lower East Coast Sales Associate  
e: [dhamilton@weathertech.com](mailto:dhamilton@weathertech.com)

**JOSH LUBITZ**  
Rocky Mountain Region Sales Associate  
e: [jlubitz@weathertech.com](mailto:jlubitz@weathertech.com)





**WeatherTech® Europe Phone**  
+39 0521 1745622

**WeatherTech® Email**  
europeansalesdept@weathertech.com

**WeatherTech® Europe Web**  
www.weathertecheuropa.com

**WeatherTech® Europe**  
Via Caduti del Lavoro 25, Parma, Italy 43048

**PAOLO BRIGHENTI**  
e: pbrighenti@weathertech.com



**WeatherTech® Canada Phone**  
888 905 6287

**WeatherTech® Canada Fax**  
800 461 1458

**WeatherTech® Canada Wholesale Web**  
www.weathertech.ca

**WeatherTech® Canada**  
1164 Walkers Line, Burlington Ontario, L7M 1V2

**TONY PAGE**  
President & OEM Account Specialist  
e: tonyp@weathertechcanada.com

**DAN MOSCARDINI**  
National Sales Manager  
e: danm@weathertechcanada.com

**RON HUGHES**  
Director of Sales  
e: ronh@weathertechcanada.com

**KRYSTINE KOSON**  
WD Account Specialist  
e: kkoson@weathertechcanada.com

**VERONIQUE CHARTRAND**  
Bilingual Sales  
e: veroniquec@weathertechcanada.com

**IAN MACKENIZE**  
Western Territory Sales  
e: ianm@weathertechcanada.com

**STEVE MASON**  
Eastern Territory Sales  
e: stevem@weathertechcanada.com





## Interior Floor Protection

- 8 FloorLiner™
- 12 All-Weather Floor Mats
- 16 AVM® All-Vehicle Mats
- 18 Interior Floor Protection Application Data

## Cargo & Trunk Protection

- 100 Cargo Liners
- 104 AVM® Universal Cargo Mat
- 106 Cargo & Trunk Protection Application Data

## Deflectors

- 124 Side Window Deflectors
- 128 Sunroof Wind Deflector
- 130 Stone & Bug Deflector
- 132 Deflector Application Data

## MudFlap

- 186 No-Drill MudFlaps
- 190 MudFlap Application Data

## Additional Accessories

- 196 ClearCover®
- 197 ClearFrame™
- 198 PlateFrame™
- 199 RackSack®
- 200 Pet Barrier
- 201 LampGard®
- 202 WeatherTech® BatteryCharger
- 202 WeatherTech® BatteryCharge Indicator
- 203 TechFloor™
- 204 TechCare™
- 206 TechShade®
- 208 TechShade® Data
- 220 Additional Accessories Data
- 222 Marketing Materials Order Form
- 223 Marketing Materials





# Interior Floor Protection

FloorLiner™



All-Weather Floor Mats



AVM® All-Vehicle Mats





## EXTREME-DUTY FLOOR PROTECTION

In the quest for the most advanced concept in floor protection, the talented designers and engineers at MacNeil Automotive™ have worked tirelessly to develop the most advanced floor protection available today! The WeatherTech® FloorLiner™ accurately and completely lines the interior carpet giving “absolute interior protection™”.

Digital laser measurements of interior surfaces offer a consistently perfect fit. A patented tri-extruded composition allows for a rigid core for strength while offering surface friction to the carpet, as well as tactile feel to the surface. The FloorLiners™ advanced surface design has channels that carry fluid and debris, away from shoes and clothing, into a lower reservoir. The lower reservoir uses additional channeling to minimize fluid movement while driving. Once fluids become trapped in the reservoir, they are easily removed from the WeatherTech® FloorLiner™ over the door sill... No muss-no fuss!

WeatherTech®... Where Technology and All Weather Protection meet! Available in Black, Tan or Grey for cars, trucks, SUVs, and minivans.

Audi Q7




Contoured Underside



Ford F350




*Proudly Designed,  
Engineered and  
Manufactured with  
American made  
Tooling in the USA*





TOYOTA CAMRY

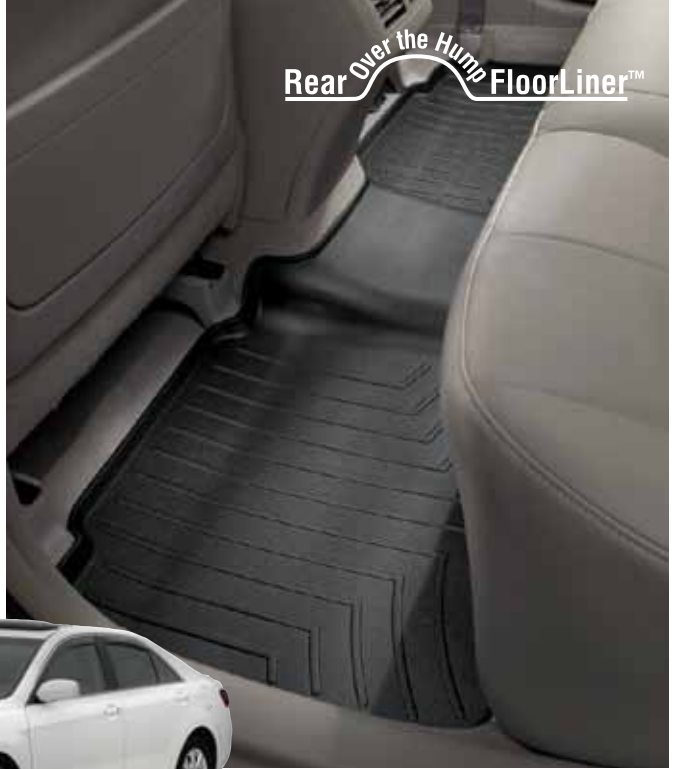

DODGE CHARGER



**FloorLiner™ Available for**

Acura • Audi • BMW • Buick • Cadillac • Chevrolet • Daihatsu • Dodge • Ferrari • Ford • GMC • Honda • Hummer • Hyundai • Infiniti • Isuzu • Jeep • Kia • Land Rover • Lexus • Lincoln • Maserati • Mazda • Mercedes-Benz® • Mercury • Mini • Mitsubishi • Nissan • Oldsmobile • Pontiac • Porsche® • Saab • Saturn • Scion • Smart • Subaru • Suzuki • Toyota • Volkswagen • Volvo • And More!



CHEVROLET SILVERADO



HONDA ODYSSEY



FloorLiners for over 900 Cars, Trucks, SUVs and Minivans



Mercedes-Benz

WeatherTech



# All-Weather Floor Mats

## PREMIUM FLOOR COVERAGE

The WeatherTech® All-Weather Floor Mats are made out of an odorless compound, that have deeply sculpted channels designed to trap water, road salt, mud and sand. Our proprietary engineered resin ensures that these mats will not curl, crack or harden in sub-zero weather. Our All-Weather Floor Mats also have anti-skid ridges to prevent shifting in your vehicle, and come with a protective non-stick finish to make cleanup quick and easy.

WeatherTech® All-Weather Floor Mats are manufactured in America to ISO 9001 standards, and also meet FMVSS302 standards – your assurance of quality. Choose from Black, Tan or Grey to complement virtually any interior color. Available for cars, trucks, minivans and SUVs.

Underside - Nibs



Hyundai Sonata



Lexus RX350



*Proudly Designed,  
Engineered and  
Manufactured with  
American made  
Tooling in the USA*



SUBARU LEGACY



BMW 3-SERIES



MERCEDES-BENZ® ML-CLASS®



ACURA TL



**All-Weather Floor Mats Available for**

Acura • Alfa Romeo • Audi • Avanti • Bentley • BMW • Buick • Cadillac • Chevrolet • Chrysler • Daewoo • Dodge • Eagle • Ford • Geo • GMC • Honda • Hummer • Hyundai • Infiniti • Isuzu • Jaguar • Jeep • Kia • Land Rover • Lexus • Lincoln • Lotus • Mazda • Mercedes-Benz® • Mercury • Mini • Mitsubishi • Nissan • Oldsmobile • Peugeot • Plymouth • Pontiac • Porsche® • Saab • Saturn • Scion • Smart • Subaru • Suzuki • Toyota • Volkswagen • Volvo • And More!



GMC TERRAIN



FORD FOCUS



TOYOTA SIENNA



CADILLAC CTS



All-Weather Floor Mats for Cars, Trucks, SUVs and Minivans

**WeatherTech<sup>®</sup>**  
**AVM<sup>®</sup>**  
All-Vehicle Mats



This mat was specifically  
trimmed for this application




## PREMIUM ALL-VEHICLE TRIM-TO-FIT<sup>™</sup> MATS

The WeatherTech<sup>®</sup> All-Vehicle Mat is the refinement of the most technologically advanced universal-type mat ever created. Our product planners tested patterns for every conceivable make and model of current popular vehicles to determine the best combination of ideal fit and score lines that allow for a truly custom-like fit, while maintaining the desirable attributes that our customers have come to expect from a WeatherTech<sup>®</sup> product.

AVM<sup>®</sup> has tall outer ridges and channels to help guide fluids to the lower half of the mat then a deep containment reservoir traps fluids and debris - away from your feet and clothes. AVM<sup>®</sup> is made from an advanced rubber compound that stays flexible in the coldest of temperatures and has unique retention nibs that add security to the mat-to-floor interface - coupled with the patented MatGrip<sup>®</sup> retention device.

These features, combined with our commitment to the environment and sustainable design, led to the development of our advanced rubber compound that is an OEM approved, virtually odorless material that contains no harmful PVCs, cadmium, or lead and is 100% recyclable! Available in Black, Tan or Grey.

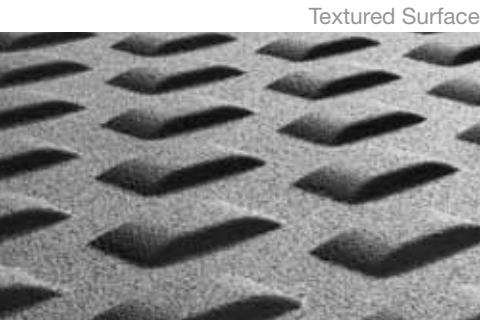

Textured Surface



Tan, Grey, Black



Set of Four

### Trim-to-Fit<sup>™</sup>

*Proudly Designed,  
Engineered and  
Manufactured with  
American made  
Tooling in the USA*



# Interior Floor Protection



Make / Model	Year	Front FloorLiner™	Rear FloorLiner™
<b>Acura</b>		<b>Part #</b>	<b>Notes</b>
CL	1997 - 2003		
Integra	1986 - 1993		
Integra	1994 - 2001		
Legend	1986 - 1995		
MDX	2001 - 2004	Front: 440411 Rear: <sup>2</sup> 440222	
MDX	2005 - 2006	Front: 440371 Rear: <sup>2</sup> 440222	
MDX	2007 +	Front: 441141 Rear: <sup>2</sup> 441142 <i>2nd row</i> Rear: <sup>2</sup> 441143 <i>3rd row</i>	
NSX	1991 - 2005		
RDX	2007 +	Front: 441171 Front: 442281 Rear: <sup>3</sup> 441172	<i>Fits vehicles with hook type retention devices</i> <i>Fits vehicles with twist type retention devices</i>
RL	1996 - 2004		
RL	2005 +		
RSX	2002 - 2006		
SLX	1996 - 1999		
TL	1995 - 2003		
TL	2004 - 2008	Front: 441501 Rear: <sup>3</sup> 441502	
TL	2009 +	Front: 442131 Rear: <sup>3</sup> 442132 Front: 442311 Rear: <sup>3</sup> 442312	<i>Fits front wheel drive models only</i> <i>Fits front wheel drive models only</i> <i>Fits all wheel drive models only</i> <i>Fits all wheel drive models only</i>
TSX	2004 - 2008		
TSX	2009 +	Front: 441701 Rear: <sup>2</sup> 441702	<i>Also fits wagon</i> <i>Also fits wagon</i>
Vigor	1992 - 1994		
ZDX	2010 +	Front: 442891 Rear: <sup>3</sup> 442892	
<b>Alfa Romeo</b>			
164	1991 - 1995		
Spider	1955 - 1994		
<b>Audi</b>			
100	1992 - 1994		
100 / 200	1989 - 1991		
80 / 90	1986 - 1995		
A3	2006 +	Front: 442181 Rear: <sup>2</sup> 442182	<i>Two-piece part</i>
A4 / S4 / RS4	2009	Front: 441941	<i>Fits Cabriolet only</i>
A4 / S4 / RS4	1996 - 2001		
A4 / S4 / RS4	2002 - 2008	Front: 441941 Rear: <sup>2</sup> 441942	<i>Two-piece part</i>

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
 FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
 All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code  
<sup>SP</sup> Non-Standard Pricing  
<sup>0</sup> Front FloorLiner™  
<sup>0A</sup> Luxury Front FloorLiner™  
<sup>0B</sup> Luxury Front FloorLiner™  
<sup>1</sup> Small Rear FloorLiner™  
<sup>2</sup> Medium Rear FloorLiner™  
<sup>2A</sup> Luxury Medium Rear FloorLiner™  
<sup>3</sup> Large Rear FloorLiner™  
<sup>3A</sup> Luxury Large Rear FloorLiner™  
<sup>4</sup> Extra Large Rear FloorLiner™  
<sup>5</sup> Mega Rear FloorLiner™





# Interior Floor Protection

## All-Weather Floor Mats

## Year

## Make / Model

Front	Rear		Acura
W34	W20	1997 - 2003	CL
W34	W20	1986 - 1993	Integra
W3	W20	1994 - 2001	Integra
W3	W20	1986 - 1995	Legend
W4	W25 <i>2nd row</i> W60 <i>3rd row</i>	2001 - 2004	MDX
W4	W25 <i>2nd row</i> W60 <i>3rd row</i>	2005 - 2006	MDX
W148	W20 <i>2nd row</i> W60 <i>3rd row</i>	2007 +	MDX
W3		1991 - 2005	NSX
W71	W20	2007 +	RDX
W34	W50	1996 - 2004	RL
W36	W50	2005 +	RL
W34	W20	2002 - 2006	RSX
W3	W20	1996 - 1999	SLX
W34	W20	1995 - 2003	TL
W58	W50	2004 - 2008	TL
W61	W50	2009 +	TL
W58	W50	2004 - 2008	TSX
		2009 +	TSX
W34	W20	1992 - 1994	Vigor
		2010 +	ZDX
			<b>Alfa Romeo</b>
W3	W20	1991 - 1995	164
W3		1955 - 1994	Spider
			<b>Audi</b>
W3	W20	1992 - 1994	100
W4	W20	1989 - 1991	100 / 200
W3	W20	1986 - 1995	80 / 90
W53	W50	2006 +	A3
		2009	A4 / S4 / RS4
W3	W50	1996 - 2001	A4 / S4 / RS4
W67	W50	2002 - 2008	A4 / S4 / RS4

# Interior Floor Protection



Make / Model	Year	Front FloorLiner™	Rear FloorLiner™
<b>Audi (continued)</b>			
A4 / S4 / RS4	2009 +	Front: 442121 Rear: <sup>2</sup> 442122	<i>Two-piece part</i>
A5 / S5 / RS5	2008 +	Front: 442121 Rear: <sup>2</sup> 442123	<i>Two-piece part</i>
A6 / S6 / RS6	1995 - 2004		
A6 / S6 / RS6	2005 - 2011	Front: 442191 Rear: <sup>2</sup> 442192	
A6 / S6 / RS6	2012 +	Front: 443741 Rear: 443742	
A7	2012 +	Front: 443741 Rear: 443742	
A8 / A8L / S8	1997 - 2003		
A8 / A8L / S8	2004 - 2010	Front: <sup>0A</sup> 442201 Rear: <sup>2A</sup> 442203	<i>Fits A8L model only</i>
A8 / A8L / S8	2011 +	Front: 444201 Rear: 444202	<i>Fits A8L only</i>
Allroad	1999 - 2005		
Cabriolet	1994 - 1998		
Coupe Quattro	1990 - 1991		
Q5	2009 +	Front: 442301 Rear: <sup>2</sup> 442302	
Q7	2007 +	Front: 441511 Rear: <sup>3</sup> 441512 Rear: <sup>2</sup> 441513	<i>2nd row</i> <i>3rd row</i>
TT / TTS	2000 - 2007		
TT / TTS	2008 +		
V8 Quattro	1990 - 1994		
<b>Avanti</b>			
R	1965 - 1991		
<b>Bentley</b>			
ALL	ALL		
<b>BMW</b>			
1-Series (E82/E88) 128i, 135i	2007 +	Front: 442531 Rear: <sup>2</sup> 442532	<i>Fits convertible models only</i>
1-Series (E87) 128i, 135i	2004 +	Rear: 442531	
3-Series (E30) 325e/i/is/iX, M3	1982 - 1991		
3-Series (E36) 318i/iS/ti, 323i/is/Ci, 325i/is, 328i/is	1991 - 1999		
3-Series (E46) 323i, 325i/Ci, 328i, 330i/xi, M3	1998 - 2006	Front: 441061 Rear: <sup>2</sup> 441062 Front: 441271 Rear: <sup>2</sup> 441272	<i>Does not fit xi models</i> <i>Fits coupe only</i> <i>Fits xi models only</i> <i>Fits sedan and wagon only</i>
3-Series (E90, E91, E92, E93) 325i/xi, 328i/xi, 330i/xi, 335i/xi, M3	2006 - 2012	Front: 441461 Rear: <sup>2</sup> 441464 Front: 441581 Rear: <sup>2</sup> 441463	<i>Fits xi models only</i> <i>Fits convertible only</i> <i>Does not fit xi models</i> <i>Fits coupe only, Two-piece part</i>
3-Series (E90, E91, E92, E93) 325i/xi, 328i/xi, 330i/xi, 335i/xi, M3	2007 - 2012		

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code  
<sup>SP</sup> Non-Standard Pricing  
<sup>0</sup> Front FloorLiner™  
<sup>0A</sup> Luxury Front FloorLiner™  
<sup>0B</sup> Luxury Front FloorLiner™  
<sup>1</sup> Small Rear FloorLiner™  
<sup>2</sup> Medium Rear FloorLiner™  
<sup>2A</sup> Luxury Medium Rear FloorLiner™  
<sup>3</sup> Large Rear FloorLiner™  
<sup>3A</sup> Luxury Large Rear FloorLiner™  
<sup>4</sup> Extra Large Rear FloorLiner™  
<sup>5</sup> Mega Rear FloorLiner™



# Interior Floor Protection

All-Weather Floor Mats		Year	Make / Model
Front	Rear		Audi (continued)
W111	W50	2009 +	A4 / S4 / RS4
W111		2008 +	A5 / S5 / RS5
W67	W20	1995 - 2004	A6 / S6 / RS6
W67	W20	2005 - 2011	A6 / S6 / RS6
		2012 +	A6 / S6 / RS6
		2012 +	A7
W3	W20	1997 - 2003	A8 / A8L / S8
	W20	2004 - 2010	A8 / A8L / S8
		2011 +	A8 / A8L / S8
W31	W50	1999 - 2005	Allroad
W3	W20	1994 - 1998	Cabriolet
W2	W20	1990 - 1991	Coupe Quattro
		2009 +	Q5
		2007 +	Q7
W31		2000 - 2007	TT / TTS
W53		2008 +	TT / TTS
W3	W20	1990 - 1994	V8 Quattro
<b>Avanti</b>			
W3	W20	1965 - 1991	R
<b>Bentley</b>			
W4	W20	ALL	ALL
<b>BMW</b>			
W61	W155 <i>Convertible fitment requires trim indicated on part</i>	2007 +	1-Series (E82/E88) 128i, 135i
W61		2004 +	1-Series (E87) 128i, 135i
W24	W50	1982 - 1991	3-Series (E30) 325e/i/is/iX, M3
W24	W50	1991 - 1999	3-Series (E36) 318i/iS/ti, 323i/is/Ci, 325i/is, 328i/is
W24	W154 <i>Fits sedan and wagon only</i> W261 <i>Fits convertible only</i> W142 <i>Fits coupe only</i>	1998 - 2006	3-Series (E46) 323i, 325i/Ci, 328i, 330i/xi, M3
W61	W142 <i>Fits coupe only</i> W141 <i>Fits sedan and sportwagon</i>	2006 - 2012	3-Series (E90, E91, E92, E93) 325i/xi, 328i/xi, 330i/xi, 335i/xi, M3
	W261 <i>Fits convertible only</i>	2007 - 2012	3-Series (E90, E91, E92, E93) 325i/xi, 328i/xi, 330i/xi, 335i/xi, M3





# Interior Floor Protection



Make / Model	Year	Front FloorLiner™	Rear FloorLiner™
<b>BMW (continued)</b>			
3-Series (F30) 328i, 335i	2012 +		Rear: 443992
5-Series (E34) 525i, 530i, 535i, 540i, M5	1989 - 1995		
5-Series (E39) 525i, 528i, 530i, 540i, M5	1996 - 2003	Front: 444281 Rear: 444282	
5-Series (E60, E61) 525i/xi, 530i/xi, 535i/xi, 545i, 550i, M5	2004 - 2010	Front: 441641 Rear: <sup>2</sup> 441642	<i>Two-piece part</i>
5-series (F10, F11) 528i, 535i, 550i, ActiveHybrid 5, M5	2011 +	Front: 443131 Front: 443301 Rear: <sup>2</sup> 443132	<i>Fits RWD models</i> <i>Fits xDrive models</i> <i>Fits both RWD and xDrive models</i>
5-Series GT 535i, 535ix, 550i, 550ix	2010 +	Front: 443071 Rear: <sup>2</sup> 443072	
6-Series (E63, E64) 645Ci, 650i, M6	2004 - 2011		
6-Series (F12, F13) 640i, 650i, 650i xDrive	2012 +		
7-Series (E32) 735i/iL, 740i/iL, 750iL	1987 - 1994		
7-Series (E38) 740i/iL, 750iL	1995 - 2001		
7-Series (E65, E66) 745i/Li, 750i/Li, 760i/Li	2003 - 2009		
7-Series (F01, F02) 750i/Li/xDrive	2010 +	Front: <sup>0A</sup> 442421 Rear: <sup>2</sup> 442422 Front: 443751 Rear: <sup>3A</sup> 442423	<i>Fits RWD models only</i> <i>Does not fit L models</i> <i>Fits xDrive models only</i> <i>Fits Li models only</i>
8-Series (E31) 840Ci, 850i/Ci, CSI	1991 - 1997		
M Coupe	1999 +		
M Roadster	1998 - 2002		
X3	2004 - 2010	Front: 440381 Rear: <sup>2</sup> 440382	
X3	2011 +	Front: 443311 Rear: <sup>3</sup> 443312	
X5 / X5M	2000 - 2006	Front: 440401 Rear: <sup>3</sup> 440402	
X5 / X5M	2007 +	Front: 440951 Rear: <sup>3</sup> 440952 Rear: <sup>2</sup> 440953	<i>2nd row</i> <i>3rd row</i>
X6 / X6M	2008 +	Front: 440951 Rear: <sup>3</sup> 440952	
Z3	1996 - 2002		
Z4	2003 - 2009		
Z4	2009 +		
Z8	2000 - 2003		
<b>Buick</b>			
Century	ALL		
Electra	ALL		

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code  
<sup>SP</sup> Non-Standard Pricing  
<sup>0</sup> Front FloorLiner™  
<sup>0A</sup> Luxury Front FloorLiner™  
<sup>0B</sup> Luxury Front FloorLiner™  
<sup>1</sup> Small Rear FloorLiner™  
<sup>2</sup> Medium Rear FloorLiner™  
<sup>2A</sup> Luxury Medium Rear FloorLiner™  
<sup>3</sup> Large Rear FloorLiner™  
<sup>3A</sup> Luxury Large Rear FloorLiner™  
<sup>4</sup> Extra Large Rear FloorLiner™  
<sup>5</sup> Mega Rear FloorLiner™



# Interior Floor Protection

All-Weather Floor Mats		Year	Make / Model
Front	Rear		BMW (continued)
		2012 +	3-Series (F30) 328i, 335i
W37	W50	1989 - 1995	5-Series (E34) 525i, 530i, 535i, 540i, M5
W156	W157	1996 - 2003	5-Series (E39) 525i, 528i, 530i, 540i, M5
W62	W143	2004 - 2010	5-Series (E60, E61) 525i/xi, 530i/xi, 535i/xi, 545i, 550i, M5
W204	W205	2011 +	5-series (F10, F11) 528i, 535i, 550i, ActiveHybrid 5, M5
		2010 +	5-Series GT 535i, 535ix, 550i, 550ix
W24	W50	2004 - 2011	6-Series (E63, E64) 645Ci, 650i, M6
	W166	2012 +	6-Series (F12, F13) 640i, 650i, 650i xDrive
W37	W20	1987 - 1994	7-Series (E32) 735i/iL, 740i/iL, 750iL
W156	W20	1995 - 2001	7-Series (E38) 740i/iL, 750iL
W64	W20	2003 - 2009	7-Series (E65, E66) 745i/Li, 750i/Li, 760i/Li
W135 <i>Fits i and Li models</i>	W133 <i>Fits L models only</i> W134 <i>Fits Li models only</i>	2010 +	7-Series (F01, F02) 750i/Li/xDrive
W37	W50	1991 - 1997	8-Series (E31) 840Ci, 850i/Ci, CSi
W37		1999 +	M Coupe
W37		1998 - 2002	M Roadster
W63	W146	2004 - 2010	X3
		2011 +	X3
W27	W158	2000 - 2006	X5 / X5M
W74	W144 <i>2nd row</i> W145 <i>3rd row</i>	2007 +	X5 / X5M
W74	W144	2008 +	X6 / X6M
W24		1996 - 2002	Z3
W24		2003 - 2009	Z4
W61		2009 +	Z4
W24		2000 - 2003	Z8
			<b>Buick</b>
W2	W20	ALL	Century
W2		ALL	Electra

# Interior Floor Protection



Make / Model	Year	Front FloorLiner™	Rear FloorLiner™
<b>Buick (continued)</b>			
Enclave	2008 +	Front: 442511 Rear: <sup>3</sup> 441112 Rear: <sup>4</sup> 441114	<i>Fits vehicles with 2nd row bench seats Covers 2nd and 3rd row floor spaces, fits vehicles with 2nd row bucket seats only</i>
Lacrosse	2005 - 2009		
Lacrosse	2010 +	Front: 442681 Rear: <sup>2</sup> 441442	<i>Two-piece part</i>
LeSabre	ALL		
Lucerne	2006 +	Front: 443081 Rear: <sup>2</sup> 443082	
Park Avenue Ultra	1991 - 1996		
Park Avenue Ultra	1997 - 2005		
Rainier	2004 - 2007	Front: 440071	
Reatta	1988 - 1991		
Regal	1987 - 1997		
Regal	1997.5 - 2004		
Regal	2011 +	Front: 443271 Rear: <sup>2</sup> 443272	<i>Does not fit models with manual transmissions</i>
Rendezvous	2002 - 2007	Front: 440911 Rear: <sup>2</sup> 440912 Rear: <sup>1</sup> 440913	<i>2nd row 3rd row</i>
Riviera	ALL		
Roadmaster	ALL		
Skylark	1980 - 1998		
Terraza	2005 - 2007		
<b>Cadillac</b>			
Allante	1987 - 1993		
Brougham	ALL		
Catera	1997 - 2001		
CTS / CTS-V	2003 - 2007		
CTS / CTS-V	2008 +	Front: 441491 Front: 442601 Rear: <sup>1</sup> 441492	<i>Fits AWD models and CTS-V Fits RWD models only, does not fit CTS-V</i>
Deville	2005 & Older		
DTS	2006 +		
Eldorado	1987 - 1994		
Escalade	1999 - 2000		
Escalade	2002 - 2006	Front: 440031 Rear: <sup>2</sup> 440032	<i>2nd row</i>
Escalade	2007 +	Front: 440661 Rear: <sup>1</sup> 440667	<i>Covers aisle between 2nd row bucket seats, does not fit bench seat model</i>
Escalade ESV	2003 - 2006	Front: 440031 Rear: <sup>3</sup> 440612	
Escalade ESV	2007 - 2010	Front: 440661 Rear: <sup>3</sup> 440666 Rear: <sup>4</sup> 440668 Rear: <sup>4</sup> 440665	<i>2nd row 3rd row, Fits vehicles with 2nd row bench seats only 3rd row, Fits vehicles with 2nd row bucket seats only</i>

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code  
<sup>SP</sup> Non-Standard Pricing  
<sup>0</sup> Front FloorLiner™  
<sup>0A</sup> Luxury Front FloorLiner™  
<sup>0B</sup> Luxury Front FloorLiner™  
<sup>1</sup> Small Rear FloorLiner™  
<sup>2</sup> Medium Rear FloorLiner™  
<sup>2A</sup> Luxury Medium Rear FloorLiner™  
<sup>3</sup> Large Rear FloorLiner™  
<sup>3A</sup> Luxury Large Rear FloorLiner™  
<sup>4</sup> Extra Large Rear FloorLiner™  
<sup>5</sup> Mega Rear FloorLiner™





# Interior Floor Protection

## All-Weather Floor Mats

## Year

## Make / Model

Front	Rear		
W68	W25	2008 +	<b>Buick (continued)</b> Enclave
W31	W50	2005 - 2009	Lacrosse
W89	W20	2010 +	Lacrosse
W2	W20	ALL	LeSabre
W9		2006 +	Lucerne
W3	W20	1991 - 1996	Park Avenue Ultra
W4	W20	1997 - 2005	Park Avenue Ultra
W32	W50	2004 - 2007	Rainier
W2		1988 - 1991	Reatta
W3	W20	1987 - 1997	Regal
W2	W20	1997.5 - 2004	Regal
		2011 +	Regal
W4	W20	2002 - 2007	Rendezvous
W3	W20	ALL	Riviera
W3	W20	ALL	Roadmaster
W3	W20	1980 - 1998	Skylark
W40	W25	2005 - 2007	Terraza
			<b>Cadillac</b>
W2		1987 - 1993	Allante
W3	W20	ALL	Brougham
W3	W20	1997 - 2001	Catera
	W20	2003 - 2007	CTS / CTS-V
W47			
W243	W193	2008 +	CTS / CTS-V
<i>Fits RWD models only, does not fit CTS-V</i>			
W93			
<i>Fits AWD models and CTS-V</i>			
W9	W20	2005 & Older	Deville
W194	W20	2006 +	DTS
W2	W20	1987 - 1994	Eldorado
W14	W25	1999 - 2000	Escalade
W26	W70	2002 - 2006	Escalade
W72	W70	2007 +	Escalade
W26	W179	2003 - 2006	Escalade ESV
	<i>3rd row, Fits behind 2nd row bench seat</i>		
	W180		
	<i>3rd row, Fits behind 2nd row bucket seats</i>		
	W70		
	<i>2nd row</i>		
W72	W70	2007 - 2010	Escalade ESV
	<i>2nd row</i>		

# WeatherTech®

# Interior Floor Protection



Make / Model	Year	Front FloorLiner™	Rear FloorLiner™
<b>Cadillac (continued)</b>			
Escalade ESV	2011 +	Rear: <sup>4</sup> 442354	<i>3rd row, Fits vehicles with 2nd row bucket seats only</i>
Escalade EXT	2002 - 2006	Front: 440031 Rear: <sup>3</sup> 440612	
Escalade EXT	2007 +	Front: 440661	
Fleetwood	ALL		
Seville	1991 & Older		
Seville	1992 - 2004		
SRX	2010	Front: 442781	<i>Fits AWD and FWD vehicles</i>
SRX	2004 - 2009	Front: 440791 Rear: <sup>1</sup> 440792	<i>Fits 4wd vehicles only Two-piece part</i>
SRX	2010 +	Rear: <sup>3</sup> 442782	
SRX	2011 +	Front: 443831	
STS	2005 +		
XLR	2004 - 2009		
<b>Chevrolet</b>			
Astro Van	1985 - 1994		
Astro Van	1995 - 2005		
Avalanche	2002 - 2006	Front: 440031 Rear: <sup>3</sup> 440612	<i>Does not fit models with manual 4X4 floor shifter</i>
Avalanche	2007 +	Front: 440661 Rear: <sup>2</sup> 440663	
Aveo	2011	Front: 443641	<i>Fits 4 and 5 Door Model</i>
Aveo	2004 - 2006		
Aveo	2007 - 2010	Front: 442441	
Aveo	2007 - 2011	Rear: <sup>2</sup> 442442	
Beretta	1987 - 1996		
Blazer	1984 - 1994		
Blazer	1984 - 1999		
Blazer	1995 - 2005		
Blazer	2000 - 2005	Front: 441161 Rear: <sup>2</sup> 441162	<i>Fits 4WD models only Fits 4 door models only</i>
Blazer Full Size	1987 - 1991		
Blazer Full Size	1992 - 1994		
Camaro	1967 - 2002		
Camaro	2010 +	Front: 442671 Rear: <sup>1</sup> 442672	<i>Two-piece part</i>
Caprice	ALL		
Captiva	2008 +	Front: 441421 Rear: <sup>3</sup> 441422	
Cavalier	1982 - 2005		
CK Series Pickup Crew Cab	1992 - 2000		
CK Series Pickup Extended Cab	1992 - 2000		
CK Series Pickup Regular Cab	1988 - 2000		
Classic	2004 +		
Cobalt	2005 - 2010	Front: 441981 Rear: <sup>1</sup> 441982	<i>Does not fit models with manual transmission Two-piece part</i>
Colorado Crew Cab	2004 +	Front: 440091 Rear: <sup>2</sup> 440092	<i>Does not fit models with manual transmission</i>
Colorado Extended Cab	2004 +	Front: 440761 Rear: <sup>2</sup> 440762	<i>Does not fit manual transmission</i>
Colorado Regular Cab	2004 +		
Corsica	1987 - 1996		
Corvette	1984 - 1996		
Corvette	1997 - 2004		

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
 FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
 All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code  
<sup>SP</sup> Non-Standard Pricing  
<sup>0</sup> Front FloorLiner™  
<sup>0A</sup> Luxury Front FloorLiner™  
<sup>0B</sup> Luxury Front FloorLiner™  
<sup>1</sup> Small Rear FloorLiner™  
<sup>2</sup> Medium Rear FloorLiner™  
<sup>2A</sup> Luxury Medium Rear FloorLiner™  
<sup>3</sup> Large Rear FloorLiner™  
<sup>3A</sup> Luxury Large Rear FloorLiner™  
<sup>4</sup> Extra Large Rear FloorLiner™  
<sup>5</sup> Mega Rear FloorLiner™



# Interior Floor Protection

## All-Weather Floor Mats

## Year

## Make / Model

Front	Rear	Year	Cadillac (continued)
		2011 +	Escalade ESV
W26	W70	2002 - 2006	Escalade EXT
W72	W70	2007 +	Escalade EXT
W3	W20	ALL	Fleetwood
W2	W20	1991 & Older	Seville
W3	W20	1992 - 2004	Seville
		2010	SRX
W47	W20	2004 - 2009	SRX
W191	W192	2010 +	SRX
		2011 +	SRX
W47	W20	2005 +	STS
W3		2004 - 2009	XLR
			<b>Chevrolet</b>
	W25	1985 - 1994	Astro Van
W51	W25	1995 - 2005	Astro Van
W26	W20	2002 - 2006	Avalanche
W72	W70	2007 +	Avalanche
		2011	Aveo
W31	W50	2004 - 2006	Aveo
		2007 - 2010	Aveo
W31	W50	2007 - 2011	Aveo
W3	W20	1987 - 1996	Beretta
W12	W20	1984 - 1994	Blazer
		1984 - 1999	Blazer
W12	W20	1995 - 2005	Blazer
		2000 - 2005	Blazer
W9	W20	1987 - 1991	Blazer Full Size
W14	W20	1992 - 1994	Blazer Full Size
W3	W20	1967 - 2002	Camaro
		2010 +	Camaro
W3	W20	ALL	Caprice
		2008 +	Captiva
W2	W20	1982 - 2005	Cavalier
W14	W25	1992 - 2000	CK Series Pickup Crew Cab
W14	W25	1992 - 2000	CK Series Pickup Extended Cab
W14		1988 - 2000	CK Series Pickup Regular Cab
W3	W20	2004 +	Classic
W61	W50	2005 - 2010	Cobalt
W3	W20	2004 +	Colorado Crew Cab
W3	W20	2004 +	Colorado Extended Cab
W3		2004 +	Colorado Regular Cab
W3	W20	1987 - 1996	Corsica
		1984 - 1996	Corvette
W24		1997 - 2004	Corvette

# WeatherTech®



# Interior Floor Protection



Make / Model	Year	Front FloorLiner™	Rear FloorLiner™
<b>Chevrolet (continued)</b>			
Corvette	2005 +	Front: 441341	<i>Fits vehicles with retention hooks, not circular knobs</i>
		Front: 441841	<i>Fits vehicles with circular retention knobs, not hooks</i>
Cruze	2011 +	Front: 443441 Rear: <sup>2</sup> 443442	
Equinox	2010	Front: 442711	
Equinox	2005 - 2009	Front: 440231 Rear: <sup>3</sup> 440232	
Equinox	2011 +	Front: 443461 Rear: <sup>2</sup> 442712	<i>Fits vehicles with two retention posts on the driver's side floor</i>
Express Van	1996 +		
HHR	2006 - 2011	Front: 441451 Rear: <sup>2</sup> 441452	
Impala	1994 - 2005		
Impala	2006 +	Front: 441241 Rear: <sup>2</sup> 441242	<i>Vehicles with the 40/20/40 bench seat require trim on top of hump</i>
Lumina Minivan	1990 - 1996		
Lumina Sedan	ALL		
Luv D-Max	2005 +	Front: 440991 Rear: <sup>3</sup> 440992	
Malibu	1997 - 2003		
Malibu	2004 - 2007		
Malibu	2008 - 2012	Front: 441441	<i>Fits vehicles with one retention device on driver's side</i>
		Front: 442261	<i>Fits vehicles with two retention devices on driver's side</i>
		Rear: <sup>2</sup> 441442	
Malibu Maxx	2004 - 2007		
Metro	1998 - 2001		
Monte Carlo	1995 - 2007		
Nova	ALL		
Optra Advance	2010 +	Front: 442851	
Prizm	1998 - 2002		
S10 Pickup	1982 - 1993		
S10 Pickup	1994 - 2004	Front: 441161	<i>Fits 4WD trucks only</i>
Silverado Crew Cab	1999 - 2000	Front: 440031	<i>Does not fit vehicles with 4x4 manual transfer case</i>
Silverado Crew Cab	2001 - 2003	Front: 440031 Rear: <sup>3</sup> 440612	<i>Does not fit vehicles with 4x4 manual transfer case</i>
Silverado Crew Cab	2004 - 2007 Classic	Front: 440031	<i>Does not fit 2007 new body style or 4X4 manual transfer case</i>
		Rear: <sup>3</sup> 440623	<i>Fits 1500 models only, does not fit 2007 new body style</i>
		Rear: <sup>3</sup> 440625	<i>Fits Heavy Duty models only, does not fit 2007 new body style</i>
Silverado Crew Cab	2007 +	Front: 440661	<i>Does not fit vehicles with 4x4 manual transfer case or models equipped with the optional PTO (Power Take Off) Kit</i>
		Front: 442941	<i>Does not fit vehicles with 4x4 manual transfer case or models equipped with the optional PTO (Power Take Off) Kit</i>
		Rear: <sup>4</sup> 440660	

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
 FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
 All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code  
<sup>SP</sup> Non-Standard Pricing  
<sup>0</sup> Front FloorLiner™  
<sup>0A</sup> Luxury Front FloorLiner™  
<sup>0B</sup> Luxury Front FloorLiner™  
<sup>1</sup> Small Rear FloorLiner™  
<sup>2</sup> Medium Rear FloorLiner™  
<sup>2A</sup> Luxury Medium Rear FloorLiner™  
<sup>3</sup> Large Rear FloorLiner™  
<sup>3A</sup> Luxury Large Rear FloorLiner™  
<sup>4</sup> Extra Large Rear FloorLiner™  
<sup>5</sup> Mega Rear FloorLiner™



# Interior Floor Protection

## All-Weather Floor Mats

## Year

## Make / Model

Front	Rear		Chevrolet (continued)
W24		2005 +	Corvette
		2011 +	Cruze
		2010	Equinox
W2	W25	2005 - 2009	Equinox
W165		2011 +	Equinox
	W25	1996 +	Express Van
W39	W20	2006 - 2011	HHR
W3	W20	1994 - 2005	Impala
W31	W50	2006 +	Impala
W2	W25	1990 - 1996	Lumina Minivan
W2	W20	ALL	Lumina Sedan
		2005 +	Luv D-Max
W3	W20	1997 - 2003	Malibu
W2	W20	2004 - 2007	Malibu
W89	W20	2008 - 2012	Malibu
W2	W20	2004 - 2007	Malibu Maxx
W3	W20	1998 - 2001	Metro
W4	W20	1995 - 2007	Monte Carlo
W2	W20	ALL	Nova
		2010 +	Optra Advance
W3	W20	1998 - 2002	Prizm
W12	W20	1982 - 1993	S10 Pickup
W12	W20	1994 - 2004	S10 Pickup
W26	W70	1999 - 2000	Silverado Crew Cab
W26	W70	2001 - 2003	Silverado Crew Cab
W26	W70	2004 - 2007 Classic	Silverado Crew Cab
			<i>Does not fit 2007 new body style</i>
W72	W70	2007 +	Silverado Crew Cab

# Interior Floor Protection



Make / Model	Year	Front FloorLiner™	Rear FloorLiner™
<b>Chevrolet (continued)</b>			
Silverado Extended Cab	1999 - 2007 Classic	Front: 440031	<i>Does not fit 2007 new body style</i>
		Rear: <sup>4</sup> 440622	<i>Long part, extends under rear seat, Does not fit short bed, vehicles with optional tool box, or 2007 new body style</i>
		Rear: <sup>3</sup> 440034	<i>Short part, does not extend under rear seat, Does not fit short bed, or 2007 new body style</i>
Silverado Extended Cab	2007 +	Front: 440661	<i>Does not fit vehicles with 4x4 manual transfer case or models equipped with the optional PTO (Power Take Off) Kit</i>
		Front: 442941	<i>Does not fit vehicles with 4x4 manual transfer case or models equipped with the optional PTO (Power Take Off) Kit</i>
		Rear: <sup>4</sup> 440669	
Silverado Standard Cab	1999 - 2007 Classic	Front: 440281	<i>Does not fit 4x4 manual transfer case or 2007 new body style</i>
Silverado Standard Cab	2007 +	Front: 443431	<i>Does not fit vehicles with 4x4 manual transfer case, does not fit vehicles with vinyl floors or models equipped with the optional PTO (Power Take Off) Kit</i>
		Front: 443711	<i>Does not fit models with floor mounted shifters, Does not fit models with consoles that join with dashboard, does not fit vehicles with vinyl floors or models equipped with the optional PTO (Power Take Off) Kit</i>
Suburban	1980 - 1991		
Suburban	1992 - 1999	Front: 442651 Rear: <sup>2</sup> 442652	
Suburban	2000 - 2006	Front: 440031	
		Rear: <sup>3</sup> 440612	
Suburban	2007 - 2010	Rear: <sup>4</sup> 440665	<i>3rd row, Fits vehicles with 2nd row bucket seats only</i>
Suburban	2007 - 2010	Rear: <sup>4</sup> 440668	<i>3rd row, Fits vehicles with 2nd row bench seat only</i>
Suburban	2007 +	Front: 440661	
		Rear: <sup>2</sup> 440662	<i>2nd row, Requires trim on vehicles with front bench seat</i>
Suburban	2011 +	Rear: <sup>4</sup> 442354	<i>3rd row, Fits vehicles with 2nd row bucket seats only</i>
Tahoe	1995 - 1999	Front: 442651	
Tahoe	2000 - 2006	Front: 440031	
		Rear: <sup>2</sup> 440032	<i>2nd row</i>
		Rear: <sup>1</sup> 440033	<i>3rd row</i>
Tahoe	2007 +	Front: 440661	
		Rear: <sup>2</sup> 440662	<i>2nd row, Requires trim on vehicles with front bench seat, does not fit hybrid models</i>
		Rear: <sup>2</sup> 442352	<i>2nd row, Fits hybrid models</i>
Tahoe	2007-2010	Rear: <sup>1</sup> 440667	<i>Fits in aisle between 2nd row bucket seats</i>
Tahoe	2011 +	Rear: 442353	<i>2nd plus Aisle, does not fit Hybrid or bench models</i>
Tracker	1998 - 2004		
Trailblazer	2002 - 2009	Front: 440071	
		Rear: <sup>3</sup> 440072	<i>Fit vehicles without 3 rows of seating only</i>
Trailblazer EXT	2002 - 2006	Front: 440071	
Traverse	2009 +	Front: 442511	
		Rear: <sup>3</sup> 441112	<i>2nd row with bench seats</i>
		Rear: <sup>4</sup> 441114	<i>Covers 2nd and 3rd row floor spaces for 2nd row buckets</i>

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
 FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
 All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code  
<sup>SP</sup> Non-Standard Pricing  
<sup>0</sup> Front FloorLiner™  
<sup>0A</sup> Luxury Front FloorLiner™  
<sup>0B</sup> Luxury Front FloorLiner™  
<sup>1</sup> Small Rear FloorLiner™  
<sup>2</sup> Medium Rear FloorLiner™  
<sup>2A</sup> Luxury Medium Rear FloorLiner™  
<sup>3</sup> Large Rear FloorLiner™  
<sup>3A</sup> Luxury Large Rear FloorLiner™  
<sup>4</sup> Extra Large Rear FloorLiner™  
<sup>5</sup> Mega Rear FloorLiner™



# Interior Floor Protection

## All-Weather Floor Mats

## Year

## Make / Model

Front	Rear		Chevrolet (continued)
W26 <i>Does not fit 2007 new body style</i>	W70	1999 - 2007 Classic	Silverado Extended Cab
W72	W70	2007 +	Silverado Extended Cab
W26 <i>Does not fit 2007 new body style</i>		1999 - 2007 Classic	Silverado Standard Cab
W72		2007 +	Silverado Standard Cab
W9	W25	1980 - 1991	Suburban
W14	W25	1992 - 1999	Suburban
W26	W180 <i>3rd row, Fits behind 2nd row bucket</i> W179 <i>3rd row, Fits behind 2nd row bench</i> W70 <i>2nd row</i>	2000 - 2006	Suburban
		2007 - 2010	Suburban
		2007 - 2010	Suburban
W72	W70 <i>2nd row</i>	2007 +	Suburban
		2011 +	Suburban
W14	W25	1995 - 1999	Tahoe
W26	W70 <i>2nd row</i>	2000 - 2006	Tahoe
W72	W70 <i>2nd row</i>	2007 +	Tahoe
		2007-2010	Tahoe
		2011 +	Tahoe
W3	W20	1998 - 2004	Tracker
W32	W50	2002 - 2009	Trailblazer
W32	W50	2002 - 2006	Trailblazer EXT
W68	W25 <i>2nd row</i> W60 <i>3rd row</i>	2009 +	Traverse



# Interior Floor Protection



Make / Model

Year

Front FloorLiner™

Rear FloorLiner™

## Chevrolet (continued)

Make / Model	Year	Part #	Notes
Uplander	2005 - 2008		
Venture	1997 - 2004		

## Chrysler

Make / Model	Year	Part #	Notes
200	2011	Front: 443761	
200	2011 +	Rear: 443762	Does not fit the convertible
200	2012 +	Front: 444031	Fits vehicles with 4 retention devices
300/300C	2005 - 2010	Front: 440691 Front: 441631 Rear: <sup>2</sup> 440692	Fits RWD models only Fits AWD models only Two-piece part
300/300C	2005 +		
300/300C	2011 +	Front: 443791 Front: 444251 Rear: <sup>1</sup> 443792	Fits RWD models only Fits AWD models only
300M	1998 - 2004		
Aspen	2007 - 2009	Front: 440081 Rear: <sup>2</sup> 440082	
Cirrus	1995 - 2000		
Concorde	1993 - 2004		
Crossfire	2004 - 2009		
Fifth Avenue	1983 - 1993		
Imperial	1980 - 1993		
Lebaron	1980 - 1995		
LHS	1994 - 2001		
New Yorker	ALL		
Pacifica	2004 - 2009	Front: 440941 Rear: <sup>2</sup> 440942 Rear: <sup>1</sup> 440943	2nd row, Two-piece part 3rd row
PT Cruiser	2001 +	Front: 441931 Rear: <sup>2</sup> 441932	
Sebring	1995 - 2006		
Sebring	2007 +		
Town & Country	1991 - 2000		
Town & Country	2001 - 2007	Front: 443581 Rear: <sup>3</sup> 440272 Rear: <sup>3</sup> 440273	2nd row, fits vehicles with Stow 'N Go seating only 3rd row, fits vehicles with Stow 'N Go seating only
Town & Country	2008 - 2011	Front: 441411	Fits vehicles with no retention hook on the RHS
Town & Country	2008 +	Rear: <sup>2</sup> 441412 Rear: <sup>3</sup> 441413 Rear: <sup>5</sup> 441414	2nd row, fits vehicles with Swivel 'N Go seating only 3rd row, fits vehicles with Swivel 'N Go seating only Covers 2nd and 3rd row floor spaces, fits vehicles with Stow 'N Go seating only
Town & Country	2011 +	Front: 444211	Fits vehicles with 1 retention hook on the LHS and 1 retention hook on the RHS
Voyager	2001 - 2003		
Voyager	2001 - 2007	Rear: <sup>3</sup> 440272 Rear: <sup>3</sup> 440273	Fits vehicles with Stow 'N Go Seating Fits vehicles with Stow 'N Go Seating

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code  
<sup>SP</sup> Non-Standard Pricing  
<sup>0</sup> Front FloorLiner™  
<sup>0A</sup> Luxury Front FloorLiner™  
<sup>0B</sup> Luxury Front FloorLiner™  
<sup>1</sup> Small Rear FloorLiner™  
<sup>2</sup> Medium Rear FloorLiner™  
<sup>2A</sup> Luxury Medium Rear FloorLiner™  
<sup>3</sup> Large Rear FloorLiner™  
<sup>3A</sup> Luxury Large Rear FloorLiner™  
<sup>4</sup> Extra Large Rear FloorLiner™  
<sup>5</sup> Mega Rear FloorLiner™



# Interior Floor Protection

All-Weather Floor Mats		Year	Make / Model
Front	Rear		Chevrolet (continued)
W40	W25	2005 - 2008	Uplander
W18	W25	1997 - 2004	Venture
<i>Fits vehicles without video system</i>			
W2			
<i>Fits vehicles with video system</i>			
			<b>Chrysler</b>
		2011	200
		2011 +	200
		2012 +	200
		2005 - 2010	300/300C
W69	W20	2005 +	300/300C
		2011 +	300/300C
W2	W20	1998 - 2004	300M
W3	W20	2007 - 2009	Aspen
W2	W20	1995 - 2000	Cirrus
W2	W20	1993 - 2004	Concorde
W3		2004 - 2009	Crossfire
W3	W20	1983 - 1993	Fifth Avenue
W3	W20	1980 - 1993	Imperial
W2	W20	1980 - 1995	Lebaron
W2	W20	1994 - 2001	LHS
W2	W20	ALL	New Yorker
W40	W20	2004 - 2009	Pacifica
W3	W20	2001 +	PT Cruiser
W2	W20	1995 - 2006	Sebring
W43	W50	2007 +	Sebring
W16	W25	1991 - 2000	Town & Country
<i>Fits vehicles without video system</i>			
W2			
<i>Fits vehicles with video system</i>			
W16	W25	2001 - 2007	Town & Country
<i>Fits vehicles without video system only</i>			
W2			
<i>Fits vehicles with video system only</i>			
		2008 - 2011	Town & Country
W82	W25	2008 +	Town & Country
		2011 +	Town & Country
W16	W25	2001 - 2003	Voyager
<i>Fits vehicles without video system</i>			
W2			
<i>Fits vehicles with video system</i>			
		2001 - 2007	Voyager



# Interior Floor Protection



Make / Model	Year	Front FloorLiner™	Rear FloorLiner™
<b>Daewoo</b>			
Lanos	1999 - 2002		
Leganza	1999 - 2002		
Nubira	1999 - 2002		
<b>Daihatsu</b>			
Terios	2006 +	Front: 441911 Rear: <sup>2</sup> 441912	
<b>Dodge</b>			
Avenger	1995 - 2000		
Avenger	2007 +		
Avenger	2012 +	Front: 444031 Rear: 443762	<i>Fits vehicles with 4 retention devices</i>
Caliber	2007 +	Front: 440861 Rear: <sup>1</sup> 440862	<i>Two-piece part</i>
Caravan	1984 - 1990		
Caravan	1991 - 1995		
Caravan	1996 - 2000		
Caravan	2001 - 2007	Front: 443581	<i>Fits vehicles without video system only</i>
Challenger	2008 - 2010	Front: 442221 Rear: <sup>1</sup> 442222	<i>Two-piece part</i>
Challenger	2011 +	Front: 443861 Rear: 443862	
Charger	2006 - 2010	Front: 440691 Front: 441631 Rear: <sup>2</sup> 440692	<i>Fits RWD models only</i> <i>Fits AWD models only</i> <i>Two-piece part</i>
Charger	2006 +		
Charger	2011 +	Front: 443791 Front: 444251 Rear: <sup>1</sup> 443792	<i>Fits RWD models only</i> <i>Fits AWD models only</i>
Colt	1980 - 1995		
Dakota	1987 - 1996		
Dakota	1997 - 2004		
Dakota Crew / Quad Cab	2000 - 2004		
Dakota Crew / Quad Cab	2005 +	Front: 440251 Rear: <sup>2</sup> 440252	
Dakota Extended / Club Cab	2005 +	Front: 440251	
Daytona	1984 - 1993		
Durango	1998 - 2000		
Durango	2001 - 2003	Front: 440811 Rear: <sup>3</sup> 440812 Rear: <sup>1</sup> 440813	<i>2nd row</i> <i>3rd row</i>
Durango	2004 - 2009	Front: 440081 Rear: <sup>2</sup> 440082	
Durango	2004 +		
Durango	2011 +	Rear: <sup>2</sup> 443242	<i>2nd row</i>
Dynasty	1988 - 1993		
Grand Caravan	1984 - 1990		
Grand Caravan	1991 - 1995		

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
 FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
 All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code  
<sup>SP</sup> Non-Standard Pricing  
<sup>0</sup> Front FloorLiner™  
<sup>0A</sup> Luxury Front FloorLiner™  
<sup>0B</sup> Luxury Front FloorLiner™  
<sup>1</sup> Small Rear FloorLiner™  
<sup>2</sup> Medium Rear FloorLiner™  
<sup>2A</sup> Luxury Medium Rear FloorLiner™  
<sup>3</sup> Large Rear FloorLiner™  
<sup>3A</sup> Luxury Large Rear FloorLiner™  
<sup>4</sup> Extra Large Rear FloorLiner™  
<sup>5</sup> Mega Rear FloorLiner™



# Interior Floor Protection

All-Weather Floor Mats		Year	Make / Model
Front	Rear		Daewoo
W3	W20	1999 - 2002	Lanos
W3	W20	1999 - 2002	Leganza
W2	W20	1999 - 2002	Nubira
			<b>Daihatsu</b>
			Terios
			<b>Dodge</b>
W2	W20	1995 - 2000	Avenger
W43	W50	2007 +	Avenger
		2012 +	Avenger
W43	W20	2007 +	Caliber
W2	W25	1984 - 1990	Caravan
W2	W25	1991 - 1995	Caravan
W2	W25	1996 - 2000	Caravan
<i>Fits vehicles with video system</i>			
W16			
<i>Fits vehicles without video system</i>			
W16	W25	2001 - 2007	Caravan
<i>Fits vehicles without video system</i>			
W2			
<i>Fits vehicles with video system</i>			
		2008 - 2010	Challenger
		2011 +	Challenger
		2006 - 2010	Charger
W69	W20	2006 +	Charger
		2011 +	Charger
W3	W20	1980 - 1995	Colt
W3	W20	1987 - 1996	Dakota
W39	W20	1997 - 2004	Dakota
W21	W20	2000 - 2004	Dakota Crew / Quad Cab
W3	W20	2005 +	Dakota Crew / Quad Cab
W3	W20	2005 +	Dakota Extended / Club Cab
W3	W20	1984 - 1993	Daytona
W39	W20	1998 - 2000	Durango
W39	W20	2001 - 2003	Durango
		2004 - 2009	Durango
W3	W20	2004 +	Durango
		2011 +	Durango
W2	W20	1988 - 1993	Dynasty
W2	W25	1984 - 1990	Grand Caravan
W2	W25	1991 - 1995	Grand Caravan



# Interior Floor Protection



Make / Model	Year	Front FloorLiner™	Rear FloorLiner™
Dodge (continued)		Part #	Notes
Grand Caravan	1996 - 2000		
Grand Caravan	2001 - 2007	Front: 440271 Rear: <sup>3</sup> 440272 Rear: <sup>3</sup> 440273	2nd row, fits vehicles with Stow 'N Go seating only 3rd row, fits vehicles with Stow 'N Go seating only
Grand Caravan	2008 - 2011	Front: 441411 Rear: <sup>2</sup> 441412 Rear: <sup>3</sup> 441413 Rear: <sup>5</sup> 441414	Fits vehicles with no retention hook on the RHS 2nd row, fits vehicles with Swivel 'N Go seating only 3rd row, fits vehicles with Swivel 'N Go seating only Covers 2nd and 3rd row floor spaces, fits vehicles with Stow n Go seating only
Grand Caravan	2012 +	Front: 444211	Fits vehicles with 1 retention hook on the LHS and 1 retention hook on the RHS
Intrepid	1993 - 2004		
Journey	2009 +	Front: 442241 Rear: <sup>3</sup> 442242 Rear: <sup>2</sup> 442243	Fits vehicles with one hook style retention device on the LHS 2nd row 3rd row
Journey	2011 +	Front: 443771	Fits vehicles with two hook style retention devices on the LHS
Magnum	2005 - 2008	Front: 440691 Front: 441631 Rear: <sup>2</sup> 440692	Fits RWD models only Fits AWD models only Two-piece part
Monaco	1992 & Older		
Neon / SRT4	1995 - 2005		
Nitro	2007 +	Front: 441041 Front: 443221 Rear: <sup>2</sup> 441042	Fits vehicles with no retention hook on passenger side Fits vehicles with retention hooks on both left and right front floors
Omni	1978 - 1990		
Ram	1993 & Older		
Ram	1994 - 2001		
Ram 1500	2002 - 2008	Front: 440121 Front: 440041 Rear: <sup>3</sup> 440122 Rear: <sup>3</sup> 440123	Fits 4WD trucks Fits 2WD trucks Fits 2WD and 4WD Quad Cab Fits Mega Cab, models with executive console require trim
Ram 1500	2009 +	Front: 442161 Front: 442381 Rear: <sup>5</sup> 442163 Rear: <sup>5</sup> 442162	Fits Crew Cab with 1 hook retention device on the driver side floor Fits the Regular Cab and Quad Cab with 1 hook retention device on the driver side floor Fits Crew Cab Fits Quad Cab
Ram 1500	2010 +	Front: 443281	Over the hump coverage, does not fit vehicles with consoles that extend to the dashboard or have manual floor shifters
Ram 2500/3500	2002		
Ram 2500/3500	2003 - 2009	Front: 440041 Front: 440121 Rear: <sup>3</sup> 440122	Fits 2WD trucks Fits 4WD trucks Fits 2WD and 4WD Quad Cab

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code  
<sup>SP</sup> Non-Standard Pricing  
<sup>0</sup> Front FloorLiner™  
<sup>0A</sup> Luxury Front FloorLiner™  
<sup>0B</sup> Luxury Front FloorLiner™  
<sup>1</sup> Small Rear FloorLiner™  
<sup>2</sup> Medium Rear FloorLiner™  
<sup>2A</sup> Luxury Medium Rear FloorLiner™  
<sup>3</sup> Large Rear FloorLiner™  
<sup>3A</sup> Luxury Large Rear FloorLiner™  
<sup>4</sup> Extra Large Rear FloorLiner™  
<sup>5</sup> Mega Rear FloorLiner™



# Interior Floor Protection

All-Weather Floor Mats		Year	Make / Model
Front	Rear		Dodge (continued)
W16 <i>Fits vehicles without video system</i>	W25	1996 - 2000	Grand Caravan
W2 <i>Fits vehicles with video system</i>			
W16 <i>Fits vehicles without video system</i>	W25	2001 - 2007	Grand Caravan
W2 <i>Fits vehicles with video system</i>			
W82	W25	2008 - 2011	Grand Caravan
		2012 +	Grand Caravan
W2	W20	1993 - 2004	Intrepid
		2009 +	Journey
		2011 +	Journey
W69	W20	2005 - 2008	Magnum
W2	W20	1992 & Older	Monaco
W3	W20	1995 - 2005	Neon / SRT4
W10	W50	2007 +	Nitro
W3	W20	1978 - 1990	Omni
W9	W25	1993 & Older	Ram
W54	W25	1994 - 2001	Ram
W54 <i>Fits vehicles with 1 hook retention device on the driver side floor</i>	W70	2002 - 2008	Ram 1500
W54 <i>Fits vehicles with 1 hook retention device on the driver side floor</i>	W70	2009 +	Ram 1500
	2010 +	Ram 1500	
W54 <i>Fits vehicles with 1 hook retention device on the driver side floor</i>	W25	2002	Ram 2500/3500
W54 <i>Fits vehicles with 1 hook retention device on the driver side floor</i>	W70	2003 - 2009	Ram 2500/3500

# Interior Floor Protection



Make / Model	Year	Front FloorLiner™	Rear FloorLiner™
<b>Dodge (continued)</b>			
Ram 2500/3500	2003 - 2010	Rear: <sup>3</sup> 440123	<i>Fits Mega Cab, Models with executive console option require trim</i>
Ram 2500/3500	2010 +	Front: 442161	<i>Crew Cab, Mega Cab with 1 hook retention device on the driver side floor</i>
		Front: 442381	<i>Regular Cab with 1 hook retention device on the driver side floor</i>
		Rear: <sup>5</sup> 442163	<i>Crew Cab</i>
Ram 50	ALL		
Ram Van	1976 - 2003		
Ramcharger	ALL		
Shadow	1987 - 1993		
Spirit	1989 - 1995		
Sprinter	2007 +	Front: <sup>0B</sup> 442491	<i>Does not fit the passenger van</i>
		Rear: <sup>1</sup> 442492	<i>1st row center isle piece</i>
Stealth	1991 - 1996		
Stratus	1995 - 2000		
Stratus	2001 - 2007		
Vista	ALL		
<b>Eagle</b>			
Premier	ALL		
Summit	ALL		
Talon	ALL		
Vision	1993 - 1997		
<b>Ferrari</b>			
458 Italia	2010+	Front: 443321	
599 GTB	2008 +	Front: <sup>SP</sup> 441851	<i>Specify whether optional fire bottle is present in passenger floor when ordering</i>
California	2010 +	Front: <sup>SP</sup> 442721	
F360	1999 - 2005	Front: <sup>SP</sup> 442001	
F430	2004 +	Front: <sup>SP</sup> 441991	
<b>Fiat</b>			
500	2011 +	Front: 443691	
		Rear: 443522	
<b>Ford</b>			
Aerostar	1989 - 1997		
Aspire	1994 - 1997		
Bronco Full Size	1988 - 1996		
Bronco II	ALL		
Contour	1995 - 2000		
Crown Victoria	1991 & Older		
Crown Victoria	1992 +		
Econoline / E-Series	1992 - 1996		
Econoline / E-Series	1997 +		
EcoSport	2004 +	Front: 441021	
		Rear: <sup>1</sup> 441022	
Edge	2007 +	Front: 441101	
		Rear: <sup>2</sup> 441102	
Edge	2011 +	Front: 443491	<i>Fits vehicles with two retention knobs, not hooks, on the driver's side floor</i>
Escape	2008	Front: 441191	<i>Fits hybrid</i>
		Rear: <sup>2</sup> 441192	<i>Fits hybrid</i>
Escape	2001 - 2004		
Escape	2005 - 2007	Front: 440181	<i>Fits hybrid</i>
		Rear: <sup>2</sup> 440182	<i>Fits hybrid</i>
Escape	2008 +		

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
 FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
 All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code  
<sup>SP</sup> Non-Standard Pricing  
<sup>0</sup> Front FloorLiner™  
<sup>0A</sup> Luxury Front FloorLiner™  
<sup>0B</sup> Luxury Front FloorLiner™  
<sup>1</sup> Small Rear FloorLiner™  
<sup>2</sup> Medium Rear FloorLiner™  
<sup>2A</sup> Luxury Medium Rear FloorLiner™  
<sup>3</sup> Large Rear FloorLiner™  
<sup>3A</sup> Luxury Large Rear FloorLiner™  
<sup>4</sup> Extra Large Rear FloorLiner™  
<sup>5</sup> Mega Rear FloorLiner™



# Interior Floor Protection

All-Weather Floor Mats		Year	Make / Model
Front	Rear		Dodge (continued)
		2003 - 2010	Ram 2500/3500
W54	W70	2010 +	Ram 2500/3500
W2	W25	ALL	Ram 50
	W25	1976 - 2003	Ram Van
W9	W25	ALL	Ramcharger
W2	W20	1987 - 1993	Shadow
W2	W20	1989 - 1995	Spirit
		2007 +	Sprinter
W2	W20	1991 - 1996	Stealth
W2	W20	1995 - 2000	Stratus
W2	W20	2001 - 2007	Stratus
W3	W5	ALL	Vista
<b>Eagle</b>			
W4	W20	ALL	Premier
W3	W20	ALL	Summit
W3	W20	ALL	Talon
W2	W20	1993 - 1997	Vision
<b>Ferrari</b>			
		2010+	458 Italia
		2008 +	599 GTB
<b>Ford</b>			
		2010 +	California
		1999 - 2005	F360
		2004 +	F430
<b>Fiat</b>			
		2011 +	500
<b>Ford</b>			
W3	W25	1989 - 1997	Aerostar
W3	W20	1994 - 1997	Aspire
	W25	1988 - 1996	Bronco Full Size
W3	W20	ALL	Bronco II
W3	W20	1995 - 2000	Contour
W2		1991 & Older	Crown Victoria
W9	W20	1992 +	Crown Victoria
	W25	1992 - 1996	Econoline / E-Series
W51	W25	1997 +	Econoline / E-Series
		2004 +	EcoSport
W186	W25	2007 +	Edge
		2011 +	Edge
W177		2008	Escape
W4	W20	2001 - 2004	Escape
W71	W20	2005 - 2007	Escape
	W185	2008 +	Escape



# Interior Floor Protection



Make / Model	Year	Front FloorLiner™	Rear FloorLiner™
<b>Ford (continued)</b>			
Escape	2009 +	Front: 443031	
		Front: 443541	<i>Fits vehicles with two retention knobs, not hooks, on the driver's side floor</i>
Escort	1981 - 1990		
Escort	1991 - 2003		
Excursion	2000 - 2005	Front: 440021	
Expedition	1997 - 2002	Front: 440821 Rear: <sup>3</sup> 440822	
Expedition	2003 - 2006	Front: 440291 Rear: <sup>2</sup> 440292	
Expedition	2007 - 2010	Front: 441071	
Expedition	2007 +	Rear: <sup>3</sup> 441072	<i>2nd row</i>
		Rear: <sup>4</sup> 441074	<i>3rd row, fits vehicles with 2nd row bench seat and vehicles with 2nd row buckets with 2nd row center console</i>
		Rear: <sup>4</sup> 441076	<i>3rd row, fits vehicles with 2nd row bucket seats without 2nd row center console</i>
Expedition	2011 +	Front: 443531	<i>Fits vehicles with 2 retention post on the driver's side floor</i>
Expedition EL	2007 - 2010		
Expedition EL	2007 +	Front: 441071	
		Rear: <sup>3</sup> 441072	<i>2nd row</i>
		Rear: <sup>4</sup> 441073	<i>3rd row, Fits vehicles with 2nd row bench seat and vehicles with 2nd row buckets with 2nd row center console</i>
		Rear: <sup>4</sup> 441075	<i>3rd row, Fits vehicles with 2nd row bucket seats without 2nd row center console</i>
Expedition EL	2011 +	Front: 443531	<i>Fits vehicles with 2 retention posts on driver's side floor</i>
Explorer	1991 - 2001		
Explorer	2002 - 2005	Front: 440061	<i>Does not fit Sport or Sport Trac models</i>
		Rear: <sup>2</sup> 440062	
Explorer	2006 - 2010	Front: 440431	
		Rear: <sup>2</sup> 440432	<i>2nd row, Fits vehicles with 2nd row bench or 2nd row bucket seats and middle console</i>
		Rear: <sup>1</sup> 440433	<i>3rd row, Fits vehicles with 2nd row bucket seats, does not fit vehicles with 2nd row center console</i>
Explorer	2011 +	Front: 443591	
		Rear: 443592	<i>2nd row, Fits vehicles with 2nd row bench and 2nd row buckets without console</i>
		Rear: 443593	<i>3rd row</i>
		Rear: <sup>3</sup> 443594	<i>2nd row, Fits vehicles equipped with optional 2nd row center console</i>
Explorer Sport Trac	2001 - 2005		
Explorer Sport Trac	2007 - 2010		
F150 Regular Cab	1997 - 2003		
F150 Regular Cab	2004 - 2008	Front: 440051	<i>Does not fit Heritage models</i>

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
 FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
 All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code  
<sup>SP</sup> Non-Standard Pricing  
<sup>0</sup> Front FloorLiner™  
<sup>0A</sup> Luxury Front FloorLiner™  
<sup>0B</sup> Luxury Front FloorLiner™  
<sup>1</sup> Small Rear FloorLiner™  
<sup>2</sup> Medium Rear FloorLiner™  
<sup>2A</sup> Luxury Medium Rear FloorLiner™  
<sup>3</sup> Large Rear FloorLiner™  
<sup>3A</sup> Luxury Large Rear FloorLiner™  
<sup>4</sup> Extra Large Rear FloorLiner™  
<sup>5</sup> Mega Rear FloorLiner™



# Interior Floor Protection

All-Weather Floor Mats		Year	Make / Model
Front	Rear		Ford (continued)
W177 W235 <i>Fits vehicles with two retention knobs, not hooks, on the driver's side floor</i>		2009 +	Escape
W3	W20	1981 - 1990	Escort
W2	W20	1991 - 2003	Escort
W19	W25	2000 - 2005	Excursion
W9	W25	1997 - 2002	Expedition
W38	W25	2003 - 2006	Expedition
W38		2007 - 2010	Expedition
	W185	2007 +	Expedition
W241 <i>Fits vehicles with 2 retention post on the driver's side floor</i>		2011 +	Expedition
W38		2007 - 2010	Expedition EL
	W185	2007 +	Expedition EL
W241 <i>Fits vehicles with 2 retention post on the driver's side floor</i>		2011 +	Expedition EL
W11	W20	1991 - 2001	Explorer
W30	W70	2002 - 2005	Explorer
W30	W70	2006 - 2010	Explorer
W230	W231 <i>2nd row, Fits all vehicle applications</i> W232 <i>3rd row, Fits all vehicle applications</i>	2011 +	Explorer
W11	W50	2001 - 2005	Explorer Sport Trac
W30	W50	2007 - 2010	Explorer Sport Trac
W9		1997 - 2003	F150 Regular Cab
W42		2004 - 2008	F150 Regular Cab



# Interior Floor Protection



Make / Model	Year	Front FloorLiner™	Rear FloorLiner™
Ford (continued)		Part #	Notes
F150 Regular Cab	2009 +	Front: 441791	<i>Does not fit models with manual 4x4 transfer case</i>
		Front: 442951	<i>Over the hump, fits vehicle with two retention posts on the driver's side floor, Does not fit vehicle with center console</i>
		Front: 443341	<i>Fits vehicles with two retention posts (not hooks) on the driver's side</i>
		Front: 444091	<i>Over the hump, fits vehicle with two retention posts on the driver's side floor, fits models with non flow through center console</i>
F150 Super Cab (Extended Cab)	1997 - 2004 Heritage	Front: 440481	
F150 Super Cab (Extended Cab)	2000 - 2004 Heritage	Rear: <sup>3</sup> 440482	
F150 Super Cab (Extended Cab)	2004 - 2008	Front: 440051 Rear: <sup>4</sup> 440053	<i>Does not fit Heritage models</i>
F150 Super Cab (Extended Cab)	2009 +	Front: 441791	<i>Does not fit models with manual 4x4 transfer case</i>
		Front: 442951	<i>Over the hump, fits vehicle with two retention posts on the driver's side floor, Does not fit vehicle with center console</i>
		Front: 443341	<i>Fits vehicles with two retention posts (not hooks) on the driver's side</i>
		Front: 444091	<i>Over the hump, fits vehicle with two retention posts on the driver's side floor, fits models with non flow through center console</i>
		Rear: <sup>5</sup> 441792	<i>Does not fit bucket seat models with flow through console</i>
		Rear: <sup>5</sup> 441794	<i>Fits vehicles with flow through console</i>
F150 Super Crew	2001 - 2003	Front: 440821	
F150 Super Crew	2004 - 2008	Front: 440051 Rear: <sup>3</sup> 440052	<i>Does not fit Heritage models</i> <i>Does not fit Heritage models</i>
F150 Super Crew	2009 +	Front: 441791	<i>Does not fit models with manual 4x4 transfer case</i>
		Front: 442951	<i>Over the hump, fits vehicle with two retention posts on the driver's side floor, Does not fit vehicle with center console</i>
		Front: 443341	<i>Fits vehicles with two retention posts (not hooks) on the driver's side</i>
		Front: 444091	<i>Over the hump, fits vehicle with two retention posts on the driver's side floor, fits models with non flow through center console</i>
		Rear: <sup>5</sup> 441793	
F150/F250/F350/F Super Duty	1988 - 1996		
F250 Light Duty	1997 - 2003		
F250/F350 Heavy Duty	1997 - 1998		
F250/F350/F450 Super Duty Regular Cab	2011	Front: 443211	<i>Does not fit manual 4X4 transfer case</i>
F250/F350/F450 Super Duty Regular Cab	1999 - 2007	Front: 440021	<i>Does not fit manual 4X4 transfer case</i>
		Front: 441251	<i>Fits manual 4X4 transfer case only</i>
F250/F350/F450 Super Duty Regular Cab	2008 - 2010	Front: 441201	<i>Does not fit manual 4X4 transfer case</i>
		Front: 441261	<i>Fits manual 4X4 transfer case only</i>
F250/F350/F450 Super Duty Regular Cab	2011 +	Front: 444221	<i>Fits manual 4X4 transfer case only</i>
F250/F350/F450 Super Duty Super Cab (Ext Cab) 2011		Front: 443051	<i>Does not fit manual 4X4 transfer case</i>
		Front: 443291	<i>Over the hump FloorLiner. Does not fit models with floor shifters or flow through consoles</i>
F250/F350/F450 Super Duty Super Cab (Ext Cab) 1999 - 2007		Front: 440021	<i>Does not fit manual 4X4 transfer case</i>
		Front: 441251	<i>Fits 4X4 Manual transfer case only</i>
		Rear: <sup>3</sup> 440023	

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
 FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
 All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code  
<sup>SP</sup> Non-Standard Pricing  
<sup>0</sup> Front FloorLiner™  
<sup>0A</sup> Luxury Front FloorLiner™  
<sup>0B</sup> Luxury Front FloorLiner™  
<sup>1</sup> Small Rear FloorLiner™  
<sup>2</sup> Medium Rear FloorLiner™  
<sup>2A</sup> Luxury Medium Rear FloorLiner™  
<sup>3</sup> Large Rear FloorLiner™  
<sup>3A</sup> Luxury Large Rear FloorLiner™  
<sup>4</sup> Extra Large Rear FloorLiner™  
<sup>5</sup> Mega Rear FloorLiner™



# Interior Floor Protection

## All-Weather Floor Mats

## Year

## Make / Model

Front	Rear		
W137 <i>Fits vehicles with two retention posts (not hooks) on the driver's side</i>	W239	2009 +	<b>Ford (continued)</b> F150 Regular Cab
W9	W25	1997 - 2004 Heritage 2000 - 2004 Heritage	F150 Super Cab (Extended Cab) F150 Super Cab (Extended Cab)
W42	W25	2004 - 2008	F150 Super Cab (Extended Cab)
W137 W239 <i>Fits vehicles with two retention posts (not hooks) on the driver's side</i>	W139	2009 +	F150 Super Cab (Extended Cab)
W9	W25	2001 - 2003	F150 Super Crew
W42	W25	2004 - 2008	F150 Super Crew
W137 W239 <i>Fits vehicles with two retention posts (not hooks) on the driver's side</i>	W25	2009 +	F150 Super Crew
W9	W25	1988 - 1996 1997 - 2003	F150/F250/F350/F Super Duty F250 Light Duty
W19	W25	1997 - 1998 2011	F250/F350 Heavy Duty F250/F350/F450 Super Duty Regular Cab
W19	W25	1999 - 2007	F250/F350/F450 Super Duty Regular Cab
W19	W25	2008 - 2010	F250/F350/F450 Super Duty Regular Cab
W203	W25	2011 + 2011	F250/F350/F450 Super Duty Regular Cab F250/F350/F450 Super Duty Super Cab (Ext Cab)
W19	W25	1999 - 2007	F250/F350/F450 Super Duty Super Cab (Ext Cab)





# Interior Floor Protection



Make / Model	Year	Front FloorLiner™	Rear FloorLiner™
<b>Ford (continued)</b>			
F250/F350/F450 Super Duty Super Cab (Ext Cab) 2008 - 2010		Front: 442931 Front: 441261 Rear: <sup>3</sup> 440023	<i>Over the hump FloorLiner. Does not fit models with floor shifters or flow through consoles Fits 4X4 Manual transfer case only</i>
F250/F350/F450 Super Duty Super Cab (Ext Cab) 2011 +		Front: 444261 Rear: <sup>4</sup> 443053	<i>Fits manual 4X4 transfer case only</i>
F250/F350/F450 Super Duty Super Cab (Ext Cab) 2012 +		Front: 444331	<i>Fits models with footrest in forward left corner of the driver side floor space, Does not fit manual 4X4 transfer case</i>
F250/F350/F450 Super Duty Super Crew	2011	Front: 443051 Front: 443291	<i>Does not fit manual 4X4 transfer case Over the hump FloorLiner. Does not fit models with floor shifters or flow through consoles</i>
F250/F350/F450 Super Duty Super Crew	1999 - 2007	Front: 440021 Front: 441251 Rear: <sup>2</sup> 440022	<i>Does not fit manual 4X4 transfer case Fits 4X4 Manual transfer case only</i>
F250/F350/F450 Super Duty Super Crew	2008 - 2010	Front: 441201 Front: 441261 Front: 442931 Rear: <sup>2</sup> 440022	<i>Does not fit manual 4X4 transfer case Fits 4X4 Manual transfer case only Over the hump FloorLiner. Does not fit models with floor shifters or flow through consoles</i>
F250/F350/F450 Super Duty Super Crew	2011 +	Front: 444261 Rear: <sup>4</sup> 443052	<i>Fits manual 4X4 transfer case only</i>
F250/F350/F450 Super Duty Super Crew	2012 +	Front: 444331	<i>Fits models with footrest in forward left corner of the driver side floor space, does not fit manual 4X4 transfer case</i>
Festiva	1988 - 1993		
Fiesta	2008 +	Front: 443971	
Fiesta	2011 +	Front: 443231 Rear: <sup>2</sup> 443232	
Five Hundred	2005 - 2007	Front: 440311 Rear: <sup>2</sup> 440312	
Flex	2009 +	Front: 442081 Front: 443121 Rear: <sup>1</sup> 442083 Rear: <sup>3</sup> 442082	<i>Fits vehicles with two posts (not hooks) on driver's side 3rd row Trim indicated for vehicles with optional refrigerator</i>
Focus / Focus SVT	2000 - 2007		
Focus / Focus SVT	2008 - 2011	Front: 441901 Rear: <sup>1</sup> 441902	<i>Two-piece part</i>
Focus / Focus SVT	2010 - 2011	Front: 443011	<i>Fits vehicles with two retention posts on drivers side</i>
Focus / Focus SVT	2012 +	Front: 440751 Rear: 440752	
Freestar	2004 - 2008		
Freestyle	2005 - 2007	Front: 440311 Rear: <sup>2</sup> 440312 Rear: <sup>1</sup> 440313	<i>2nd row 3rd row</i>
Fusion	2006 - 2009	Front: 441081 Rear: <sup>2</sup> 441082	<i>Does not fit AWD models</i>
Fusion	2010 +	Front: 442431 Front: 442991 Rear: <sup>2</sup> 441082	<i>Fits vehicles with two retention knobs, not hooks, on the driver's side floor Does not fit AWD models</i>
Mustang	2004 & Older		

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code  
<sup>SP</sup> Non-Standard Pricing  
<sup>0</sup> Front FloorLiner™  
<sup>0A</sup> Luxury Front FloorLiner™  
<sup>0B</sup> Luxury Front FloorLiner™  
<sup>1</sup> Small Rear FloorLiner™  
<sup>2</sup> Medium Rear FloorLiner™  
<sup>2A</sup> Luxury Medium Rear FloorLiner™  
<sup>3</sup> Large Rear FloorLiner™  
<sup>3A</sup> Luxury Large Rear FloorLiner™  
<sup>4</sup> Extra Large Rear FloorLiner™  
<sup>5</sup> Mega Rear FloorLiner™



# Interior Floor Protection

All-Weather Floor Mats		Year	Make / Model
Front	Rear		Ford (continued)
W19	W206	2008 - 2010	F250/F350/F450 Super Duty Super Cab (Ext Cab)
W203	W206	2011 +	F250/F350/F450 Super Duty Super Cab (Ext Cab)
		2012 +	F250/F350/F450 Super Duty Super Cab (Ext Cab)
		2011	F250/F350/F450 Super Duty Super Crew
W19	W25	1999 - 2007	F250/F350/F450 Super Duty Super Crew
W19	W207	2008 - 2010	F250/F350/F450 Super Duty Super Crew
W203	W207	2011 +	F250/F350/F450 Super Duty Super Crew
		2012 +	F250/F350/F450 Super Duty Super Crew
W3	W20	1988 - 1993	Fiesta
		2008 +	Fiesta
W240	W146	2011 +	Fiesta
	W50	2005 - 2007	Five Hundred
W187 <i>Fits models with one retention hook on driver's side</i>	W231 <i>2nd row</i>	2009 +	Flex
W237 <i>Fits vehicles with two posts (not hooks) on driver's side</i>	W232 <i>3rd row</i>		
W3	W20	2000 - 2007	Focus / Focus SVT
W98	W210	2008 - 2011	Focus / Focus SVT
W233 <i>Fits vehicles with two retention posts (not hooks) on drivers side</i>		2010 - 2011	Focus / Focus SVT
		2012 +	Focus / Focus SVT
W40	W25	2004 - 2008	Freestar
	W20	2005 - 2007	Freestyle
W97	W256	2006 - 2009	Fusion
W234 <i>Fits vehicles with two retention knobs, not hooks, on the driver's side floor</i>	W256	2010 +	Fusion
W97			
W3	W20	2004 & Older	Mustang

# Interior Floor Protection



Make / Model	Year	Front FloorLiner™	Rear FloorLiner™
<b>Ford (continued)</b>			
Mustang	2005 - 2009	Front: 441391 Rear: <sup>1</sup> 441392	<i>Fits vehicles with one retention hook on drivers side</i>
Mustang	2010 +	Front: 442761 Front: 443481 Rear: <sup>1</sup> 441392	<i>Fits vehicles with two retention hooks on driver's side</i> <i>Fits vehicles with two retention posts on driver's side</i>
Probe	1989 - 1992		
Probe	1993 - 1997		
Ranger	2011	Front: 443701	<i>Fits vehicles with two retention knobs, not hooks, on the driver's side floor</i>
Ranger	1983 - 1992		
Ranger	1993 - 2003		
Ranger	2004 - 2010	Front: 440241	
Ranger	2004 - 2011		
Taurus	1988 - 1995		
Taurus	1996 - 2006		
Taurus	2008 - 2009	Front: 440311 Rear: <sup>2</sup> 440312	
Taurus	2010 +	Front: 442701 Front: 443021 Rear: <sup>2</sup> 442702	<i>Fits vehicles with two retention hooks on driver's side</i> <i>Fits vehicles with two retention knobs on driver's side</i>
Taurus X	2008 - 2009	Front: 440311 Rear: <sup>2</sup> 440312 Rear: <sup>1</sup> 440313	<i>2nd row</i> <i>3rd row</i>
Tempo	1984 - 1994		
Thunderbird	ALL		
Transit Connect	2009 +	Front: 443681	
Windstar	1995 - 2003		
ZX2	1998 - 2003		
<b>Geo</b>			
Metro	1989 - 1997		
Prizm	1989 - 1997		
Storm	ALL		
Tracker	1989 - 1997		
<b>GMC</b>			
Acadia	2007	Front: 441111 Rear: <sup>3</sup> 441112 Rear: <sup>4</sup> 441114	<i>Fits vehicles with 2nd row bench seats</i> <i>Covers 2nd and 3rd row floor spaces</i>
Acadia	2008 +	Front: 442511 Rear: <sup>3</sup> 441112 Rear: <sup>4</sup> 441114	<i>Fits vehicles with 2nd row bench seats</i> <i>Covers 2nd and 3rd row floor spaces</i>
Canyon Crew Cab	2004 +	Front: 440091 Rear: <sup>2</sup> 440092	<i>Does not fit vehicles with manual transmission</i>
Canyon Extended Cab	2004 +	Front: 440761 Rear: <sup>2</sup> 440762	<i>Does not fit vehicles with manual transmission</i>
Canyon Regular Cab	2004 +		
Envoy / Envoy Denali	1998 - 2001		
Envoy / Envoy Denali	2002 - 2009	Front: 440071 Rear: <sup>3</sup> 440072	<i>2nd row fits vehicles without 3rd row of seating only</i>
Envoy XL / Envoy XL Denali	2002 - 2006	Front: 440071	
Envoy XUV	2004 - 2005	Front: 440071	
Jimmy S15	1984 - 1994		

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
 FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
 All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code  
<sup>SP</sup> Non-Standard Pricing  
<sup>0</sup> Front FloorLiner™  
<sup>0A</sup> Luxury Front FloorLiner™  
<sup>0B</sup> Luxury Front FloorLiner™  
<sup>1</sup> Small Rear FloorLiner™  
<sup>2</sup> Medium Rear FloorLiner™  
<sup>2A</sup> Luxury Medium Rear FloorLiner™  
<sup>3</sup> Large Rear FloorLiner™  
<sup>3A</sup> Luxury Large Rear FloorLiner™  
<sup>4</sup> Extra Large Rear FloorLiner™  
<sup>5</sup> Mega Rear FloorLiner™



# Interior Floor Protection

All-Weather Floor Mats		Year	Make / Model
Front	Rear		Ford (continued)
W39	W50	2005 - 2009	Mustang
W178		2010 +	Mustang
<i>Fits vehicles with two retention hooks on driver's side</i>			
W3	W20	1989 - 1992	Probe
W34	W20	1993 - 1997	Probe
		2011	Ranger
W3	W20	1983 - 1992	Ranger
W11	W20	1993 - 2003	Ranger
		2004 - 2010	Ranger
W11	W20	2004 - 2011	Ranger
W3	W20	1988 - 1995	Taurus
W2	W20	1996 - 2006	Taurus
	W20	2008 - 2009	Taurus
W167		2010 +	Taurus
W238			
<i>Fits vehicles with two retention knobs on driver's side</i>			
	W20	2008 - 2009	Taurus X
W3	W20	1984 - 1994	Tempo
W3		ALL	Thunderbird
W242		2009 +	Transit Connect
W17	W25	1995 - 2003	Windstar
<i>Fits vehicles without video system</i>			
W2			
<i>Fits vehicles with factory video system</i>			
W2	W20	1998 - 2003	ZX2
<b>Geo</b>			
W3	W20	1989 - 1997	Metro
W3	W20	1989 - 1997	Prizm
W3	W20	ALL	Storm
W3	W50	1989 - 1997	Tracker
<b>GMC</b>			
W68	W25	2007	Acadia
W68	W25	2008 +	Acadia
W3	W20	2004 +	Canyon Crew Cab
W3	W20	2004 +	Canyon Extended Cab
W3		2004 +	Canyon Regular Cab
W12	W20	1998 - 2001	Envoy / Envoy Denali
W32	W50	2002 - 2009	Envoy / Envoy Denali
W32	W50	2002 - 2006	Envoy XL / Envoy XL Denali
W32	W50	2004 - 2005	Envoy XUV
W12	W20	1984 - 1994	Jimmy S15



# Interior Floor Protection



Make / Model	Year	Front FloorLiner™	Rear FloorLiner™
<b>GMC (continued)</b>		<b>Part #</b>	<b>Notes</b>
Jimmy S15	1995 - 1999	Front: 441161 Rear: <sup>2</sup> 441162	<i>Fits 4wd models only</i>
Jimmy S15	2000 - 2001	Rear: <sup>2</sup> 441162	
Jimmy S15	2000 - 2005	Front: 441161	
Rally	1996		
Safari	1987 - 1994		
Safari	1995 - 2005		
Savana	1996 +		
Sierra Crew Cab	1992 - 1999		
Sierra Crew Cab	1999 - 2000	Front: 440031	<i>Does not fit manual 4X4 transfer case</i>
Sierra Crew Cab	2001 - 2003	Front: 440031 Rear: <sup>3</sup> 440612	<i>Does not fit manual 4X4 transfer case</i>
Sierra Crew Cab	2007 +	Front: 440661 Front: 442941 Rear: <sup>4</sup> 440660	<i>Does not fit 2007 models with Allison transmission Over the hump, does not fit vehicles with 4x4 manual transfer case</i>
Sierra Crew Cab 1500	2004 - 2007 Classic	Front: 440031 Rear: <sup>3</sup> 440623	<i>Does not fit chassis cab or 2007 new body style</i>
Sierra Crew Cab 2500HD/3500HD	2001 - 2007 Classic	Front: 440031 Rear: <sup>3</sup> 440625	<i>Does not fit 2007 new body style</i>
Sierra Extended Cab	1988 - 1999		
Sierra Extended Cab	1999 - 2007 Classic	Front: 440031 Rear: <sup>3</sup> 440034 Rear: <sup>4</sup> 440622	<i>Short part, does not extend under rear seat, Does not fit short bed models, chassis cab Long part, extends under rear seat, Does not fit short bed models, vehicles with optional tool box, or chassis cab</i>
Sierra Extended Cab	2007 +	Front: 440661 Front: 442941 Rear: <sup>4</sup> 440669	<i>Does not fit 2007 models with Allison transmission Over the hump, does not fit vehicles with 4x4 manual transfer case</i>
Sierra Standard Cab	1988 - 1999		
Sierra Standard Cab	1999 - 2007 Classic	Front: 440281	
Sierra Standard Cab	2007 - 2010	Front: 442941	<i>Over the Hump, Does not fit models with floor mounted shifters, Does not fit models with consoles that join with dashboard</i>
Sierra Standard Cab	2007 +	Front: 443431	<i>Does not fit models with floor mounted shifter</i>
Sierra Standard Cab	2011 +	Front: 443711	<i>Over the Hump, Does not fit models with floor mounted shifters, Does not fit models with consoles that join with dashboard</i>
Sonoma / S15 Pickup	1982 - 1993		
Sonoma / S15 Pickup	1994 - 2004		
Suburban	1992 - 1999	Rear: <sup>2</sup> 442652	
Suburban	1980 - 1991		
Suburban	1992 - 1999	Front: 442651	
Terrain	2010 +	Front: 443461 Front: 442711 Rear: <sup>2</sup> 442712	<i>Fits vehicles with two retention posts on the driver's side floor</i>
Typhoon	1992 - 1993		
Vandura Van	1996		
Yukon / Yukon Denali	1992 - 1999	Front: 442651	

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code  
<sup>SP</sup> Non-Standard Pricing  
<sup>0</sup> Front FloorLiner™  
<sup>0A</sup> Luxury Front FloorLiner™  
<sup>0B</sup> Luxury Front FloorLiner™  
<sup>1</sup> Small Rear FloorLiner™  
<sup>2</sup> Medium Rear FloorLiner™  
<sup>2A</sup> Luxury Medium Rear FloorLiner™  
<sup>3</sup> Large Rear FloorLiner™  
<sup>3A</sup> Luxury Large Rear FloorLiner™  
<sup>4</sup> Extra Large Rear FloorLiner™  
<sup>5</sup> Mega Rear FloorLiner™





# Interior Floor Protection

## All-Weather Floor Mats

## Year

## Make / Model

Front	Rear	Year	Make / Model
W12	W20	1995 - 1999	Jimmy S15
		2000 - 2001	Jimmy S15
W12	W20	2000 - 2005	Jimmy S15
	W25	1996	Rally
	W25	1987 - 1994	Safari
W51	W25	1995 - 2005	Safari
	W25	1996 +	Savana
W14	W25	1992 - 1999	Sierra Crew Cab
W26	W20	1999 - 2000	Sierra Crew Cab
W26	W20	2001 - 2003	Sierra Crew Cab
W72	W20	2007 +	Sierra Crew Cab
W26 <i>Does not fit 2007 new body style</i>	W70	2004 - 2007 Classic	Sierra Crew Cab 1500
W26 <i>Does not fit 2007 new body style</i>	W70	2001 - 2007 Classic	Sierra Crew Cab 2500HD/3500HD
W14	W25	1988 - 1999	Sierra Extended Cab
W26	W70	1999 - 2007 Classic	Sierra Extended Cab
W72	W70	2007 +	Sierra Extended Cab
W14		1988 - 1999	Sierra Standard Cab
W26		1999 - 2007 Classic	Sierra Standard Cab
		2007 - 2010	Sierra Standard Cab
W72		2007 +	Sierra Standard Cab
		2011 +	Sierra Standard Cab
W12	W20	1982 - 1993	Sonoma / S15 Pickup
W12	W20	1994 - 2004	Sonoma / S15 Pickup
		1192 - 1999	Suburban
W9	W25	1980 - 1991	Suburban
W14	W25	1992 - 1999	Suburban
W165	W25	2010 +	Terrain
W12	W20	1992 - 1993	Typhoon
	W25	1996	Vandura Van
W14	W25	1992 - 1999	Yukon / Yukon Denali

# Interior Floor Protection



Make / Model	Year	Front FloorLiner™	Rear FloorLiner™
<b>GMC (continued)</b>			
Yukon / Yukon Denali	2000 - 2006	Front: 440031 Rear: <sup>2</sup> 440032 2nd row Rear: <sup>1</sup> 440033 3rd row	
Yukon / Yukon Denali	2007 - 2010		Rear: <sup>1</sup> 440667 Fits in aisle between 2nd row bucket seats
Yukon / Yukon Denali	2007 +	Front: 440661 Rear: <sup>2</sup> 440662 2nd row, Requires trim on vehicles with front bench seat, does not fit hybrid models Rear: <sup>2</sup> 442352 2nd row, Fits hybrid models	
Yukon / Yukon Denali	2011 +		Rear: 442353 2nd plus Aisle, does not fit Hybrid or bench models
Yukon XL / Yukon XL Denali	2000 - 2006	Front: 440031 Rear: <sup>3</sup> 440612	
Yukon XL / Yukon XL Denali	2007 - 2010	Front: 440661 Rear: <sup>2</sup> 440662 2nd row, Requires trim on vehicles with front bench seat Rear: <sup>4</sup> 440668 3rd row, fits vehicles with 2nd row bench seat only	
Yukon XL / Yukon XL Denali	2011 +		Rear: <sup>4</sup> 442354 3rd row, fits vehicles with 2nd row bucket seats only
<b>Honda</b>			
Accord	1985 - 1993		
Accord	1998 - 2002	Front: 442831 Rear: <sup>2</sup> 442832	
Accord	2003 - 2004		
Accord	2003 - 2007	Front: 440601 Does not fit manual transmission models Rear: <sup>3</sup> 440602 Fits sedan only	
Accord	2005 - 2007		
Accord	2008 +	Front: 441481 Rear: <sup>2</sup> 441482 Fits sedan only Rear: <sup>2</sup> 441483 Fits coupe only	
Civic	1992 - 2000		
Civic	2001 - 2005	Front: 442821 Does not fit manual transmission Rear: <sup>2</sup> 442822 Fits sedan and coupe	
Civic	2006 - 2011	Front: 443631 Fits sedan only Rear: <sup>1</sup> 440903 Fits sedan only Rear: <sup>1</sup> 440902 Fits coupe only	
Civic	2012 +	Front: 443731 Fits Sedan Only Rear: 443732 Fits Sedan Only Front: 443961 Fits coupe only Rear: <sup>2</sup> 443733 Fits coupe only	
Crosstour	2010 +	Front: 442881 Front: 443201 Fits 2wd vehicles Rear: <sup>2</sup> 442882	
CR-V	1997 - 2001		
CR-V	2002 - 2004		
CR-V	2005 - 2006	Front: 443571 Rear: <sup>1</sup> 440202	
CR-V	2007 +		
CR-V	2012 +	Front: 444021 Rear: <sup>2</sup> 444022	
CRX	1985 - 1991		
CRZ	2011 +	Front: 443351	

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code  
<sup>SP</sup> Non-Standard Pricing  
<sup>0</sup> Front FloorLiner™  
<sup>0A</sup> Luxury Front FloorLiner™  
<sup>0B</sup> Luxury Front FloorLiner™  
<sup>1</sup> Small Rear FloorLiner™  
<sup>2</sup> Medium Rear FloorLiner™  
<sup>2A</sup> Luxury Medium Rear FloorLiner™  
<sup>3</sup> Large Rear FloorLiner™  
<sup>3A</sup> Luxury Large Rear FloorLiner™  
<sup>4</sup> Extra Large Rear FloorLiner™  
<sup>5</sup> Mega Rear FloorLiner™



# Interior Floor Protection

All-Weather Floor Mats		Year	Make / Model
Front	Rear		GMC (continued)
W26	W70 <i>2nd row</i> W60 <i>3rd row</i>	2000 - 2006	Yukon / Yukon Denali
W72	W70 <i>2nd row</i>	2007 - 2010 2007 +	Yukon / Yukon Denali Yukon / Yukon Denali
W26	W179 <i>3rd row, fits behind 2nd row bench seat</i> W180 <i>3rd row, fits behind 2nd row bucket seats</i> W70 <i>2nd row</i>	2011 + 2000 - 2006	Yukon / Yukon Denali Yukon XL / Yukon XL Denali
W72	W70 <i>2nd row</i>	2007 - 2010	Yukon XL / Yukon XL Denali
		2011 +	Yukon XL / Yukon XL Denali
			<b>Honda</b>
W34	W20	1985 - 1993	Accord
W34	W20	1998 - 2002	Accord
W34	W20	2003 - 2004	Accord
		2003 - 2007	Accord
W34	W20	2005 - 2007	Accord
W94	W150 <i>Fits sedan only</i> W198 <i>Fits coupe only</i>	2008 +	Accord
W34	W20	1992 - 2000	Civic
W34	W20	2001 - 2005	Civic
W65	W20 <i>Fits sedan only</i> <i>Fits coupe only</i>	2006 - 2011	Civic
W269	W149 <i>Fits sedan only</i> W197 <i>Fits coupe only</i>	2012 +	Civic
W195	W196	2010 +	Crosstour
W3	W20	1997 - 2001	CR-V
W59		2002 - 2004	CR-V
W59		2005 - 2006	CR-V
		2007 +	CR-V
W270	W162	2012 +	CR-V
W34	W20	1985 - 1991	CRX
		2011 +	CRZ

# WeatherTech®

# Interior Floor Protection



Make / Model	Year	Front FloorLiner™	Rear FloorLiner™
<b>Honda (continued)</b>			
<b>Part #</b>	<b>Notes</b>		
Del Sol	1993 - 1997		
Element	2003 +		
Fit	2007 - 2008	Front: 441771 Rear: <sup>2</sup> 441772	Liners have holes for Honda retention hooks included with factory mats
Fit	2009 +	Front: 441811 Rear: <sup>2</sup> 441812	Liners have holes for Honda retention hooks included with factory mats
Insight	2001 - 2006		
Insight	2010 +	Front: 442411 Rear: <sup>2</sup> 442412	
Odyssey	1995 - 1998		
Odyssey	1999 - 2004	Front: 443561 Rear: <sup>3</sup> 441132 Rear: <sup>2</sup> 441133	2nd row 3rd row
Odyssey	2005 - 2010	Front: 443141 Front: 443171 Rear: <sup>3</sup> 440492 Rear: <sup>2</sup> 440493	Over the Hump one piece part 2nd row 3rd row
Odyssey	2007 - 2010		
Odyssey	2011 +	Front: 443411 Front: 443471 Rear: <sup>5</sup> 443412	Over the hump coverage Fits 2nd row & 3rd row
Passport	1994 - 1997		
Passport	1998 - 2002		
Pilot	2005	Front: 440221 Rear: <sup>2</sup> 440222	
Pilot	2003 - 2004	Front: 440411 Rear: <sup>2</sup> 440222	
Pilot	2006 - 2008	Front: 440591 Rear: <sup>2</sup> 440222	
Pilot	2009 +	Front: 441741 Rear: <sup>2</sup> 441742 Rear: <sup>2</sup> 441743	2nd row 3rd row
Prelude	1988 - 2001		
Ridgeline	2006 +	Front: 440501 Rear: <sup>3</sup> 440502	
S2000	2000 - 2009		
<b>Hummer</b>			
H1	1992 - 2007		
H2	2003 +	Front: 442841 Rear: <sup>3</sup> 442842	Does not fit the H2 SUT
H2 SUT	2005 +	Rear: <sup>3</sup> 442842	
H3	2006 +	Front: 440341 Rear: <sup>2</sup> 440342	
<b>Hyundai</b>			
Accent	1995 - 1999		

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
 FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
 All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code  
<sup>SP</sup> Non-Standard Pricing  
<sup>0</sup> Front FloorLiner™  
<sup>0A</sup> Luxury Front FloorLiner™  
<sup>0B</sup> Luxury Front FloorLiner™  
<sup>1</sup> Small Rear FloorLiner™  
<sup>2</sup> Medium Rear FloorLiner™  
<sup>2A</sup> Luxury Medium Rear FloorLiner™  
<sup>3</sup> Large Rear FloorLiner™  
<sup>3A</sup> Luxury Large Rear FloorLiner™  
<sup>4</sup> Extra Large Rear FloorLiner™  
<sup>5</sup> Mega Rear FloorLiner™



# Interior Floor Protection

## All-Weather Floor Mats

## Year

## Make / Model

Front	Rear		Honda (continued)
W34		1993 - 1997	Del Sol
W31	W25	2003 +	Element
W84	W20	2007 - 2008	Fit
W147	W20	2009 +	Fit
W4		2001 - 2006 2010 +	Insight Insight
W9	W25	1995 - 1998	Odyssey
W28	W25	1999 - 2004	Odyssey
W48	W159 2nd row W160 3rd row	2005 - 2010	Odyssey
		2007 - 2010	Odyssey
W211	W212 2nd Row W213 3rd Row	2011 +	Odyssey
W3	W20	1994 - 1997	Passport
W3	W25	1998 - 2002	Passport
W31	W25 2nd row W60 3rd row	2005	Pilot
W31	W25 2nd row W60 3rd row	2003 - 2004	Pilot
W31	W25 2nd row W60 3rd row	2006 - 2008	Pilot
W148	W152 2nd row W153 3rd row	2009 +	Pilot
W34	W20	1988 - 2001	Prelude
W31	W20	2006 +	Ridgeline
W3		2000 - 2009	S2000
<b>Hummer</b>			
W3		1992 - 2007	H1
W4	W20	2003 +	H2
W4	W20	2005 +	H2 SUT
W47	W20	2006 +	H3
<b>Hyundai</b>			
W3	W20	1995 - 1999	Accent





# Interior Floor Protection



Make / Model	Year	Front FloorLiner™	Rear FloorLiner™
<b>Hyundai (continued)</b>			
Accent	2000 - 2005		
Accent	2005 - 2011	Front: 442501 Rear: <sup>2</sup> 442502	<i>Fits 4-door models only</i>
Accent	2006 - 2011		
Accent	2012 +	Front: 443401 Rear: <sup>2</sup> 443402	
Azera	2006 +		
Elantra	1992 - 2006		
Elantra	2007 - 2010	Front: 442481 Rear: <sup>2</sup> 442482	<i>Fits vehicles with one retention device on driver's floor</i>
Elantra	2011 +	Front: 443251 Rear: 443252	<i>Fits sedan only</i>
Entourage	2007 - 2009		
Entourage	2007 +		
Excel	1986 - 1994		
Genesis	2009 - 2010	Front: 443061	
Genesis	2009 +	Rear: <sup>1</sup> 443062	<i>Fits sedan only; two piece part</i>
Genesis	2011 +	Front: 443781	<i>Fits sedan only</i>
Santa Fe	2001 - 2006		
Santa Fe	2007 +	Front: 440961 Rear: <sup>2</sup> 440962	
Santa Fe	2010 +	Front: 442981	<i>Fits vehicles with two retention knobs on driver's side</i>
Scoupe	1991 - 1995		
Sonata	1989 - 1994		
Sonata	1995 - 1998		
Sonata	1999 - 2005		
Sonata	2006 - 2010	Front: 441601 Rear: <sup>2</sup> 441602	
Sonata	2011 +	Front: 442961	
Tiburon	1997 - 2008		
Tucson	2010	Rear: <sup>2</sup> 442922	
Tucson	2005 - 2009	Front: 441291 Rear: <sup>2</sup> 441292	
Tucson	2005 +		
Tucson	2010 +	Front: 442921	
Tucson	2011 +	Rear: <sup>2</sup> 442923	
Veloster	2012 +	Front: 443421	
Veracruz	2007 +	Front: 441591 Rear: <sup>2</sup> 441592 Rear: <sup>1</sup> 441593	<i>2nd row 3rd row</i>
XG300	2001		
XG350	2002 - 2005		
<b>Infiniti</b>			
EX35	2008 +	Front: 441551 Rear: <sup>1</sup> 441552	<i>Two-piece part</i>
FX35	2004 - 2008	Front: 440921 Rear: <sup>1</sup> 440922	<i>Two-piece part</i>
FX35	2009 +	Front: 441721 Rear: <sup>2</sup> 441722	
FX45	2004 - 2008	Front: 440921 Rear: <sup>1</sup> 440922	<i>Two-piece part</i>
FX50 / FX50S	2009 +	Front: 441721 Rear: <sup>2</sup> 441722	
G	2003 - 2006		

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
 FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
 All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code  
<sup>SP</sup> Non-Standard Pricing  
<sup>0</sup> Front FloorLiner™  
<sup>0A</sup> Luxury Front FloorLiner™  
<sup>0B</sup> Luxury Front FloorLiner™  
<sup>1</sup> Small Rear FloorLiner™  
<sup>2</sup> Medium Rear FloorLiner™  
<sup>2A</sup> Luxury Medium Rear FloorLiner™  
<sup>3</sup> Large Rear FloorLiner™  
<sup>3A</sup> Luxury Large Rear FloorLiner™  
<sup>4</sup> Extra Large Rear FloorLiner™  
<sup>5</sup> Mega Rear FloorLiner™



# Interior Floor Protection

## All-Weather Floor Mats

## Year

## Make / Model

Front	Rear		Hyundai (continued)
W39	W20	2000 - 2005	Accent
		2005 - 2011	Accent
W34	W50	2006 - 2011	Accent
		2012 +	Accent
W36	W20	2006 +	Azera
W3	W20	1992 - 2006	Elantra
W3	W20	2007 - 2010	Elantra
		2011 +	Elantra
	W25	2007 - 2009	Entourage
W4		2007 +	Entourage
W3	W20	1986 - 1994	Excel
		2009 - 2010	Genesis
W24	W20	2009 +	Genesis
		2011 +	Genesis
W31	W20	2001 - 2006	Santa Fe
		2007 +	Santa Fe
		2010 +	Santa Fe
W3	W20	1991 - 1995	Scoupe
W3	W20	1989 - 1994	Sonata
W2	W20	1995 - 1998	Sonata
W4	W20	1999 - 2005	Sonata
W39	W20	2006 - 2010	Sonata
		2011 +	Sonata
W3	W20	1997 - 2008	Tiburon
		2010	Tucson
		2005 - 2009	Tucson
W40	W25	2005 +	Tucson
		2010 +	Tucson
		2011 +	Tucson
		2012 +	Velooster
W31	W20	2007 +	Veracruz
W4	W20	2001	XG300
W4	W20	2002 - 2005	XG350
			<b>Infiniti</b>
		2008 +	EX35
W3	W50	2004 - 2008	FX35
		2009 +	FX35
W3	W50	2004 - 2008	FX45
		2009 +	FX50 / FX50S
	W50	2003 - 2006	G

# WeatherTech®

# Interior Floor Protection



Make / Model	Year	Front FloorLiner™	Rear FloorLiner™
<b>Infiniti (continued)</b>			
G	2007 - 2010	Front: 441561 Rear: <sup>2</sup> 441562	
G	2010 +	Front: 443501	<i>Fits vehicles with two retention devices on driver side</i>
G20	1991 - 1996		
G20	1998 - 2002		
I30	1996 - 1999		
I30	2000 - 2001		
I35	2002 - 2004		
J30	1993 - 1997		
M	2011 +	Front: 443041 Rear: <sup>2</sup> 443042	<i>Two-piece part</i>
M30	1990 - 1992		
M35	2006 - 2010		
M45	2003 - 2005		
M45	2006 +		
Q45	1990 - 1996		
Q45	1997 - 2001		
Q45	2002 - 2007		
QX4	1997 - 2003		
QX56	2004 - 2010	Front: 442091 Front: 440191 Rear: <sup>3</sup> 440194 Rear: <sup>4</sup> 440193	<i>Fits vehicles with two retention hooks on driver's side</i> <i>Fits vehicles with one retention device on driver's side</i> <i>2nd row</i> <i>3rd row</i>
QX56	2011 +	Front: 443361 Rear: 443362	
<b>Isuzu</b>			
Amigo	1989 - 1994		
Amigo	1998 - 2003		
Ascender	2003 - 2008	Front: 440071 Rear: <sup>3</sup> 440072	<i>Does not fit models with 3 rows of seats</i>
Axiom	2002 - 2004		
Hombre	1996 - 2002		
i280 / i290	2006 - 2009		
i350 / i370	2006 +		
Impulse	ALL		
Oasis	1996 - 1999		
Pickup	ALL		
Rodeo	1991 - 1997		
Rodeo	1998 - 2004		
Rodeo Sport	1998 - 2003		
Stylus	ALL		
Trooper	1986 - 2002		
VehiCross	1999 - 2001		
<b>Jaguar</b>			
S Type	2000 - 2008		
X Type	2002 +		
XJ Type	1988 - 2009		
XK Type	1997 - 1999		
XK Type	2000 +		
<b>Jeep</b>			
Cherokee	1984 - 2001		
Cherokee	1997 - 2001	Front: 442661 Rear: <sup>2</sup> 442662	
Comanche Pickup	ALL		

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
 FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
 All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code  
<sup>SP</sup> Non-Standard Pricing  
<sup>0</sup> Front FloorLiner™  
<sup>0A</sup> Luxury Front FloorLiner™  
<sup>0B</sup> Luxury Front FloorLiner™  
<sup>1</sup> Small Rear FloorLiner™  
<sup>2</sup> Medium Rear FloorLiner™  
<sup>2A</sup> Luxury Medium Rear FloorLiner™  
<sup>3</sup> Large Rear FloorLiner™  
<sup>3A</sup> Luxury Large Rear FloorLiner™  
<sup>4</sup> Extra Large Rear FloorLiner™  
<sup>5</sup> Mega Rear FloorLiner™



# Interior Floor Protection

## All-Weather Floor Mats

## Year

## Make / Model

Front	Rear		Infiniti (continued)
W24	W50	2007 - 2010	G
		2010 +	G
W3	W20	1991 - 1996	G20
W3	W20	1998 - 2002	G20
W3	W20	1996 - 1999	I30
W2	W20	2000 - 2001	I30
W2	W20	2002 - 2004	I35
W3	W20	1993 - 1997	J30
		2011 +	M
W3	W20	1990 - 1992	M30
W24	W20	2006 - 2010	M35
W3	W20	2003 - 2005	M45
W24	W20	2006 +	M45
W3	W20	1990 - 1996	Q45
W3	W20	1997 - 2001	Q45
W3	W20	2002 - 2007	Q45
W3	W20	1997 - 2003	QX4
W4	W20	2004 - 2010	QX56
		2011 +	QX56
			<b>ISUZU</b>
W3	W20	1989 - 1994	Amigo
W3	W20	1998 - 2003	Amigo
W32	W50	2003 - 2008	Ascender
W3	W20	2002 - 2004	Axiom
W12	W20	1996 - 2002	Hombre
W3	W20	2006 - 2009	i280 / i290
W3	W20	2006 +	i350 / i370
W4	W20	ALL	Impulse
W9	W25	1996 - 1999	Oasis
W3	W20	ALL	Pickup
W3	W20	1991 - 1997	Rodeo
W3	W20	1998 - 2004	Rodeo
W3	W20	1998 - 2003	Rodeo Sport
W3	W20	ALL	Stylus
W3	W20	1986 - 2002	Trooper
W3	W20	1999 - 2001	VehiCross
			<b>Jaguar</b>
W3	W20	2000 - 2008	S Type
W3	W50	2002 +	X Type
W3	W20	1988 - 2009	XJ Type
		1997 - 1999	XK Type
		2000 +	XK Type
			<b>Jeep</b>
W10	W20	1984 - 2001	Cherokee
		1997 - 2001	Cherokee
W9	W20	ALL	Comanche Pickup

# WeatherTech®

# Interior Floor Protection



Make / Model	Year	Front FloorLiner™	Rear FloorLiner™
<b>Jeep (continued)</b>			
Commander	2006 +	Front: 440131 Rear: <sup>2</sup> 440132 <i>2nd row</i> Rear: <sup>1</sup> 440133 <i>3rd row</i>	
Compass	2007 +	Front: 440861 Rear: <sup>1</sup> 440862 <i>Two-piece part</i>	
Grand Cherokee	1993 - 1998		
Grand Cherokee	1999 - 2004	Front: 440521 Rear: <sup>2</sup> 440522	
Grand Cherokee	2005 - 2010	Front: 440131 Rear: <sup>2</sup> 440132 <i>2nd row, requires trim for vehicles with DVD</i>	
Grand Cherokee	2011 +	Front: 443241 Rear: <sup>2</sup> 443242	
Grand Wagoneer	1984 - 1992		
Liberty	2002 - 2007	Front: 440321 Rear: <sup>2</sup> 440322	
Liberty	2008 - 2010	Front: 441401	
Liberty	2008 +	Rear: <sup>2</sup> 441402	
Liberty	2010 +	Front: 443881 <i>Fits vehicles with retention hooks on both left and right front floors</i>	
Patriot	2007 +	Front: 440861 Rear: <sup>1</sup> 440862	
Renegade	2002 +		
Wagoneer	ALL		
Wrangler	1987 - 1995		
Wrangler	1997 - 2006	Front: 440421 Rear: <sup>1</sup> 440422 <i>Two-piece part</i>	
Wrangler	2007 +	Front: 441051	
Wrangler Unlimited	2004.5 - 2006		
Wrangler Unlimited	2007 +	Front: 441051 Rear: <sup>2</sup> 441052 <i>Does not fit 2 door model</i>	
<b>Kia</b>			
Amanti	2004 - 2009		
Borrego	2009 +	Front: 441821 Rear: <sup>2</sup> 441822 Rear: <sup>2</sup> 441823	
Forte	2010 +	Front: 442971 <i>Fits sedan and hatchback</i> Rear: <sup>2</sup> 442972	
Forte Koup	2010 +	Rear: <sup>2</sup> 442972	
Forte Koup	2012 +	Front: 443801	
Optima	2001 - 2006		
Optima	2007 +		
Optima	2011 +	Front: 442961 Rear: 443392 <i>Works with the prototype and maybe some early production vehicles only</i> Rear: 443393	
Rio / Rio5 / Rio Cinco	2001 - 2005		
Rio / Rio5 / Rio Cinco	2006 - 2011	Rear: <sup>2</sup> 442502 <i>Fits 4-door models only</i>	
Rio / Rio5 / Rio Cinco	2006 +		
Rio / Rio5 / Rio Cinco	2012 +	Front: 443951 Rear: <sup>2</sup> 443952	
Rondo	2007 +		
Sedona	2002 +		
Sephia	1995 - 2001		
Sorento	2003 - 2009	Front: 441121 Rear: <sup>2</sup> 441122	

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
 FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
 All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code  
<sup>SP</sup> Non-Standard Pricing  
<sup>0</sup> Front FloorLiner™  
<sup>0A</sup> Luxury Front FloorLiner™  
<sup>0B</sup> Luxury Front FloorLiner™  
<sup>1</sup> Small Rear FloorLiner™  
<sup>2</sup> Medium Rear FloorLiner™  
<sup>2A</sup> Luxury Medium Rear FloorLiner™  
<sup>3</sup> Large Rear FloorLiner™  
<sup>3A</sup> Luxury Large Rear FloorLiner™  
<sup>4</sup> Extra Large Rear FloorLiner™  
<sup>5</sup> Mega Rear FloorLiner™





# Interior Floor Protection

All-Weather Floor Mats		Year	Make / Model
Front	Rear		Jeep (continued)
W22	W20	2006 +	Commander
	W20	2007 +	Compass
W10	W20	1993 - 1998	Grand Cherokee
W22	W20	1999 - 2004	Grand Cherokee
W22	W20	2005 - 2010	Grand Cherokee
		2011 +	Grand Cherokee
W4	W25	1984 - 1992	Grand Wagoneer
W10	W50	2002 - 2007	Liberty
		2008 - 2010	Liberty
W10	W50	2008 +	Liberty
		2010 +	Liberty
	W20	2007 +	Patriot
W10	W50	2002 +	Renegade
W3	W20	ALL	Wagoneer
W225	W50	1987 - 1995	Wrangler
W224	W50	1997 - 2006	Wrangler
W12		2007 +	Wrangler
W3	W50	2004.5 - 2006	Wrangler Unlimited
W12	W50	2007 +	Wrangler Unlimited
<b>Kia</b>			
W4	W20	2004 - 2009	Amanti
		2009 +	Borrego
		2010 +	Forte
		2010 +	Forte Koup
		2012 +	Forte Koup
W4	W20	2001 - 2006	Optima
W71	W50	2007 +	Optima
		2011 +	Optima
W4	W20	2001 - 2005	Rio / Rio5 / Rio Cinco
		2006 - 2011	Rio / Rio5 / Rio Cinco
W34	W50	2006 +	Rio / Rio5 / Rio Cinco
		2012 +	Rio / Rio5 / Rio Cinco
W31	W20	2007 +	Rondo
W4	W25	2002 +	Sedona
W4	W20	1995 - 2001	Sephia
W3	W20	2003 - 2009	Sorento

# Interior Floor Protection



Make / Model	Year	Front FloorLiner™	Rear FloorLiner™	Notes
<b>Kia (continued)</b>				
Sorento	2010 +	Front: 443871		Works in vehicles with floor mounted gas pedal only
Sorento	2011 +	Front: 442871		Works in vehicles with top mounted gas pedal only
Soul	2009 - 2010		Rear: <sup>2</sup> 442112	
Soul	2009 +	Front: 442111		
Soul	2011 +		Rear: 442113	
Spectra / Spectra5	2000 - 2004			
Spectra / Spectra5	2005 - 2009			
Sportage	2005 - 2010	Front: 441291		
		Rear: <sup>2</sup> 441292		
Sportage	2011 +		Rear: <sup>2</sup> 442923	
<b>Land Rover</b>				
County / Classic	1987 - 1995			
Defender	1993 - 1997			
Discovery Series I	1994 - 1999			
Discovery Series II	1999 - 2004			
Freelander	2002 - 2005			
LR2	2007 +			
LR3 / Discovery III	2005 - 2008	Front: 440461		Does not fit models with retention hook on driver's side
		Rear: <sup>3A</sup> 440462		
LR3 / Discovery III	2008 - 2009	Front: 443621		Fits models with retention hook on driver's side
		Rear: <sup>3A</sup> 440462		
LR4 / Discovery 4	2010 +	Front: 443621		Fits models with retention hook on driver's side
		Rear: <sup>3A</sup> 440462		
Range Rover	2010	Front: <sup>0A</sup> 442911		
Range Rover	1995 - 2002			
Range Rover	2003 - 2006		Rear: <sup>3A</sup> 440732	
Range Rover	2003 - 2010	Front: <sup>0A</sup> 440731		
Range Rover	2007 +		Rear: <sup>2A</sup> 442912	
Range Rover	2011 +	Front: 443371		
Range Rover Evoque	2012 +	Front: 444041		
		Rear: <sup>2</sup> 444042		
Range Rover Sport	2006 - 2008	Front: 440461		Does not fit models with retention hook on driver's side
		Rear: <sup>3A</sup> 443622		
Range Rover Sport	2008 +	Front: 443621		Fits models with retention hook on driver's side
		Rear: <sup>3A</sup> 443622		
<b>Lexus</b>				
ES	1992 - 2001			
ES300				
ES	2002 - 2006			
ES330				
ES	2007 +	Front: 441431		
ES350		Rear: <sup>2</sup> 440842		
GS	1993 - 1997			
GS300				
GS	1998 - 2005			
GS300, GS400, GS430				
GS	2006 - 2012	Front: 442051		Fits RWD models only
GS300, GS350, GS430, GS450		Front: 442061		Fits AWD models only
GS450h, GS460, GS450 Hybrid		Rear: <sup>2</sup> 442052		Two-piece part
GX	2003 - 2009	Front: 440701		Fits vehicles without Rear Seat Entertainment System
GX470		Front: 441211		Fits 2006+ vehicles with Rear Seat Entertainment System
		Rear: <sup>3A</sup> 440702		Fits with and with out Rear Seat Entertainment System

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
 FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
 All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code

<sup>SP</sup> Non-Standard Pricing

<sup>0</sup> Front FloorLiner™

<sup>0A</sup> Luxury Front FloorLiner™

<sup>0B</sup> Luxury Front FloorLiner™

<sup>1</sup> Small Rear FloorLiner™

<sup>2</sup> Medium Rear FloorLiner™

<sup>2A</sup> Luxury Medium Rear FloorLiner™

<sup>3</sup> Large Rear FloorLiner™

<sup>3A</sup> Luxury Large Rear FloorLiner™

<sup>4</sup> Extra Large Rear FloorLiner™

<sup>5</sup> Mega Rear FloorLiner™



# Interior Floor Protection

All-Weather Floor Mats		Year	Make / Model
Front	Rear		Kia (continued)
		2010 +	Sorento
		2011 +	Sorento
		2009 - 2010	Soul
W173		2009 +	Soul
		2011 +	Soul
W4	W20	2000 - 2004	Spectra / Spectra5
W3	W50	2005 - 2009	Spectra / Spectra5
W31	W50	2005 - 2010	Sportage
		2011 +	Sportage
<b>Land Rover</b>			
W3	W20	1987 - 1995	County / Classic
W3	W20	1993 - 1997	Defender
W3	W20	1994 - 1999	Discovery Series I
W3	W25	1999 - 2004	Discovery Series II
W31	W20	2002 - 2005	Freelander
		2007 +	LR2
W49	W20	2005 - 2008	LR3 / Discovery III
W49	W20	2008 - 2009	LR3 / Discovery III
		2010 +	LR4 / Discovery 4
		2010	Range Rover
W3	W20	1995 - 2002	Range Rover
		2003 - 2006	Range Rover
		2003 - 2010	Range Rover
		2007 +	Range Rover
		2011 +	Range Rover
		2012 +	Range Rover Evoque
W49	W20	2006 - 2008	Range Rover Sport
W49	W20	2008 +	Range Rover Sport
<b>Lexus</b>			
W2	W20	1992 - 2001	ES ES300
W182	W50	2002 - 2006	ES ES330
W174	W85	2007 +	ES ES350
W9	W20	1993 - 1997	GS GS300
W9	W20	1998 - 2005	GS GS300, GS400, GS430
W79	W85	2006 - 2012	GS GS300, GS350, GS430, GS450 GS450h, GS460, GS450 Hybrid
W39	W136 2nd row W60 3rd row	2003 - 2009	GX GX470



# Interior Floor Protection



Make / Model	Year	Front FloorLiner™	Rear FloorLiner™
<b>Lexus (continued)</b>			
<b>Part #</b>	<b>Notes</b>		
GX GX460	2010 +	Front: 442861 Rear: <sup>2</sup> 442862	
HS HS205h	2010 +	Front: 442801 Rear: <sup>3</sup> 442802	
IS IS200, IS200 SportCross, IS300, IS300 SportCross	2001 - 2005		
IS IS250, IS350, IS-C, IS-F	2006 +	Front: 442031 Front: 442041 Rear: <sup>2</sup> 442032	<i>Fits rear wheel drive models only</i> <i>Fits AWD models</i> <i>Two-piece part</i>
LS LS400	1990 - 1994		
LS LS400	1995 - 2000		
LS LS400	2001 - 2006		
LS LS460, LS460L, LS600h, LS Hybrid	2007 +	Front: 442071 Rear: <sup>2</sup> 442072 Front: 442361 Rear: <sup>2</sup> 442073	<i>Fits rear wheel drive standard and L models</i> <i>Does not fit L models, two-piece part</i> <i>Fits AWD models</i> <i>Fits RWD and AWD L models</i>
LX LX450	1996 - 1997		
LX LX470	1998 - 2007	Front: 440771 Rear: <sup>3</sup> 440772	<i>2nd row</i>
LX LX570	2008 +	Front: 441571 Rear: <sup>3</sup> 441572	<i>2nd row</i>
RX RX330	1999 - 2003	Front: 440391 Rear: <sup>2</sup> 440392	
RX RX330	2004 - 2009	Front: 440141 Rear: <sup>3</sup> 440142 Rear: <sup>2</sup> 440393	<i>Does not fit Hybrid models, requires trim marked on part to use sliding console</i> <i>Fits Hybrid models</i>
RX RX350, RX400h	2010 +	Front: 442291 Rear: <sup>3</sup> 442292	
SC SC300, SC400	1992 - 2002		
SC SC430	2002 +		
<b>Lincoln</b>			
Aviator	2003 - 2005		
Blackwood	2002 - 2003		
Continental	ALL		
LS	2000 - 2006		
Mark LT	2006 - 2008	Front: 440051 Rear: <sup>3</sup> 440052	
Mark VII / LSC	ALL		
Mark VIII	1993 - 1998		

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
 FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
 All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code  
<sup>SP</sup> Non-Standard Pricing  
<sup>0</sup> Front FloorLiner™  
<sup>0A</sup> Luxury Front FloorLiner™  
<sup>0B</sup> Luxury Front FloorLiner™  
<sup>1</sup> Small Rear FloorLiner™  
<sup>2</sup> Medium Rear FloorLiner™  
<sup>2A</sup> Luxury Medium Rear FloorLiner™  
<sup>3</sup> Large Rear FloorLiner™  
<sup>3A</sup> Luxury Large Rear FloorLiner™  
<sup>4</sup> Extra Large Rear FloorLiner™  
<sup>5</sup> Mega Rear FloorLiner™



# Interior Floor Protection

All-Weather Floor Mats		Year	Make / Model
Front	Rear		Lexus (continued)
W39	W136 <i>2nd row</i> W60 <i>3rd row</i>	2010 +	GX GX460
W176	W85	2010 +	HS HS205h
	W20	2001 - 2005	IS IS200, IS200 SportCross, IS300, IS300 SportCross
W77 <i>Fits rear wheel drive models</i> W78 <i>Fits AWD models</i>	W200	2006 +	IS IS250, IS350, IS-C, IS-F
W36	W20	1990 - 1994	LS LS400
W36	W20	1995 - 2000	LS LS400
W36	W20	2001 - 2006	LS LS400
W175 <i>Fits rear wheel drive models</i> W181 <i>Fits all wheel drive models</i>	W201 <i>Fits L models</i> W185 <i>Fits standard length models</i>	2007 +	LS LS460, LS460L, LS600h, LS Hybrid
W3	W20 <i>2nd row</i> W60 <i>3rd row</i>	1996 - 1997	LX LX450
W23	W25 <i>2nd row</i> W60 <i>3rd row</i>	1998 - 2007	LX LX470
W126	W127	2008 +	LX LX570
W29	W20	1999 - 2003	RX RX330
W40	W20	2004 - 2009	RX RX330
W131	W132	2010 +	RX RX350, RX400h
W3 <i>Does not fit SC430</i>	W50	1992 - 2002	SC SC300, SC400
W77	W50	2002 +	SC SC430
			<b>Lincoln</b>
W30	W70	2003 - 2005	Aviator
W9	W25	2002 - 2003	Blackwood
W3	W20	ALL	Continental
W39	W50	2000 - 2006	LS
W42	W25	2006 - 2008	Mark LT
W3	W20	ALL	Mark VII / LSC
W3	W20	1993 - 1998	Mark VIII





# Interior Floor Protection



Make / Model	Year	Front FloorLiner™	Rear FloorLiner™
<b>Lincoln (continued)</b>			
MKS	2008 +	Front: 443021 Rear: <sup>3</sup> 442372	<i>Fits vehicles with with two retention knobs on driver's side</i>
MKS	2009 - 2010	Front: 442371	<i>Fits vehicles with one retention hook on driver's side</i>
MkX	2007 +	Front: 441101	
MkX	2011 +	Front: 443491 Rear: <sup>2</sup> 441102	<i>May require trim around seat belt bracket</i>
MkZ	2006 - 2009	Front: 441081 Rear: <sup>2</sup> 441082	<i>Does not fit AWD models</i>
MkZ	2010 +	Front: 442431 Front: 442991	<i>Fits vehicles with two retention knobs, not hooks, on the driver's side floor</i>
Navigator	1998 - 2002	Front: 440821 Rear: <sup>3</sup> 440822	<i>2nd row</i>
Navigator	2003 - 2006	Front: 440291 Rear: <sup>2</sup> 440292 Rear: <sup>3</sup> 440294	<i>2nd row, fits vehicles without 2nd row console only</i> <i>2nd row, fits vehicles with 2nd row console only</i>
Navigator	2007 +	Front: 441071 Rear: <sup>3</sup> 441072 Rear: <sup>4</sup> 441074  Rear: <sup>4</sup> 441076	<i>2nd row</i> <i>3rd row, fits vehicles with 2nd row bench seat and vehicles with 2nd row buckets with 2nd row center console</i> <i>3rd row, fits vehicles with 2nd row bucket seats without 2nd row center console</i>
Navigator	2011 +	Front: 443531	<i>Fits vehicles with two retention posts on the driver side</i>
Navigator L	2007 - 2010		
Navigator L	2007 +	Front: 441071 Rear: <sup>3</sup> 441072 Rear: <sup>4</sup> 441073  Rear: <sup>4</sup> 441075	<i>2nd row</i> <i>3rd row, fits vehicles with 2nd row bench seat and vehicles with 2nd row buckets with 2nd row center console</i> <i>3rd row, fits vehicles with 2nd row bucket seats without 2nd row center console</i>
Navigator L	2011 +	Front: 443531	<i>Fits vehicles with two retention posts on the driver side</i>
Town Car	1990 +		
Zephyr	2006 - 2007	Front: 441081 Rear: <sup>2</sup> 441082	<i>Does not fit AWD models</i>
<b>Lotus</b>			
ALL	ALL		
<b>Maserati</b>			
Gran Turismo	2007 +	Front: <sup>SP</sup> 442021 Rear: <sup>SP</sup> 442022	<i>Sold as four-piece set only</i> <i>Two-piece set</i>
Quattroporte	2004 +	Front: <sup>SP</sup> 442011 Rear: <sup>SP</sup> 442012	<i>Sold as four-piece set only</i> <i>Two-piece part</i>
<b>Mazda</b>			
323	ALL		
626	1988 - 1992		
626	1993 - 1997		
626	1998 - 2002		
929	1988 - 1995		
B-Series Pickup	1993 & Older		
B-Series Pickup	1994 +		
CX-5	2013 +	Front: 444191 Rear: <sup>2</sup> 444192	

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code  
<sup>SP</sup> Non-Standard Pricing  
<sup>0</sup> Front FloorLiner™  
<sup>0A</sup> Luxury Front FloorLiner™  
<sup>0B</sup> Luxury Front FloorLiner™  
<sup>1</sup> Small Rear FloorLiner™  
<sup>2</sup> Medium Rear FloorLiner™  
<sup>2A</sup> Luxury Medium Rear FloorLiner™  
<sup>3</sup> Large Rear FloorLiner™  
<sup>3A</sup> Luxury Large Rear FloorLiner™  
<sup>4</sup> Extra Large Rear FloorLiner™  
<sup>5</sup> Mega Rear FloorLiner™



# Interior Floor Protection

All-Weather Floor Mats		Year	Make / Model
Front	Rear		Lincoln (continued)
	W20	2008 +	MKS
		2009 - 2010	MKS
W186	W25	2007 +	MkX
		2011 +	MkX
W97	W256	2006 - 2009	MkZ
W234	W256	2010 +	MkZ
		<i>Fits vehicles with two retention knobs, not hooks, on the driver's side floor</i>	
W9	W25	1998 - 2002	Navigator
W38	W25	2003 - 2006	Navigator
W38	W185	2007 +	Navigator
W241		2011 +	Navigator
		<i>Fits vehicles with 2 retention post on the driver's side floor</i>	
W38		2007 - 2010	Navigator L
W185		2007 +	Navigator L
			<i>2nd row</i>
W241		2011 +	Navigator L
		<i>Fits vehicles with 2 retention post on the driver's side floor</i>	
W2	W20	1990 +	Town Car
W97	W20	2006 - 2007	Zephyr
			<b>Lotus</b>
W3	W20	ALL	ALL
			<b>Maserati</b>
		2007 +	Gran Turismo
		2004 +	Quattroporte
			<b>Mazda</b>
W2	W20	ALL	323
W2	W20	1988 - 1992	626
W34	W20	1993 - 1997	626
W2	W20	1998 - 2002	626
W3	W20	1988 - 1995	929
W2	W20	1993 & Older	B-Series Pickup
W11	W20	1994 +	B-Series Pickup
		2013 +	CX-5



# Interior Floor Protection



Make / Model

Year

Front FloorLiner™

Rear FloorLiner™

Make / Model	Year	Part #	Notes
<b>Mazda (continued)</b>			
CX-7	2007 +	Front: 441221 Rear: <sup>2</sup> 441222	
CX-9	2007 +	Front: 441531 Rear: <sup>4</sup> 441532	Covers 2nd and 3rd row floor spaces
Familia S-Wagon	ALL		
Mazda2	2007 - 2010	Front: 442731 Rear: <sup>2</sup> 442732	
Mazda3 / Mazdaspeed3	2004 - 2009	Front: 441471 Rear: <sup>2</sup> 441472	
Mazda3 / Mazdaspeed3	2010 +	Front: 442401 Rear: <sup>2</sup> 442402	Fits vehicles with gas release lever on floor
Mazda5	2006 +		
Mazda5	2008 +	Front: 442741 Rear: <sup>2</sup> 442742 <sup>2</sup> 442743	Does not fit vehicles with manual transmission 2nd row 3rd row
Mazda5	2012 +	Front: 443511	
Mazda6 / Mazdaspeed6	2003 - 2008		
Mazda6 / Mazdaspeed6	2009 +	Front: 442141 Rear: <sup>2</sup> 442142	
Millenia	1995 - 2002		
MP3	1999 - 2003		
MP5	2002 - 2003		
MPV	1989 - 1998		
MPV	2000 - 2006		
MX3	ALL		
MX5 / Miata	2006 +	Front: 442621	
MX5 / Miata	ALL		
MX6	ALL		
Navajo	1991 - 1994		
Protegé	1990 - 1998		
Protegé	1999 - 2003		
Protegé 5	2002 - 2003		
RX7	ALL		
RX8	2004 +		
Tribute	2008	Front: 441191	
Tribute	2001 - 2004		
Tribute	2005 - 2007	Front: 440181 Rear: <sup>2</sup> 440182	
Tribute	2008 +	Rear: <sup>2</sup> 441192	
Tribute	2009 +	Front: 443151 Front: 443541	Fits vehicles with two retention knobs, not hooks, on the driver's side floor
<b>Mercedes-Benz</b>			
190E	1984 - 1993		
280S	1983 - 1991		
300CE	1993		
300D	1987 - 1995		
300E	1986 - 1995		
300SE	1988 - 1992		
300SEL	1988 - 1991		
300TE	1988 - 1993		
350SD	1990 - 1991		
350SDL	1991		
400E	1992 - 1993		
400SE	1992		

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code

<sup>SP</sup> Non-Standard Pricing

<sup>0</sup> Front FloorLiner™

<sup>0A</sup> Luxury Front FloorLiner™

<sup>0B</sup> Luxury Front FloorLiner™

<sup>1</sup> Small Rear FloorLiner™

<sup>2</sup> Medium Rear FloorLiner™

<sup>2A</sup> Luxury Medium Rear FloorLiner™

<sup>3</sup> Large Rear FloorLiner™

<sup>3A</sup> Luxury Large Rear FloorLiner™

<sup>4</sup> Extra Large Rear FloorLiner™

<sup>5</sup> Mega Rear FloorLiner™



# Interior Floor Protection

## All-Weather Floor Mats

## Year

## Make / Model

Front	Rear	Year	Make / Model
		2007 +	Mazda (continued) CX-7
W87	W50 2nd row	2007 +	CX-9
W4	W20	ALL 2007 - 2010	Familia S-Wagon Mazda2
W101	W20	2004 - 2009	Mazda3 / Mazdaspeed3
		2010 +	Mazda3 / Mazdaspeed3
W34	W20	2006 +	Mazda5
		2008 +	Mazda5
		2012 +	Mazda5
W71	W20	2003 - 2008	Mazda6 / Mazdaspeed6
		2009 +	Mazda6 / Mazdaspeed6
W3	W20	1995 - 2002	Millenia
W4	W20	1999 - 2003	MP3
W4	W20	2002 - 2003	MP5
W2	W25	1989 - 1998	MPV
W4	W25	2000 - 2006	MPV
W3	W20	ALL	MX3
		2006 +	MX5 / Miata
		ALL	MX5 / Miata
W2	W20	ALL	MX6
W11	W20	1991 - 1994	Navajo
W2	W20	1990 - 1998	Protegé
W4	W20	1999 - 2003	Protegé
W4	W20	2002 - 2003	Protegé 5
W3		ALL	RX7
W3	W50	2004 +	RX8
		2008	Tribute
W4	W20	2001 - 2004	Tribute
W71	W20	2005 - 2007	Tribute
W71	W185	2008 +	Tribute
W235		2009 +	Tribute
<i>Fits vehicles with two retention knobs, not hooks, on the driver's side floor</i>			
			<b>Mercedes-Benz</b>
W36	W20	1984 - 1993	190E
W36	W20	1983 - 1991	280S
W36	W20	1993	300CE
W36	W20	1987 - 1995	300D
W36	W20	1986 - 1995	300E
W36	W20	1988 - 1992	300SE
W36	W20	1988 - 1991	300SEL
W36	W20	1988 - 1993	300TE
W36	W20	1990 - 1991	350SD
W36	W20	1991	350SDL
W36	W20	1992 - 1993	400E
W36	W20	1992	400SE

# Interior Floor Protection



Front FloorLiner™



Rear FloorLiner™

Make / Model	Year	Part #	Notes
<b>Mercedes-Benz (continued)</b>			
400SEL	1993		
420SEL	1986 - 1991		
500E	1992 - 1993		
500SEC	1993		
500SEL	1992 - 1993		
500SL	1990 - 1993		
560S	1981 - 1991		
560SEC	1986 - 1991		
560SEL	1986 - 1991		
600SEC	1993		
600SEL	1992 - 1993		
600SL	1992 - 1993		
C-Class (W202) C220, C230, C240, C280, C36 AMG C43 AMG	1994 - 2000		
C-Class (W203) C240, C320, C32 AMG, C55 AMG, C63 AMG	2001 - 2007	Front: 442641 Rear: <sup>2</sup> 442642	<i>Fits 2WD models only, does not fit manual transmission</i> <i>Two-piece part</i>
C-Class (W204) C300, C350, C63 AMG	2008 +	Front: 441611 Rear: <sup>2</sup> 441612	
C-Class (W204) C300, C350, C63 AMG	2012 +	Rear: <sup>1</sup> 441613	<i>2012 and up coupe only</i>
CL-Class (W140) CL500, CL600	1998 - 1999		
CL-Class (W215) CL500, CL55 AMG, CL600, CL65 AMG	2001 - 2006		
CL-Class (W216) CL500, CL550, CL55 AMG, CL600, CL63 AMG, CL65 AMG	2007 +		
CLK-Class (W208, W209) CLK200, CLK200 Kompressor, CLK230 Kompressor, CLK320, CLK430, CLK55 AMG, CLK320, CLK350, CLK500, CLK 550, CLK55 AMG, CLK63 AMG	ALL		
CLS-Class (W218) CLS550, CLS63 AMG	2011 +	Front: 442581 Rear: <sup>2</sup> 442582	
CLS-Class (W219) CLS350, CLS500, CLS 550, CLS 55 AMG, CLS63 AMG	2006 +	Front: 441731 Rear: <sup>2</sup> 440882	<i>Two-piece part</i>
E-Class (W124) 300D, 500E, E320, E420, E500	1986 - 1995		
E-Class (W210) E300 Diesel, E320, E420, E430, E55 AMG	1996 - 2002		
E-Class (W211) E300, E320CDI, E320 Bluetec, E350, E550, E55 AMG, E63 AMG	2003 - 2009	Front: 441731 Front: 440881 Rear: <sup>2</sup> 440882	<i>Fits RWD models</i> <i>Fits 4Matic only, Does not fit 2003 E-Class wagon</i> <i>Two-piece part</i>
E-Class (W212, C207) E350, E550, E63 AMG	2010 +	Front: 441611 Front: 442581 Rear: <sup>1</sup> 441613 Rear: <sup>2</sup> 442582	<i>Fits coupe</i> <i>Fits sedan</i> <i>Fits coupe and convertible, two piece part</i> <i>Fits sedan, two piece part</i>
G-Class (W463) G320, G400, G55 AMG	2002 +	Front: <sup>0A</sup> 442211 Rear: <sup>3A</sup> 442212	

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code  
<sup>SP</sup> Non-Standard Pricing  
<sup>0</sup> Front FloorLiner™  
<sup>0A</sup> Luxury Front FloorLiner™  
<sup>0B</sup> Luxury Front FloorLiner™  
<sup>1</sup> Small Rear FloorLiner™  
<sup>2</sup> Medium Rear FloorLiner™  
<sup>2A</sup> Luxury Medium Rear FloorLiner™  
<sup>3</sup> Large Rear FloorLiner™  
<sup>3A</sup> Luxury Large Rear FloorLiner™  
<sup>4</sup> Extra Large Rear FloorLiner™  
<sup>5</sup> Mega Rear FloorLiner™



# Interior Floor Protection

## All-Weather Floor Mats

## Year

## Make / Model

Front	Rear		Mercedes-Benz (continued)
W36	W20	1993	400SEL
W36	W20	1986 - 1991	420SEL
W36	W20	1992 - 1993	500E
W36	W20	1993	500SEC
W36	W20	1992 - 1993	500SEL
W36		1990 - 1993	500SL
W36	W20	1981 - 1991	560S
W36	W20	1986 - 1991	560SEC
W36	W20	1986 - 1991	560SEL
W36	W20	1993	600SEC
W36	W20	1992 - 1993	600SEL
W36		1992 - 1993	600SL
W36	W20	1994 - 2000	C-Class (W202) C220, C230, C240, C280, C36 AMG C43 AMG
W35	W20	2001 - 2007	C-Class (W203) C240, C320, C32 AMG, C55 AMG, C63 AMG
W88	W90	2008 +	C-Class (W204)
	<i>Will not fit in 2012 and up C-Class Coupe</i>		C300, C350, C63 AMG
	W166	2012 +	C-Class (W204)
	<i>2012 and up coupe only</i>		C300, C350, C63 AMG
W36	W20	1998 - 1999	CL-Class (W140) CL500, CL600
W36	W20	2001 - 2006	CL-Class (W215) CL500, CL55 AMG, CL600, CL65 AMG
W73		2007 +	CL-Class (W216) CL500, CL550, CL55 AMG, CL600, CL63 AMG, CL65 AMG
W112	W113	ALL	CLK-Class (W208, W209) CLK200, CLK200 Kompressor, CLK230 Kompressor, CLK320, CLK430, CLK55 AMG, CLK320, CLK350, CLK500, CLK 550, CLK55 AMG, CLK63 AMG
		2011 +	CLS-Class (W218) CLS550, CLS63 AMG
W37	W105	2006 +	CLS-Class (W219) CLS350, CLS500, CLS 550, CLS 55 AMG, CLS63 AMG
W36	W20	1986 - 1995	E-Class (W124) 300D, 500E, E320, E420, E500
W36	W20	1996 - 2002	E-Class (W210) E300 Diesel, E320, E420, E430, E55 AMG
W37 <i>Fits RWD models</i> W114 <i>Fits 4Matic models</i>	W105	2003 - 2009	E-Class (W211) E300, E320CDI, E320 Bluetec, E350, E550, E55 AMG, E63 AMG
W163 <i>Fits sedan</i> W88 <i>Fits coupe</i>	W164 <i>Fits sedan</i> W166 <i>Fits coupe</i>	2010 +	E-Class (W212, C207) E350, E550, E63 AMG
W124	W125	2002 +	G-Class (W463) G320, G400, G55 AMG



# Interior Floor Protection



Make / Model	Year	Front FloorLiner™	Rear FloorLiner™
<b>Mercedes-Benz (continued)</b>			
GL-Class (X164) GL320 CDI, GL320 Bluetec, GL450, GL550	2007 +	Front: 440161 Rear: <sup>2</sup> 440162 Rear: <sup>3</sup> 440163	<i>2nd row</i> <i>3rd row</i>
GLK-Class (X204) GLK 350	2009 +	Front: 442101 Rear: <sup>2</sup> 442102	
M-Class (ML) (W163) ML320, ML350, ML430, ML500, ML550, ML55 AMG	1998 - 1999		
M-Class (ML) (W163) ML320, ML350, ML430, ML500, ML550, ML55 AMG	2000 - 2005	Front: 440891 Rear: <sup>3</sup> 440892	<i>Two-piece part</i>
M-Class (ML) (W164) ML320 CDI, ML320 Bluetec, ML350, ML500, ML550, ML63 AMG	2006 - 2011	Front: 440161 Front: 440171 Rear: <sup>2</sup> 440162	<i>Fits ML350</i> <i>Fits ML320 CDI, ML320 Blutec, ML500, ML550, ML63 AMG</i>
M-Class (ML) (W166) ML350, ML350 BlueTec	2012 +	Front: 444011 Rear: 444012	<i>Rear liner requires trimming for models equipped with two 12V outlets located on the center console</i>
R-Class (W251) R280, R350, R500, R320 CDI, R63 AMG	2006 +		
S-Class (W140) 300SE, 300SEL, 300SD, 400SEL, 500SEC, 500SEL, 600SEC, 600SEL	1994 - 1999		
S-Class (W220) S280, S320, S350, S430, S500, S600, S55 AMG, S63 AMG, S65 AMG	2000 - 2006		
S-Class (W221) S350, S450, S500, S550, S600, S63 AMG, S65 AMG	2007 +	Front: <sup>0A</sup> 442521 Rear: <sup>2A</sup> 442522	<i>Two piece part</i>
SL-Class (R129) SL320, SL500, SL600	1994 - 2002		
SL-Class (R230) SL350, SL550, SL600, SL55 AMG, SL63 AMG, SL65 AMG	2003 +		
SL-Class (R230) SL350, SL550, SL600, SL55 AMG, SL63 AMG, SL65 AMG	2008 +	Front: <sup>0A</sup> 442541	
SLK-Class (R170, R171) SLK 200, SLK 230 Kompressor, SLK 320, SLK 32 AMG, SLK 200 Kompressor, SLK 280, SLK 350, SLK 55 AMG	1998 - 2004		
<b>Mercury</b>			
Capri XR2	ALL		
Cougar	1967 - 2002		
Grand Marquis	ALL		
Marauder	2003 - 2005		
Mariner	2008	Front: 441191 Rear: <sup>2</sup> 441192	
Mariner	2005 - 2007	Front: 440181 Rear: <sup>2</sup> 440182	
Mariner	2008 +		
Mariner	2009 +	Front: 443031 Front: 443541	<i>Fits vehicles with two retention knobs, not hooks, on the driver's side floor</i>
Milan	2006 - 2009	Front: 441081 Rear: <sup>2</sup> 441082	

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code  
<sup>SP</sup> Non-Standard Pricing  
<sup>0</sup> Front FloorLiner™  
<sup>0A</sup> Luxury Front FloorLiner™  
<sup>0B</sup> Luxury Front FloorLiner™  
<sup>1</sup> Small Rear FloorLiner™  
<sup>2</sup> Medium Rear FloorLiner™  
<sup>2A</sup> Luxury Medium Rear FloorLiner™  
<sup>3</sup> Large Rear FloorLiner™  
<sup>3A</sup> Luxury Large Rear FloorLiner™  
<sup>4</sup> Extra Large Rear FloorLiner™  
<sup>5</sup> Mega Rear FloorLiner™



# Interior Floor Protection

## All-Weather Floor Mats

## Year

## Make / Model

Front	Rear		Mercedes-Benz (continued)
W102	W110 <i>2nd row</i> W115 <i>3rd row</i>	2007 +	GL-Class (X164) GL320 CDI, GL320 Bluetec, GL450, GL550
W99	W100	2009 +	GLK-Class (X204) GLK 350
W9	W20	1998 - 1999	M-Class (ML) (W163) ML320, ML350, ML430, ML500, ML550, ML55 AMG
W9	W20	2000 - 2005	M-Class (ML) (W163) ML320, ML350, ML430, ML500, ML550, ML55 AMG
W102	W110	2006 - 2011	M-Class (ML) (W164) ML320 CDI, ML320 Bluetec, ML350, ML500, ML550, ML63 AMG
W257	W110	2012 +	M-Class (ML) (W166) ML350, ML350 BlueTec
W104	W106 <i>2nd row</i> W107 <i>3rd row</i>	2006 +	R-Class (W251) R280, R350, R500, R320 CDI, R63 AMG
W36	W20	1994 - 1999	S-Class (W140) 300SE, 300SEL, 300SD, 400SEL, 500SEC, 500SEL, 600SEC, 600SEL
W36	W20	2000 - 2006	S-Class (W220) S280, S320, S350, S430, S500, S600, S55 AMG, S63 AMG, S65 AMG
W73	W95	2007 +	S-Class (W221) S350, S450, S500, S550, S600, S63 AMG, S65 AMG
W36		1994 - 2002	SL-Class (R129) SL320, SL500, SL600
W103		2003 +	SL-Class (R230) SL350, SL550, SL600, SL55 AMG, SL63 AMG, SL65 AMG
		2008 +	SL-Class (R230) SL350, SL550, SL600, SL55 AMG, SL63 AMG, SL65 AMG
W37		1998 - 2004	SLK-Class (R170, R171) SLK 200, SLK 230 Kompressor, SLK 320, SLK 32 AMG, SLK 200 Kompressor, SLK 280, SLK 350, SLK 55 AMG
			<b>Mercury</b>
W3	W20	ALL	Capri XR2
W3	W20	1967 - 2002	Cougar
W2	W20	ALL	Grand Marquis
W2	W20	2003 - 2005	Marauder
W177		2008	Mariner
W71	W20	2005 - 2007	Mariner
	W185	2008 +	Mariner
W235 <i>Fits vehicles with two retention knobs, not hooks, on the driver's side floor</i>		2009 +	Mariner
W97	W256	2006 - 2009	Milan

# Interior Floor Protection



Make / Model	Year	Front FloorLiner™	Rear FloorLiner™
<b>Mercury (continued)</b>			
Milan	2010 +	Front: 442431 Front: 442991	<i>Fits vehicles with two retention knobs, not hooks, on the driver's side floor</i>
		Rear: <sup>2</sup> 441082	<i>Fits vehicles with two retention knobs, not hooks, on the driver's side floor</i>
Montego	2005 - 2007	Front: 440311 Rear: <sup>2</sup> 440312	
Monterey	2004 - 2007		
Mountaineer	1997 - 2001		
Mountaineer	2002 - 2005	Front: 440061 Rear: <sup>2</sup> 440062	
Mountaineer	2006 +	Front: 440431 Rear: <sup>2</sup> 440432	<i>2nd row, Fits vehicles with 2nd row Bench or 2nd row bucket with console</i>
		Rear: <sup>1</sup> 440433	<i>3rd row, Fits vehicles with 2nd row bucket seats, does not fit vehicles with 2nd row center console</i>
Mystique	1995 - 2000		
Sable	1988 - 1995		
Sable	1996 - 2004		
Sable	2000 - 2005		
Sable	2008 - 2009	Front: 440311 Rear: <sup>2</sup> 440312	
Topaz	ALL		
Tracer	1991 - 1999		
Villager	1993 - 1998		
Villager	1999 - 2002		
<b>Mini</b>			
Clubman	2008 +	Front: 441361 Rear: <sup>2</sup> 441363	
Cooper / Cooper S	2002 - 2006	Front: 441371 Rear: <sup>1</sup> 441362	<i>Fits 2007 Convertible Does not fit convertible</i>
Cooper / Cooper S	2007 - 2011	Front: 441361 Rear: <sup>1</sup> 441362	<i>Fits 2009+ convertible vehicles without footrest installed on the RHS Fits 2009+ convertible vehicles</i>
Countryman	2011 +	Front: 443551 Rear: 443552	<i>Two-piece part</i>
Hardtop / Coupe / Roadster / Convertible	2012 +	Front: 441361 Front: 444301 Rear: <sup>1</sup> 441362	<i>Fits vehicles without footrest installed on the RHS Fits vehicles with footrest installed on the RHS Fits in 2nd row floor, even though the vehicle does not have 2nd row seats</i>
<b>Mitsubishi</b>			
3000 GT	1991 - 1999		
Diamante	1992 - 2004		
Eclipse	1990 - 1999		
Eclipse	2000 - 2005		
Eclipse	2006 +		
Endeavor	2004 +		
Expo	ALL		
Galant	1985 - 2003		
Galant	2004 +		
Lancer / Evolution	2002 - 2007		
Lancer / Evolution	2008 +	Front: 442231 Rear: <sup>3</sup> 442232	<i>Fits all models including EVO</i>
Mirage	1985 - 1992		

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code  
<sup>SP</sup> Non-Standard Pricing  
<sup>0</sup> Front FloorLiner™  
<sup>0A</sup> Luxury Front FloorLiner™  
<sup>0B</sup> Luxury Front FloorLiner™  
<sup>1</sup> Small Rear FloorLiner™  
<sup>2</sup> Medium Rear FloorLiner™  
<sup>2A</sup> Luxury Medium Rear FloorLiner™  
<sup>3</sup> Large Rear FloorLiner™  
<sup>3A</sup> Luxury Large Rear FloorLiner™  
<sup>4</sup> Extra Large Rear FloorLiner™  
<sup>5</sup> Mega Rear FloorLiner™



# Interior Floor Protection

## All-Weather Floor Mats

## Year

## Make / Model

Front	Rear	Year	Make / Model
W234	W256	2010 +	Mercury (continued) Milan
	W20	2005 - 2007	Montego
W40	W25	2004 - 2007	Monterey
W11	W20	1997 - 2001	Mountaineer
W30	W50	2002 - 2005	Mountaineer
W30	W50	2006 +	Mountaineer
W3	W20	1995 - 2000	Mystique
W3	W20	1988 - 1995	Sable
W2	W20	1996 - 2004	Sable
W2	W20	2000 - 2005	Sable
	W20	2008 - 2009	Sable
W3	W20	ALL	Topaz
W2	W20	1991 - 1999	Tracer
W4	W25	1993 - 1998	Villager
W4	W25	1999 - 2002	Villager
<b>Mini</b>			
W183		2008 +	Clubman
W183		2002 - 2006	Cooper / Cooper S
W183		2007 - 2011	Cooper / Cooper S
		2011 +	Countryman
W183		2012 +	Hardtop / Coupe / Roadster / Convertible
<b>Mitsubishi</b>			
W2	W20	1991 - 1999	3000 GT
W2	W20	1992 - 2004	Diamante
W3		1990 - 1999	Eclipse
W3		2000 - 2005	Eclipse
W36	W50	2006 +	Eclipse
<i>Does not fit vehicles with manual transmission</i>			
W40	W20	2004 +	Endeavor
W3	W20	ALL	Expo
W3	W20	1985 - 2003	Galant
W31	W20	2004 +	Galant
W3	W20	2002 - 2007	Lancer / Evolution
		2008 +	Lancer / Evolution
W2	W20	1985 - 1992	Mirage

# Interior Floor Protection



Front FloorLiner™



Rear FloorLiner™

Make / Model	Year	Part #	Notes
<b>Mitsubishi (continued)</b>			
Mirage	1993 - 1996		
Mirage	1997 - 2001		
Montero	2000 & Older		
Montero	2001 - 2006		
Montero Sport	1997 - 2004		
Outlander	2003 - 2006		
Outlander	2007 +	Front: 441621 Rear: <sup>2</sup> 441622	2nd row
Outlander Sport	2011 +	Front: 441621 Rear: 441623	
Pickup	ALL		
Precis	ALL		
Raider Double Cab	2006 - 2009	Front: 440251 Rear: <sup>2</sup> 440252	
Raider Extended Cab	2006 - 2009	Front: 440251	
Sigma	ALL		
<b>Nissan</b>			
200SX	1995 - 1998		
240SX	1989 - 1994		
240Z	ALL		
240ZX	ALL		
260Z	ALL		
260ZX	ALL		
280Z	ALL		
280ZX	ALL		
300ZX	1990 - 1996		
350Z	2003 - 2009		
370Z	2010 +	Front: 442751	
Altima	1993 - 2001		
Altima	2002 - 2006	Front: 443101 Rear: <sup>2</sup> 441692	Fits automatic transmission models only
Altima	2007 +	Front: 441181 Front: 441961 Rear: 441183 Rear: <sup>3</sup> 441182	Fits vehicles with one retention hook on driver's side and no retention hook on passenger side Fits vehicles with two retention hooks on driver's side Fits coupe only Fits sedan only
Armada / Pathfinder Armada	2004 +	Front: 440191 Front: 442091 Rear: <sup>3</sup> 440194 Rear: <sup>4</sup> 440193	Fits vehicles with one retention device on driver's side Fits vehicles with two retention hooks on driver's side 2nd row 3rd row
Axxess	ALL		
Cube	2009 +	Front: 442611 Rear: <sup>2</sup> 442612	
Frontier	1998 - 2004		
Frontier Crew Cab	2005 +	Front: 440471 Front: 441761 Rear: <sup>2</sup> 440473	Fits vehicles with one retention device on driver's side Fits vehicles with two retention hooks on driver's side
Frontier King Cab	2005 +	Front: 440471 Front: 441761 Rear: <sup>2</sup> 440472	Fits vehicles with one retention device on driver's side Fits vehicles with two retention hooks on driver's side
Juke	2011 +		
Maxima	1981 - 1999		
Maxima	2000 - 2003		

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
 FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
 All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code  
<sup>SP</sup> Non-Standard Pricing  
<sup>0</sup> Front FloorLiner™  
<sup>0A</sup> Luxury Front FloorLiner™  
<sup>0B</sup> Luxury Front FloorLiner™  
<sup>1</sup> Small Rear FloorLiner™  
<sup>2</sup> Medium Rear FloorLiner™  
<sup>2A</sup> Luxury Medium Rear FloorLiner™  
<sup>3</sup> Large Rear FloorLiner™  
<sup>3A</sup> Luxury Large Rear FloorLiner™  
<sup>4</sup> Extra Large Rear FloorLiner™  
<sup>5</sup> Mega Rear FloorLiner™



# Interior Floor Protection

## All-Weather Floor Mats

## Year

## Make / Model

Front	Rear		Mitsubishi (continued)
W3	W20	1993 - 1996	Mirage
W2	W20	1997 - 2001	Mirage
W3	W20	2000 & Older	Montero
W31	W20	2001 - 2006	Montero
W3	W20	1997 - 2004	Montero Sport
W3	W20	2003 - 2006	Outlander
W83	W20	2007 +	Outlander
		2011 +	Outlander Sport
W2	W20	ALL	Pickup
W3	W20	ALL	Precis
W3	W20	2006 - 2009	Raider Double Cab
W3	W20	2006 - 2009	Raider Extended Cab
W3	W20	ALL	Sigma
			<b>Nissan</b>
W3	W20	1995 - 1998	200SX
W3	W20	1989 - 1994	240SX
W3	W20	ALL	240Z
W3	W20	ALL	240ZX
W3	W20	ALL	260Z
W3	W20	ALL	260ZX
W3	W20	ALL	280Z
W3	W20	ALL	280ZX
W2	W20	1990 - 1996	300ZX
W3		2003 - 2009	350Z
W226		2010 +	370Z
W3	W20	1993 - 2001	Altima
W4	W20	2002 - 2006	Altima
W188	W113 <i>Fits coupe only</i> W209 <i>Fits sedan only</i>	2007 +	Altima
W228 <i>Fits vehicles with two retention hooks on driver's side</i>	W20 W229	2004 +	Armada / Pathfinder Armada
W2	W20	ALL	Axxess
W190	W208	2009 +	Cube
W222 <i>Retention holes will not line up on vehicles with one retention device on the driver side</i>	W20	1998 - 2004	Frontier
W222 <i>Retention holes will not line up on the driver side</i>	W20	2005 +	Frontier Crew Cab
W222 <i>Retention holes will not line up on the driver side</i>	W20	2005 +	Frontier King Cab
W218	W219	2011 +	Juke
W3	W20	1981 - 1999	Maxima
W2	W20	2000 - 2003	Maxima

# WeatherTech®



# Interior Floor Protection



Make / Model	Year	Front FloorLiner™	Rear FloorLiner™
<b>Nissan (continued)</b>			
		<b>Part #</b>	<b>Notes</b>
Maxima	2004 - 2008	Front: 441691 Rear: <sup>2</sup> 441692	
Maxima	2009 +	Front: 441711 Rear: <sup>2</sup> 441712	
Murano	2003 - 2008	Front: 440361 Rear: <sup>2</sup> 440362	
Murano	2009 +	Front: 441541 Rear: <sup>2</sup> 441542	<i>Fits Murano and Murano CrossCabriolet Does not fit Murano CrossCabriolet</i>
Navara Crew Cab	2005 +	Front: 440471 Front: 441761 Rear: <sup>2</sup> 440473	<i>Fits vehicles with one retention device on driver's side Fits vehicles with two retention hooks on driver's side</i>
Navara King Cab	2005 +	Front: 440471 Front: 441761 Rear: <sup>2</sup> 440472	<i>Fits vehicles with one retention device on driver's side Fits vehicles with two retention hooks on driver's side</i>
NX 2000	ALL		
Pathfinder	1989 - 2004		
Pathfinder	2005 +	Front: 440331 Front: 441801 Rear: <sup>2</sup> 440332	<i>Fits vehicles with 1 retention hook on driver's side Fits vehicles with 2 retention hooks on driver's side</i>
Pickup	1986.5 - 1997		
Pulsar	ALL		
Qashqai	2008 +	Front: 442171	
Quest	1993 - 1998		
Quest	1999 - 2002		
Quest	2004 - 2009		
Quest	2004 +		
Quest	2011 +	Front: 443661 Front: 443671 Rear: 443662	<i>Front Over-the-Hump 2nd and 3rd row one piece</i>
Rogue	2008 +	Front: 441351 Rear: <sup>2</sup> 441352	
Sentra	1982 - 1995		
Sentra	1996 - 2006		
Sentra	2007 +	Front: 441971 Rear: <sup>2</sup> 441972	<i>Fits vehicles with retention post on passenger side floor</i>
Stanza	ALL		
Titan Crew	2004 +	Front: 440191 Front: 442091 Rear: <sup>4</sup> 440192	<i>Fits vehicles with one retention device on driver's side Fits vehicles with two retention hooks on driver's side</i>
Titan King	2004 +	Front: 440191 Front: 442091	<i>Fits models with no retention device on passenger side Fits models with retention device on passenger side</i>
Versa	2007 - 2011	Front: 441681 Rear: <sup>2</sup> 441682	
Versa	2012 +	Front: 441681 Rear: <sup>2</sup> 441682 Front: 444111 Rear: 444112	<i>Does not fit sedan Does not fit sedan Does not fit hatchback Does not fit hatchback</i>
Xterra	2000 - 2001		
Xterra	2000 - 2004		
Xterra	2002 - 2004		

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
 FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
 All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code  
<sup>SP</sup> Non-Standard Pricing  
<sup>0</sup> Front FloorLiner™  
<sup>0A</sup> Luxury Front FloorLiner™  
<sup>0B</sup> Luxury Front FloorLiner™  
<sup>1</sup> Small Rear FloorLiner™  
<sup>2</sup> Medium Rear FloorLiner™  
<sup>2A</sup> Luxury Medium Rear FloorLiner™  
<sup>3</sup> Large Rear FloorLiner™  
<sup>3A</sup> Luxury Large Rear FloorLiner™  
<sup>4</sup> Extra Large Rear FloorLiner™  
<sup>5</sup> Mega Rear FloorLiner™



# Interior Floor Protection

## All-Weather Floor Mats

## Year

## Make / Model

Front	Rear	Year	Make / Model
			<b>Nissan (continued)</b>
W40	W20	2004 - 2008	Maxima
W68	W164	2009 +	Maxima
W40	W20	2003 - 2008	Murano
W220 <i>Fits Murano and Murano CrossCabriolet</i>	W221 <i>Does not fit Murano CrossCabriolet</i>	2009 +	Murano
W3	W20	2005 +	Navara Crew Cab
W3	W20	2005 +	Navara King Cab
W2	W20	ALL	NX 2000
W222 <i>Retention holes will not line up on the driver side</i>	W20	1989 - 2004	Pathfinder
W222 <i>Retention holes will not line up on vehicles with one retention device on the driver side</i>	W223	2005 +	Pathfinder
W3	W20	1986.5 - 1997	Pickup
W2	W20	ALL	Pulsar
		2008 +	Qashqai
W4	W25	1993 - 1998	Quest
W4	W25	1999 - 2002	Quest
W16		2004 - 2009	Quest
	W25	2004 +	Quest
		2011 +	Quest
W216	W217	2008 +	Rogue
W2	W20	1982 - 1995	Sentra
W2	W20	1996 - 2006	Sentra
W189	W210	2007 +	Sentra
W3	W20	ALL	Stanza
W4	W20 W229	2004 +	Titan Crew
W4	W20	2004 +	Titan King
W214	W215	2007 - 2011	Versa
W214 <i>Does not fit sedan</i>	W215 <i>Does not fit sedan</i>	2012 +	Versa
W262 <i>Does not fit hatchback</i>	W85 <i>Does not fit hatchback</i>		
	W20	2000 - 2001	Xterra
W222 <i>Retention holes will not line up on the drivers side</i>		2000 - 2004	Xterra
	W20	2002 - 2004	Xterra

# WeatherTech®

# Interior Floor Protection



Make / Model	Year	Front FloorLiner™	Rear FloorLiner™
<b>Nissan (continued)</b>			
Xterra	2005 +	Front: 440331	<i>Fits vehicles with 1 retention hook on driver's side</i>
		Front: 441801	<i>Fits vehicles with 2 retention hooks on driver's side</i>
		Rear: <sup>2</sup> 440332	
X-Trail	2002 - 2007	Front: 441031 Rear: <sup>2</sup> 441032	
X-Trail	2008 +	Front: 441921 Rear: <sup>2</sup> 441922	
<b>Oldsmobile</b>			
88 Royale	ALL		
Achieva	1992 - 1998		
Alero	1998 - 2004		
Aurora	ALL		
Bravada	1991 - 1994		
Bravada	1996 - 2001	Front: 441161 Rear: <sup>2</sup> 441162	
Bravada	2002 - 2004	Front: 440071 Rear: <sup>3</sup> 440072	<i>Fits vehicles without 3rd row seats only</i>
Custom Cruiser	ALL		
Cutlass	1997 - 1999		
Cutlass Calais	ALL		
Cutlass Ciera	ALL		
Cutlass Supreme	ALL		
Eighty-Eight	1992 - 1999		
Intrigue	1998 - 2002		
LSS	1996 - 1999		
Nighty-Eight	ALL		
Regency	1997 - 1998		
Silhouette	1990 - 2004		
Toronado	ALL		
Touring Sedan	ALL		
<b>Peugeot</b>			
405	ALL		
505	ALL		
<b>Plymouth</b>			
Acclaim	ALL		
Breeze	1996 - 2000		
Colt	ALL		
Grand Voyager	1984 - 1995		
Grand Voyager	1996 - 2000		
Horizon	ALL		
Laser	ALL		
Neon	1995 - 1999		
Prowler	2000 - 2001		
Sundance	ALL		
Voyager	1984 - 1995		

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
 FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
 All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code  
<sup>SP</sup> Non-Standard Pricing  
<sup>0</sup> Front FloorLiner™  
<sup>0A</sup> Luxury Front FloorLiner™  
<sup>0B</sup> Luxury Front FloorLiner™  
<sup>1</sup> Small Rear FloorLiner™  
<sup>2</sup> Medium Rear FloorLiner™  
<sup>2A</sup> Luxury Medium Rear FloorLiner™  
<sup>3</sup> Large Rear FloorLiner™  
<sup>3A</sup> Luxury Large Rear FloorLiner™  
<sup>4</sup> Extra Large Rear FloorLiner™  
<sup>5</sup> Mega Rear FloorLiner™



# Interior Floor Protection

## All-Weather Floor Mats

## Year

## Make / Model

Front	Rear	Year	Make / Model
<b>Nissan (continued)</b>			
W222 <i>Retention holes will not line up on vehicles with one retention device on the driver side</i>	W223	2005 +	Xterra
W4	W20	2002 - 2007	X-Trail
		2008 +	X-Trail
<b>Oldsmobile</b>			
W2	W20	ALL	88 Royale
W3	W20	1992 - 1998	Achieva
W3	W20	1998 - 2004	Alero
W2	W20	ALL	Aurora
W12	W20	1991 - 1994	Bravada
W12	W20	1996 - 2001	Bravada
W32	W50	2002 - 2004	Bravada
W3	W20	ALL	Custom Cruiser
W3	W20	1997 - 1999	Cutlass
W3	W20	ALL	Cutlass Calais
W3	W20	ALL	Cutlass Ciera
W2	W20	ALL	Cutlass Supreme
W2	W20	1992 - 1999	Eighty-Eight
W4	W20	1998 - 2002	Intrigue
W2	W20	1996 - 1999	LSS
W2	W20	ALL	Nighty-Eight
W2	W20	1997 - 1998	Regency
W2	W25	1990 - 2004	Silhouette
<i>Fits vehicles with video system</i>			
W40			
<i>Fits vehicles without video system</i>			
W2	W20	ALL	Toronado
W2	W20	ALL	Touring Sedan
<b>Peugeot</b>			
W3	W20	ALL	405
W3	W20	ALL	505
<b>Plymouth</b>			
W2	W20	ALL	Acclaim
W2	W20	1996 - 2000	Breeze
W3	W20	ALL	Colt
W2	W25	1984 - 1995	Grand Voyager
W2	W25	1996 - 2000	Grand Voyager
<i>Fits vehicles with video system</i>			
W16			
<i>Fits vehicles without video system</i>			
W3	W20	ALL	Horizon
W3	W20	ALL	Laser
W3	W20	1995 - 1999	Neon
W3		2000 - 2001	Prowler
W2	W20	ALL	Sundance
W2	W25	1984 - 1995	Voyager

# WeatherTech®

# Interior Floor Protection



Front FloorLiner™



Rear FloorLiner™

Make / Model	Year	Part #	Notes
<b>Plymouth (continued)</b>			
Voyager	1996 - 2000		
<b>Pontiac</b>			
6000	ALL		
Aztek	2001 - 2005		
Bonneville	1991 & Older		
Bonneville	1992 - 2005		
Firebird	2002 & Older		
G3	2009	Front: 442441 Rear: <sup>2</sup> 442442	
G5	2007 - 2009	Front: 441981	
G6	2005 - 2009	Front: 441441	<i>Fits sedan only</i>
G8	2008 - 2009	Front: 442251 Rear: <sup>1</sup> 442252	
Grand Am	1986 - 2005		
Grand Prix	1991 & Older		
Grand Prix	1992 - 2006		
Grand Prix	2007 - 2008		
Grand Prix	2007 - 2009	Front: 441241 Rear: <sup>2</sup> 441242	
GTO	2004 - 2007		
Le Mans	ALL		
Montana	1997 - 2005		
Montana SV6	2005 - 2008		
Solstice	2006 - 2009		
Sunbird	ALL		
Sunfire	1995 - 2005		
Torrent	2006 - 2009	Front: 440231 Rear: <sup>3</sup> 440232	
Trans Sport	1990 - 1996		
Trans Sport	1997 - 1998		
Vibe	2009	Front: 441861 Front: 441871 Rear: <sup>2</sup> 441862	<i>Fits FWD models only, fits automatic transmission models with heating vents under front row of seats only</i> <i>Fits AWD Drive Models Only</i> <i>Fits FWD models only</i>
Vibe	2003 - 2008		
<b>Porsche®</b>			
911® (964®)	1989 - 1992		
911® (993®)	1993 - 1998		
911® (996®)	1998 - 2004		

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
 FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
 All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code  
<sup>SP</sup> Non-Standard Pricing  
<sup>0</sup> Front FloorLiner™  
<sup>0A</sup> Luxury Front FloorLiner™  
<sup>0B</sup> Luxury Front FloorLiner™  
<sup>1</sup> Small Rear FloorLiner™  
<sup>2</sup> Medium Rear FloorLiner™  
<sup>2A</sup> Luxury Medium Rear FloorLiner™  
<sup>3</sup> Large Rear FloorLiner™  
<sup>3A</sup> Luxury Large Rear FloorLiner™  
<sup>4</sup> Extra Large Rear FloorLiner™  
<sup>5</sup> Mega Rear FloorLiner™



# Interior Floor Protection

## All-Weather Floor Mats

## Year

## Make / Model

Front	Rear		Plymouth (continued)
W2 <i>Fits vehicles with video system</i> W16 <i>Fits vehicles without video system</i>	W25	1996 - 2000	Voyager
			<b>Pontiac</b>
W2	W20	ALL	6000
W4	W20	2001 - 2005	Aztek
W3	W20	1991 & Older	Bonneville
W2	W20	1992 - 2005	Bonneville
W3	W20	2002 & Older	Firebird
		2009	G3
W31	W50	2007 - 2009	G5
W39	W20	2005 - 2009	G6
W24	W20	2008 - 2009	G8
W3	W20	1986 - 2005	Grand Am
W3	W20	1991 & Older	Grand Prix
W4	W20	1992 - 2006	Grand Prix
	W20	2007 - 2008	Grand Prix
W31		2007 - 2009	Grand Prix
W9	W50	2004 - 2007	GTO
W4	W20	ALL	Le Mans
W40 <i>Fits vehicles without video system</i>	W25	1997 - 2005	Montana
W40	W25	2005 - 2008	Montana SV6
		2006 - 2009	Solstice
W3	W20	ALL	Sunbird
W2	W20	1995 - 2005	Sunfire
W2	W25	2006 - 2009	Torrent
W2	W25	1990 - 1996	Trans Sport
W2 <i>Fits vehicle with video system</i> W40 <i>Fits vehicles without video system</i>	W25	1997 - 1998	Trans Sport
W96	W80	2009	Vibe
W31	W20	2003 - 2008	Vibe
			<b>Porsche®</b>
W56	W50	1989 - 1992	911® (964®)
		1993 - 1998	911® (993®)
W56 <i>Fits ALL Coupes, Fits Cabriolet®/Targa® without optional Bose High-End Sound</i> W66 <i>Fits Cabriolet®/Targa® with optional Bose High-End Sound</i>		1998 - 2004	911® (996®)



# Interior Floor Protection



Make / Model	Year	Front FloorLiner™	Rear FloorLiner™
<b>Porsche® (continued)</b>			
911® (997®)	2005 +	Front: <sup>0A</sup> 441321	<i>Fits ALL Coupes, Fits Cabriolet®/Targa® without optional Bose High-End Sound</i>
		Front: 442391	<i>Fits Cabriolet®/Targa® with optional Bose High-End Sound</i>
		Front: 442461	<i>Fits ALL Coupes, Fits Cabriolet®/Targa® without optional Bose High-End Sound</i>
928® / 928s® / 928s2® / 928s4® / 928GTS®	ALL		
944® / 944s®	1983 - 1991		
968® / 968s®	ALL		
Boxster®	ALL	Front: 442391	<i>Fits vehicles with optional Bose High-End Sound</i>
		Front: 442461	<i>Fits vehicles without optional Bose High-End Sound</i>
Cayenne®	2003 - 2010	Front: 440451	<i>Fits vehicles with oval retention devices</i>
		Front: 442451	<i>Fits vehicles with circular retention knobs</i>
		Rear: <sup>3</sup> 440452	
Cayenne®	2011 +	Front: 443331	
		Rear: <sup>2A</sup> 443332	<i>Does not fit vehicles with four zone climate control</i>
Cayman®	ALL	Front: 442391	<i>Fits Cabriolet®/Targa® with optional Bose High-End Sound</i>
		Front: 442461	<i>Fits ALL Coupes, Fits Cabriolet®/Targa® without optional Bose High-End Sound</i>
Panamera®	2010 +	Front: <sup>0A</sup> 442571	
		Rear: <sup>3A</sup> 442572	
<b>Saab</b>			
900	1984 - 1998		
9000	1986 - 1998		
9-3	1999 - 2002		
9-3	2003 +		
9-5	1999 +		
9-2X	2005 +		
9-7X	2005 - 2009	Front: 440071	
		Rear: <sup>3A</sup> 440072	<i>Fits vehicles without 3rd row seats only</i>
<b>Saturn</b>			
Astra	2008 - 2009	Front: 441951	
		Rear: <sup>1</sup> 441952	
Aura	2007 - 2009	Front: 441441	<i>Fits vehicles with one retention device on the driver's side</i>
		Front: 442261	<i>Fits vehicles with two retention devices on driver's side</i>
		Rear: <sup>2</sup> 441442	
Ion	2003 - 2008		
L100	2001 - 2005		
L200	2001 - 2005		
L300	2001 - 2005		
LS	2000		
LS1	2000		
LS2	2000		
LW1	2000 - 2001		
LW2	2000 - 2001		
LW200	2001 - 2004		
LW3	2000 - 2001		
LW300	2001 - 2004		
Outlook	2007 - 2010	Front: 442511	
		Rear: <sup>3A</sup> 441112	<i>Fits vehicles with 2nd row bench seats</i>
		Rear: <sup>4A</sup> 441114	<i>Covers 2nd and 3rd row floor spaces</i>

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
 FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
 All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code  
<sup>SP</sup> Non-Standard Pricing  
<sup>0</sup> Front FloorLiner™  
<sup>0A</sup> Luxury Front FloorLiner™  
<sup>0B</sup> Luxury Front FloorLiner™  
<sup>1</sup> Small Rear FloorLiner™  
<sup>2</sup> Medium Rear FloorLiner™  
<sup>2A</sup> Luxury Medium Rear FloorLiner™  
<sup>3</sup> Large Rear FloorLiner™  
<sup>3A</sup> Luxury Large Rear FloorLiner™  
<sup>4</sup> Extra Large Rear FloorLiner™  
<sup>5</sup> Mega Rear FloorLiner™



# Interior Floor Protection

## All-Weather Floor Mats

## Year

## Make / Model

Front	Rear	Year	Make / Model
<b>Porsche® (continued)</b>			
W55 <i>Fits Cabriolet®/Targa® with optional Bose High-End Sound</i>		2005 +	911® (997®)
W57 <i>Fits ALL Coupes, Fits Cabriolet®/Targa® without optional Bose High-End Sound</i>			
W24	W50	ALL	928® / 928s® / 928s2® / 928s4® / 928GTS®
W57	W50	1983 - 1991	944® / 944s®
W9	W50	ALL	968® / 968s®
W57 <i>Fits 2005+ Boxster® only</i>		ALL	Boxster®
W46	W20	2003 - 2010	Cayenne®
		2011 +	Cayenne®
W57 <i>Fits vehicles without optional Bose surround sound system</i>		ALL	Cayman®
W55 <i>Fits vehicles with optional Bose surround sound system</i>			
		2010 +	Panamera®
<b>Saab</b>			
W3	W20	1984 - 1998	900
W3	W20	1986 - 1998	9000
W3	W20	1999 - 2002	9-3
W2	W20 <i>Does not fit convertible</i>	2003 +	9-3
W3	W20	1999 +	9-5
W3	W50	2005 +	9-2X
W32	W50	2005 - 2009	9-7X
<b>Saturn</b>			
		2008 - 2009	Astra
W89	W20	2007 - 2009	Aura
W2	W20	2003 - 2008	Ion
W2	W20	2001 - 2005	L100
W2	W20	2001 - 2005	L200
W2	W20	2001 - 2005	L300
W2	W20	2000	LS
W2	W20	2000	LS1
W2	W20	2000	LS2
W2	W20	2000 - 2001	LW1
W2	W20	2000 - 2001	LW2
W2	W20	2001 - 2004	LW200
W2	W20	2000 - 2001	LW3
W2	W20	2001 - 2004	LW300
W68	W25	2007 - 2010	Outlook

# Interior Floor Protection



Make / Model

Year

Front FloorLiner™

Rear FloorLiner™

Make / Model	Year	Part #	Notes
<b>Saturn (continued)</b>			
Relay	2005 - 2008		
SC	1991 - 1996		
SC1	1991 - 2002		
SC2	1991 - 2002		
SL	1991 - 2002		
SL1	1991 - 2002		
SL2	1991 - 2002		
SW1	1991 - 2002		
SW2	1991 - 2002		
Vue	2002 - 2007		
Vue	2008 - 2010	Front: 441421 Rear: <sup>3</sup> 441422	
<b>Scion</b>			
tC	2005 - 2010	Front: 442471 Rear: <sup>2</sup> 442472	
tC	2011 +	Front: 443451 Rear: <sup>2</sup> 443452	
xA	2004 - 2007		
xB	2004 - 2007		
xB	2008 +	Front: 441381 Rear: <sup>2</sup> 441382	Manual transmission model will have small gap right of the dead pedal
Xd	2008 +	Front: 442271 Rear: <sup>2</sup> 442273	
<b>Smart</b>			
ForTwo	2008 +	Front: 442151	
<b>Subaru</b>			
B9 Tribeca	2006 +		
Baja	2003 - 2006		
Forester	1998 - 2000		
Forester	2001 - 2002		
Forester	2003 - 2008	Front: 441281 Rear: <sup>1</sup> 440972	Two-piece part
Forester	2009 +	Front: 441881 Rear: <sup>2</sup> 441662	Does not fit vehicles with sub-woofer under driver's seat
GL	1968 - 1998		
Impreza / WRX	1993 - 2001		
Impreza / WRX	2002 - 2007	Front: 440971 Rear: <sup>1</sup> 440972	Two-piece part
Impreza / WRX	2008 - 2011	Front: 441661 Rear: <sup>2</sup> 441662	Does not fit vehicles with sub-woofer under driver's seat
Impreza / WRX	2008 +		
Impreza / WRX	2012 +	Front: 441661 Rear: <sup>2</sup> 441662 Front: 444391	Fits WRX only Fits WRX only Does not fit the WRX
Justy	1987 - 1994		
Legacy Sedan	1990 - 2004		
Legacy Sedan	2005 - 2009	Front: 440831 Rear: <sup>2</sup> 440832	
Legacy Sedan	2010 +	Front: 442591 Rear: <sup>2</sup> 442592	
Legacy Wagon	1990 - 1999		
Legacy Wagon	2000 - 2004		

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
 FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
 All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code  
<sup>SP</sup> Non-Standard Pricing  
<sup>0</sup> Front FloorLiner™  
<sup>0A</sup> Luxury Front FloorLiner™  
<sup>0B</sup> Luxury Front FloorLiner™  
<sup>1</sup> Small Rear FloorLiner™  
<sup>2</sup> Medium Rear FloorLiner™  
<sup>2A</sup> Luxury Medium Rear FloorLiner™  
<sup>3</sup> Large Rear FloorLiner™  
<sup>3A</sup> Luxury Large Rear FloorLiner™  
<sup>4</sup> Extra Large Rear FloorLiner™  
<sup>5</sup> Mega Rear FloorLiner™



# Interior Floor Protection

## All-Weather Floor Mats

## Year

## Make / Model

Front	Rear	Year	Make / Model
<b>Saturn (continued)</b>			
W40	W25	2005 - 2008	Relay
W2	W20	1991 - 1996	SC
W2	W20	1991 - 2002	SC1
W2	W20	1991 - 2002	SC2
W2	W20	1991 - 2002	SL
W2	W20	1991 - 2002	SL1
W2	W20	1991 - 2002	SL2
W2	W20	1991 - 2002	SW1
W2	W20	1991 - 2002	SW2
W2	W20	2002 - 2007	Vue
		2008 - 2010	Vue
<b>Scion</b>			
W31	W20	2005 - 2010	tC
		2011 +	tC
W31	W20	2004 - 2007	xA
W92	W20	2004 - 2007	xB
W92	W20	2008 +	xB
		2008 +	Xd
<b>Smart</b>			
W109		2008 +	ForTwo
<b>Subaru</b>			
W52	W20	2006 +	B9 Tribeca
W52	W20	2003 - 2006	Baja
	W20	1998 - 2000	Forester
	W20	2001 - 2002	Forester
	W20	2003 - 2008	Forester
	W20	2009 +	Forester
W3	W20	1968 - 1998	GL
W52	W50	1993 - 2001	Impreza / WRX
W52	W50	2002 - 2007	Impreza / WRX
		2008 - 2011	Impreza / WRX
W52	W50	2008 +	Impreza / WRX
		2012 +	Impreza / WRX
W3	W20	1987 - 1994	Justy
W3	W20	1990 - 2004	Legacy Sedan
W52	W20	2005 - 2009	Legacy Sedan
W172		2010 +	Legacy Sedan
	W20	1990 - 1999	Legacy Wagon
W52	W20	2000 - 2004	Legacy Wagon

# Interior Floor Protection



Make / Model

Year

Front FloorLiner™

Rear FloorLiner™

Subaru (continued)	Part #	Notes
Legacy Wagon	2005 - 2009	Front: 440831 Rear: <sup>2</sup> 440832
Legacy Wagon	2010 +	Front: 442591 Rear: <sup>2</sup> 442592
Loyale	1990 - 1994	
Outback Sedan	2000 - 2004	
Outback Sedan	2005 - 2009	Front: 440831 Rear: <sup>2</sup> 440832
Outback Sedan	2010 +	Front: 442591 Rear: <sup>2</sup> 442592
Outback Wagon	2000 - 2004	
Outback Wagon	2005 - 2009	Front: 440831 Rear: <sup>2</sup> 440832
Outback Wagon	2010 +	Front: 442591 Rear: <sup>2</sup> 442592
SVX Coupe	1992 - 1997	
XT Coupe	1985 - 1991	
XT6	1988 - 1991	
<b>Suzuki</b>		
Aerio Sedan	2002 - 2006	
Aerio SX	2002 - 2006	
Equator Crew Cab	2009 +	Front: 440471 <i>Fits vehicles with one retention device on driver's side</i> Front: 441761 <i>Fits vehicles with two retention hooks on driver's side</i> Rear: <sup>2</sup> 440473
Equator Extended Cab	2009 +	Front: 440471 <i>Fits vehicles with one retention device on driver's side</i> Front: 441761 <i>Fits vehicles with two retention hooks on driver's side</i> Rear: <sup>2</sup> 440472
Esteem	1995 - 2002	
Forenza	2004 - 2008	Front: 442851
Forenza	2004 +	Rear: 442852
Grand Vitara	1999 - 2005	
Grand Vitara	2006 +	Front: 441891 Rear: <sup>2</sup> 441892
Kizashi	2010 +	Front: 443601 Rear: <sup>2</sup> 443602
Reno	2005 +	
Samurai	1986 - 1995	
Sidekick (2 door)	1989 - 1998	
Sidekick (4 door)	1992 - 1998	
Swift	1989 - 2001	
Verona	2004 +	
Vitara (2 door)	1999 - 2004	
Vitara (4 door)	1999 - 2004	
X-90	1996 - 1998	
XL-7	2001 - 2006	
<b>Toyota</b>		
4 Runner	2010	Front: 442861
4 Runner	1990 - 1995	
4 Runner	1996 - 2002	Front: 441231 Rear: <sup>2</sup> 441232
4 Runner	2003 - 2009	Front: 440111 Rear: <sup>3</sup> 440112 <i>2nd row part, requires trim on vehicles with 3 rows of seats</i>

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code

<sup>SP</sup> Non-Standard Pricing

<sup>0</sup> Front FloorLiner™

<sup>0A</sup> Luxury Front FloorLiner™

<sup>0B</sup> Luxury Front FloorLiner™

<sup>1</sup> Small Rear FloorLiner™

<sup>2</sup> Medium Rear FloorLiner™

<sup>2A</sup> Luxury Medium Rear FloorLiner™

<sup>3</sup> Large Rear FloorLiner™

<sup>3A</sup> Luxury Large Rear FloorLiner™

<sup>4</sup> Extra Large Rear FloorLiner™

<sup>5</sup> Mega Rear FloorLiner™



# Interior Floor Protection

All-Weather Floor Mats		Year	Make / Model
Front	Rear		Subaru (continued)
W52	W20	2005 - 2009	Legacy Wagon
W172		2010 +	Legacy Wagon
W3	W20	1990 - 1994	Loyale
W52	W20	2000 - 2004	Outback Sedan
W52	W20	2005 - 2009	Outback Sedan
W172		2010 +	Outback Sedan
W52	W20	2000 - 2004	Outback Wagon
W52	W20	2005 - 2009	Outback Wagon
W172		2010 +	Outback Wagon
W52	W20	1992 - 1997	SVX Coupe
W3	W20	1985 - 1991	XT Coupe
W3	W20	1988 - 1991	XT6
			<b>Suzuki</b>
W34	W20	2002 - 2006	Aerio Sedan
W4	W20	2002 - 2006	Aerio SX
W3	W20	2009 +	Equator Crew Cab
W3	W20	2009 +	Equator Extended Cab
W3	W20	1995 - 2002	Esteem
		2004 - 2008	Forenza
W4	W20	2004 +	Forenza
W3	W20	1999 - 2005	Grand Vitara
W39	W50	2006 +	Grand Vitara
		2010 +	Kizashi
W3	W20	2005 +	Reno
W3	W20	1986 - 1995	Samurai
W3	W20	1989 - 1998	Sidekick (2 door)
W3	W20	1992 - 1998	Sidekick (4 door)
W3	W20	1989 - 2001	Swift
W34	W20	2004 +	Verona
W3	W20	1999 - 2004	Vitara (2 door)
W3	W20	1999 - 2004	Vitara (4 door)
W3		1996 - 1998	X-90
W3	W20	2001 - 2006	XL-7
			<b>Toyota</b>
		2010	4 Runner
W2	W20	1990 - 1995	4 Runner
W3	W20	1996 - 2002	4 Runner
W39	W136	2003 - 2009	4 Runner



# Interior Floor Protection



Make / Model	Year	Front FloorLiner™	Rear FloorLiner™
<b>Toyota (continued)</b>			
4 Runner	2010 +	Front: 443611 Rear: <sup>2</sup> 442862	<i>Fits vehicles with 2 hooks on passenger side floor</i>
Avalon	1995 - 1999		
Avalon	2000 - 2004		
Avalon	2005 +	Front: 441301 Rear: <sup>3</sup> 441302	
Camry	1989 - 2001		
Camry	2002 - 2006	Front: 440511 Rear: <sup>2</sup> 440512	
Camry	2007 - 2011	Front: 440841 Rear: <sup>2</sup> 440842	
Camry	2012 +	Front: 444001 Rear: <sup>2</sup> 444002	
Camry Solara	1999 - 2003		
Camry Solara	2004 +		
Celica	1999 & Older		
Celica	2000 - 2005		
Corolla	1992 & Older		
Corolla	1993 - 1997		
Corolla	1998 - 2002		
Corolla	2003 - 2008	Front: 441091 Front: 442901 Rear: <sup>1</sup> 441092	<i>Fits vehicles with heating vents under front row of seats</i> <i>Fits vehicles without heating vents under front row of seats</i>
Corolla	2009 +	Front: 441861 Rear: <sup>2</sup> 441862	<i>Fits automatic transmission models with heating vents under front row seats only</i>
Cressida	1989 - 1992		
Echo	2000 - 2005		
FJ Cruiser	2007 +	Front: 443111 Rear: <sup>2</sup> 443112	
Fortuner	2007 - 2011	Front: 441001 Rear: <sup>3</sup> 441003	
Fortuner	2012 +	Front: 444061 Rear: <sup>3</sup> 441003	<i>Fits vehicles with two twist style retention posts (not hooks) on drivers side</i>
Highlander	2001 - 2007	Front: 440141 Front: 440391 Rear: <sup>2</sup> 440392	<i>Fits hybrid only</i> <i>Does not fit hybrid</i> <i>2nd Row, fits hybrid</i>
Highlander	2008 +	Front: 441151 Front: 441311 Rear: <sup>2</sup> 441152 Rear: <sup>1</sup> 441153	<i>Does not fit hybrid</i> <i>Fits hybrid only</i> <i>2nd Row, fits hybrid</i> <i>3rd Row, fits hybrid</i>
Hilux, Double Cab	2006 - 2011	Front: 441001 Rear: <sup>3</sup> 441002	<i>Also called Vigo</i> <i>Also called Vigo</i>
Hilux, Double Cab	2012 +	Front: 444061 Rear: <sup>3</sup> 441002	<i>Fits vehicles with two twist style retention posts (not hooks) on drivers side</i> <i>Also called Vigo</i>
Land Cruiser	1997 & Older		
Land Cruiser	1998 - 2006		

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code  
<sup>SP</sup> Non-Standard Pricing  
<sup>0</sup> Front FloorLiner™  
<sup>0A</sup> Luxury Front FloorLiner™  
<sup>0B</sup> Luxury Front FloorLiner™  
<sup>1</sup> Small Rear FloorLiner™  
<sup>2</sup> Medium Rear FloorLiner™  
<sup>2A</sup> Luxury Medium Rear FloorLiner™  
<sup>3</sup> Large Rear FloorLiner™  
<sup>3A</sup> Luxury Large Rear FloorLiner™  
<sup>4</sup> Extra Large Rear FloorLiner™  
<sup>5</sup> Mega Rear FloorLiner™



# Interior Floor Protection

All-Weather Floor Mats		Year	Make / Model
Front	Rear		Toyota (continued)
W39	W136	2010 +	4 Runner
W2	W20	1995 - 1999	Avalon
W31	W20	2000 - 2004	Avalon
W174	W201	2005 +	Avalon
W2	W20	1989 - 2001	Camry
W4	W20	2002 - 2006	Camry
W71	W85	2007 - 2011	Camry
W255	W256	2012 +	Camry
W2	W20	1999 - 2003	Camry Solara
W34	W50	2004 +	Camry Solara
W3	W50	1999 & Older	Celica
W31	W50	2000 - 2005	Celica
W3	W20	1992 & Older	Corolla
W34	W20	1993 - 1997	Corolla
W3	W20	1998 - 2002	Corolla
W31	W20	2003 - 2008	Corolla
W96	W80	2009 +	Corolla
W3	W20	1989 - 1992	Cressida
W31	W20	2000 - 2005	Echo
		2007 +	FJ Cruiser
		2007 - 2011	Fortuner
		2012 +	Fortuner
W29 <i>Does not fit hybrid</i> W40 <i>Fits hybrid</i>	W20	2001 - 2007	Highlander
W120 <i>Fits hybrid</i> W86 <i>Does not fit hybrid</i>	W122 <i>3rd row</i> W121 <i>2nd row</i>	2008 +	Highlander
		2006 - 2011	Hilux, Double Cab
		2012 +	Hilux, Double Cab
W3	W20	1997 & Older	Land Cruiser
	W25 <i>2nd row</i>	1998 - 2006	Land Cruiser



# Interior Floor Protection



Make / Model	Year	Front FloorLiner™	Rear FloorLiner™
<b>Toyota (continued)</b>			
Land Cruiser	1998 - 2007	Front: 440771 Rear: <sup>3</sup> 440772	
Land Cruiser	2008 +	Front: 441571 Rear: <sup>3</sup> 441572	2nd row
Matrix	2003 - 2008		
Matrix	2009 +	Front: 441861 Front: 441871 Rear: <sup>2</sup> 441862	Fits FWD models only, fits automatic transmission models with heating vents under front row of seats only Fits AWD models only Fits FWD models only, does not fit manual transmission
MR2	ALL		
Paseo	ALL		
Pickup	1989 - 1995		
Pickup T100	1993 - 1998		
Prado	2003 +	Front: 440701 Front: 441211 Rear: <sup>3</sup> 440702	Fits vehicles without rear seat entertainment system Fits vehicles with rear entertainment system
Previa	1991 - 1997		
Prius	2001 - 2003		
Prius	2004 - 2009	Front: 440851 Rear: <sup>3</sup> 440852	
Prius	2010 +	Front: 442561 Rear: <sup>2</sup> 442562	
Prius	2012 +	Front: 444271	
Prius C	2012 +		
Prius V	2012 +	Front: 444271 Rear: 444272	
RAV4	1996 - 2000		
RAV4	2001 - 2006		
RAV4	2006 +	Front: 440721 Rear: <sup>1</sup> 440722	
Sequoia	2001 - 2004		
Sequoia	2005 - 2007	Front: 440441 Rear: <sup>3</sup> 440443	
Sequoia	2008 - 2011	Front: 442771 Rear: <sup>2</sup> 440934 Rear: <sup>3</sup> 440937 Rear: <sup>3</sup> 440935 Rear: <sup>2</sup> 440936	2nd row, does not fit models with 2nd row console 2nd row, Fits 7 passenger models with 2nd row console 3rd row 3rd Row, Fits 8 passenger models only
Sequoia	2012 +	Front: 444081	Fits vehicles with two twist style retention posts on the driver side
Sienna	1998 - 2003		
Sienna	2004 - 2010	Front: 443151 Front: 443181 Rear: <sup>3</sup> 440872 Rear: <sup>2</sup> 440873	Over-hump one piece front 2nd row 3rd row
Sienna	2011 +	Front: 443001 Rear: <sup>2</sup> 443002 Rear: 443003 Rear: <sup>4</sup> 443004	2nd row, Fits 8 passenger models only 3rd row, Fits 8 passenger models only Fits 7 passenger models only
Supra	ALL		
Tacoma	1995 - 2000		
Tacoma Access Cab	2001 - 2004	Front: 440101	

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
 FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
 All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code  
<sup>SP</sup> Non-Standard Pricing  
<sup>0</sup> Front FloorLiner™  
<sup>0A</sup> Luxury Front FloorLiner™  
<sup>0B</sup> Luxury Front FloorLiner™  
<sup>1</sup> Small Rear FloorLiner™  
<sup>2</sup> Medium Rear FloorLiner™  
<sup>2A</sup> Luxury Medium Rear FloorLiner™  
<sup>3</sup> Large Rear FloorLiner™  
<sup>3A</sup> Luxury Large Rear FloorLiner™  
<sup>4</sup> Extra Large Rear FloorLiner™  
<sup>5</sup> Mega Rear FloorLiner™



# Interior Floor Protection

All-Weather Floor Mats		Year	Make / Model
Front	Rear		Toyota (continued)
W23	W60 <i>3rd row</i>	1998 - 2007	Land Cruiser
W126	W127	2008 +	Land Cruiser
W31	W20	2003 - 2008	Matrix
W96	W80	2009 +	Matrix
W3		ALL	MR2
W3	W20	ALL	Paseo
W2	W20	1989 - 1995	Pickup
W4	W20	1993 - 1998	Pickup T100
W39	W20	2003 +	Prado
	W5	1991 - 1997	Previa
W31	W20	2001 - 2003	Prius
W108	W130	2004 - 2009	Prius
W151	W85	2010 +	Prius
W271		2012 +	Prius
	W117	2012 +	Prius C
W271	W150	2012 +	Prius V
W3	W20	1996 - 2000	RAV4
W31	W20	2001 - 2006	RAV4
W81	W20	2006 +	RAV4
W4	W25	2001 - 2004	Sequoia
W4	W25	2005 - 2007	Sequoia
W76	W140	2008 - 2011	Sequoia
W265		2012 +	Sequoia
W4	W25	1998 - 2003	Sienna
W41	W25	2004 - 2010	Sienna
W202	W245 <i>3rd Row</i> W247 <i>Between 2nd Row</i>	2011 +	Sienna
W3	W20	ALL	Supra
W3	W25	1995 - 2000	Tacoma
W3	W20	2001 - 2004	Tacoma Access Cab



# Interior Floor Protection



Make / Model	Year	Front FloorLiner™	Rear FloorLiner™
<b>Toyota (continued)</b>			
Tacoma Access Cab	2005 - 2011	Front: 440211	<i>Fits vehicles without retention hooks on passenger side, Does not fit manual transmission models</i>
		Front: 441781	<i>Fits vehicles with 2 retention hooks on passenger side, Does not fit manual transmission models</i>
		Rear: <sup>2</sup> 440212	<i>Fits vehicles with rear bench seat</i>
Tacoma Access Cab	2009 - 2011	Rear: <sup>3</sup> 440214	<i>Fits vehicles with the rear tool box option</i>
Tacoma Access Cab	2012 +	Rear: 440215	<i>Fits Access cab models with 2nd row center storage</i>
Tacoma Double Cab	2001 - 2004		
Tacoma Double Cab	2005 - 2011	Front: 441781	<i>Fits vehicles with 2 retention hooks on passenger side, Does not fit manual transmission models</i>
		Rear: <sup>2</sup> 440213	
Tacoma Double Cab	2012 +	Front: 444531	<i>Fits vehicles with two twist style retention posts on the driver and passenger side</i>
Tacoma Regular Cab	2001 - 2004	Front: 440101	
Tacoma Regular Cab	2005 - 2011	Front: 440211	<i>Fits vehicles without retention hooks on passenger side, Does not fit manual transmission models</i>
		Front: 441781	<i>Fits vehicles with 2 retention hooks on passenger side, Does not fit manual transmission models</i>
Tercel	1983 - 1998		
Tundra Access Cab	2000 - 2004	Front: 440011 Rear: 440012	
Tundra Access Cab	2005 - 2006	Front: 440441 Rear: <sup>3</sup> 440442	
Tundra CrewMax Cab	2007 - 2011	Front: 442771	
Tundra CrewMax Cab	2007 +	Rear: <sup>3</sup> 440933	
Tundra CrewMax Cab	2012 +	Front: 444081	<i>Fits vehicles with two twist style retention posts on the driver side</i>
Tundra Double Cab	2004 - 2006	Front: 440301	
		Rear: <sup>2</sup> 440302	<i>Bench seat truck requires trim marked on part</i>
Tundra Double Cab	2007 - 2011	Front: 442771	
		Rear: <sup>3</sup> 440932	
Tundra Double Cab	2012 +		
Tundra Regular Cab	2000 - 2004	Front: 440011	<i>Passenger side liner without retention hook bosses</i>
Tundra Regular Cab	2005 - 2006	Front: 440441	
Tundra Regular Cab	2007 - 2011	Front: 442771	
Tundra Regular Cab	2007 +		
Tundra Regular Cab	2012 +	Front: 444081	<i>Fits vehicles with two twist style retention posts on the driver side</i>
Venza	2009 +	Front: 441831	
		Rear: <sup>3</sup> 441832	
Yaris	2007 - 2011	Front: 442271	
		Rear: <sup>2</sup> 442273	<i>Fits Lift back models only</i>
Yaris	2007 +		
Yaris	2012 +	Front: 444181	
		Rear: <sup>2</sup> 444182	
<b>Volkswagen</b>			
Amarok	2011 +	Front: 443261	
		Rear: <sup>2</sup> 443262	<i>Two-piece part</i>
Beetle	1998 - 2011	Front: 442631	<i>Fits vehicles with round retention devices</i>
		Rear: <sup>1</sup> 442632	<i>Two-piece part</i>
Beetle	1998 +		
Beetle	2012 +	Front: 443381	
Cabriolet	1985 - 1993		
Cabriolet	1995 - 2002		

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
 FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
 All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code  
<sup>SP</sup> Non-Standard Pricing  
<sup>0</sup> Front FloorLiner™  
<sup>0A</sup> Luxury Front FloorLiner™  
<sup>0B</sup> Luxury Front FloorLiner™  
<sup>1</sup> Small Rear FloorLiner™  
<sup>2</sup> Medium Rear FloorLiner™  
<sup>2A</sup> Luxury Medium Rear FloorLiner™  
<sup>3</sup> Large Rear FloorLiner™  
<sup>3A</sup> Luxury Large Rear FloorLiner™  
<sup>4</sup> Extra Large Rear FloorLiner™  
<sup>5</sup> Mega Rear FloorLiner™



# Interior Floor Protection

## All-Weather Floor Mats

## Year

## Make / Model

Front	Rear		<b>Toyota (continued)</b>
W123	W20	2005 - 2011	Tacoma Access Cab
		2009 - 2011	Tacoma Access Cab
		2012 +	Tacoma Access Cab
W3	W20	2001 - 2004	Tacoma Double Cab
W123	W136	2005 - 2011	Tacoma Double Cab
		2012 +	Tacoma Double Cab
W3		2001 - 2004	Tacoma Regular Cab
W123		2005 - 2011	Tacoma Regular Cab
W3	W20	1983 - 1998	Tercel
W4	W20	2000 - 2004	Tundra Access Cab
W40	W20	2005 - 2006	Tundra Access Cab
W76		2007 - 2011	Tundra CrewMax Cab
	W140	2007 +	Tundra CrewMax Cab
W265		2012 +	Tundra CrewMax Cab
W40	W20	2004 - 2006	Tundra Double Cab
W76	W140	2007 - 2011	Tundra Double Cab
W265		2012 +	Tundra Double Cab
W4		2000 - 2004	Tundra Regular Cab
W40		2005 - 2006	Tundra Regular Cab
W76		2007 - 2011	Tundra Regular Cab
		2007 +	Tundra Regular Cab
W265		2012 +	Tundra Regular Cab
W128	W129	2009 +	Venza
W116	W117	2007 - 2011	Yaris
		2007 +	Yaris
	W85	2012 +	Yaris
			<b>Volkswagen</b>
		2011 +	Amarok
		1998 - 2011	Beetle
W31	W50	1998 +	Beetle
		2012 +	Beetle
W3	W20	1985 - 1993	Cabriolet
W31	W50	1995 - 2002	Cabriolet



# Interior Floor Protection



Make / Model	Year	Front FloorLiner™	Rear FloorLiner™
<b>Volkswagen (continued)</b>			
CC	2009 +	Front: 441671 Rear: <sup>1</sup> 441672	<i>Does not fit manual transmission models</i> <i>Two-piece part</i>
Corrado	1990 - 1995		
Eos	2007 +		
EuroVan	1993 - 2003		
Fox	ALL		
Golf / Rabbit / GTI / R32	1988 - 1992		
Golf / Rabbit / GTI / R32	1993 - 1998		
Golf / Rabbit / GTI / R32	1999 - 2006		
Golf / Rabbit / GTI / R32	2006 +	Front: 440801 Front: 442691 Rear: <sup>1</sup> 440802	<i>Liners are configured for oval retention devices, fits vehicles with automatic transmission only</i> <i>Liners are configured for round retention devices</i> <i>Two-piece part</i>
Golf Plus	2009 +	Front: 443931E	
Jetta / GLI	1988 - 1992		
Jetta / GLI	1993 - 2005		
Jetta / GLI	2005.5 +	Front: 440801 Front: 442691 Rear: <sup>1</sup> 440802	<i>Liners are configured for oval retention devices, fits vehicles with automatic transmission only</i> <i>Liners are configured for round retention devices</i> <i>Two-piece part</i>
Jetta / GLI	2011 +	Front: 442691 Rear: <sup>1</sup> 443382 Front: 443381	<i>Fits sportswagon only</i> <i>Does not fit sportswagon</i> <i>Does not fit sportswagon</i>
Passat	1990 - 1997		
Passat	1998 - 2005		
Passat	2006 - 2011	Front: 441671 Rear: <sup>1</sup> 441672	<i>Does not fit manual transmission models</i> <i>Two-piece part</i>
Passat	2006 +		
Passat	2012 +	Front: 443841	
Phaeton	2004 - 2006		
Routan	2009 - 2011	Front: 441411 Rear: <sup>2</sup> 441412 Rear: <sup>3</sup> 441413	<i>Fits vehicles with no retention hook on the RHS</i> <i>2nd row</i> <i>3rd row</i>
Routan	2011 +	Front: 444211	<i>Fits vehicles with 1 retention hook on the LHS and 1 retention hook on the RHS</i>
Tiguan	2009 +	Front: 441521 Rear: <sup>2</sup> 441522	
Touareg	2003 - 2010	Front: 440451 Rear: <sup>3</sup> 440452	<i>Liners are configured for oval retention devices, circular devices also align properly</i>
Touareg	2011 +	Front: 443331 Rear: <sup>2A</sup> 443332	<i>Does not fit models with four zone climate control</i>
Vanagon	ALL		
<b>Volvo</b>			
240	ALL		
740	1985 - 1997		
760	1985 - 1997		
780	ALL		
850 Sedan	1993 - 1997		
850 Wagon	1994 - 1997		
940 Sedan	1985 - 1997		
940 Wagon	1985 - 1997		
960 Sedan	1985 - 1997		
960 Wagon	1985 - 1997		

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code  
<sup>SP</sup> Non-Standard Pricing  
<sup>0</sup> Front FloorLiner™  
<sup>0A</sup> Luxury Front FloorLiner™  
<sup>0B</sup> Luxury Front FloorLiner™  
<sup>1</sup> Small Rear FloorLiner™  
<sup>2</sup> Medium Rear FloorLiner™  
<sup>2A</sup> Luxury Medium Rear FloorLiner™  
<sup>3</sup> Large Rear FloorLiner™  
<sup>3A</sup> Luxury Large Rear FloorLiner™  
<sup>4</sup> Extra Large Rear FloorLiner™  
<sup>5</sup> Mega Rear FloorLiner™





# Interior Floor Protection

## All-Weather Floor Mats

## Year

## Make / Model

Front	Rear	Year	Make / Model
			<b>Volkswagen (continued)</b>
W53	W20	2009 +	CC
W2	W20	1990 - 1995	Corrado
W53	W50	2007 +	Eos
W3	W25	1993 - 2003	EuroVan
W3	W20	ALL	Fox
W2	W20	1988 - 1992	Golf / Rabbit / GTI / R32
W31	W20	1993 - 1998	Golf / Rabbit / GTI / R32
W31	W20	1999 - 2006	Golf / Rabbit / GTI / R32
W53	W50	2006 +	Golf / Rabbit / GTI / R32
		2009 +	Golf Plus
W2	W20	1988 - 1992	Jetta / GLI
W31	W50	1993 - 2005	Jetta / GLI
W53	W50	2005.5 +	Jetta / GLI
		2011 +	Jetta / GLI
W2	W20	1990 - 1997	Passat
W2	W20	1998 - 2005	Passat
		2006 - 2011	Passat
W53	W20	2006 +	Passat
		2012 +	Passat
W31		2004 - 2006	Phaeton
		2009 - 2011	Routan
		2011 +	Routan
		2009 +	Tiguan
W46	W20	2003 - 2010	Touareg
		2011 +	Touareg
W3	W25	ALL	Vanagon
			<b>Volvo</b>
W3	W20	ALL	240
W3	W20	1985 - 1997	740
W3	W20	1985 - 1997	760
W3	W20	ALL	780
W3	W20	1993 - 1997	850 Sedan
W3	W20	1994 - 1997	850 Wagon
W3	W20	1985 - 1997	940 Sedan
W3	W20	1985 - 1997	940 Wagon
W3	W20	1985 - 1997	960 Sedan
W3	W20	1985 - 1997	960 Wagon

# Interior Floor Protection



Make / Model

Year

Front FloorLiner™

Rear FloorLiner™

**Volvo (continued)**

Make / Model	Year	Part #	Notes
C30	2007 +	Front: 442791 Rear: <sup>2</sup> 442792	Does not fit vehicles with manual transmission
C70	1998 - 2010		
S40	2000 - 2004		
S40	2004.5 +	Front: 442791 Rear: <sup>2</sup> 442793	Does not fit vehicles with manual transmission
S60	2001 - 2010		
S60	2011 +	Rear: 442343	
S70	1998 - 2000		
S80	1999 - 2006		
S80	2007 +	Front: 442321 Rear: <sup>3</sup> 442322	
S90	1998		
V40	2000 - 2004		
V50	2005 +	Front: 442791 Rear: <sup>2</sup> 442793	Does not fit vehicles with manual transmission
V70	1998 - 2000		
V70	2001 - 2007		
V70	2008 +	Front: 442321 Rear: <sup>3</sup> 442322	
V90	1998		
XC60	2010 +	Front: 442341 Rear: <sup>2</sup> 442342	Two-piece part
XC70	2001 - 2007		
XC70	2008 +	Front: 442321 Front: <sup>3</sup> 442322	
XC90	2003 +	Front: 440531 Rear: <sup>1</sup> 440532 Rear: <sup>1</sup> 440533	2nd row, two-piece part, driver's side part requires trim on some 2004+ models 3rd row

All Floor Mat, FloorLiner™ Part Numbers are for BLACK ONLY.  
 FloorLiner™ Front Order Code: Black = 44XXXX, Tan = 45XXXX, Gray = 46XXXX  
 All-Weather Mat Order Code: Tan - add TN i.e. W3TN; Gray - add GR i.e. W3GR

FloorLiner™ Code  
<sup>SP</sup> Non-Standard Pricing  
<sup>0</sup> Front FloorLiner™  
<sup>0A</sup> Luxury Front FloorLiner™  
<sup>0B</sup> Luxury Front FloorLiner™  
<sup>1</sup> Small Rear FloorLiner™  
<sup>2</sup> Medium Rear FloorLiner™  
<sup>2A</sup> Luxury Medium Rear FloorLiner™  
<sup>3</sup> Large Rear FloorLiner™  
<sup>3A</sup> Luxury Large Rear FloorLiner™  
<sup>4</sup> Extra Large Rear FloorLiner™  
<sup>5</sup> Mega Rear FloorLiner™



# Interior Floor Protection

## All-Weather Floor Mats


## Year

## Make / Model


Front	Rear	Year	Volvo (continued)
W171	W170	2007 +	C30
W44	W50	1998 - 2010	C70
	W50	2000 - 2004	S40
W171	W50	2004.5 +	S40
	W50	2001 - 2010	S60
W166		2011 +	S60
W3	W20	1998 - 2000	S70
W43	W50	1999 - 2006	S80
W169	W170	2007 +	S80
W3	W20	1998	S90
W3	W20	2000 - 2004	V40
W171	W50	2005 +	V50
W3	W20	1998 - 2000	V70
	W50	2001 - 2007	V70
W169	W170	2008 +	V70
W3	W20	1998	V90
W169	W170	2010 +	XC60
	W50	2001 - 2007	XC70
W169	W170	2008 +	XC70
W44	W50	2003 +	XC90
	W60		

# WeatherTech<sup>®</sup>AVM<sup>®</sup>


All-Vehicle Mats

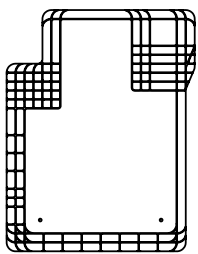


LHS  
Semi-Custom  
Driver Side

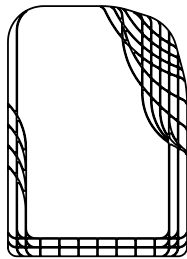

RHS  
Semi-Custom  
Passenger Side

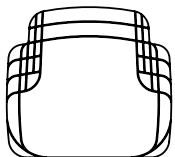

R1 Semi-Custom  
Rear

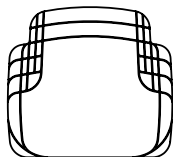

R1 Semi-Custom  
Rear

Part Number	Front / Rear / Set	Color
11AVMFB	Front	Black
11AVMRB	Rear	Black
11AVMSB	F/R Set	Black
11AVMFT	Front	Tan
11AVMRT	Rear	Tan
11AVMST	F/R Set	Tan
11AVMFG	Front	Grey
11AVMRG	Rear	Grey
11AVMSG	F/R Set	Grey

Cargo Liners



AVM® Universal Cargo Mat







# Cargo & Trunk Protection

## COMPUTER DESIGNED CARGO PROTECTION

WeatherTech® Cargo Liners provide complete trunk and cargo area protection. Our Cargo Liners are digitally designed to fit your vehicle and have a raised lip to keep spills, dirt and grease off your vehicle's interior, protecting your investment from normal wear and tear.

Made from a proprietary custom blended TPO that is not only wear resistant, but also remains flexible under temperature extremes. The WeatherTech® Cargo Liners feature a textured finish which helps to keep cargo from shifting, and is perfect for hauling just about anything from gardening supplies to construction materials to the family pet.

Protect your interior carpet with the WeatherTech® Cargo Liners. Quality built in America, WeatherTech® Cargo Liners meet FMVSS302 standards. Choose from Black, Tan or Grey to complement virtually any interior color. Available for car trunks, minivans and SUVs.

Contoured Design



Cargo Liner Detail




GMC Yukon



Grocery Spill



*Proudly Designed,  
Engineered and  
Manufactured with  
American made  
Tooling in the USA*





TOYOTA RAV4



HONDA ODYSSEY



FORD EXPEDITION



CADILLAC ESCALADE



**Cargo Liners Available for**

Acura • Audi • BMW • Buick • Cadillac • Chevrolet • Chrysler • Daihatsu • Dodge • Ferrari • Ford • Geo • GM • GMC • Honda • Hummer • Hyundai • Infiniti • Isuzu • Jeep • Kia • Land Rover • Lexus • Lincoln • Mazda • Mercedes-Benz® • Mercury • Mini • Mitsubishi • Nissan • Oldsmobile • Plymouth • Pontiac • Porsche® • Saab • Saturn • Scion • Subaru • Suzuki • Toyota • Volkswagen • Volvo • And More!

# Cargo & Trunk Protection

LEXUS RX350



DODGE CALIBER



TOYOTA HIGHLANDER HYBRID



TOYOTA CAMRY



**WeatherTech<sup>®</sup>**AVM<sup>®</sup>  
Universal Cargo Mats





## AVM® UNIVERSAL CARGO MATS

Universal Protection, protect your investment from normal wear and tear. Intelligent design, combined with trim lines allow for a truly custom fit. Tall outer ridges and channels contain and keep fluid away from vehicle's interior. Soft flexible rubber compound that won't curl, crack or harden even in sub-zero temperatures. Textured finished and raised areas help prevent cargo from shifting. Perfect for hauling just about anything from gardening supplies to construction materials to the family pet.

These features, combined with our commitment to the environment and sustainable design, led to the development of our advanced rubber compound that is an OEM approved, virtually odorless material that contains no harmful PVCs, cadmium, or lead and is 100% recyclable! Available in Black, Tan and Grey.


Water Spill



Trim-to-Fit™ Cargo Mat



Trim-To-Fit™  
length from  
27½" - 36"

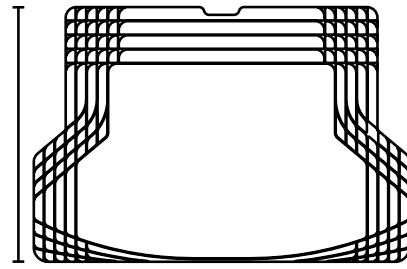

Trim-To-Fit™ width from  
41" - 53"



Flexible Material



*Proudly Designed,  
Engineered and  
Manufactured with  
American made  
Tooling in the USA*



# Cargo & Trunk Protection



Make / Model	Year	Cargo Liners	
Acura		Part #	Notes
CL	1997 - 1999.5	<sup>2</sup> 40043 (B)	
CL	2001 - 2003	<sup>2</sup> 40116 (B)	
Integra	1994 - 2001	<sup>2</sup> 40110 (B)	<i>Fits sedan only</i>
MDX	2001 - 2006	<sup>3</sup> 40182 (B,T,G)	<i>Behind 2nd seat</i>
MDX	2007 +	<sup>3</sup> 40420 (B,T,G)	<i>Behind 2nd seat</i>
		<sup>2</sup> 40421 (B,T,G)	<i>Behind 3rd seat</i>
MDX	2010 +	<sup>2</sup> 40452	
RDX	2007 +	<sup>3</sup> 40329 (B,T,G)	
SLX	1996 - 1999	<sup>2</sup> 40014 (B,T,G)	
TL	1999 - 2003	<sup>2</sup> 40116 (B)	
TL	2004 - 2008	<sup>2</sup> 40234 (B)	<i>Fits models without navigation system only</i>
TL	2009 +	<sup>3</sup> 40389 (B)	<i>Fits front wheel drive models only</i>
		<sup>2</sup> 40402 (B)	<i>Fits all wheel drive models only</i>
TSX	2009 +	<sup>3</sup> 40381 (B)	
<b>Alfa Romeo</b>			
159	2005 - 2011	40522	
Giulietta	2010 +	40530	
<b>Audi</b>			
A3	2006 +	<sup>2</sup> 40394 (B,T,G)	
A4 / S4 / RS4	2009 +	<sup>2</sup> 40388 (B)	<i>Fits sedan</i>
		<sup>3</sup> 40466 (B,T,G)	<i>Fits Avant</i>
A4 Avant	1998 - 2001	<sup>3</sup> 40123 (B,T,G)	<i>Does not fit 1998 with factory installed CD changer</i>
A4 Avant	2002 - 2008	<sup>2</sup> 40217 (B,T,G)	
A4 Sedan	1996 - 1999	<sup>2</sup> 40086 (B)	<i>Fits front wheel drive only</i>
		<sup>2</sup> 40097 (B)	<i>Fits Quattro only</i>
A4 Sedan	1999.5 - 2001	<sup>3</sup> 40161 (B)	<i>Fits Quattro only</i>
A4 Sedan	2002 - 2008	<sup>2</sup> 40211 (B)	<i>Fits Quattro only</i>
A5 / S5 / RS5	2008 +	<sup>2</sup> 40388 (B)	
A6 Avant / S6 Avant	1995 - 1998	<sup>4</sup> 40109 (B,T,G)	
A6 Avant / S6 Avant	1999 - 2005	<sup>4</sup> 40127 (B,T,G)	
A6 Sedan / S6 Sedan	1998 - 2004	<sup>3</sup> 40132 (B)	
A6 Sedan / S6 Sedan	2005 - 2011	<sup>3</sup> 40272 (B)	
A7	2012 +	<sup>4</sup> 40494	
A8 / A8L / S8	2004 - 2010	<sup>4</sup> 40393 (B)	
Allroad	1999 - 2005	<sup>4</sup> 40127 (B,T,G)	
Q5	2009 +	<sup>3</sup> 40401 (B,T,G)	
Q7	2007 +	<sup>3</sup> 40422 (B,T,G)	<i>Fits behind 2nd row seats</i>
		<sup>2</sup> 40423 (B,T,G)	<i>Fits behind 3rd row seats</i>
S4 Avant	2001 - 2002	<sup>3</sup> 40123 (B,T,G)	
S4 Avant	2004 +	<sup>2</sup> 40217 (B,T,G)	
S4 Sedan	2000 - 2002	<sup>3</sup> 40161 (B)	<i>Fits Quattro only</i>
S4 Sedan	2004 +	<sup>2</sup> 40211 (B)	
<b>BMW</b>			
3-Series (E36)	1991 - 1999	<sup>2</sup> 40033 (B)	<i>Fits coupe only</i>
318i/iS/ti, 323i/is/Ci, 325i/is, 328i/is		<sup>2</sup> 40077 (B)	<i>Fits hatchback only</i>
3-Series (E46)	1998 - 2006	<sup>2</sup> 40135 (B)	<i>Fits sedan only</i>
323i, 325i/Ci, 328i, 330i/xi, M3		<sup>3</sup> 40181 (B,T,G)	<i>Fits sportwagon only</i>
3-Series (E90, E91, E92, E93)	2006 - 2012	<sup>2</sup> 40276 (B)	<i>Fits coupe and sedan</i>
325i/xi, 328i/xi, 330i/xi, 335i/xi, M3			
3-Series (F30)	2012 +	<sup>2</sup> 40527 (B)	<i>Fits sedan only</i>
328i, 335i			
5-Series (E34)	1989 - 1995	<sup>2</sup> 40032 (B)	<i>Fits sedan only</i>
525i, 530i, 535i, 540i, M5			
5-Series (E39)	1996 - 2003	<sup>2</sup> 40078 (B)	<i>Fits sedan only</i>
525i, 528i, 530i, 540i, M5		<sup>4</sup> 40145 (B,T,G)	<i>Fits sportwagon only</i>

All Cargo Liners Part Numbers are for BLACK ONLY.  
Cargo Liner Order Code: B=Black (40XXX), T=Tan (41XXX), & G=Gray (42XXX)

Cargo Liners:  
<sup>1</sup> Small  
<sup>2</sup> Medium  
<sup>3</sup> Large  
<sup>4</sup> X Large  
<sup>7</sup> TBA  
 (to be announced)



## Cargo Liners

Year

Make / Model

Part #	Notes	Year	Make / Model
<b>BMW (continued)</b>			
<sup>2</sup> 40261 (B)	<i>Fits sedan only</i>	2004 - 2010	5-Series (E60, E61) 525i/xi, 530i/xi, 535i/xi, 545i, 550i, M5
<sup>4</sup> 40467 (B)	<i>Fits sedan models only</i>	2011 +	5-series (F10) 528i, 535i, 550i, ActiveHybrid 5, M5
<sup>4</sup> 40462 (B)		2010 +	5-Series GT 535i, 535ix, 550i, 550ix
<sup>4</sup> 40079 (B)	<i>Fits vehicles without navigation only</i>	1995 - 2001	7-Series (E38) 740i/iL, 750iL
<sup>4</sup> 40220 (B)	<i>Fits models without rear cool box only</i>	2003 - 2009	7-Series (E65, E66) 745i/Li, 750i/Li, 760i/Li
<sup>3</sup> 40430 (B)	<i>Fits i and Li models</i>	2010 +	7-Series (F01, F02) 750i/Li/xDrive
40502		2009 +	X1, E84
<sup>3</sup> 40260 (B,T,G)		2004 - 2010	X3
<sup>2</sup> 40497 (B,T,G)		2011 +	X3 (F25)
<sup>3</sup> 40159 (B,T,G)	<i>Fits vehicles with slide out tray</i>	2000 - 2006	X5 / X5M
<sup>3</sup> 40173 (B,T,G)	<i>Fits vehicles without slide out tray</i>		
<sup>3</sup> 40404 (B,T,G)	<i>Fits behind 2nd row</i>	2007 +	X5 / X5M
<sup>2</sup> 40405 (B,T,G)	<i>Behind 3rd seat</i>		
<b>Buick</b>			
<sup>3</sup> 40424 (B,T,G)	<i>Behind 2nd seat</i>	2008 +	Enclave
<sup>1</sup> 40425 (B,T,G)	<i>Behind 3rd seat</i>		
<sup>3</sup> 40453	<i>Does not fit vehicles with eASSIST</i>	2010 +	Lacrosse
<sup>2</sup> 40188 (B,T,G)		2004 - 2007	Rainier
<sup>2</sup> 40218 (B,T,G)	<i>Fits vehicles with 3rd seat only</i>	2002 - 2007	Rendezvous
<sup>3</sup> 40286 (B,T,G)	<i>Behind 2nd seat. Fits vehicles without cargo convenience center only</i>	2005 - 2007	Terraza
<b>Cadillac</b>			
<sup>3</sup> 40226 (B)		2003 - 2007	CTS / CTS-V
<sup>4</sup> 40350 (B)		2008 +	CTS / CTS-V
<sup>3</sup> 40447 (B,T,G)	<i>Fits Sport Wagon models only</i>	2010 +	CTS / CTS-V
<sup>3</sup> 40061 (B)		1994 - 1999	Deville
<sup>3</sup> 40171 (B)		2000 - 2005	Deville
<sup>3</sup> 40062 (B)		1992 - 2002	Eldorado
<sup>4</sup> 40108 (B,T,G)		1999 - 2000	Escalade
<sup>3</sup> 40148 (B,T,G)		2002 - 2006	Escalade
<sup>4</sup> 40306 (B,T,G)	<i>Fits behind 2nd row in models with 3 rows of seating</i>	2007 +	Escalade
<sup>2</sup> 40150 (B,T,G)	<i>Behind 3rd seat</i>	2003 - 2006	Escalade ESV
<sup>4</sup> 40151 (B,T,G)	<i>Behind 2nd seat</i>		
<sup>4</sup> 40310 (B,T,G)	<i>Behind 2nd seat</i>	2007 +	Escalade ESV
<sup>2</sup> 40311 (B,T,G)	<i>Behind 3rd seat</i>		
<sup>3</sup> 40062 (B)		1992 - 1997	Seville
<sup>3</sup> 40172 (B)		1998 - 2004	Seville
<sup>3</sup> 40255 (B,T,G)	<i>Cargo Liner fits SRX with 3rd seat or rear storage system only</i>	2004 - 2009	SRX
<sup>3</sup> 40448 (B,T,G)	<i>Trim is necessary to enable utilization of optional U-Rail cargo system</i>	2010 +	SRX
<sup>3</sup> 40271 (B)		2005 +	STS
<b>Chevrolet</b>			
<sup>2</sup> 40028 (B,T,G)	<i>Behind 3rd seat, long wheelbase models only</i>	1990 - 2005	Astro Van
<sup>1</sup> 40431 (B,T,G)	<i>Fits 5-door models only</i>	2006 - 2011	Aveo
<sup>2</sup> 40464	<i>Fits Sedan Only</i>	2007 - 2011	Aveo
<sup>3</sup> 40008 (B,T,G)	<i>Fits 4 door model only</i>	1984 - 1994	Blazer
<sup>2</sup> 40020 (B,T,G)	<i>Fits 2 door model only</i>		

# Cargo & Trunk Protection



Make / Model	Year	Cargo Liners	Part #	Notes
<b>Chevrolet (continued)</b>				
Blazer	1995 - 2005		<sup>2</sup> 40021 (B,T,G)	<i>Fits 4 door model without OnStar only</i>
			<sup>2</sup> 40022 (B,T,G)	<i>Fits 2 door model without OnStar only</i>
Blazer Full Size	1992 - 1994		<sup>2</sup> 40016 (B,T,G)	
Camaro	2010 +		<sup>1</sup> 40441 (B)	
Captiva	2008 +		<sup>2</sup> 40343 (B,T,G)	<i>Fits models without 3rd row seating only</i>
			<sup>2</sup> 40374 (B,T,G)	<i>Fits models with 3rd row seating only</i>
Cobalt	2005 - 2010		<sup>2</sup> 40376 (B)	<i>Fits Sedan only</i>
Corvette	1984 - 1996		<sup>2</sup> 40076 (B,T,G)	
Corvette	1997 - 2004		<sup>3</sup> 40112 (B,T,G)	
Corvette	2005 +		<sup>2</sup> 40342 (B,T,G)	
Equinox	2005 - 2009		<sup>3</sup> 40281 (B,T,G)	<i>Fits models with cargo shelf only</i>
Equinox	2010 +		<sup>2</sup> 40442 (B,T,G)	
HHR	2006 - 2011		<sup>2</sup> 40416 (B,T,G)	
Malibu	2008 - 2012		<sup>2</sup> 40344 (B)	
Suburban	1980 - 1991		<sup>4</sup> 40007 (B,T,G)	<i>Rear 6 feet</i>
Suburban	1992 - 1999		<sup>2</sup> 40005 (B,T,G)	<i>Behind 3rd seat</i>
			<sup>4</sup> 40006 (B,T,G)	<i>Rear 5 feet</i>
Suburban	2000 - 2006		<sup>2</sup> 40150 (B,T,G)	<i>Behind 3rd seat</i>
			<sup>4</sup> 40151 (B,T,G)	<i>Rear 4 1/2 feet</i>
Suburban	2007 +		<sup>4</sup> 40310 (B,T,G)	<i>Behind 2nd seat</i>
			<sup>2</sup> 40311 (B,T,G)	<i>Behind 3rd seat</i>
Tahoe	1995 - 1997		<sup>2</sup> 40016 (B,T,G)	<i>Fits 2 door only</i>
			<sup>4</sup> 40023 (B,T,G)	<i>Fits 4 door with jack on right only</i>
Tahoe	1997 - 1999		<sup>5</sup> 40000	
			<sup>2</sup> 40016 (B,T,G)	<i>Fits 2 door only</i>
			<sup>4</sup> 40108 (B,T,G)	<i>Fits 4 door with jack on left only</i>
Tahoe	2000 - 2006		<sup>3</sup> 40148 (B,T,G)	
Tahoe	2007 +		<sup>4</sup> 40306 (B,T,G)	<i>Fits behind 2nd row seats in vehicles with 3 rows of seats</i>
			<sup>3</sup> 40307 (B,T,G)	<i>Fits behind 2nd row seats in vehicles without 3 rows of seats</i>
Tracker	1998 - 2004		<sup>2</sup> 40051 (B,T,G)	<i>Fits 2 Door only</i>
			<sup>2</sup> 40057 (B,T,G)	<i>Fits 4 Door only</i>
Trailblazer	2002 - 2009		<sup>2</sup> 40188 (B,T,G)	
Trailblazer EXT	2002 - 2006		<sup>1</sup> 40219 (B,T,G)	<i>Behind 3rd seat</i>
Traverse	2009 +		<sup>3</sup> 40424 (B,T,G)	<i>Behind 2nd seat</i>
			<sup>1</sup> 40425 (B,T,G)	<i>Behind 3rd seat</i>
Uplander	2005 - 2008		<sup>3</sup> 40286 (B,T,G)	<i>Behind 2nd seat, long wheelbase only</i>
Venture	1997 - 2004		<sup>2</sup> 40099 (B,T,G)	<i>Fits behind 3rd row seats in long wheelbase models without 3rd row stowable bench seat</i>
			<sup>3</sup> 40100 (B,T,G)	<i>Fits behind 2nd row seats in short wheelbase models</i>
<b>Chrysler</b>				
300/300C	2005 +		<sup>2</sup> 40270 (B)	<i>Does not fit models with trunk mounted sub woofer</i>
Aspen	2007 - 2009		<sup>3</sup> 40262 (B,T,G)	<i>Behind 2nd seat</i>
			<sup>2</sup> 40263 (B,T,G)	<i>Behind 3rd seat</i>
Concorde	1993 - 1997		<sup>4</sup> 40048 (B)	
Pacifica	2004 - 2009		<sup>3</sup> 40267 (B,T,G)	<i>Touring and Limited models only</i>
PT Cruiser	2001 +		<sup>2</sup> 40177 (B,T,G)	<i>Does not fit Convertible</i>
Town & Country	1991 - 1995		<sup>2</sup> 40018 (B,T,G)	<i>Behind 3rd row seats, long wheelbase models only</i>
Town & Country	1996 - 2000		<sup>2</sup> 40052 (B,T,G)	<i>Behind 3rd row seats, long wheelbase models only</i>
			<sup>3</sup> 40098 (B,T,G)	<i>Behind 2nd row seats, short wheelbase models only</i>
Town & Country	2001 - 2007		<sup>2</sup> 40190 (B,T,G)	<i>Behind 3rd row seats, long wheelbase models without Stow 'N Go seating only</i>
			<sup>3</sup> 40191 (B,T,G)	<i>Behind 2nd row seats, short wheelbase models only</i>

All Cargo Liners Part Numbers are for BLACK ONLY.  
 Cargo Liner Order Code: B=Black (40XXX), T=Tan (41XXX), & G=Gray (42XXX)

Cargo Liners:  
<sup>1</sup> Small  
<sup>2</sup> Medium  
<sup>3</sup> Large  
<sup>4</sup> X Large  
<sup>7</sup> TBA  
 (to be announced)





## Cargo Liners

Year

Make / Model

Part #	Notes	Year	Chrysler (continued)
<sup>3</sup> 40266 (B,T,G)	Behind 2nd row seats, long wheelbase models with Stow 'N Go seating only	2005 - 2007	Town & Country
<sup>2</sup> 40265 (B,T,G)	Behind 3rd row seats, long wheelbase models with Stow 'N Go seating only	2005 +	Town & Country
<sup>3</sup> 40191 (B,T,G)	Behind 2nd seat	2001 - 2003	Voyager
			<b>Daihatsu</b>
<sup>2</sup> 40372 (B,T,G)		2006 +	Terios
			<b>Dodge</b>
<sup>2</sup> 40312 (B,T,G)		2007 +	Caliber
<sup>3</sup> 40098 (B,T,G)	Behind 2nd seat	1996 - 2000	Caravan
<sup>3</sup> 40191 (B,T,G)	Behind 2nd seat	2001 - 2007	Caravan
<sup>3</sup> 40397 (B)		2008 +	Challenger
<sup>2</sup> 40270 (B)	Does not fit SRT-8	2006 +	Charger
<sup>2</sup> 40120 (B,T,G)	Behind 3rd seat	1998 - 2000	Durango
<sup>3</sup> 40118 (B,T,G)	Behind 2nd seat		
<sup>3</sup> 40118 (B,T,G)	Behind 2nd seat, fits vehicles without rear heat/air system only	2001 - 2003	Durango
<sup>2</sup> 40120 (B,T,G)	Behind 3rd seat, fits vehicles without rear heat/air system only		
<sup>2</sup> 40193 (B,T,G)	Behind 2nd seat, fits vehicles with rear heating/air system		
<sup>1</sup> 40194 (B,T,G)	Behind 3rd seat, fits vehicles with rear heat/air system only		
<sup>3</sup> 40262 (B,T,G)	Behind 2nd seat, does not fit vehicles without 3rd row seats	2004 - 2009	Durango
<sup>2</sup> 40263 (B,T,G)	Behind 3rd seat		
<sup>2</sup> 40018 (B,T,G)	Behind 3rd seat	1991 - 1995	Grand Caravan
<sup>2</sup> 40052 (B,T,G)	Behind 3rd seat	1996 - 2000	Grand Caravan
<sup>2</sup> 40190 (B,T,G)	Behind 3rd seat	2001 - 2004	Grand Caravan
<sup>2</sup> 40190 (B,T,G)	Behind 3rd seat, without Stow 'N Go seats	2005 - 2007	Grand Caravan
<sup>3</sup> 40266 (B,T,G)	Behind 2nd seat with Stow 'N Go seats		
<sup>2</sup> 40265 (B,T,G)	Behind 3rd seat with Stow 'N Go seats	2005 +	Grand Caravan
<sup>4</sup> 40048 (B)		1993 - 1997	Intrepid
<sup>2</sup> 40398 (B,T,G)	Behind 2nd seat	2009 +	Journey
<sup>2</sup> 40291 (B,G)		2005 - 2008	Magnum
			<b>Eagle</b>
<sup>4</sup> 40048 (B)		1993 - 1997	Vision
			<b>Ferrari</b>
40386		2008 +	599 GTB
			<b>Fiat</b>
<sup>1</sup> 40484 (B,T,G)		2011 +	500
40532		2007 +	Bravo
40529		2003 +	Panda
			<b>Ford</b>
<sup>4</sup> 40027 (B,T,G)	Behind 3rd seat	1989 - 1997	Aerostar
<sup>4</sup> 40015 (B,T,G)		1988 - 1996	Bronco Full Size
<sup>1</sup> 40501 (B,T,G)	Fits 5 Door Model Only	2011 +	Cmax
<sup>2</sup> 40063 (B)		1992 +	Crown Victoria
<sup>4</sup> 40087 (B,T,G)		1992 +	Econoline / E-Series
<sup>1</sup> 40321 (B,T,G)		2004 +	EcoSport
<sup>2</sup> 40325 (B,T,G)		2007 +	Edge
<sup>2</sup> 40197 (B,T,G)	Vehicles with MACH Audio System	2001 - 2004	Escape
<sup>2</sup> 40183 (B,T,G)	Vehicles without MACH Audio System		
<sup>2</sup> 40197 (B,T,G)	Does not fit hybrid	2005 +	Escape
<sup>2</sup> 40111 (B,T,G)	Fits wagon only	1981 - 2002	Escort
<sup>4</sup> 40154 (B,T,G)	Behind 2nd seat	2000 - 2005	Excursion
<sup>2</sup> 40153 (B,T,G)	Behind 3rd seat		
<sup>4</sup> 40082 (B,T,G)	Fits vehicles with rear A/C	1997 - 1998	Expedition
<sup>4</sup> 40093 (B,T,G)	Fits vehicles without rear A/C		

# Cargo & Trunk Protection



Make / Model	Year	Cargo Liners	Part #	Notes
<b>Ford (continued)</b>				
Expedition	1999 - 2002		<sup>4</sup> 40139 (B,T,G)	<i>Fits vehicles without rear A/C</i>
			<sup>4</sup> 40138 (B,T,G)	<i>Fits vehicles with rear A/C</i>
Expedition	2003 +		<sup>4</sup> 40222 (B,T,G)	<i>Behind 2nd seat</i>
			<sup>2</sup> 40223 (B,T,G)	<i>Behind 3rd seat</i>
Expedition EL	2007 +		<sup>2</sup> 40322 (B,T,G)	<i>Behind 3rd seat</i>
Explorer	1991 - 2001		<sup>2</sup> 40001 (B,T,G)	<i>Fits 4 door only</i>
Explorer	2002 - 2005		<sup>2</sup> 40205 (B,T,G)	<i>Fits behind 2nd seats in vehicles with 3rd row seats</i>
			<sup>2</sup> 40189 (B,T,G)	<i>Fits behind 2nd row seats in vehicles without 3rd row seats</i>
Explorer	2006 - 2010		<sup>2</sup> 40189 (B,T,G)	<i>Fits behind 2nd row seats in vehicles without 3rd row seats only</i>
			<sup>3</sup> 40412 (B,T,G)	<i>Behind 2nd seat</i>
			<sup>1</sup> 40413 (B,T,G)	<i>Behind 3rd seat</i>
Explorer	2011 +		<sup>2</sup> 40488	<i>Behind 3rd seat</i>
			<sup>3</sup> 40489 (B,T,G)	
Explorer Sport 2 Door	1991 - 2003		<sup>2</sup> 40002 (B,T,G)	
Falcon Wagon	1998 +		<sup>1</sup> 40129 (B)	
Five Hundred	2005 - 2007		<sup>2</sup> 40284 (B)	
Flex	2009 +		<sup>3</sup> 40471 (B,T,G)	
Focus / Focus SVT	2000 - 2007		<sup>2</sup> 40168 (B,T,G)	<i>Fits wagon (ZXW) only</i>
Focus / Focus SVT	2008 - 2011		<sup>2</sup> 40373 (B)	<i>Fits sedans without trunk mounted subwoofer only</i>
			40520	<i>Fits wagon only</i>
Focus / Focus SVT	2012 +		<sup>2</sup> 40490 (B)	<i>Fits Sedan without trunk mounted subwoofer only</i>
			<sup>2</sup> 40519 (B,T,G)	<i>5-door hatchback</i>
Freestar	2004 - 2008		<sup>1</sup> 40156 (B,T,G)	<i>Behind 3rd seat</i>
			<sup>3</sup> 40264 (B,T,G)	<i>Behind 2nd seat</i>
Freestyle	2005 - 2007		<sup>2</sup> 40287 (B,T,G)	<i>Behind 2nd seat</i>
Fusion	2006 - 2009		<sup>2</sup> 40323 (B)	
Fusion	2010 +		<sup>2</sup> 40438 (B)	
Kuga	2008 +		<sup>3</sup> 40504 (B,T,G)	
Taurus	1988 - 1995		<sup>2</sup> 40039 (B,T,G)	<i>Fits wagon only</i>
			<sup>2</sup> 40042 (B)	<i>Fits sedan only</i>
Taurus	1996 - 1999		<sup>2</sup> 40054 (B)	<i>Fits vehicles with compact spare only</i>
Taurus	1996 - 2006		<sup>2</sup> 40058 (B,T,G)	<i>Fits wagon only</i>
Taurus	2000 - 2006		<sup>3</sup> 40170 (B)	<i>Fits sedan only</i>
Taurus	2008 - 2009		<sup>2</sup> 40284 (B)	
Taurus X	2008 - 2009		<sup>2</sup> 40287 (B,T,G)	<i>Behind 2nd row</i>
Windstar	1995 - 2003		<sup>2</sup> 40017 (B,T,G)	<i>Behind 3rd seat</i>
<b>Geo</b>				
Tracker	1989 - 1997		<sup>2</sup> 40051 (B,T,G)	<i>Fits 2 door only</i>
			<sup>2</sup> 40057 (B,T,G)	<i>Fits 4 door only</i>
<b>GM</b>				
Commodore Wagon	1998 +		<sup>4</sup> 40128 (B)	
<b>GMC</b>				
Acadia	2008 +		<sup>3</sup> 40410 (B,T,G)	<i>Behind 2nd seat</i>
			<sup>1</sup> 40411 (B,T,G)	<i>Behind 3rd seat</i>
Envoy / Envoy Denali	1998 - 2001		<sup>3</sup> 40126 (B,T,G)	<i>Fits vehicles without OnStar</i>
Envoy / Envoy Denali	2002 - 2009		<sup>2</sup> 40188 (B,T,G)	
Envoy XL / Envoy XL Denali	2002 - 2006		<sup>1</sup> 40219 (B,T,G)	<i>Behind 3rd seat</i>
Jimmy S15	1984 - 1994		<sup>2</sup> 40020 (B,T,G)	<i>Fits 2 door models only</i>
			<sup>3</sup> 40008 (B,T,G)	<i>Fits 4 door models only</i>
Jimmy S15	1995 - 2001		<sup>2</sup> 40021 (B,T,G)	<i>Fits 4 door models without OnStar only</i>
Jimmy S15	1995 - 2005		<sup>2</sup> 40022 (B,T,G)	<i>Fits 2 door models without OnStar only</i>
Safari	1987 - 1994		<sup>2</sup> 40028 (B,T,G)	<i>Behind 3rd seat. Long wheelbase only</i>
Safari	1995 - 2005		<sup>2</sup> 40028 (B,T,G)	<i>Behind 3rd seat. Long wheelbase only</i>

All Cargo Liners Part Numbers are for BLACK ONLY.  
 Cargo Liner Order Code: B=Black (40XXX), T=Tan (41XXX), & G=Gray (42XXX)

Cargo Liners:  
<sup>1</sup> Small  
<sup>2</sup> Medium  
<sup>3</sup> Large  
<sup>4</sup> X Large  
<sup>7</sup> TBA  
 (to be announced)



## Cargo Liners

Year

Make / Model

Part #	Notes	Year	Make / Model
<b>GMC (continued)</b>			
<sup>4</sup> 40007 (B,T,G)	Rear 6 feet	1980 - 1991	Suburban
<sup>2</sup> 40442 (B,T,G)		2010 +	Terrain
<sup>2</sup> 40016 (B,T,G)	Fits 2 door	1992 - 1999	Yukon / Yukon Denali
<sup>4</sup> 40108 (B,T,G)	Fits 4 door with jack mounted on left		
<sup>4</sup> 40023 (B,T,G)	Fits 4 door with jack mounted on the right		
<sup>3</sup> 40148 (B,T,G)		2000 - 2006	Yukon / Yukon Denali
<sup>4</sup> 40306 (B,T,G)	Fits behind 2nd row seats in vehicles with 3 rows of seats	2007 +	Yukon / Yukon Denali
<sup>3</sup> 40307 (B,T,G)	Fits behind 2nd row seats in vehicles without 3 rows of seats		
<sup>4</sup> 40151 (B,T,G)	Rear 4 1/2 feet	2000 - 2006	Yukon XL / Yukon XL Denali
<sup>2</sup> 40150 (B,T,G)	Behind 3rd seat		
<sup>4</sup> 40310 (B,T,G)	Behind 2nd seat	2007 +	Yukon XL / Yukon XL Denali
<sup>2</sup> 40311 (B,T,G)	Behind 3rd seat		
<b>Honda</b>			
<sup>2</sup> 40043 (B)	Fits Accords with 2.2 liter I4	1994 - 1997	Accord
<sup>2</sup> 40067 (B)	Fits Accords with 2.7 liter V6		
<sup>3</sup> 40073 (B,T,G)	Fits wagon only		
<sup>2</sup> 40116 (B)		1998 - 2002	Accord
<sup>2</sup> 40234 (B)	Does not fit hybrid	2003 - 2007	Accord
<sup>2</sup> 40348 (B)	Fits coupe only	2008 +	Accord
<sup>2</sup> 40349 (B)	Fits sedan only		
<sup>2</sup> 40088 (B)	Fits coupe and sedan only	1996 - 2000	Civic
<sup>2</sup> 40200 (B)	Fits coupe and sedan only	2001 - 2005	Civic
<sup>2</sup> 40301 (B)	Does not fit hybrid, fits coupe and sedan only	2006 - 2011	Civic
40496	Fits sedan only	2012 +	Civic
<sup>3</sup> 40451 (B,T,G)		2010 +	Crosstour
<sup>2</sup> 40089 (B,G)		1997 - 2001	CR-V
<sup>2</sup> 40213 (B,T,G)		2002 - 2006	CR-V
<sup>2</sup> 40524 (B,T,G)		2012 +	CR-V
<sup>2</sup> 40367 (B,T,G)		2007 - 2008	Fit
<sup>2</sup> 40429 (B,T,G)		2010 +	Insight
<sup>1</sup> 40040 (B,G)	3rd seat well	1995 - 1998	Odyssey
<sup>2</sup> 40041 (B,T,G)	Behind 2nd seat		
<sup>1</sup> 40143 (B,T,G)	3rd seat well	1999 - 2004	Odyssey
<sup>4</sup> 40144 (B,T,G)	Behind 2nd seat		
<sup>4</sup> 40278 (B,T,G)	Behind 2nd seat	2005 - 2010	Odyssey
<sup>1</sup> 40279 (B,T,G)	Behind 3rd seat		
<sup>2</sup> 40475 (B,T,G)	Behind 3rd seat	2011 +	Odyssey
<sup>4</sup> 40476 (B,T,G)	Behind 2nd seat		
<sup>2</sup> 40012 (B,G)		1994 - 1997	Passport
<sup>2</sup> 40115 (B,G)		1998 - 2002	Passport
<sup>3</sup> 40182 (B,T,G)		2003 - 2008	Pilot
<sup>3</sup> 40378 (B,T,G)	Behind 2nd seat	2009 +	Pilot
<b>Hummer</b>			
<sup>2</sup> 40231 (B,T,G)	Fits vehicles with spare mounted in cargo area or fits around spare	2003 +	H2
<sup>3</sup> 40236 (B,T,G)	Fits vehicles without spare mounted in cargo area or under spare		
<sup>3</sup> 40299 (B,T,G)		2006 +	H3
<b>Hyundai</b>			
<sup>3</sup> 40478 (B)	Fits sedan only	2012 +	Accent
<sup>1</sup> 40491 (B,T,G)	5-Door Model		
<sup>2</sup> 40470 (B)		2011 +	Elantra
<sup>1</sup> 40308 (B,T,G)	Behind 3rd seat	2007 - 2009	Entourage
<sup>3</sup> 40461 (B,T,G)		2009 +	Genesis
<sup>2</sup> 40184 (B,T,G)		2001 - 2006	Santa Fe
<sup>3</sup> 40317 (B,T,G)		2007 +	Santa Fe

# Cargo & Trunk Protection



Make / Model	Year	Cargo Liners	
Hyundai (continued)		Part #	Notes
Sonata	2006 - 2010	<sup>3</sup> 40482 (B)	
Sonata	2011 +	<sup>3</sup> 40456 (B)	
Tucson	2005 - 2009	<sup>2</sup> 40275 (B,T,G)	
Tucson	2010 +	<sup>2</sup> 40454 (B,T,G)	
Veloster	2012 +	<sup>2</sup> 40479	
Veracruz	2007 +	<sup>3</sup> 40332 (B,T,G)	Does not fit vehicles with power rear door
		<sup>2</sup> 40385 (B,T,G)	Behind 2nd row seats, fits vehicles with power rear liftgate
		<sup>3</sup> 40426 (B,T,G)	Does not fit modes with automatic rear door
		<sup>1</sup> 40427 (B,T,G)	Behind 3rd row seats, fits vehicles with power rear liftgate
<b>Infiniti</b>			
EX35	2008 +	<sup>2</sup> 40354 (B,T,G)	
FX35	2004 - 2008	<sup>2</sup> 40239 (B,T,G)	Compact spare only
FX35	2009 +	<sup>2</sup> 40365 (B,T,G)	
FX45	2004 - 2008	<sup>2</sup> 40239 (B,T,G)	Compact spare only
FX50 / FX50S	2009 +	<sup>2</sup> 40365 (B,T,G)	
G	2003 - 2006	<sup>3</sup> 40224 (B)	Fits sedan only
G	2007 +	<sup>3</sup> 40316 (B)	Fits sedan only
G	2008 +	<sup>3</sup> 40338 (B)	Fits coupe only
I30	1996 - 1999	<sup>3</sup> 40050 (B)	
I30	2000 - 2001	<sup>2</sup> 40203 (B)	
I35	2002 - 2004	<sup>2</sup> 40203 (B)	
M	2011 +	<sup>3</sup> 40459 (B)	
QX4	1997 - 2003	<sup>2</sup> 40066 (B,T,G)	
QX56	2004 - 2010	<sup>1</sup> 40254 (B,T,G)	Behind 3rd seat
		<sup>4</sup> 40253 (B,T,G)	Behind 2nd seat
<b>Isuzu</b>			
Ascender	2003 - 2008	<sup>2</sup> 40188 (B,T,G)	Behind 2nd row, does not fit models with 3 rows of seats
		<sup>1</sup> 40219 (B,T,G)	Behind 3rd row of seats
Oasis	1996 - 1999	<sup>1</sup> 40040 (B,G)	Behind 3rd seat
		<sup>2</sup> 40041 (B,T,G)	Behind 2nd seat
Rodeo	1991 - 1993	<sup>2</sup> 40012 (B,G)	
Rodeo	1994 - 1997	<sup>2</sup> 40012 (B,G)	
Rodeo	1998 - 2004	<sup>2</sup> 40115 (B,G)	
Trooper	1986 - 1991	<sup>4</sup> 40047 (B,T,G)	
Trooper	1992 - 2002	<sup>2</sup> 40014 (B,T,G)	
<b>Jeep</b>			
Cherokee	1984 - 2001	<sup>2</sup> 40003 (B,T,G)	
Cherokee Export (right hand drive)	1994 - 2002	<sup>3</sup> 40104 (B)	
Commander	2006 +	<sup>2</sup> 40294 (B,T,G)	Behind 2nd seat
Grand Cherokee	1993 - 1998	<sup>2</sup> 40004 (B,T,G)	
Grand Cherokee	1999 - 2004	<sup>2</sup> 40131 (B,T,G)	
Grand Cherokee	2005 - 2010	<sup>2</sup> 40280 (B,T,G)	
Grand Cherokee	2011 +	<sup>2</sup> 40469 (B,T,G)	
Liberty	2002 - 2007	<sup>2</sup> 40199 (B,T,G)	
Liberty	2008 +	<sup>2</sup> 40366 (B,T,G)	
Renegade	2002 +	<sup>2</sup> 40199 (B,T,G)	
Wrangler	1987 - 1995	<sup>2</sup> 40019 (B,T,G)	
Wrangler	1997 - 2002	<sup>2</sup> 40074 (B,T,G)	
Wrangler	2003 - 2006	<sup>1</sup> 40246 (B,T,G)	
Wrangler	2007 +	<sup>1</sup> 40495 (B,T,G)	Trim line for vehicles with sub-woofers

All Cargo Liners Part Numbers are for BLACK ONLY.  
 Cargo Liner Order Code: B=Black (40XXX), T=Tan (41XXX), & G=Gray (42XXX)

Cargo Liners:  
<sup>1</sup> Small  
<sup>2</sup> Medium  
<sup>3</sup> Large  
<sup>4</sup> X Large  
<sup>7</sup> TBA  
 (to be announced)



## Cargo Liners

Year

Make / Model

Part #	Notes	Year	Make / Model
<b>Jeep (continued)</b>			
<sup>2</sup> 40293 (B,T,G)		2004.5 - 2006	Wrangler Unlimited
<sup>2</sup> 40324 (B,T,G)		2007 - 2010	Wrangler Unlimited
<sup>2</sup> 40518 (B,T,G)		2011 +	Wrangler Unlimited
<b>Kia</b>			
<sup>1</sup> 40368 (B,T,G)	<i>Behind 3rd row</i>	2009 +	Borrego
<sup>2</sup> 40395 (B)	<i>Fits sedan models only</i>	2010 +	Forte
<sup>2</sup> 40477 (B,T,G)	<i>Fits hatchback models only</i>	2011 +	Forte
<sup>2</sup> 40445 (B)		2010 +	Forte Koup
<sup>3</sup> 40485 (B)	<i>Does not fit Hybrid</i>	2011 +	Optima
<sup>1</sup> 40516	<i>Fits 5-door models only</i>	2012 +	Rio / Rio5 / Rio Cinco
<sup>2</sup> 40315 (B,T,G)		2007 +	Rondo
<sup>1</sup> 40308 (B,T,G)	<i>Fits in well behind 3rd seat</i>	2006 +	Sedona
<sup>2</sup> 40249 (B,T,G)		2003 - 2009	Sorento
<sup>2</sup> 40450 (B,T,G)	<i>For 7-Passenger vehicles, behind 3rd row</i>	2011 +	Sorento
<sup>3</sup> 40483 (B,T,G)	<i>Does not fit vehicles with 3rd row seating</i>		
<sup>1</sup> 40384 (B,T,G)	<i>Fits on top of luggage shelf assembly</i>	2009 +	Soul
<sup>3</sup> 40081 (B,T,G)		1995 - 2003	Sportage
<sup>2</sup> 40275 (B,T,G)		2005 - 2010	Sportage
<sup>2</sup> 40465		2011 +	Sportage
<b>Lancia</b>			
40531		2009 +	Delta
<sup>3</sup> 40509 (B,T,G)		2008 +	Musa
40510 (B,T,G)		2011 +	Ypsilon 5-Door
<b>Land Rover</b>			
<sup>4</sup> 40030 (B,T,G)		1987 - 1995	County / Classic
<sup>4</sup> 40029 (B,T,G)		1994 - 1999	Discovery Series I
<sup>4</sup> 40162 (B,T,G)		1999 - 2004	Discovery Series II
<sup>3</sup> 40212 (B,T,G)	<i>Does not fit SE3</i>	2002 - 2005	Freelander
<sup>3</sup> 40288 (B,T,G)		2005 - 2009	LR3 / Discovery III
<sup>3</sup> 40288 (B,T,G)		2010 +	LR4 / Discovery 4
<sup>4</sup> 40031 (B,T,G)		1995 - 2002	Range Rover
<sup>4</sup> 40227 (B,T,G)		2003 +	Range Rover
<sup>4</sup> 40302 (B,T,G)		2006 +	Range Rover Sport
<b>Lexus</b>			
<sup>3</sup> 40036 (B)		1992 - 1996	ES ES300
<sup>3</sup> 40094 (B)		1997 - 2001	ES ES300
<sup>2</sup> 40210 (B)		2002 - 2003	ES ES330
<sup>2</sup> 40303 (B)		2007 +	ES ES330
<sup>3</sup> 40121 (B)		1998 - 2005	GS GS300, GS400, GS430
<sup>3</sup> 40277 (B)		2006 - 2012	GS GS300, GS350, GS430, GS450, GS450h, GS460, GS460 Hybrid
<sup>3</sup> 40240 (B,T,G)		2003 - 2009	GX GX460
<sup>3</sup> 40457 (B,T,G)	<i>Fits models with 3 rows of seating only</i>	2010 +	GX GX470
<sup>3</sup> 40458 (B)		2010 +	HS HS250h

# Cargo & Trunk Protection



Make / Model	Year	Cargo Liners	Part #	Notes
<b>Lexus (continued)</b>				
IS IS250, IS350, IS-F	2006 +		<sup>2</sup> 40290 (B)	
LS LS400	1990 - 1994		<sup>4</sup> 40037 (B)	
LS LS400	1995 - 2000		<sup>4</sup> 40038 (B)	
LS LS430	2001 - 2006		<sup>4</sup> 40196 (B)	
LS LS460, LS460L, LS600h, LSHybrid	2007 +		<sup>3</sup> 40331 (B)	<i>Does not fit vehicles with Rear Seat Upgrade Package, does not fit Hybrid</i>
LX LX450	1996 - 1997		<sup>4</sup> 40010 (B,T,G)	
LX LX470	1998 - 2007		<sup>4</sup> 40124 (B,T,G) <sup>4</sup> 40140 (B,T,G)	<i>Fits vehicles with jumpseats Fits vehicles without jumpseats</i>
LX LX570	2008 +		<sup>4</sup> 40356 (B,T,G)	<i>Behind 2nd row</i>
RX RX300	1999 - 2003		<sup>3</sup> 40122 (B,T,G)	
RX RX330	2004 - 2009		<sup>3</sup> 40242 (B,T,G)	
RX RX350, RX400h	2010 +		<sup>3</sup> 40377 (B,T,G)	
<b>Lincoln</b>				
Aviator	2003 - 2005		<sup>2</sup> 40205 (B,T,G)	<i>Behind 2nd seat</i>
Continental	1995 - 2002		<sup>3</sup> 40064 (B)	
MkZ	2006 - 2009		<sup>2</sup> 40323 (B)	
MkZ	2010 +		<sup>2</sup> 40438 (B)	
Navigator	1998		<sup>4</sup> 40082 (B,T,G) <sup>4</sup> 40093 (B,T,G)	<i>Fits vehicles with rear A/C only Fits vehicles without rear A/C only</i>
Navigator	1999 - 2002		<sup>4</sup> 40139 (B,T,G) <sup>4</sup> 40138 (B,T,G)	<i>Fits vehicles without rear A/C only Fits vehicles with rear A/C only</i>
Navigator	2003 +		<sup>4</sup> 40222 (B,T,G) <sup>2</sup> 40223 (B,T,G)	<i>Behind 2nd seat Behind 3rd seat</i>
Navigator L	2007 +		<sup>2</sup> 40322 (B,T,G)	<i>Fits behind 3rd row seats</i>
Town Car	1990 +		<sup>2</sup> 40063 (B)	
Zephyr	2006 - 2007		<sup>2</sup> 40323 (B)	
<b>Mazda</b>				
CX-5	2012 +		40553	
CX-7	2007 +		<sup>3</sup> 40333 (B,T,G)	
CX-9	2007 +		<sup>3</sup> 40406 (B,T,G) <sup>1</sup> 40407 (B,T,G)	<i>Fits behind 2nd row Fits behind 3rd row</i>
Mazda2	2010		<sup>2</sup> 40443 (B,T,G)	
Mazda3 / Mazdaspeed3	2010 +		<sup>2</sup> 40428 (B)	<i>Fits sedan only</i>
Mazda5	2008 +		<sup>3</sup> 40444 (B,T,G)	
Mazda6 / Mazdaspeed6	2009 +		<sup>2</sup> 40390 (B)	
MPV	1989 - 1995		<sup>1</sup> 40026 (B,T,G)	<i>Behind 3rd seat</i>
MPV	1996 - 1998		<sup>1</sup> 40091 (B,T,G)	<i>Behind 3rd seat</i>
MPV	2000 - 2006		<sup>3</sup> 40163 (B,T,G) <sup>1</sup> 40156 (B,T,G)	<i>Behind 2nd seat 3rd seat well</i>
MX5 / Miata	2006 +		<sup>1</sup> 40435 (B,T,G)	
Navajo	1991 - 1994		<sup>2</sup> 40002 (B,T,G)	
Tribute	2001 - 2004		<sup>2</sup> 40183 (B,T,G) <sup>2</sup> 40197 (B,T,G)	<i>Without Premium Audio or Luxury Package With Premium Audio or Luxury Package</i>
Tribute	2005 +		<sup>2</sup> 40197 (B,T,G)	

All Cargo Liners Part Numbers are for BLACK ONLY.  
Cargo Liner Order Code: B=Black (40XXX), T=Tan (41XXX), & G=Gray (42XXX)

Cargo Liners:  
<sup>1</sup> Small  
<sup>2</sup> Medium  
<sup>3</sup> Large  
<sup>4</sup> X Large  
<sup>7</sup> TBA  
 (to be announced)





## Cargo Liners

Year

Make / Model

Part #	Notes	Year	Mercedes-Benz
<sup>3</sup> 40035 (B)		1986 - 1995	300E
<sup>1</sup> 40045 (B,T,G)	Wheel / storage well	1988 - 1993	300TE
<sup>4</sup> 40044 (B,T,G)	Behind 2nd seat		
<sup>3</sup> 40035 (B)		1992 - 1993	400E
<sup>2</sup> 40049 (B)		1992	400SE
<sup>2</sup> 40049 (B)		1993	400SEL
<sup>3</sup> 40035 (B)		1992 - 1993	500E
<sup>2</sup> 40049 (B)		1993	500SEC
<sup>2</sup> 40049 (B)		1992 - 1993	500SEL
<sup>2</sup> 40049 (B)		1993	600SEC
<sup>2</sup> 40049 (B)		1992 - 1993	600SEL
<sup>2</sup> 40034 (B)		1994 - 2000	C-Class (W202) C220, C230, C240, C280, C36 AMG C43 AMG
<sup>3</sup> 40195 (B)	Fits sedan only	2001 - 2007	C-Class (W203)
<sup>3</sup> 40207 (B,T,G)	Fits wagon only		C240, C320, C32 AMG, C55 AMG, C63 AMG
<sup>2</sup> 40209 (B)	Fits coupe only		
<sup>3</sup> 40357 (B)		2008 +	C-Class (W204) C300, C230, C240, C280, C36 AMG, C43 AMG
<sup>2</sup> 40049 (B)		1998 - 1999	CL-Class (W140) C500, CL600
<sup>3</sup> 40035 (B)	Fits sedan only	1986 - 1995	E-Class (W124)
<sup>4</sup> 40044 (B,T,G)	Behind 2nd row of seats		300D, 500E, E320, E420, E500
<sup>1</sup> 40045 (B,T,G)	Fits wagon in spare/storage well	1996 - 2002	E-Class (W210)
<sup>2</sup> 40060 (B)	Fits sedan only		E300 Diesel, E320, E420, E430, E55 AMG
<sup>4</sup> 40114 (B,T,G)	Fits wagon behind 2nd row of seats, Fits 2003 E-Class Wagons		
<sup>4</sup> 40245 (B)	Fits E500/E550/E55 AMG sedan without command navigation system only	2003 - 2009	E-Class (W211) E300, E320CDI, E320 Bluetec, E350, E550, E55 AMG, E63 AMG
<sup>4</sup> 40256 (B,T,G)	Fits behind triangular storage compartment in 2004 - 2007 E-Class wagons		
<sup>4</sup> 40233 (B)	Fits E320/E350 sedan without command navigation system only		
<sup>3</sup> 40434 (B)	Fits sedan	2010 +	E-Class (W212, C207) E350, E550, E63 AMG
<sup>3</sup> 40439 (B,T,G)	Fits Coupe		
<sup>4</sup> 40214 (B,T,G)		2002 +	G-Class (W463) G320, G400, G55 AMG
<sup>3</sup> 40408 (B,T,G)	Fits behind 2nd row	2007 +	GL-Class (X164)
<sup>2</sup> 40409 (B,T,G)	Fits behind 3rd row		GL320 CDI, GL320 Bluetec, GL450, GL550
<sup>3</sup> 40383 (B,T,G)		2009 +	GLK-Class (X204) GLK350
<sup>4</sup> 40113 (B,T,G)	Fits models with 3 rows of seats only	1998 - 2005	M-Class (ML) (W163)
<sup>4</sup> 40130 (B,T,G)	Fits models without 3 rows of seats only		ML320, ML350, ML430, ML500, ML550, ML55 AMG
<sup>4</sup> 40285 (B,T,G)	Does not fit models with 317 comfort package	2006 - 2011	M-Class (ML) (W164) ML320 CDI, ML320 Bluetec, ML350, ML500, ML550, ML63 AMG
<sup>4</sup> 40526		2012 +	M-Class (ML) (W166) ML350, ML350 BlueTec
<sup>2</sup> 40049 (B)	Fits sedan only	1994 - 1999	S-Class (W140) 300SE, 300SEL, 300SD, 400SEL, 500SEC, 500SEL, 600SEC, 600SEL
<sup>4</sup> 40147 (B)		2000 - 2002	S-Class (W220) S280, S320, S350, S430, S500, S600, S55 AMG, S63 AMG, S65 AMG
<sup>4</sup> 40241 (B)		2003 - 2006	S-Class (W220) S280, S320, S350, S430, S500, S600, S55 AMG, S63 AMG, S65 AMG
<sup>4</sup> 40358 (B)		2007 +	S-Class (W221) S350, S450, S500, S550, S600, S63 AMG, S65 AMG

# Cargo & Trunk Protection



Make / Model	Year	Cargo Liners	Part #	Notes
<b>Mercury</b>				
Mariner	2005 +		<sup>2</sup> 40197 (B,T,G)	
Milan	2006 - 2009		<sup>2</sup> 40323 (B)	
Milan	2010 +		<sup>2</sup> 40438 (B)	
Montego	2005 - 2007		<sup>2</sup> 40284 (B)	
Monterey	2004 - 2007		<sup>1</sup> 40156 (B,T,G)	Behind 3rd seat
			<sup>3</sup> 40264 (B,T,G)	Behind 2nd seat
Mountaineer	1997 - 2001		<sup>2</sup> 40001 (B,T,G)	
Mountaineer	2002 - 2005		<sup>2</sup> 40205 (B,T,G)	Fits vehicles with 3rd row seats only
Mountaineer	2006 +		<sup>2</sup> 40297 (B,T,G)	Fits vehicles with three rows of seats only - 2 piece behind 2nd or 3rd row design
Sable	1988 - 1995		<sup>2</sup> 40039 (B,T,G)	Fits wagon only
			<sup>2</sup> 40042 (B)	Fits sedan only
Sable	1996 - 2004		<sup>2</sup> 40058 (B,T,G)	Fits wagon only
			<sup>2</sup> 40068 (B)	Fits sedan with compact spare only
Sable	2000 - 2005		<sup>3</sup> 40170 (B)	
Villager	1993 - 1998		<sup>1</sup> 40024 (B,T,G)	Behind 3rd seat
Villager	1999 - 2002		<sup>2</sup> 40142 (B,T,G)	Behind 3rd seat
<b>Mini</b>				
Clubman	2008 +		<sup>2</sup> 40379 (B,T,G)	
Cooper / Cooper S	2007 - 2011		<sup>1</sup> 40340 (B,T,G)	
Countryman	2011 +		<sup>2</sup> 40539	Does not fit vehicles with Flat Load Option
Hardtop / Coupe / Roadster / Convertible	2012 +		<sup>1</sup> 40340 (B,T,G)	
<b>Mitsubishi</b>				
Lancer / Evolution	2008 +		<sup>3</sup> 40396 (B)	Fits Sedan Only, does not fit EVO models
Lancer / Evolution	2010 +		<sup>2</sup> 40500 (B,T,G)	Fits Hatchback Model Only
Montero	1992 - 2000		<sup>2</sup> 40013 (B,T,G)	
Montero	2001 - 2006		<sup>2</sup> 40176 (B,T,G)	
Montero Sport	1997 - 1999		<sup>3</sup> 40096 (B,T,G)	
Montero Sport	2000 - 2004		<sup>3</sup> 40096 (B,T,G)	Fits LTD and XLS models
			<sup>3</sup> 40174 (B,T,G)	Fits ES, LS, XS models
Outlander	2003 - 2006		<sup>2</sup> 40237 (B,T,G)	
Outlander	2007 +		<sup>2</sup> 40360 (B,T,G)	
Outlander Sport	2011 +		<sup>2</sup> 40499 (B,T,G)	
Pajero	1992 - 2000		<sup>2</sup> 40053 (B)	
<b>Nissan</b>				
Altima	1993 - 1997		<sup>2</sup> 40095 (B)	
Altima	1998 - 2001		<sup>2</sup> 40117 (B)	
Altima	2002 - 2006		<sup>2</sup> 40225 (B)	
Altima	2007 +		<sup>2</sup> 40313 (B)	Fits sedan only
Altima	2008 +		<sup>3</sup> 40334 (B)	Fits coupe only
Armada / Pathfinder Armada	2004 +		<sup>1</sup> 40254 (B,T,G)	Behind 3rd seat
			<sup>4</sup> 40253 (B,T,G)	Behind 2nd seat
Cube	2009 +		<sup>1</sup> 40437 (B,T,G)	
Maxima	1995 - 1999		<sup>3</sup> 40050 (B)	
Maxima	2000 - 2003		<sup>2</sup> 40203 (B)	
Maxima	2004 - 2008		<sup>3</sup> 40250 (B)	
Maxima	2009 +		<sup>3</sup> 40364 (B)	
Murano	2003 - 2008		<sup>2</sup> 40232 (B,T,G)	
Murano	2009 +		<sup>2</sup> 40353 (B,T,G)	
Pathfinder	1989 - 1995		<sup>2</sup> 40011 (B,T,G)	
Pathfinder	1996 - 2004		<sup>2</sup> 40066 (B,T,G)	
Pathfinder	2005 +		<sup>3</sup> 40414 (B,T,G)	Behind 2nd seat
			<sup>1</sup> 40415 (B,T,G)	Behind 3rd seat
Patrol	1988 - 1997		<sup>4</sup> 40105 (B)	4 door Long Wheelbase

All Cargo Liners Part Numbers are for BLACK ONLY.  
Cargo Liner Order Code: B=Black (40XXX), T=Tan (41XXX), & G=Gray (42XXX)

Cargo Liners:  
<sup>1</sup> Small  
<sup>2</sup> Medium  
<sup>3</sup> Large  
<sup>4</sup> X Large  
<sup>7</sup> TBA  
 (to be announced)



## Cargo Liners

## Year

## Make / Model

Part #	Notes	Year	Make / Model
<b>Nissan (continued)</b>			
<sup>2</sup> 40134 (B)	4 wheel drive, GU Series	1998 +	Patrol
<sup>2</sup> 40392 (B,T,G)	Does Not Fit European Models	2008 +	Qashqai
<sup>1</sup> 40024 (B,T,G)	Behind 3rd seat	1993 - 1998	Quest
<sup>2</sup> 40142 (B,T,G)	Behind 3rd seat	1999 - 2002	Quest
<sup>1</sup> 40247 (B,T,G)	Behind 3rd seat - storage well	2004 - 2009	Quest
<sup>3</sup> 40252 (B,T,G)	Behind 3rd seat with 3rd row folded	2004 +	Quest
<sup>2</sup> 40339 (B,T,G)		2008 +	Rogue
<sup>3</sup> 40314 (B)	Fits sedan	2007 +	Sentra
<sup>2</sup> 40362 (B,T,G)	Fits hatchback only	2007 +	Versa
<sup>2</sup> 40152 (B,T,G)		2000 - 2001	Xterra
<sup>2</sup> 40152 (B,T,G)		2002 - 2004	Xterra
<sup>2</sup> 40273 (B,T,G)		2005 +	Xterra
<sup>2</sup> 40259 (B,T,G)		2002 - 2007	X-Trail
<sup>2</sup> 40371 (B,T,G)		2008 +	X-Trail
<b>Oldsmobile</b>			
<sup>3</sup> 40008 (B,T,G)		1991 - 1994	Bravada
<sup>2</sup> 40021 (B,T,G)	Fits vehicles without OnStar	1996 - 2001	Bravada
<sup>2</sup> 40188 (B,T,G)		2002 - 2004	Bravada
<sup>3</sup> 40100 (B,T,G)	Fits behind 2nd row in Short Wheelbase models	1997 - 2004	Silhouette
<b>Peugeot</b>			
40542		2007 +	308 SW
40544		2010 +	508 SW
<b>Plymouth</b>			
<sup>2</sup> 40018 (B,T,G)	Behind 3rd seat	1991 - 1995	Grand Voyager
<sup>2</sup> 40052 (B,T,G)	Behind 3rd seat	1996 - 2000	Grand Voyager
<sup>3</sup> 40098 (B,T,G)	Behind 2nd seat	1996 - 2000	Voyager
<b>Pontiac</b>			
<sup>2</sup> 40185 (B,T,G)	Fits vehicles without sliding rear cargo tray only	2001 - 2005	Aztek
<sup>1</sup> 40431 (B,T,G)		2009	G3
<sup>2</sup> 40099 (B,T,G)	Fits behind 3rd row seats in long wheelbase models without 3rd row stowable bench seat	1997 - 2005	Montana
<sup>3</sup> 40100 (B,T,G)	Fits behind 2nd row seats in short wheelbase models	1997 - 2005	Montana
<sup>3</sup> 40286 (B,T,G)	Behind 2nd seat	2005 - 2008	Montana SV6
<sup>2</sup> 40099 (B,T,G)	Fits behind 3rd row seats in long wheelbase models without 3rd row stowable bench seat	1997 - 1998	Trans Sport
<sup>2</sup> 40347 (B,T,G)	Fits models without subwoofer only	2009	Vibe
<sup>2</sup> 40216 (B,T,G)	Fits vehicles without Moon & Tune or Sun & Sound packages	2003 - 2008	Vibe
<b>Porsche®</b>			
<sup>2</sup> 40080 (B)		1983 - 1991	944® / 944s®
<sup>4</sup> 40244 (B,T,G)		2003 - 2010	Cayenne®
<sup>4</sup> 40487 (B,T,G)		2011 +	Cayenne®
<b>Saab</b>			
<sup>3</sup> 40164 (B,T,G)	Fits wagon only	1999 +	9-5
<sup>2</sup> 40188 (B,T,G)		2005 - 2009	9-7X
<b>Saturn</b>			
<sup>2</sup> 40375 (B,T,G)		2008 - 2009	Astra
<sup>2</sup> 40344 (B)		2007 - 2009	Aura
<sup>2</sup> 40157 (B)		2001 - 2005	L100
<sup>2</sup> 40157 (B)		2001 - 2005	L200
<sup>2</sup> 40157 (B)	Fits sedan only	2001 - 2005	L300
<sup>2</sup> 40158 (B,T,G)	Fits wagon only		
<sup>2</sup> 40157 (B)		2000	LS
<sup>2</sup> 40157 (B)		2000	LS1
<sup>2</sup> 40157 (B)		2000	LS2

# Cargo & Trunk Protection



Make / Model	Year	Cargo Liners	Part #	Notes
<b>Saturn (continued)</b>				
LW1	2000 - 2001		<sup>2</sup> 40158 (B,T,G)	
LW2	2000 - 2001		<sup>2</sup> 40158 (B,T,G)	
LW200	2001 - 2004		<sup>2</sup> 40158 (B,T,G)	
LW3	2000 - 2001		<sup>2</sup> 40158 (B,T,G)	
LW300	2001 - 2004		<sup>2</sup> 40158 (B,T,G)	
Outlook	2007 - 2010		<sup>3</sup> 40410 (B,T,G)	<i>Behind 2nd seat</i>
			<sup>1</sup> 40411 (B,T,G)	<i>Behind 3rd seat</i>
Relay	2005 - 2008		<sup>3</sup> 40286 (B,T,G)	<i>Behind 2nd seat</i>
SC	1991 - 1996		<sup>2</sup> 40065 (B)	
SC1	1991 - 1996		<sup>2</sup> 40065 (B)	
SC1	1997 - 2002		<sup>2</sup> 40059 (B)	
SC2	1991 - 1996		<sup>2</sup> 40065 (B)	
SC2	1997 - 2002		<sup>2</sup> 40059 (B)	
SL	1991 - 1995		<sup>2</sup> 40059 (B)	
SL	1996 - 2002		<sup>2</sup> 40059 (B)	
SL1	1991 - 1995		<sup>2</sup> 40059 (B)	
SL1	1996 - 2002		<sup>2</sup> 40059 (B)	
SL2	1991 - 1995		<sup>2</sup> 40059 (B)	
SL2	1996 - 2002		<sup>2</sup> 40059 (B)	
SW1	1996 - 2002		<sup>2</sup> 40072 (B,T,G)	
SW2	1996 - 2002		<sup>2</sup> 40072 (B,T,G)	
Vue	2002 - 2007		<sup>2</sup> 40221 (B,T,G)	
Vue	2008 - 2010		<sup>2</sup> 40343 (B,T,G)	
<b>Scion</b>				
tC	2005 - 2010		<sup>2</sup> 40432 (B)	
tC	2011 +		<sup>3</sup> 40481 (B,T,G)	
xB	2008 +		<sup>1</sup> 40341 (B,T,G)	
<b>Smart</b>				
ForTwo	2008 +		<sup>1</sup> 40391 (B,T,G)	<i>Does not fit convertible</i>
<b>Subaru</b>				
Forester	2009 +		<sup>2</sup> 40419 (B,T,G)	
Impreza / WRX	2008 - 2011		<sup>2</sup> 40418 (B)	<i>Fits sedan only</i>
			<sup>2</sup> 40455 (B,T,G)	<i>Fits hatchback models only</i>
Impreza / WRX	2012 +		<sup>2</sup> 40418 (B)	<i>Fits WRX sedan only</i>
			<sup>2</sup> 40455 (B,T,G)	<i>Fits WRX hatchback only</i>
Legacy Sedan	2010 +		<sup>2</sup> 40436 (B)	
Legacy Wagon	1995 - 1999		<sup>2</sup> 40075 (B,G)	
<b>Suzuki</b>				
Grand Vitara	1999 - 2005		<sup>2</sup> 40057 (B,T,G)	
Grand Vitara	2006 +		<sup>2</sup> 40370 (B,T,G)	
Sidekick (2 door)	1989 - 1998		<sup>2</sup> 40051 (B,T,G)	
Sidekick (4 door)	1992 - 1998		<sup>2</sup> 40057 (B,T,G)	
Vitara (4 door)	1999 - 2004		<sup>2</sup> 40057 (B,T,G)	
XL-7	2001 - 2006		<sup>2</sup> 40198 (B,T,G)	<i>Fits when 3rd row seat folded down</i>
<b>Toyota</b>				
4 Runner	1990 - 1995		<sup>2</sup> 40009 (B,T,G)	
4 Runner	1996 - 1999		<sup>3</sup> 40071 (B,T,G)	
4 Runner	2000 - 2002		<sup>2</sup> 40175 (B,T,G)	

All Cargo Liners Part Numbers are for BLACK ONLY.  
 Cargo Liner Order Code: B=Black (40XXX), T=Tan (41XXX), & G=Gray (42XXX)

Cargo Liners:  
<sup>1</sup> Small  
<sup>2</sup> Medium  
<sup>3</sup> Large  
<sup>4</sup> X Large  
<sup>7</sup> TBA  
 (to be announced)



## Cargo Liners

Year

Make / Model

Part #	Notes	Year	Toyota (continued)
<sup>1</sup> 40229 (B,T,G)	<i>Fits with double decker cargo system only - covers carpet on top shelf area when shelf is raised</i>	2003 - 2009	4 Runner
<sup>2</sup> 40230 (B,T,G)	<i>Fits without double decker cargo system - without 3rd seat</i>		
<sup>2</sup> 40258 (B,T,G)	<i>Fits without double decker cargo system - with 3rd seat</i>		
<sup>2</sup> 40228 (B,T,G)	<i>Fits with double decker cargo system only - covers full floor area when shelf is raised</i>		
<sup>3</sup> 40440 (B,T,G)	<i>Fits vehicles with 2 rows of seating</i>	2010 +	4 Runner
<sup>3</sup> 40486 (B,T,G)	<i>Behind 2nd row; does not fit vehicles with sliding cargo deck</i>		
<sup>2</sup> 40084 (B)		1995 - 1999	Avalon
<sup>3</sup> 40169 (B)		2000 - 2004	Avalon
<sup>3</sup> 40274 (B)		2005 - 2010	Avalon
<sup>4</sup> 40046 (B)	<i>Fits sedan only</i>	1992 - 1996	Camry
<sup>3</sup> 40092 (B)		1997 - 2001	Camry
<sup>2</sup> 40208 (B)		2002 - 2006	Camry
<sup>2</sup> 40296 (B)	<i>Non-hybrid</i>	2007 - 2011	Camry
<sup>2</sup> 40304 (B)	<i>Hybrid</i>		
<sup>3</sup> 40523	<i>Does not fit hybrid</i>	2012 +	Camry
<sup>2</sup> 40208 (B)	<i>Fits coupe only</i>	2004 +	Camry Solara
<sup>2</sup> 40167 (B)		2000 - 2005	Celica
<sup>2</sup> 40106 (B)		1993 - 1997	Corolla
<sup>3</sup> 40141 (B)		1998 - 2002	Corolla
<sup>3</sup> 40215 (B)		2003 - 2008	Corolla
<sup>2</sup> 40346 (B)		2009 - 2010	Corolla
<sup>2</sup> 40515		2011 +	Corolla
<sup>1</sup> 40160 (B)		2000 - 2005	Echo
<sup>2</sup> 40300 (B,T,G)		2007 +	FJ Cruiser
<sup>2</sup> 40319	<i>Fits vehicles without 3rd seat only</i>	2007 - 2012	Fortuner
<sup>2</sup> 40382 (B,T,G)	<i>Fits vehicles with 3rd seat only</i>		
<sup>2</sup> 40201 (B,T,G)		2001 - 2007	Highlander
<sup>2</sup> 40328 (B,T,G)	<i>Fits models with 3 rows of seats only</i>	2008 +	Highlander
<sup>4</sup> 40010 (B,T,G)		1991 - 1997	Land Cruiser
<sup>4</sup> 40124 (B,T,G)	<i>Fits vehicles with jumpseat</i>	1998 - 2007	Land Cruiser
<sup>4</sup> 40140 (B,T,G)	<i>Fits vehicles without jumpseat</i>		
<sup>4</sup> 40356 (B,T,G)		2008 +	Land Cruiser
<sup>2</sup> 40216 (B,T,G)	<i>Fits vehicles without Moon &amp; Tune or Sun &amp; Sound packages</i>	2003 - 2008	Matrix
<sup>2</sup> 40347 (B,T,G)	<i>Fits vehicles without subwoofer only</i>	2009 +	Matrix
<sup>4</sup> 40103 (B)		1996.5 - 2002	Prado
<sup>3</sup> 40240 (B,T,G)	<i>Fits 4-door only</i>	2003 +	Prado
<sup>1</sup> 40320	<i>Fits 2-door only</i>		
<sup>1</sup> 40025 (B,T,G)	<i>Behind 3rd seat</i>	1991 - 1997	Previa
<sup>2</sup> 40268 (B,T,G)		2004 - 2009	Prius
<sup>3</sup> 40400 (B,T,G)		2010 +	Prius
<sup>2</sup> 40537 (B,T,G)		2012 +	Prius V
<sup>1</sup> 40055 (B,G)	<i>Fits 2 door only</i>	1996 - 2000	RAV4
<sup>1</sup> 40056 (B,G)	<i>Fits 4 door only</i>		
<sup>2</sup> 40186 (B,T,G)		2001 - 2006	RAV4
<sup>2</sup> 40295 (B,T,G)	<i>Without 3rd seat</i>	2006 +	RAV4
<sup>4</sup> 40187 (B,T,G)	<i>Behind 2nd seat</i>	2001 - 2007	Sequoia
<sup>2</sup> 40202 (B,T,G)	<i>Behind 3rd seat</i>		
<sup>2</sup> 40345 (B,T,G)		2008 +	Sequoia
<sup>1</sup> 40119 (B,T,G)	<i>Behind 3rd seat</i>	1998 - 2003	Sienna

# Cargo & Trunk Protection



Make / Model	Year	Cargo Liners	Part #	Notes
<b>Toyota (continued)</b>				
Sienna	2004 - 2010		<sup>4</sup> 40243 (B,T,G)	<i>Behind 2nd seat</i>
			<sup>1</sup> 40238 (B,T,G)	<i>Fits in storage well behind 3rd row, does not fit models with power folding 3rd row</i>
Sienna	2011 +		<sup>1</sup> 40446 (B,T,G)	<i>Behind 3rd row</i>
Tercel	1995 - 1998		<sup>1</sup> 40107 (B)	
Venza	2009 +		<sup>4</sup> 40369 (B,T,G)	
Yaris	2007 - 2011		<sup>1</sup> 40289 (B,T,G)	<i>Fits 3-door and 5-door models</i>
			<sup>2</sup> 40305 (B)	<i>Fits sedan only</i>
Yaris	2012 +		<sup>2</sup> 40536	<i>3 and 5 door models</i>
<b>Volkswagen</b>				
Beetle	1998 - 2011		<sup>2</sup> 40133 (B,T,G)	<i>Does not fit convertible</i>
CC	2009 +		<sup>2</sup> 40363 (B)	<i>Fits sedan</i>
Golf / Rabbit / GTI / R32	1993 - 1998		<sup>2</sup> 40085 (B)	
Golf / Rabbit / GTI / R32	1999 - 2006		<sup>2</sup> 40137 (B)	
Golf / Rabbit / GTI / R32	2006 +		<sup>2</sup> 40335 (B,T,G)	
Jetta / GLI	1993 - 1998		<sup>2</sup> 40083 (B)	
Jetta / GLI	1999 - 2005		<sup>2</sup> 40136 (B)	<i>Fits sedan</i>
			<sup>2</sup> 40206 (B,T,G)	<i>Fits wagon</i>
Jetta / GLI	2005.5 - 2010		<sup>3</sup> 40330	<i>Fits sportwagon only</i>
Jetta / GLI	2005.5 +		<sup>2</sup> 40292 (B)	<i>Fits sedan</i>
Jetta / GLI	2011 +		<sup>3</sup> 40474 (B)	
Passat	1995 - 1997		<sup>2</sup> 40101 (B)	
			<sup>3</sup> 40102 (B,T,G)	<i>Fits wagon</i>
Passat	1998 - 2005		<sup>3</sup> 40125 (B,T,G)	<i>Fits front wheel drive wagon</i>
			<sup>2</sup> 40155 (B)	<i>Fits front wheel drive sedans</i>
Passat	2006 - 2011		<sup>2</sup> 40363 (B)	<i>Fits sedan</i>
Passat	2012 +		<sup>3</sup> 40505 (B,T,G)	<i>Fits sedan</i>
Routan	2009 +		<sup>2</sup> 40265 (B,T,G)	<i>Behind 3rd</i>
Tiguan	2009 +		<sup>2</sup> 40387 (B,T,G)	
Touareg	2003 - 2010		<sup>4</sup> 40244 (B,T,G)	
Touran	2010 +		<sup>3</sup> 40514 (B,T,G)	<i>Fits 5 Door Model Only, does not fit Hybrid</i>
<b>Volvo</b>				
740	1985 - 1997		<sup>3</sup> 40090 (B,T,G)	
760	1985 - 1997		<sup>3</sup> 40090 (B,T,G)	
850 Sedan	1993 - 1997		<sup>3</sup> 40069 (B)	
850 Wagon	1994 - 1997		<sup>3</sup> 40070 (B,T,G)	
940 Wagon	1985 - 1997		<sup>3</sup> 40090 (B,T,G)	
960 Wagon	1985 - 1997		<sup>3</sup> 40090 (B,T,G)	
S40	2000 - 2004		<sup>2</sup> 40165 (B)	
S70	1998 - 2000		<sup>3</sup> 40069 (B)	
V40	2000 - 2004		<sup>2</sup> 40166	<i>Fits wagon</i>
			<sup>3</sup> 40192 (B,T,G)	<i>Fits sedan</i>
V50	2005 +		<sup>2</sup> 40282 (B,T,G)	
V70	1998 - 2000		<sup>3</sup> 40070 (B,T,G)	
			<sup>3</sup> 40178 (B,T,G)	<i>Except V70 R</i>
V70	2008 +		<sup>2</sup> 40403 (B,T,G)	
V90	1998		<sup>3</sup> 40090 (B,T,G)	
XC60	2010 +		<sup>2</sup> 40417 (B,T,G)	
XC70	2001 - 2007		<sup>3</sup> 40178 (B,T,G)	
XC70	2008 +		<sup>2</sup> 40403 (B,T,G)	
XC90	2003 +		<sup>3</sup> 40251 (B,T,G)	<i>Behind 2nd seat</i>
			<sup>1</sup> 40257 (B,T,G)	<i>Behind 3rd seat</i>

All Cargo Liners Part Numbers are for BLACK ONLY.  
 Cargo Liner Order Code: B=Black (40XXX), T=Tan (41XXX), & G=Gray (42XXX)

Cargo Liners:  
<sup>1</sup> Small  
<sup>2</sup> Medium  
<sup>3</sup> Large  
<sup>4</sup> X Large  
<sup>7</sup> TBA  
 (to be announced)





**Cargo Liners**

**Year**

**Make / Model**

**Part #**


**Notes**

**Check WeatherTechDirect.com  
for New Applications**

**(PDF and Excel Available for Download)**

# WeatherTech<sup>®</sup>AVM<sup>®</sup>

## Universal Cargo Mat

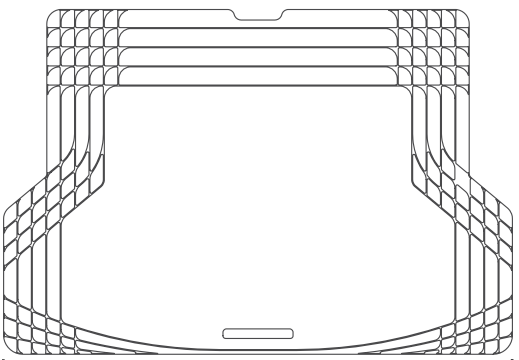

Trim-to-Fit™  
length from  
27 ½" - 36"

Trim-to-Fit™ length from 41" - 53"

Part Number	Color
11AVMCB	Black
11AVMCT	Tan
11AVMCG	Grey

Side Window Deflectors



Sunroof Wind Deflector



Stone & Bug Deflector







# Side Window Deflectors

LET THE FRESH AIR IN®

WeatherTech® Side Window Deflectors offer fresh air enjoyment with an original equipment look. They are crafted from the finest 3mm lightly-tinted acrylic material available.

Installation is quick and easy, with no exterior tape needed. WeatherTech® Side Window Deflectors are precision-machined to perfectly fit your vehicle. These low profile window deflectors help to reduce wind noise and allow interior heat to escape. Our light tinted Side Window Deflectors are the only deflectors in the world made with a D.O.T. approved (U.S. Department of Transportation) glazing material.

Volkswagen Jetta



Honda Civic



Light & Dark Tint





LEXUS ES350



HONDA RIDGELINE



TOYOTA PRIUS



SATURN OUTLOOK



**Side Window Deflectors Available for**

Acura • Audi • BMW • Buick • Cadillac • Chevrolet • Chrysler • Deawoo • Dodge • Eagle • Ford • Geo • GMC • Honda • Hummer • Hyundai • Infiniti • Isuzu • Jaguar • Jeep • Kia • Land Rover • Lexus • Lincoln • Mazda • Mercedes-Benz® • Mercury • Mitsubishi • Nissan • Oldsmobile • Plymouth • Pontiac • Porsche® • Saab • Saturn • Scion • Subaru • Suzuki • Toyota • Volkswagen • Volvo • And More!



# Side Window Deflectors

VOLKSWAGEN BEETLE



JEEP GRAND CHEROKEE



CHEVROLET SUBURBAN



HONDA CIVIC



Available in Dark and Light Tint



LET THE FRESH AIR IN®

The WeatherTech® Sunroof Wind Deflector gives you excellent reduction of in-cabin wind noise and air turbulence! It is crafted from the finest 4mm thick, tinted cast acrylic. Our sunroof deflector fits the sunroof opening precisely, and is held securely in place with the MagiClip™ vehicle specific fastening system. To protect your vehicle's finish, the unique AirCushion™ gasket seals the edge of the deflector. WeatherTech® Sunroof Wind Deflector's sleek and sophisticated look is a great addition to any vehicle.

## Sunroof Wind Deflectors Available for

Acura • Audi • BMW • Buick • Cadillac • Chevrolet • Chrysler • Dodge • Ford • GMC • Honda • Hummer • Hyundai • Infiniti • Isuzu • Jaguar • Jeep • Kia • Land Rover • Lexus • Lincoln • Mazda • Mercedes-Benz® • Mercury • Mini • Mitsubishi • Nissan • Oldsmobile • Plymouth • Pontiac • Porsche® • Saab • Saturn • Suzuki • Toyota • Volkswagen • Volvo • And More!

Vehicle Specific Design




Toyota Matrix



Ford Escape



AirCushion™ Gasket

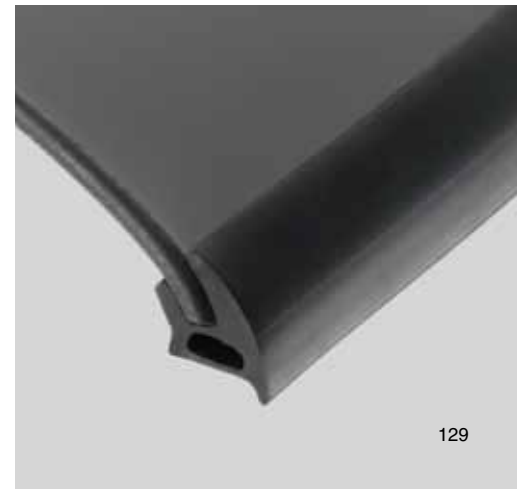



atherTech  
otive Access





## COMPLETE FRONT END PROTECTION

Sleek and low profile, the WeatherTech® Easy-On® Stone & Bug Deflector is aerodynamically designed to provide excellent protection against stone chips and bug stains.

Made from aerospace-grade acrylic, it is virtually indestructible and extremely scratch resistant. Attaches easily to most SUVs, trucks, minivans or cars using either a 3M®-brand automotive adhesive tape, or fasteners that use existing holes in the vehicle's hood. No drilling is required. A beautiful and protective addition to any vehicle.

Sleek and Low Profile



### Easy-On™ Stone & Bug Deflectors Available for

Acura • Buick • Cadillac • Chevrolet • Chrysler • Dodge • Ford • GMC • Honda • Hyundai • Isuzu • Jeep • Lexus • Lincoln • Mazda • Mercedes-Benz® • Mercury • Mitsubishi • Nissan • Oldsmobile • Plymouth • Pontiac • Saturn • Scion • Subaru • Suzuki • Toyota • Volkswagen • And More!


Toyota Tundra



Aerodynamic Design




Chevrolet Suburban

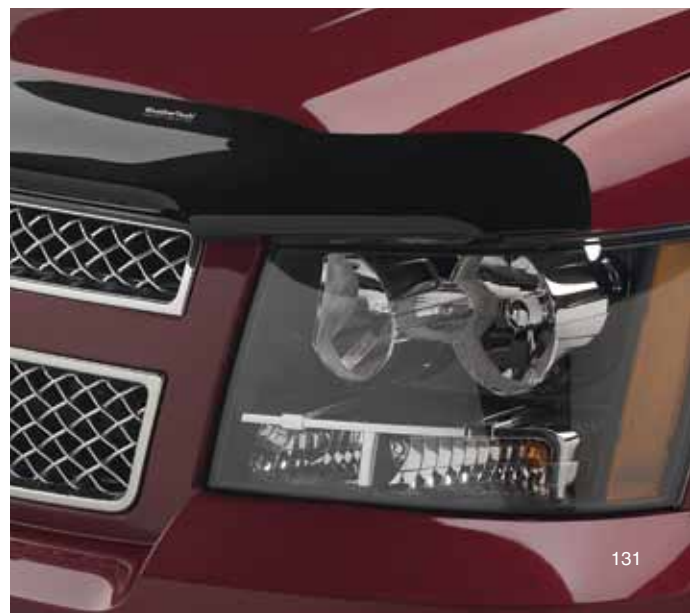

Honda Civic



# Deflectors

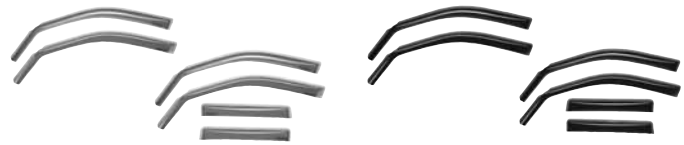

Side Window  
Deflectors Light

Side Window  
Deflectors Dark

Make / Model	Year	Side Window Deflectors Light		Side Window Deflectors Dark	
		Front	Front & Rear	Front	Front & Rear
<b>Acura</b>					
CL	2001 - 2003	70279			
MDX	2001 - 2006	70275	72275	80275	82275
MDX	2007 +	70456	72456	80456	
RL	1996 - 2004	70002			
RL	2005 +	70368	72368		
RSX	2002 - 2006	70283		80283	
SLX	1996 - 1997	70001	72001		
SLX	1998 - 1999	70001	72001		
TL	1999 - 2003	70232	72232	80232	82232
TL	2004 - 2008	70350	72350		82350
TL	2009 +	70495	72495	80495	82495
TSX	2004 - 2008	70334	72334	80334	82334
TSX	2009 +	70505	72505	80505	82505
<b>Audi</b>					
100	1992 - 1994	70003			
80 / 90	1986 - 1995	70078			
A3	2006 +	70369	72369		
A4 / S4 / RS4	2002 - 2008	70301		80301	
A4 / S4 / RS4	2009 +	70500	72500	80500	82500
		<i>Fits models with chrome window frames</i>	<i>Fits sedans with chrome window frames</i>	<i>Fits models with chrome window frames</i>	<i>Fits sedans with chrome window frames</i>
		70501	72501	80501	82501
		<i>Fits models with rubber window frames</i>	<i>Fits sedans with rubber window frames</i>	<i>Fits models with rubber window frames</i>	<i>Fits models with rubber window frames</i>
			74501		84501
			<i>Fits Avant models with rubber window frames</i>		<i>Fits Avant models with rubber window frames</i>
			74500		84500
			<i>Fits Avant models with chrome window frames</i>		<i>Fits Avant models with chrome window frames</i>
A4 Avant	2002 - 2008	70301	74301		
A4 Avant, 1.8t	1998 - 2001	70004	72004		
		<i>Fits models with chrome window frames</i>	<i>Fits models with chrome window frames</i>		
		70005	72005		
		<i>Fits models with rubber window frames</i>	<i>Fits models with rubber window frames</i>		
A4 Sedan	2002 - 2008	70301	72301		

Side Window Deflectors:  
\*ET Rear Part Uses Exterior Tape

Stone & Bug Deflectors:  
# No Tape Mounting (Uses existing holes under vehicle hood).  
\* Mounts to hood surface






Sunroof Wind Deflector



Stone & Bug Deflector

Sunroof Wind Deflector	Stone & Bug Deflector	Year	Make / Model
<b>Acura</b>			
		2001 - 2003	CL
89035		2001 - 2006	MDX
	#50181	2007 +	MDX
89032		1996 - 2004	RL
89034		2005 +	RL
89030		2002 - 2006	RSX
	50019	1996 - 1997	SLX
	50047	1998 - 1999	SLX
		1999 - 2003	TL
89034		2004 - 2008	TL
		2009 +	TL
89033		2004 - 2008	TSX
		2009 +	TSX
<b>Audi</b>			
		1992 - 1994	100
		1986 - 1995	80 / 90
		2006 +	A3
		2002 - 2008	A4 / S4 / RS4
		2009 +	A4 / S4 / RS4
		2002 - 2008	A4 Avant
89007		1998 - 2001	A4 Avant, 1.8t
89007		2002 - 2008	A4 Sedan

# Deflectors

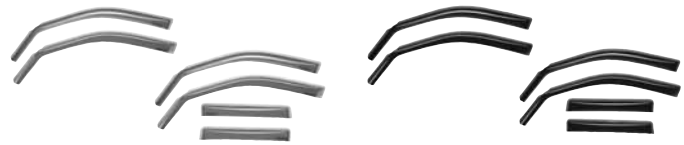

Make / Model	Year	Side Window Deflectors Light		Side Window Deflectors Dark	
		Front	Front & Rear	Front	Front & Rear
<b>Audi (continued)</b>					
A4 Sedan, 1.8t	1996 - 2001	70004 <i>Fits models with chrome window frames</i>	74004 <i>Fits models with chrome window frames</i>		
		70005 <i>Fits models with rubber window frames</i>	74005 <i>Fits models with rubber window frames</i>		
A6 Avant / S6 Avant	1995 - 1998	70006			
A6 Avant / S6 Avant	1999 - 2005	70007	74007		
A6 Avant / S6 Avant	2006 - 2011	70370	74370		
A6 Sedan / S6 Sedan	1995 - 1997	70006			
A6 Sedan / S6 Sedan	1998 - 2004	70007	72007		
A6 Sedan / S6 Sedan	2005 - 2011	70370	72370		
A8 / A8L / S8	2004 - 2010	70363	74363 <i>Fits A8L only</i>		
A8 / A8L / S8	2011 +	70554	72554	80554	82554 <i>Does not fit A8L</i>
Allroad	1999 - 2005	70007	74007		
Q5	2008 +	70513	72513	80513	82513
Q7	2007 +	70438	72438		
S4 Avant	2001 - 2002	70004 <i>Fits models with chrome window frames</i>	72004 <i>Fits models with chrome window frames</i>		
		70005 <i>Fits models with rubber window frames</i>	72005 <i>Fits models with rubber window frames</i>		
S4 Avant	2004 +	70301	74301		
S4 Sedan	2000 - 2002	70004 <i>Fits models with chrome window frames</i>	74004 <i>Fits models with chrome window frames</i>		
		70005 <i>Fits models with rubber window frames</i>	74005 <i>Fits models with rubber window frames</i>		
S4 Sedan	2004 +	70301	72301		
<b>BMW</b>					
3-Series (E30) 325e/i/is/iX, M3	1982 - 1991	70009 <i>Fits sedan and sportwagon</i>	72009 <i>Fits sedan only</i>		
		70008 <i>Fits coupe only</i>			
3-Series (E36) 318i/iS/ti, 323i/is/Ci, 325i/is, 328i/is	1991 - 1999	70010 <i>Fits sedan only</i>	72010 <i>Fits sedan only</i>		
		70011 <i>Fits hatchback only</i>			
3-Series (E46) 323i, 325i/Ci, 328i, 330i/xi, M3	1998 - 2006	70185 <i>Fits sedan and wagon</i>	72185 <i>Fits sedan only</i>	80185 <i>Fits sedan and wagon only</i>	82185 <i>Fits sedan only</i>
			74185 <i>Fits sportwagon only</i>		

Side Window Deflectors:  
\*ET Rear Part Uses Exterior Tape

Stone & Bug Deflectors:  
# No Tape Mounting (Uses existing holes under vehicle hood).  
\* Mounts to hood surface




**Sunroof Wind  
Deflector**



**Stone & Bug  
Deflector**

	Year	Make / Model
<b>Audi (continued)</b>		
89007	1996 - 2001	A4 Sedan, 1.8t
89002	1995 - 1998	A6 Avant / S6 Avant
89007	1999 - 2005	A6 Avant / S6 Avant
	2006 - 2011	A6 Avant / S6 Avant
89002	1995 - 1997	A6 Sedan / S6 Sedan
89007	1998 - 2004	A6 Sedan / S6 Sedan
	2005 - 2011	A6 Sedan / S6 Sedan
89025	2004 - 2010	A8 / A8L / S8
	2011 +	A8 / A8L / S8
89007	1999 - 2005	Allroad
	2008 +	Q5
	2007 +	Q7
89007	2001 - 2002	S4 Avant
89007	2004 +	S4 Avant
89007	2000 - 2002	S4 Sedan
89007	2004 +	S4 Sedan
<b>BMW</b>		
	1982 - 1991	3-Series (E30) 325e/i/is/iX, M3
89001	1991 - 1999	3-Series (E36) 318i/iS/ti, 323i/is/Ci, 325i/is, 328i/is
89015	1998 - 2006	3-Series (E46) 323i, 325i/Ci, 328i, 330i/xi, M3

# Deflectors

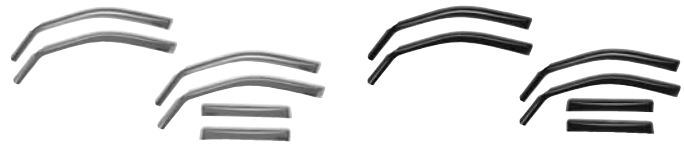

Make / Model	Year	Side Window Deflectors Light		Side Window Deflectors Dark	
		Front	Front & Rear	Front	Front & Rear
<b>BMW (continued)</b>					
3-Series (E90, E91, E92, E93) 325i/xi, 328i/xi, 330i/xi, 335i/xi, M3	2006 - 2011	70405 <i>Fits sedan and wagon</i>	72405 <i>Fits sedan only</i> 74405 <i>Fits sportwagon only</i>		
5-Series (E28) 524td, 528e, 533i, 535i/is, M5	1982 - 1988	70012	72012		
5-Series (E34) 525i, 530i, 535i, 540i, M5	1989 - 1995	70013	72013 <i>Fits sedan only</i>		
5-Series (E39) 525i, 528i, 530i, 540i, M5	1996 - 2003	70014	72014 <i>Fits sedan only</i> 74014 <i>Fits sportwagon only</i>		
5-Series (E60, E61) 525i/xi, 530i/xi, 535i/xi, 545i, 550i, M5	2004 - 2010	70401 <i>Fits sportwagon</i>	74401 <i>Fits sportwagon</i> 72346 <i>Fits sedan only</i>	80346 <i>Fits sedan</i>	82346 <i>Fits sedan</i>
5-series (F10) 528i, 535i, 535ix Drive, 550i, M5	2011 +	70540		80540	
7-Series (E32) 735i/iL, 740i/iL, 750iL	1987 - 1994	70016			
7-Series (E38) 740i/iL, 750iL	1995 - 2001	70017			
7-Series (E65, E66) 745i/Li, 750i/Li, 760i/Li	2003 - 2009	70307	72307 <i>Does not fit Li models</i> 74307 <i>Fits Li models only</i>		
7-Series (F01, F02) 750i/iL/xDrive	2010 +	70514	72514 <i>Does not fit Li models</i>		
X3	2004 - 2010	70345	72345	80345	82345
X3	2011 +	70568	72568	80568	82568
X3 (F25)	2011 +	70568	72566	80566	82566
X5 / X5M	2000 - 2006	70241	72241	80241	82241
X5 / X5M	2007 +	70437	72437		
X6 / X6M	2008 +	70477	72477		
<b>Buick</b>					
Century	1997 - 2005	70165	72165		
Enclave	2008 +	70473	72473		
Lacrosse	2005 - 2009	70371	72371		
Lacrosse	2010 +	70521	72521	80521	82521
LeSabre	1992 - 1999	70164 <i>Fits sedan only</i>	72164 <i>Fits sedan only</i>		
LeSabre	2000 - 2005	70244 <i>Fits sedan only</i>	72244 <i>Fits sedan only</i>		
Lucerne	2006 +	70424	72424	80424	82424
Park Avenue Ultra	1997 - 2005	70166	72166		
Rainier	2004 - 2007	70278	72278	80278	82278
Regal	1997.5 - 2004	70165	72165		
Rendezvous	2002 - 2007	70295	72295	80295	82295
Roadmaster	1991 - 1996	70159	72159 <i>Fits sedan only</i> 74159 <i>Fits wagon only</i>		
Terraza	2005 - 2007	70372		80372	

Side Window Deflectors:  
\*ET Rear Part Uses Exterior Tape

Stone & Bug Deflectors:  
# No Tape Mounting (Uses existing holes under vehicle hood).  
\* Mounts to hood surface




**Sunroof Wind  
Deflector**



**Stone & Bug  
Deflector**

		Year	Make / Model
<b>BMW (continued)</b>			
89149		2006 - 2011	3-Series (E90, E91, E92, E93) 325i/xi, 328i/xi, 330i/xi, 335i/xi, M3
		1982 - 1988	5-Series (E28) 524td, 528e, 533i, 535i/is, M5
		1989 - 1995	5-Series (E34) 525i, 530i, 535i, 540i, M5
89001		1996 - 2003	5-Series (E39) 525i, 528i, 530i, 540i, M5
89123		2004 - 2010	5-Series (E60, E61) 525i/xi, 530i/xi, 535i/xi, 545i, 550i, M5
		2011 +	5-series (F10) 528i, 535i, 535ix Drive, 550i, M5
		1987 - 1994	7-Series (E32) 735i/iL, 740i/iL, 750iL
89006		1995 - 2001	7-Series (E38) 740i/iL, 750iL
89020		2003 - 2009	7-Series (E65, E66) 745i/Li, 750i/Li, 760i/Li
		2010 +	7-Series (F01, F02) 750i/iL/xDrive
89124		2004 - 2010	X3
		2011 +	X3
		2011 +	X3 (F25)
89001		2000 - 2006	X5 / X5M
		2007 +	X5 / X5M
		2008 +	X6 / X6M
<b>Buick</b>			
		1997 - 2005	Century
		2008 +	Enclave
		2005 - 2009	Lacrosse
		2010 +	Lacrosse
		1992 - 1999	LeSabre
		2000 - 2005	LeSabre
		2006 +	Lucerne
		1997 - 2005	Park Avenue Ultra
89050	50134	2004 - 2007	Rainier
<i>Does not fit 2006+ models</i>			
		1997.5 - 2004	Regal
89052	50123	2002 - 2007	Rendezvous
		1991 - 1996	Roadmaster
	#50136	2005 - 2007	Terraza

# Deflectors

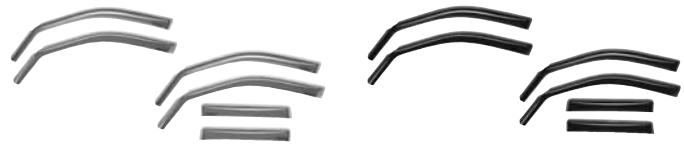

Make / Model	Year	Side Window Deflectors Light		Side Window Deflectors Dark	
		Front	Front & Rear	Front	Front & Rear
<b>Cadillac</b>					
CTS / CTS-V	2003 - 2007	70300	72300	80300	82300
CTS / CTS-V	2008 +	70471	72471	80471	82471
Deville	1994 - 1999	70157	72157		
Deville	2000 - 2005	70245	72245	80245	82245
DTS	2006 +	70415	72415	80415	82415
Escalade	1999 - 2000	70019	72019	80019	82019
Escalade	2002 - 2006	70184	74184	80184	84184
Escalade	2007 +	70435	72435	80435	82435
Escalade ESV	2003 - 2006	70184	72184	80184	82184
Escalade ESV	2007 +	70435	74435	80435	84435
Escalade EXT	2002 - 2006	70184	72184	80184	82184
Escalade EXT	2007 +	70435	74435	80435	84435
Seville	1992 - 1997	70156	72156		
Seville	1998 - 2004	70155	72155	80155	82155
SRX	2004 - 2009	70349	72349	80349	82349
SRX	2010 +	70523	72523	80523	82523
STS	2005 +	70373	72373	80373	82373
<b>Chevrolet</b>					
Astro Van	1985 - 1994	70108			
Astro Van	1995 - 2005	70108			
Avalanche	2002 - 2006	70184	72184	80184	82184
Avalanche	2007 +	70426	74426	80426	
Aveo	2004 - 2006	70328	72328 <i>Fits sedan only</i> 74328 <i>Fits 5 door model only</i>		
Aveo	2007 - 2011	70508	72508 <i>Fits 5-door models only</i> 74508 <i>Fits 4 Door Model Only</i>		84508 <i>Fits 4 Door Model Only</i>
Blazer	1984 - 1994	70152	72152 <i>Fits 4 door model only</i>		
Blazer	1995 - 2005	70018	72018 <i>Fits 4 door model only</i>	80018	82018 <i>Fits 4 door model only</i>
Blazer Full Size	1992 - 1994	70019		80019	
Caprice	1991 - 1996	70159	72159 <i>Fits sedan only</i> 74159 <i>Fits wagon only</i>		
Cavalier	1995 - 2005	70173 <i>Fits coupe and Z24 only</i> 70175 <i>Fits sedan only</i>			
CK Series Pickup Crew Cab	1992 - 2000	70019	72019	80019	82019
CK Series Pickup Extended Cab	1992 - 2000	70019	78019 <i>*ET</i>	80019	88019 <i>*ET</i>
CK Series Pickup Regular Cab	1988 - 2000	70019		80019	
Classic	2004 +	70131	72131	80131	82131

Side Window Deflectors:  
\*ET Rear Part Uses Exterior Tape

Stone & Bug Deflectors:  
# No Tape Mounting (Uses existing holes under vehicle hood).  
\* Mounts to hood surface






**Sunroof Wind  
Deflector**



**Stone & Bug  
Deflector**

		Year	Make / Model
<b>Cadillac</b>			
89028		2003 - 2007	CTS / CTS-V
		2008 +	CTS / CTS-V
		1994 - 1999	Deville
89076		2000 - 2005	Deville
		2006 +	DTS
	50038	1999 - 2000	Escalade
89075	#50080	2002 - 2006	Escalade
89147	50160	2007 +	Escalade
89075	#50080	2003 - 2006	Escalade ESV
89147	50160	2007 +	Escalade ESV
89075	#50080	2002 - 2006	Escalade EXT
89147	50160	2007 +	Escalade EXT
		1992 - 1997	Seville
89074		1998 - 2004	Seville
		2004 - 2009	SRX
		2010 +	SRX
89074		2005 +	STS
		<i>Does not fit 2007+ models</i>	
<b>Chevrolet</b>			
		1985 - 1994	Astro Van
	50046	1995 - 2005	Astro Van
89075	#50082	2002 - 2006	Avalanche
	#50095	<i>Fits Avalanche without body armor only</i>	
89147	50152	2007 +	Avalanche
		2004 - 2006	Aveo
		2007 - 2011	Aveo
	50037	1984 - 1994	Blazer
	50005	1995 - 2005	Blazer
	50001	1992 - 1994	Blazer Full Size
		1991 - 1996	Caprice
89051	50102	1995 - 2005	Cavalier
	50001	1992 - 2000	CK Series Pickup Crew Cab
	50001	1992 - 2000	CK Series Pickup Extended Cab
	50001	1988 - 2000	CK Series Pickup Regular Cab
		2004 +	Classic

# Deflectors

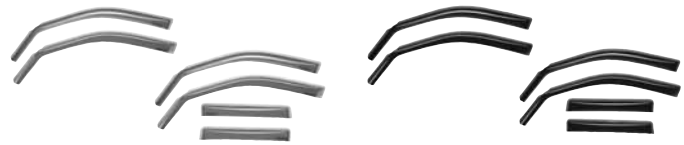

Make / Model	Year	Side Window Deflectors Light		Side Window Deflectors Dark	
		Front	Front & Rear	Front	Front & Rear
<b>Chevrolet (continued)</b>					
Cobalt	2005 - 2010	70374 <i>Fits Sedan only</i> 70410 <i>Fits Coupe only</i>	72374 <i>Fits Sedan only</i>	80410	
Colorado Crew Cab	2004 +	70339	72339	80339	82339
Colorado Extended Cab	2004 +	70339	78339 <i>*ET</i>	80339	88339 <i>*ET</i>
Colorado Regular Cab	2004 +	70339		80339	
Cruze	2011 +	70545	72545	80545	82545
Equinox	2005 - 2006	70364	78364	80364	88364
Equinox	2007 - 2009	70364			
Equinox	2010 +	70520		80520	
Express Van	1996 - 2002	70020			
Express Van	2003 +	70020		80020	
HHR	2006 - 2011	70413	72413	80413	82413
Impala	1994 - 1996	70159	72159		
Impala	2000 - 2005	70246	72246	80246	82246
Impala	2006 +	70428	72428	80428	
Lumina Minivan	1990 - 1996	70182			
Lumina Sedan	1995 - 2001	70132	72132		
Malibu	1997 - 2003	70131	72131	80131	82131
Malibu	2004 - 2007	70340	72340		
Malibu	2008 - 2012	70486	72486	80486	82486
Malibu Maxx	2004 - 2007	70340	74340		
Monte Carlo	1995 - 1999	70160			
Monte Carlo	2000 - 2005	70247		80247	
Monte Carlo	2006 - 2007	70247		80247	
Prizm	1998 - 2002	70086			
S10 Pickup	1982 - 1993	70152			
S10 Pickup	1994 - 2004	70018	74018 <i>Fits Crew Cab only</i> 78018 <i>*ET - Fits Extended Cab only</i>	80018	84018 <i>Fits Crew Cab only</i> 88018 <i>*ET - Fits Extended Cab only</i>
Silverado Crew Cab	1999 - 2002	70184	72184	80184	82184
Silverado Crew Cab	2003 - 2004	70184	72184	80184	82184
Silverado Crew Cab	2005 - 2007 Classic	70184	72184 <i>Does not fit 2007 new body style</i>	80184	82184 <i>Does not fit 2007 new body style</i>
Silverado Crew Cab	2007 - 2010				
Silverado Crew Cab	2007 +	70426	74426	80426	84426
Silverado Crew Cab	2011 +				
Silverado Extended Cab	1999 - 2002	70184	78184 <i>*ET</i>	80184	88184 <i>*ET</i>
Silverado Extended Cab	2003 - 2004	70184	78184 <i>*ET</i>	80184	88184 <i>*ET</i>

Side Window Deflectors:  
\*ET Rear Part Uses Exterior Tape

Stone & Bug Deflectors:  
# No Tape Mounting (Uses existing holes under vehicle hood).  
\* Mounts to hood surface




Sunroof Wind  
Deflector



Stone & Bug  
Deflector

		Year	Make / Model
<b>Chevrolet (continued)</b>			
		2005 - 2010	Cobalt
	#50124	2004 +	Colorado Crew Cab
	#50124	2004 +	Colorado Extended Cab
	50124	2004 +	Colorado Regular Cab
		2011 +	Cruze
89049	50127	2005 - 2006	Equinox
89049		2007 - 2009	Equinox
	50198	2010 +	Equinox
	50027	1996 - 2002	Express Van
	50098	2003 +	Express Van
	#50149	2006 - 2011	HHR
		1994 - 1996	Impala
89130		2000 - 2005	Impala
		2006 +	Impala
		1990 - 1996	Lumina Minivan
		1995 - 2001	Lumina Sedan
		1997 - 2003	Malibu
89130		2004 - 2007	Malibu
		2008 - 2012	Malibu
89130		2004 - 2007	Malibu Maxx
		1995 - 1999	Monte Carlo
89130	50103	2000 - 2005	Monte Carlo
89130		2006 - 2007	Monte Carlo
		1998 - 2002	Prizm
	50037	1982 - 1993	S10 Pickup
	50005	1994 - 2004	S10 Pickup
89075	#50045 <i>Does not fit Heavy Duty models</i> #50067 <i>Fits Heavy Duty models only</i>	1999 - 2002	Silverado Crew Cab
89075	#50095	2003 - 2004	Silverado Crew Cab
89075 <i>Does not fit 2007 new body style</i>	#50132 <i>Does not fit 2007 new body style</i>	2005 - 2007 Classic	Silverado Crew Cab
	50177 <i>Fits Heavy Duty models only</i>	2007 - 2010	Silverado Crew Cab
89147	#50161 <i>Does not fit hybrid model</i>	2007 +	Silverado Crew Cab
	50202 <i>Fits Heavy Duty models only</i>	2011 +	Silverado Crew Cab
89075	#50045 <i>Does not fit Heavy Duty models</i> #50067 <i>Fits Heavy Duty models only</i>	1999 - 2002	Silverado Extended Cab
89075	#50095	2003 - 2004	Silverado Extended Cab

# Deflectors

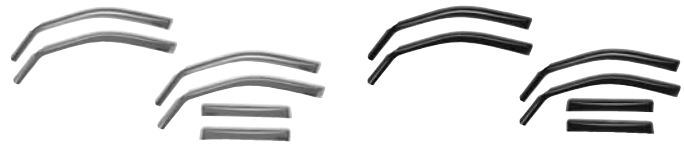

Make / Model	Year	Side Window Deflectors Light		Side Window Deflectors Dark	
		Front	Front & Rear	Front	Front & Rear
<b>Chevrolet (continued)</b>					
Silverado Extended Cab	2005 - 2007 Classic	70184	78184 <i>Does not fit 2007 new body style</i>	80184	88184 <i>Does not fit 2007 new body style</i>
Silverado Extended Cab	2007 +	70426	76426	80426	86426
Silverado Standard Cab	1999 - 2002	70184		80184	
Silverado Standard Cab	2003 - 2004	70184		80184	
Silverado Standard Cab	2005 - 2007 Classic	70184	<i>Does not fit 2007 new body style</i>	80184	<i>Does not fit 2007 new body style</i>
Silverado Standard Cab	2007 +	70426		80426	
Sonic	2012 +	70705 <i>Fits 4 &amp; 5 door vehicles</i>	72705 <i>Fits 4 door vehicles only</i> 74705 <i>Fits 5 door vehicles only</i>	80705 <i>Fits 4 &amp; 5 vehicles</i> 84705 <i>Fits 5 door vehicles only</i>	82705 <i>Fits 4 door vehicles only</i>
Suburban	1992 - 1999	70019	72019	80019	82019
Suburban	2000 - 2006	70184	72184	80184	82184
Suburban	2007 +	70426	74426	80426	84426
Tahoe	1995 - 1999	70019	72019 <i>Fits 4 door only</i>	80019	82019 <i>Fits 4 door only</i>
Tahoe	2000 - 2006	70184	74184	80184	84184
Tahoe	2007 +	70426	72426	80426	82426
Tracker	1998	70038 <i>Fits 4 Door only</i> 70036 <i>Fits 2 Door only</i>	72038 <i>Fits 4 Door only</i>		
Tracker	1999 - 2004	70198 <i>Fits 2 Door only</i> 70199 <i>Fits 4 Door only</i>	72199 <i>Fits 4 Door only</i>	80198 <i>Fits 2 Door only</i> 80199 <i>Fits 4 Door only</i>	82199 <i>Fits 4 Door only</i>
Trailblazer	2002 - 2009	70278	72278	80278	82278
Trailblazer EXT	2002 - 2006	70278	74278	80278	84278
Traverse	2009 +	70499	72499	80499	82499
Uplander	2005 - 2008	70372		80372	
Venture	1997 - 2000	70021			
Venture	2001 - 2004	70021			
<b>Chrysler</b>					
300/300C	2005 - 2010	70361	72361	80361	82361
300/300C	2005 +				
300/300C	2011 +	70704	72704	80704	82704
300M	1998 - 2004	70163		80163	
Aspen	2007 - 2009	70353	72353	80353	82353
Cirrus	1995 - 2000	70137			
Concorde	1993 - 1997	70162			
Concorde	1998 - 2004	70163		80163	
LHS	1994 - 1997	70162			

Side Window Deflectors:  
\*ET Rear Part Uses Exterior Tape

Stone & Bug Deflectors:  
# No Tape Mounting (Uses existing holes under vehicle hood).  
\* Mounts to hood surface



**Sunroof Wind Deflector**



**Stone & Bug Deflector**

		Year	Make / Model
<b>Chevrolet (continued)</b>			
89075 <i>Does not fit 2007 new body style</i>	#50132 <i>Does not fit 2007 new body style</i>	2005 - 2007 Classic	Silverado Extended Cab
89147	#50161 <i>Does not fit hybrid model</i> 50177 <i>Fits Heavy Duty models only</i>	2007 +	Silverado Extended Cab
	#50045 <i>Does not fit Heavy Duty models</i> #50067 <i>Fits Heavy Duty models only</i>	1999 - 2002	Silverado Standard Cab
	#50095	2003 - 2004	Silverado Standard Cab
	#50132 <i>Does not fit 2007 new body style</i>	2005 - 2007 Classic	Silverado Standard Cab
	#50161 <i>Does not fit hybrid model</i> 50177 <i>Fits Heavy Duty models only</i>	2007 +	Silverado Standard Cab
		2012 +	Sonic
	50001	1992 - 1999	Suburban
89075	#50045	2000 - 2006	Suburban
89147	#50152	2007 +	Suburban
	50001	1995 - 1999	Tahoe
89075	#50045	2000 - 2006	Tahoe
89147	#50152 <i>Does not fit hybrid model</i>	2007 +	Tahoe
		1998	Tracker
	#50051 <i>Fits 4 Door only</i>	1999 - 2004	Tracker
89050	#50077	2002 - 2009	Trailblazer
89050	#50077	2002 - 2006	Trailblazer EXT
	50194	2009 +	Traverse
	#50136	2005 - 2008	Uplander
	*50015	1997 - 2000	Venture
	*50065	2001 - 2004	Venture
<b>Chrysler</b>			
		2005 - 2010	300/300C
89112		2005 +	300/300C
		2011 +	300/300C
89111		1998 - 2004	300M
89054	50180	2007 - 2009	Aspen
		1995 - 2000	Cirrus
		1993 - 1997	Concorde
89111		1998 - 2004	Concorde
		1994 - 1997	LHS

# Deflectors



Side Window  
Deflectors Light

Side Window  
Deflectors Dark

Make / Model	Year	Side Window Deflectors Light		Side Window Deflectors Dark	
		Front	Front & Rear	Front	Front & Rear
<b>Chrysler (continued)</b>					
LHS	1998 - 2001	70163		80163	
Pacifica	2004 - 2009	70332	72332	80332	82332
PT Cruiser	2001 +	70261	72261	80261	82261
		<i>Does not fit Convertible</i>		<i>Does not fit Convertible</i>	
Sebring	2001 - 2006	70284	72284		
		<i>Fits 4 Door only</i>		<i>Fits 4 Door only</i>	
Sebring	2007 +	70454	72454		
Town & Country	1991 - 1995	70023			
Town & Country	1996 - 2000	70022		80022	
Town & Country	2001 - 2007	70451		80451	
Town & Country	2008 +	70476	72476		
Voyager	2001 - 2003	70022		80022	
<b>Daewoo</b>					
Lanos	1999 - 2002	70225			
		<i>Fits Hatchback only</i>			
		70226			
		<i>Fits Sedan only</i>			
Leganza	1999 - 2002	70227			
Nubira	1999 - 2002	70228			
<b>Dodge</b>					
Caliber	2007 +	70434	72434	80434	82434
Caravan	1991 - 1995	70023			
Caravan	1996 - 2000	70022		80022	
Caravan	2001 - 2007	70022		80022	
Charger	2006 - 2010	70403	72403	80403	82403
Charger	2006 +				
Dakota	1987 - 1996	70025			
Dakota	1997 - 2004	70024	78024	80024	88024
			<i>*ET</i>		<i>*ET</i>
Dakota	2008 +				
Dakota Crew / Quad Cab	2000 - 2004	70026	74026	80026	84026
Dakota Crew / Quad Cab	2005 - 2007	70392	72392	80392	82392
Dakota Crew / Quad Cab	2008 +	70392	72392	80392	82392
Dakota Extended / Club Cab	2005 - 2007	70392	78392	80392	88392
			<i>*ET</i>		<i>*ET</i>
Dakota Extended / Club Cab	2008 +	70392	78392	80392	88392
			<i>*ET</i>		<i>*ET</i>
Durango	1998 - 2000	70026	72026	80026	82026
Durango	2001 - 2003	70026	72026	80026	82026

Side Window Deflectors:  
\*ET Rear Part Uses Exterior Tape

Stone & Bug Deflectors:  
# No Tape Mounting (Uses existing holes under vehicle hood).  
\* Mounts to hood surface





**Sunroof Wind Deflector**



**Stone & Bug Deflector**

**Year**

**Make / Model**

<b>Chrysler (continued)</b>			
Sunroof Wind Deflector	Stone & Bug Deflector	Year	Make / Model
89111		1998 - 2001	LHS
89113	50129	2004 - 2009	Pacifica
89137 <i>Does not fit Convertible</i>	*50086 3 piece 50085 1 piece	2001 +	PT Cruiser
89110 <i>Fits 4 Door only</i>		2001 - 2006	Sebring
		2007 +	Sebring
		1991 - 1995	Town & Country
89053		1996 - 2000	Town & Country
89053	#50071	2001 - 2007	Town & Country
	#50195	2008 +	Town & Country
89053	#50071	2001 - 2003	Voyager
<b>Daewoo</b>			
		1999 - 2002	Lanos
		1999 - 2002	Leganza
		1999 - 2002	Nubira
<b>Dodge</b>			
	50156	2007 +	Caliber
		1991 - 1995	Caravan
89053	50009	1996 - 2000	Caravan
89053	#50071	2001 - 2007	Caravan
		2006 - 2010	Charger
89112		2006 +	Charger
		1987 - 1996	Dakota
	*50056 1 piece	1997 - 2004	Dakota
	*50029 3 piece		
	*50182 3 piece	2008 +	Dakota
	*50029 3 piece *50056 1 piece	2000 - 2004	Dakota Crew / Quad Cab
	*50135 1 piece	2005 - 2007	Dakota Crew / Quad Cab
	50182	2008 +	Dakota Crew / Quad Cab
	*50135 1 piece	2005 - 2007	Dakota Extended / Club Cab
	50182	2008 +	Dakota Extended / Club Cab
	*50029 3 piece *50056 1 piece	1998 - 2000	Durango
	*50056 1 piece *50029 3 piece	2001 - 2003	Durango

# Deflectors



Make / Model	Year	Side Window Deflectors Light		Side Window Deflectors Dark	
		Front	Front & Rear	Front	Front & Rear
<b>Dodge (continued)</b>					
Durango	2004 - 2006	70353	72353	80353	82353
Durango	2007 - 2009	70353	72353	80353	82353
Durango	2011 +	70696	72696	80696	82696
Grand Caravan	1991 - 1995	70023			
Grand Caravan	1996 - 2000	70022		80022	
Grand Caravan	2001 - 2007	70451		80451	
Grand Caravan	2008 +	70476	72476		
Intrepid	1993 - 1997	70162			
Intrepid	1998 - 2004	70163		80163	
Journey	2009 +	70490	72490	80490	82490
Magnum	2005 - 2008	70361	72361	80361	82361
Neon / SRT4	2000 - 2005	70238	72238	80238	82238
Nitro	2007 +	70442	72442		
Ram	1994 - 2001	70027	76027 *ET Fits Quad Cab 78027 *ET Fits Club Cab	80027	86027 *ET Fits Quad Cab 88027 *ET Fits Club Cab
Ram 1500	2002 - 2005	70291 Fits Quad Cab 70292 Fits Regular Cab	72291 Fits Quad Cab	80291 Fits Quad Cab 80292 Fits Regular Cab	82291 Fits Quad Cab
Ram 1500	2006 - 2008	70291 Fits Quad Cab 70292 Regular Cab	72291 Fits Quad Cab	80291 Fits Quad Cab 80292 Fits Regular Cab	82291 Fits Quad Cab
Ram 1500	2009 +	70503 Fits Quad & Crew cabs 70557 Fits Regular cab	72503 Fits Crew cab 74503 Fits Quad cab	80503 Fits Quad & Crew cabs 80557 Fits Regular Cab	82503 Fits Crew cab
Ram 2500/3500	2002	70027	78027 *ET	80027	88027 *ET
Ram 2500/3500	2003 - 2005	70292 Regular Cab		80292 Regular Cab	
Ram 2500/3500	2003 - 2009	70291 Quad Cab	72291 Quad Cab	80291 Quad Cab	82291 Quad Cab
Ram 2500/3500	2006 - 2009	70292 Regular Cab	74291 Mega Cab	80291 Mega Cab 80292 Regular Cab	84291 Mega Cab
Ram 2500/3500	2010 +	70503 Fits Crew / Mega Cabs 70557 Fits Regular Cab	72503	80503 Fits Crew / Mega Cabs 80557 Fits Regular Cab	82503
Ram Van	1976 - 1997	70028			
Ram Van	1998 - 2003	70029			
Sprinter	2003 - 2006	70237			
Sprinter	2007 +	70462 70462E			

Side Window Deflectors:  
\*ET Rear Part Uses Exterior Tape

Stone & Bug Deflectors:  
# No Tape Mounting (Uses existing holes under vehicle hood).  
\* Mounts to hood surface



**Sunroof Wind Deflector**



**Stone & Bug Deflector**


**Year**

**Make / Model**

**Dodge (continued)**

Sunroof Wind Deflector	Stone & Bug Deflector	Year	Make / Model
89054	50121 <i>1 piece</i>	2004 - 2006	Durango
89054	50180	2007 - 2009	Durango
	50206	2011 +	Durango
89053	50009	1991 - 1995	Grand Caravan
89053	#50071	1996 - 2000	Grand Caravan
	50188	2001 - 2007	Grand Caravan
		2008 +	Grand Caravan
		1993 - 1997	Intrepid
	50108	1998 - 2004	Intrepid
	50189	2009 +	Journey
89112		2005 - 2008	Magnum
89055		2000 - 2005	Neon / SRT4
	50167	2007 +	Nitro
	*50008 <i>3 piece part protects headlights paint above</i>	1994 - 2001	Ram
	*50055 <i>1 piece part protects only hood</i>		
	#50083 <i>1 piece</i>	2002 - 2005	Ram 1500
	#50144	2006 - 2008	Ram 1500
	*50192	2009 +	Ram 1500
	*50055 <i>1 piece</i>	2002	Ram 2500/3500
	*50008 <i>3 piece</i>		
	#50083 <i>1 piece</i>	2003 - 2005	Ram 2500/3500
		2003 - 2009	Ram 2500/3500
	#50144 <i>1 piece</i>	2006 - 2009	Ram 2500/3500
	50205	2010 +	Ram 2500/3500
		1976 - 1997	Ram Van
		1998 - 2003	Ram Van
		2003 - 2006	Sprinter
		2007 +	Sprinter

# Deflectors

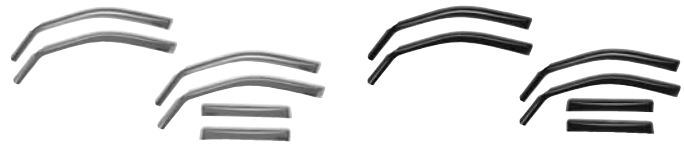

Make / Model	Year	Side Window Deflectors Light		Side Window Deflectors Dark	
		Front	Front & Rear	Front	Front & Rear
<b>Dodge (continued)</b>					
Stratus	1995 - 2000	70137			
		<i>Fits sedan only</i>			
Stratus	2001 - 2007	70284	72284		
		<i>Fits sedan only</i>		<i>Fits sedan only</i>	
<b>Eagle</b>					
Vision	1993 - 1997	70162			
<b>Fiat</b>					
500	2011 +	70552		80552	
<b>Ford</b>					
Aerostar	1989 - 1997	70107			
Bronco Full Size	1988 - 1991	70030		80030	
Bronco Full Size	1992 - 1996	70030		80030	
Contour	1995 - 2000	70125			
Crown Victoria	1992 +	70151	72151	80151	82151
Econoline / E-Series	1992 - 2007				
Econoline / E-Series	1992 +	70031		80031	
Econoline / E-Series	2008 +				
Edge	2007 - 2010				
Edge	2007 +	70430	72430	80430	82430
Edge	2011 +				
Escape	2001 - 2007	70266	72266	80266	82266
Escape	2001 - 2010				
Escape	2008 +	70463			
		80463			
Escort	1997 - 2002	70167	72167		
		<i>Fits sedan only</i>		<i>Fits sedan only</i>	
		70168	72168		
		<i>Fits wagon only</i>		<i>Fits wagon only</i>	
Excursion	2000 - 2005	70138	74138	80138	84138
Expedition	1997 - 2002	70032	72032	80032	82032
Expedition	2003 - 2006	70319	72319	80319	82319
Expedition	2007 +	70319	72319	80319	82319
Expedition EL	2007 +				
Explorer	1991 - 1994	70033	72033	80033	82033
Explorer	1995 - 2001	70033	72033	80033	82033
Explorer	2002 - 2005	70280	72280	80280	82280
Explorer	2006 - 2010	70280	72280	80280	82280
Explorer	2011 +	70565	72565	80565	82565
Explorer Sport 2 Door	1991 - 1994	70109		80109	
Explorer Sport 2 Door	1995 - 2000	70109		80109	
Explorer Sport 2 Door	2001 - 2003	70109		80109	
Explorer Sport Trac	2001 - 2005	70033	74033	80033	84033
Explorer Sport Trac	2007 - 2010	70280	72280	80280	82280
F150 Regular Cab	1997 - 2003	70037		80037	
F150 Regular Cab	2004 - 2008	70343	78343	80343	88343
			*ET		*ET
F150 Regular Cab	2009 +	70697		80697	
F150 Super Cab (Extended Cab)	1997 - 2004 Heritage	70037	78037	80037	88037
			*ET		*ET
F150 Super Cab (Extended Cab)	2004 - 2008	70697	72697	80697	82697
F150 Super Cab (Extended Cab)	2009 +	70697	72697	80697	82697
F150 Super Crew	2001 - 2003	70032	74032	80032	84032
F150 Super Crew	2004 - 2008	70343	72343	80343	82343
F150 Super Crew	2009 +	70697	74697	80697	84697
F150/F250/F350/F Super Duty	1988 - 1991	70030		80030	

Side Window Deflectors:  
\*ET Rear Part Uses Exterior Tape

Stone & Bug Deflectors:  
# No Tape Mounting (Uses existing holes under vehicle hood).  
\* Mounts to hood surface




Sunroof Wind Deflector



Stone & Bug Deflector

		Year	Make / Model
<b>Dodge (continued)</b>			
		1995 - 2000	Stratus
89110		2001 - 2007	Stratus
<b>Eagle</b>			
		1993 - 1997	Vision
<b>Fiat</b>			
		2011 +	500
<b>Ford</b>			
		1989 - 1997	Aerostar
		1988 - 1991	Bronco Full Size
	50020	1992 - 1996	Bronco Full Size
		1995 - 2000	Contour
		1992 +	Crown Victoria
	50059	1992 - 2007	Econoline / E-Series
		1992 +	Econoline / E-Series
	50187	2008 +	Econoline / E-Series
	50174	2007 - 2010	Edge
		2007 +	Edge
	50204	2011 +	Edge
	#50064	2001 - 2007	Escape
89069		2001 - 2010	Escape
	50178	2008 +	Escape
		1997 - 2002	Escort
89043	#50035	2000 - 2005	Excursion
89042	#50002	1997 - 2002	Expedition
89042	#50090	2003 - 2006	Expedition
89042	50170	2007 +	Expedition
89042	50170	2007 +	Expedition EL
89031	50017	1991 - 1994	Explorer
89031	50003	1995 - 2001	Explorer
	#50075	2002 - 2005	Explorer
	#50145	2006 - 2010	Explorer
	50207	2011 +	Explorer
89012	50017	1991 - 1994	Explorer Sport 2 Door
89012	50003	1995 - 2000	Explorer Sport 2 Door
89012	50060	2001 - 2003	Explorer Sport 2 Door
89012	50060	2001 - 2005	Explorer Sport Trac
	#50145	2007 - 2010	Explorer Sport Trac
	#50002	1997 - 2003	F150 Regular Cab
89043	#50097	2004 - 2008	F150 Regular Cab
	50191	2009 +	F150 Regular Cab
	#50002	1997 - 2004 Heritage	F150 Super Cab (Extended Cab)
89043	#50097	2004 - 2008	F150 Super Cab (Extended Cab)
	50191	2009 +	F150 Super Cab (Extended Cab)
	#50002	2001 - 2003	F150 Super Crew
89043	#50097	2004 - 2008	F150 Super Crew
	50191	2009 +	F150 Super Crew
		1988 - 1991	F150/F250/F350/F Super Duty

# Deflectors

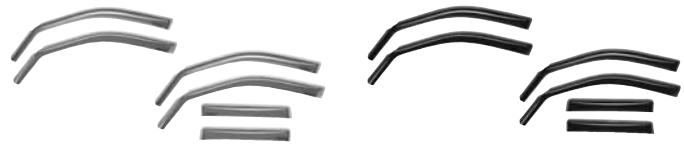

Make / Model	Year	Side Window Deflectors Light		Side Window Deflectors Dark	
		Front	Front & Rear	Front	Front & Rear
<b>Ford (continued)</b>					
F150/F250/F350/F Super Duty	1992 - 1996	70030		80030	
F250 Light Duty	1997 - 2003	70037	78037 *ET	80037	88037 *ET
F250/F350 Heavy Duty	1997 - 1998	70030	72030	80030	
F250/F350/F450 Super Duty Regular Cab	1999 - 2007	70138		80138	
F250/F350/F450 Super Duty Regular Cab	2008 - 2010	70138		80138	
F250/F350/F450 Super Duty Super Cab (Ext Cab) 1999 - 2007		70138	78138 *ET	80138	88138 *ET
F250/F350/F450 Super Duty Super Cab (Ext Cab) 2008 - 2010					
F250/F350/F450 Super Duty Super Cab (Ext Cab) 2008 +		70138	78138 *ET	80138	88138 *ET
F250/F350/F450 Super Duty Super Cab (Ext Cab) 2011 +					
F250/F350/F450 Super Duty Super Crew	1999 - 2007	70138	72138	80138	82138
F250/F350/F450 Super Duty Super Crew	2008 - 2010	70138	72138	80138	82138
F250/F350/F450 Super Duty Super Crew	2011 +				
Fiesta	2011 +	70537 <i>Fits 4 &amp; 5 Door</i>	74537 <i>Fits 5 Door Only</i>	80537 <i>Fits 4 &amp; 5 Door</i>	84537 <i>Fits 5 Door Only</i>
Five Hundred	2005 - 2007	70375	72375	80375	82375
Flex	2009 +	70484	72484	80484	82484
Focus / Focus SVT	2000 - 2004	70242 <i>Fits sedan, 5-door, and wagon (ZTS, ZX4, ZX5, ZXW)</i>  70243 <i>Fits 3-door (ZX3) only</i>	74242 <i>Fits wagon (ZXW) only</i> 72242 <i>Fits sedan and 5-door (ZTS, ZX4, ZX5)</i>	80242 <i>Fits sedan, 5-door, and wagon (ZTS, ZX4, ZX5, ZXW)</i>  80243 <i>Fits 3-door (ZX3) only</i>	82242
Focus / Focus SVT	2005 - 2006	70242 <i>Fits sedan, 5-door, and wagon (ZTS, ZX4, ZX5, ZXW)</i>  70243 <i>Fits 3-door (ZX3) only</i>	72242 <i>Fits sedan and 5-door (ZTS, ZX4, ZX5)</i>	80242 <i>Fits sedan, 5-door, and wagon (ZTS, ZX4, ZX5, ZXW)</i>  80243 <i>Fits 3-door (ZX3) only</i>	82242 <i>Fits sedan and 5-door (ZTS, ZX4, ZX5)</i>
Focus / Focus SVT	2012 +	70573	72573	80573	82573
Freestar	2004 - 2008	70233		80233	
Freestyle	2005 - 2007	70376	72376	80376	82376
Fusion	2006 - 2009				
Fusion	2006 +	70400	72400	80400	82400
Mustang	1999 - 2004				
Ranger	1993 - 1997	70034	78034 *ET	80034	88034 *ET
Ranger	1998 - 2000	70034	78034 *ET	80034	88034 *ET
Ranger	1998 - 2003				

Side Window Deflectors:  
\*ET Rear Part Uses Exterior Tape

Stone & Bug Deflectors:  
# No Tape Mounting (Uses existing holes under vehicle hood).  
\* Mounts to hood surface






Sunroof Wind Deflector



Stone & Bug Deflector

		Year	Make / Model
<b>Ford (continued)</b>			
	50020	1992 - 1996	F150/F250/F350/F Super Duty
	#50002	1997 - 2003	F250 Light Duty
	50020	1997 - 1998	F250/F350 Heavy Duty
	#50035	1999 - 2007	F250/F350/F450 Super Duty Regular Cab
	50171	2008 - 2010	F250/F350/F450 Super Duty Regular Cab
	#50035	1999 - 2007	F250/F350/F450 Super Duty Super Cab (Ext Cab)
	50171	2008 - 2010	F250/F350/F450 Super Duty Super Cab (Ext Cab)
		2008 +	F250/F350/F450 Super Duty Super Cab (Ext Cab)
	50199	2011 +	F250/F350/F450 Super Duty Super Cab (Ext Cab)
	<i>Fits Standard Models</i>		
	#50035	1999 - 2007	F250/F350/F450 Super Duty Super Crew
	50171	2008 - 2010	F250/F350/F450 Super Duty Super Crew
	50199	2011 +	F250/F350/F450 Super Duty Super Crew
	<i>Fits Standard Models</i>		
		2011 +	Fiesta
89129		2005 - 2007	Five Hundred
		2009 +	Flex
89146		2000 - 2004	Focus / Focus SVT
89146	50159	2005 - 2006	Focus / Focus SVT
		2012 +	Focus / Focus SVT
	50125	2004 - 2008	Freestar
89129	50133	2005 - 2007	Freestyle
89146		2006 - 2009	Fusion
		2006 +	Fusion
	50104	1999 - 2004	Mustang
	50018	1993 - 1997	Ranger
		1998 - 2000	Ranger
	50026	1998 - 2003	Ranger
	<i>Fits vehicles without edge package / power dome hood</i>		

# Deflectors

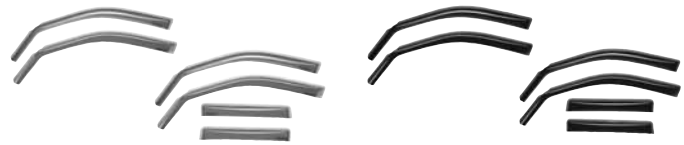

Make / Model	Year	Side Window Deflectors Light		Side Window Deflectors Dark	
		Front	Front & Rear	Front	Front & Rear
<b>Ford (continued)</b>					
Ranger	2001 - 2003	70034	78034 *ET	80034	88034 *ET
Ranger	2004 - 2011			80034	88034 *ET
Ranger	2004 - 2011	70034	78034 *ET		
Taurus	1988 - 1995	70126	72126		
Taurus	1996 - 1999	70124	72124	80124	82124 <i>Fits sedan</i>
Taurus	2000 - 2006	70124	72124 <i>Fits sedan</i>	80124	82124 <i>Fits sedan</i>
Taurus	2008 - 2009	70375	72375	80375	82375
Taurus	2010 +	70515	72515	80515	82515
Taurus X	2008 - 2009	70376	72376	80376	82376
Transit Connect	2009 +	70526			
Windstar	1995 - 1997	70035			
Windstar	1997 - 1998	70110			
Windstar	1999 - 2003	70233		80233	
<b>Geo</b>					
Tracker	1989 - 1997	70038	72038 <i>Front and rear parts fit 4 door only</i> 70036 <i>Fits 2 door only</i>		
<b>GMC</b>					
Acadia	2007 +	70457	72457	80457	82457
Canyon Crew Cab	2004 +	70339	72339	80339	82339
Canyon Extended Cab	2004 +	70339	78339 *ET	80339	88339 *ET
Canyon Regular Cab	2004 +	70339		80339	
Envoy / Envoy Denali	1998 - 2001	70018	72018	80018	82018
Envoy / Envoy Denali	2002 - 2009	70278	72278	80278	82278
Envoy XL / Envoy XL Denali	2002 - 2006	70278	74278	80278	84278
Envoy XUV	2004 - 2005	70278	74278	80278	84278
Jimmy S15	1984 - 1994	70152	72152 <i>Fits 4 door models only</i>		
Jimmy S15	1995 - 2001	70018	72018 <i>Fits 4 door models only</i>		
Rally	1996	70020		80020	
Safari	1987 - 1994	70108			
Safari	1995 - 2005	70108			
Savana	1996 - 2002				
Savana	1996 +	70020		80020	
Savana	2003 +				
Sierra Crew Cab	1992 - 1999	70019	72019	80019	82019
Sierra Crew Cab	1999 - 2007 Classic	70184	72184	80184	82184
Sierra Crew Cab	2007 +	70426	74426	80426	84426
Sierra Extended Cab	1988 - 1999	70019	78019 *ET	80019	88019 *ET
Sierra Extended Cab	1999 - 2007 Classic	70184	78184 *ET	80184	88184 *ET
Sierra Extended Cab	2007 +	70426	76426	80426	86426
Sierra Standard Cab	1988 - 1999	70019		80019	
Sierra Standard Cab	1999 - 2007 Classic	70184		80184	

Side Window Deflectors:  
\*ET Rear Part Uses Exterior Tape

Stone & Bug Deflectors:  
# No Tape Mounting (Uses existing holes under vehicle hood).  
\* Mounts to hood surface




Sunroof Wind Deflector



Stone & Bug Deflector

		Year	Make / Model
<b>Ford (continued)</b>			
	#50072	2001 - 2003	Ranger
	<i>Fits vehicles with edge package / power dome hood</i>		
		2004 - 2011	Ranger
	#50122	2004 - 2011	Ranger
		1988 - 1995	Taurus
		1996 - 1999	Taurus
	*50107	2000 - 2006	Taurus
89129		2008 - 2009	Taurus
		2010 +	Taurus
89129		2008 - 2009	Taurus X
		2009 +	Transit Connect
	50010	1995 - 1997	Windstar
		1997 - 1998	Windstar
	50049	1999 - 2003	Windstar
<b>Geo</b>			
		1989 - 1997	Tracker
<b>GMC</b>			
	50179	2007 +	Acadia
	#50124	2004 +	Canyon Crew Cab
	#50124	2004 +	Canyon Extended Cab
	#50124	2004 +	Canyon Regular Cab
	50005	1998 - 2001	Envoy / Envoy Denali
89050	#50079	2002 - 2009	Envoy / Envoy Denali
89050	#50079	2002 - 2006	Envoy XL / Envoy XL Denali
	#50079	2004 - 2005	Envoy XUV
		1984 - 1994	Jimmy S15
	50005	1995 - 2001	Jimmy S15
	50027	1996	Rally
		1987 - 1994	Safari
	50046	1995 - 2005	Safari
	50027	1996 - 2002	Savana
		1996 +	Savana
	50098	2003 +	Savana
	50001	1992 - 1999	Sierra Crew Cab
89075	#50048	1999 - 2007 Classic	Sierra Crew Cab
89147	#50162	2007 +	Sierra Crew Cab
	<i>Does not fit hybrid model</i>		
	50001	1988 - 1999	Sierra Extended Cab
89075	#50048	1999 - 2007 Classic	Sierra Extended Cab
89147	#50162	2007 +	Sierra Extended Cab
	<i>Does not fit hybrid model</i>		
	50001	1988 - 1999	Sierra Standard Cab
	#50048	1999 - 2007 Classic	Sierra Standard Cab

# Deflectors

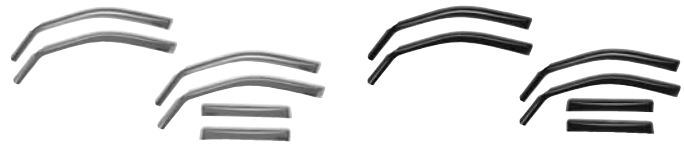

Make / Model	Year	Side Window Deflectors Light		Side Window Deflectors Dark	
		Front	Front & Rear	Front	Front & Rear
<b>GMC (continued)</b>					
Sierra Standard Cab	2007 +	70426		80426	
Sonoma / S15 Pickup	1982 - 1993	70152			
Sonoma / S15 Pickup	1994 - 2004	70018	78018 <i>*ET Fits extended cab</i>	80018	88018 <i>*ET Fits extended cab</i>
Suburban	1992 - 1999	70019	72019	80019	82019
Terrain	2010 +	70542	72542	80542	82542
Typhoon	1992 - 1993	70152	72152		
Vandura Van	1996	70020		80020	
Yukon / Yukon Denali	1992 - 1999	70019	72019	80019	82019
Yukon / Yukon Denali	2000 - 2006	70184	74184	80184	84184
Yukon / Yukon Denali	2007 +	70426	72426	80426	82426
Yukon XL / Yukon XL Denali	2000 - 2006	70184	72184	80184	82184
Yukon XL / Yukon XL Denali	2007 +	70426	74426		
<b>Honda</b>					
Accord	1990 - 1993	70039			
		<i>Fits sedan and wagon</i>			
Accord	1994 - 1997	70040			
		<i>Fits sedan and wagon</i>			
Accord	1998 - 2002	70041	72041	80041	82041
		<i>Front and rear parts fit sedan</i>		<i>Front and rear parts fit sedan</i>	
		70112		80112	
		<i>Fits coupe only</i>		<i>Fits coupe only</i>	
Accord	2003 - 2007	70318	72318	80318	82318
		<i>Front and rear parts fit sedan</i>		<i>Front and rear parts fit sedan</i>	
		70321		80321	
		<i>Fits coupe only</i>		<i>Fits coupe only</i>	
Accord	2008 +	70474	72474	80474	82474
		<i>Front and rear parts fit sedan</i>		<i>Front and rear parts fit sedan</i>	
		70475		80475	
		<i>Fits coupe only</i>		<i>Fits coupe only</i>	
Civic	1988 - 1991	70042			
		<i>Fits hatchback only</i>			
Civic	1992 - 1995	70044			
		<i>Fits hatchback only</i>			
		70045			
		<i>Fits sedan only</i>			
		70048			
		<i>Fits coupe only</i>			
Civic	1996 - 2000	70047	72047		
		<i>Front and rear parts fit sedan</i>			
		70046			
		<i>Fits coupe and hatchback</i>			
Civic	1998 - 1991	70043			
		<i>Fits sedan only</i>			
Civic	2001 - 2003	70268	72268		
		<i>Front and rear parts fit sedan</i>			
		70298			
		<i>Fits hatchback only</i>			
		70269			
		<i>Fits coupe only</i>			

Side Window Deflectors:  
\*ET Rear Part Uses Exterior Tape

Stone & Bug Deflectors:  
# No Tape Mounting (Uses existing holes under vehicle hood).  
\* Mounts to hood surface




**Sunroof Wind Deflector**



**Stone & Bug Deflector**

		Year	Make / Model
<b>GMC (continued)</b>			
	#50162 <i>Does not fit hybrid model</i>	2007 +	Sierra Standard Cab
	50037	1982 - 1993	Sonoma / S15 Pickup
	50005	1994 - 2004	Sonoma / S15 Pickup
	50001	1992 - 1999	Suburban
		2010 +	Terrain
	50037	1992 - 1993	Typhoon
	50027	1996	Vandura Van
	50001	1992 - 1999	Yukon / Yukon Denali
89075	#50048	2000 - 2006	Yukon / Yukon Denali
89147	#50153 <i>Does not fit hybrid model</i>	2007 +	Yukon / Yukon Denali
89075	#50048	2000 - 2006	Yukon XL / Yukon XL Denali
89147	#50153	2007 +	Yukon XL / Yukon XL Denali
<b>Honda</b>			
		1990 - 1993	Accord
		1994 - 1997	Accord
		1998 - 2002	Accord
89103 <i>Fits sedan only</i>	#50110	2003 - 2007	Accord
		2008 +	Accord
		1988 - 1991	Civic
		1992 - 1995	Civic
		1996 - 2000	Civic
		1998 - 1991	Civic
89100	50111	2001 - 2003	Civic

# Deflectors

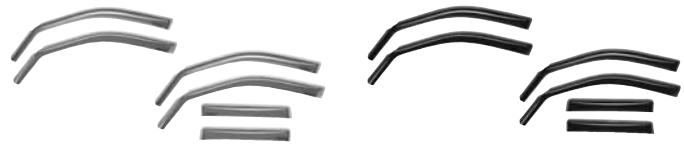

Make / Model	Year	Side Window Deflectors Light		Side Window Deflectors Dark	
		Front	Front & Rear	Front	Front & Rear
<b>Honda (continued)</b>					
Civic	2004 - 2005	70268 <i>Front and rear parts fit sedan</i> 70269 <i>Fits coupe only</i> 70298 <i>Fits hatchback only</i>	72268	80268 <i>Front and rear parts fit sedan</i>	82268
Civic	2006 - 2011	70416 <i>Front and rear parts fit sedan</i> 70418 <i>Fits coupe only</i>	72416	80416 <i>Front and rear parts fit sedan</i> 80418 <i>Fits coupe only</i>	82416
Crosstour	2010 +	70533	72533	80533	82533
CR-V	1997 - 2001	70050	72050		
CR-V	2002 - 2006	70296	72296	80296	82296
CR-V	2007 +	70455	72455	80455	82455
CR-V	2010 - 2011				
Element	2003 +	70326	78326	80326	88326
Element	2009 +				
Fit	2007 - 2008	70429	72429	80429	82429
Fit	2009 +	70544	72544	80544	82544
Insight	2009 +	70511	72511	80511	82511
Odyssey	1995 - 1998	70051			
Odyssey	1999 - 2004	70200		80200	
Odyssey	2005 - 2007				
Odyssey	2005 - 2010	70382	72382	80382	82382
Odyssey	2008 - 2010				
Odyssey	2011 +	70556	72556	80556	82556
Passport	1994 - 1997	70052	72052		
Passport	1998 - 2002	70053	72053		
Pilot	2003 - 2005	70316	72316	80316	82316
Pilot	2006 - 2008	70316	72316	80316	82316
Pilot	2009 +	70498	72498	80498	82498
Prelude	1988 - 1991	70049			
Prelude	1992 - 1996	70054			
Prelude	1997 - 2001	70055			
Ridgeline	2006 - 2008	70397	72397		
Ridgeline	2009 +	70397	72397		
<b>Hummer</b>					
H2	2003 +	70297	72297	80297	82297
H2 SUT	2005 +	70297	72297	80297	82297
H3	2006 +	70399	72399	80399	82399
<b>Hyundai</b>					
Accent	1995 - 1999	70186 <i>Front and rear parts fit sedan</i> 70187 <i>Fits coupe only</i>			
Accent	2000 - 2005	70258 <i>Front and rear parts fit sedan</i> 70259 <i>Fits coupe only</i>	72258		
Accent	2006 - 2011	70379 <i>Front and rear parts fit sedan only</i> 70381 <i>Fits hatchback models only</i>	72379	80381 <i>Fits hatchback models only</i>	

Side Window Deflectors:  
\*ET Rear Part Uses Exterior Tape

Stone & Bug Deflectors:  
# No Tape Mounting (Uses existing holes under vehicle hood).  
\* Mounts to hood surface






Sunroof Wind  
Deflector



Stone & Bug  
Deflector

Sunroof Wind Deflector	Stone & Bug Deflector	Year	Make / Model
<b>Honda (continued)</b>			
89100		2004 - 2005	Civic
89103	50155 <i>Fits sedan only</i> 50151 <i>Fits coupe only</i>	2006 - 2011	Civic
		2010 +	Crosstour
	*50014	1997 - 2001	CR-V
89101	#50089	2002 - 2006	CR-V
89103	50172	2007 +	CR-V
	50210	2010 - 2011	CR-V
		2003 +	Element
	#50197	2009 +	Element
		2007 - 2008	Fit
		2009 +	Fit
		2009 +	Insight
		1995 - 1998	Odyssey
89136	50053	1999 - 2004	Odyssey
89127	#50137	2005 - 2007	Odyssey
		2005 - 2010	Odyssey
89103	50193	2008 - 2010	Odyssey
	50208	2011 +	Odyssey
		1994 - 1997	Passport
89009	50025	1998 - 2002	Passport
	#50094	2003 - 2005	Pilot
	#50146	2006 - 2008	Pilot
	#50196	2009 +	Pilot
		1988 - 1991	Prelude
		1992 - 1996	Prelude
		1997 - 2001	Prelude
89103	#50166	2006 - 2008	Ridgeline
89103		2009 +	Ridgeline
<b>Hummer</b>			
		2003 +	H2
		2005 +	H2 SUT
89150		2006 +	H3
<b>Hyundai</b>			
		1995 - 1999	Accent
		2000 - 2005	Accent
		2006 - 2011	Accent

# Deflectors

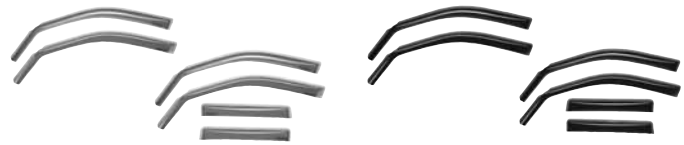

Make / Model	Year	Side Window Deflectors Light		Side Window Deflectors Dark	
		Front	Front & Rear	Front	Front & Rear
<b>Hyundai (continued)</b>					
Accent	2012 +	70551 <i>Fits Sedan and Hatchback Models</i>	72551 <i>Fits Sedan Models Only</i>	80551 <i>Fits Sedan and Hatchback Models</i>	82551 <i>Fits Sedan Models Only</i>
Azera	2006 +	70417	72417		
Elantra	1992 - 1995	70189			
Elantra	1996 - 2000	70188			
Elantra	2001 - 2006	70265	72265 <i>Fits sedan only</i> 74265 <i>Fits Elantra GT hatchback only</i>		
Elantra	2007 - 2010	70452	72452	80452	82452
Elantra	2010 +	70524 <i>Fits the touring model only</i>	72524		
Elantra	2011 +	70550	72550	80550	82550
Entourage	2007 - 2009				
Entourage	2007 +	70440	72440	80440	82440
Genesis	2009 +	70507	72507	80507	82507
Santa Fe	2001 - 2006	70135	72135	80135	82135
Santa Fe	2007 +	70425	72425	80425	82425
Sonata	1995 - 1998	70190			
Sonata	1999 - 2005	70234			
Sonata	2006 - 2010	70404	72404	80404	82404
Sonata	2011 +	70532	72532	80532	82532
Tiburon	1997 - 2008				
Tucson	2005 - 2009	70377	72377	80377	82377
Tucson	2010 +	70534	72534	80534	82534
Veloster	2012 +	70553	72553	80553	82553
Veracruz	2007 +	70461	72461		
XG350	2002 - 2005				
<b>Infiniti</b>					
EX35	2008 +	70482	72482	80482	82482
FX35	2004 - 2008	70330	72330	80330	82330
FX45	2004 - 2008	70330	72330	80330	82330
G35	2003 - 2006	70312	72312		
		<i>Front and rear parts fit sedan only</i>			
G35	2007 +	70447 <i>Front and rear parts fit sedan</i>	72447	80447 <i>Front and rear parts fit sedan</i>	82447
G20	1991 - 1996	70113			
G20	1998 - 2002	70191	72191		
I30	1996 - 1999	70077	72077	80077	82077
I30	2000 - 2001	70249	72249	80249	82249
I35	2002 - 2004	70249	72249	80249	82249
J30	1993 - 1997	70114	72114		
M	2011 +	70539	72539	80539	82539
M35	2006 - 2010	70394	72394		
M45	2003 - 2005				
M45	2006 - 2010	70394	72394		
M45	2006 +				
Q45	1990 - 1996	70116			
Q45	1997 - 2001	70115	72115		
Q45	2002 - 2007	70303	72303		
QX4	1997 - 2003	70056	72056	80056	82056

Side Window Deflectors:  
\*ET Rear Part Uses Exterior Tape

Stone & Bug Deflectors:  
# No Tape Mounting (Uses existing holes under vehicle hood).  
\* Mounts to hood surface




**Sunroof Wind  
Deflector**



**Stone & Bug  
Deflector**

		Year	Make / Model
<b>Hyundai (continued)</b>			
		2012 +	Accent
89145		2006 +	Azera
		1992 - 1995	Elantra
		1996 - 2000	Elantra
89070		2001 - 2006	Elantra
	<i>Fits Elantra GT hatchback only</i>		
89145		2007 - 2010	Elantra
		2010 +	Elantra
		2011 +	Elantra
89145		2007 - 2009	Entourage
		2007 +	Entourage
		2009 +	Genesis
89029		2001 - 2006	Santa Fe
	50165	2007 +	Santa Fe
		1995 - 1998	Sonata
89071		1999 - 2005	Sonata
89145		2006 - 2010	Sonata
		2011 +	Sonata
89072		1997 - 2008	Tiburon
89059	50141	2005 - 2009	Tucson
		2010 +	Tucson
		2012 +	Veloster
89145	50183	2007 +	Veracruz
89073		2002 - 2005	XG350
<b>Infiniti</b>			
		2008 +	EX35
89038		2004 - 2008	FX35
89038		2004 - 2008	FX45
89037		2003 - 2006	G35
	<i>Fits sedan only</i>		
89040			
	<i>Fits coupe only</i>		
		2007 +	G35
		1991 - 1996	G20
		1998 - 2002	G20
		1996 - 1999	I30
		2000 - 2001	I30
89041		2002 - 2004	I35
		1993 - 1997	J30
		2011 +	M
89132		2006 - 2010	M35
89039		2003 - 2005	M45
		2006 - 2010	M45
89132		2006 +	M45
		1990 - 1996	Q45
		1997 - 2001	Q45
89036		2002 - 2007	Q45
		1997 - 2003	QX4

# Deflectors

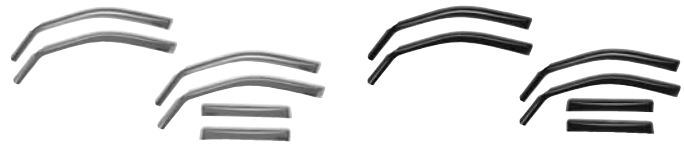

Side Window  
Deflectors Light

Side Window  
Deflectors Dark

Make / Model	Year	Side Window Deflectors Light		Side Window Deflectors Dark	
		Front	Front & Rear	Front	Front & Rear
<b>Infiniti (continued)</b>					
QX56	2004 - 2010	70342	72342	80342	82342
<b>Isuzu</b>					
Amigo	1998 - 2003	70053			
Ascender	2003 - 2008	70278	72278	80278	82278
Axiom	2002 - 2004	70304	72304		
Hombre	1996 - 2002	70018		80018	
i280 / i290	2006 - 2009	70339	78339 *ET	80339	88339
i350 / i370	2006 +	70339	72339	80339	82339
Oasis	1996 - 1999	70051			
Rodeo	1991 - 1993	70111	72111		
Rodeo	1994 - 1997	70052	72052		
Rodeo	1998 - 2004	70053	72053		
Rodeo Sport	1998 - 2003	70053			
Trooper	1992 - 1997	70001	72001 <i>Fits 4-door only</i>		
Trooper	1998 - 2002	70001	72001 <i>Fits 4-door only</i>		
VehiCross	1999 - 2001	70235			
<b>Jaguar</b>					
S Type	2000 - 2008	70250	72250		
X Type	2002 +	70302	72302 <i>Fits sedan only</i> 74302 <i>Fits wagon only</i>		
XJ Type	2004 - 2009				
<b>Jeep</b>					
Cherokee	1984 - 1996	70058	72058 <i>Front and rear parts fit 4-door</i>	80058	82058 <i>Front and rear parts fit 4-door</i>
Cherokee	1997 - 2001	70059	72059 <i>Front and rear parts fit 4-door</i> 70150	80059	82059 <i>Front and rear parts fit 4-door</i>
Commander	2006 +	70414	72414		
Compass	2007 +	70433	72433	80433	82433
Grand Cherokee	1993 - 1998	70060	72060		
Grand Cherokee	1999 - 2004	70149	72149	80149	82149
Grand Cherokee	2005 - 2010	70380	72380	80380	82380
Grand Cherokee	2011 +	70562	72562	80562	82562
Liberty	2002 - 2007	70281	72281	80281	82281
Liberty	2008 +	70485	72485		82485
Patriot	2007 +	70444	72444		
Renegade	2002 - 2004	70281	72281	80281	82281
Renegade	2005 +	70281	72281	80281	82281
Wrangler	1997 - 2006	70061			
Wrangler	2007 +	70443		80443	
Wrangler Unlimited	2004.5 - 2006	70061			
Wrangler Unlimited	2007 +	70443	72443	80443	
<b>Kia</b>					
Amanti	2004 - 2009	70359	72359	80359	82359
Borrego	2009 +	70493	72493	80493	82493
Optima	2001 - 2006	70234			

Side Window Deflectors:  
\*ET Rear Part Uses Exterior Tape

Stone & Bug Deflectors:  
# No Tape Mounting (Uses existing holes under vehicle hood).  
\* Mounts to hood surface




Sunroof Wind Deflector



Stone & Bug Deflector

Sunroof Wind Deflector	Stone & Bug Deflector	Year	Make / Model
<b>Infiniti (continued)</b>			
89047		2004 - 2010	QX56
<b>Isuzu</b>			
	50025	1998 - 2003	Amigo
	#50079	2003 - 2008	Ascender
		2002 - 2004	Axiom
		1996 - 2002	Hombre
		2006 - 2009	i280 / i290
		2006 +	i350 / i370
		1996 - 1999	Oasis
89009		1991 - 1993	Rodeo
89009		1994 - 1997	Rodeo
	50025	1998 - 2004	Rodeo
	50025	1998 - 2003	Rodeo Sport
	50019	1992 - 1997	Trooper
		1998 - 2002	Trooper
		1999 - 2001	VehiCross
<b>Jaguar</b>			
89016		2000 - 2008	S Type
		2002 +	X Type
<b>Jeep</b>			
89086		2004 - 2009	XJ Type
	*50016	1984 - 1996	Cherokee
	*50016	1997 - 2001	Cherokee
	50147	2006 +	Commander
	50168	2007 +	Compass
	50004	1993 - 1998	Grand Cherokee
	50044	1999 - 2004	Grand Cherokee
	50130	2005 - 2010	Grand Cherokee
	50200	2011 +	Grand Cherokee
89099	50138	2002 - 2007	Liberty
	<i>Fits Renegade model only</i>		
	50076		
	<i>Does not fit Renegade or diesel models</i>		
89099	50184	2008 +	Liberty
		2007 +	Patriot
89099	50076	2002 - 2004	Renegade
	50138	2005 +	Renegade
		1997 - 2006	Wrangler
	50169	2007 +	Wrangler
		2004.5 - 2006	Wrangler Unlimited
	50169	2007 +	Wrangler Unlimited
<b>Kia</b>			
89145		2004 - 2009	Amanti
		2009 +	Borrego
89085		2001 - 2006	Optima

# Deflectors

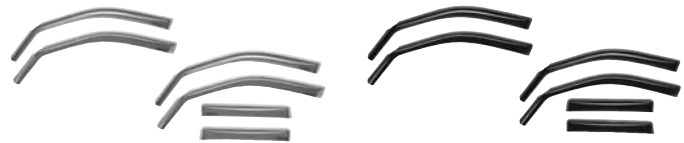

Side Window  
Deflectors Light

Side Window  
Deflectors Dark

Make / Model	Year	Side Window Deflectors Light		Side Window Deflectors Dark	
		Front	Front & Rear	Front	Front & Rear
<b>Kia (continued)</b>					
Optima	2007 +				
Optima	2011 +	70563	72563	80563	82563
Rio / Rio5 / Rio Cinco	2001 - 2005	70282			
Rio / Rio5 / Rio Cinco	2012 +	70700		80700	
		<i>Fits 5-door models only</i>		<i>Fits 5-door models only</i>	
Rondo	2007 +	70460	72460		
Sedona	2002 - 2005	70285			
Sedona	2006 +	70440	72440	80440	82440
Sephia	1995 - 1997	70147	72147		
Sephia	1998 - 2001	70134			
Sorento	2003 - 2009	70320	72320	80320	82320
Sorento	2011 +	70535	72535	80535	82535
Spectra / Spectra5	2000 - 2004	70134			
Spectra / Spectra5	2005 - 2009	70365	72365		
		<i>Front and rear parts fit sedan</i>			
		70396	72396		
		<i>Front and rear parts fit 5 door</i>			
Sportage	1995 - 2003	70148	72148		
Sportage	2005 - 2010	70393	72393		
Sportage	2011 +	70547	72547	80547	82547
<b>Land Rover</b>					
County / Classic	1987 - 1995	70062	72062		
			<i>Fits Short Wheelbase models only</i>		
			74062		
			<i>Fits Long Wheelbase models only</i>		
Defender	1993 - 1997	70063			
		<i>Rollup windows only</i>			
Discovery Series I	1994 - 1999	70064	72064		
Discovery Series II	1999 - 2004	70194	72194		
Freelander	2002 - 2005	70230	72230		
		<i>Does not fit SE3 Does not fit SE3</i>			
		70236			
		<i>Fits SE3 models only</i>			
LR2	2007 +	70492	72492	80492	82492
LR3 / Discovery III	2005 - 2009	70378	72378		
Range Rover	1995 - 2002	70065	72065		
Range Rover	2003 +	70309	72309		82309
Range Rover Sport	2006 +	70409	72409	80409	82409
<b>Lexus</b>					
ES	1997 - 2001				
ES300					
ES	2002 - 2006	70287	72287		
ES330					
ES	2007 +	70436	72436	80436	82436
ES350					
GS	1998 - 2005	70117	72117		
GS300, GS400, GS430					
GS	2006 - 2012	70395	72395		
GS300, GS350, GS430, GS450, GS450h					
GS460, GS450 Hybrid					
GX	2003 +	70329	72329	80329	82329
GX470					
GX	2010 +	70543	72543	80543	82543
GX460					

Side Window Deflectors:  
\*ET Rear Part Uses Exterior Tape

Stone & Bug Deflectors:  
# No Tape Mounting (Uses existing holes under vehicle hood).  
\* Mounts to hood surface






**Sunroof Wind  
Deflector**



**Stone & Bug  
Deflector**

	Year	Make / Model
<b>Kia (continued)</b>		
89145	2007 +	Optima
	2011 +	Optima
89084	2001 - 2005	Rio / Rio5 / Rio Cinco
	2012 +	Rio / Rio5 / Rio Cinco
	2007 +	Rondo
	2002 - 2005	Sedona
89029	2006 +	Sedona
89029	1995 - 1997	Sephia
	1998 - 2001	Sephia
	2003 - 2009	Sorento
	2011 +	Sorento
	2000 - 2004	Spectra / Spectra5
	2005 - 2009	Spectra / Spectra5
89087	1995 - 2003	Sportage
	2005 - 2010	Sportage
	2011 +	Sportage
<b>Land Rover</b>		
89087	1987 - 1995	County / Classic
	1993 - 1997	Defender
	1994 - 1999	Discovery Series I
	1999 - 2004	Discovery Series II
89005	2002 - 2005	Freelander
	2007 +	LR2
	2005 - 2009	LR3 / Discovery III
89088	1995 - 2002	Range Rover
89066	2003 +	Range Rover
	2006 +	Range Rover Sport
<b>Lexus</b>		
89061	1997 - 2001	ES ES300
	2002 - 2006	ES ES330
89067	2007 +	ES ES350
	1998 - 2005	GS GS300, GS400, GS430
	2006 - 2012	GS GS300, GS350, GS430, GS450, GS450h GS460, GS450 Hybrid
89064	2003 +	GX GX470
	2010 +	GX GX460

# Deflectors

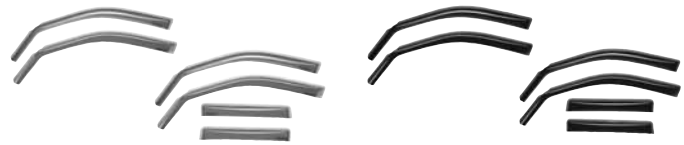

Side Window  
Deflectors Light

Side Window  
Deflectors Dark

Make / Model	Year	Side Window Deflectors Light		Side Window Deflectors Dark	
		Front	Front & Rear	Front	Front & Rear
<b>Lexus (continued)</b>					
IS IS200, IS200 Sportcross IS300, IS300 Sportcross	2001 - 2005	70264	72264 74264 <i>Fits sedan only</i> <i>Fits Sportcross model only</i>		
IS IS250, IS350, IS-F	2006 +	70406	72406	80406	82406
LS LS400	1990 - 1994	70089			
LS LS400	1995 - 2000	70139			
LS LS430	2001 - 2006	70306	72306	80306	82306
LS LS460, LS460L, LS60h, LS Hybrid	2007 +	70459	72459 74459 <i>Does not fit L model</i> <i>Fits L model</i>		
LX LX450	1996 - 1997	70066	72066		
LX LX470	1998 - 2007	70140	72140	80140	82140
LX LX570	2008 +	70491		80491	
RX RX330	1999 - 2003	70118	72118	80118	82118
RX RX330	2004 - 2009	70331	72331	80331	82331
RX RX350, RX 350h	2010 +	70494	72494	80494	82494
<b>Lincoln</b>					
Aviator	2003 - 2005	70323	72323	80323	82323
Blackwood	2002 - 2003	70032	74032	80032	84032
Continental	1995 - 2002	70170	72170		
LS	2000 - 2006	70239	72239		
Mark LT	2006 - 2008	70343	72343	80343	82343
Mark VIII	1997 - 1998	70171			
MkX	2007 +	70430	72430	80430	82430
MkZ	2006 - 2009	70400	72400	80400	82400
Navigator	1998 - 2002	70032	72032	80032	82032
Navigator	2003 - 2006	70319	72319	80319	82319
Navigator	2007 +	70319	72319	80319	82319
Navigator L	2007 +	70319	72319	80319	82319
Town Car	1994 - 1997	70154			
Town Car	1995 - 1997		72154		
Town Car	1998 +	70153	72153 <i>Does not fit Ultimate L</i> 74153 <i>Fits Ultimate L only</i>	80153	82153 <i>Does not fit Ultimate L</i>
Zephyr	2006 - 2007	70400	72400	80400	82400
<b>Mazda</b>					
626	1998 - 2002	70129			
B-Series Pickup	1994 - 1997	70034		80034	
B-Series Pickup	1998 +	70034		80034	

Side Window Deflectors:  
\*ET Rear Part Uses Exterior Tape

Stone & Bug Deflectors:  
# No Tape Mounting (Uses existing holes under vehicle hood).  
\* Mounts to hood surface




**Sunroof Wind  
Deflector**



**Stone & Bug  
Deflector**

		Year	Make / Model
<b>Lexus (continued)</b>			
89062		2001 - 2005	IS IS200, IS200 Sportcross IS300, IS300 Sportcross
		2006 +	IS IS250, IS350, IS-F
89002		1990 - 1994	LS LS400
		1995 - 2000	LS LS400
89060		2001 - 2006	LS LS430
		2007 +	LS LS460, LS460L, LS60h, LS Hybrid
	50012	1996 - 1997	LX LS450
89045		1998 - 2007	LX LX470
		2008 +	LX LX570
		1999 - 2003	RX RX330
89063	*50099	2004 - 2009	RX RX330
		2010 +	RX RX350, RX350h
<b>Lincoln</b>			
89044	*50128	2003 - 2005	Aviator
		2002 - 2003	Blackwood
		1995 - 2002	Continental
		2000 - 2006	LS
89043	50097	2006 - 2008	Mark LT
		1997 - 1998	Mark VIII
		2007 +	MkX
89146		2006 - 2009	MkZ
89042	*50024	1998 - 2002	Navigator
89043	*50093	2003 - 2006	Navigator
		2007 +	Navigator
		2007 +	Navigator L
		1994 - 1997	Town Car
		1995 - 1997	Town Car
		1998 +	Town Car
89146		2006 - 2007	Zephyr
<b>Mazda</b>			
		1998 - 2002	626
		1994 - 1997	B-Series Pickup
	50026	1998 +	B-Series Pickup

# Deflectors

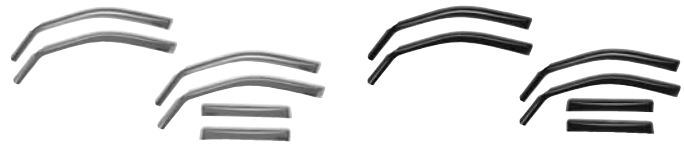

Side Window  
Deflectors Light

Side Window  
Deflectors Dark

Make / Model	Year	Side Window Deflectors Light		Side Window Deflectors Dark	
		Front	Front & Rear	Front	Front & Rear
<b>Mazda (continued)</b>					
CX-7	2007 +				
CX-9	2007 +				
Mazda3 / Mazdaspeed3	2004 - 2009				
Mazda6 / Mazdaspeed6	2003 - 2008				
Millenia	1995 - 2002	70128			
MP3	1999 - 2003	70223	72223		
MP5	2002 - 2003	70223	74223		
MPV	1989 - 1995	70067			
MPV	1996 - 1998	70067			
MPV	2000 - 2004	70240	72240	80240	82240
MPV	2005 - 2006	70240	72240	80240	82240
Navajo	1991 - 1994	70109		80109	
Protegé	1995 - 1998	70169			
Protegé	1999 - 2003	70223	72223		
Protegé 5	2002 - 2003	70223	74223		
RX8	2004 +	70354			
Tribute	2001 - 2004	70266	74266	80266	84266
Tribute	2005 - 2007	70266	74266	80266	84266
Tribute	2008 +	70463		80463	
<b>Mercedes-Benz</b>					
190E	1984 - 1993	70071	72071		
280S	1983 - 1991	70072	72072		
300D	1977 - 1986	70057			
300D	1987 - 1995	70070	72070		
300E	1986 - 1995	70070	72070		
300SE	1988 - 1992	70072	72072		
300SEL	1988 - 1991	70072			
300TE	1988 - 1993	70070	74070		
350SD	1990 - 1991	70072	72072		
350SDL	1991	70072	72072		
400E	1992 - 1993	70070	72070		
420SEL	1986 - 1991	70072			
500E	1992 - 1993	70070	72070		
560S	1981 - 1991	70072	72072		
560SEL	1986 - 1991	70072			
C-Class (W202) C220, C230, C240, C280, C36 AMG, C43 AMG	1994 - 2000	70068	72068		
C-Class (W203) C240, C320, C32 AMG, C55 AMG, C63 AMG	2001 - 2007	70267	72267		
			<i>Fits sedan only</i>		
		70286	74267		
		<i>Fits coupe only</i>	<i>Fits wagon only</i>		
CL-Class (W215) C500, C55 AMG, CL600, CL65 AMG	2001 - 2006				
E-Class (W124) 300D, 500E, E320, E420, E500	1986 - 1995	70070	72070		
			<i>Fits sedan only</i>		
			74070		
			<i>Fits wagon only</i>		
E-Class (W210) E300 Diesel, E320, E420, E430, E55 AMG	1996 - 2002	70069	72069		
			<i>Fits sedan only</i>		
			74069		
			<i>Fits wagon only, Fits 2003 E-Class wagon</i>		

Side Window Deflectors:  
\*ET Rear Part Uses Exterior Tape

Stone & Bug Deflectors:  
# No Tape Mounting (Uses existing holes under vehicle hood).  
\* Mounts to hood surface




**Sunroof Wind  
Deflector**



**Stone & Bug  
Deflector**

Sunroof Wind Deflector	Stone & Bug Deflector	Year	Make / Model
<b>Mazda (continued)</b>			
89155 <i>Does not fit panoramic sunroof</i>		2007 +	CX-7
89155 <i>Does not fit panoramic sunroof</i>		2007 +	CX-9
89095		2004 - 2009	Mazda3 / Mazdaspeed3
89096		2003 - 2008	Mazda6 / Mazdaspeed6
		1995 - 2002	Millenia
		1999 - 2003	MP3
		2002 - 2003	MP5
		1989 - 1995	MPV
		1996 - 1998	MPV
89120	50061	2000 - 2004	MPV
89120		2005 - 2006	MPV
		1991 - 1994	Navajo
		1995 - 1998	Protegé
		1999 - 2003	Protegé
		2002 - 2003	Protegé 5
89098		2004 +	RX8
89097	#50069	2001 - 2004	Tribute
89097	#50069	2005 - 2007	Tribute
	50178	2008 +	Tribute
<b>Mercedes-Benz</b>			
		1984 - 1993	190E
		1983 - 1991	280S
		1977 - 1986	300D
		1987 - 1995	300D
		1986 - 1995	300E
		1988 - 1992	300SE
		1988 - 1991	300SEL
		1988 - 1993	300TE
		1990 - 1991	350SD
		1991	350SDL
		1992 - 1993	400E
		1986 - 1991	420SEL
		1992 - 1993	500E
		1981 - 1991	560S
		1986 - 1991	560SEL
		1994 - 2000	C-Class (W202) C220, C230, C240, C280, C36 AMG, C43 AMG
		2001 - 2007	C-Class (W203) C240, C320, C32 AMG, C55 AMG, C63 AMG
89023		2001 - 2006	CL-Class (W215) C500, C55 AMG, CL600, CL65 AMG
		1986 - 1995	E-Class (W124) 300D, 500E, E320, E420, E500
89011		1996 - 2002	E-Class (W210) E300 Diesel, E320, E420, E430, E55 AMG

# Deflectors

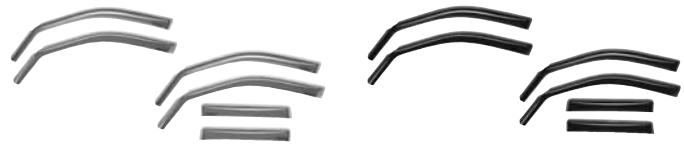

Side Window  
Deflectors Light

Side Window  
Deflectors Dark

Make / Model	Year	Side Window Deflectors Light		Side Window Deflectors Dark	
		Front	Front & Rear	Front	Front & Rear
<b>Mercedes-Benz (continued)</b>					
E-Class (W211) E300, E320CDI, E320 Bluetec, E350, E550, E55 AMG, E63 AMG	2003 - 2009	70202 <i>Fits sedan only</i>	72202  74202 <i>Fits 2004 - 2007 E-Class wagon</i>	80202 <i>Fits sedan only</i>	82202
G-Class (W463) G320, G400, G55 AMG	2002 +	70310	72310	80310	82310
GL-Class (X164) GL320 CDI, CL 320 Bluetec, GL450, GL550	2007 +	70386	74386	80386	84386
GLK-Class (X204) GLK350	2009 +	70509	72509		
M-Class (ML) (W163) ML320, ML350, ML430, ML500, ML550, ML55 AMG	1998 - 2005	70073	72073	80073	82073
M-Class (ML) (W164) ML320 CDI, ML320 Bluetec, ML350, ML500, ML550, ML63 AMG	2006 - 2011	70386	72386	80386	82386
R-Class (W251) R280, R350, R500, R320 CDI, R63 AMG	2006 +	70420	72420		
S-Class (W116) 280S, 280SE, 450SE, 450SEL, 300SD	1972 - 1980	70119	72119		
S-Class (W220) S280, S320, S350, S430, S500, S600, S55 AMG, S63 AMG, S65 AMG	2000 - 2006	70274	72274		
S-Class (W221) S350, S450, S500, S550, S600 AMG, S65 AMG	2007 +	70439	72439		
<b>Mercury</b>					
Grand Marquis	1992 +	70151	72151	80151	82151
Marauder	2003 - 2005	70151	72151	80151	82151
Mariner	2005 - 2007	70266	72266	80266	82266
Mariner	2008 +	70463		80463	
Milan	2006 - 2009	70400	72400	80400	82400
Montego	2005 - 2007	70375	72375	80375	82375
Monterey	2004 - 2007	70233		80233	
Mountaineer	1997 - 2001	70033	72033	80033	82033
Mountaineer	2002 - 2005	70280	72280	80280	82280
Mountaineer	2006 +	70280	72280	80280	82280
Mystique	1995 - 2000	70125			
Sable	1988 - 1995	70126	72126		
Sable	1996 - 2004	70124		80124	
Sable	2000 - 2005	70124		80124	
Tracer	1997 - 1999	70167 <i>Front and rear parts fit sedan</i> 70168 <i>Front and rear parts fit wagon</i>	72167  72168		
Villager	1993 - 1998	70074			
Villager	1999 - 2002	70229			
<b>Mini</b>					
Cooper / Cooper S	2002 - 2006				
Cooper / Cooper S	2007 - 2011				
<b>Mitsubishi</b>					
Eclipse	2000 - 2005				
Endeavor	2004 +	70333	72333	80333	82333
Galant	1994 - 1998	70123	72123		
Galant	1999 - 2003	70192	72192		
Galant	2004 +	70356	72356		

Side Window Deflectors:  
\*ET Rear Part Uses Exterior Tape

Stone & Bug Deflectors:  
# No Tape Mounting (Uses existing  
holes under vehicle hood).  
\* Mounts to hood surface






**Sunroof Wind  
Deflector**



**Stone & Bug  
Deflector**

		Year	Make / Model
<b>Mercedes-Benz (continued)</b>			
89026		2003 - 2009	E-Class (W211) E300, E320CDI, E320 Bluetec, E350, E550, E55 AMG, E63 AMG
89022		2002 +	G-Class (W463) G320, G400, G55 AMG
89014		2007 +	GL-Class (X164) GL320 CDI, CL 320 Bluetec, GL450, GL550
		2009 +	GLK-Class (X204) GLK350
89014	50039	1998 - 2005	M-Class (ML) (W163) ML320, ML350, ML430, ML500, ML550, ML55 AMG
		2006 - 2011	M-Class (ML) (W164) ML320 CDI, ML320 Bluetec, ML350, ML500, ML550, ML63 AMG
89014		2006 +	R-Class (W251) R280, R350, R500, R320 CDI, R63 AMG
		1972 - 1980	S-Class (W116) 280S, 280SE, 450SE, 450SEL, 300SD
		2000 - 2006	S-Class (W220) S280, S3220, S350, S430, S500, S600, S55 AMG, S63 AMG, S65 AMG
		2007 +	S-Class (W221) S350, S450, S500, S550, S600 AMG, S65 AMG
<b>Mercury</b>			
	*50113	1992 +	Grand Marquis
		2003 - 2005	Marauder
89069	#50064	2005 - 2007	Mariner
	50185	2008 +	Mariner
89146		2006 - 2009	Milan
89129		2005 - 2007	Montego
	50125	2004 - 2007	Monterey
	#50003	1997 - 2001	Mountaineer
	*50081	2002 - 2005	Mountaineer
		2006 +	Mountaineer
		1995 - 2000	Mystique
		1988 - 1995	Sable
		1996 - 2004	Sable
		2000 - 2005	Sable
		1997 - 1999	Tracer
	50033	1993 - 1998	Villager
	50050	1999 - 2002	Villager
<b>Mini</b>			
89021		2002 - 2006	Cooper / Cooper S
89021		2007 - 2011	Cooper / Cooper S
<b>Mitsubishi</b>			
89117		2000 - 2005	Eclipse
89138	#50100	2004 +	Endeavor
		1994 - 1998	Galant
89116		1999 - 2003	Galant
		2004 +	Galant

# Deflectors

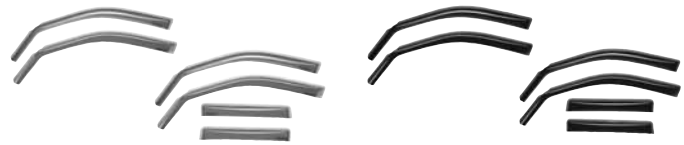

Side Window  
Deflectors Light

Side Window  
Deflectors Dark

Make / Model	Year	Side Window Deflectors Light		Side Window Deflectors Dark	
		Front	Front & Rear	Front	Front & Rear
<b>Mitsubishi (continued)</b>					
Lancer / Evolution	2002 - 2007	70293	72293 <i>Fits sedan only</i> 74293 <i>Fits sportback only</i>		
Lancer / Evolution	2008 +	70466	72466		
Mirage	1993 - 1996	70257	72257		
Mirage	1997 - 2001	70193	72193		
Montero	1992 - 2000	70075	72075	80075	82075
Montero	2001 - 2006	70263	72263		
Montero Sport	1997 - 2004	70076	72076	80076	82076
Outlander	2003 - 2006	70308	72308	80308	82308
Outlander	2007 - 2009				
Outlander	2007 +	70465	72465		
Outlander Sport	2011 +	70561	72561	80561	82561
Raider Double Cab	2006 - 2009	70392	72392	80392	82392
Raider Extended Cab	2006 - 2009	70392	78392	80392	88392
<b>Nissan</b>					
200SX	1995 - 1998	70183			
Altima	1993 - 1997	70256	72256		
Altima	1998 - 2001	70130	72130		
Altima	2002 - 2006	70294	72294	80294	82294
Altima	2007 +	70445	72445	80445	82445
Armada / Pathfinder Armada	2004 +	70342	72342	80342	82342
Frontier	1998 - 2000	70120	72120 <i>Fits 4-door models only</i>	80120	82120 <i>Fits 4-door models only</i>
Frontier	2001 - 2004	70120	72120	80120	82120 <i>Fits 4-door models only</i>
Frontier Crew Cab	2005 +	70367	74367	80367	84367
Frontier King Cab	2005 +	70367	78367 <i>*ET</i>	80367	88367 <i>*ET</i>
Juke	2011 +	70576	72576	80576	82576
Maxima	1995 - 1999	70077	72077	80077	82077
Maxima	2000 - 2003	70249	72249	80249	82249
Maxima	2004 - 2008	70336	72336	80336	82336
Maxima	2009 +	70541	72541	80541	82541
Murano	2003 - 2008	70314	72314	80314	82314
Murano	2009 +	70512		80512	
Navara Crew Cab	2005 +	70367	74367	80367	84367
Navara King Cab	2005 +	70367	77367	80367	87367
Pathfinder	1989 - 1995	70079	72079		
Pathfinder	1996 - 1999	70056	72056	80056	82056
Pathfinder	1999.5 - 2004	70056	72056	80056	82056
Pathfinder	2005 +	70367	72367	80367	82367
Pickup	1986.5 - 1997	70079			
Quest	1993 - 1998	70074			
Quest	1999 - 2002	70229			
Quest	2004 - 2009	70341		80341	
Rogue	2008 +	70467	72467	80467	82467
Sentra	1996 - 1999	70127	72127		
Sentra	2000 - 2006	70248	72248		
Sentra	2007 +	70446	72446	80446	82446

Side Window Deflectors:  
\*ET Rear Part Uses Exterior Tape

Stone & Bug Deflectors:  
# No Tape Mounting (Uses existing holes under vehicle hood).  
\* Mounts to hood surface




**Sunroof Wind  
Deflector**



**Stone & Bug  
Deflector**

		Year	Make / Model
<b>Mitsubishi (continued)</b>			
89115		2002 - 2007	Lancer / Evolution
		2008 +	Lancer / Evolution
		1993 - 1996	Mirage
		1997 - 2001	Mirage
		1992 - 2000	Montero
89119		2001 - 2006	Montero
89013	50030	1997 - 2004	Montero Sport
89118	#50091	2003 - 2006	Outlander
	50175	2007 - 2009	Outlander
		2007 +	Outlander
		2011 +	Outlander Sport
	50150	2006 - 2009	Raider Double Cab
	50150	2006 - 2009	Raider Extended Cab
<b>Nissan</b>			
		1995 - 1998	200SX
		1993 - 1997	Altima
		1998 - 2001	Altima
89108		2002 - 2006	Altima
89159		2007 +	Altima
			<i>Fits sedan only</i>
89047	50106	2004 +	Armada / Pathfinder Armada
	50028	1998 - 2000	Frontier
	#50066	2001 - 2004	Frontier
	#50139	2005 +	Frontier Crew Cab
	#50139	2005 +	Frontier King Cab
		2011 +	Juke
		1995 - 1999	Maxima
	50114	2000 - 2003	Maxima
89107		2004 - 2008	Maxima
89160		2009 +	Maxima
			<i>Fits power glass moonroof</i>
89105	#50092	2003 - 2008	Murano
	50190	2009 +	Murano
		2005 +	Navara Crew Cab
		2005 +	Navara King Cab
	50023	1989 - 1995	Pathfinder
89109	50007	1996 - 1999	Pathfinder
89109	50058	1999.5 - 2004	Pathfinder
89158	#50139	2005 +	Pathfinder
	50023	1986.5 - 1997	Pickup
	50033	1993 - 1998	Quest
	50050	1999 - 2002	Quest
89106	50105	2004 - 2009	Quest
		2008 +	Rogue
		1996 - 1999	Sentra
89104		2000 - 2006	Sentra
89159		2007 +	Sentra

# Deflectors

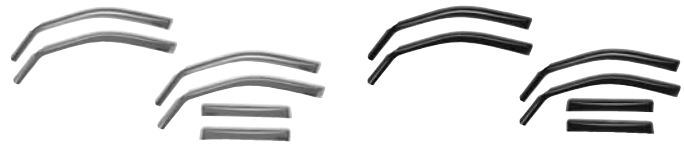

Make / Model	Year	Side Window Deflectors Light		Side Window Deflectors Dark	
		Front	Front & Rear	Front	Front & Rear
<b>Nissan (continued)</b>					
Titan Crew	2004 +	70342	74342	80342	84342
Titan King	2004 +	70342	78342 *ET	80342	88342 *ET
Versa	2007 +	70441 <i>Does not fit sedan</i>	72441	80441 <i>Does not fit sedan</i>	82441
Xterra	2000 - 2001	70120	74120	80120	84120
Xterra	2002 - 2004	70120	74120	80120	84120
Xterra	2005 +	70367	76367	80367	86367
X-Trail	2002 - 2007	70360	72360		
<b>Oldsmobile</b>					
Achieva	1992 - 1998	70177	72177 <i>Front and rear parts fit sedan only</i>		
Alero	1998 - 2004	70180 70181 <i>Fits coupe only</i>	72180	80180	82180
Bravada	1991 - 1994	70152	72152		
Bravada	1996 - 2001	70018	72018	80018	82018
Bravada	2002 - 2004	70278	72278	80278	82278
Custom Cruiser	ALL	70159 <i>Fits wagon only</i>			
Cutlass	1997 - 1999	70131	72131	80131	82131
Intrigue	1998 - 2002	70222	72222		
LSS	1996 - 1999	70164	72164		
Silhouette	1990 - 1996	70182			
Silhouette	1997 - 2000	70021			
Silhouette	2001 - 2004	70021			
<b>Plymouth</b>					
Breeze	1996 - 2000	70137			
Grand Voyager	1991 - 1995	70023			
Grand Voyager	1996 - 2000	70022		80022	
Voyager	1991 - 1995	70023			
Voyager	1996 - 2000	70022		80022	
<b>Pontiac</b>					
Aztek	2001 - 2005	70277	72277		
Bonneville	1992 - 1999	70164	72164		
Bonneville	2000 - 2005	70251	72251	80251	
G5	2007 - 2009	70410		80410	
G6	2005 - 2009	70384	72384	80384	82384
Grand Am	1992 - 1998	70177 70172 <i>Fits coupe only</i>	72177		
Grand Am	1999 - 2005	70180 70181 <i>Fits coupe only</i>	72180		
Grand Prix	1997 - 2003	70176 70174 <i>Fits coupe only</i>	72176		
Grand Prix	2004 - 2008	70338	72338	80338	82338
Montana	1997 - 2000	70021			
Montana	2001 - 2005	70021			

Side Window Deflectors:  
\*ET Rear Part Uses Exterior Tape

Stone & Bug Deflectors:  
# No Tape Mounting (Uses existing holes under vehicle hood).  
\* Mounts to hood surface




Sunroof Wind Deflector



Stone & Bug Deflector

Sunroof Wind Deflector	Stone & Bug Deflector	Year	Make / Model
<b>Nissan (continued)</b>			
89047	50106	2004 +	Titan Crew
89047	50106	2004 +	Titan King
		2007 +	Versa
	50028	2000 - 2001	Xterra
	#50087	2002 - 2004	Xterra
89109	50142	2005 +	Xterra
		2002 - 2007	X-Trail
<b>Oldsmobile</b>			
		1992 - 1998	Achieva
		1998 - 2004	Alero
	50037	1991 - 1994	Bravada
	50005	1996 - 2001	Bravada
89050	#50078	2002 - 2004	Bravada
		ALL	Custom Cruiser
		1997 - 1999	Cutlass
		1998 - 2002	Intrigue
		1996 - 1999	LSS
		1990 - 1996	Silhouette
	*50011	1997 - 2000	Silhouette
	*50065	2001 - 2004	Silhouette
<b>Plymouth</b>			
		1996 - 2000	Breeze
		1991 - 1995	Grand Voyager
	50009	1996 - 2000	Grand Voyager
		1991 - 1995	Voyager
89053	50009	1996 - 2000	Voyager
<b>Pontiac</b>			
	*50063	2001 - 2005	Aztek
		1992 - 1999	Bonneville
		2000 - 2005	Bonneville
		2007 - 2009	G5
89125		2005 - 2009	G6
<i>Does not fit panoramic sunroof</i>			
		1992 - 1998	Grand Am
89058	50116	1999 - 2005	Grand Am
		1997 - 2003	Grand Prix
89057		2004 - 2008	Grand Prix
	*50011	1997 - 2000	Montana
	*50065	2001 - 2005	Montana

# Deflectors

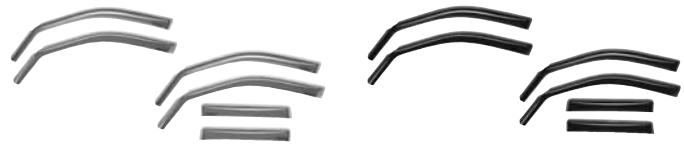

Side Window  
Deflectors Light

Side Window  
Deflectors Dark

Make / Model	Year	Side Window Deflectors Light		Side Window Deflectors Dark	
		Front	Front & Rear	Front	Front & Rear
<b>Pontiac (continued)</b>					
Montana SV6	2005 - 2008	70372		80372	
Sunfire	1995 - 2005	70173			
		<i>Fits coupe only</i>			
		70175			
		<i>Fits sedan only</i>			
Torrent	2006 - 2009	70364		80364	
Trans Sport	1990 - 1996	70182			
Trans Sport	1997 - 1998	70021			
Vibe	2009	70481	72481	80481	82481
Vibe	2003 - 2008	70305	72305	80305	82305
<b>Porsche®</b>					
Cayenne®	2003 - 2010	70335	72335	80335	82335
<b>Saab</b>					
900	1981 - 1993	70458		80458	
900	1994 - 1998	70080	72080		
		<i>Front and rear parts fit sedan and 5 door models</i>			
		70081			
		<i>Fits coupe only</i>			
9000	1986 - 1998	70082	72082		
		<i>Front and rear parts fit sedan only</i>			
9-3	1999 - 2002	70080	72080		
		<i>Front and rear parts fit sedan only</i>			
9-3	2003 - 2009	70315	72315	80315	82315
		<i>Front and rear parts fit sedan only</i>		<i>Front and rear parts fit sedan only</i>	
9-5	1999 - 2009	70121	72121		
9-7X	2005 - 2009	70278	72278	80278	82278
<b>Saturn</b>					
Aura	2007 - 2009	70453	72453	80453	82453
Ion	2003 - 2008	70327	72327		
		<i>Front and rear parts fit sedan only</i>			
		70337			
		<i>Fits coupe only</i>			
L100	2001 - 2005	70252	72252		
L200	2001 - 2005	70252	72252		
L300	2001 - 2005	70252	72252		
			<i>Fits sedan only</i>		
			74252		
			<i>Fits wagon only</i>		
LS	2000	70252	72252		
LS1	2000	70252	72252		
LS2	2000	70252	72252		
LW1	2000 - 2001	70252	74242		
LW2	2000 - 2001	70252	74242		
LW200	2001 - 2004	70252	74252		
LW3	2000 - 2001	70252	74242		
LW300	2001 - 2004	70252	74252		
Outlook	2007 - 2010	70457	72457	80457	82457
Relay	2005 - 2008	70372		80372	
SC	1991 - 1996	70178			
SC1	1991 - 1996	70178			
SC1	1997 - 2002	70143			
SC2	1991 - 1996	70178			
SC2	1997 - 2002	70143			
SL	1991 - 1995	70179	72179		

Side Window Deflectors:  
\*ET Rear Part Uses Exterior Tape

Stone & Bug Deflectors:  
# No Tape Mounting (Uses existing holes under vehicle hood).  
\* Mounts to hood surface



**Sunroof Wind  
Deflector**




**Stone & Bug  
Deflector**

		Year	Make / Model
<b>Pontiac (continued)</b>			
	#50136	2005 - 2008	Montana SV6
89056		1995 - 2005	Sunfire
<i>Fits coupe only</i>			
89049		2006 - 2009	Torrent
		1990 - 1996	Trans Sport
	*50011	1997 - 1998	Trans Sport
		2009	Vibe
89077	#50115	2003 - 2008	Vibe
<b>Porsche®</b>			
89027		2003 - 2010	Cayenne®
<b>Saab</b>			
		1981 - 1993	900
89003		1994 - 1998	900
		1986 - 1998	9000
		1999 - 2002	9-3
89024		2003 - 2009	9-3
<i>Does not fit convertible</i>			
89003		1999 - 2009	9-5
89050		2005 - 2009	9-7X
<b>Saturn</b>			
		2007 - 2009	Aura
89089		2003 - 2008	Ion
		2001 - 2005	L100
		2001 - 2005	L200
		2001 - 2005	L300
		2000	LS
		2000	LS1
		2000	LS2
		2000 - 2001	LW1
		2000 - 2001	LW2
		2001 - 2004	LW200
		2000 - 2001	LW3
		2001 - 2004	LW300
	50176	2007 - 2010	Outlook
	#50136	2005 - 2008	Relay
		1991 - 1996	SC
		1991 - 1996	SC1
		1997 - 2002	SC1
		1991 - 1996	SC2
		1997 - 2002	SC2
		1991 - 1995	SL



# Deflectors

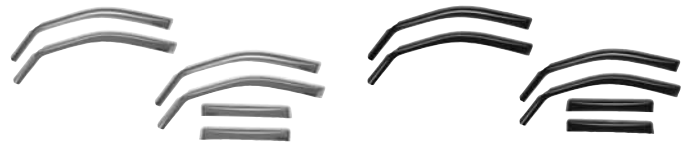

Make / Model	Year	Side Window Deflectors Light		Side Window Deflectors Dark	
		Front	Front & Rear	Front	Front & Rear
<b>Saturn (continued)</b>					
SL	1996 - 2002	70144	72144		
SL1	1991 - 1995	70179	72179		
SL1	1996 - 2002	70144	72144		
SL2	1991 - 1995	70179	72179		
SL2	1996 - 2002	70144	72144		
SW1	1991 - 1995	70179	72179		
SW1	1996 - 2002	70144	72144		
SW2	1991 - 1995	70179	72179		
SW2	1996 - 2002	70144	72144		
Vue	2002 - 2005	70289	72289		
Vue	2006 - 2007	70289	72289		
Vue	2008 - 2010	70468	72468	80468	
<b>Scion</b>					
tC	2005 - 2010	70366		80366	
xA	2004 - 2007	70347	72347	80347	82347
xB	2004 - 2007	70348	72348	80348	82348
xB	2008 +	70469	72469	80469	
Xd	2008 +	70470	72470	80470	82470
<b>Subaru</b>					
B9 Tribeca	2006 +	70402	72402		
Forester	1998 - 2000				
Forester	2009 +	70489	72489	80489	82489
Impreza / WRX	2008 - 2011	70472	72472		
Impreza / WRX	2012 +	70472	72472		
		<i>Fits WRX only</i>	<i>Fits WRX only</i>		
Legacy Sedan	2010 +		74516		84516
Legacy Wagon	2010 +		74516		84516
Outback Sedan	2005 - 2007				
Outback Sedan	2010 +	70516	72516	80516	82516
Outback Wagon	2005 - 2009				
Outback Wagon	2010 +	70516	72516	80516	82516
<b>Suzuki</b>					
Aerio Sedan	2002 - 2006	70313	72313		
Aerio SX	2002 - 2006	70313	74313		
Equator Crew Cab	2009 +	70367	74367	80367	84367
Equator Extended Cab	2009 +	70367	78367	80367	88367
			<i>*ET</i>		<i>*ET</i>
Esteem	1995 - 2002	70146			
Forenza	2004 +	70362	72362		
			<i>Fits sedan only</i>		
Grand Vitara	1999 - 2005	70199	72199	80199	82199
Grand Vitara	2006 +	70427	72427		
Reno	2005 +				
Sidekick (2 door)	1989 - 1998	70036			
Sidekick (4 door)	1992 - 1998	70038	72038		
SX4	2007 +	70525			
Verona	2004 +	70351	72351		
Vitara (2 door)	1999 - 2004	70198		80198	
Vitara (4 door)	1999 - 2004	70199	72199	80199	82199
XL-7	2001 - 2006	70199	74199		
<b>Toyota</b>					
4 Runner	1990 - 1995	70088	72088		
4 Runner	1996 - 2002	70087	72087	80087	82087
4 Runner	2003 - 2005	70317	72317	80317	82317

Side Window Deflectors:  
\*ET Rear Part Uses Exterior Tape

Stone & Bug Deflectors:  
# No Tape Mounting (Uses existing holes under vehicle hood).  
\* Mounts to hood surface



Sunroof Wind  
Deflector



Stone & Bug  
Deflector

		Year	Make / Model
<b>Saturn (continued)</b>			
		1996 - 2002	SL
		1991 - 1995	SL1
		1996 - 2002	SL1
		1991 - 1995	SL2
		1996 - 2002	SL2
		1991 - 1995	SW1
		1996 - 2002	SW1
		1991 - 1995	SW2
		1996 - 2002	SW2
89090	50088	2002 - 2005	Vue
89090	50148	2006 - 2007	Vue
		2008 - 2010	Vue
<b>Scion</b>			
		2005 - 2010	tC
		2004 - 2007	xA
	50126	2004 - 2007	xB
		2008 +	xB
		2008 +	Xd
<b>Subaru</b>			
		2006 +	B9 Tribeca
	*50043	1998 - 2000	Forester
		2009 +	Forester
		2008 - 2011	Impreza / WRX
		2012 +	Impreza / WRX
		2010 +	Legacy Sedan
		2010 +	Legacy Wagon
	50140	2005 - 2007	Outback Sedan
		2010 +	Outback Sedan
	50140	2005 - 2009	Outback Wagon
		2010 +	Outback Wagon
<b>Suzuki</b>			
		2002 - 2006	Aerio Sedan
		2002 - 2006	Aerio SX
		2009 +	Equator Crew Cab
		2009 +	Equator Extended Cab
89094		1995 - 2002	Esteem
		2004 +	Forenza
89092	50057	1999 - 2005	Grand Vitara
	50157	2006 +	Grand Vitara
	50157	2005 +	Reno
		1989 - 1998	Sidekick (2 door)
		1992 - 1998	Sidekick (4 door)
		2007 +	SX4
89093		2004 +	Verona
	50057	1999 - 2004	Vitara (2 door)
	50057	1999 - 2004	Vitara (4 door)
89092		2001 - 2006	XL-7
<b>Toyota</b>			
	50022	1990 - 1995	4 Runner
	#50006	1996 - 2002	4 Runner
89081	#50096	2003 - 2005	4 Runner

# Deflectors



Make / Model	Year	Side Window Deflectors Light		Side Window Deflectors Dark	
		Front	Front & Rear	Front	Front & Rear
<b>Toyota (continued)</b>					
4 Runner	2006 - 2009	70317	72317	80317	82317
4 Runner	2010 +	70531		80531	
Avalon	1995 - 1999	70133	72133		
Avalon	2000 - 2004	70260	72260	80260	82260
Avalon	2005 +	70388	72388	80388	82388
Camry	1989 - 1991	70141	72141		
Camry	1992 - 1996	70083			
		<i>Fits sedan and wagon</i>			
Camry	1997 - 2001	70084	72084	80084	82084
Camry	2002 - 2006	70288	72288	80288	82288
Camry	2007 - 2011	70421	72421	80421	82421
Camry	2012 +	70701		80701	
Camry Solara	2004 +				
Celica	2000 - 2005				
Corolla	1993 - 1997	70085			
		<i>Fits sedan and wagon</i>			
Corolla	1998 - 2002	70086			
Corolla	2003 - 2008	70299	72299	80299	82299
Corolla	2009 +	70480	72480	80480	82480
Echo	2000 - 2005	70253	72255		
		<i>Fits coupe only</i>			
		70255			
		<i>Front and rear parts fit sedan only</i>			
FJ Cruiser	2007 +	70422	78422	80422	88422
Highlander	2001 - 2007	70271	72271	80271	82271
Highlander	2008 +	70464	72464	80464	
Land Cruiser	1991 - 1997	70066	72066		
Land Cruiser	1998 - 2007	70140	72140	80140	82140
Land Cruiser	2008 +	70491		80491	
Matrix	2003 - 2008	70305	72305	80305	82305
Matrix	2009 +	70481	72481	80481	82481
Pickup	1989 - 1995	70195			
		<i>without vent windows</i>			
Pickup T100	1993 - 1998	70094			
Prado	2003 +	70329	72329	80329	82329
Previa	1991 - 1997	70090			
Prius	2004 - 2009	70357	72357	80357	82357
Prius	2010 +			80504	82504
RAV4	1996 - 2000	70092	72092	80092	82092
		<i>Front and rear parts fit 4 door</i>		<i>Front and rear parts fit 4 door</i>	
		70091			
		<i>Fits 2 door only</i>			
RAV4	2001 - 2006	70272	72272	80272	82272
RAV4	2006 +	70412	72412	80412	82412
Sequoia	2001 - 2004	70273	72273	80273	82273
Sequoia	2005 - 2007	70273	72273	80273	82273
Sequoia	2008 +	70450	76450	80450	86450
Sienna	1998 - 2003	70122		80122	
Sienna	2004 - 2010	70324	72324	80324	82324
Sienna	2011 +	70536	72536	80536	82536
Tacoma	1995 - 2000	70093	78093	80093	88093
			*ET		*ET
Tacoma Access Cab	2001 - 2004	70093	78093	80093	88093
			*ET		*ET

Side Window Deflectors:  
\*ET Rear Part Uses Exterior Tape

Stone & Bug Deflectors:  
# No Tape Mounting (Uses existing holes under vehicle hood).  
\* Mounts to hood surface




**Sunroof Wind  
Deflector**



**Stone & Bug  
Deflector**

Sunroof Wind Deflector	Stone & Bug Deflector	Year	Make / Model
<b>Toyota (continued)</b>			
89081	#50158	2006 - 2009	4 Runner
89081		2010 +	4 Runner
		1995 - 1999	Avalon
89082		2000 - 2004	Avalon
89080		2005 +	Avalon
		1989 - 1991	Camry
		1992 - 1996	Camry
		1997 - 2001	Camry
89080		2002 - 2006	Camry
89080	50164	2007 - 2011	Camry
		2012 +	Camry
89126		2004 +	Camry Solara
<i>Fits coupe only</i>			
89083		2000 - 2005	Celica
		1993 - 1997	Corolla
		1998 - 2002	Corolla
89128	50118	2003 - 2008	Corolla
89037		2009 +	Corolla
89128		2000 - 2005	Echo
	50163	2007 +	FJ Cruiser
89078	#50074	2001 - 2007	Highlander
89154	50186	2008 +	Highlander
	50012	1991 - 1997	Land Cruiser
89046		1998 - 2007	Land Cruiser
		2008 +	Land Cruiser
89077	#50119	2003 - 2008	Matrix
	89037	2009 +	Matrix
	50022	1989 - 1995	Pickup
	50021	1993 - 1998	Pickup T100
		2003 +	Prado
		1991 - 1997	Previa
		2004 - 2009	Prius
		2010 +	Prius
	50013	1996 - 2000	RAV4
89019	#50068	2001 - 2006	RAV4
89019	50154	2006 +	RAV4
89046	#50073	2001 - 2004	Sequoia
89046	#50143	2005 - 2007	Sequoia
		2008 +	Sequoia
	50034	1998 - 2003	Sienna
89045	50101	2004 - 2010	Sienna
	50203	2011 +	Sienna
	50031	1995 - 2000	Tacoma
	50070	2001 - 2004	Tacoma Access Cab

# Deflectors

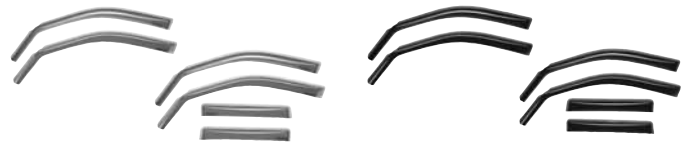

Side Window  
Deflectors Light

Side Window  
Deflectors Dark

Make / Model	Year	Side Window Deflectors Light		Side Window Deflectors Dark	
		Front	Front & Rear	Front	Front & Rear
<b>Toyota (continued)</b>					
Tacoma Access Cab	2005 +	70389	78389	80389	88389
Tacoma Access Cab	2012 +				
Tacoma Double Cab	2001 - 2004	70093	72093	80093	82093
Tacoma Double Cab	2005 - 2006				
Tacoma Double Cab	2005 +	70389	72389	80389	82389
Tacoma Double Cab	2012 +				
Tacoma Regular Cab	2012				
Tacoma Regular Cab	2005 - 2006				
Tacoma Regular Cab	2005 +	70411		80411	
Tundra Access Cab	2000 - 2004	70142	78142 *ET	80142	88142 *ET
Tundra Access Cab	2005 - 2006	70142	78142 *ET	80142	88142 *ET
Tundra CrewMax Cab	2007 - 2009				
Tundra CrewMax Cab	2007 +	70450	74450	80450	84450
Tundra Double Cab	2004 - 2006	70273	74273	80273	84273
Tundra Double Cab	2007 - 2009				
Tundra Double Cab	2007 +	70450	72450		
Tundra Regular Cab	2000 - 2006				
Tundra Regular Cab	2007 - 2009				
Tundra Regular Cab	2007 +	70449			
Venza	2009 +	70488	72488	80488	82488
Yaris	2007 - 2011	70407	72407		
		<i>Front and rear parts fit 5-door only</i>			
		70423	72423		
		<i>Front and rear parts fit sedan only</i>			
		70408			
		<i>Fits 3-door only</i>			
<b>Volkswagen</b>					
Beetle	1998 - 2011	70136		80136	
		<i>Does not fit convertible</i>		<i>Does not fit convertible</i>	
Corrado	1990 - 1995	70105			
EuroVan	1993 - 2003	70221			
Golf / Rabbit / GTI / R32	1988 - 1992	70103	72103		
		<i>Front and rear parts fit 5 door model</i>			
		70104			
		<i>Fits 3 door model</i>			
Golf / Rabbit / GTI / R32	1993 - 1998	70095	72095	80095	82095
		<i>Front and rear parts fit 5 door model</i>		<i>Front and rear parts fit 5 door model</i>	
		70096		80096	
		<i>Fits 3 door model</i>		<i>Fits 3 door model</i>	
Golf / Rabbit / GTI / R32	1999 - 2006	70196	72196	80196	82196
		<i>Front and rear parts fit 5 door model</i>		<i>Front and rear parts fit 5 door model</i>	
		70197		80197	
		<i>Fits 3 door model</i>		<i>Fits 3 door model</i>	
Golf / Rabbit / GTI / R32	2006 - 2009	70448	72448	80390	
		<i>Front and rear parts fit 5 door model</i>			
		70390			
		<i>Fits 3 door model</i>			
Golf / Rabbit / GTI / R32	2006 +				
Golf / Rabbit / GTI / R32	2010 +	70528	72528	80528	82528
		70527			
		<i>Fits 3 door model</i>			

Side Window Deflectors:  
\*ET Rear Part Uses Exterior Tape

Stone & Bug Deflectors:  
# No Tape Mounting (Uses existing holes under vehicle hood).  
\* Mounts to hood surface



**Sunroof Wind  
Deflector**



**Stone & Bug  
Deflector**

		Year	Make / Model
<b>Toyota (continued)</b>			
	#50131	2005 +	Tacoma Access Cab
	50209	2012 +	Tacoma Access Cab
	#50070	2001 - 2004	Tacoma Double Cab
	#50131	2005 - 2006	Tacoma Double Cab
		2005 +	Tacoma Double Cab
	50209	2012 +	Tacoma Double Cab
	50209	2012	Tacoma Regular Cab
	#50131	2005 - 2006	Tacoma Regular Cab
		2005 +	Tacoma Regular Cab
	#50052	2000 - 2004	Tundra Access Cab
	#50052	2005 - 2006	Tundra Access Cab
	#50173	2007 - 2009	Tundra CrewMax Cab
89046		2007 +	Tundra CrewMax Cab
89046	#50052	2004 - 2006	Tundra Double Cab
	#50173	2007 - 2009	Tundra Double Cab
89046		2007 +	Tundra Double Cab
	#50052	2000 - 2006	Tundra Regular Cab
	#50173	2007 - 2009	Tundra Regular Cab
		2007 +	Tundra Regular Cab
		2009 +	Venza
		2007 - 2011	Yaris
<b>Volkswagen</b>			
89018 <i>Does not fit convertible</i>	50120	1998 - 2011	Beetle
		1990 - 1995	Corrado
		1993 - 2003	EuroVan
		1988 - 1992	Golf / Rabbit / GTI / R32
		1993 - 1998	Golf / Rabbit / GTI / R32
89008		1999 - 2006	Golf / Rabbit / GTI / R32
		2006 - 2009	Golf / Rabbit / GTI / R32
89131		2006 +	Golf / Rabbit / GTI / R32
		2010 +	Golf / Rabbit / GTI / R32

# Deflectors



Make / Model	Year	Side Window Deflectors Light		Side Window Deflectors Dark	
		Front	Front & Rear	Front	Front & Rear
<b>Volkswagen (continued)</b>					
Jetta / GLI	1988 - 1992	70103	72103		
Jetta / GLI	1993 - 1998	70095	72095		
Jetta / GLI	1999 - 2005	70196	74196 <i>Fits sedan</i> 76196 <i>Fits wagon</i>	80196	84196 <i>Fits sedan</i> 86196 <i>Fits wagon</i>
Jetta / GLI	2005.5 +	70398	72398 74398 <i>Fits Jetta Sportwagen</i>	80398	82398 84398 <i>Fits Jetta Sportwagen</i>
Passat	1990 - 1997	70097	72097 <i>Fits sedan</i> 74097 <i>Fits wagon</i>		
Passat	1998 - 2005	70098	72098 <i>Fits sedan</i> 74098 <i>Fits wagon</i>		
Passat	2006 - 2011	70419	72419 <i>Fits sedan</i> 74419 <i>Fits wagon</i>	80419	82419 <i>Fits sedan</i>
Passat	2006 +				
Passat	2012 +	70566	72566	80566	82566
Routan	2009 +	70476	72476	80476	82476
Tiguan	2009 +	70479	72479		82479
Touareg	2003 - 2010	70335	72335	80335	82335
Vanagon	ALL	70106			
<b>Volvo</b>					
740	1985 - 1997	70099	72099		
760	1985 - 1997	70099	72099		
850 Sedan	1993 - 1997	70100	72100	80100	82100
850 Wagon	1994 - 1997	70100	72100	80100	82100
940 Sedan	1985 - 1997	70101	72101		
940 Wagon	1985 - 1997	70101	72101		
960 Sedan	1985 - 1997	70101	72101		
960 Wagon	1985 - 1997	70101	72101		
C30	2010 +	70529		80529	
S40	2000 - 2004	70254	72254		
S40	2004.5 +	70358	72358		
S60	2001 - 2010	70290	72290		
S60	2001 +				
S70	1998 - 2000	70100	72100	80100	82100
S80	1999 - 2006	70224	72224		
S90	1998	70101	72101		
V40	2000 - 2004	70254	74254		
V50	2005 +	70358	74358		
V70	1998 - 2000	70100	72100	80100	82100
V70	2001 - 2007	70262	72262		
V90	1998	70101	72101		
XC60	2010 +	70510	72510	80510	82510
XC70	2001 - 2007	70262	72262		
XC70	2008 +	70530	72530	80530	82530
XC90	2003 +	70322	72322	80322	82322

Side Window Deflectors:  
\*ET Rear Part Uses Exterior Tape

Stone & Bug Deflectors:  
# No Tape Mounting (Uses existing holes under vehicle hood).  
\* Mounts to hood surface





**Sunroof Wind  
Deflector**



**Stone & Bug  
Deflector**

	Year	Make / Model
<b>Volkswagen (continued)</b>		
	1988 - 1992	Jetta / GLI
	1993 - 1998	Jetta / GLI
89008	1999 - 2005	Jetta / GLI
89131	2005.5 +	Jetta / GLI
	1990 - 1997	Passat
89008	1998 - 2005	Passat
	2006 - 2011	Passat
89131	2006 +	Passat
	2012 +	Passat
	2009 +	Routan
89161	2009 +	Tiguan
89027	2003 - 2010	Touareg
	ALL	Vanagon
<b>Volvo</b>		
	1985 - 1997	740
	1985 - 1997	760
89004	1993 - 1997	850 Sedan
89004	1994 - 1997	850 Wagon
	1985 - 1997	940 Sedan
	1985 - 1997	940 Wagon
	1985 - 1997	960 Sedan
	1985 - 1997	960 Wagon
	2000 - 2004	S40
89010	2004.5 +	S40
	2001 - 2010	S60
89142	2001 +	S60
89004	1998 - 2000	S70
89017	1999 - 2006	S80
	1998	S90
89010	2000 - 2004	V40
89142	2005 +	V50
89004	1998 - 2000	V70
89017	2001 - 2007	V70
	1998	V90
	2010 +	XC60
	2001 - 2007	XC70
	2008 +	XC70
89143	2003 +	XC90

**They Just Snap Right In!**



**WeatherTech®**  
800.441.6287 [weathertech.com](http://weathertech.com) DOT-112



**WeatherTech®**  
1.800.441.6287 *Made in Germany*

**Available in Dark or Light Tint**

No-Drill MudFlaps



Dually No-Drill MudFlaps



**No Drill MudFlaps**



**Perfect  
DigitalFit®**



## PREMIUM MUDFLAPS

Introducing the WeatherTech® No-Drill MudFlap! From the creators of the revolutionary FloorLiner™ comes the most startling advancement in exterior protection available today. Featuring the Patent Pending QuickTurn™ hardened Stainless Steel fastening system.

The WeatherTech® No-Drill MudFlap set literally “mounts-in-minutes™” in most applications without the need for wheel/tire removal, and most importantly - without the need for drilling into the vehicle’s fragile painted metal surface! Contoured specifically for each application and molded from a proprietary thermoplastic resin.

The WeatherTech® No-Drill MudFlap provides protection for your vehicles most vulnerable rust area. No-Drill MudFlaps protect the fender and rocker panel from stone chips, slush, dirt and debris. Check for our latest applications at [weathertechdirect.com](http://weathertechdirect.com); there are new applications every month.

Engineered Specifically  
for each Application



MudFlap Dually Rear




QuickTurn™ Detail



Install without Tire/Wheel Removal



**Proudly Designed,  
Engineered and  
Manufactured with  
American made  
Tooling in the USA**





DODGE RAM



front

rear



CHEVROLET SILVERADO



front

rear



**MudFlaps Available for**

Cadillac • Chevrolet • Dodge • Ford • GMC • And More to Come!

GMC SIERRA



front



dually - rear



FORD F150



front



rear







Make / Model	Year	MudFlaps	
Cadillac		Part #	Notes
Escalade	2007 +	Front: 110008	<i>Fits models without flares &amp; power running boards only, will not fit 22" rims</i>
		Rear: 120012	<i>Fits models with flares &amp; without power running boards only</i>
Escalade ESV	2007 +	Front: 110008	<i>Fits models without flares &amp; power running boards only, will not fit 22" rims</i>
		Rear: 120012	<i>Fits models with flares &amp; without power running boards only</i>
Escalade EXT	2007 +	Front: 110008	<i>Fits models without flares &amp; power running boards only, will not fit 22" rims</i>
		Rear: 120016	<i>Fits models without power running boards only</i>
Escalade Hybrid	2009 +	Front: 110008	<i>Fits models without power running boards only, will not fit 22" rims</i>
		Rear: 120012	
<b>Chevrolet</b>			
Avalanche	2003 - 2006	Front: 110005	<i>Fits models with flares but without body cladding only</i>
		Rear: 120013	<i>Fits models with flares but without body cladding only</i>
		Front: 110006	<i>Fits models without flares or power running boards</i>
		Rear: 120006	<i>Fits models without flares only</i>
Avalanche	2007 +	Front: 110008	<i>Fits models without flares or power running boards, will not fit 22" rims</i>
		Rear: 120016	<i>Fits models without flares only</i>
Avalanche	2008 +	Front: 110006	<i>Fits models without flares only (Z71 pkg)</i>
		Rear: 120022	<i>Fits models without flares only (Z71 pkg)</i>
Colorado Crew Cab	2004 +	Front: 110032	<i>Fits models without flares</i>
		Rear: 120032	<i>Fits models without flares</i>
Colorado Extended Cab	2004 +	Front: 110032	<i>Fits models without flares</i>
		Rear: 120032	<i>Fits models without flares</i>
Colorado Regular Cab	2004 +	Front: 110032	<i>Fits models without flares</i>
		Rear: 120032	<i>Fits models without flares</i>
Silverado	1999 - 2006	Front: 110005	<i>Fits models with flares only</i>
		Rear: 120005	<i>Fits models with flares only</i>
Silverado	1999 - 2007 Classic	Front: 110006	<i>Fits models without flares only, Does not fit 2007 new body style</i>
		Rear: 120006	<i>Fits models without flares only, Does not fit 2007 new body style</i>
Silverado	2007 +	Front: 110010	<i>Fits models without flares only, Does not fit 2007 Classic</i>
		Rear: 120010	<i>Fits models without flares only, Does not fit 2007 Classic</i>
Silverado	2008 +	Front: 120025	<i>Fits dually models only</i>
Suburban	2000 - 2006	Front: 110005	<i>Fits models with flares only</i>
		Rear: 120005	<i>Fits models with flares only</i>
		Front: 110006	<i>Fits models without flares only</i>
		Rear: 120006	<i>Fits models without flares only</i>
Suburban	2007 +	Front: 110008	<i>Fits models without flares, moldings, and power running boards only, fits LTZ models, will not fit 22" rims</i>
		Rear: 120004	<i>Fits models without flares, molding, or power running boards only</i>
Suburban	2009 +	Front: 110013	<i>Fits models with flares only (Z71 pkg)</i>
		Rear: 120018	<i>Fits models with flares only (Z71 pkg)</i>
Tahoe	2000 - 2006	Front: 110005	<i>Fits models with flares</i>
		Rear: 120013	<i>Fits models with flares</i>
		Front: 110006	<i>Fits models without flares</i>
		Rear: 120006	<i>Fits models without flares</i>
Tahoe	2007 +	Front: 110008	<i>Fits models without power running boards, fits LTZ models, will not fit 22" rims</i>
		Rear: 120014	<i>Fits models with flares (Z71 option package)</i>
		Front: 110013	<i>Fits vehicles without flares</i>
		Rear: 120015	<i>Fits models without flares</i>



**MudFlaps**

**Year**

**Make / Model**

Notes	Part #		Dodge
	Front: 110007 Rear: 120007	2006 - 2008	Ram 1500
<i>Will not fit duallies</i>			
<i>Fits models without flares, trim piece may need to be removed</i>	Front: 110024	2009 +	Ram 1500
<i>Fits models without flares, trim piece may need to be removed</i>	Rear: 120024		
<i>Fits models with flares</i>	Front: 110026		
<i>Fits models with flares</i>	Rear: 120026		
	Front: 110007 Rear: 120007	2006 - 2009	Ram 2500/3500
<i>Will not fit duallies</i>			
<i>Fits models with flares</i>	Front: 110026	2009 +	Ram 2500/3500
<i>Fits models with flares, Does not fit dually</i>	Rear: 120026		
<b>Ford</b>			
<i>Fits vehicles without flares or moldings only</i>	Front: 110001	2000 - 2005	Excursion
<i>Fits models with flares</i>	Front: 110003	2004 +	F150
<i>Fits models with flares, Does not fit flareside box</i>	Rear: 120003		
<i>Fits models without flares</i>	Front: 110002		
<i>Fits models without flares</i>	Rear: 120002		
<i>Fits models without flares or moldings only</i>	Front: 110001	1999 - 2007	F250/F350
<i>Fits models without flares or moldings only</i>	Rear: 120001		
<i>Fits models with flares only</i>	Front: 110004	2004 - 2007	F250/F350
<i>Fits models with flares only</i>	Rear: 120008		
<i>Fits models without flares or moldings or molded plastic running boards only</i>	Front: 110009	2008 +	F250/F350
<i>Fits models without flares or moldings only</i>	Rear: 120001		
<i>Fits models with flares only</i>	Front: 110012		
<i>Fits models with flares only</i>	Rear: 120008		
<i>Fits Standard Models</i>	Front: 110020	2011 +	F250/F350/F450
<i>Fits Standard Models</i>	Rear: 120020		Super Duty Super Cab (Ext Cab)
<i>Fits Standard Models</i>	Front: 110020	2011 +	F250/F350/F450
<i>Fits Standard Models</i>	Rear: 120020		Super Duty Super Crew
<b>GMC</b>			
<i>Fits models without flares</i>	Front: 110032	2004 +	Canyon Crew Cab
<i>Fits models without flares</i>	Rear: 120032		
<i>Fits models without flares</i>	Front: 110032	2004 +	Canyon Extended Cab
<i>Fits models without flares</i>	Rear: 120032		
<i>Fits models without flares</i>	Front: 110032	2004 +	Canyon Regular Cab
<i>Fits models without flares</i>	Rear: 120032		
<i>Fits models without flares only, Does not fit 2007 new body style</i>	Front: 110006	1999 - 2007 Classic	Sierra / Sierra Denali
<i>Fits models without flares only, Does not fit 2007 new body style</i>	Rear: 120006		
<i>Fits models with flares only, Does not fit 2007 new body style</i>	Front: 110005		
<i>Fits models with flares only, Does not fit 2007 new body style</i>	Rear: 120005		
<i>Fits models without flares only, Does not fit 2007 Classic</i>	Front: 110011	2007 +	Sierra / Sierra Denali
<i>Fits models without flares only, Does not fit 2007 Classic</i>	Rear: 120011		
<i>Fits models with flares only, Does not fit Denali models</i>	Front: 110005	2000 - 2006	Yukon / Yukon Denali
<i>Fits models with flares only, Does not fit Denali models</i>	Rear: 120013		
<i>Fits models without flares only, Does not fit Denali models</i>	Front: 110006		
<i>Fits models without flares only</i>	Rear: 120006		



**Make / Model**                      **Year**                      **MudFlaps**

<b>GMC (continued)</b>		<b>Part #</b>	<b>Notes</b>
Yukon / Yukon Denali	2007 +	Front: 110008	<i>Fits models without flares, moldings, or power running boards only, Fits Denali models, will not fit 22" rims</i>
		Rear: 120012	<i>Fits Denali models without power running boards only</i>
		Front: 110013	<i>Fits vehicles without flares</i>
		Rear: 120015	<i>Fits models without flares only, Does not fit Denali models</i>
Yukon XL / Yukon XL Denali	2000 - 2006	Front: 110005	<i>Fits models with flares only, Does not fit Denali models</i>
		Rear: 120005	<i>Fits models with flares only, Does not fit Denali models</i>
		Front: 110006	<i>Fits models without flares only, Does not fit Denali models</i>
		Rear: 120006	<i>Fits models without flares only, Does not fit Denali models</i>
Yukon XL / Yukon XL Denali	2007 +	Front: 110008	<i>Fits models without flares &amp; power running boards only, Fits Denali models, will not fit 22" rims</i>
		Rear: 120004	<i>Fits Denali models without power running boards only</i>

# Check WeatherTechDirect.com for New Applications

(PDF and Excel Available for Download)



MudFlaps

Year

Make / Model

Notes

Part #

# Check WeatherTechDirect.com for New Applications

(PDF and Excel Available for Download)

No drilling necessary through steel fender, preventing rust



Patent Pending QuickTurn™ hardened stainless steel fastening system

Engineered specifically for each application

Molded from an OE approved thermoplastic resin

The best mud flap protection available for a vehicle



# Additional Accessories

ClearCover®



PlateFrame™



Pet Barrier



WeatherTech® BatteryCharger



TechCare™



ClearFrame™



RackSack®



LampGard®



WeatherTech® BatteryCharge Indicator



TechFloor™



TechShade®





## LICENSE PLATE ACCESSORIES

The WeatherTech® ClearCover® license plate cover is made from the virtually indestructible UV-stable Lupillon 3000. The one piece lens and gasket design allows for easy installation. The Multi-Flex™ gasket seals moisture out, and a stepped lip design fits the license plate snugly. The WeatherTech® ClearCover® has many colors to choose from, and will complement any vehicle.






## LICENSE PLATE ACCESSORIES

The ClearFrame™ license plate frame has all of the features of the ClearCover® in a frame. It is made from virtually indestructible UV-stable Lupillon 3000. The one piece frame and gasket design allows for easy installation. The Multi-Flex™ Gasket seats against plate snugly preventing vibration or rattling. The WeatherTech® ClearFrame™ has many styles to choose from, and will complement any vehicle. Available in white, brushed stainless, red, black and chrome.



*Proudly Designed,  
Engineered and  
Manufactured with  
American made  
Tooling in the USA*



## LICENSE PLATE ACCESSORIES

The WeatherTech® PlateFrame™ features a solid one-piece design and is made from ABS Natural Platable Grade Plastic. This specific grade of ABS thermoplastic material is virtually indestructible, with optimum resistance to weathering. Available in Black.



## EXPAND YOUR CARGO CAPACITY

The WeatherTech® RackSack® expands your cargo carrying capacity a whopping 13 cubic feet and measures 39" x 32" x 18". It's made of heavy-duty 1800 Denier Oxford fabric that is tear resistant and water repellent. The RackSack® also stows away neatly in its own bag.

Features include swivel straps that mount to the crossbar or side rails of an existing roof rack, patented Roll and Wrap™ tabs to prevent flapping straps, ITW Nexus™ Connectors and a soft felt bottom to protect your vehicle's finish from scratching.

2-Way Zipper



Swivel Strap



Roll & Wrap™ Strap



Quick Release Connectors






# PetBarrier

## EXPANDABLE & EXTENDABLE

Keep those paws and claws off the upholstery. The WeatherTech® Pet Barrier is adjustable, expandable and keeps pets safely in the rear of your vehicle.

The heavy-duty  $\frac{5}{8}$ " diameter telescopic tubing installs easily without tools or drilling. The barrier adjusts vertically and horizontally to suit any vehicle and any pet. "No-Mar" rubber coated components protect your interior and ensure a rattle-free installation. An optional extension is available for minivans, or vehicles with folding seats.

<b>Tubing Size</b>	$\frac{1}{2}$ " , $\frac{5}{8}$ " & $\frac{3}{4}$ " Steel
<b>Total Weight</b>	7.3 lbs.
<b>Max Height</b>	42" (w/out extension) 51" (w/ extension)
<b>Max Width</b>	66"

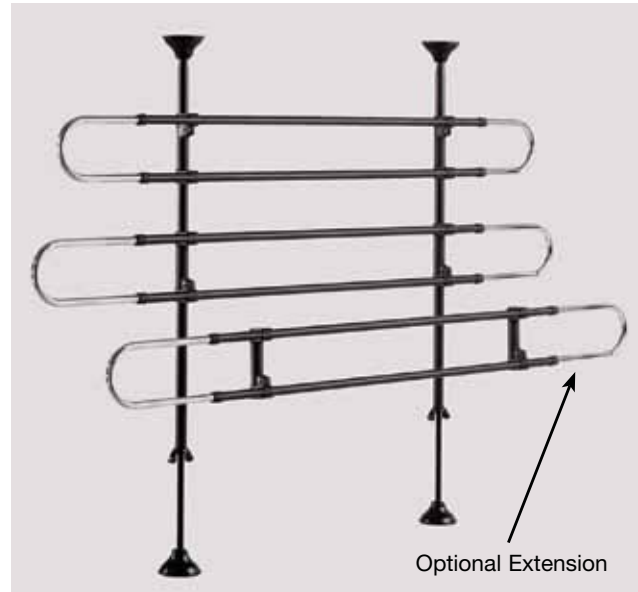

## SIMPLE HEADLAMP PROTECTION

LampGard®



Protect your lights with the WeatherTech® LampGard®. Designed to specifically fit vehicle headlamps, fog lamps and turn indicators. Each LampGard® is computer die-cut to fit specific vehicles.

Made from an optically clear urethane, the LampGard® protects your lights from cracking, scratching and pitting. Applying the LampGard® is simple – just peel away the paper revealing the adhesive and stick the LampGard® directly to the lens surface.



## WEATHERTECH® BATTERYCHARGER

The WeatherTech® BatteryCharger is simply the best charger made for the long term maintenance of your vehicle's battery. Exclusively designed for keeping your battery in prime condition while vehicle is not in use.

The perfect solution for your collector car, seasonal vehicle, or special vehicle. The WeatherTech® BatteryCharger monitors your battery's condition and only when necessary, uses a 4-Step charging method to keep your battery in tip-top shape! Can be connected for months.

Weather-Proof Connectors



Temporary Connectors



Permanent Connectors



## WEATHERTECH® BATTERYCHARGE INDICATOR

The WeatherTech® BatteryCharge Indicator is an optional permanent connection to your battery. While connected it will light up, indicating if a charge is necessary, if so the WeatherTech® BatteryCharger will plug right in.

WeatherTech® BatteryCharge Indicator  
Sold Separately



CHARGE NECESSARY   
  CHARGE RECOMMENDED   
  CHARGE NOT NECESSARY





EASILY ASSEMBLED BY HAND!

WeatherTech® TF™ (TechFloor™) is the first modular floor tile system to offer TWO distinctly different materials molded into ONE tile.

Our revolutionary TwoShot™ process (patent pending) produces an extremely rugged and low profile (slightly over 1/4") durable plastic tile with attractive raised TractionSquares™ for wet-or-dry non-slip use. Soft touch underside offers incredible grip to virtually any floor.


Available in 6 tile sizes and 5 border options to allow fast wall-to-wall installation typically without the need to cut or trim.

Easily assembled and disassembled by hand using a snap together loop & tab system (patent pending). No professional installation or special tools required!


#### Multi-Use

Designed to withstand the daily wear and tear of virtually any floor:

- Garage
- Laundry Room
- Pool Area
- Deck/Patio
- Workout Room
- Race Track
- Porch
- Shop
- Kids' Play Area
- Basement
- Mud Room
- Trade Show

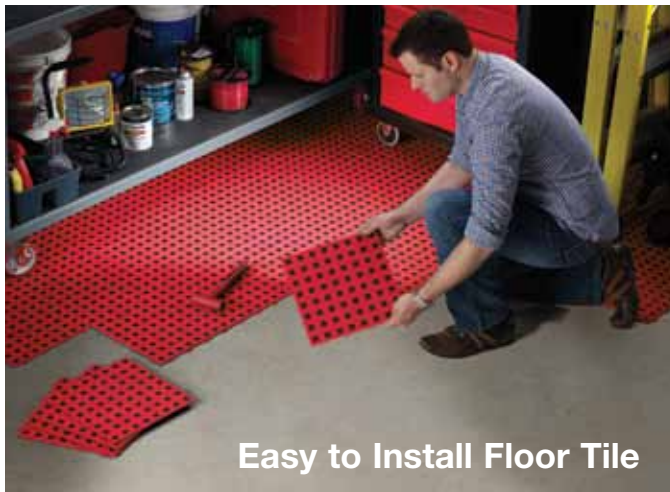

Easy to Install Floor Tile

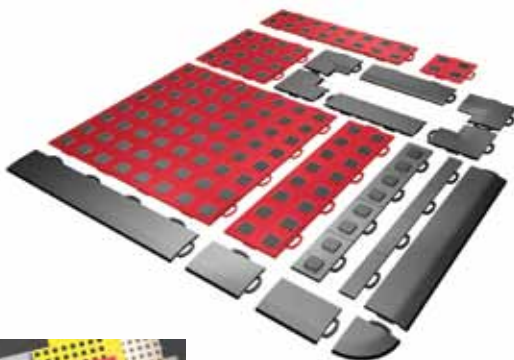

Available in a variety of colors, borders available only in black

## TechFloor™ Tile System Components

Floor Tiles	Trim Tiles	Borders	Border Corners
12" X 12"	3/4" X 12"	2" X 3" with tabs	Inside Tab-Tab
6" X 6"	1 1/2" X 12"	2" X 6" with tabs	Inside Tab-Loop
3" X 3"		2" X 12" with tabs	Inside Loop-Loop
3" X 12" Left Loop		2" X 3" with loops	Inside Loop-Tab
3" X 12" Right Loop		2" X 6" with loops	2" X 2" Border Corner
		2" X 12" with loops	

Proudly Designed,  
Engineered and  
Manufactured with  
American made  
Tooling in the USA







## VEHICLE CARE PROTECTION



**NOW INTRODUCING** – TechCare™ a complete line of automotive care and cleaning products. Developed with dedication to sustainability and superior care, TechCare™ products are made from only the highest quality of ingredients and advanced formulas. The TechCare™ line of care products provide the ultimate clean and professional finish expected of the WeatherTech™ name.



### FLOORLINER™ & FLOORMAT CLEANER

- Removes scuff marks and stains
- Lifts sand and dirt for easy removal
- Dissolves grease and oil stains



### FLOORLINER™ & FLOORMAT PROTECTOR

- Helps to prevent staining
- Slip resistant finish
- Creates long-lasting, “Like New” appearance



### INTERIOR DETAILER

- Cleans and protects interior surfaces
- Matte Finish
- Guards against UVA and UVB



### LEATHER CONDITIONER with Aloe Vera

- Matte Finish
- Contains Aloe Vera for moisturizing and enhancing
- Guards against UVA and UVB
- Contains spot & stain blocker



### CARPET CLEANER with SpotTech™

- Stain repellent and remover
- Contains wetting agent to loosen dirt and oil stains
- Enhances anti-staining properties



### INTERIOR GLASS CLEANER with Anti-Fog

- Specifically for automotive interiors
- Prevents fogging from temperature variations
- Does not leave streaks or film



### ACID-FREE WHEEL CLEANER

- Acid-free, biodegradable formula
- For virtually all wheel types
- Removes road grime and brake dust on contact



### GENTLE CAR™ SHAMPOO

- Non-corrosive
- Highly concentrated
- Safe for virtually all paint finishes



### TIRE GLOSS with Cross-Link Action™

- Promotes Cross-Link Action™ with rubber for a stronger bond
- High gloss appearance
- Easy, spray on and walk away



### WAX-PREP CLAY GEL CLEANER

- Pre-cleaner that preps surface for waxing
- Removes imbedded impurities in finish
- Provides a glossy & smooth finish



### CARNAUBA GEL WAX

- Provides a durable, high gloss finish
- Helps to remove minor blemishes
- For use on paint, chrome, or fiberglass



### QUIKTECH™ DETAILER with Carnauba Wax

- Easy on and off application
- Enhances appearance of automotive, motorcycle, watercraft and aircraft finishes



### EXTERIOR GLASS CLEANER with Repel

- Non-streaking, ammonia-free
- Removes bugs, dirt and debris
- Adds water repellency



*Proudly Designed,  
Engineered and  
Manufactured with  
American made  
Tooling in the USA*







## KEEP THE SUN AND HEAT OUT

New from WeatherTech®, is the TechShade®. Perfect for any season, the TechShade® can warm or cool your vehicle. Reflective film chases the sun away in summer. Then, the reverse side absorbs the heat for those cold winter months. The unique patented suction cups aid in installation to secure the placement of the TechShade®. When not in use the TechShade® is easily removed, rolled and use the Velcro® to securely close. The TechShade® is custom fit for each vehicle.

### TechShade® Available for

Acura • Audi • BMW • Buick • Cadillac • Chevrolet • Chrysler • Daewoo • Daihatsu • Dodge • Eagle • Ferrari • Ford • Freightliner • Geo • GMC • Honda • Hummer • Hyundai • Infiniti • Isuzu • Jaguar • Jeep • Kia • Lamborghini • Land Rover • Lexus • Lincoln • Mazda • Mercedes-Benz® • Mercury • Mini • Mitsubishi • Nissan • Oldsmobile • Peugeot • Plymouth • Pontiac • Porsche® • Saab • Saturn • Scion • Smart • Subaru • Suzuki • Toyota • Volkswagen • Volvo

Easy Storage



Secure Placement



*Proudly Designed,  
Engineered and  
Manufactured with  
American made  
Tooling in the USA*



Make / Model	Year	Part #	TechShade®	Notes
<b>Acura</b>				
MDX	2001 - 2006	M816		
MDX	2007 - 2012	M1116		
RDX	2007 - 2012	M262		
RL	2005 - 2010	M1039		
RSX	2002 - 2006	M844		
TL	2004 - 2008	M1011		
TL	2009 - 2012	M1193		
TSX	2003 - 2008	M932		
TSX	2009 - 2012	M1184		
ZDX	2010 - 2011	M1249		
<b>Aston Martin</b>				
Rapide	2010 - 2012	M1347		
<b>Audi</b>				
A3	2006 - 2011	M1040		
A4/S4/RS4	2002 - 2008	M878		
A4/S4/RS4	2003 - 2008	M906		<i>Fits Convertible</i>
A4/S4/RS4	2009 - 2012	M1201		<i>Fits Sedan and Avant</i>
A5/S5/RS5	2008 - 2012	M335		
A6/S6	2005 - 2011	M1094		
A6/S6 Avant	2005 - 2011	M1094		
A8/S8	2004 - 2009	M1015		
A8/S8	2011 - 2011	M1302		
Q5	2009 - 2012	M1202		
Q7	2007 - 2011	M254		
S8	2004 - 2009	M1015		
TT	2000 - 2006	M810		<i>Fits Roadster</i>
TT	2000 - 2006	M781		<i>Fits Coupe</i>
TT	2007 - 2011	M1151		<i>Fits Coupe</i>
TT	2007 - 2011	M1152		<i>Fits Roadster</i>
<b>BMW</b>				
1-Series (E82/E88)	2008 - 2012	M293		
1-Series (E82/E88)	2008 - 2012	M1183		
3-Series (E90/E91)	2006 - 2006	M1012		
3-Series (E90/E91)	2006 - 2006	M1066		
3-Series (E90/E91/E92/E93)	2007 - 2011	M314		<i>Fits Convertible</i>
3-Series (E90/E91/E92/E93)	2007 - 2011	M283		<i>Fits Sedan</i>
3-Series (E90/E91/E92/E93)	2007 - 2011	M284		<i>Fits Coupe</i>
5-Series (E60/E61)	2004 - 2010	M1016		
5-Series (F10/F11)	2011 - 2012	M1261		
5-Series Gran Turismo	2010 - 2011	M1285		
6-Series (E63/E64)	2004 - 2010	M175		
6-Series (E63/E64)	2004 - 2010	M176		
7-Series (E65/E66)	2003 - 2008	M876		
7-Series (F01/F02)	2009 - 2011	M1239		
M3 (E90/E92/E93)	2011 - 2011	M284		<i>Fits Coupe</i>
M3 (E90/E92/E93)	2011 - 2011	M283		<i>Fits Sedan</i>
M5 (E60)	2005 - 2010	M1016		
X3	2004 - 2010	M166		
X3	2011 - 2012	M1290		
X5	2000 - 2006	M371		
X5	2007 - 2012	M1137		
X6	2008 - 2012	M058		
Z4	2002 - 2012	M895		
<b>Buick</b>				
Enclave	2007 - 2012	M290		
LaCrosse	2005 - 2009	M186		
LaCrosse	2010 - 2012	M1247		
Lucerne	2006 - 2011	M230		
Regal	2011 - 2011	M1262		

TechShade®		Make / Model	
Notes	Part #	Cadillac	
	M866	2002 - 2007	CTS / CTS-V
	M1164	2008 - 2010	CTS / CTS-V
<i>Fits Coupe</i>	M1277	2011 - 2012	CTS / CTS-V
<i>Fits Sedan</i>	M1164	2011 - 2012	CTS / CTS-V
	M1041	2006 - 2011	DTS
	M1027	2001 - 2006	Escalade
	M1109	2007 - 2012	Escalade
	M1027	2003 - 2006	Escalade ESV
	M1109	2007 - 2012	Escalade ESV
	M1027	2002 - 2006	Escalade EXT
	M1109	2007 - 2012	Escalade EXT
	M157	2004 - 2009	SRX
	M1236	2010 - 2012	SRX
	M1042	2005 - 2011	STS / STS-V
<b>Chevrolet</b>			
	M1027	2002 - 2006	Avalanche
	M1109	2007 - 2012	Avalanche
	M161	2004 - 2010	Aveo
	M1298	2011 - 2011	Aveo
	M1230	2010 - 2012	Camaro
	M978	1995 - 2005	Cavalier
	M162	2005 - 2010	Cobalt
	M165	2004 - 2012	Colorado
	M1044	2005 - 2012	Corvette
	M1286	2011 - 2012	Cruze
	M164	2004 - 2009	Equinox
	M1226	2010 - 2012	Equinox
	M926	1996 - 2011	Express
	M212	2006 - 2011	HHR
	M1091	2000 - 2005	Impala
	M1117	2006 - 2011	Impala
	M1010	2004 - 2007	Malibu
	M1173	2008 - 2011	Malibu
	M1010	2004 - 2007	Malibu Maxx
	M890	2000 - 2007	Monte Carlo
	M1027	1999 - 2006	Silverado
<i>Fits classic bodystle (old bodystyle)</i>	M1027	2007 - 2007	Silverado
<i>Fits new bodystle</i>	M1109	2007 - 2007	Silverado
	M1109	2008 - 2012	Silverado
	M1348	2012 +	Sonic
	M1027	2000 - 2006	Suburban
	M1109	2007 - 2011	Suburban
	M1027	2000 - 2006	Tahoe
	M1109	2007 - 2012	Tahoe
	M839	2002 - 2009	TrailBlazer
	M067	2009 - 2012	Traverse
	M1045	2005 - 2009	Uplander
	M927	1997 - 2005	Venture
<b>Chrysler</b>			
	M1300	2011 - 2011	200
	M1021	2005 - 2009	300
	M1311	2011 - 2011	300
	M1018	2007 - 2010	Aspen
	M101	2004 - 2009	Crossfire
	M118	2001 - 2003	PT Cruiser
<i>Fits Sedan</i>	M118	2004 - 2010	PT Cruiser
<i>Fits Convertible</i>	M177	2004 - 2010	PT Cruiser
<i>Fits Sedan</i>	M1126	2007 - 2010	Sebring
<i>Fits Convertible</i>	M1169	2007 - 2010	Sebring



Make / Model	Year	Part #	TechShade®	Notes
<b>Chrysler (continued)</b>				
Town & Country Van	1996 - 2007	M976		
Town & Country Van	2008 - 2012	M1172		
<b>Dodge</b>				
Avenger	2008 - 2011	M1142		
Caliber	2007 - 2012	M251		
Challenger	2008 - 2011	M063		
Charger	2006 - 2010	M181		
Charger	2011 - 2011	M1299		
Dakota	2005 - 2011	M1131		
Durango	2004 - 2010	M1018		
Durango	2011 - 2012	M1292		
Grand Caravan	1996 - 2007	M976		
Grand Caravan	2008 - 2012	M1172		
Journey	2009 - 2012	M1182		
Magnum	2004 - 2009	M181		
Neon	2000 - 2005	M994		
Nitro	2007 - 2011	M1128		
Ram Truck	2002 - 2008	M919		
Ram Truck 1500	2009 - 2011	M1194		
Ram Truck 2500/3500	2010 - 2011	M1194		<i>Fits Crew Cab</i>
Ram Truck 2500/3500	2010 - 2011	M1194		<i>Fits Regular Cab</i>
Ram Truck 2500/3500	2010 - 2011	M1264		<i>Fits Mega Cab</i>
Sprinter	2003 - 2006	M041		
Sprinter	2007 - 2011	M061		<i>Fits Cargo Van</i>
Sprinter	2007 - 2011	M073		<i>Fits Passenger Van</i>
Stratus	2002 - 2006	M861		<i>Fits Sedan</i>
Stratus	2002 - 2006	M860		<i>Fits Coupe</i>
<b>Ferrari</b>				
599 GTB	2007 - 2012	M070		
California	2010 - 2012	M1234		
F430	2005 - 2008	M097		
<b>Ford</b>				
Crown Victoria	1992 - 2011	M903		
Econoline E-Series	1992 - 2011	M837		
Edge	2007 - 2010	M183		
Edge	2011 - 2012	M1284		
Escape	2000 - 2007	M302		
Escape	2008 - 2012	M310		
Excursion	1999 - 2005	M916		
Expedition	2003 - 2012	M920		
Explorer	2002 - 2005	M1092		
Explorer	2006 - 2010	M1107		
Explorer	2011 - 2012	M1291		
Explorer Sport	1999 - 2003	M1087		
Explorer Sport Trac	1999 - 2005	M1087		
Explorer Sport Trac	2007 - 2010	M1107		
F-150	2004 - 2008	M937		
F-150	2009 - 2012	M1196		
F-250/F-350/F-450/F-550	1999 - 2007	M916		
F-250/F-350/F-450/F-550	2008 - 2012	M1147		
Fiesta	2011 - 2012	M1260		
Five Hundred	2005 - 2007	M184		
Flex	2009 - 2012	M1188		
Focus	2000 - 2007	M918		
Focus	2008 - 2011	M1166		
Focus	2012 - 2012	M1317		
Freestar	2004 - 2007	M972		
Freestyle	2005 - 2007	M1053		
Fusion	2006 - 2012	M225		

TechShade®		Year	Make / Model
Notes	Part #		Ford (continued)
	M1051	2005 - 2009	Mustang
	M1051	2005 - 2009	Mustang
	M1213	2010 - 2011	Mustang
	M985	1998 - 2011	Ranger
	M982	1996 - 2007	Taurus
	M184	2008 - 2009	Taurus
	M1237	2010 - 2012	Taurus
	M1053	2008 - 2009	Taurus X
	M1050	2002 - 2005	Thunderbird
	M1232	2010 - 2011	Transit Connect
<b>GMC</b>			
	M290	2007 - 2012	Acadia
	M165	2004 - 2012	Canyon
	M839	2002 - 2006	Envoy
	M839	2002 - 2006	Envoy XL
	M926	1996 - 2011	Savana
	M1027	1999 - 2006	Sierra
	M1109	2007 - 2012	Sierra
	M1250	2010 - 2012	Terrain
	M1027	2000 - 2006	Yukon
	M1109	2007 - 2011	Yukon
	M1027	2001 - 2006	Yukon Denali
	M1109	2007 - 2011	Yukon Denali
	M1027	2001 - 2006	Yukon Denali XL
	M1109	2007 - 2011	Yukon Denali XL
	M1027	2000 - 2006	Yukon XL
	M1109	2007 - 2011	Yukon XL
<b>Honda</b>			
<i>Fits Sedan</i>	M882	2003 - 2007	Accord
<i>Fits Coupe</i>	M886	2003 - 2007	Accord
<i>Fits Sedan</i>	M1170	2008 - 2012	Accord
<i>Fits Coupe</i>	M1171	2008 - 2012	Accord
	M814	2001 - 2005	Civic
	M872	2003 - 2005	Civic
<i>Fits Coupe</i>	M1103	2006 - 2011	Civic
<i>Fits Sedan</i>	M1097	2006 - 2011	Civic
	M871	2002 - 2005	Civic Si
	M850	2002 - 2006	CR-V
	M1122	2007 - 2011	CR-V
	M1354	2012 +	CR-V
	M1245	2010 - 2012	Crosstour
	M883	2003 - 2008	Element
	M1209	2009 - 2011	Element
	M245	2007 - 2008	Fit
	M1192	2009 - 2012	Fit
	M799	2001 - 2006	Insight
	M1208	2010 - 2011	Insight
	M1067	2005 - 2010	Odyssey
	M1278	2011 - 2012	Odyssey
	M869	2003 - 2008	Pilot
	M1185	2009 - 2012	Pilot
	M187	2006 - 2011	Ridgeline
	M786	2000 - 2010	S2000
<b>Hummer</b>			
	M029	2003 - 2010	H2
	M029	2005 - 2010	H2 SUT
	M050	2006 - 2010	H3
	M050	2009 - 2010	H3T

Make / Model	Year	Part #	TechShade®
<b>Hyundai</b>			
Accent	2003 - 2005	M934	
Accent	2006 - 2011	M1186	
Azera	2006 - 2011	M231	
Elantra	2000 - 2006	M794	
Elantra	2007 - 2010	M1124	
Elantra	2011 - 2012	M1288	
Elantra Touring	2009 - 2011	M1251	
Entourage	2007 - 2010	M255	
Genesis	2009 - 2012	M062	<i>Fits Sedan</i>
Genesis	2010 - 2012	M1205	<i>Fits Coupe</i>
Santa Fe	2001 - 2006	M827	
Santa Fe	2007 - 2012	M1118	
Sonata	1995 - 2005	M690	
Sonata	2006 - 2010	M1079	
Sonata	2011 - 2012	M1252	
Tiburon	2003 - 2010	M881	
Tucson	2005 - 2009	M336	
Tucson	2010 - 2012	M1253	
Veracruz	2007 - 2011	M295	
XG300	2001 - 2001	M827	
XG350	2002 - 2005	M867	
<b>Infiniti</b>			
EX35	2008 - 2012	M322	
FX35	2003 - 2008	M137	
FX35	2009 - 2012	M1190	
FX45	2003 - 2008	M137	
FX50	2009 - 2012	M1190	
G25	2011 - 2011	M1154	
G35	2003 - 2006	M870	<i>Fits Sedan</i>
G35	2003 - 2007	M891	<i>Fits Coupe</i>
G35	2007 - 2008	M1154	<i>Fits Sedan</i>
G37	2008 - 2011	M1156	<i>Fits Coupe</i>
G37	2009 - 2011	M1154	<i>Fits Sedan</i>
G37	2010 - 2011	M1240	<i>Fits Convertible</i>
M	2011 - 2012	M1259	
M35	2006 - 2010	M1078	
M45	2003 - 2005	M884	
M45	2006 - 2010	M1078	
Q45	2002 - 2006	M841	
QX56	2004 - 2010	M178	
QX56	2011 - 2012	M1267	
<b>Isuzu</b>			
Ascender	2003 - 2008	M304	
Axiom	2002 - 2004	M303	
i-Series	2006 - 2009	M165	
<b>Jaguar</b>			
S-Type	2000 - 2008	M779	
X-Type	2002 - 2008	M852	
XJ Series	2004 - 2009	M935	
XJ Series	2011 - 2011	M1257	
XK Series	1997 - 2006	M143	<i>Fits Coupe</i>
XK Series	1997 - 2006	M144	<i>Fits Convertible</i>
<b>Jeep</b>			
Commander	2006 - 2010	M1096	
Compass	2007 - 2011	M273	
Grand Cherokee	2005 - 2010	M1069	
Grand Cherokee	2011 - 2012	M1270	
Liberty	2002 - 2007	M849	
Liberty	2008 - 2012	M1157	

TechShade®		Year	Make / Model
Notes	Part #		Jeep (continued)
	M282	2007 - 2011	Patriot
	M1029	1997 - 2006	Wrangler
	M1141	2007 - 2012	Wrangler
			<b>Kia</b>
	M158	2004 - 2009	Amanti
	M065	2009 - 2010	Borrego
<i>Fits Koup</i>	M1273	2010 - 2012	Forte
<i>Fits Sedan</i>	M1243	2010 - 2012	Forte
	M128	2001 - 2006	Optima
	M236	2007 - 2010	Optima
	M1301	2011 - 2011	Optima
	M124	2001 - 2005	Rio
	M259	2006 - 2011	Rio
<i>Fits Sedan</i>	M1351	2012 +	Rio
	M259	2006 - 2011	Rio 5
<i>Fits Hatchback</i>	M1351	2012 +	Rio 5
	M291	2007 - 2011	Rondo
	M130	2002 - 2005	Sedona
	M240	2006 - 2012	Sedona
	M135	2003 - 2009	Sorento
	M1256	2011 - 2011	Sorento
	M1206	2010 - 2012	Soul
	M129	2001 - 2005	Spectra
	M242	2006 - 2009	Spectra
	M129	2001 - 2005	Spectra5
	M242	2006 - 2009	Spectra5
	M232	2005 - 2010	Sportage
	M1271	2011 - 2012	Sportage
			<b>Land Rover</b>
	M1359	2012 +	Evogue
	M862	2002 - 2005	Freelander
	M1143	2008 - 2011	LR2
	M1065	2005 - 2009	LR3 / Discovery 3
	M1258	2011 - 2011	LR4 / Discovery 4
	M880	2003 - 2011	Range Rover
	M1108	2006 - 2011	Range Rover Sport
			<b>Lexus</b>
	M1304	2011 - 2011	CT 200h
	M858	2002 - 2003	ES 300
	M858	2004 - 2006	ES 330
	M1114	2007 - 2012	ES 350
	M743	1998 - 2005	GS 300
	M1077	2006 - 2010	GS 300
	M1362	2013 +	GS350
	M1362	2013 +	GS450h
	M1077	2007 - 2011	GS 350 / GS 460
	M743	1998 - 2000	GS 400
	M743	2001 - 2005	GS 430
	M1077	2006 - 2010	GS 430
	M1077	2007 - 2011	GS 450h
	M897	2003 - 2009	GX
	M1248	2010 - 2012	GX
	M1233	2010 - 2011	HS
<i>Fits IS300</i>	M805	2001 - 2005	IS
<i>Fits IS350</i>	M1199	2006 - 2012	IS
<i>Fits IS250</i>	M1104	2006 - 2012	IS
<i>Fits ISF</i>	M1217	2008 - 2012	IS
<i>Fits IS350C</i>	M1254	2010 - 2012	IS
<i>Fits IS250C</i>	M1222	2010 - 2012	IS

Make / Model	Year	Part #	TechShade®	Notes
<b>Lexus (continued)</b>				
LS	2007 - 2012	M1129		
LS 430	2001 - 2006	M815		
LX 470	1998 - 2007	M747		
LX 570	2008 - 2011	M1177		
RX	2010 - 2012	M1203		
RX 350	2007 - 2009	M908		
RX 400h	2006 - 2009	M908		
SC 430	2002 - 2011	M833		
<b>Lincoln</b>				
Aviator	2003 - 2005	M095		
LS	2000 - 2006	M1037		
Mark LT	2006 - 2008	M937		
MKS	2009 - 2011	M064		
MKX	2007 - 2010	M183		
MKX	2011 - 2011	M1284		
MKZ	2007 - 2012	M278		
Navigator	2003 - 2011	M920		
Town Car	1998 - 2011	M913		
Zephyr	2006 - 2006	M225		
<b>Maserati</b>				
Gran Turismo	2007 - 2012	M055		
Quattroporte	2004 - 2012	M1052		
<b>Mazda</b>				
CX-7	2007 - 2011	M257		
CX-9	2007 - 2012	M287		
Mazda2	2011 - 2012	M1263		
Mazda3	2004 - 2009	M1017		
Mazda3	2010 - 2012	M1214		
Mazda5	2006 - 2010	M096		
Mazda6	2003 - 2008	M1009		
Mazda6	2009 - 2012	M1158		
MPV	2000 - 2006	M782		
MX-5 Miata	2006 - 2011	M1269		
RX-8	2004 - 2011	M931		
Tribute	2001 - 2007	M302		
Tribute	2008 - 2011	M310		
<b>Mercedes-Benz</b>				
C-Class	2001 - 2007	M875		<i>Fits Coupe</i>
C-Class	2001 - 2007	M817		<i>Fits Sedan</i>
C-Class	2008 - 2011	M1159		
CL-Class	2000 - 2006	M811		
CL-Class	2007 - 2011	M1146		
CLK-Class	2003 - 2009	M896		
CLS-Class	2006 - 2010	M047		
E-Class	2003 - 2009	M892		
E-Class	2010 - 2012	M1224		<i>Fits Sedan</i>
E-Class	2010 - 2012	M1225		<i>Fits Coupe</i>
G-Class	2002 - 2011	M120		
GL-Class	2007 - 2011	M253		
GLK-Class	2009 - 2011	M066		
M-Class	2012 +	M1350		
ML-Class	2006 - 2011	M1076		
ML-Class	2012 +	M1305		<i>Fits ML63 AMG only</i>
R-Class	2006 - 2010	M219		
S-Class	2000 - 2006	M444		
S-Class	2007 - 2012	M1119		
SL-Class	2010 - 2010	M1191		
<b>Mercury</b>				
Grand Marquis	1992 - 2010	M903		

TechShade®		Year	Make / Model
Notes	Part #		Mercury (continued)
	M302	2005 - 2007	Mariner
	M310	2008 - 2010	Mariner
	M225	2006 - 2010	Milan
	M184	2005 - 2007	Montego
	M972	2004 - 2007	Monterey
	M1092	2002 - 2005	Mountaineer
	M1107	2006 - 2010	Mountaineer
	M982	1996 - 2007	Sable
	M184	2008 - 2009	Sable
			<b>Mini</b>
	M132	2008 - 2012	Clubman
<i>Fits Coupe</i>	M132	2002 - 2012	Cooper / Cooper S
<i>Fits Convertible</i>	M211	2005 - 2012	Cooper / Cooper S
<i>Fits John Cooper Works bodystyle</i>	M1297	2011 - 2012	Cooper / Cooper S
	M1295	2011 - 2011	Countryman
			<b>Mitsubishi</b>
	M756	1997 - 2005	Diamante
<i>Fits Convertible</i>	M1098	2000 - 2005	Eclipse
<i>Fits Spyder</i>	M1098	2000 - 2005	Eclipse
	M784	2000 - 2005	Eclipse
	M1093	2006 - 2011	Eclipse
	M145	2004 - 2011	Endeavor
	M1019	2004 - 2011	Galant
	M855	2002 - 2007	Lancer
	M1144	2008 - 2012	Lancer
	M806	2001 - 2006	Montero
	M924	2003 - 2006	Outlander
	M1127	2007 - 2012	Outlander
	M220	2006 - 2009	Raider
			<b>Nissan</b>
	M351	2002 - 2008	350Z
	M351	2002 - 2008	350Z
	M1197	2010 - 2011	370Z
	M1022	2005 - 2006	Altima
<i>Fits Sedan</i>	M1132	2007 - 2012	Altima
<i>Fits Coupe</i>	M1167	2008 - 2012	Altima
	M152	2004 - 2011	Armada
	M1210	2009 - 2011	Cube
	M1073	2005 - 2012	Frontier
	M1282	2011 - 2011	Juke
	M929	2004 - 2008	Maxima
	M1189	2009 - 2012	Maxima
	M136	2003 - 2008	Murano
	M215	2009 - 2012	Murano
	M1070	2005 - 2012	Pathfinder
	M996	2004 - 2010	Quest
	M1303	2011 - 2011	Quest
	M316	2008 - 2012	Rogue
	M804	2000 - 2006	Sentra
	M1123	2007 - 2012	Sentra
	M152	2004 - 2011	Titan
	M272	2007 - 2011	Versa
<i>Fits Hatchback</i>	M1360	2012 +	Versa
	M1075	2005 - 2012	Xterra
			<b>Pontiac</b>
	M928	2001 - 2005	Aztek
	M1008	2000 - 2005	Bonneville
	M292	2007 - 2009	G5
<i>Fits Convertible</i>	M265	2005 - 2010	G6



Make / Model	Year	Part #	TechShade®
<b>Pontiac (continued)</b>			
G6	2005 - 2010	M185	<i>Fits Coupe</i>
G6	2005 - 2010	M185	<i>Fits Sedan</i>
G8	2008 - 2009	M224	
Grand Am	1999 - 2005	M986	
Grand Prix	2004 - 2009	M1064	
GTO	2004 - 2007	M172	
Montana	1999 - 2005	M927	
Solstice	2006 - 2009	M221	
Sunfire	1995 - 2005	M978	
Torrent	2006 - 2009	M164	
Vibe	2002 - 2008	M387	
Vibe	2009 - 2010	M1181	
<b>Porsche®</b>			
911®	2005 - 2012	M1198	
Boxster®	2005 - 2012	M196	
Cayenne®	2003 - 2010	M146	
Cayenne®	2011 - 2012	M1265	
Cayman®	2005 - 2012	M258	
Panamera®	2010 - 2012	M1241	
<b>Saab</b>			
9-3	2003 - 2009	M921	<i>Fits Sedan</i>
9-3	2005 - 2009	M1025	<i>Fits Convertible</i>
9-4X	2011 - 2012	M1353	
9-5	1999 - 2009	M569	
9-2X	2005 - 2006	M843	
9-7X	2005 - 2009	M191	
<b>Saturn</b>			
Astra	2008 - 2009	M323	<i>Fits Sedan</i>
Astra	2008 - 2009	M329	<i>Fits Coupe</i>
Aura	2006 - 2009	M277	
Ion	2003 - 2007	M894	
L200	2001 - 2003	M763	
L300	2001 - 2006	M763	
LW300	2001 - 2004	M763	
Outlook	2007 - 2010	M320	
Relay	2005 - 2007	M1045	
Sky	2007 - 2009	M221	
Vue	2002 - 2007	M863	
Vue	2008 - 2010	M1161	
<b>Scion</b>			
tC	2005 - 2010	M182	
xA	2004 - 2007	M149	
xB	2004 - 2007	M150	
xB	2008 - 2011	M298	
xD	2008 - 2011	M312	
<b>Smart</b>			
fortwo	2008 - 2011	M057	
<b>Subaru</b>			
Baja	2003 - 2006	M787	
Forester	2003 - 2008	M879	
Forester	2009 - 2011	M1180	
Impreza	2002 - 2007	M843	
Impreza	2008 - 2010	M1163	
Impreza	2011 - 2011	M1308	
Impreza	2012 +	M1355	
Legacy	2005 - 2009	M1023	
Legacy	2010 - 2011	M1227	
Outback	2005 - 2009	M1023	
Outback	2010 - 2012	M1227	

TechShade®		Year	Make / Model
Notes	Part #		
	M190	2006 - 2011	Tribeca
			<b>Suzuki</b>
	M874	2002 - 2007	Aerio
	M1211	2009 - 2012	Equator
	M179	2004 - 2007	Forenza
	M765	1999 - 2005	Grand Vitara
	M1099	2006 - 2011	Grand Vitara
	M213	2005 - 2007	Reno
	M279	2007 - 2011	SX4
	M180	2004 - 2007	Verona
	M765	1999 - 2004	Vitara
	M840	2001 - 2006	XL-7
			<b>Toyota</b>
	M885	2003 - 2009	4Runner
	M1246	2010 - 2012	4Runner
	M1074	2005 - 2011	Avalon
	M853	2002 - 2006	Camry
	M1112	2007 - 2011	Camry
	M156	2004 - 2008	Camry Solara
	M790	2000 - 2005	Celica
	M865	2003 - 2008	Corolla
	M1178	2009 - 2011v	Corolla
	M352	2002 - 2008	Matrix
	M1179	2009 - 2011	Matrix
	M370	2000 - 2005	MR2 Spyder
	M1013	2004 - 2009	Prius
	M1215	2010 - 2011	Prius
	M818	2001 - 2005	RAV4
	M1101	2006 - 2011	RAV4
	M845	2001 - 2007	Sequoia
	M1175	2008 - 2012	Sequoia
	M1068	2005 - 2011	Tacoma
	M783	1999 - 2004	Tundra
	M1024	2005 - 2006	Tundra
	<i>Fits Regular Cab &amp; Double Cab</i>	2005 - 2006	Tundra
	M1024	2005 - 2006	Tundra
	M1138	2007 - 2012	Tundra
	M092	2009 - 2011	Venza
	M243	2007 - 2011	Yaris
	M1349	2012 +	Yaris
			<b>Volkswagen</b>
	M1195	2009 - 2012	CC
	M275	2007 - 2011	Eos
	M1111	2008 - 2008	Golf
	M1111	2010 - 2011	Golf / GTI
	M1056	2006 - 2010	Jetta / GLI
	M1280	2011 - 2011	Jetta / GLI
	M268	1998 - 2010	New Beetle
	M1095	2006 - 2010	Passat
	M167	2004 - 2006	Phaeton
	M1111	2005 - 2009	Rabbit / GTI / R32
	M069	2009 - 2011	Routan
	M059	2009 - 2011	Tiguan
	M151	2003 - 2007	Touareg
	M321	2008 - 2010	Touareg
	M1312	2011 - 2011	Touareg
			<b>Volvo</b>
	M297	2007 - 2012	C30
	M299	2007 - 2012	C30

Make / Model	Year	TechShade®	
Volvo (continued)		Part #	Notes
C70	1998 - 2005	M415	
C70	2006 - 2011	M1102	
S40	2005 - 2011	M1020	
S60	2001 - 2009	M822	
S60	2011 - 2012	M1287	
S80	1999 - 2006	M443	
S80	2007 - 2012	M1133	
V50	2004 - 2011	M1020	
V70	2001 - 2007	M808	
V70	2008 - 2010	M1176	
XC	2001 - 2002	M808	
XC60	2010 - 2012	M1207	
XC70	2008 - 2012	M1176	
XC90	2003 - 2012	M864	

**Check WeatherTechDirect.com  
for New Applications**

**(PDF and Excel Available for Download)**

TechShade®

Year

Make / Model

Notes    Part #

# Check WeatherTechDirect.com for New Applications

(PDF and Excel Available for Download)

# Additional Accessories

ClearCover®



ClearFrame™



PlateFrame™



Pet Barrier



RackSack®



LampGard®



WeatherTech®  
BatteryCharger



TechFloor™



TechCare™



Item	Item Options	Part Number
ClearCover®	Black	60020
	White	60021
	Red	60022
	Chrome	60023
	Brushed Stainless	60027
ClearFrame™	Black	63020
	White	63021
	Red	63022
	Chrome	63023
	Brushed Stainless	63027
PlateFrame™	Black	61020
Pet Barrier	Pet Barrier	60010
	Extension Panel	60012
RackSack®	RackSack®	60001
LampGard®	See <a href="http://WeatherTechDirect.com">WeatherTechDirect.com</a>	
BatteryCharger	Model 200	8BWBCHR200
TechFloor™	See <a href="http://TechFloor.com">TechFloor.com</a>	
TechCare™	Coming Soon!	



**WeatherTech<sup>®</sup>**  
**Marketing Materials**  
**Order Form**

Detach form and fax it to  
MacNeil Automotive at

**630-769-0300**



# Order Form

Please take advantage of this easy-to-use order form by filling in the quantities of the products you'd like to order and fax it to your local distributor or MacNeil Automotive today! If you do not have a distributor, fax it to MacNeil Automotive at **630-769-0300**, or call one of our WeatherTech® Specialists.

Name \_\_\_\_\_

Company Name \_\_\_\_\_

Address \_\_\_\_\_

City \_\_\_\_\_ State \_\_\_\_\_ Zip \_\_\_\_\_

Phone \_\_\_\_\_ Fax \_\_\_\_\_

E-mail \_\_\_\_\_ P.O. Number \_\_\_\_\_

Part Number	Item	Quantity
99910	Application Guide	_____
99912	All-Weather Floor Mat Header	_____
R AVM MRH2	All-Vehicle Mat Header	_____
99920	Distributor Catalog	_____
99920S	Distributor Catalog Spanish	_____
99921	Jobber Price Guide	_____
99932	Distributor Brochure	_____
99934	ClearCover®, ClearFrame™, PlateFrame™ Rack	_____
99950-AW	WeatherTech® All-Weather Floor Mat Rolling Waterfall Rack	_____
99950-AVM	WeatherTech® All-Vehicle Mat Rolling Waterfall Rack	_____
6BBAN1	WeatherTech® Automotive Accessories 48" x 10½"	_____
6GR1	WeatherTech® Product Use Guide	_____
99979-CL	Cargo Liners Counter Top Card	_____
99979-FL	FloorLiner™ Counter Top Card	_____
99979-FLCLSP	FloorLiner™ and Cargo Liner Counter Top Card (Spanish)	_____
99979-FM	All-Weather Floor Mat Counter Top Card	_____
99979-MF	MudFlap Counter Top Card	_____
99979-SWD	Side Window Deflector Counter Top Card	_____
99986	Complete Coverage Poster 32" x 21"	_____
99987	Side Window Deflector Box Display	_____
99991	FloorLiner™ Box Display	_____
99992	Cargo Liners Box Display	_____
PDA003WT	All-Weather Floor Mat Counter Top Display	_____
PDA004WT	All-Vehicle Mat Counter Top Display	_____
PDA005WT	FloorLiner™ Counter Top Display	_____
PDA006WT	Cargo Liner Counter Top Display	_____
PDA015	MudFlap Counter Top Display	_____
POSTER-99996	WeatherTech® Distributor Poster 40" x 25"	_____
TRAINING VIDEO	WeatherTech® Training Video	_____
DVD TV SPOTS	Television Commercials DVD	_____
WT CTM 01	WeatherTech® Counter Top Mat 16" x 22"	_____



All-Weather Floor Mat  
Rolling Waterfall Rack  
99950-AW



All-Vehicle Mat  
Rolling Waterfall Rack  
99950-AVM



FloorLiner™ Box Display  
99991



Cargo Liners Box Display  
99992



Side Window Deflector  
Box Display  
99987



All-Weather Floor Mat Header  
99912



All-Vehicle Mat Header  
R AVM MRH2



Counter Top Mat  
WT CTM 01



Complete Coverage  
Poster 32" x 21"  
99986



WeatherTech® Distributor 40" x 25"  
Poster-99996



FloorLiner™ Counter  
Top Display  
PDA005WT



All-Weather Floor Mat  
Counter Top Display  
PDA003WT



All-Vehicle Mat  
Counter Top Display  
PDA004WT



Cargo Liner Counter  
Top Display  
PDA006WT



MudFlap Counter  
Top Display  
PDA015



WeatherTech® Automotive  
Accessories 48" x 10 1/2"  
6BBAN1



All-Weather Floor Mat  
Counter Top Card  
99979-FM



Cargo Liners  
Counter Top Card  
99979-CL



FloorLiner™  
Counter Top Card  
99979-FL



Side Window Deflector  
Counter Top Card  
99979-SWD



MudFlap  
Counter Top Card  
99979-MF



Spanish FloorLiner™  
and Cargo Liners  
Counter Top Card  
99979-FLCLSP



ClearCover®  
ClearFrame™ Rack  
99934




Distributor  
Catalog  
99920



Distributor  
Catalog Spanish  
99920S



Application  
Guide  
99910

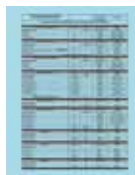

Jobber Price  
Guide  
99921



Distributor  
Brochure  
99932



Product  
Use Guide  
6GR1



WeatherTech®  
Training Video  
TRAINING VIDEO



Television  
Commercials DVD  
DVD TV SPOTS

VIEW EASY INSTALLATION VIDEOS

[weathertech.com/install](http://weathertech.com/install)

\* Red Indicates Product Part Number





**WeatherTech®Direct.com**



---

1 MacNeil Court  
Bolingbrook, IL 60440  
800-943-9250 • 630-769-1500  
fax 630-769-0300

---

99910  
© 2012 by MacNeil IP LLC

**MacNeil**  
AUTOMOTIVE  
PRODUCTS LIMITED