


(F)25-M Mortise Device

Mortise Panic and Fire Exit Device, Metal Door, LHR Shown, RHR Opposite

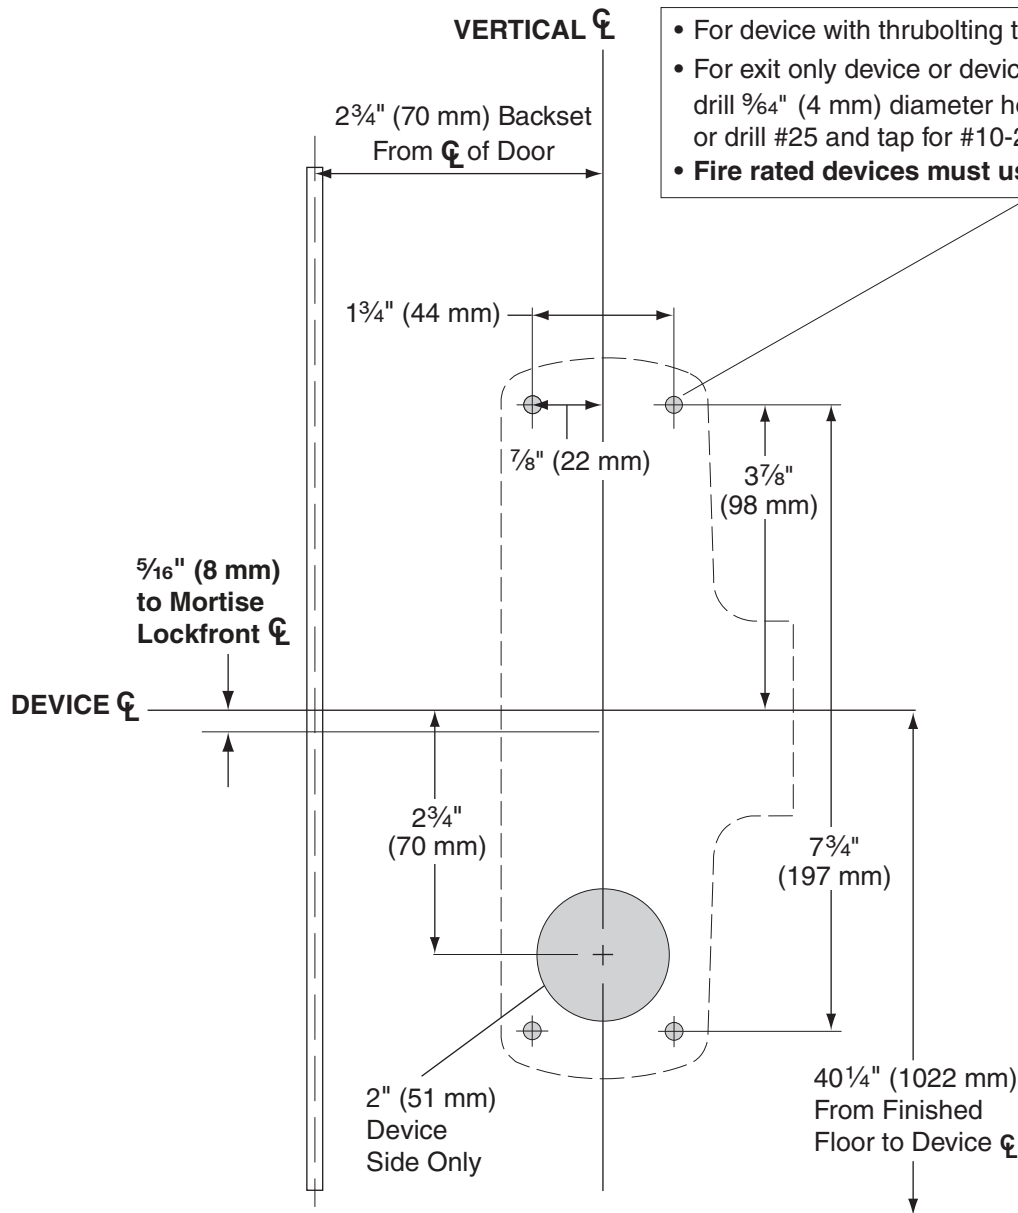

- See Template T-4012 for mortise lock preparation.
- **For doors with existing Mortise Lock preparation, the Device $\mathbb{C}$ is $\frac{5}{16}$ " (8 mm) above the lockfront $\mathbb{C}$**
- For sexbolt preparation, refer to Template T-4014.
- For outside trim, see trim template for door preparation.
- See Master Sheet #0100 for suggested reinforcing.

TEMPLATE

T-1210-a