



Lenovo Thinkpad T500 Trackpad Buttons Replacement

This is a detailed guide on how to replace the trackpad on the Lenovo ThinkPad T500.


Written By: Matthew Fajardo



 **TOOLS:**

- Phillips #0 Screwdriver (1)
 - Spudger (1)
-

Step 1 — Trackpad Buttons

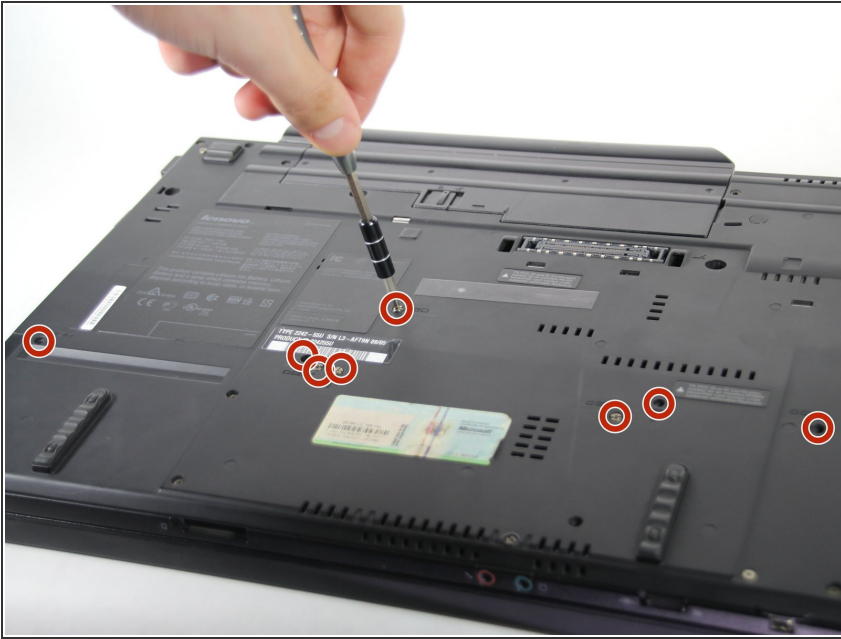


- Remove the eight 14mm screws using the Phillips #0 Screwdriver.

Step 2





- Lift the palm rest panel up.
- ⚠ Be sure to lift the panel **slowly**; there is a ribbon cable attached to the bottom.

Step 3

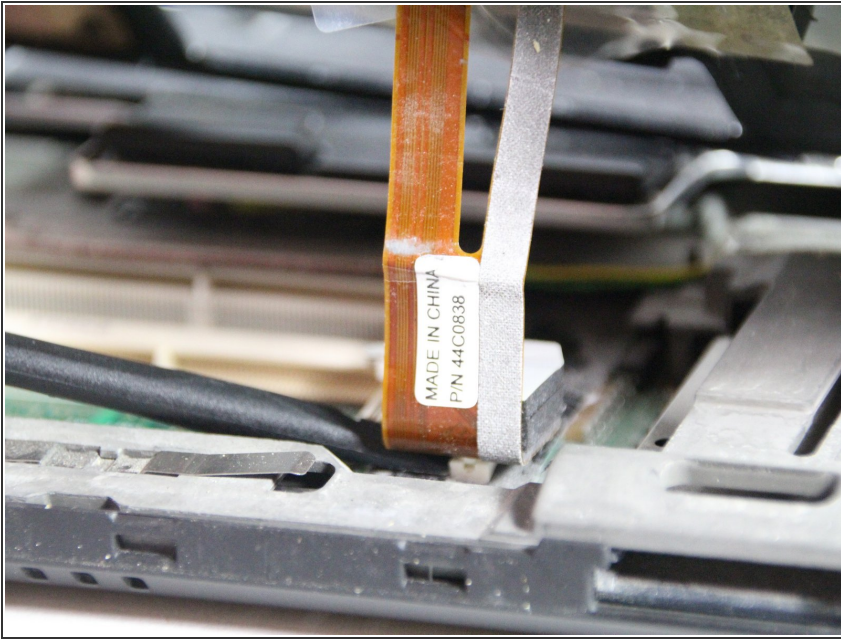



- Use the spudger to disconnect the ribbon cable.

Step 4

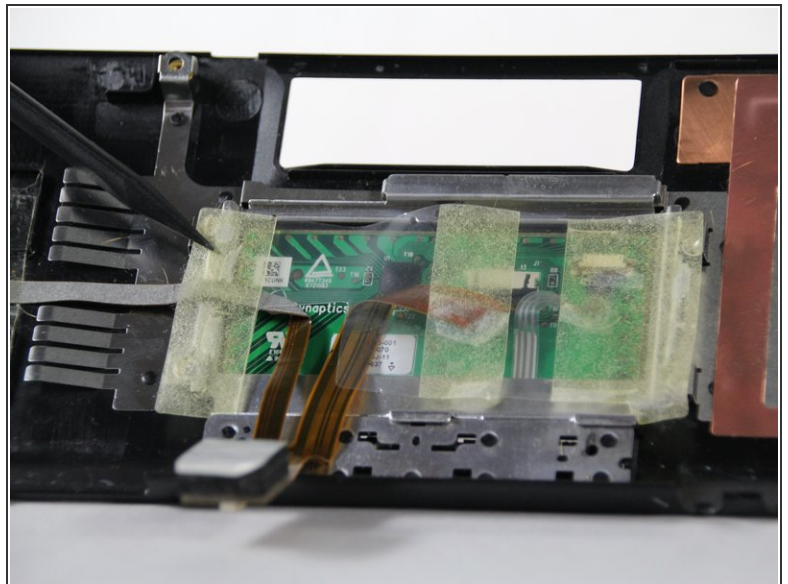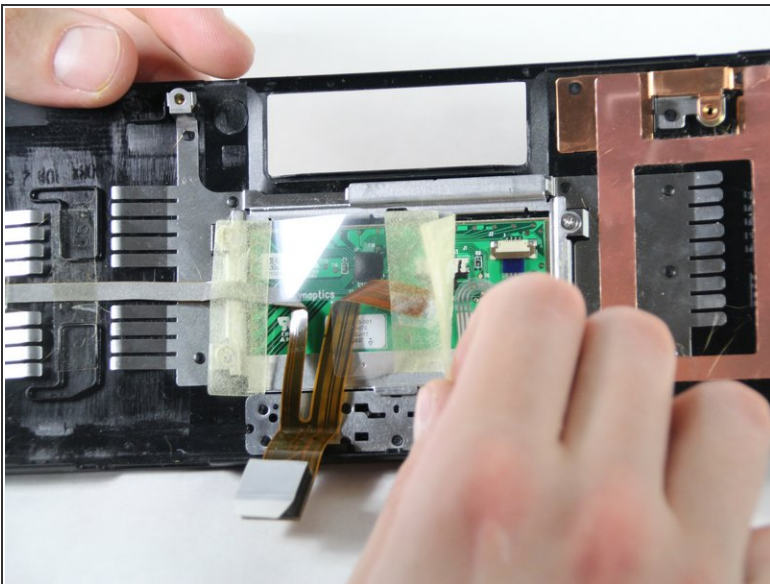



- Remove the tape, using the spudger if necessary.

Step 5

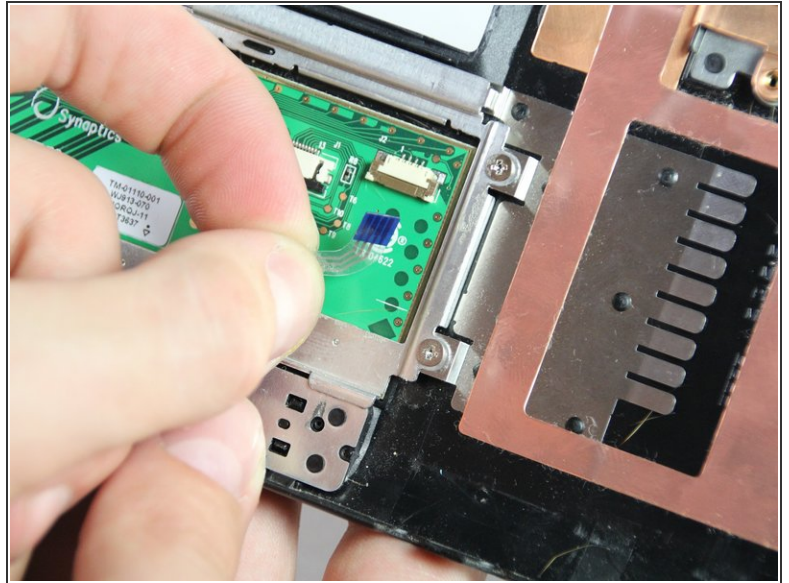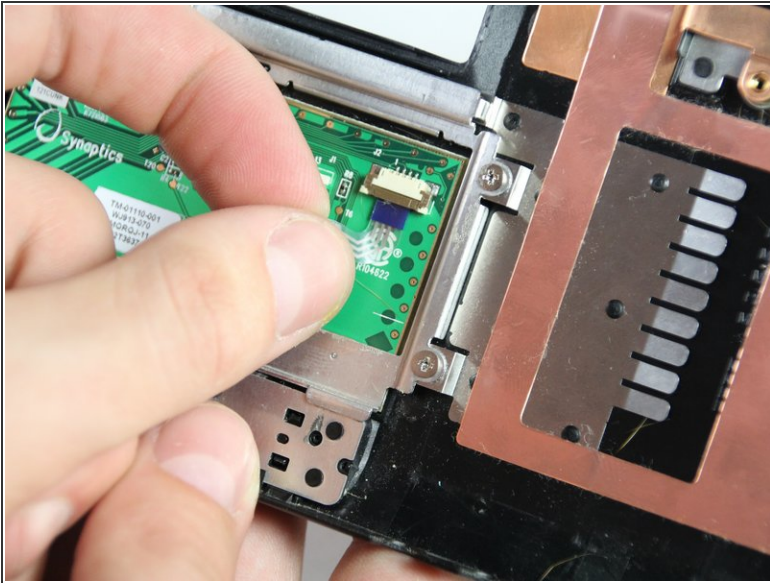



- Disconnect the clear ribbon cable.

Step 6

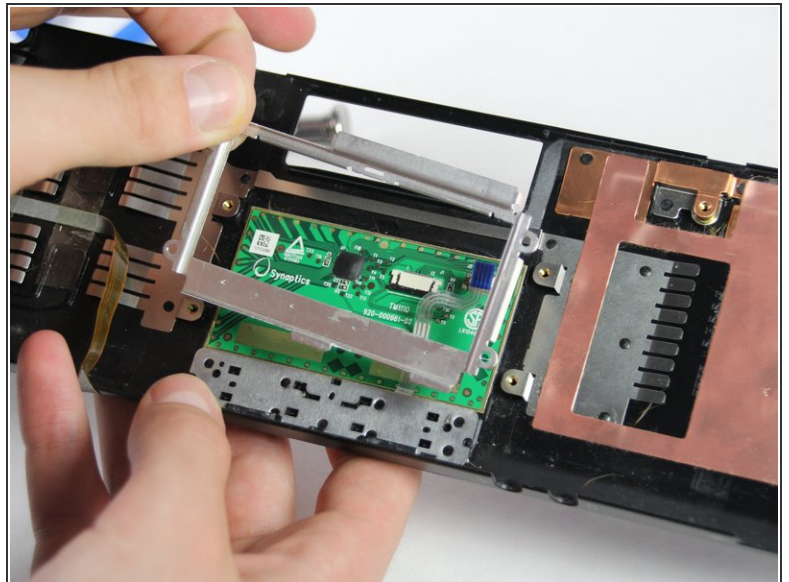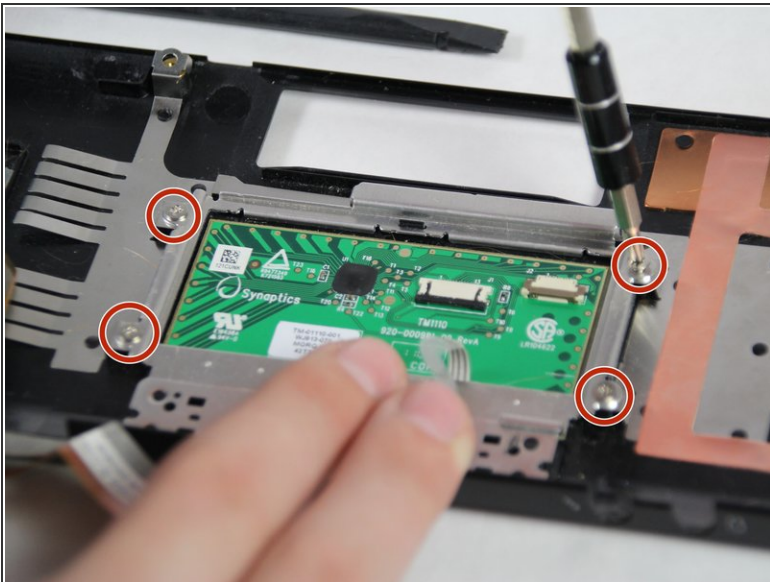

- Use the Phillips #0 Screwdriver to remove the screws of the frame around the trackpad circuit board.

Step 7

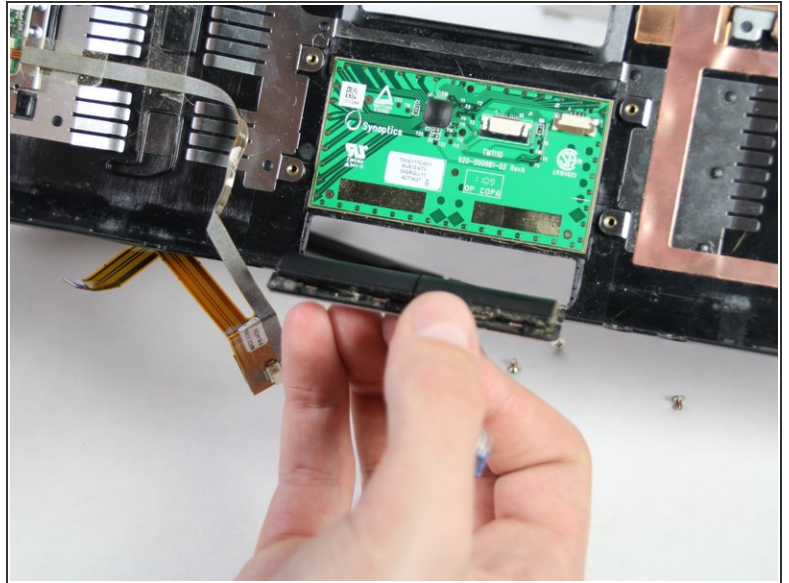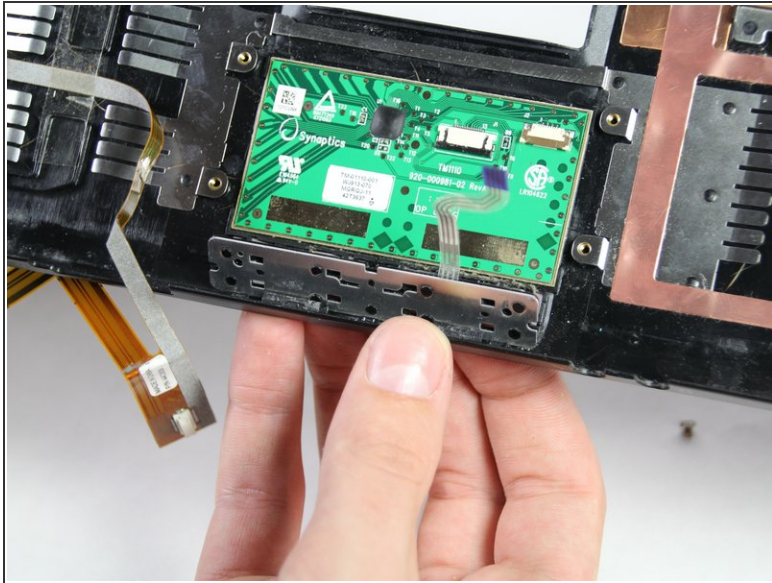

- Remove the trackpad buttons.

To reassemble your device, follow these instructions in reverse order.