

Thule Adapters - Fit Guide

Before installation

- The installation of the adapter must be carried out by a qualified person
- In case you want to install a tent or a panel, make sure that the adapter is well positioned taking the windows, garage and door opening into account
- Check if you have a solid back ground for the installation of the awning adapter
- The adapter must support the awning at the awnings spring arms for a correct and stable mounting. When this is not possible use a full length adapter
- In order to get a watertight installation, use acid free silicone to fill up the drilled holes
- Always read the installation instructions carefully

Select the right adapter

1 Vehicle type



Motorhome



Caravan



Van



Minivan

2 Vehicle brand

Model & Year

2 Select the mounting location and awning type

Wall mounting

- Most common installation
- Flat adapter mostly included

Roof mounting

- On top of the vehicle: more space under the awning
- Better integrated design
- Alternative in case of lack of space or width restrictions
- Caravan rail remains free

Rail mounting


TO 1200:

- Easy installation without adapter
- Not permanent


3 Is there an adapter with brand name available (manufacturer adapter)? If not: choose from the universal adapter range

4 Free space:

On the roof: Only count the straight space between roof curves for the installation of the adapters

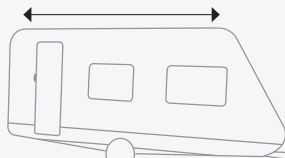

On the wall: Avoid lights and ventilation caps. Make sure the door can open under an opened awning

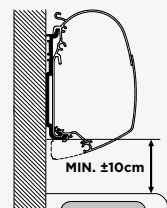


Adapters for wall-mounted awnings

UNIVERSAL

Caravan Rail Luxe


307922 6.00 m: 10 pcs

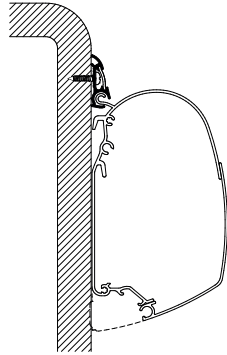

Thule Omnistor: 5200 / 8000 / 2000 / 1200

Caravan Rail


307899 3.00 m: 20 pcs
307908 6.00 m: 20 pcs

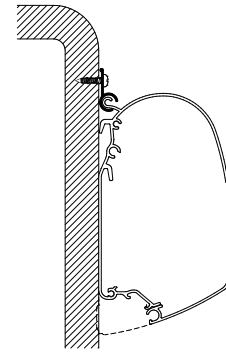

Thule Omnistor: 5200 / 8000 / 2000 / 1200

Flat Adapter


- 307915 40 cm: 5 pcs
- 307909 75 cm: 5 pcs
- 308040 3.00 m
- 308041 3.50 m
- 308042 4.00 m
- 308043 4.50 m
- 308044 5.00 m
- 308046 6.00 m

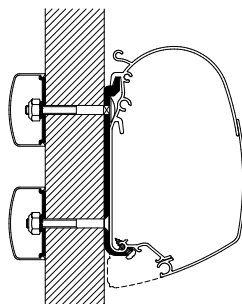

Thule Omnistor: 5200 / 8000 / 4900

High-Top Adapter


- 308005 Set: 1x 8 cm + 2x 30 cm
- 308008 3.00 m
- 308012 4.00 m
- 309960 4.50 m
- 309961 5.50 m

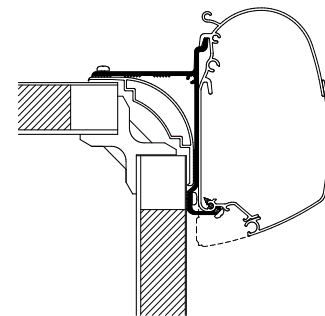

Thule Omnistor: 5200 / 8000 / 4900

Omni Wall


307905 Set: 2x 8 cm + 1x 4 cm

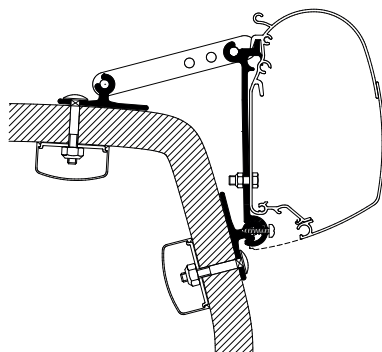

Thule Omnistor: 5200 / 4900 / 2000

Omni Roof

307910 Set: 3x 8 cm

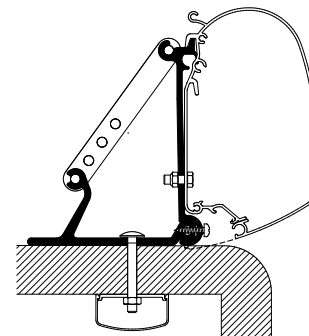


Thule Omnistor: 5200 / 4900 / 2000

Adapters for wall-mounted awnings

UNIVERSAL

Omni Auto

307912 Set: 2x 8 cm

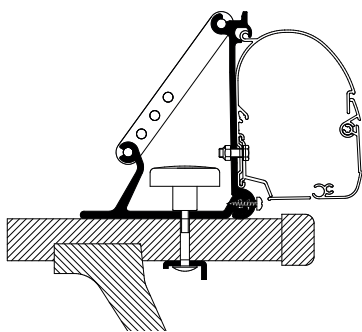


Thule Omnistor: 5200 / 8000 / 2000



Rail Bracket

309854 4.00 m: 10 pcs
309855 4.50 m: 10 pcs

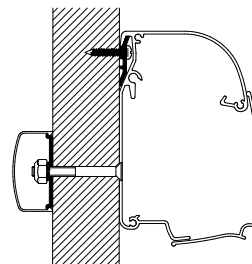


Thule Omnistor: 5200 / 8000 / 4900

Adapters for wall-mounted awnings

MANUFACTURER

Adria Coral


308007 Set: 2x 30 cm + 2x 8 cm

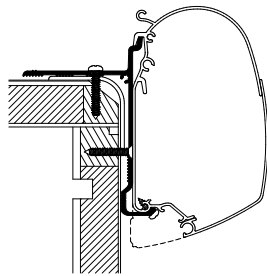

Thule Omnistor: 5200 / 8000 / 4900

Bürstner Adapter 2017


301680 Set: 2x 40 cm + 2x 8 cm

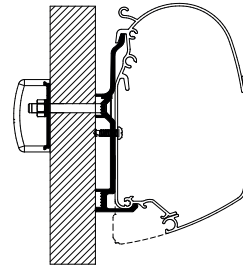

Thule Omnistor: 5200

Bürstner Adapter


- 308025 Set: 2x 35 cm + 1x 8 cm
- 308027 3.00 m
- 308028 3.50 m
- 308029 4.00 m
- 308030 4.50 m
- 308031 5.00 m
- 308032 5.50 m

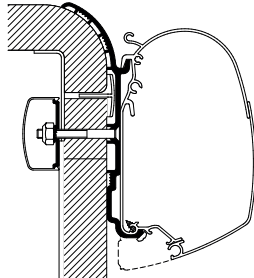

Thule Omnistor: 5200 / 8000 / 4900

Bürstner Ixeo


- 309978 Model T680 - 4.00 m
- 309979 Model T728/734 - 4.50 m
- + Dethleffs 4-Travel

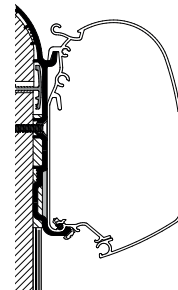

Thule Omnistor: 5200 / 8000 / 4900

Carado | Sunlight


309983 Set: 1x 17.5 cm + 1x 4 cm + 1x 40 cm

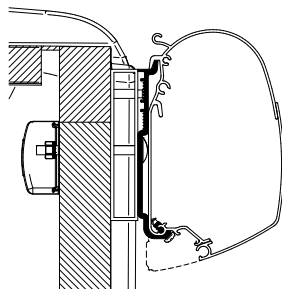

Thule Omnistor: 5200 / 8000 / 4900

Dethleffs Globebus

- 308934 Set: 2x 4 cm + 2x 17.5 cm - TO 5200 (4.00 m)
- 308004 Set: 2x 8 cm + 2x 40 cm - TO 8000 (4.00 m - 6.00 m)
- 308002 3.00 m
- 308003 3.50 m

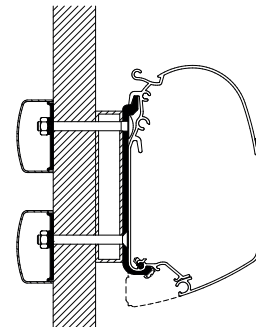


Thule Omnistor: 5200 / 8000 / 4900

Adapters for wall-mounted awnings

MANUFACTURER

Eriba Touring ≤ 2007


307882 Set: 3x 4 cm

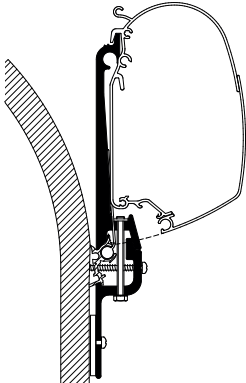

Thule Omnistor: 5200 / 4900 / 2000

Eden | Allegro < 2010


307919 Set: 1x 70 cm + 1x 30 cm + 1x 8 cm
 308022 3.50 m
 308023 4.00 m

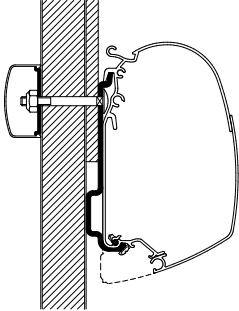

Thule Omnistor: 5200 / 8000 / 4900

Eden | Allegro | Trigano > 2010


308764 Set: 3x 50 cm

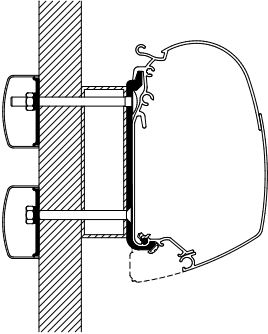

Thule Omnistor: 5200 / 8000 / 4900

Hobby Optima Outour


301905 Set: 2x 8 cm + 2x 40cm

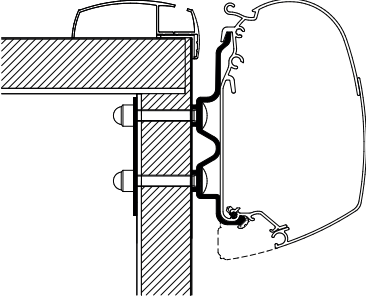

Thule Omnistor: 5200 (3.50 m - 4.00 m)

Hymer Car 302 - Ducato H1


308659 Set: 2x 12 cm

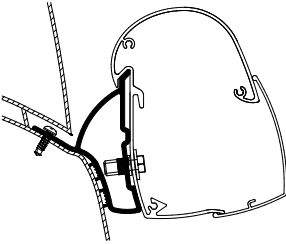

Thule Omnistor: 5102

Hymer 2016

309985 2.60 m
 309986 3.00 m
 309987 3.50 m
 309988 4.00 m
 309989 4.50 m
 309990 5.00 m
 309991 5.50 m
 309992 6.00 m
 ≥ 2012

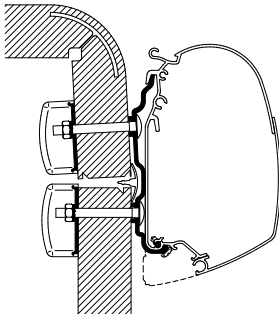


Thule Omnistor: 5200 / 8000 / 4900

Adapters for wall-mounted awnings

MANUFACTURER

Hymercamp ≤ 2011


- 307933 3.00 m
- 307944 3.50 m
- 307957 4.00 m
- 307965 4.50 m
- 307971 5.00 m
- 307976 5.50 m
- 308686 6.00 m
- + Rapido

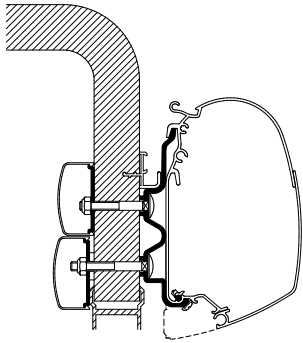

Thule Omnistor: 5200 / 8000 / 4900

Hymer SX


- 308017 4.00 m

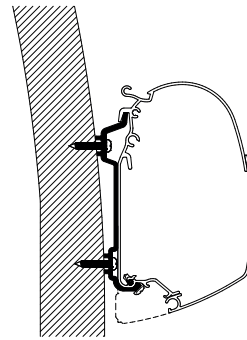

Thule Omnistor: 5200 / 8000 / 4900

Hymer B2 - Van


- 307932 3.00 m
- 307943 3.50 m
- 307956 4.00 m
- 307964 4.50 m
- 307970 5.00 m
- 307975 5.50 m
- 307978 6.00 m
- + Eriba Motorhome 2009

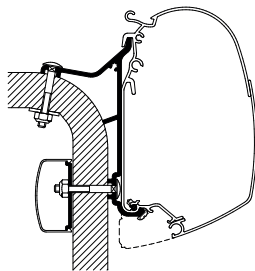

Thule Omnistor: 5200 / 8000 / 4900

Knaus Adapter 2017


- 301681 Set: 2x 17.5 cm + 2x 4 cm

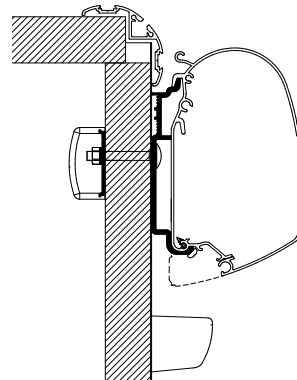

Thule Omnistor: 5200

Knaus Deseo Adapter 2019


- 301900 3.50 m

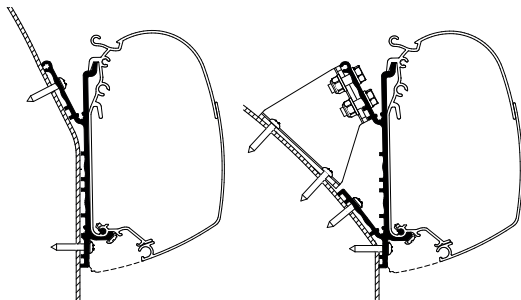

Thule Omnistor: 5200

Laika Ecovip - Rexosline

- 308047 Set: 2x 30 cm
- 308049 4.50 m

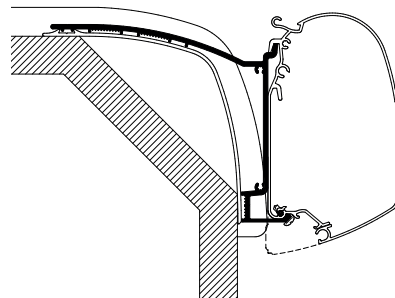


Thule Omnistor: 5200 / 8000 / 4900

Adapters for wall-mounted awnings

MANUFACTURER

Laika X


308297 Set: 3x 17.5 cm

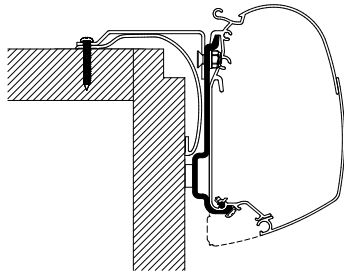

Thule Omnistor: 5200 / 4900

Pilote Explorateur


308006 Set: 2x 8 cm + 2x 40 cm
308014 4.00 m

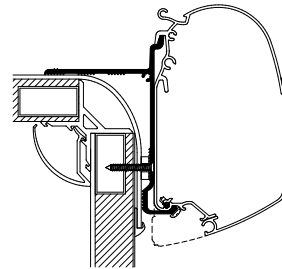

Thule Omnistor: 5200 / 8000 / 4900

Rapido Club ≥ 1995


307890 Set: 3x 8 cm

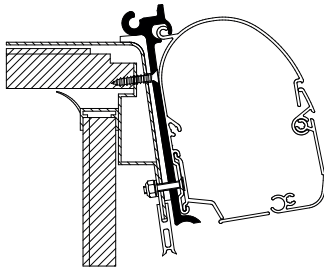

Thule Omnistor: 2000

Rapido Serie


307923 Set: 2x 18 cm + 1x 1 m (Serie 7)
307911 Set: 2x 18 cm + 2x 8 cm (Serie 9)
307931 3.00 m
307942 3.50 m
307955 4.00 m
308854 5.00 m

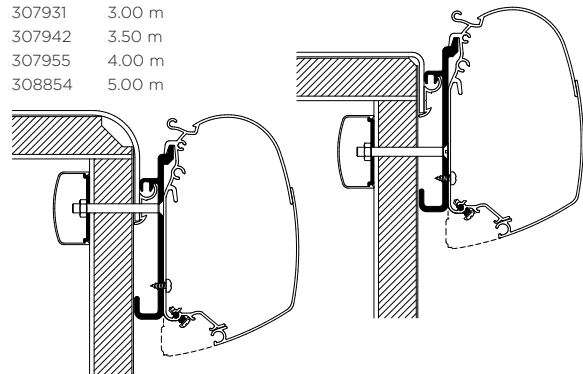

Thule Omnistor: 5200 / 8000 / 4900

Swift Rio

307028 Set: 1x 17.5 cm + 1x 4 cm + 1x 40 cm

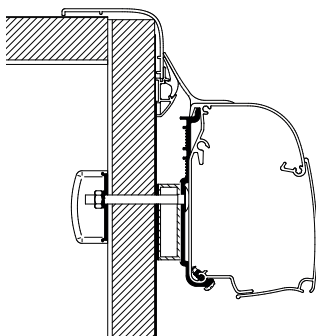


Thule Omnistor: 5200 / 4900

Adapters for wall-mounted awnings

VAN

Ducato | Jumper | Boxer ≤ 2006


307913 Set: 3x 8 cm

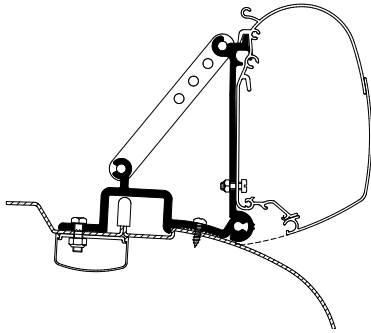

Thule Omnistor: 5200 / 4900

Ducato | Iveco H2 Lift Roof


308960 Set: 3x 17.5 cm

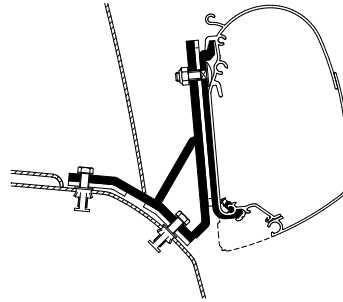

Thule Omnistor: 5200 / 4900

Ducato H3 + EPDM


309999 Set: 2x 50 cm + 1x 10 cm

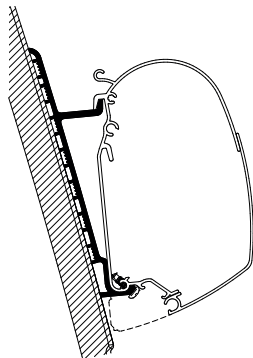

Thule Omnistor: 5200 / 4900

Ford Transit High Roof


307999 Set: 2x 50 cm + 1x 50 cm

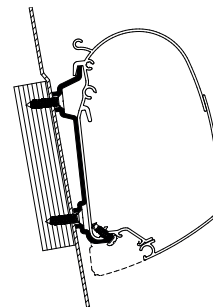

Thule Omnistor: 5200 / 8000 / 4900

Renault Master 1998-2010


307918 Set: 3x 8 cm

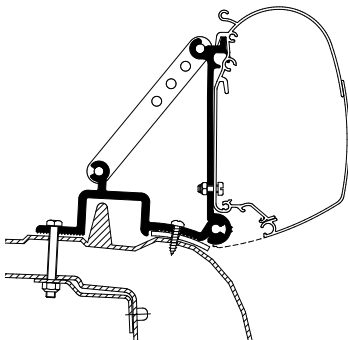

Thule Omnistor: 5200 / 8000 / 4900 / 2000

Renault Master High Roof H3

308072 Set: 2x 50 cm

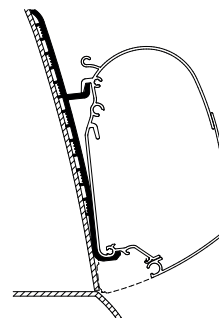

Thule Omnistor: 5200 / 8000 / 4900


Adapters for wall-mounted awnings

MINIVAN

Renault Trafic | Opel Vivaro 2015-2019 | Nissan Primastar



307996 Set: 2x 50 cm

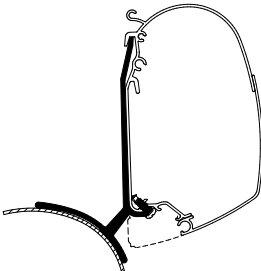


Thule Omnistor: 5200 / 4900

VW T2 & T3



307880 Set: 2x 8 cm + 1x 4 cm

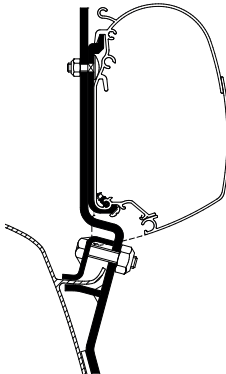


Thule Omnistor: 5200 / 4900

VW T4



307879 Set: 2x 8 cm

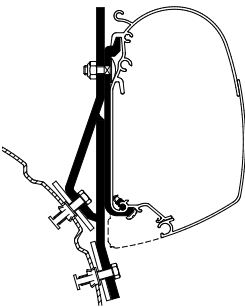


Thule Omnistor: 5200 / 4900

VW T4 Lift Roof



307887 Set: 2x 8 cm

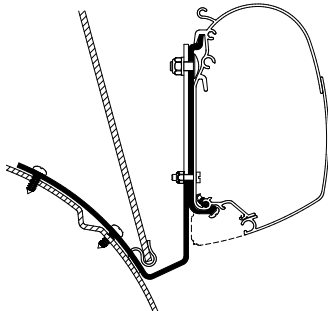


Thule Omnistor: 5200 / 4900

VW T5/T6 Brandrup Rail



307886 Set: 2x 8 cm

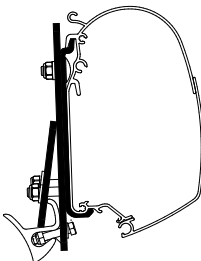


Thule Omnistor: 5200 / 4900 / 2000

Van



307884 Set: 1x 4 cm + 2x 8 cm

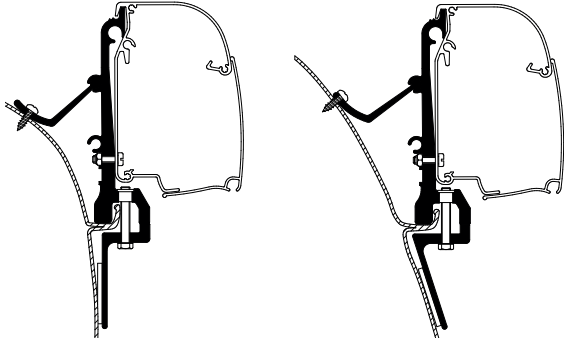


Thule Omnistor: 5200 / 4900 / 2000

Adapters for wall-mounted awnings

MINIVAN

Westfalia Adapter


308426 Set: 3x 8 cm

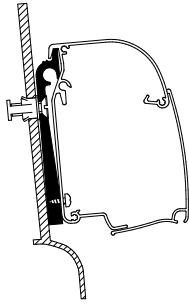

Thule Omnistor: 5200 / 4900

Westfalia Nugget High Roof


309984 Set: 2x 12 cm

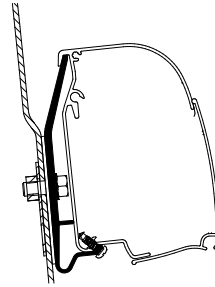

Thule Omnistor: 4900 (2.60 m)

Hymer Car 302 - Ducato H1

308659 Set: 2x 12 cm

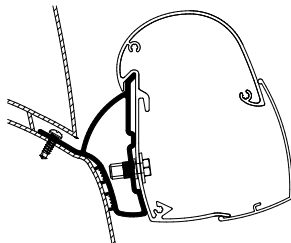


Thule Omnistor: 5102

Adapters for wall-mounted awnings

MINIVAN + THULE 3200

Flat Wall

301924

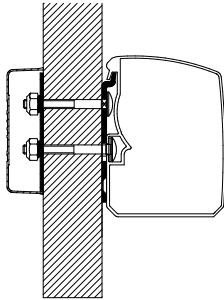


Thule 3200



New

Roof Rack

301925

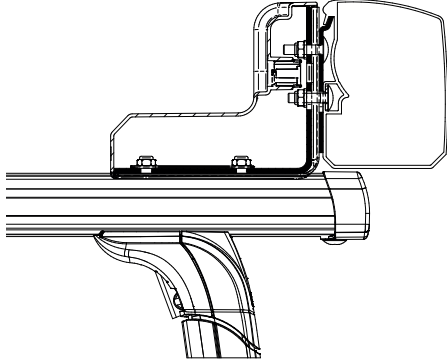


Thule 3200



New

VW T5/T6 Minivan

301912 LHD (EU)
301913 RHD (UK)

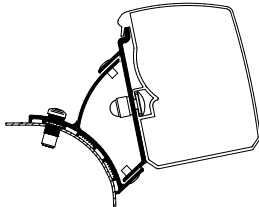


Thule 3200



New

VW T5/T6 Minivan Reimo Multi Rail

301914 LHD (EU)
301915 RHD (UK)

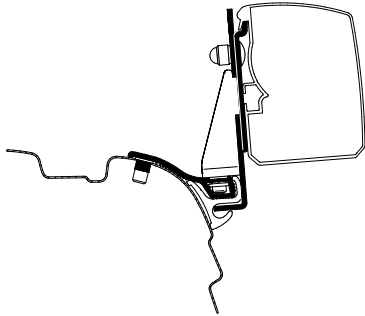


Thule 3200



New

VW T5/T6 Minivan Brandrup Top Rail

301916 LHD (EU)
301917 RHD (UK)

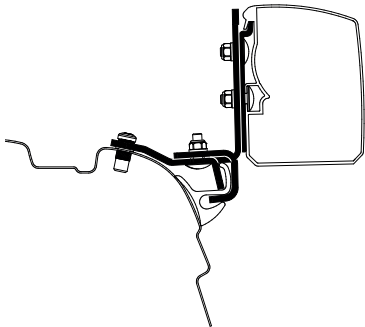

Thule 3200




New

PSA Minivan*

301918 LHD (EU)
301919 RHD (UK)

- *Citroën Spacetourer
- *Peugeot Traveller
- *Toyota Proace
- *Pössl Vanster | Campster
- *Opel Vivaro > 2019

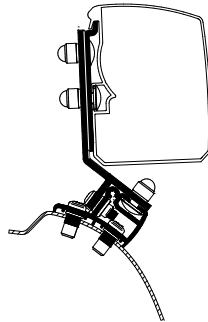

Thule 3200




New

Adapters for wall-mounted awnings

MINIVAN + THULE 3200

Ford Transit/Tourneo Custom

301920 LHD (EU)
301921 RHD (UK)
NOTE: short wheelbase ≥ 2013

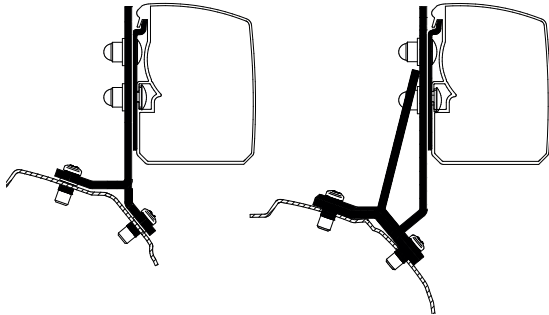


Thule 3200

Trafic/Vivaro/Talento/NV300*

301922
NOTE: short & long wheelbase



- *Renault Trafic > 2015
- *Opel Vivaro 2015-2019
- *Fiat Talento > 2015
- *Nissan NV300 > 2015

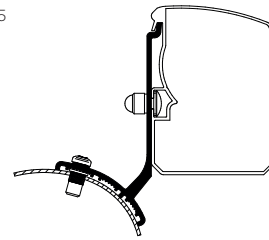

Thule 3200

Adapters for wall-mounted awnings


AWNING PACKS

VW T5/T6



Thule Omnistor 5102 awning + adapter included

309851	2.60 m anthracite 31 - LHD (EU)
309852	2.60 m grey 31 - LHD (EU)
308988	2.60 m anthracite 31 - RHD (UK)
308885	2.60 m grey 04 - RHD (UK)

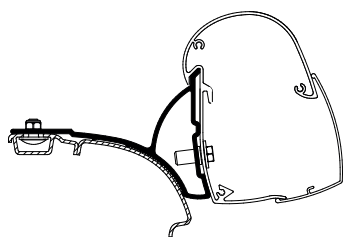


VW T5/T6 (without rail)



Thule Omnistor 4900 awning + adapter included

301772	2.60 m anthracite 31 - LHD (EU)
301773	3.00 m anthracite 31 - LHD (EU)
301774	2.60 m anthracite 31 - RHD (UK)
301775	3.00 m anthracite 31 - RHD (UK)

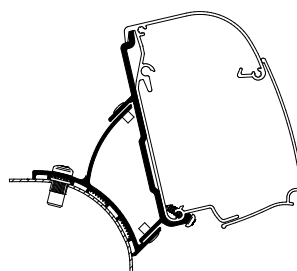


VW T5/T6 Reimo Multirail



Thule Omnistor 4900 awning + adapter + rain gutter included

301410	2.60 m anthracite 31 - LHD (EU)
301420	3.00 m anthracite 31 - LHD (EU)
301411	2.60 m anthracite 31 - RHD (UK)
301421	3.00 m anthracite 31 - RHD (UK)

NOTE: Reimo exclusivity

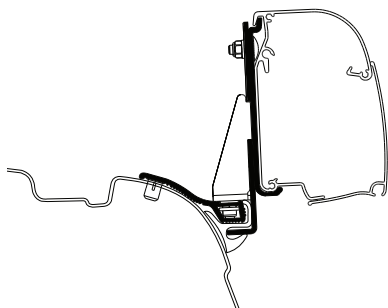


Ford Transit/Tourneo Custom



Thule Omnistor 4900 awning + adapter included

301776	2.60 m anthracite 31 - LHD (EU)
301777	2.60 m anthracite 31 - RHD (UK)

NOTE: short wheelbase \geq 2013

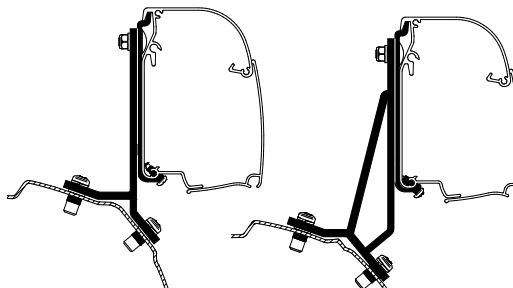

PSA Minivan Adapter*



Thule Omnistor 4900 awning + adapter included

301769	2.60 m anthracite 31 - LHD (EU)
301770	2.60 m anthracite 31 - RHD (UK)


*Citroën Spacetourer

*Peugeot Traveller

*Toyota Proace

*Pössl Vanster | Campster

*Opel Vivaro > 2019

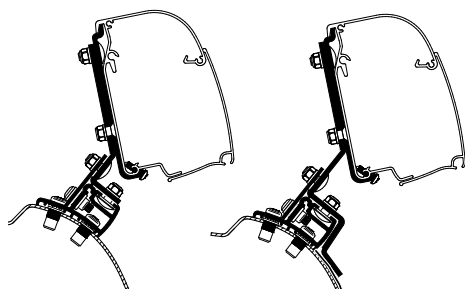


Adapters for roof-mounted awnings

UNIVERSAL

Flat Roof



- 308097 3.00 m
- 308098 3.50 m
- 308099 4.00 m
- 308100 5.50 m
- 306799 6.00 m

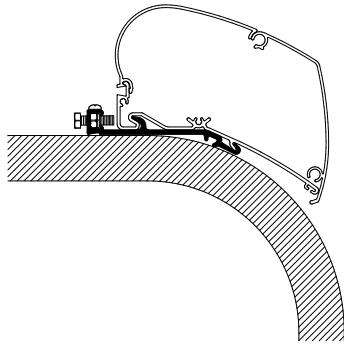


Thule Omnistor: 9200 / 6300 / 6200

Installation profiles



- 308054 Set: 2x mounting rails + Adapter
- 308055 Set: 3x mounting rails + Adapter

- Awnings ≤ 3.50 m: 1x 308054
- Awnings 3.75 m - 4.50 m: 1x 308055
- Awnings ≥ 5.00 m: 2x 308054

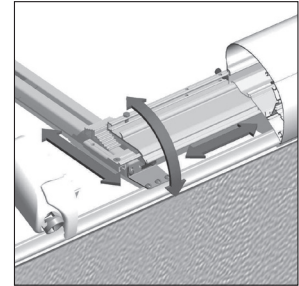


Thule Omnistor: 9200 / 6300 / 6200

Roof Top



- 308299 Set: 2x 27 cm + 2x 50 cm

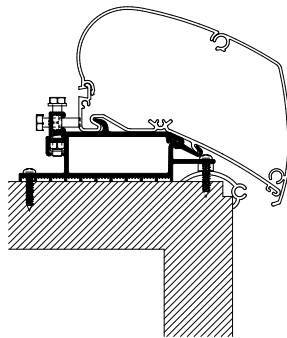

Thule Omnistor: 9200 / 6300 / 6200


Adapters for roof-mounted awnings

MANUFACTURER MOTORHOME

Autosleepers 2013



- 306794 3.00 m
- 306795 3.50 m
- 306796 4.00 m
- 306797 5.00 m

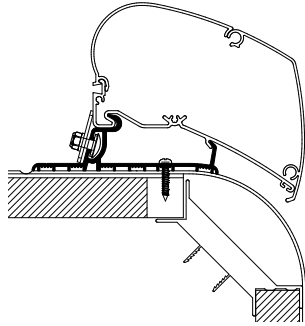


Thule Omnistor: 9200 / 6300 / 6200

Carthago Chic < 2014



- 309892 3.50 m
- 309888 4.00 m
- 309889 4.50 m
- 309890 5.00 m
- 309891 5.50 m

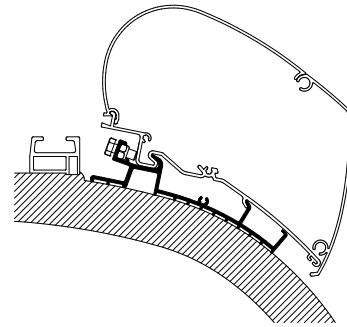


Thule Omnistor: 9200 / 6300 / 6200

Carthago C-Line ≥ 2014



- 307250 3.50 m
- 307251 4.00 m
- 307252 4.50 m
- 307253 5.00 m
- 307254 5.50 m
- 301439 6.00 m

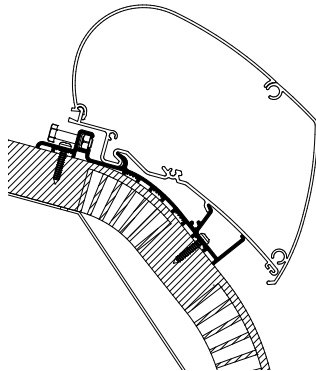


Thule Omnistor: 9200 / 6300 / 6200

Carthago Malibu



- 308078 3.50 m
- 308079 4.00 m
- 301417 4.50 m
- 301418 5.00 m

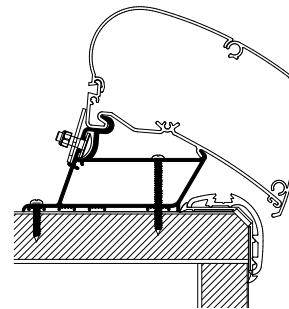


Thule Omnistor: 9200 / 6300 / 6200

Esterel



- 308110 4.00 m

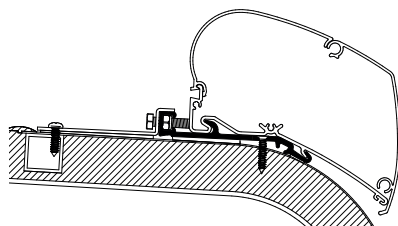


Thule Omnistor: 9200 / 6300 / 6200

Giottiline



- 308107 Set: 2x 10 cm + 2x 40 cm

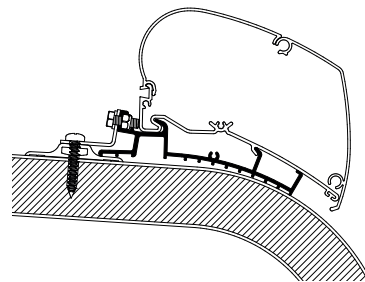

Thule Omnistor: 9200 / 6300 / 6200


Adapters for roof-mounted awnings

MANUFACTURER MOTORHOME

Hobby Optima Deluxe/Premium LED

301902 Set: 2x 27 cm + 2x 50 cm


New

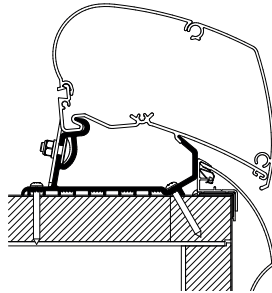

Thule Omnistor: 9200 / 6300 / 6200

Hymer SX


- 308087 3.50 m
- 308088 4.00 m
- 308089 4.50 m
- 308090 5.00 m
- 308091 5.50 m
- 306800 6.00 m

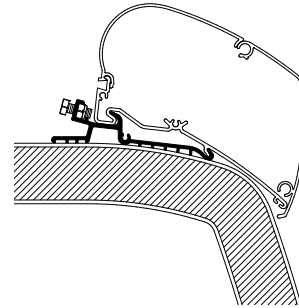

Thule Omnistor: 9200 / 6300 / 6200

Hymer 2013


- 306951 3.50 m
- 306952 4.00 m
- 306953 4.50 m
- 306954 5.00 m
- 306955 5.50 m
- 306956 6.00 m

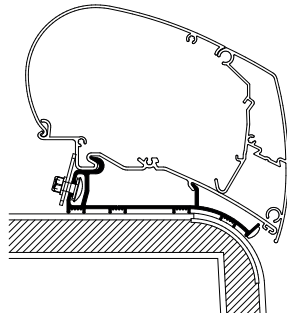

Thule Omnistor: 9200 / 6300 / 6200

LMC Liberty TI/TEC


- 307042 3.00 m
 - 307043 3.50 m
 - 307044 3.75 m
 - 307045 4.00 m
 - 307046 4.50 m
 - 307049 5.00 m
 - 307047 5.50 m
 - 307048 6.00 m
- + Bürstner Aviano 2016

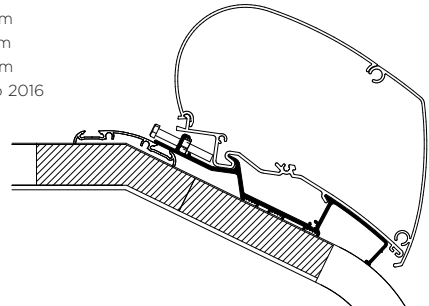

Thule Omnistor: 9200 / 6300 / 6200

LMC Explorer - Cruiser MJ2018


- 301473 3.50 m
- 301474 4.00 m
- 301475 4.50 m
- 301480 5.00 m
- 301476 5.50 m

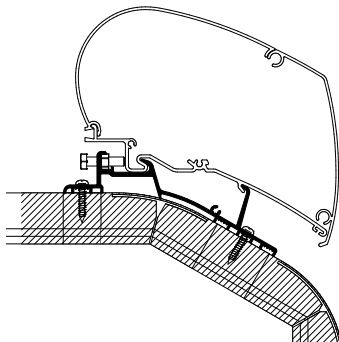

Thule Omnistor: 9200 / 6300 / 6200

Niesmann Smove

- 301423 Model 6.9B/Q - 3.00 m
- 301424 Model 7.4B/E - 3.50 m

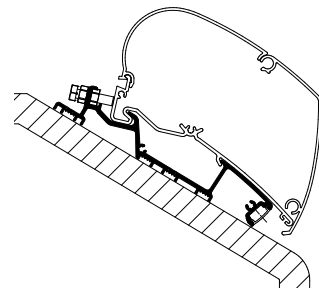


Thule Omnistor: 6300 / 6200

Adapters for roof-mounted awnings

MANUFACTURER MOTORHOME

Rapido Distinction


- 309944 4.50 m
- 301764 5.00 m
- 301765 6.00 m

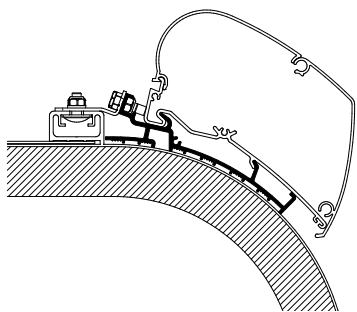

Thule Omnistor: 9200 / 6300 / 6200

Swift Escape 2017

- 301412 Model 604/695 - 3.00 m
- 301413 Model 622/614/664/685 - 3.50 m
- 301414 Model 674/684/694 - 4.25 m

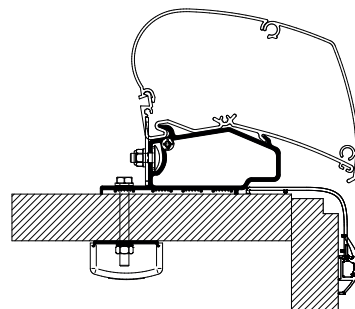


Thule Omnistor: 9200 / 6300 / 6200

Adapters for roof-mounted awnings

MANUFACTURER CARAVAN

Adria Caravan ≥ 2015

309982 Set: 2x 50 cm + 2x 27 cm

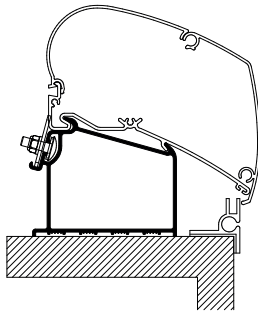


Thule Omnistor: 9200 / 6300 / 6200



Caravan Roof Adapter

- 306757 Set: 3x 1.00 m
- 309957 3.00 m
- 309962 3.25 m
- 309958 3.50 m
- 309963 3.75 m
- 306807 4.00 m
- 309964 4.25 m
- 306809 4.50 m
- 307132 5.00 m
- 307133 5.50 m
- 309959 6.00 m

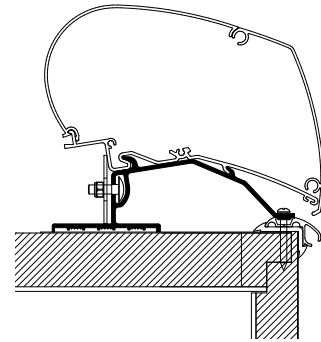


Fits Thule Omnistor Awnings on different vehicle brands:
Fendt, Dethleffs, LMC*, Trigano: 9200 / 6300 / 6200
*Extra fixation: LMC Caravan Kit 307064



Eriba Nova 2020

- 301906 4.25 m
- 301907 4.50 m
- 301908 5.00 m

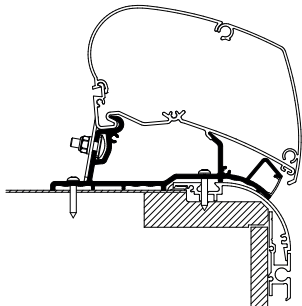


Thule Omnistor: 6300 / 6200



Eriba Touring 820

- 301682 5.00 m

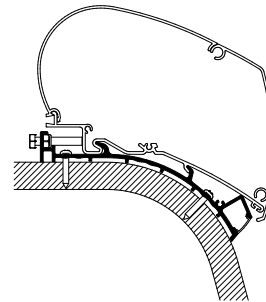


Thule Omnistor: 9200 / 6300 / 6200



Eriba Touring > 2008

- Adapter + LED
- 307392 2.80 m Triton
 - 307391 3.25 m Troll
- NOTE:** Exclusively via Hymer Eriba Touring Dealer

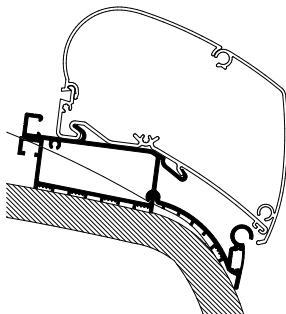


Thule Omnistor: 6300 / 6200



Fendt Brillant

- 309692 Set: 2x 11.5 cm + 1x 27 cm + 1x 50 cm (< 4.50 m)

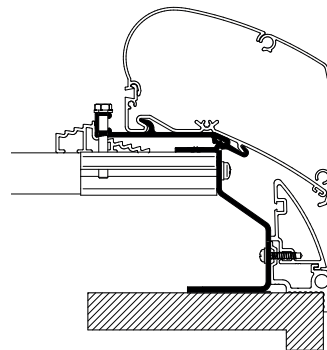

Thule Omnistor: 9200 / 6300 / 6200




Adapters for roof-mounted awnings

MANUFACTURER CARAVAN

Fendt Split Roof


- 301437 3.00 m
- 301438 3.50 m
- 309913 4.00 m
- 309914 4.50 m

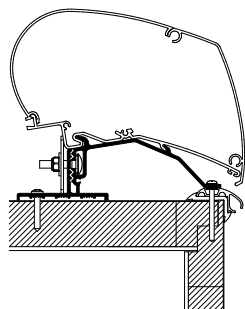

Thule Omnistor: 9200 / 6300 / 6200

Hobby Caravan 2009


- 308663 Set: 2x 27 cm + 2x 50 cm

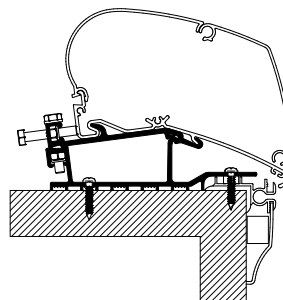

Thule Omnistor: 9200 / 6300 / 6200

Hobby Caravan ≥ 2014


- 306948 Set: 2x 60 cm + 2x 27 cm

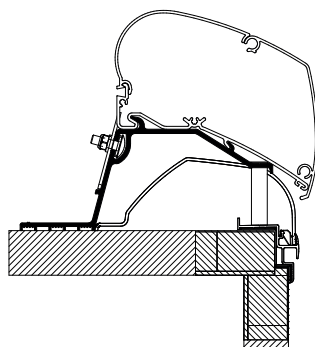

Thule Omnistor: 9200 / 6300 / 6200

Hobby Premium & Ontour


- 309819 Set: 2x 27 cm + 2x 50 cm

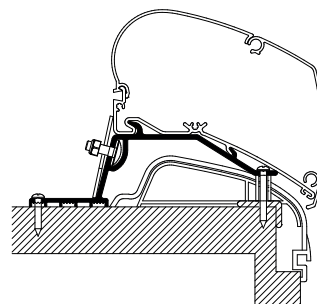

Thule Omnistor: 9200 / 6300 / 6200

Hymer 2013 Nova Roof


- 306951 3.50 m
- 306952 4.00 m
- 306953 4.50 m
- 306954 5.00 m
- 306955 5.50 m
- 306956 6.00 m

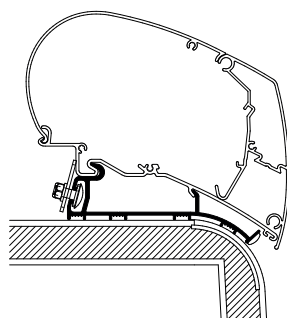

Thule Omnistor: 9200 / 6300 / 6200

LMC Caravan Roof Adapter Kit

- 307064

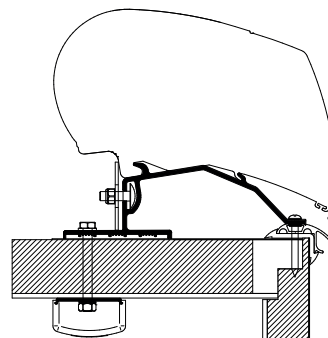

Thule Omnistor: 9200 / 6300 / 6200


Adapters for roof-mounted awnings

VAN

Ducato | Jumper | Boxer 1994-2006



Adapter + EPDM
308058

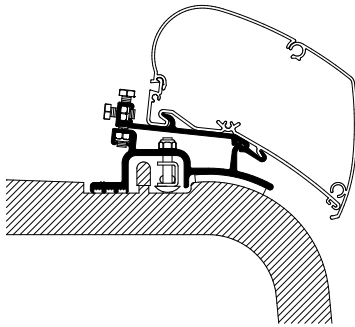


Thule Omnistor: 6300 / 6200

Ducato | Jumper | Boxer > 2007



Adapter + EPDM + adapter covers
301649 Set: 2x 27 cm + 1x 10 cm (L2H2 3.25 m)
301650 Set: 2x 27 cm + 2x 10 cm (L3H2 3.75 m | L4H2 4.00 m)

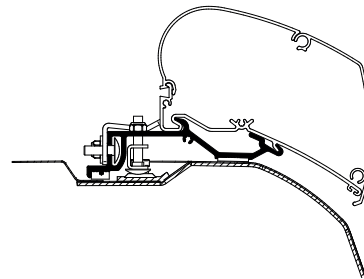


Thule Omnistor: 6300 / 6200

Mercedes Sprinter > 2007 | VW Crafter 2007-2016



308073

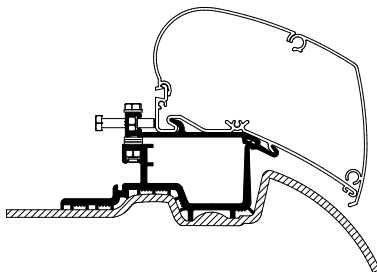


Thule Omnistor: 6300 / 6200

Mercedes Sprinter > 2007 | VW Crafter 2007-2016 - OE Track



301668

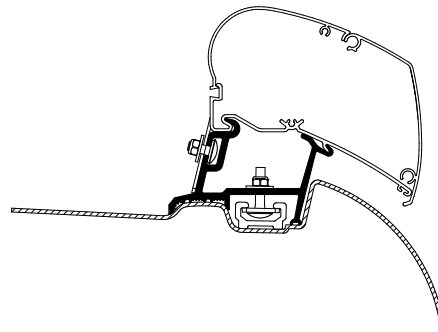


Thule Omnistor: 6300 / 6200

VW Crafter > 2017 | MAN TGE



Adapter + EPDM + adapter covers
301768 Set: 3x 40 cm - LHD (EU)
301771 Set: 3x 40 cm - RHD (UK)
NOTE: compatible with L3H3 / L4H3 / L5H3
Not possible to mount on
the pre-installed rails of VW

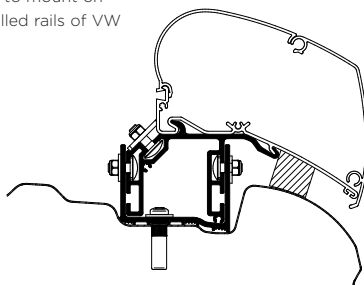


Thule Omnistor: 6300 / 6200

Renault Master | Opel Movano 1998-2010



308059

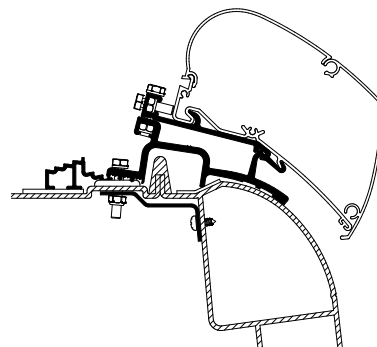

Thule Omnistor: 6300 / 6200


Adapters for roof-mounted awnings

VAN

Renault Master | Opel Movano
≥ 2011






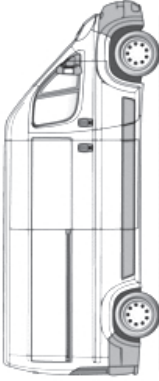
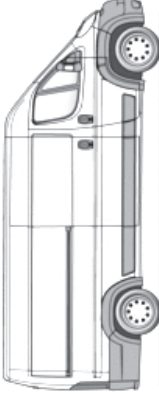
308959 Set: 2x 11.50 cm + 2x 2.70 cm

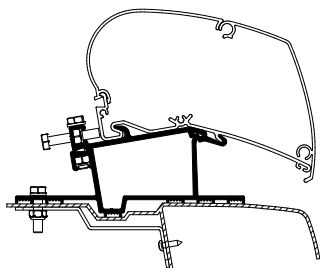

Thule Omnistor: 6300 / 6200



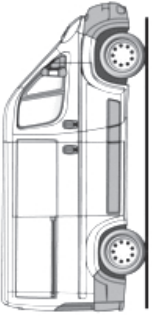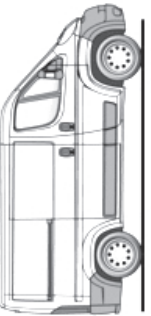


Adapters for vans

Fiat Ducato – Peugeot Boxer – Citroën Jumper

	C	M	L	XL
	L1 (4963mm)	L2 (5413mm)	L3 (5998mm)	L4 (6363mm)
H1 (2254mm)	 <p>Wall awning 2.60 m - 308659*</p>			
H2 (2524mm)	 <p>- Roof awning 2.60 m - 301649 - Wall awning 2.60 m (Ducato H2 Lift Roof) - 308960</p>	 <p>- Roof awning 3.25 m - 301649 - Wall awning 3.25 m (Ducato H2 Lift Roof) - 308960 - In case of roof rack - 301651</p>	 <p>- Roof awning 3.75 m - 301650 - Wall awning 3.75 m (Ducato H2 Lift Roof) - 308960 - In case of roof rack - 301652</p>	 <p>- Roof awning 4.00 m - 301650 - Wall awning 4.00 m (Ducato H2 Lift Roof) - 308960 - In case of roof rack - 301652</p>
H3 (2764mm)	<p>wheel base 3000 awning length 2.60 m</p>	<p>wheel base 3450 awning length 3.00 - 3.25 m</p>	<p>wheel base 4035 awning length 3.50 - 3.75 m</p>	<p>wheel base 4035 XL awning length 4.00 m</p>

* Fits only with awning TO 5102

Adapters for vans

Renault Master - Opel Movano				
	C	M	L	XL
	L1 (5048mm)	L2 (5548mm)	L3 (6198mm)	L4 (6848mm)
H1 (2307mm)				
H2 (2500-2549mm)		 Roof awning 3.25 m - 308959 Wall awning 3.00 m - 308072	 Roof awning 3.75 m - 308959 Wall awning 3.50 m - 308072	 Roof awning 4.00 m - 308959 Wall awning 4.00 m - 308072
H3 (2744-2815mm)				












wheel base 3182

wheel base 3682

wheel base 4332







wheel base 4332 XL

Adapters for vans

Mercedes Sprinter > 2007 - VW Crafter 2007-2016				
	C	M	L	XL
	L1 (5245mm)	L2 (5910mm)	L3 (6945mm)	L4 (7345mm)
H1 (2435-2530mm)				
H2 (2720-2820mm)		 Roof awning 3.75 m - 301685	 Roof awning 4.25 m - 301685	 Roof awning 4.50 m - 301685
H3 (3045-3055mm)				
	wheel base 3250	wheel base 3665	wheel base 4325	wheel base 4325 XL

NOTE : Adapter 301685 is not compatible with VW Crafter models as from 2017

Adapters for vans

		VW Crafter 2017				
		M	L	XL		
		L3 (5986 mm)	L4 (6836 mm)	L5 (7391 mm)		
H2 (2355 mm)						
H3 (2590 mm)		 roof awning 3.25 m 301768 (LHD) - 301771 (RHD)	 roof awning 4.00 m 301768 (LHD) - 301771 (RHD)	 roof awning 4.50 m 301768 (LHD) - 301771 (RHD)		
H4 (2798 mm)						
		wheel base 3640 mm	wheel base 4490 mm	wheel base 4490 mm		