


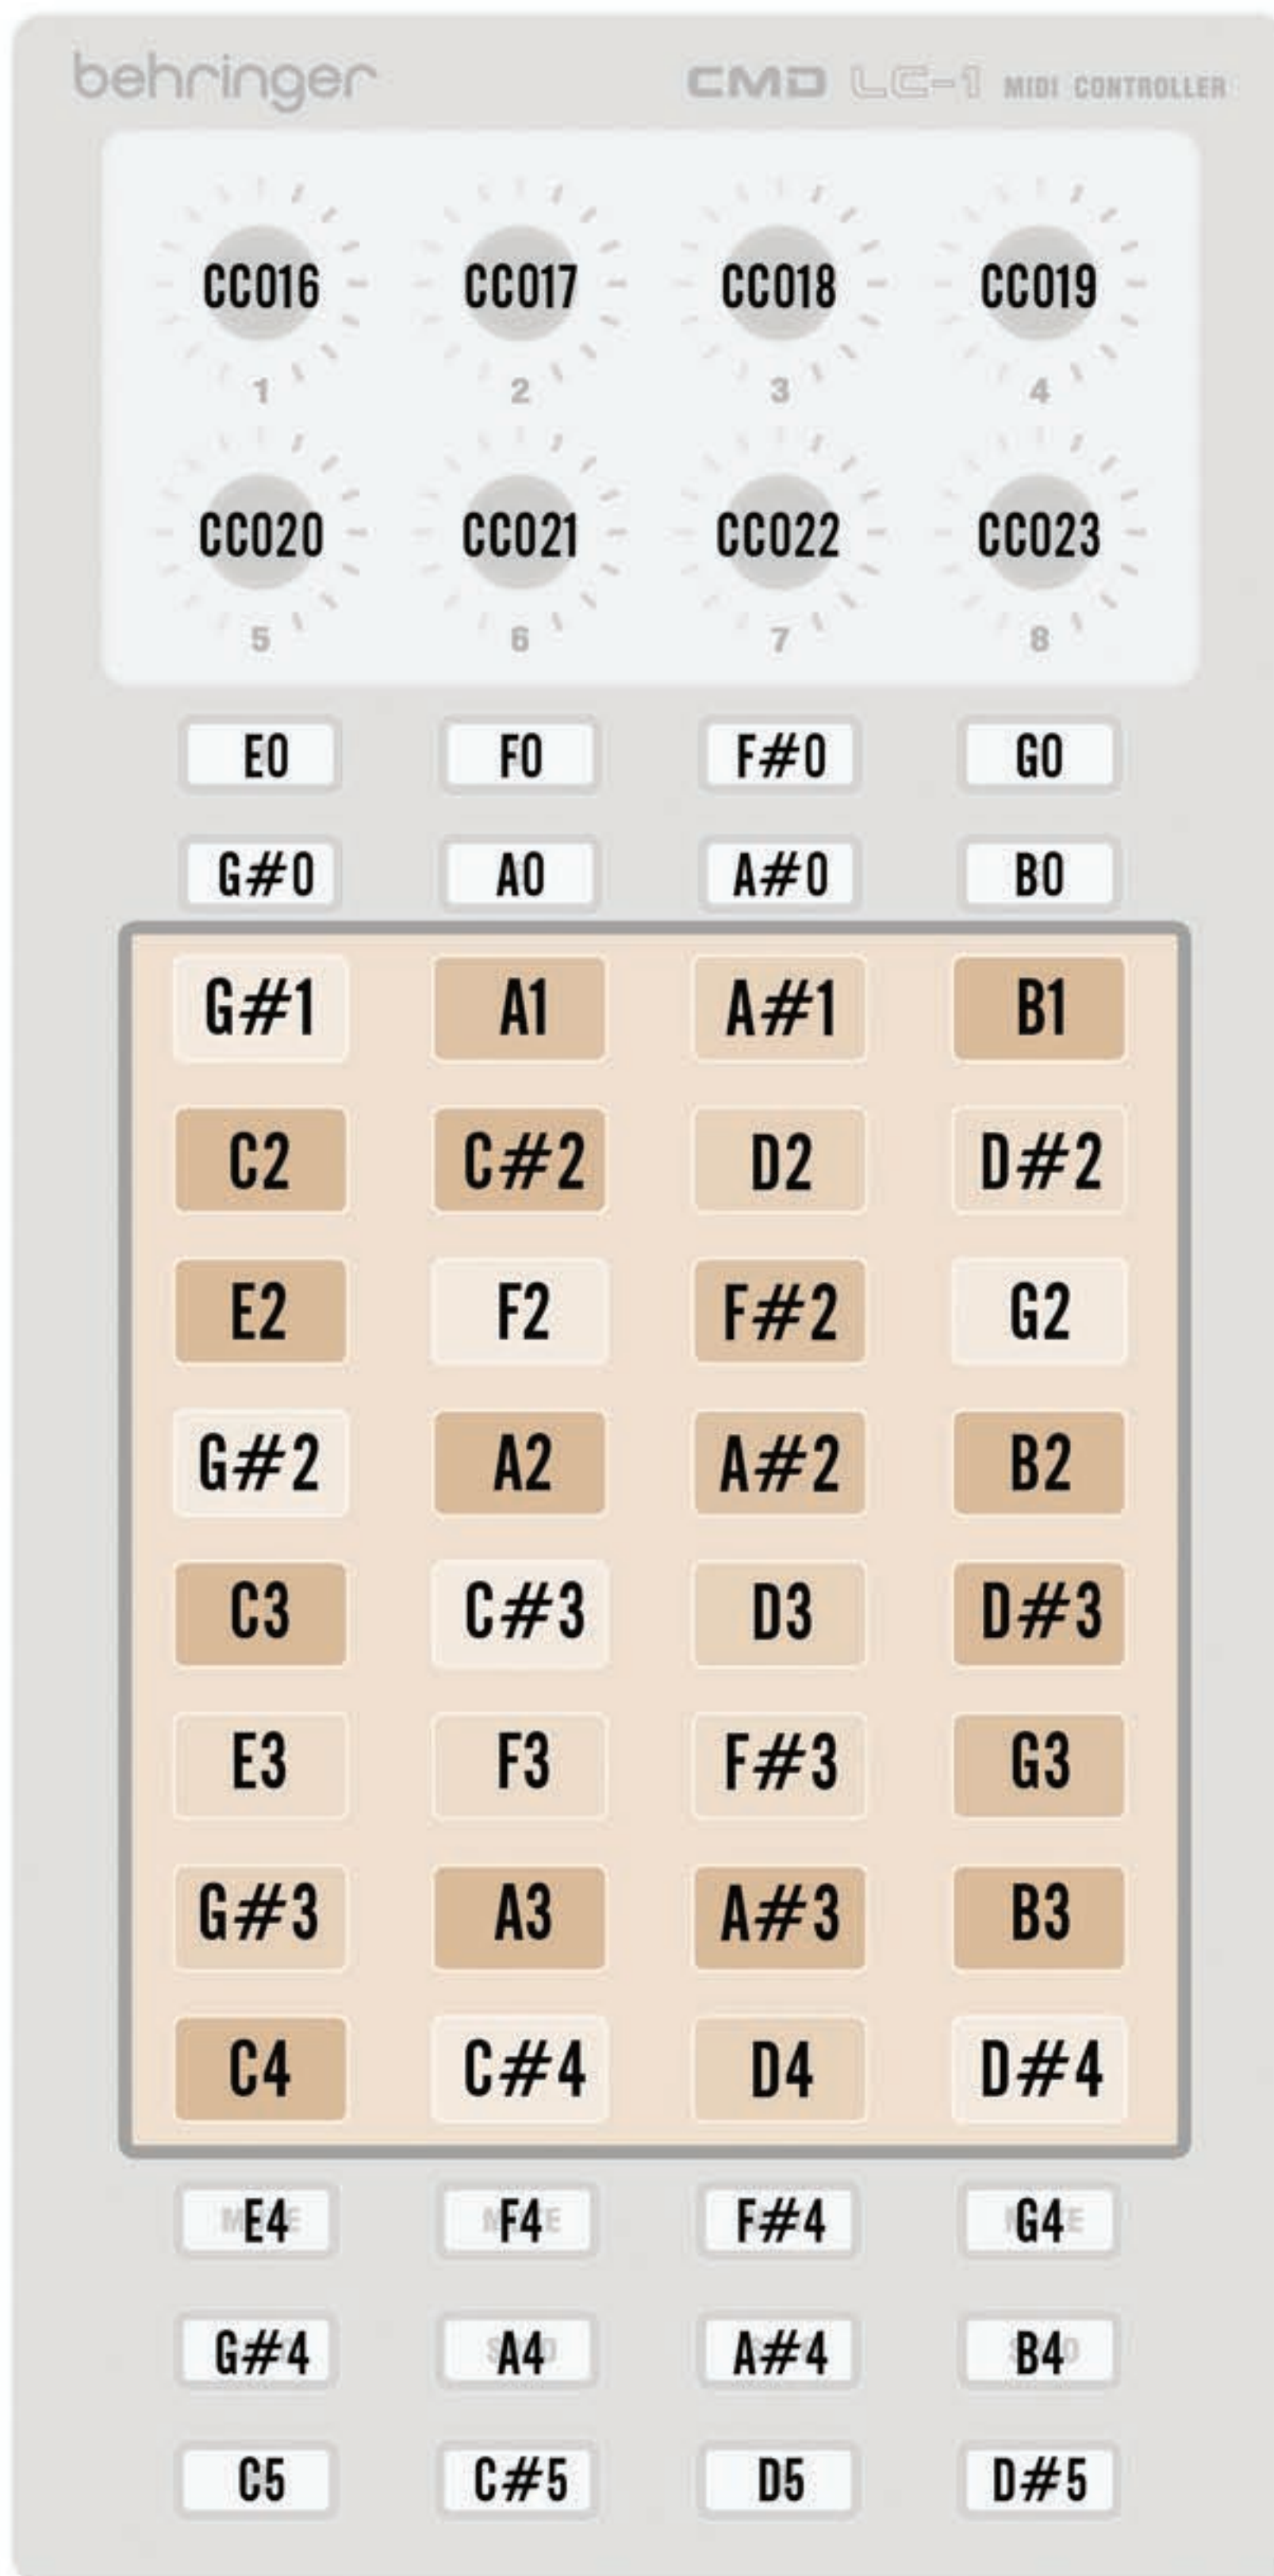

MIDI OUTPUT

BY DEFAULT, THE LC-1 SENDS MESSAGES OUT ON
ON MIDI CHANNEL 8.

LED FEEDBACK

TO DRIVE THE LED FOR A SPECIFIC CONTROL, SEND THE OUTPUT MESSAGE
FOR THAT CONTROL BACK TO THE LC-1.

LAST BYTE VALUES BELOW CONTROL LED STATE.

MARKED BUTTONS

00 - "OFF"

01 - ON SOLID

02 - BLINKING

CLIP BUTTONS

00 - "OFF" (AMBER BACKLIGHT)

01 - GREEN (ON SOLID)

02 - GREEN (BLINKING)

03 - PURPLE (ON SOLID)

04 - PURPLE (BLINKING)

05 - BLUE (ON SOLID)

06 - BLUE (BLINKING)

07 - AMBER (ON SOLID)

08 - AMBER (BLINKING)

127 - OFF (NO LED)

ENCODER RINGS

RANGE IS 01 THRU 16

CMD LC-1 MIDI MAP