
How to use the lavaliere microphone

- 1. Open the battery compartment by sliding up the cover.
- 2. Put the battery into the compartment with correct polarity, and close the cover.
- 3. Plug the Lavaliere microphone part to the jack.
- 4. Switch on the power of the transmitter and when the LED shows, it is ready to work.
- 5. Be careful to adjust the main control of the transmitter, start from least volume and slowly turn it to a appropriate level to hear your voice clearly and with feed back. The system is ready to use.
- 6. After use, you have to take the battery out of the transmitter to avoid battery leaking to damage the transmitter.

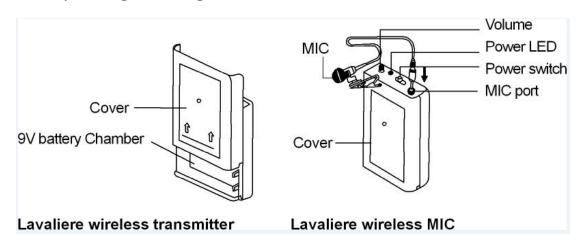

Technical data:

- 1. Frequency range: VHF 174.2-215.8MHz
- 2. Transmitter power without the audio input cable: 0.72 mW;

Transmitter power with the audio input cable: 7.59 mW.

- 3. Band width: no need for Fixed frequency
- 4. Modulation Mode: FM
- 5. Frequency span: no need for Fixed frequency

Warning Statement

§ 15.19 Labelling requirements.

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

§ 15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

* RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.