# R45 Disc Centerlock Hub Addendum

Centerlock rotor mounting system licensed by Shimano® Centerlock is a proprietary mounting system that requires a Shimano® lockring to complete installation of rotor. Chris King R45 Disc Centerlock hubs are compatible with the following Shimano® lockrings:

## **Compatible Lockrings**

- **Front** (Y8K198010) Typically supplied with genuine Shimano rotor. Or (Y26N98030) Typically sold as an after market part, also available direct through Chris King under part number PHB355
- **Rear** (Y26N98030) Typically sold as an after market part, also available direct through Chris King under part number PHB355

#### **Centerlock Rotor Installation:**

#### **Front Hubs:**

Please follow rotor manufacturer's installation instructions.

#### **Rear Hubs:**

Before installing the rear Centerlock rotor the adjusting clamp must be removed. Follow steps below for removal, installation and setting hub preload.

### **Clamp Removal:**

- 1. Loosen 2.5mm hex bolt on adjusting clamp and then remove R45 QR Insert from main axle assembly by pulling it directly out of the non-drive-side of axle. [Note: If the QR Insert is difficult to remove by hand, insert a long P-Handle or L-shaped 5mm hex wrench into the driveside of the axle. The QR Insert should remove with a light tap to the exposed hex wrench from a plastic or rubber mallet.]
- 2. Unscrew adjusting clamp and remove it from axle. By pulling onto the adjusting clamp, once free from the threads will also remove steel axle end caps on thru axle assemblies.

[Note: If the Axle End Cap is difficult to remove using only the adjusting

clamp, use a small flat- head screwdriver and insert it into the Axle End Cap slot, twist the screwdriver and the Axle End Cap should come off with the screwdriver.]

3. At this point the Centerlock rotor (or Centerlock to 6-bolt adapter) can be installed. Make sure to follow rotor manufacturer's instructions. (Use Shimano Y26N98030/ Chris King#PHB355 Lockring on rear hubs)

### **Clamp Install:**

- 1. Thread adjusting clamp onto the protruding threads on the non-driveside of axle.
- 2. On QR axles, insert R45 QR insert into non-driveside axle end. On 142mm x 12mm thru axles, ensure steel axle end cap is snapped onto axle by pressing the axle end cap by hand.
- 3. Snug adjusting clamp up to bearing.

#### **Rear Hub Adjustment:**

The R45D Centerlock rear hub features an adjusting clamp and bearing spacer spring that maintain proper bearing preload and seating.

- 1. Secure the hub/wheel into the bike or truing stand with quick release or frame thru axle system.
- 2. Push the hubshell toward the driveside. This compresses the bearing spacer spring in the driveshell and ensures proper bearing seating.
- 3. While maintaining pressure on the hubshell, tighten the adjusting clamp onto axle until it stops against bearing. Do not over tighten.
- 4. Once adjusting clamp is in position, tighten adjusting clamp with a 2.5mm hex key to 10 inch-pounds (1.13 Nm).
- 5. Double check adjustment by attaching wheel to bicycle frame. Check for bearing play or binding, and readjust adjusting clamp if needed.

# Questions? Please e-mail us at info@chrisking.com or call Customer Service at 800-523-6008

R45 Disc Centerlock Hub specifications and wheel building information										
		Axle Width	Flange Diameter Drive Side & non-Drive	Center Flange Drive Side	Center to Flange non- Drive Side	Frame Attachment	Available Spoke Hole	Upgrade & Conversion	Weight- Steel	Weight- Ceramic
Hub Type	Axle Type	(mm)	Side (mm)	(mm)	(mm)	Options	Drilling	Options	(grams)	(grams)
R45 Disc Centerlock QR Front	two piece	100	57.4	30.6	22.2	QR	24,28,32	1	144	140
R45 Disc Centerlock 100mm x 12mm TA Front	one piece	100	57.4	30.6	22.2	TA	24,28,32		143	139
R45 Disc Centerlock 135mm QR Rear	one piece	135	57.4	18.7	33.0	QR	24,28,32	2	267	262
R45 Disc Centerlock 142mm x 12mm Rear	one piece	142	57.4	18.7	33.0	TA	24,28,32		267	259

#### Wheel Building Specifications

Spoke Gauge: 13, 14, or 15 gauge R45 Disc Lacing Pattern: 2-or-more-cross

Radial lacing is not permitted on disc hubs of any kind

Spoke Hole Diameter: 2.5mm


Spoke Tension: Should not exceed 120kgf (1200N)

Upgrade and Conversion Options

#### Upgrade & Conversion Options

- 1. Convertible to 100mm x 12mm TA, requires an axle and adjusting clamp
- Convertible to 142mm x 12mm TA, requires an axle

# R45 Disc Centerlock Front Hub Assembly

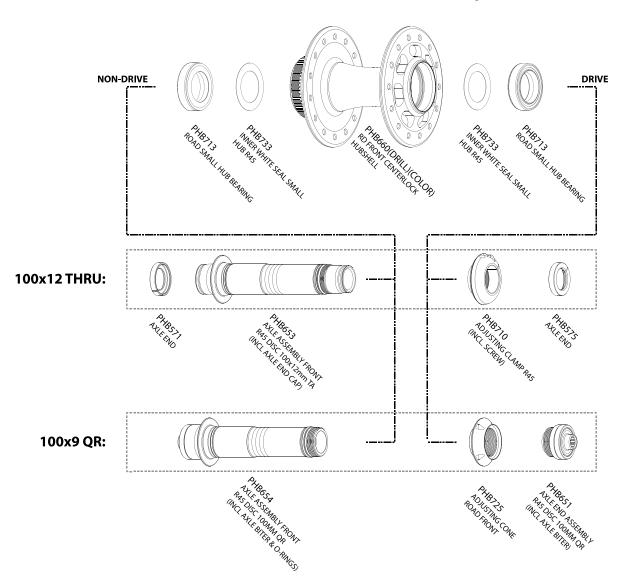



\*\*\*REQUIRES SHIMANO®
Y26N980830 - 15/20 DISC LOCKRING
(PHB355) - CHRIS KING PART#

