


## Quick Start Guide 快速上手指南

### Product Overview

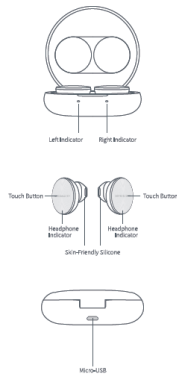


### What's in the Box

Movebeauty LP True Wireless Headphones x 1  
Movebeauty LP Charging Case x 1  
Movebeauty LP Ear Tips x 2  
Quick Start Guide x 1  
Safety & Warranty Manual x1  
Micro-USB Cable x 1

### 1. Open the Charging Case

Open the charging case. Take out the headphones, and remove the insulation films on the headphones.




### 2. Charging

Before the first use, put the headphones back into the charging case and close the charging case. Connect the micro-USB cable for charging.



### Charging the Headphones


When the battery level of the headphones is low, the indicators on the headphones will turn red. After putting the headphones into the charging case for charging, the headphone indicators will flash in red slowly and the charging case indicators (left & right) will turn red, which indicates the charging is working properly. If an indicator isn't on, it means the corresponding headphone is not in the charging case. Please take out the headphone and adjust it to a proper position. The indicators on both the headphones and charging case will go off when the headphones are fully charged.



### Charging the Charging Case


**Normal Battery Level:** After putting the headphones into the charging case, the charging case indicator will turn red.  
**Low Battery Level:** After putting the headphones into the charging case, the charging case indicator will flash in red slowly, which suggests connecting the micro-USB cable for charging.  
**During Charging:** The charging case indicator will turn red.  
**Charging Completed:** The left charging case indicator will turn white, and the right indicator will go off.

### 3. Connecting to the Device

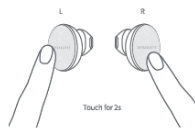

#### First-Time Setup

1. Take out the headphones. Touch the touch buttons on both the left and right headphones for 2 seconds. Waiting the indicators to turn white and flash quickly, which indicates that the headphones have entered the pairing mode.  
2. Turn on the Bluetooth function of your device. Search for the device name, "Movebeauty LP". Select it and pair your device to the headphones.

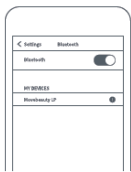

\*If the wireless signals surrounding you are too strong, the Bluetooth connection might be affected, causing unstable headphone connection. If this happens, it is suggested to reset the connection or move to other places.

#### Automatic Reconnection

Once the pairing is finished, the headphones will automatically get on and connect to the device last set up after taken out from the charging case.


#### Single-Ear Mode

If you only want to use one headphone, take out and turn on the headphone to be used, and make sure the other one is turned off. Touch the touch button for 2 seconds. After seeing the flashing indicator, open the Bluetooth connection interface and select "Movebeauty LP" or "Movebeauty LP (R)".

Touch for 2s



### 4. Touch Button Control

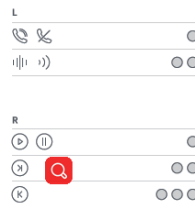

#### Two-Ear Mode

**Turn on/off**  
The headphones will be turned on and off automatically when taken out from and put into the charging case. For manual turning on and off, touch the left and right touch buttons for 3 seconds.

#### Wake up Voice Assistant

Double-tap the left touch button quickly to wake up the built-in Voice Assistant on your phone.

#### Music Function

During the music mode, tap the right touch button to play/pause music.  
While playing music, double-tap the right touch button quickly to skip to the next song.  
While playing music, triple-tap the right touch button quickly to play the previous song.

#### Call Function

Tap the left touch button to answer/hang up a call. Touch the left touch button for seconds to reject a call. When there is another incoming call during a call, tap the left touch button to hang up the current call and answer the new one.  
When there is another incoming call during a call, tap the left touch button for seconds to reject the new call.

When there is another incoming call during a call, double-tap the left touch button to keep the current call and answer the new call. Then you could switch between the two calls by double-tapping the left touch button quickly.

#### Single-Ear Mode

**Turn on/off**  
The headphone will be turned on and off automatically when taken out from and put into the charging case. For manual turning on and off, touch the touch button for 3 seconds.

#### Wake up Voice Assistant

Double-tap the touch button quickly to wake up the built-in Voice Assistant on your phone.

#### Music Function

During the music mode, tap the touch button to play/pause music.

#### Call Function

Tap the touch button to answer/hang up a call. Touch the touch button for seconds to reject a call. When there is another incoming call during a call, tap the touch button to hang up the current call and answer the new one.

When there is another incoming call during a call, tap the touch button for seconds to reject the new call.

When there is another incoming call during a call, double-tap the touch button to keep the current call and answer the new call. Then you could switch between the two calls by double-tapping the touch button quickly.

#### Other Functions

##### Connect to a New Device

Touch the left touch button for 2 seconds while the headphones are turned on. The indicator will flash quickly, which indicates they have entered the pairing mode. Then you could select and connect to "Movebeauty LP" on the Bluetooth connection interface of your device.

##### Pair the Left and Right Headphones

When the two headphones lose the pairing connection with each other, please double-tap the left and right touch buttons respectively while they are turned on and the indicators are on. The indicators will flash 3 times quickly and change to slow flashing, which shows the two headphones are pairing. After the indicators flash 2 times every 5 seconds, the pairing is completed.

##### Restore the Factory Settings

While the headphones are turned off, touch the left touch button for 6 seconds. The headphone indicators will turn red and flash 2 times quickly, which indicates the factory settings have been restored.

### 5. More Information

Visit the website, [www.movebeauty.com](http://www.movebeauty.com), for more information. Also, you could send a mail to [service@movebeauty.com](mailto:service@movebeauty.com). The Movebeauty support team will contact you with any help you need.

## FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.