

Datalogic S.r.l.
Via San Vitalino 13
40012 Calderara di Reno (BO)
Italy
Tel. +39 051 3147011
Fax +39 051 3147205

2017 Datalogic S.p.A. and/or its affiliates

♦ All rights reserved. ♦ Without limiting the rights under copyright, no part of this documentation may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means, or for any purpose, without the express written permission of Datalogic S.p.A. and/or its affiliates. Owners of Datalogic products are hereby granted a non-exclusive, revocable license to reproduce and transmit this documentation for the purchaser's own internal business purposes. Purchaser shall not remove or alter any proprietary notices, including copyright notices, contained in this documentation and shall ensure that all notices appear on any reproductions of the documentation. Should future revisions of this manual be published, you can acquire printed versions by contacting your Datalogic representative. Electronic versions may either be downloadable from the Datalogic website (www.datalogic.com) or provided on appropriate media. If you visit our website and would like to make comments or suggestions about this or other Datalogic publications, please let us know via the "Contact Datalogic" page.

Disclaimer

Datalogic has taken reasonable measures to provide information in this manual that is complete and accurate, however, Datalogic reserves the right to change any specification at any time without prior notice.

Datalogic and the Datalogic logo are registered trademarks of Datalogic S.p.A. in many countries, including the U.S.A. and the E.U. The Joya logo is a trademark of Datalogic S.p.A. and/or its affiliates, registered in the U.S. and the E.U. All other trademarks and brands are property of their respective owners.

Patents

See www.patents.datalogic.com for patent list.

Reference Documentation

For further information regarding JOYA TOUCH A6 refer to the SDK Help on-line and to the JOYA TOUCH A6 User's Manual, downloadable from our website www.datalogic.com.

Support Through the Website

Datalogic provides several services as well as technical support through its website. Log on to www.datalogic.com and click on the **SUPPORT > STORE AUTOMATION** category link. From this page you can select your product model from the dropdown list which gives you access to:

Downloads including Data Sheets, Manuals, Software & Utilities, and Drawings;

Repair Program for On-Line Return Material Authorizations (RMAs) plus Repair Center contact information;

Service Program containing details about Maintenance Agreements;

Technical Support through email or phone.

Warranty Terms and Conditions

The warranty period is 1 year for the device and 90 days for consumables (e.g. battery, power supply, cable etc.) from date of purchase at our company.



JOYA A6
TOUCH

Multi-Purpose Device for Retail



Quick Start Guide



©2017 Datalogic S.p.A. and/or its affiliates. All rights reserved. Datalogic and the Datalogic logo are registered trademarks of Datalogic S.p.A. in many countries, including the U.S. and the E.U.

DATALOGIC

www.datalogic.com

Out of the Box

The JOYA TOUCH A6 package contains:

- JOYA TOUCH A6 (device)
- Rechargeable battery
- Safety Recommendations

Remove all the components from their packaging; check their integrity and compare them with all the packing documents.



Keep the original packaging for use when sending products to the technical assistance center. Damage caused by improper packaging is not covered under the warranty.

General View

Front View



Back View




Top View



Side View

Handheld Models

Pistol Grip Models

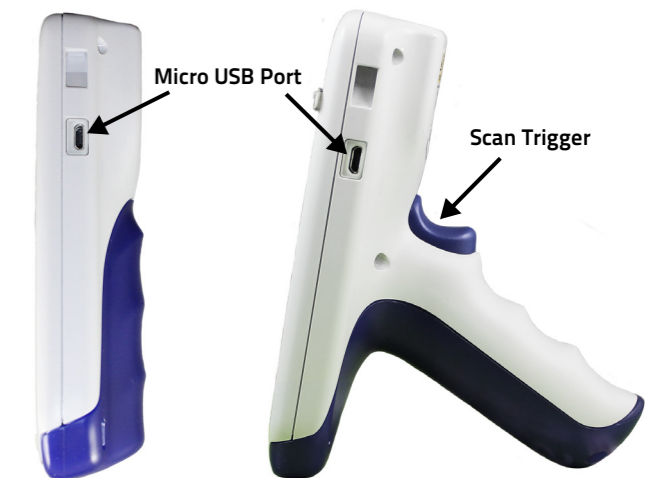

Battery Installation

To install the battery pack, follow the steps below:

1.



Handheld Models



Pistol Grip Models

2.



Handheld Models



Pistol Grip Models

3.



Handheld Models



Pistol Grip Models


4.



Handheld Models



Pistol Grip Models



Required torque of the screws is 35 cNm.

NOTE

Charging Instructions

The battery pack is not initially fully charged. After installing the battery, charge it with the 3-slot cradle. The device needs to be inserted head down into the cradle.

There are two options to connect the cradle to the power supply: fast charge and standard charge.

Fast Charge

The fast charge connection allows to power one cradle with one power supply. Plug the power supply cable into the power connector on the back of the cradle, then plug the power supply into the AC/DC plug using a Datalogic power cable. Please see below an example of how to insert the power supply cable through the wall mounting metal bracket:



High Visibility





High Density


Standard Charge

The standard charge connection allows to power two cradles with one power supply. To connect a second cradle use the JOYA TOUCH Cradle Power Jumper, available as optional accessory (P/N 91ACC0049).

1. Connect the first cradle to the second cradle using the power jumper.
2. Connect the power supply to the first cradle.
3. Plug the power supply into the AC/DC plug using a Datalogic power cable.

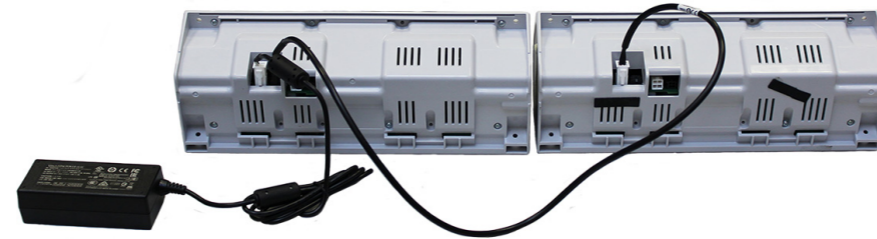


Charge the battery for a minimum of 7 hours in standard charge and 3 hours in fast charge.



For further information on the JOYA TOUCH 3-Slot Cradle, refer to the JOYA TOUCH 3-Slot Cradle Quick Start Guide, included in the cradle's box, and to the JOYA TOUCH 3-Slot Cradle Installation Guide, downloadable from our website www.datalogic.com.

Scanning and Imaging

Imager Data Capture

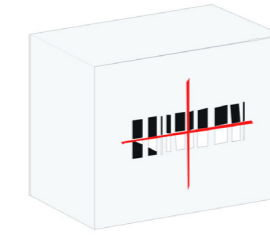

LINEAR BARCODE

2D MATRIX SYMBOL



Relative Size and Location of Aiming System Pattern

