


ASWC-1 GUIDE FOR BA-BF FALCON

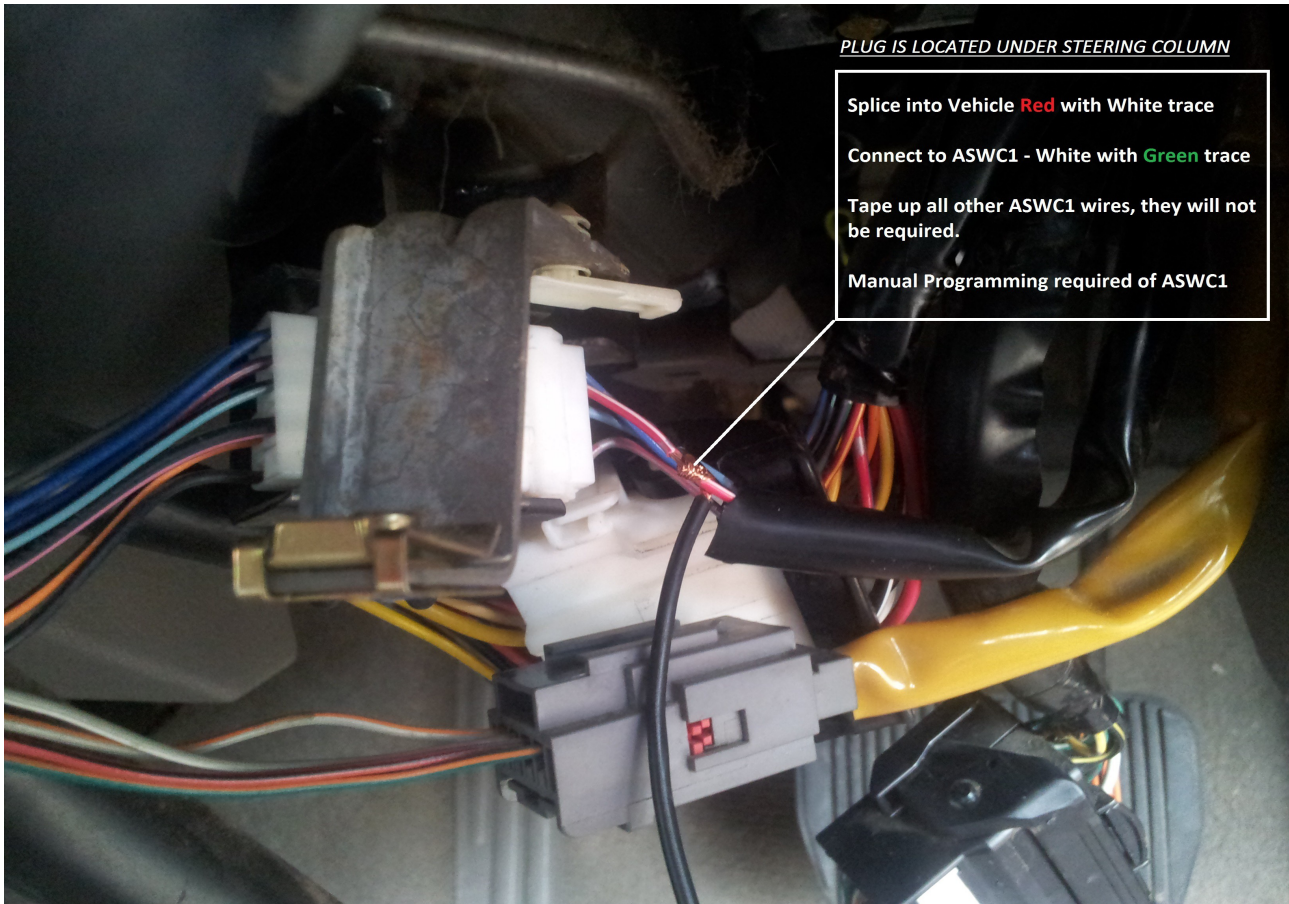

**** **DO NOT PLUG ASWC1 PATCH LEAD INTO HEAD UNIT UNTIL LAST STEP** ****

Learning the Vehicle & Programming the Head unit.

- Press and hold the **Reset** button down for approx **10 seconds** until the LED begins a slow constant flash.
- Press and hold the **Volume Up** button on the steering wheel for **7 seconds** until the led goes solid **Green**.
- Press and hold the **Volume Down** button until the led goes solid **Green**.
- Press and hold the **Seek** button until the led goes solid **Green**.
- Press and hold the **Volume Up** button on the steering wheel for **7 seconds** until flashes rapidly.
- Press and hold the **Volume Down** for approx **5 seconds**.
- Cycle vehicle off and on.
- Press and hold the **Volume Down** for **15 seconds** the LED will turn solid.
- Press **Volume up** the amount of times that your head unit is listed below, when the desired radio type has been reached. (EG – 6 Times for Pioneer)
- Press the **Volume Down** button to lock in head unit.
- Your stereo should now be programmed and the LED will turn off.

Note: If at any time the user fails to press any button for a period of 10 seconds or more, this programming mode will abort.

Radio Legend

1. Eclipse (Type 1)
2. Kenwood
3. Clarion (Type 1)
4. Sony and Dual
5. JVC
6. Pioneer and Jensen
7. Alpine
8. Visteon
9. Valor
10. Clarion (Type 2)
11. Metra OE
12. Eclipse (Type 2)
13. LG
14. Parrot*
15. XITE

* AX-SWC-PARROT is required (sold separately) and the radio must be updated to rev. 2.1.4 or higher. Additionally, the ASWC-1 must be updated to the most recent firmware available.

Note: If you have a Clarion radio and the ASWC-1 did not work try the other Clarion radio type, same for the Eclipse.