

Service schematics

Nokia Asha 200

RM-761

07.11.2011

v1.0



IMPORTANT

This document is intended for use by authorized Nokia service centers only. Please use the document together with other documents such as the Service Manual and Service Bulletins.

Version information


While every effort has been made to ensure that the document is accurate, some errors may exist. Please always check for the latest published version for this document.


If you find any errors in the document please send email to: service.manuals@nokia.com


1.0 First approved version.


Contents

- 1 Front page
- 2 X-GOLD, Power, HS USB, Camera, DUAL SIM easy swap
- 3 X-GOLD, Memory, MMC, Audio, AV connector
- 4 X-GOLD, Qwerty keyboard, Keyboard backlighting, Display interface
- 5 X-GOLD, RF part, BTH
- 6 Component finder top
- 7 Component finder bottom

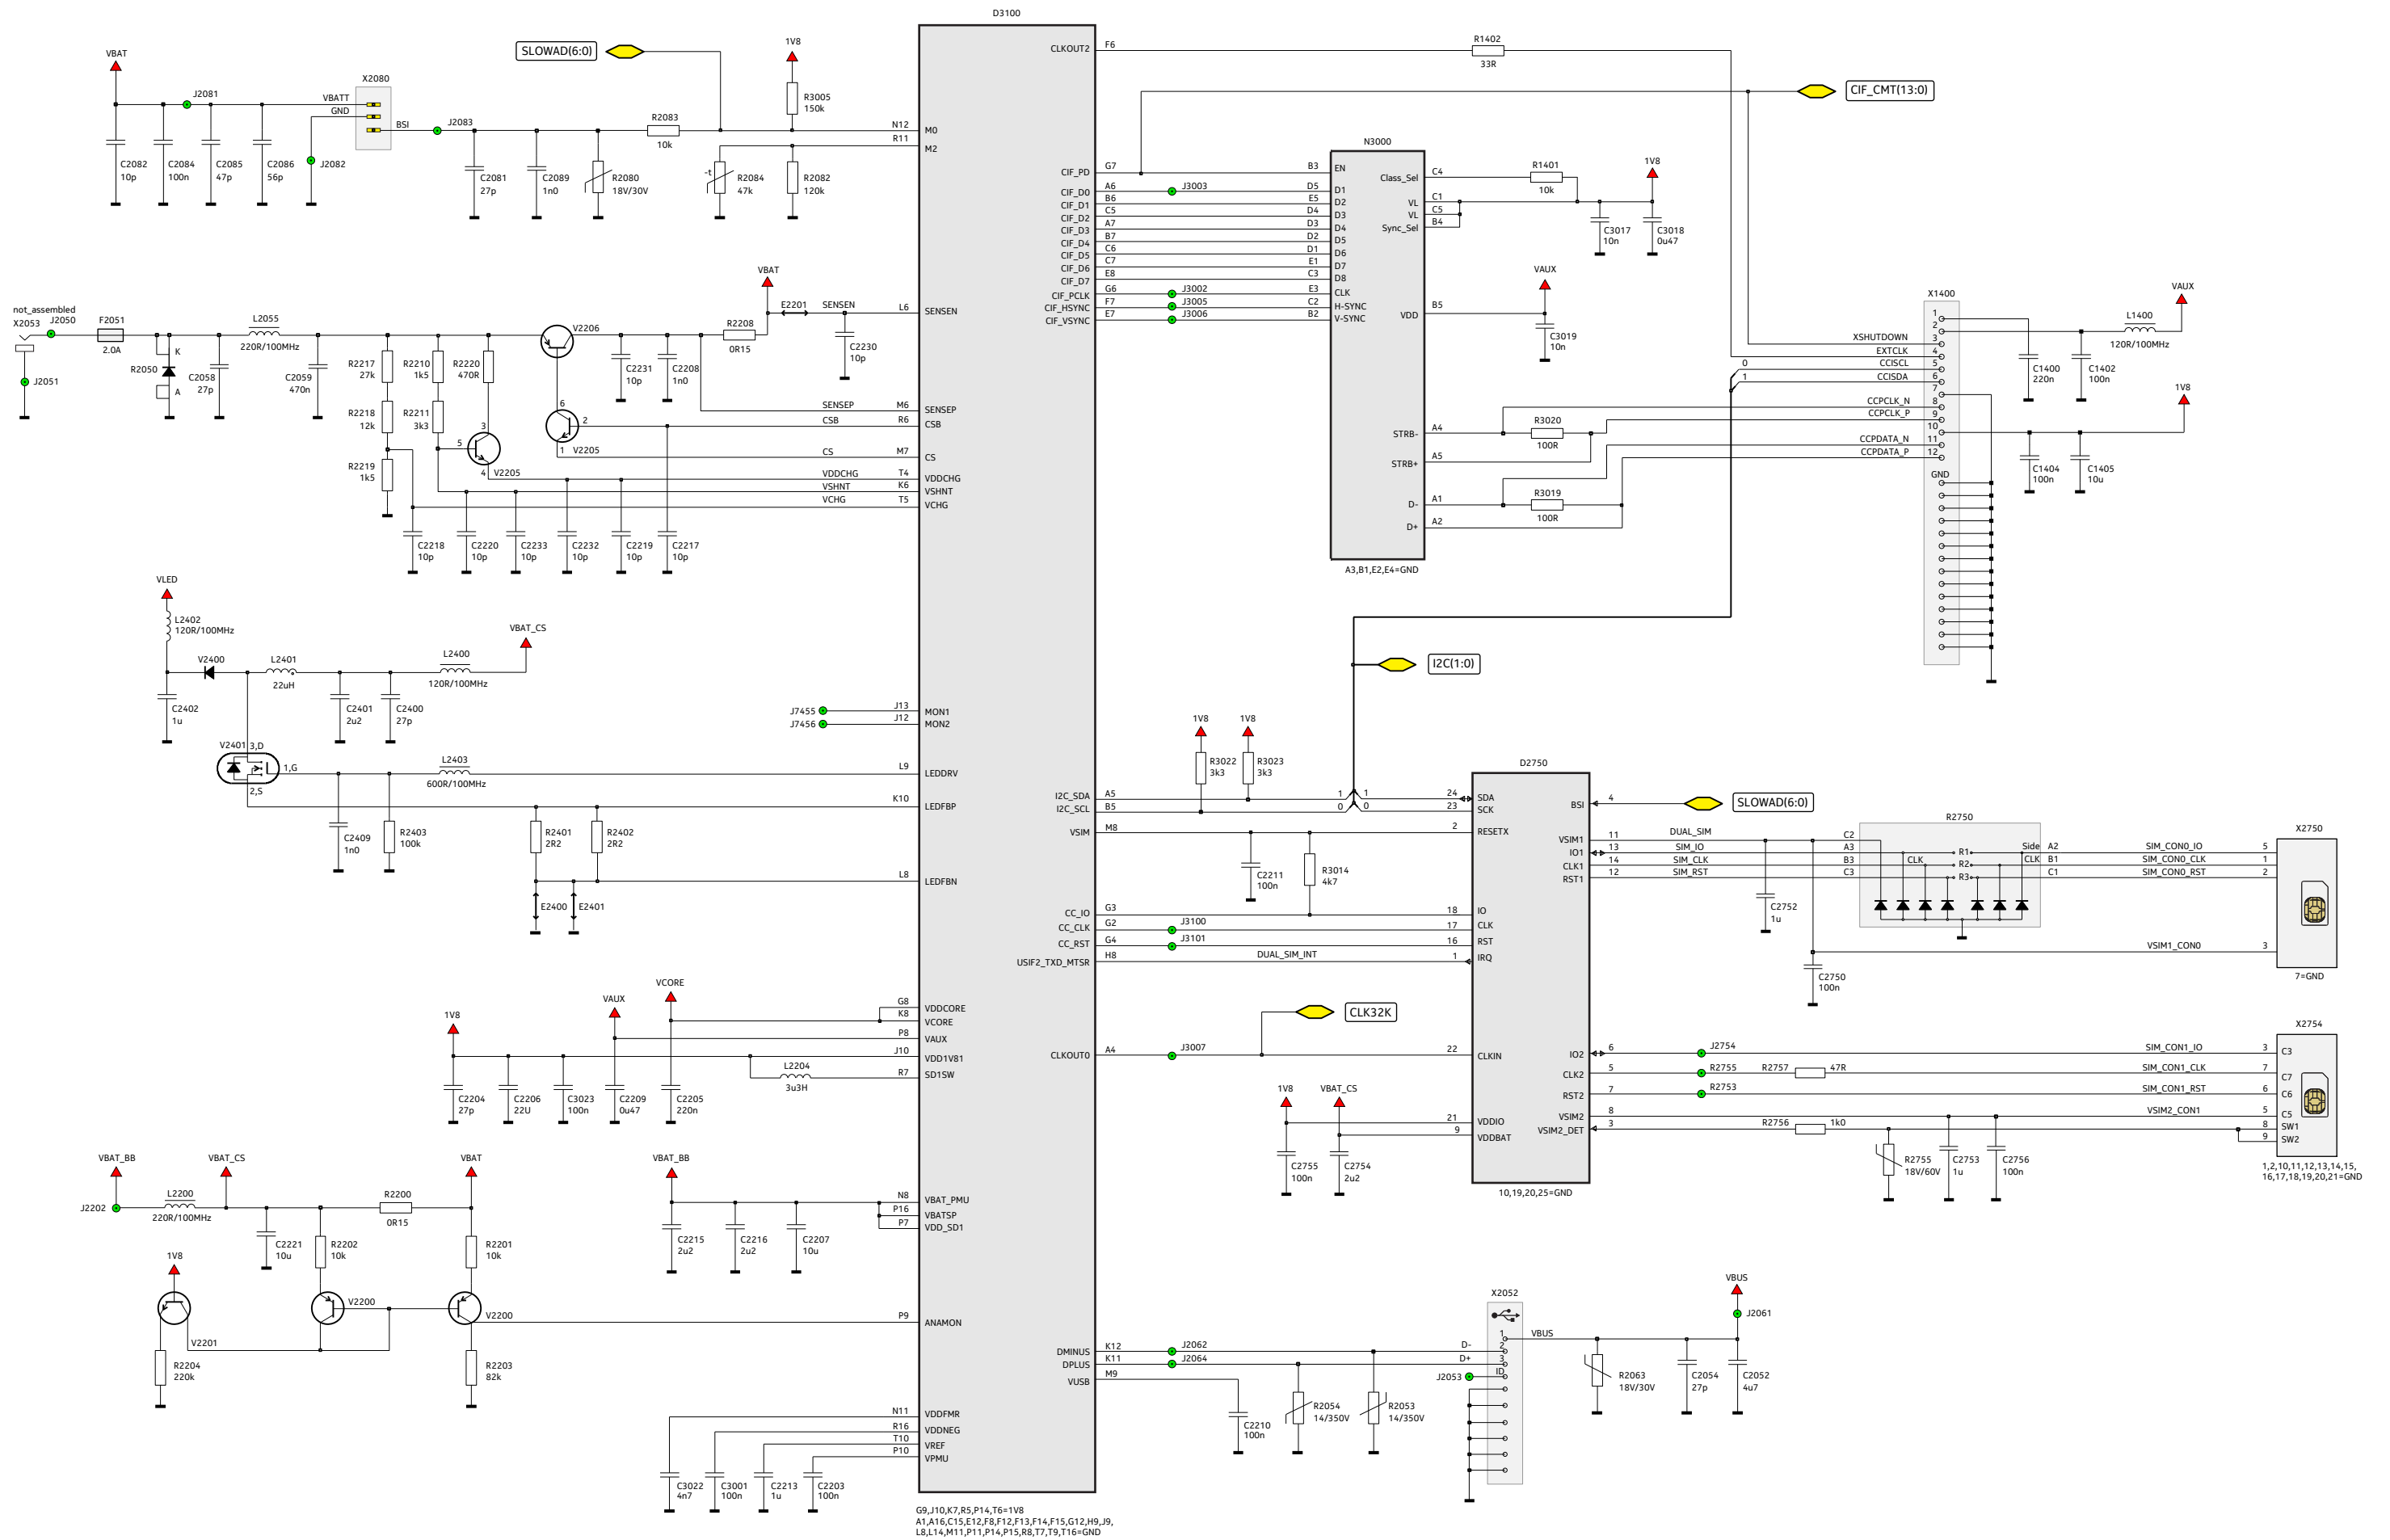


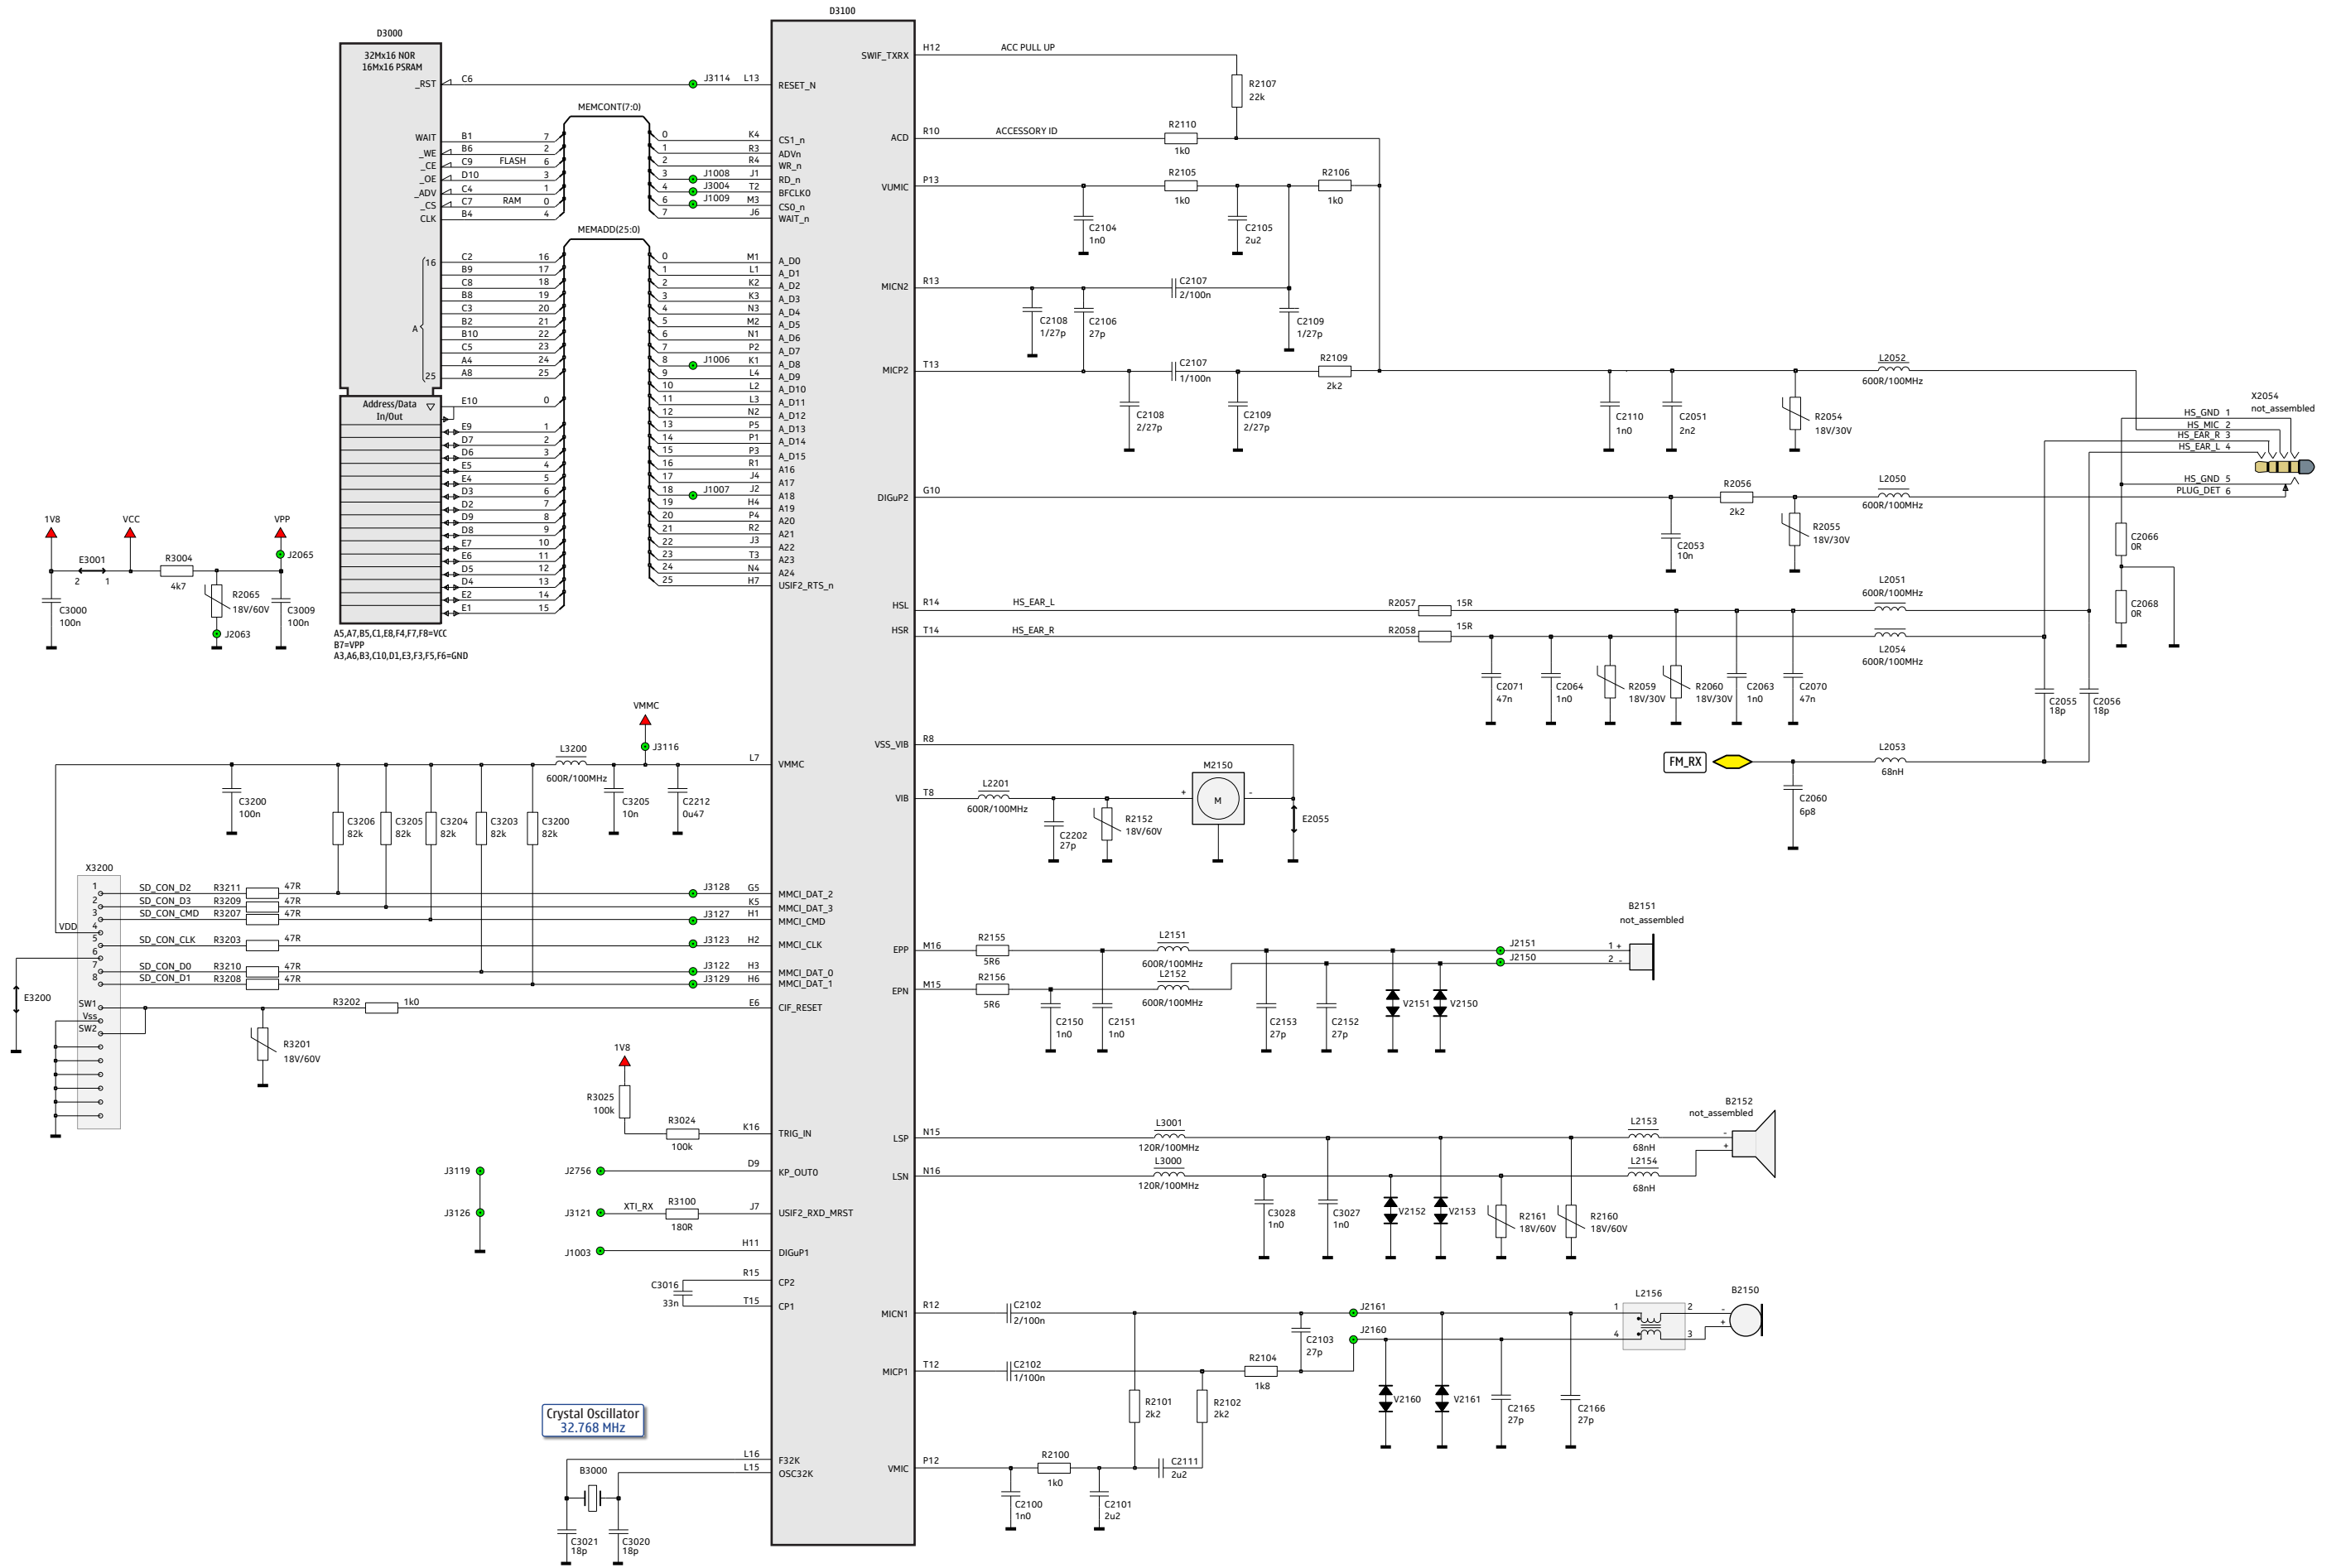

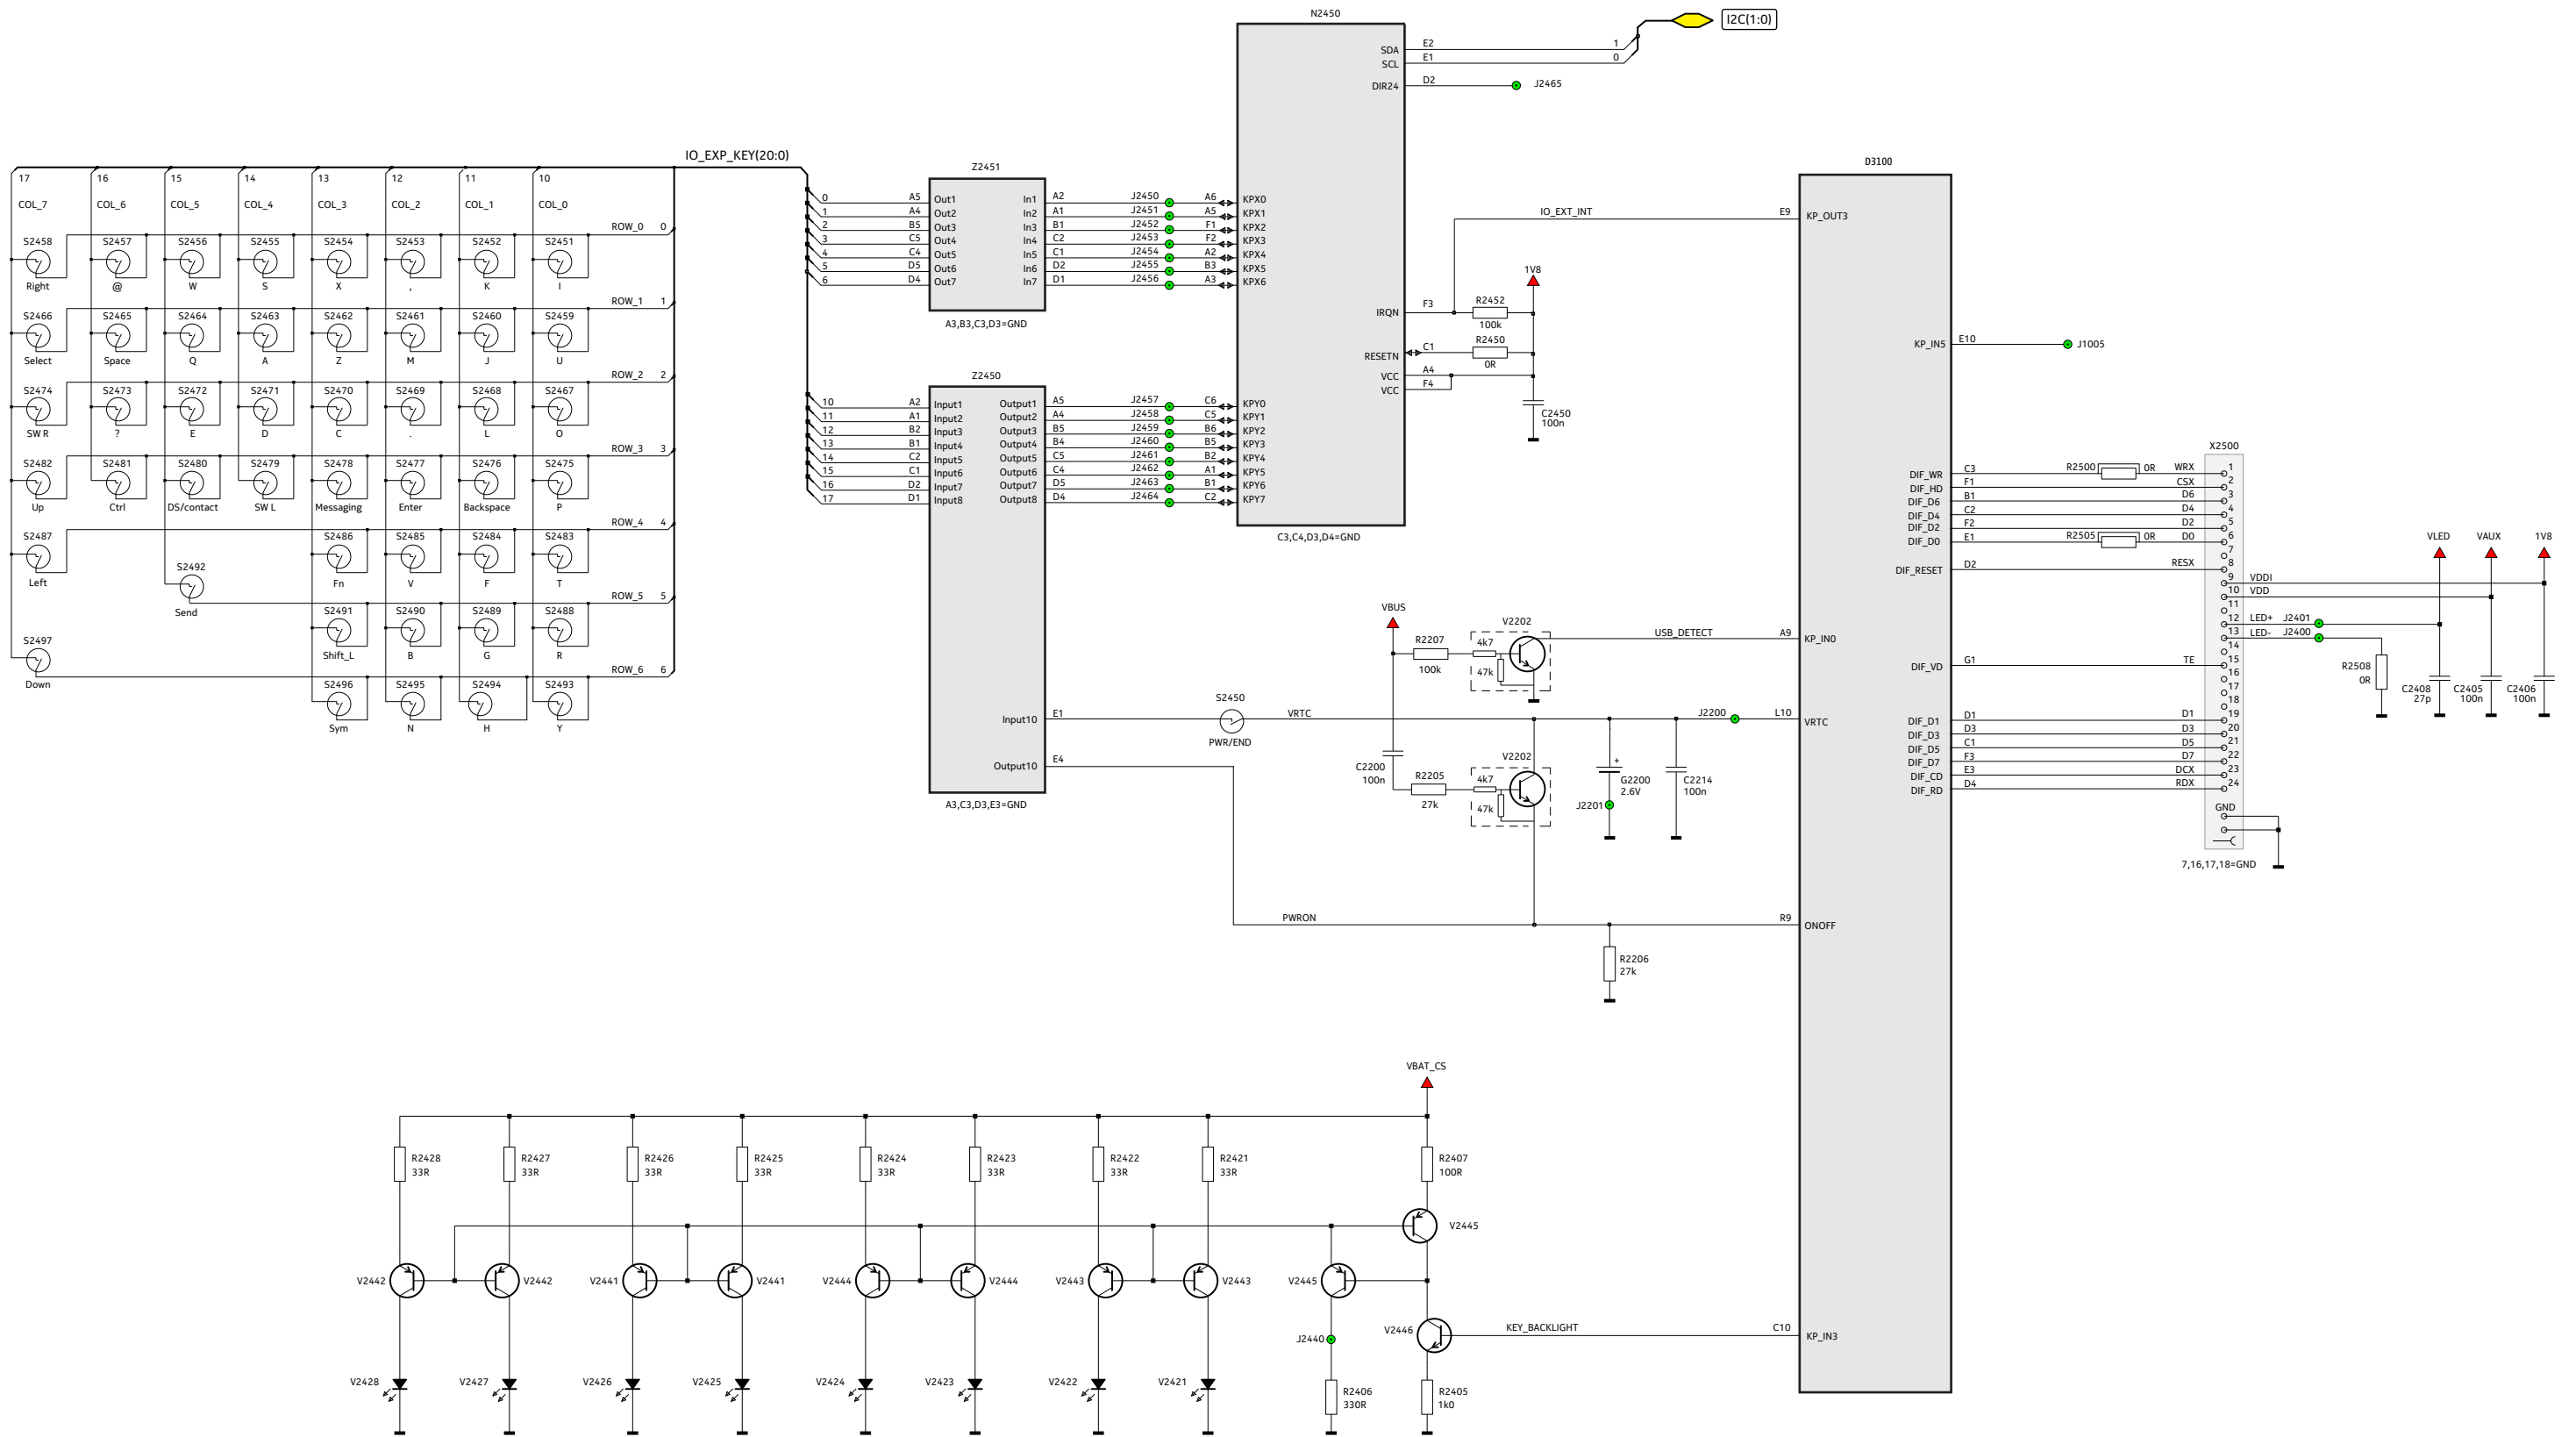


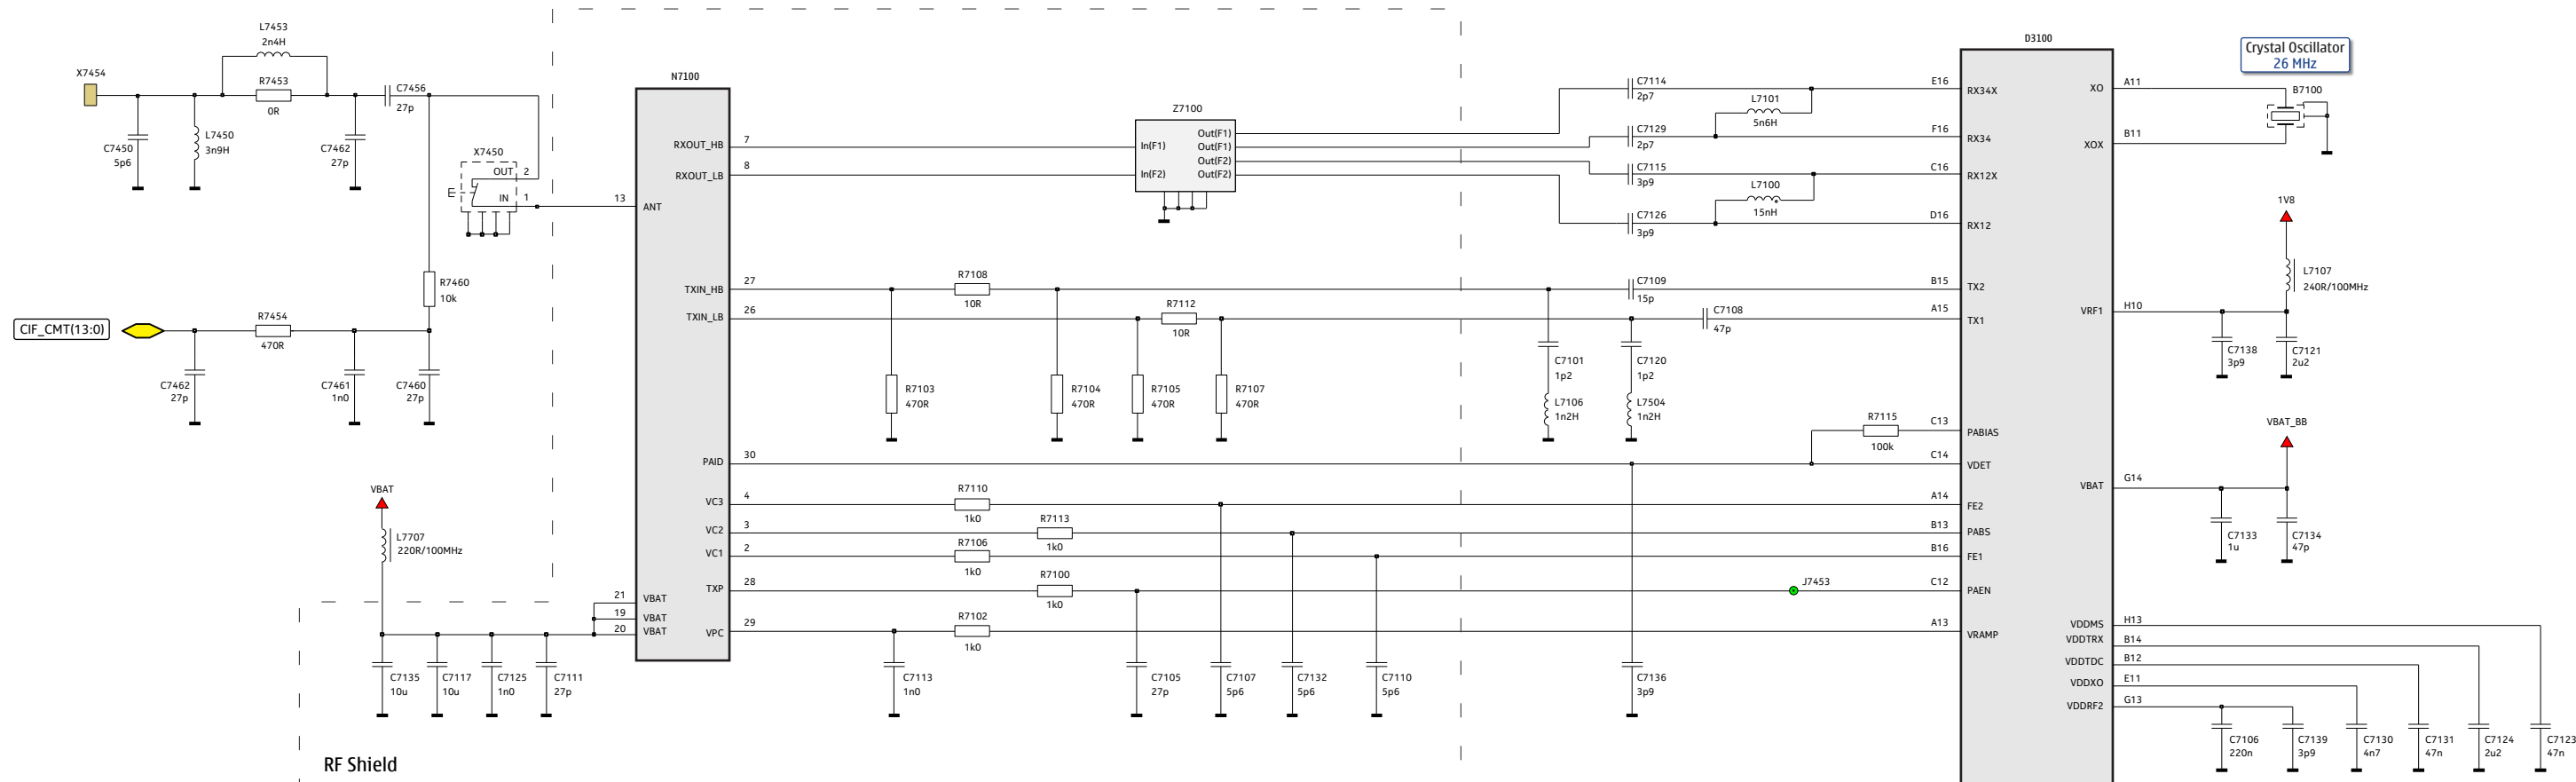


RF Shield

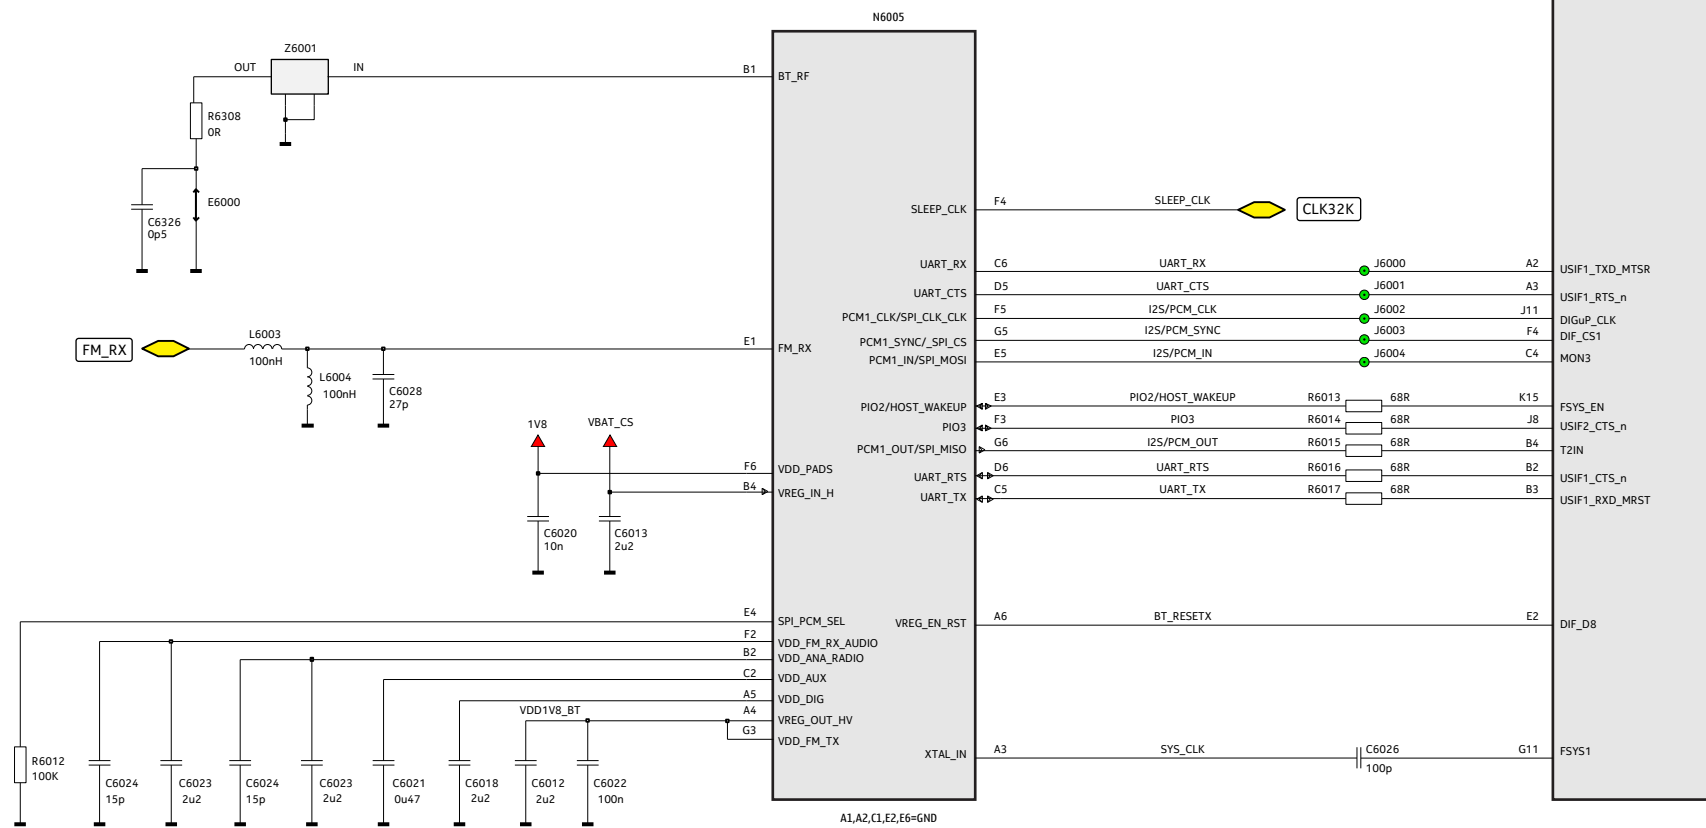

	C7115	C7116	L7100	C7114	C7129	L7101	R7102	C7113
REL 1	3p9	3p9	15nH	2p7	2p7	5n6H	1K0	1nF
REL 2	2p7	2p7	22nH	1p8	1p8	5n6H	10K	120pF
REL 3	3p9	3p9	18nH	2p2	2p2	5n6H	10K	120pF
REL 4	3p9	3p9	18nH	2p2	2p2	5n6H	10K	120pF

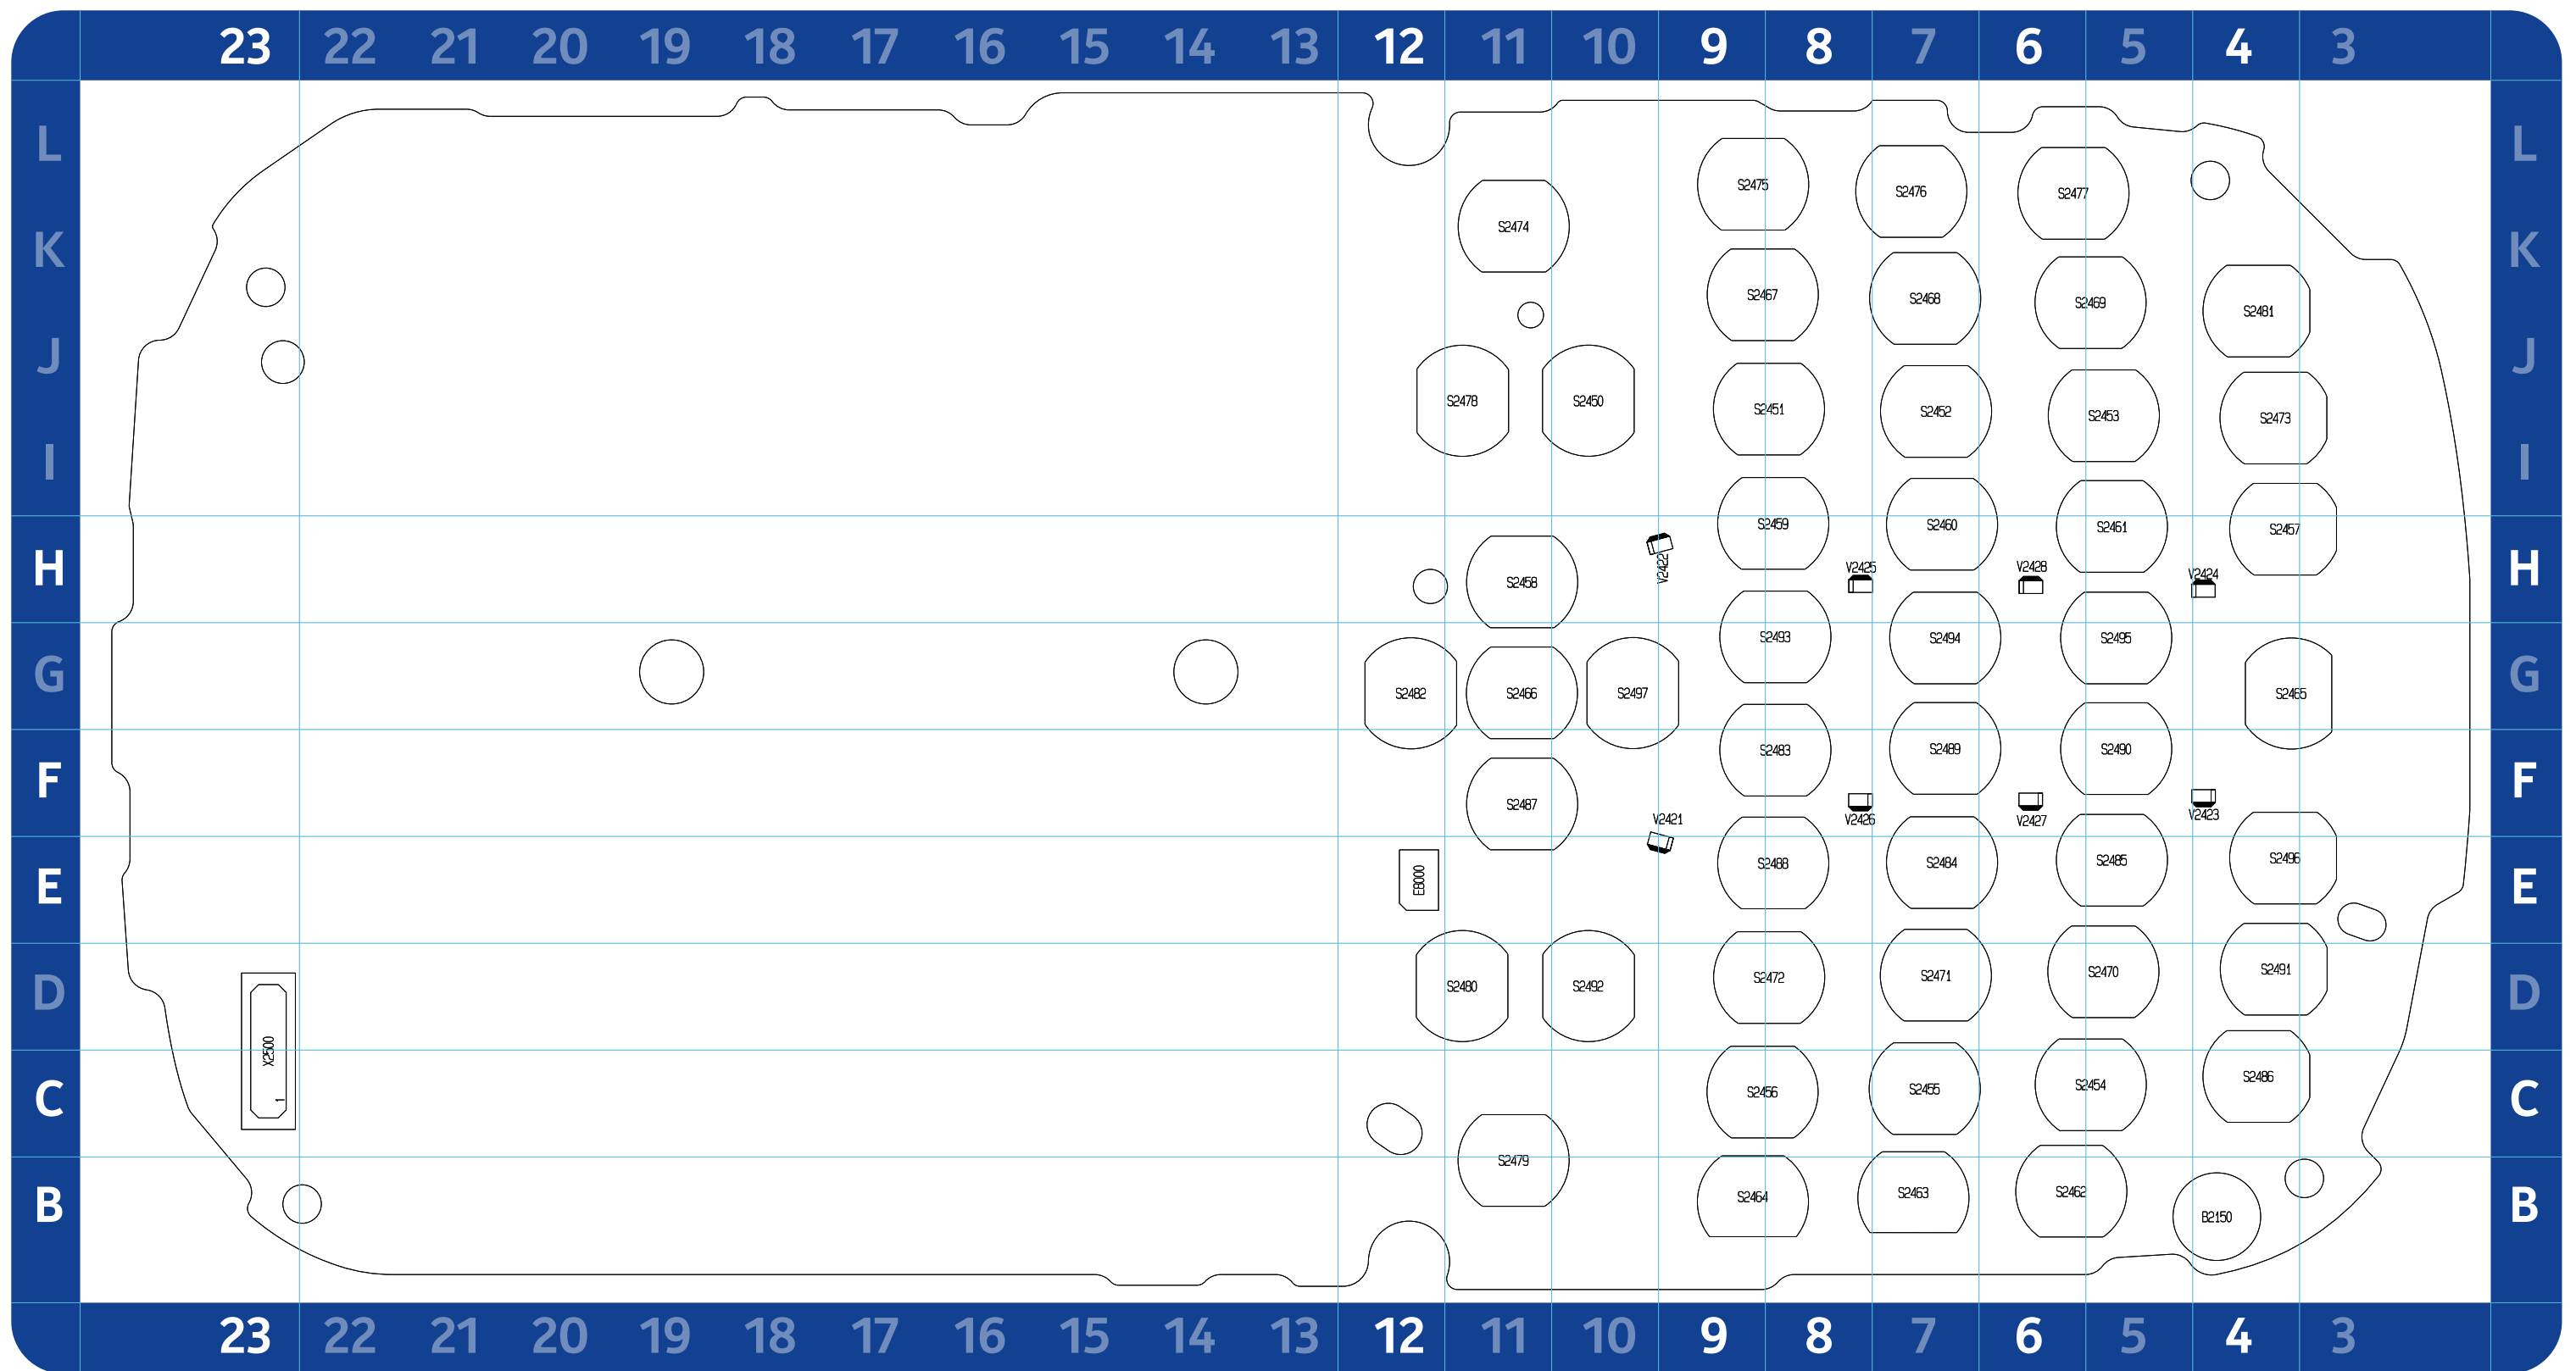

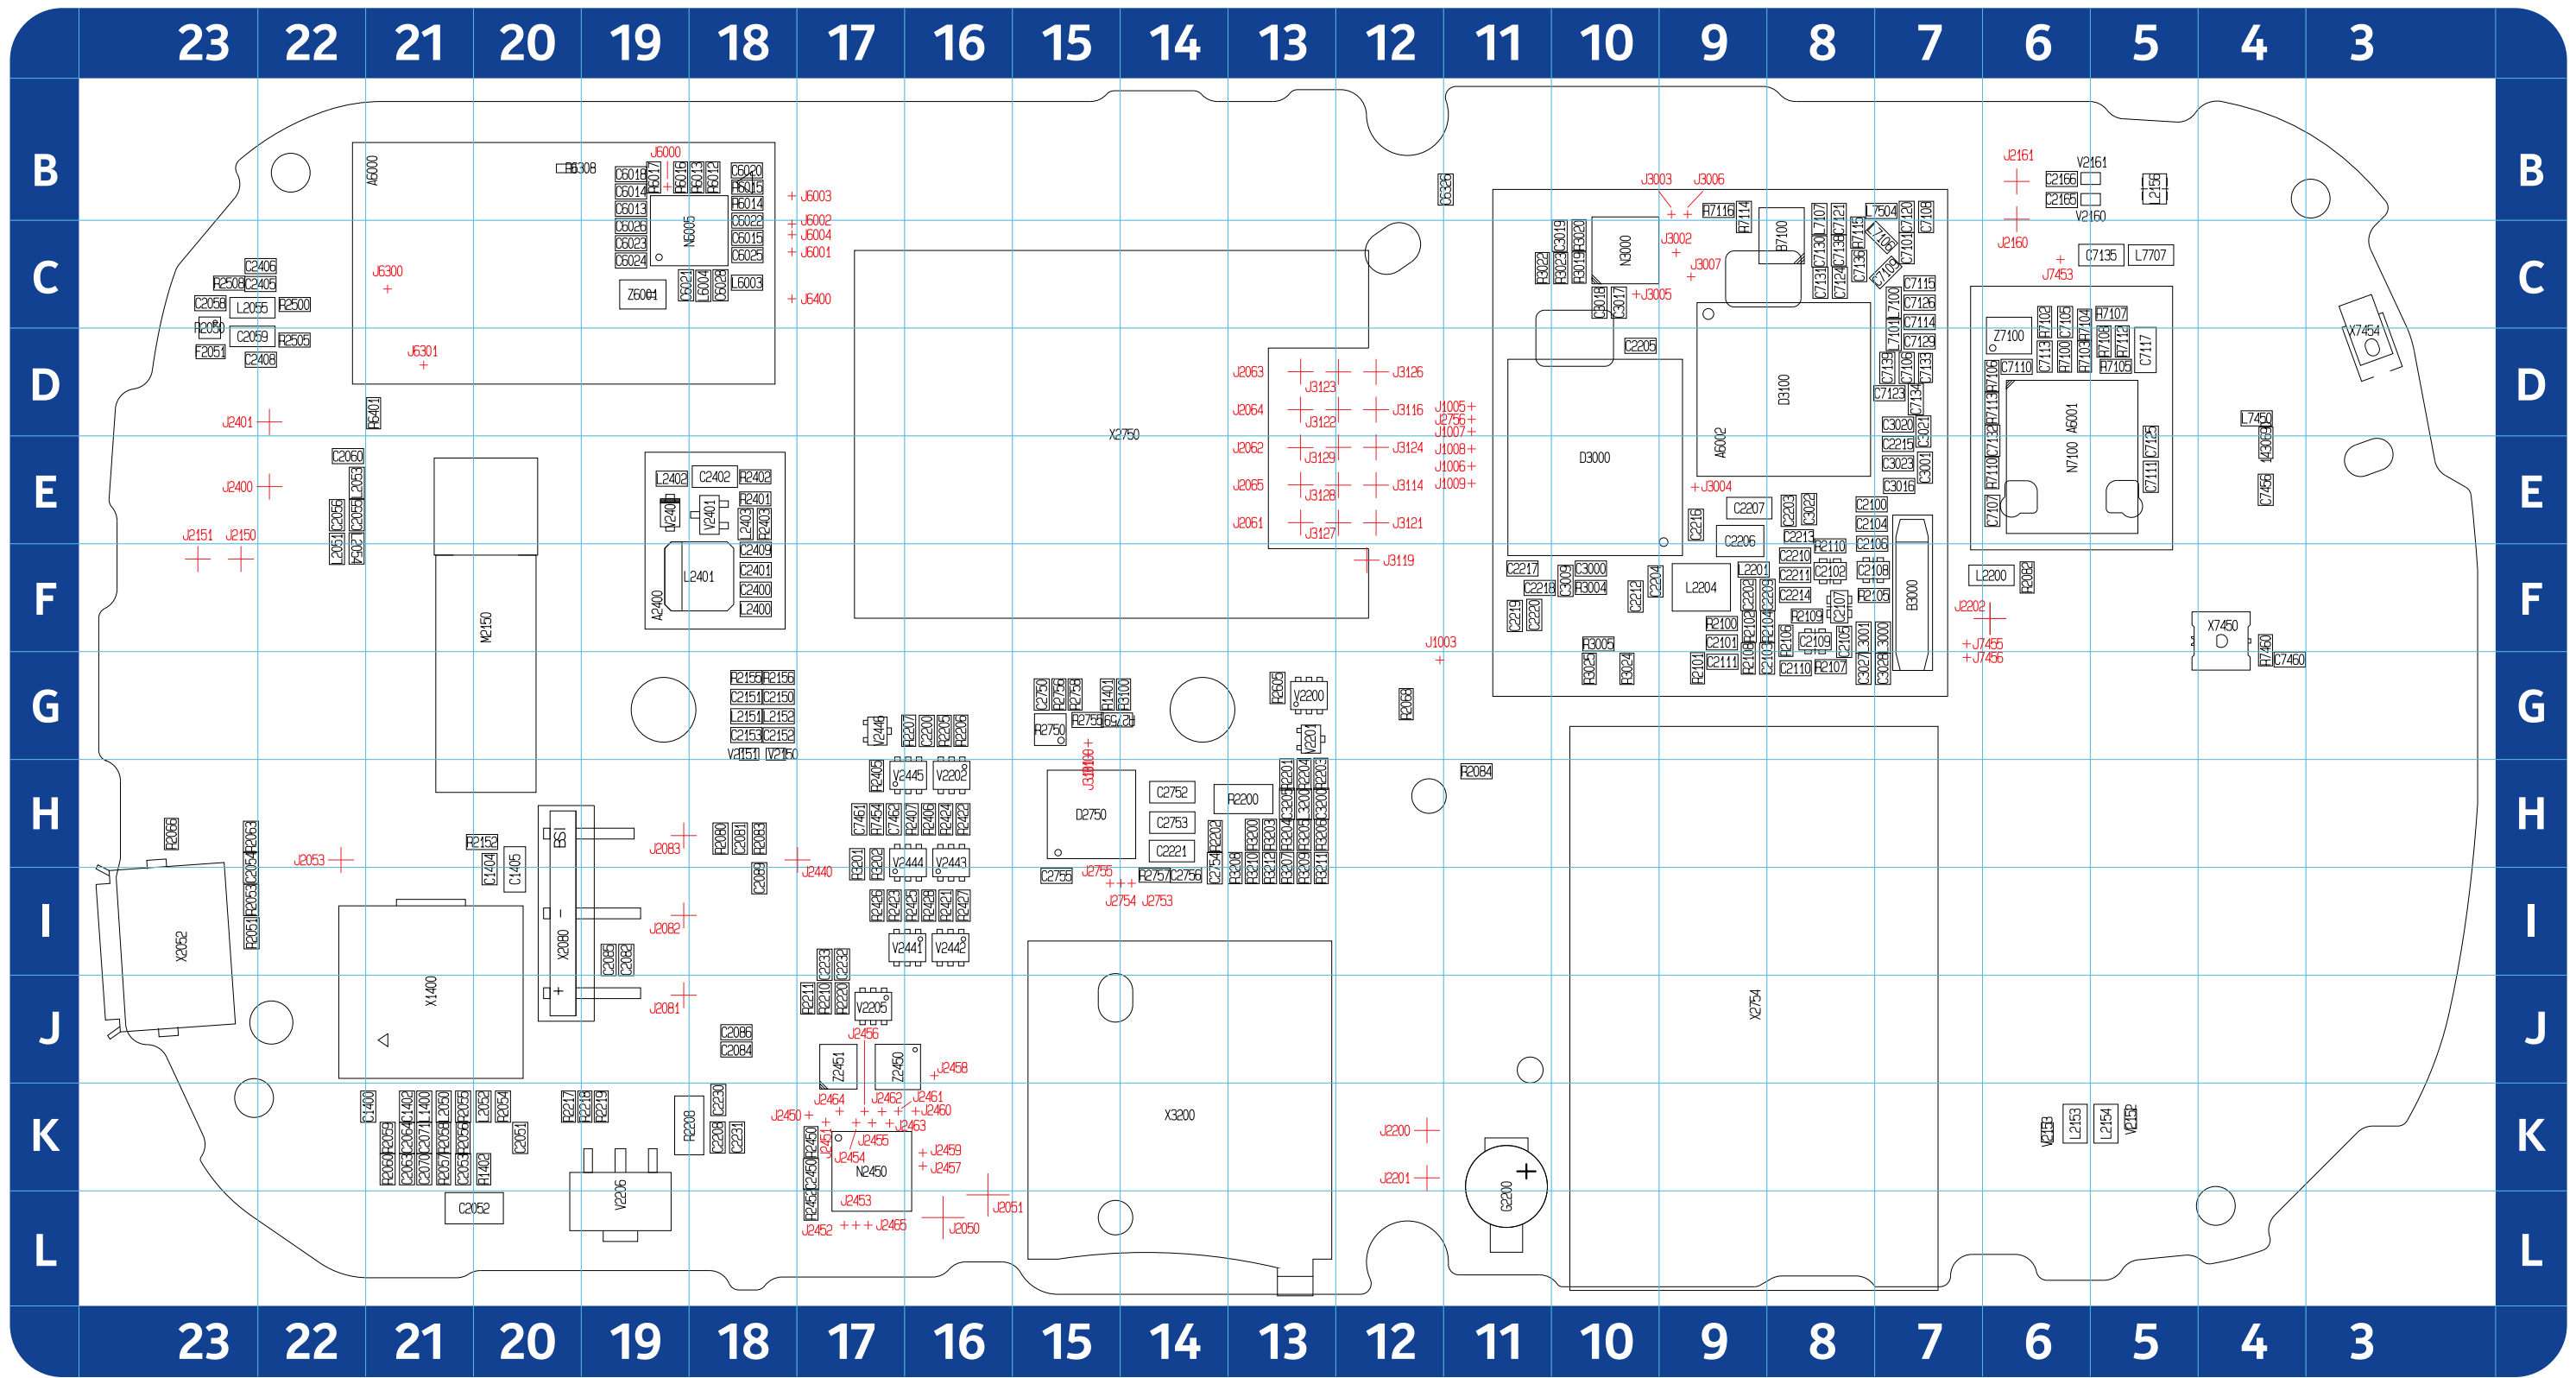

A	C1404	I20	C2063	K21	C2101	F9	C2150	G18	C2206	E9	C2217	F11	C2402	E18	C2756	I14	C3023	E7	C6022	C18	C7108	B7	C7124	C8	C7138	C8	F2051	D23	L2151	G18	L2403	E18	L7504	B7	R1402	K20	R2063	H23	R2105	F8	R2202	H14	R2219	K19	R2424	H16	R2756	G15	R3025	G10	R3209	I13	R7100	D6	R7114	B9	V2160	B5	V2443	H16	X7450	F4
A2400	E18	C1405	I20	C2064	K21	C2102	F8	C2151	G18	C2207	E9	C2218	F11	C2405	C22	C3000	F10	C3027	G8	C6023	C19	C7109	C7	C7125	E5	C7139	D7	G	L2152	G18	L3000	F7	L7707	C5	R2050	C23	R2066	H23	R2106	F8	R2203	H13	R2220	J17	R2425	I16	R2757	I14	R3100	G14	R3210	I13	R7102	C6	R7115	C8	V2161	B5	V2444	H16	X7454	D3
A6000	C20	C2051	K20	C2070	K21	C2103	G8	C2152	G18	C2208	K18	C2219	F11	C2406	C22	C3001	E7	C3028	G7	C6024	C19	C7110	D6	C7126	C7	C7456	E4	G2200	K11	L2153	K6	L3001	F8	M	R2051	I23	R2068	G12	R2107	G8	R2204	H13	R2401	E18	R2426	I17	R2758	G15	R3200	H13	R3211	I13	R7103	D6	R7116	B9	V2200	G13	V2445	H16	Z	
A6001	D6	C2052	L20	C2071	K21	C2104	E8	C2153	G18	C2209	F8	C2220	F11	C2408	D22	C3009	F10	C3200	H13	C6025	C18	C7111	E5	C7129	D7	C7460	G4	L	L2154	K5	L3200	H13	M2150	G20	R2053	I23	R2080	H18	R2108	G9	R2205	G16	R2402	E18	R2427	I16	R2759	G15	R3201	H17	R3212	I13	R7104	C6	R7453	E4	V2201	G13	V2446	G17	Z2450	J17
A6002	E9	C2053	K21	C2081	H18	C2105	F8	C2165	B6	C2210	F8	C2221	H14	C2409	F18	C3016	E7	C3205	H13	C6026	C19	C7113	D6	C7130	C8	C7461	H17	L1400	K21	L2156	B5	L6003	C18	N	R2054	K20	R2082	F6	R2109	F8	R2206	G16	R2403	E18	R2428	I16	R3004	F10	R3202	H17	R6012	B18	R7105	D5	R7454	H17	V2202	H16	X	Z2451	J17	
B	C2054	I23	C2082	I19	C2106	E8	C2166	B6	C2211	F8	C2230	K18	C2450	K17	C3017	C10	C6013	B19	C6028	C18	C7114	C7	C7131	C8	C7462	H17	L2050	K21	L2200	F6	L6004	C18	N2450	K17	R2055	K21	R2083	H18	R2110	F8	R2207	G16	R2405	H17	R2450	K17	R3005	F10	R3203	H13	R6013	B18	R7106	D6	R7460	F4	V2205	J17	X1400	J21	Z6001	C19
B3000	F7	C2055	E22	C2084	J18	C2107	F8	C2200	G16	C2212	F10	C2231	K18	C2750	G15	C3018	C10	C6014	B19	C6326	B11	C7115	C7	C7132	E6	D	L2051	F22	L2201	F9	L7100	C7	N3000	C10	R2056	K21	R2084	H11	R2152	H20	R2208	K18	R2406	H16	R2452	L17	R3019	C10	R3204	H13	R6014	B18	R7107	C5	V	V2206	L19	X2052	I23	Z7100	D6	
B7100	C8	C2056	E22	C2085	I19	C2108	F8	C2202	F9	C2213	E8	C2232	I17	C2752	H14	C3019	C10	C6015	C18	C7101	C7	C7117	D5	C7133	D7	D2750	H15	L2052	K20	L2204	F9	L7101	D7	N6005	C18	R2057	K21	R2100	F9	R2155	G18	R2210	J17	R2407	H16	R2508	C23	R3020	C10	R3205	H13	R6015	B18	R7108	D5	V2150	G18	V2400	E19	X2080	I19	
C	C2058	C23	C2086	J18	C2109	F8	C2203	E8	C2214	F8	C2233	I17	C2753	H14	C3020	D7	C6018	B19	C7105	C6	C7120	B7	C7134	D7	D3000	E10	L2053	E22	L2400	F18	L7106	C7	N7100	E6	R2058	K21	R2101	G9	R2156	G18	R2211	J17	R2421	I16	R2605	G13	R3022	C11	R3206	H13	R6016	B19	R7110	E6	V2151	G18	V2401	E18	X2750	D15		
C1400	K21	C2059	D23	C2089	I18	C2110	G8	C2204	F10	C2215	E7	C2400	F18	C2754	I14	C3021	D7	C6020	B18	C7106	D7	C7121	B8	C7135	C5	D3100	D8	L2054	F22	L2401	F18	L7107	B8	R	R2059	K21	R2102	F9	R2200	H13	R2217	K20	R2422	H16	R2750	G15	R3023	C10	R3207	I13	R6017	B19	R7112	D5	V2152	K5	V2441	I16	X2754	J9		
C1402	K21	C2060	E22	C2100	E8	C2111	G9	C2205	D10	C2216	E9	C2401	F18	C2755	I15	C3022	E8	C6021	C19	C7107	E6	C7123	D7	C7136	C8	F	L2055	C23	L2402	E19	L7450	D4	R1401	G15	R2060	K21	R2104	F8	R2201	H13	R2218	K19	R2423	I17	R2755	G15	R3024	G10	R3208	I13	R6308	B20	R7113	D6	V2153	K6	V2442	I16	X3200	K14		

www.s-manuals.com