

DVD Player

DVP3015K, DVP3020, DVP3040, DVP3040K
DVP3002, DVP3020k, DVP3026k, DVP3026
DVP3046, DVP3042, DVP3028

Service

Service

Service

DVP3040/12 /37
DVP3040K/51/55/98/93/78
DVP3015K/55/93/98/03/74
DVP3020/98/55/05/94/78/77/75
DVP3046/94,DVP3020/61/74/96
DVP3042/12, DVP3028/94
DVP3026K/93/98
DVP3026/94
DVP3020K/98/61/55/03/74/96
DVP3002/93



Service Manual

Copyright 2006 Philips Consumer Electronics B.V. Eindhoven, The Netherlands
All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, or otherwise without the prior permission of Philips.

Published by TCL-HY 0601 Service Audio Printed in The Netherlands Subject to modification
Version 1.2


**CLASS 1
LASER PRODUCT**




3139 785 31742

PHILIPS

DVP3002 WIRING DIAGRAM

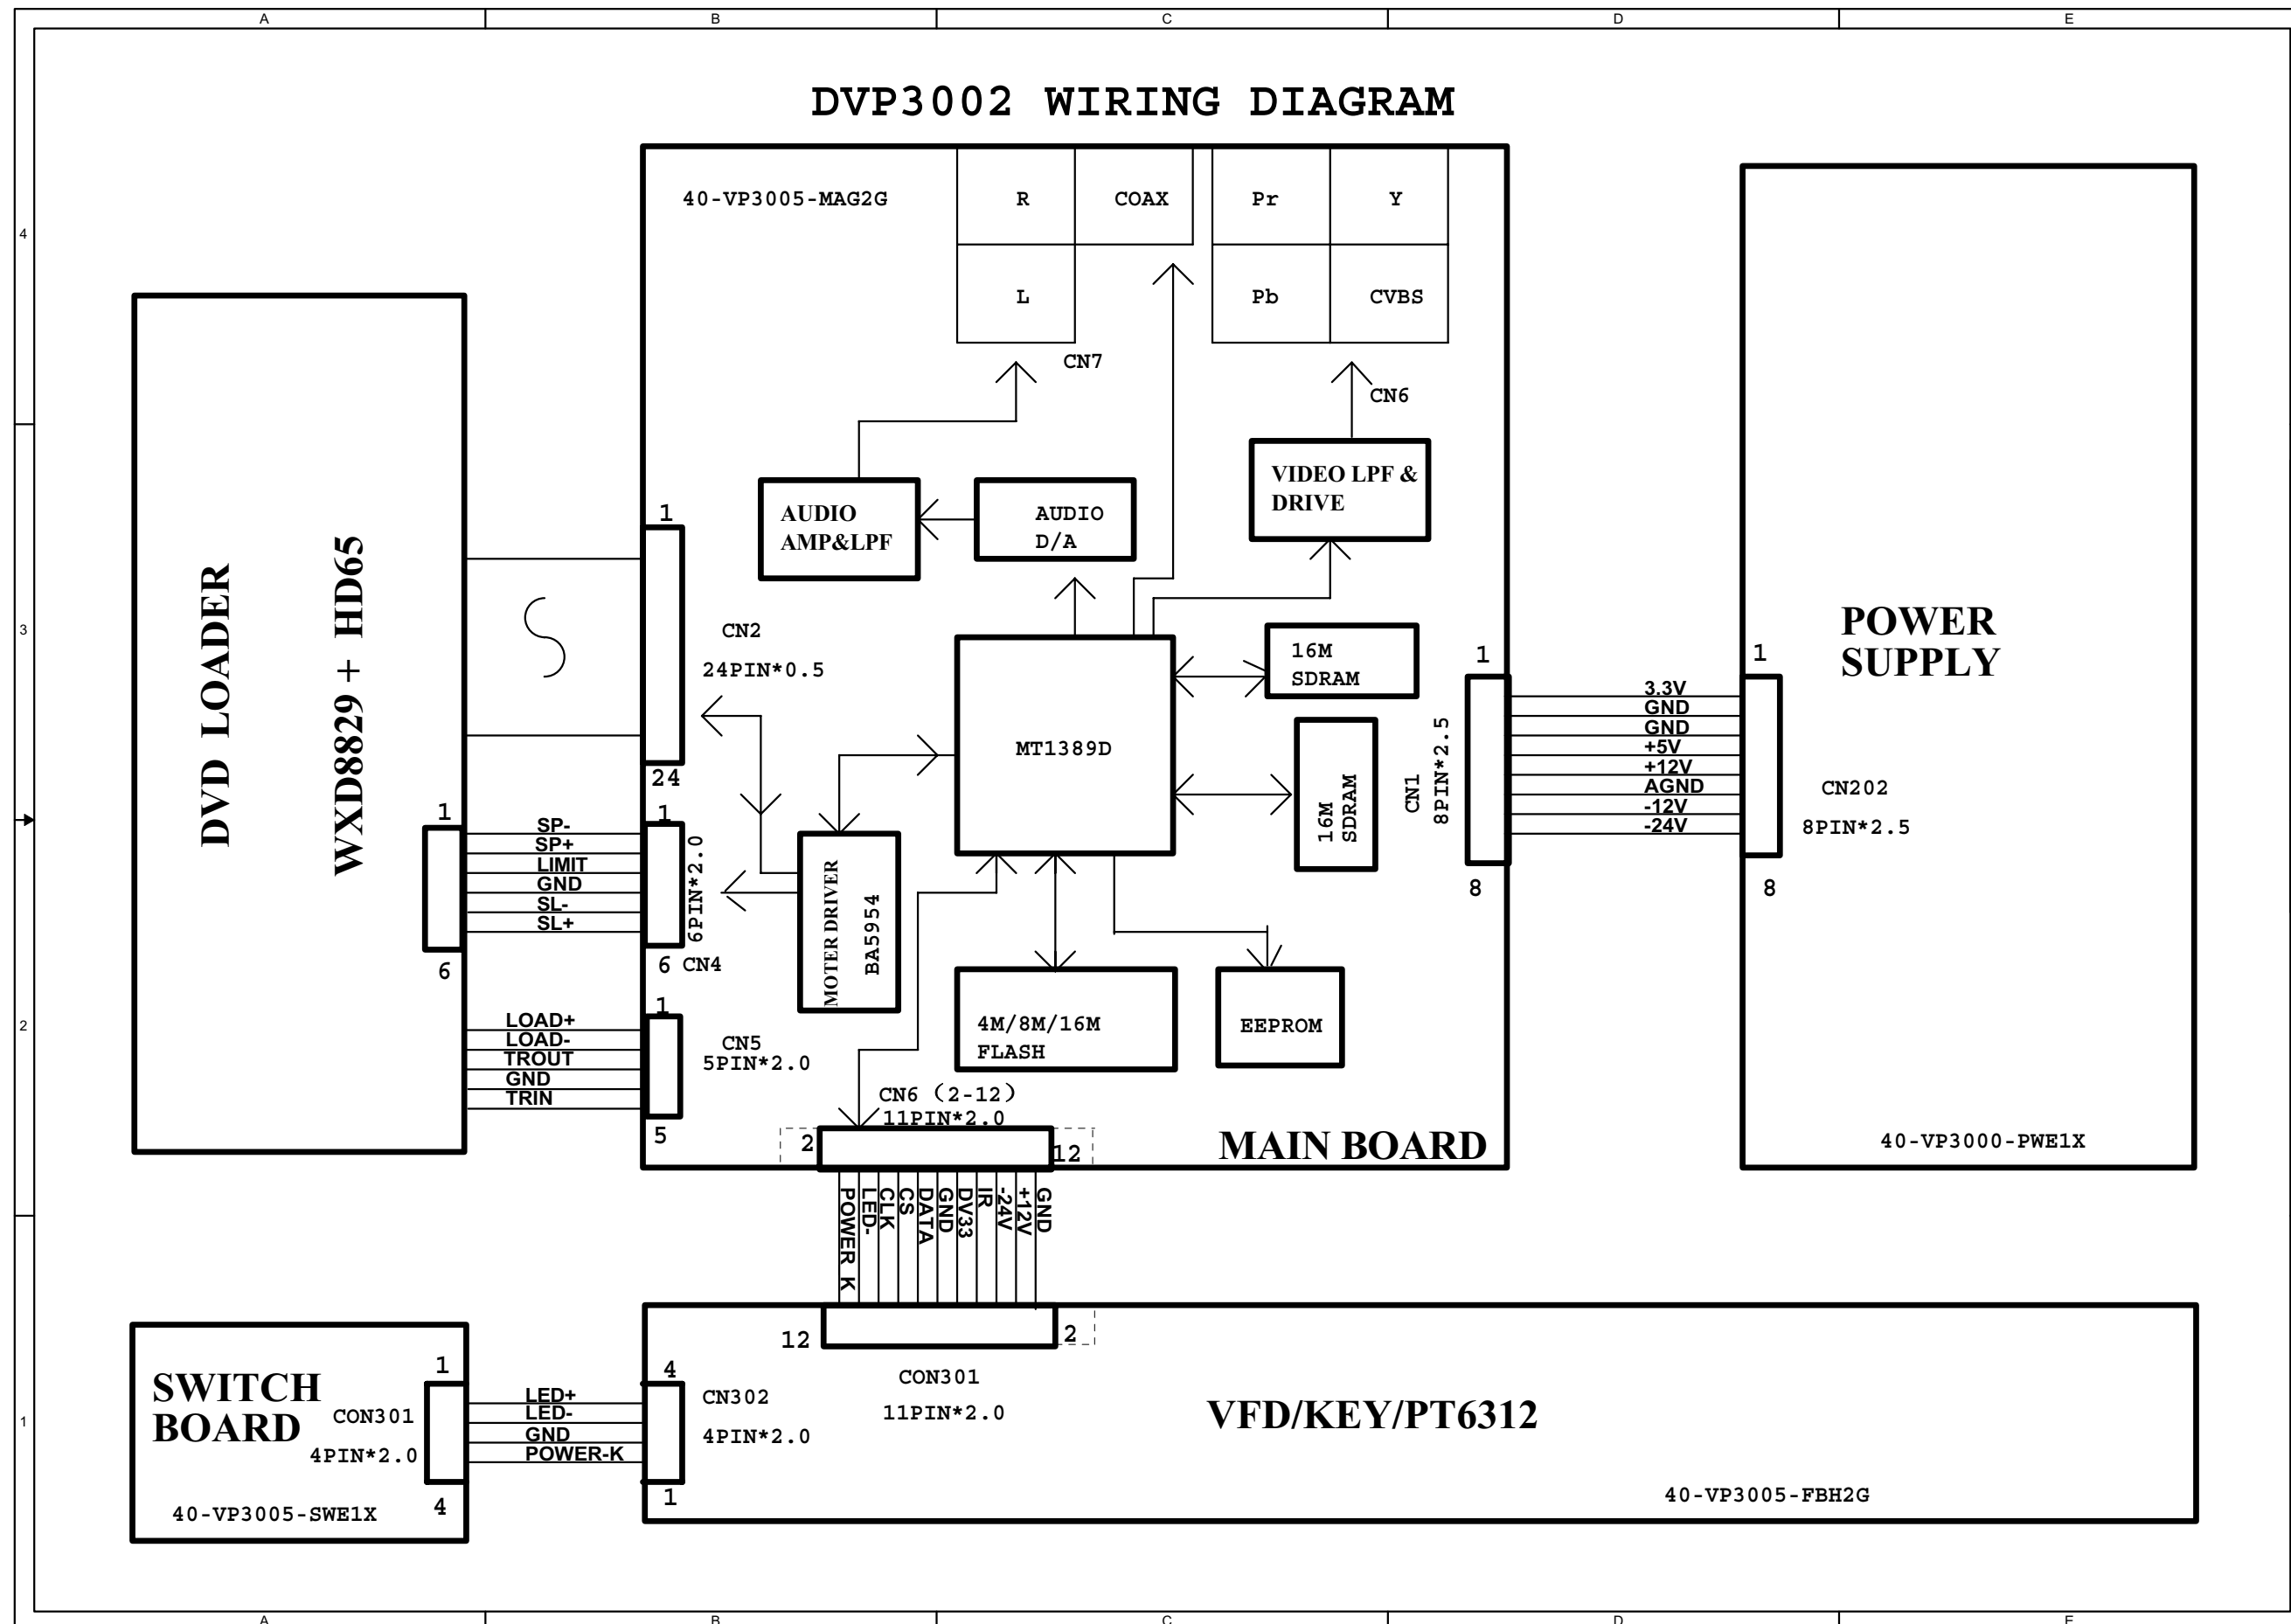


DVP3015K/3020/3020K WIRING DIAGRAM

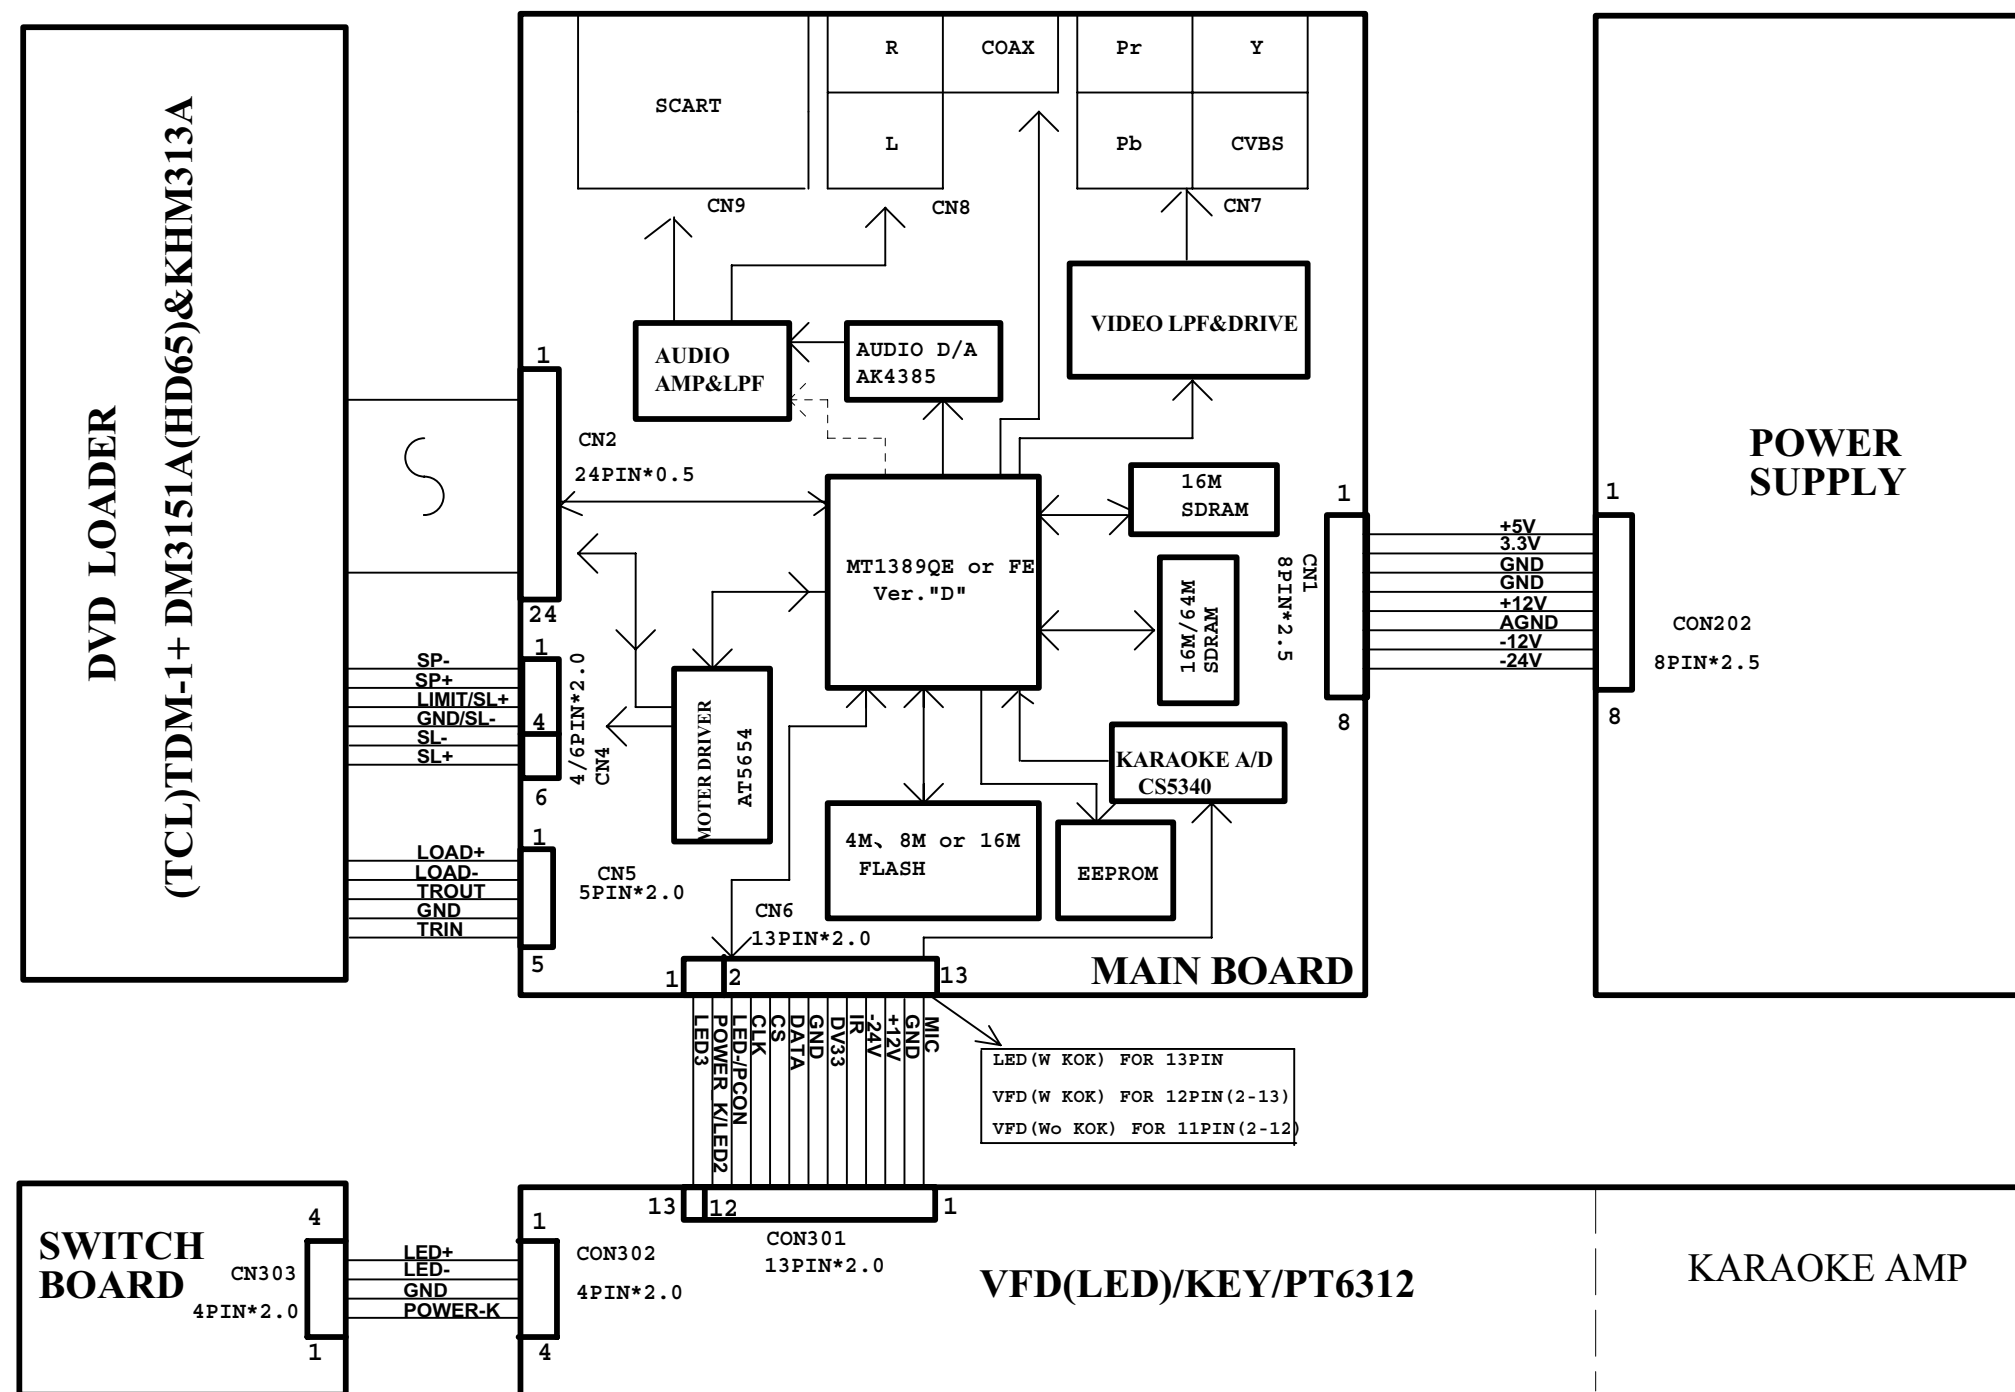


Remarks: DVP3020 version has no Karaoke output, DVP3020/05 version has SCART output.

DVP3015K/93, 3026(K)/XX,3028 WIRING DIAGRAM

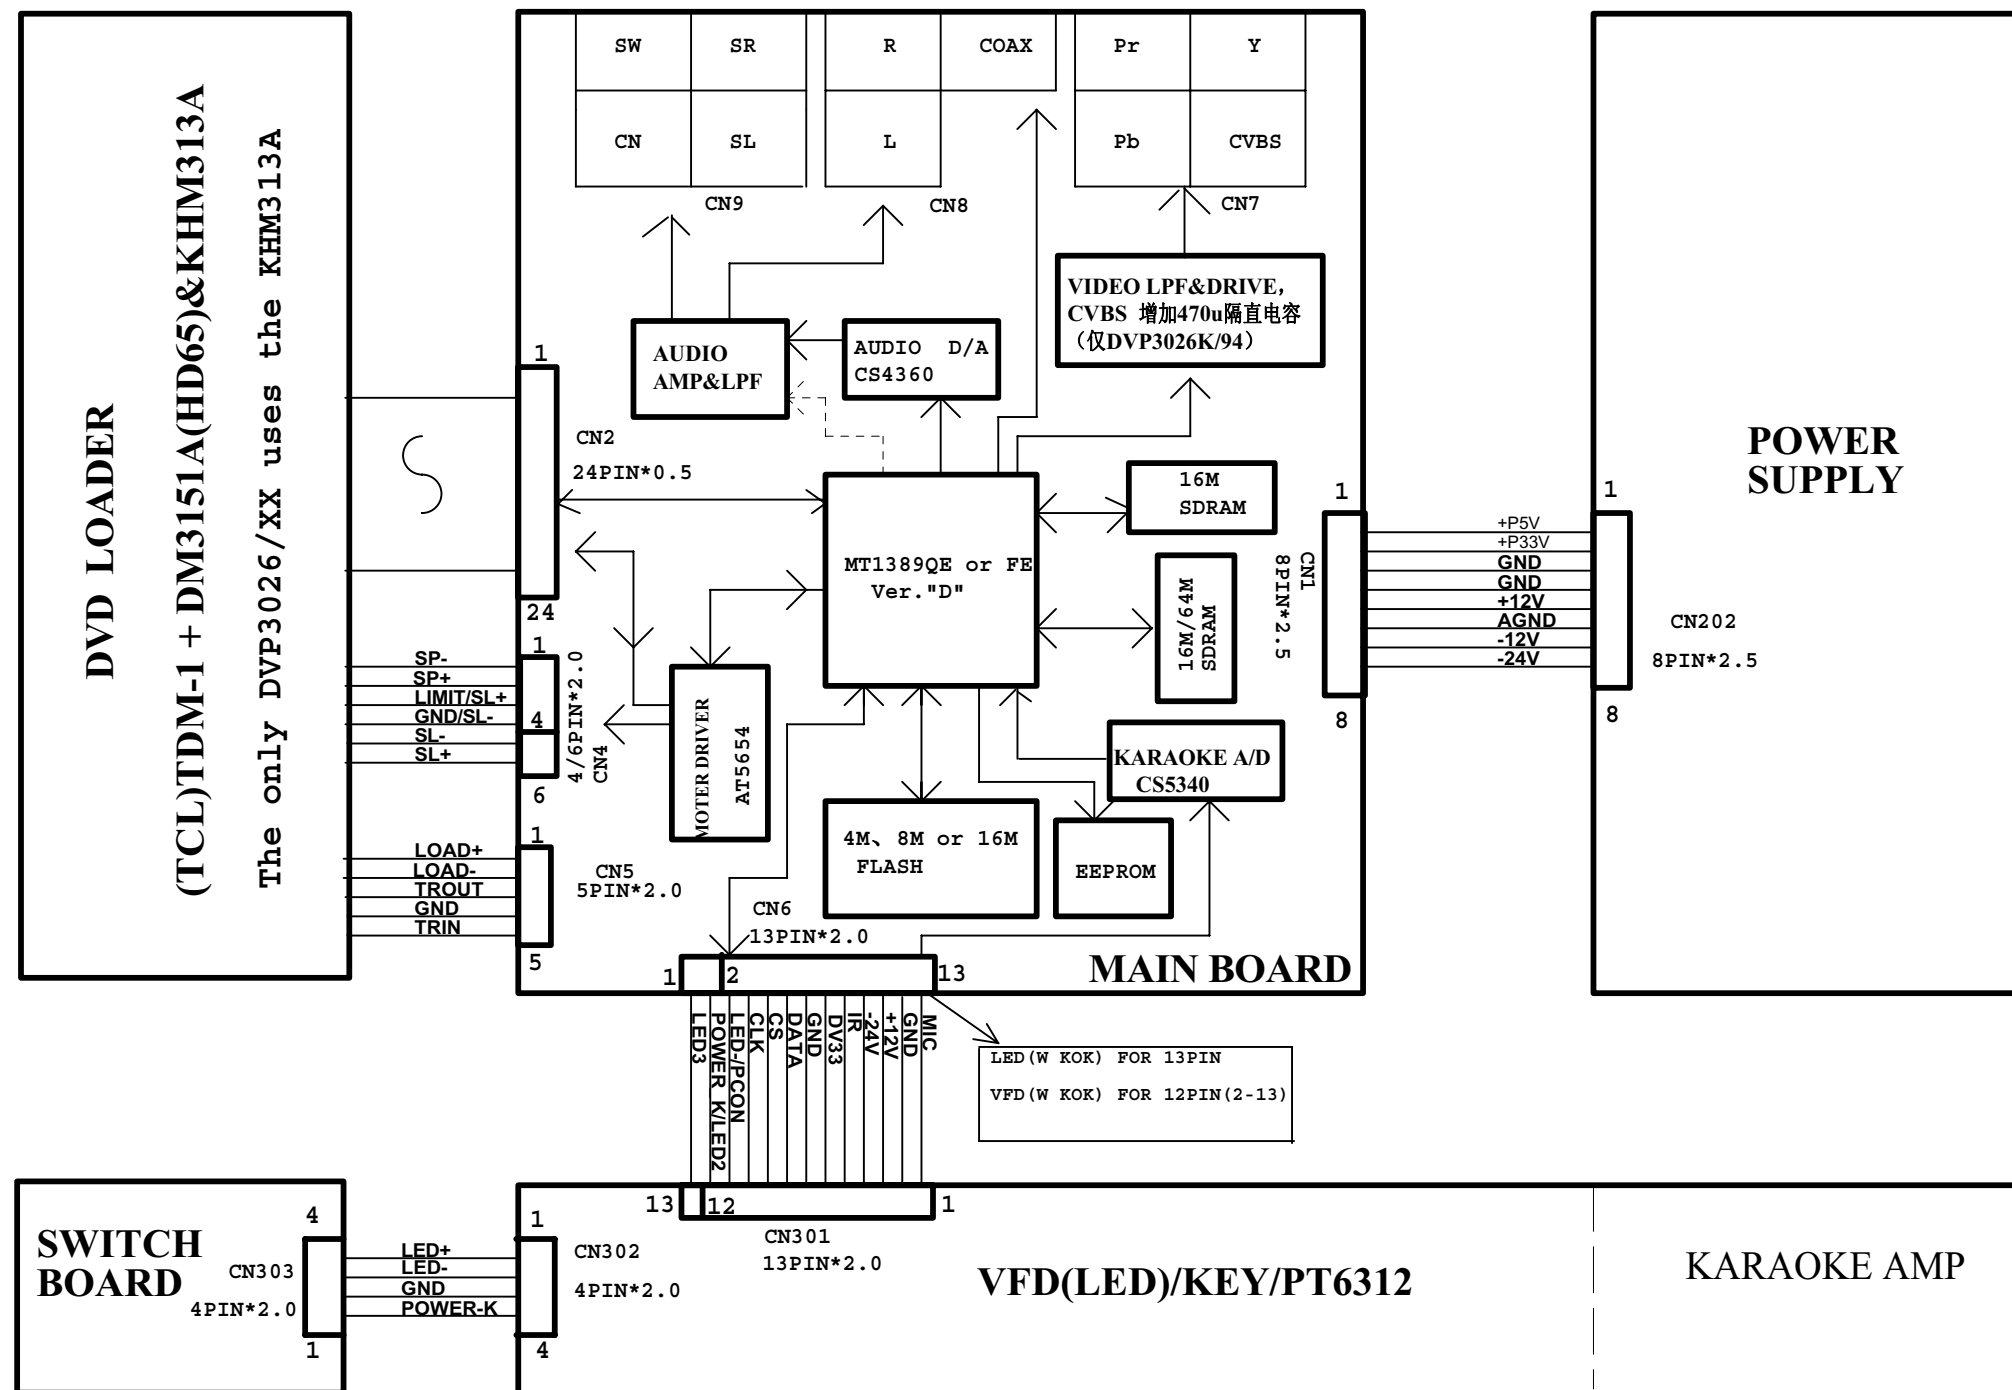


DVP3040/XX, 3040K/XX DVP3042/12 WIRING DIAGRAM


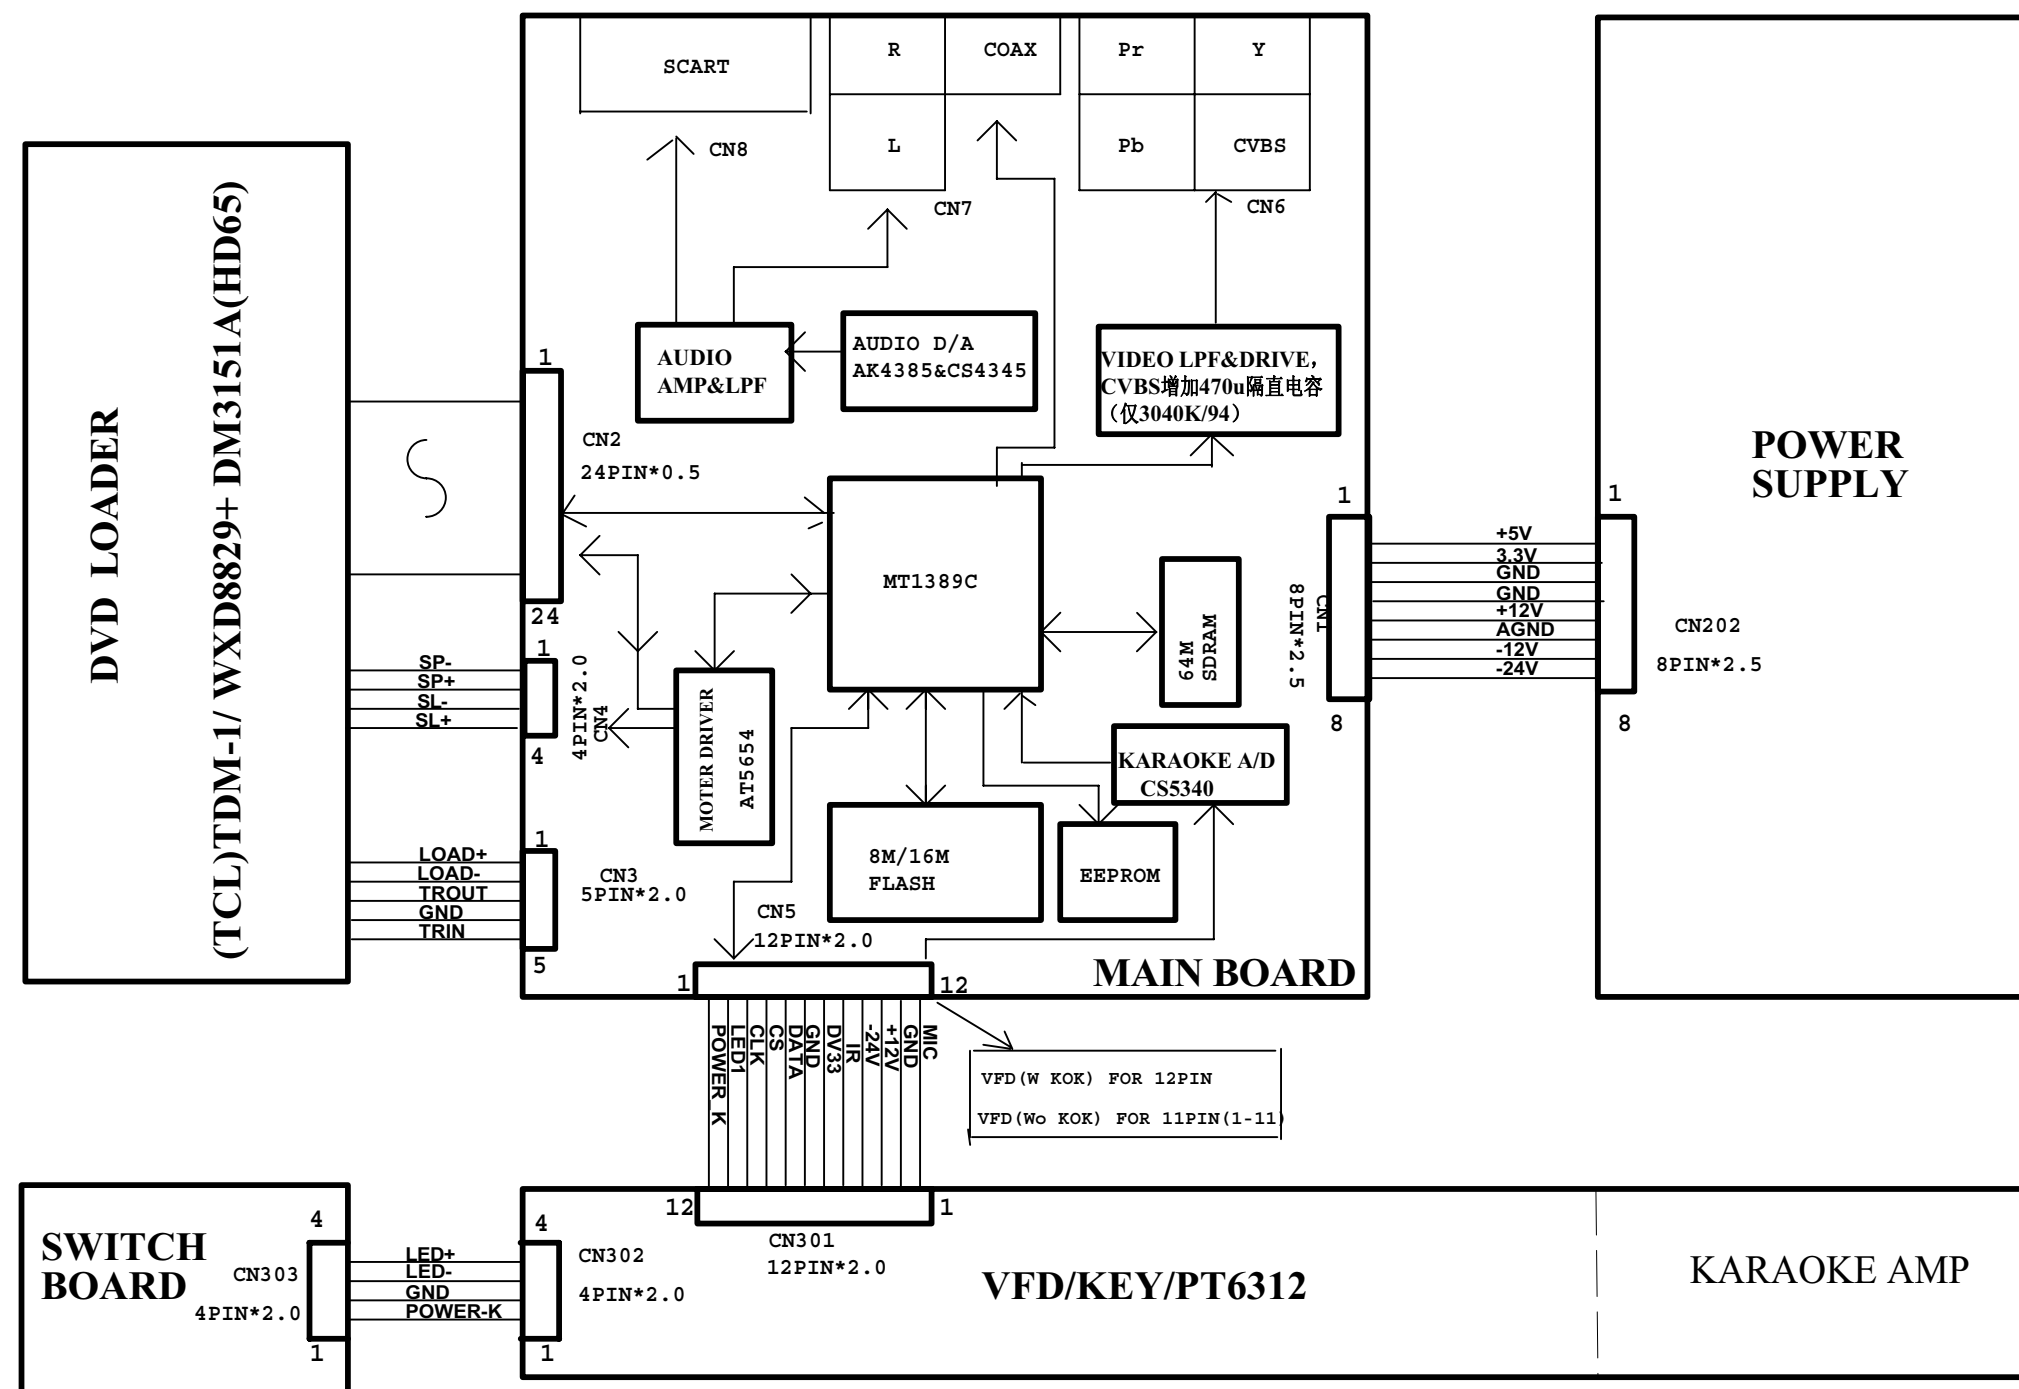


Remarks:





Only version DVP3040/3040K hold the SCART output module.




Front Board for DVP3015K

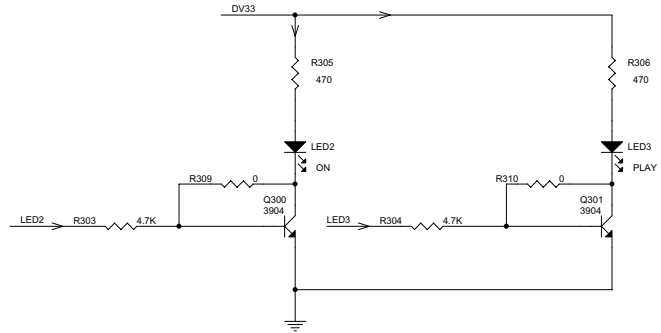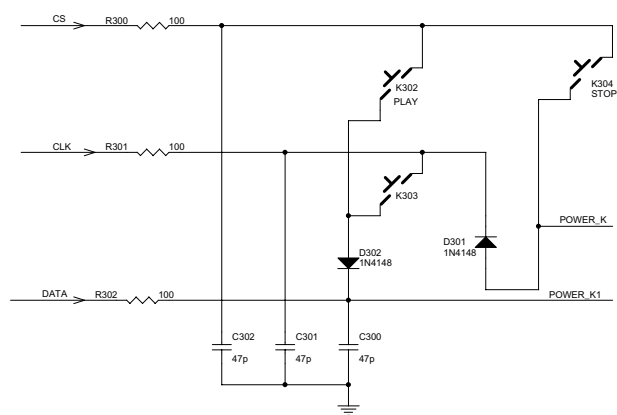





C200	C1	R300	A1
C201	C1	R301	B1
C202	D1	R302	B1
C203	D1	R303	B3
C204	D2	R304	B3
C205	C2	R305	A3
C206	D2	R306	A4
C207	D1	R307	C3
C208	D2	R308	C3
C209	D2	R309	B3
C300	B1	R310	B4
C301	B1	K302	A1
C302	B2	K303	B1
C303	C3	K304	A2
CE200	C1	D200	D1
CE201	C1	ZD200	D2
CE300	C3	D301	B2
R200	D1	D302	B1
R201	D1	Q200	D1
R202	D1	Q300	B3
R203	D1	Q301	B4
R204	D1	LED2	B3
R205	C2	LED3	B4
R206	D2	MIC200	D1
R207	D2	U302	D2
R208	D2	RP200	D2
R209	D2	REM301	C3
R210	C2	CN301	D3
R211	C2	CN302	C3
R212	C2		

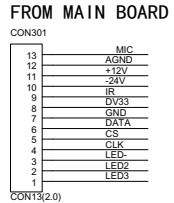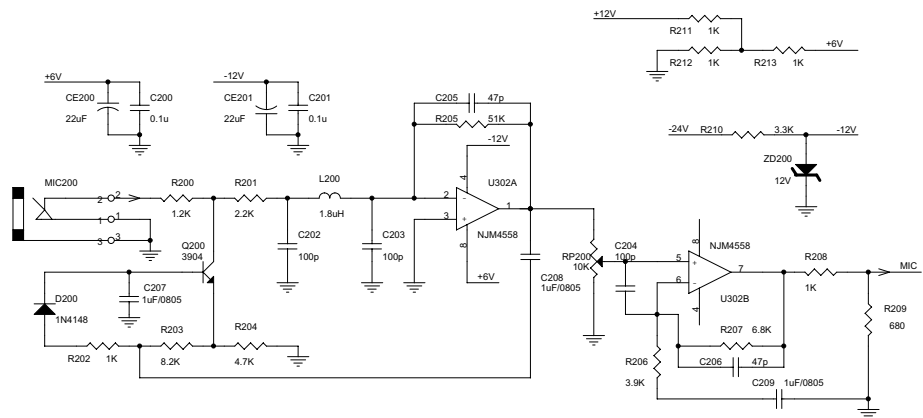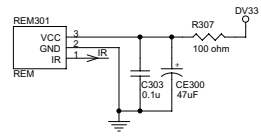

Front Board For DVP3020(K)/3026(K)/3028/3040(K)/3042/3046

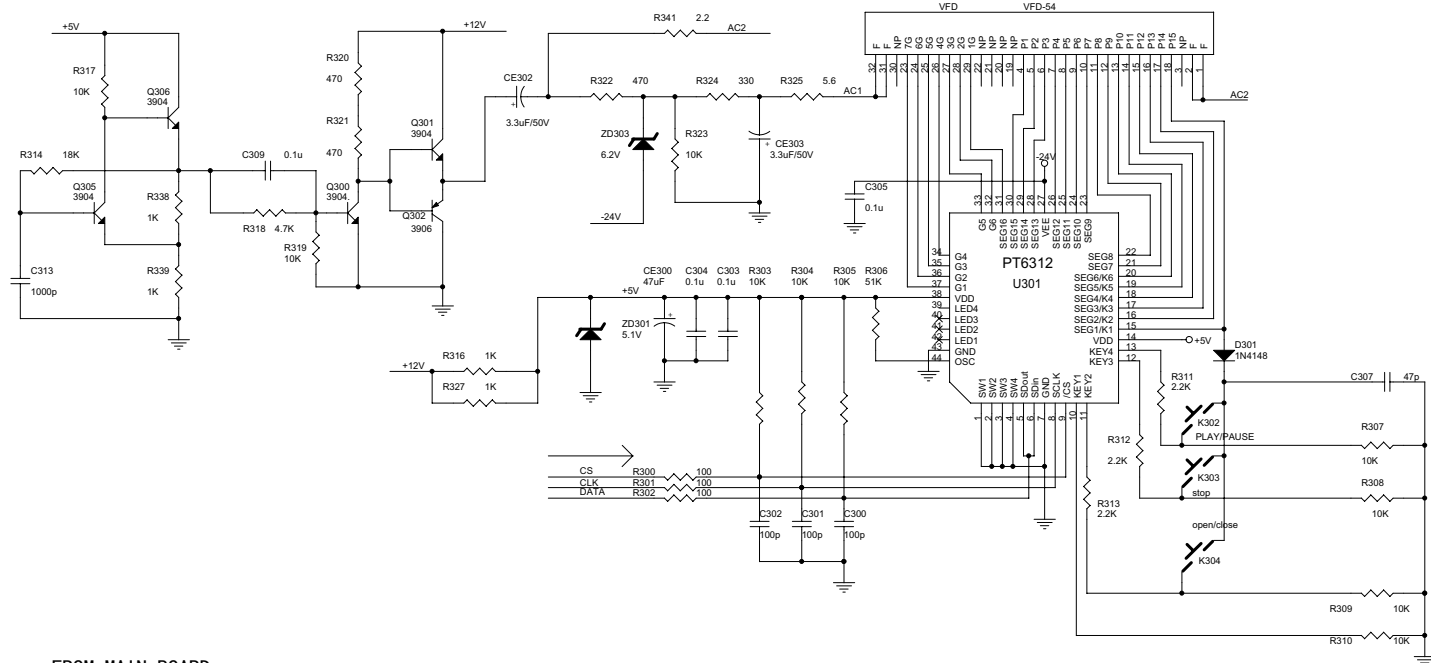

FROM MAIN BOARD

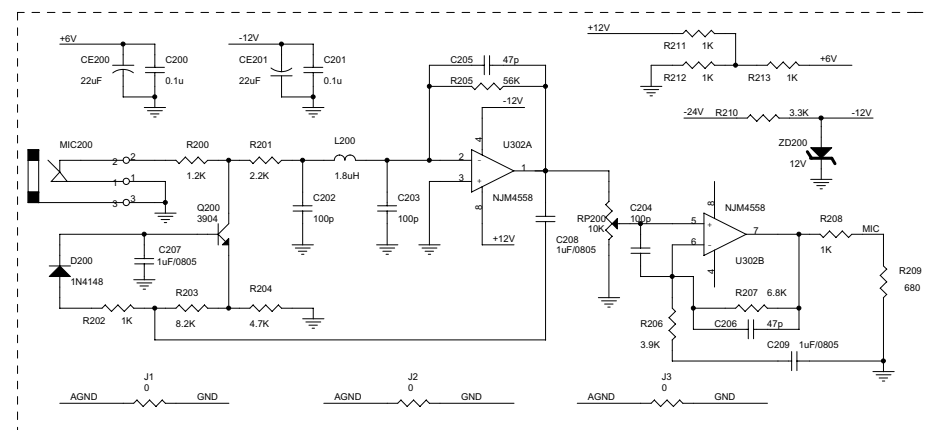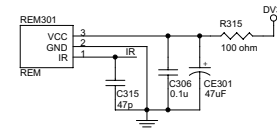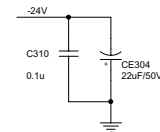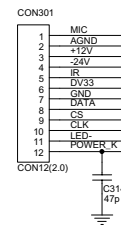

When have no karaoke, this inside of circle a piece is "OPEN"

R200	E1	C305	B3
R201	E2	C306	D4
R202	E1	C307	B4
R203	E1	C308	B4
R204	E2	C309	B1
R205	E2	C310	D2
R206	E2	C311	C4
R207	E3	C312	C4
R208	E3	C313	B1
R209	E3	C314	D1
R210	E3	C315	D4
R300	C2	C316	E4
R301	C2	CE200	E1
R302	C2	CE201	E2
R303	B3	CE300	B2
R304	B3	CE301	D4
R305	B3	CE302	A2
R306	B3	CE303	A3
R307	B4	CE304	D2
R308	C4	J1	F1
R309	C4	J2	F2
R310	C4	J3	F2
R311	B3	L200	E2
R312	B3	Q200	E1
R313	C3	Q300	B2
R314	B1	Q301	B2
R315	D5	Q302	B2
R316	B2	Q305	B1
R317	A1	Q306	A1
R318	B1	D200	E1
R319	B2	D301	B4
R320	A2	D302	B4
R321	A2	ZD200	E3
R322	A2	ZD301	B2
R323	A2	ZD303	A2
R324	A2	U302A	E2
R325	A3	U302B	E3
R326	E4	RP200	E2
R338	B1	MIC200	E1
R339	B1	K302	B4
C200	E1	K303	C4
C201	E2	K304	C4
C202	E2	K305	B4
C203	E2		
C204	E2	U301	B3
C205	E2	CON301	C1
C206	E3	CON302	E4
C207	E1	REM301	D4
C208	E2	VFD	A3
C209	F3		
C300	C3		
C301	C3		
C302	C3		
C303	B3		
C304	B2		

Top view of the 40-P3020K-FBG2G module. Components labeled include: 1.LED+, 2.LED-, 3.GND, 4.P.K, CON302, G1, VFD, 9.OS, 8.DAT.A, 7.GND, 6.DV33, 5.I.R, 4.-24V, 3.+12V, 2.A.GND, 1.M.C, CON301, CE304, CE300, CE302, CE303, ZD301, ZD303, REM301, K302, K303, ZD200, CE201, CE200, RP200, MIC200, G2, D200, and 12.P.K. The part number 40-P3020K-FBG2G is printed on the board.

40-P3020K-FBG2G

Top view of the 40-P3020K-FBG2G board. The board is populated with various components including resistors (R201, R202, R203, R204, R205, R206, R207, R208, R209, R210, R211, R212, R213, R214, R215, R216, R217, R218, R219, R220, R221, R222, R223, R224, R225, R226, R227, R228, R229, R230, R231, R232, R233, R234, R235, R236, R237, R238, R239, R240, R241, R242, R243, R244, R245, R246, R247, R248, R249, R250, R251, R252, R253, R254, R255, R256, R257, R258, R259, R260, R261, R262, R263, R264, R265, R266, R267, R268, R269, R270, R271, R272, R273, R274, R275, R276, R277, R278, R279, R280, R281, R282, R283, R284, R285, R286, R287, R288, R289, R290, R291, R292, R293, R294, R295, R296, R297, R298, R299, R300, R301, R302, R303, R304, R305, R306, R307, R308, R309, R310, R311, R312, R313, R314, R315, R316, R317, R318, R319, R320, R321, R322, R323, R324, R325, R326, R327, R328, R329, R330, R331, R332, R333, R334, R335, R336, R337, R338, R339, R340, R341, R342, R343, R344, R345, R346, R347, R348, R349, R350, R351, R352, R353, R354, R355, R356, R357, R358, R359, R360, R361, R362, R363, R364, R365, R366, R367, R368, R369, R370, R371, R372, R373, R374, R375, R376, R377, R378, R379, R380, R381, R382, R383, R384, R385, R386, R387, R388, R389, R390, R391, R392, R393, R394, R395, R396, R397, R398, R399, R400, R401, R402, R403, R404, R405, R406, R407, R408, R409, R410, R411, R412, R413, R414, R415, R416, R417, R418, R419, R420, R421, R422, R423, R424, R425, R426, R427, R428, R429, R430, R431, R432, R433, R434, R435, R436, R437, R438, R439, R440, R441, R442, R443, R444, R445, R446, R447, R448, R449, R450, R451, R452, R453, R454, R455, R456, R457, R458, R459, R460, R461, R462, R463, R464, R465, R466, R467, R468, R469, R470, R471, R472, R473, R474, R475, R476, R477, R478, R479, R480, R481, R482, R483, R484, R485, R486, R487, R488, R489, R490, R491, R492, R493, R494, R495, R496, R497, R498, R499, R500, R501, R502, R503, R504, R505, R506, R507, R508, R509, R510, R511, R512, R513, R514, R515, R516, R517, R518, R519, R520, R521, R522, R523, R524, R525, R526, R527, R528, R529, R530, R531, R532, R533, R534, R535, R536, R537, R538, R539, R540, R541, R542, R543, R544, R545, R546, R547, R548, R549, R550, R551, R552, R553, R554, R555, R556, R557, R558, R559, R560, R561, R562, R563, R564, R565, R566, R567, R568, R569, R570, R571, R572, R573, R574, R575, R576, R577, R578, R579, R580, R581, R582, R583, R584, R585, R586, R587, R588, R589, R590, R591, R592, R593, R594, R595, R596, R597, R598, R599, R600, R601, R602, R603, R604, R605, R606, R607, R608, R609, R610, R611, R612, R613, R614, R615, R616, R617, R618, R619, R620, R621, R622, R623, R624, R625, R626, R627, R628, R629, R630, R631, R632, R633, R634, R635, R636, R637, R638, R639, R640, R641, R642, R643, R644, R645, R646, R647, R648, R649, R650, R651, R652, R653, R654, R655, R656, R657, R658, R659, R660, R661, R662, R663, R664, R665, R666, R667, R668, R669, R670, R671, R672, R673, R674, R675, R676, R677, R678, R679, R680, R681, R682, R683, R684, R685, R686, R687, R688, R689, R690, R691, R692, R693, R694, R695, R696, R697, R698, R699, R700, R701, R702, R703, R704, R705, R706, R707, R708, R709, R710, R711, R712, R713, R714, R715, R716, R717, R718, R719, R720, R721, R722, R723, R724, R725, R726, R727, R728, R729, R730, R731, R732, R733, R734, R735, R736, R737, R738, R739, R740, R741, R742, R743, R744, R745, R746, R747, R748, R749, R750, R751, R752, R753, R754, R755, R756, R757, R758, R759, R760, R761, R762, R763, R764, R765, R766, R767, R768, R769, R770, R771, R772, R773, R774, R775, R776, R777, R778, R779, R780, R781, R782, R783, R784, R785, R786, R787, R788, R789, R790, R791, R792, R793, R794, R795, R796, R797, R798, R799, R800, R801, R802, R803, R804, R805, R806, R807, R808, R809, R810, R811, R812, R813, R814, R815, R816, R817, R818, R819, R820, R821, R822, R823, R824, R825, R826, R827, R828, R829, R830, R831, R832, R833, R834, R835, R836, R837, R838, R839, R840, R841, R842, R843, R844, R845, R846, R847, R848, R849, R850, R851, R852, R853, R854, R855, R856, R857, R858, R859, R860, R861, R862, R863, R864, R865, R866, R867, R868, R869, R870, R871, R872, R873, R874, R875, R876, R877, R878, R879, R880, R881, R882, R883, R884, R885, R886, R887, R888, R889, R890, R891, R892, R893, R894, R895, R896, R897, R898, R899, R900, R901, R902, R903, R904, R905, R906, R907, R908, R909, R910, R911, R912, R913, R914, R915, R916, R917, R918, R919, R920, R921, R922, R923, R924, R925, R926, R927, R928, R929, R930, R931, R932, R933, R934, R935, R936, R937, R938, R939, R940, R941, R942, R943, R944, R945, R946, R947, R948, R949, R950, R951, R952, R953, R954, R955, R956, R957, R958, R959, R960, R961, R962, R963, R964, R965, R966, R967, R968, R969, R970, R971, R972, R973, R974, R975, R976, R977, R978, R979, R980, R981, R982, R983, R984, R985, R986, R987, R988, R989, R990, R991, R992, R993, R994, R995, R996, R997, R998, R999, R1000, R1001, R1002, R100

40-VP3020-SWB1X





4 3 2 1 CON301 P1 C317 K301 C318 C319 LED1

CON301


1	MIC
2	AGND
3	+12V
4	-24V
5	IR
6	DV33
7	GND
8	DATA
9	CS
10	CLK
11	LED-
12	POWER K

CON12(2.0)

C314
47p

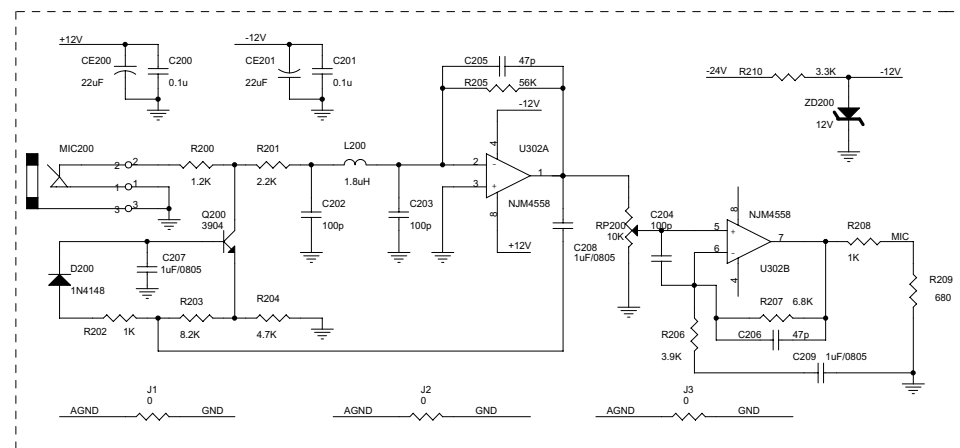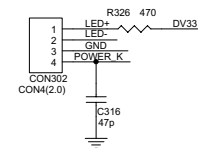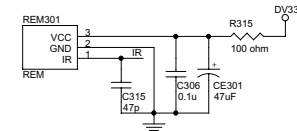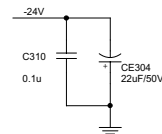

When have no karaoke, this inside of circle a piece is "OPEN"

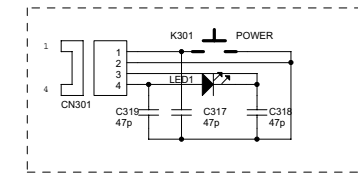


SWITCH BOARD

R200	E1	C305
R201	E2	C306
R202	E1	C307
R203	E1	C308
R204	E2	C309
R205	E2	C310
R206	E2	C311
R207	E3	C312
R208	E3	C313
R209	E3	C314
R210	E3	C315
R300	C2	C316
R301	C2	C317
R302	C2	C318
R303	B3	C319
R304	B3	
R305	B3	CE200
R306	B3	CE201
R307	B4	CE300
R308	C4	CE301
R309	C4	CE302
R310	C4	CE303
R311	B3	CE304
R312	B3	
R313	C3	CON301
R314	B1	CON302
R315	D5	J1
R316	B2	J2
R317	A1	J3
R318	B1	LED1
R319	B2	L200
R320	A2	Q200
R321	A2	Q300
R322	A2	Q301
R323	A2	Q302
R324	A2	Q305
R325	A3	Q306
R326	E4	D200
R338	B1	D301
R339	B1	D302
REM301	D4	ZD200
RP200	E2	ZD301
		ZD303
C200	E1	U302A
C201	E2	U302B
C202	E2	MIC200
C203	E2	
C204	E2	K301
C205	E2	K302
C206	E3	K303
C207	E1	K304
C208	E2	K305
C209	F3	K306
C300	C3	U301
C301	C3	VFD
C302	C3	
C303	B3	
C304	B2	

40-VP3005-FB2G


Top view of the 40-VP3005-FB2G PCB. The board is populated with various components including resistors (R200, R201, R202, R203, R204, R205, R206, R207, R208, R209, R210, R211, R212, R213, R214, R215, R216, R217, R218, R219, R220, R221, R222, R223, R224, R225, R226, R227, R228, R229, R230, R231, R232, R233, R234, R235, R236, R237, R238, R239, R240, R241, R242, R243, R244, R245, R246, R247, R248, R249, R250, R251, R252, R253, R254, R255, R256, R257, R258, R259, R260, R261, R262, R263, R264, R265, R266, R267, R268, R269, R270, R271, R272, R273, R274, R275, R276, R277, R278, R279, R280, R281, R282, R283, R284, R285, R286, R287, R288, R289, R290, R291, R292, R293, R294, R295, R296, R297, R298, R299, R300, R301, R302, R303, R304, R305, R306, R307, R308, R309, R310, R311, R312, R313, R314, R315, R316, R317, R318, R319, R320, R321, R322, R323, R324, R325, R326, R327, R328, R329, R330, R331, R332, R333, R334, R335, R336, R337, R338, R339, R340, R341, R342, R343, R344, R345, R346, R347, R348, R349, R350, R351, R352, R353, R354, R355, R356, R357, R358, R359, R360, R361, R362, R363, R364, R365, R366, R367, R368, R369, R370, R371, R372, R373, R374, R375, R376, R377, R378, R379, R380, R381, R382, R383, R384, R385, R386, R387, R388, R389, R390, R391, R392, R393, R394, R395, R396, R397, R398, R399, R400, R401, R402, R403, R404, R405, R406, R407, R408, R409, R410, R411, R412, R413, R414, R415, R416, R417, R418, R419, R420, R421, R422, R423, R424, R425, R426, R427, R428, R429, R430, R431, R432, R433, R434, R435, R436, R437, R438, R439, R440, R441, R442, R443, R444, R445, R446, R447, R448, R449, R450, R451, R452, R453, R454, R455, R456, R457, R458, R459, R460, R461, R462, R463, R464, R465, R466, R467, R468, R469, R470, R471, R472, R473, R474, R475, R476, R477, R478, R479, R480, R481, R482, R483, R484, R485, R486, R487, R488, R489, R490, R491, R492, R493, R494, R495, R496, R497, R498, R499, R500, R501, R502, R503, R504, R505, R506, R507, R508, R509, R510, R511, R512, R513, R514, R515, R516, R517, R518, R519, R520, R521, R522, R523, R524, R525, R526, R527, R528, R529, R530, R531, R532, R533, R534, R535, R536, R537, R538, R539, R540, R541, R542, R543, R544, R545, R546, R547, R548, R549, R550, R551, R552, R553, R554, R555, R556, R557, R558, R559, R560, R561, R562, R563, R564, R565, R566, R567, R568, R569, R570, R571, R572, R573, R574, R575, R576, R577, R578, R579, R580, R581, R582, R583, R584, R585, R586, R587, R588, R589, R590, R591, R592, R593, R594, R595, R596, R597, R598, R599, R600, R601, R602, R603, R604, R605, R606, R607, R608, R609, R610, R611, R612, R613, R614, R615, R616, R617, R618, R619, R620, R621, R622, R623, R624, R625, R626, R627, R628, R629, R630, R631, R632, R633, R634, R635, R636, R637, R638, R639, R640, R641, R642, R643, R644, R645, R646, R647, R648, R649, R650, R651, R652, R653, R654, R655, R656, R657, R658, R659, R660, R661, R662, R663, R664, R665, R666, R667, R668, R669, R670, R671, R672, R673, R674, R675, R676, R677, R678, R679, R680, R681, R682, R683, R684, R685, R686, R687, R688, R689, R690, R691, R692, R693, R694, R695, R696, R697, R698, R699, R700, R701, R702, R703, R704, R705, R706, R707, R708, R709, R710, R711, R712, R713, R714, R715, R716, R717, R718, R719, R720, R721, R722, R723, R724, R725, R726, R727, R728, R729, R730, R731, R732, R733, R734, R735, R736, R737, R738, R739, R740, R741, R742, R743, R744, R745, R746, R747, R748, R749, R750, R751, R752, R753, R754, R755, R756, R757, R758, R759, R760, R761, R762, R763, R764, R765, R766, R767, R768, R769, R770, R771, R772, R773, R774, R775, R776, R777, R778, R779, R780, R781, R782, R783, R784, R785, R786, R787, R788, R789, R790, R791, R792, R793, R794, R795, R796, R797, R798, R799, R800, R801, R802, R803, R804, R805, R806, R807, R808, R809, R810, R811, R812, R813, R814, R815, R816, R817, R818, R819, R820, R821, R822, R823, R824, R825, R826, R827, R828, R829, R830, R831, R832, R833, R834, R835, R836, R837, R838, R839, R840, R841, R842, R843, R844, R845, R846, R847, R848, R849, R850, R851, R852, R853, R854, R855, R856, R857, R858, R859, R860, R861, R862, R863, R864, R865, R866, R867, R868, R869, R870, R871, R872, R873, R874, R875, R876, R877, R878, R879, R880, R881, R882, R883, R884, R885, R886, R887, R888, R889, R890, R891, R892, R893, R894, R895, R896, R897, R898, R899, R900, R901, R902, R903, R904, R905, R906, R907, R908, R909, R910, R911, R912, R913, R914, R915, R916, R917, R918, R919, R920, R921, R922, R923, R924, R925, R926, R927, R928, R929, R930, R931, R932, R933, R934, R935, R936, R937, R938, R939, R940, R941, R942, R943, R944, R945, R946, R947, R948, R949, R950, R951, R952, R953, R954, R955, R956, R957, R958, R959, R960, R961, R962, R963, R964, R965, R966, R967, R968, R969, R970, R971, R972, R973, R974, R975, R976, R977, R978, R979, R980, R981, R982, R983, R984, R985, R986, R987, R988, R989, R990, R991, R992, R993, R994, R995, R996, R997, R998, R999, R1000, R1001, R1002

Diagram of the bottom of the PCB showing components LED1, C318, C319, C317, K301, and CON301. The components are arranged in a grid-like pattern. LED1 is a circular component with a crosshair. C318 and C319 are small rectangular components. C317 is a larger rectangular component. K301 is a circular component with a crosshair. CON301 is a rectangular component with multiple pins. The components are labeled with their respective designators.

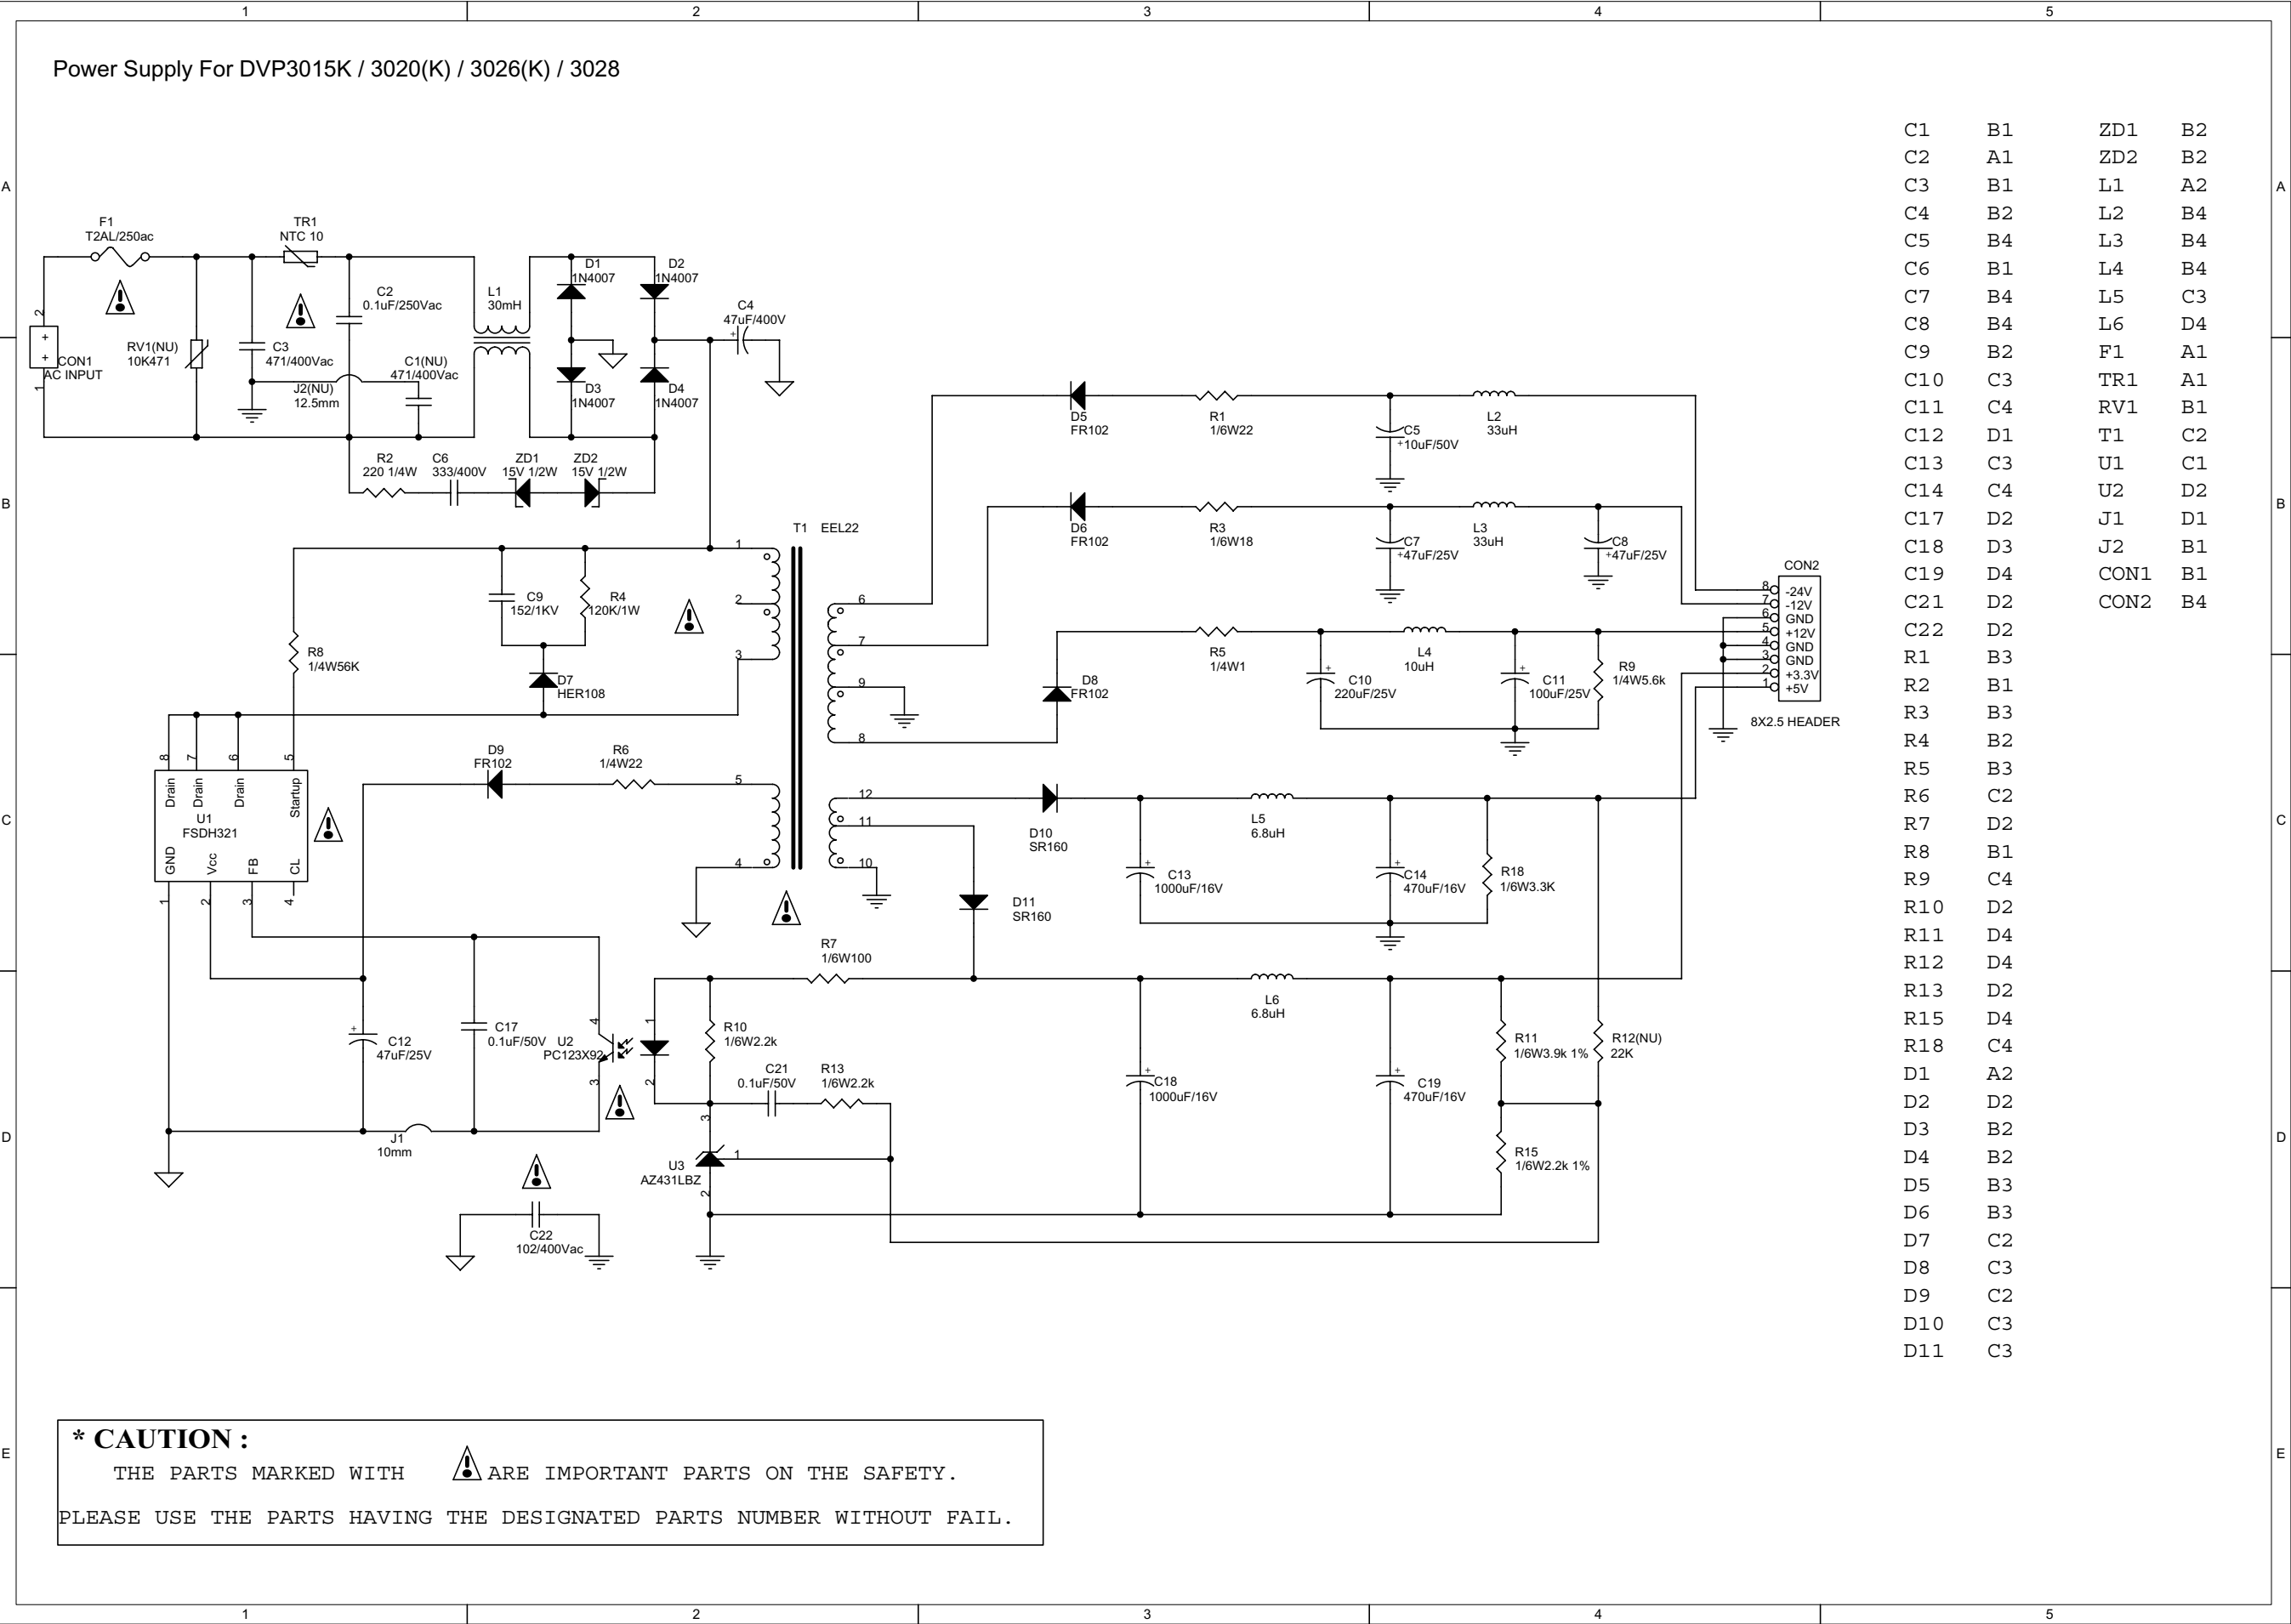


C1	B1	ZD1	B2
C2	A1	ZD2	B2
C3	B1	L1	A2
C4	B2	L2	B4
C5	B4	L3	B4
C6	B1	L4	B4
C7	B4	L5	C3
C8	B4	L6	D4
C9	B2	F1	A1
C10	C3	TR1	A1
C11	C4	RV1	B1
C12	D1	T1	C2
C13	C3	U1	C1
C14	C4	U2	D2
C17	D2	J1	D1
C18	D3	J2	B1
C19	D4	CON1	B1
C21	D2	CON2	B4
C22	D2		
R1	B3		
R2	B1		
R3	B3		
R4	B2		
R5	B3		
R6	C2		
R7	D2		
R8	B1		
R9	C4		
R10	D2		
R11	D4		
R12	D4		
R13	D2		
R15	D4		
R18	C4		
D1	A2		
D2	D2		
D3	B2		
D4	B2		
D5	B3		
D6	B3		
D7	C2		
D8	C3		
D9	C2		
D10	C3		
D11	C3		

Power Board Print-layout (Bottom Side) for DVP3015K / 3020(K) / 3026(K) / 3028

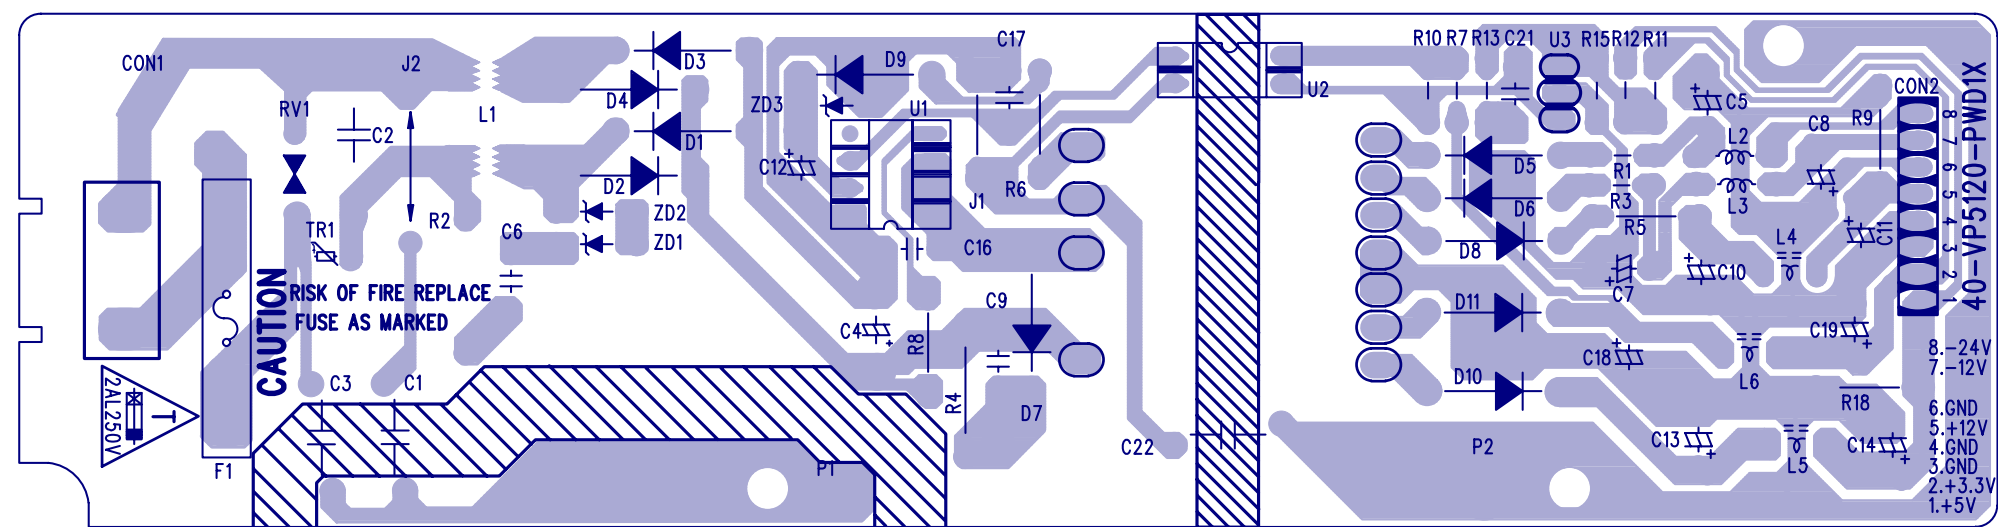


Power Supply for DVP3040(K)/3042/3046

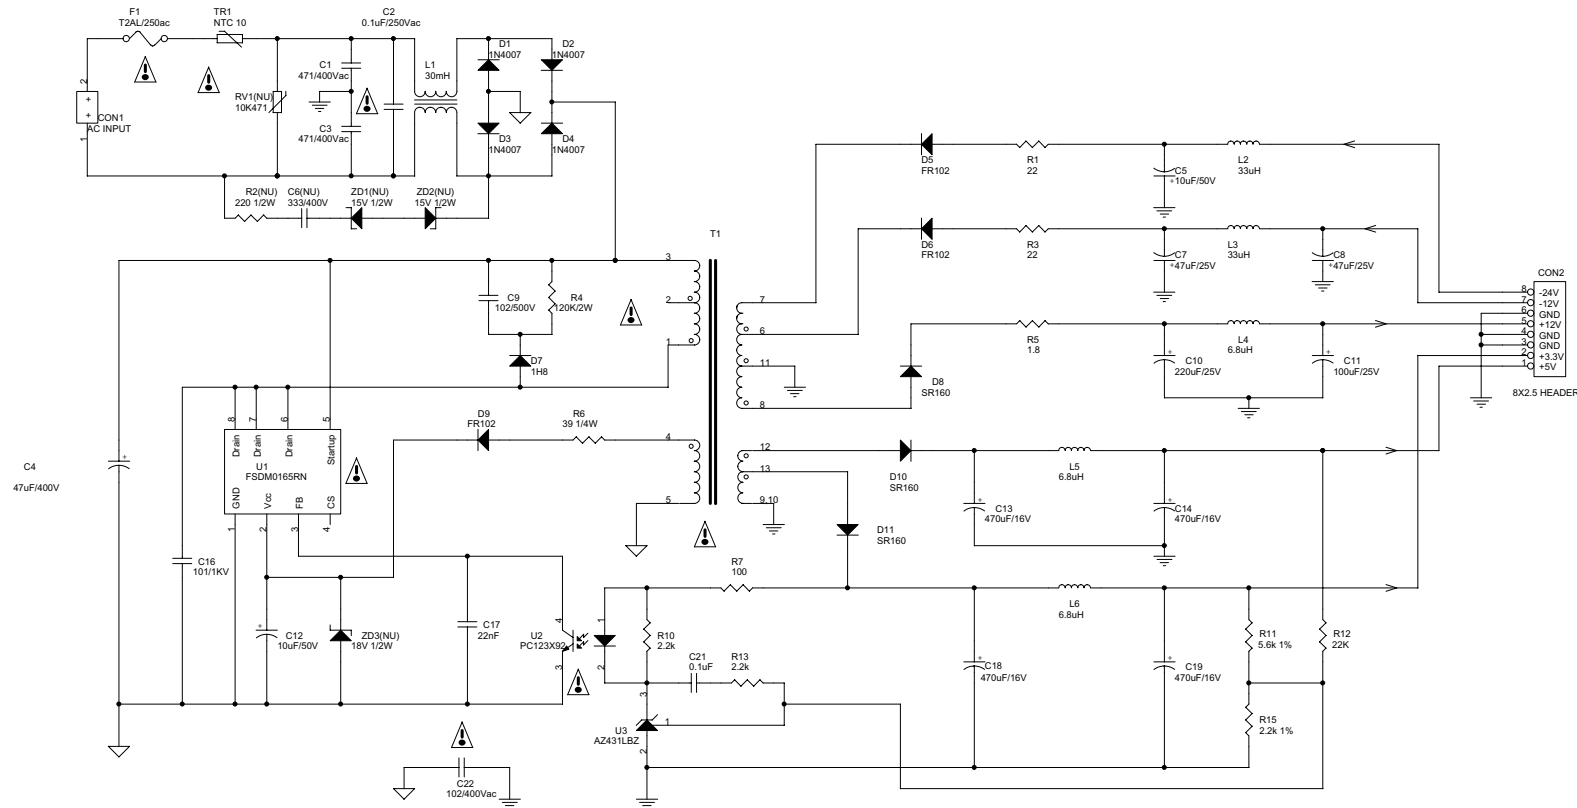


*** CAUTION :**
 THE PARTS MARKED WITH  ARE IMPORTANT PARTS ON THE SAFETY.
 PLEASE USE THE PARTS HAVING THE DESIGNATED PARTS NUMBER WITHOUT FAIL.

CON1	B1	C14	C3
CON2	C4	C16	D1
R1	B3	C17	D2
R2	B1	C18	D3
R3	B3	C19	D4
R4	C2	C1	B2
R5	C3	C21	D2
R6	C2	C22	D2
R7	D3		
R10	D2	D1	B2
R11	D4	D2	B2
R12	D4	D3	B2
R13	D3	D4	B2
R15	D4	D5	B3
R16	C4	D6	B3
		D7	C2
L2	B4	D8	C3
L3	B4	D9	C2
L4	C4	D10	C3
L5	C3	D11	C3
L6	D3		
C1	B2	ZD1	B2
C2	B2	ZD2	B2
C3	B2	ZD3	D2
C4	C1	U1	C2
C5	B4	U2	D2
C6	B2	U3	D2
C7	C4	F1	B1
C8	C4	TR1	B1
C9	C2	RV1	B2
C10	C4	L1	B2
C11	C4	T1	C2
C12	D2	CON1	B1
C13	C3	CON2	C4

Power Board Print-layout (Bottom Side) for DVP3040(K)/3042/3046

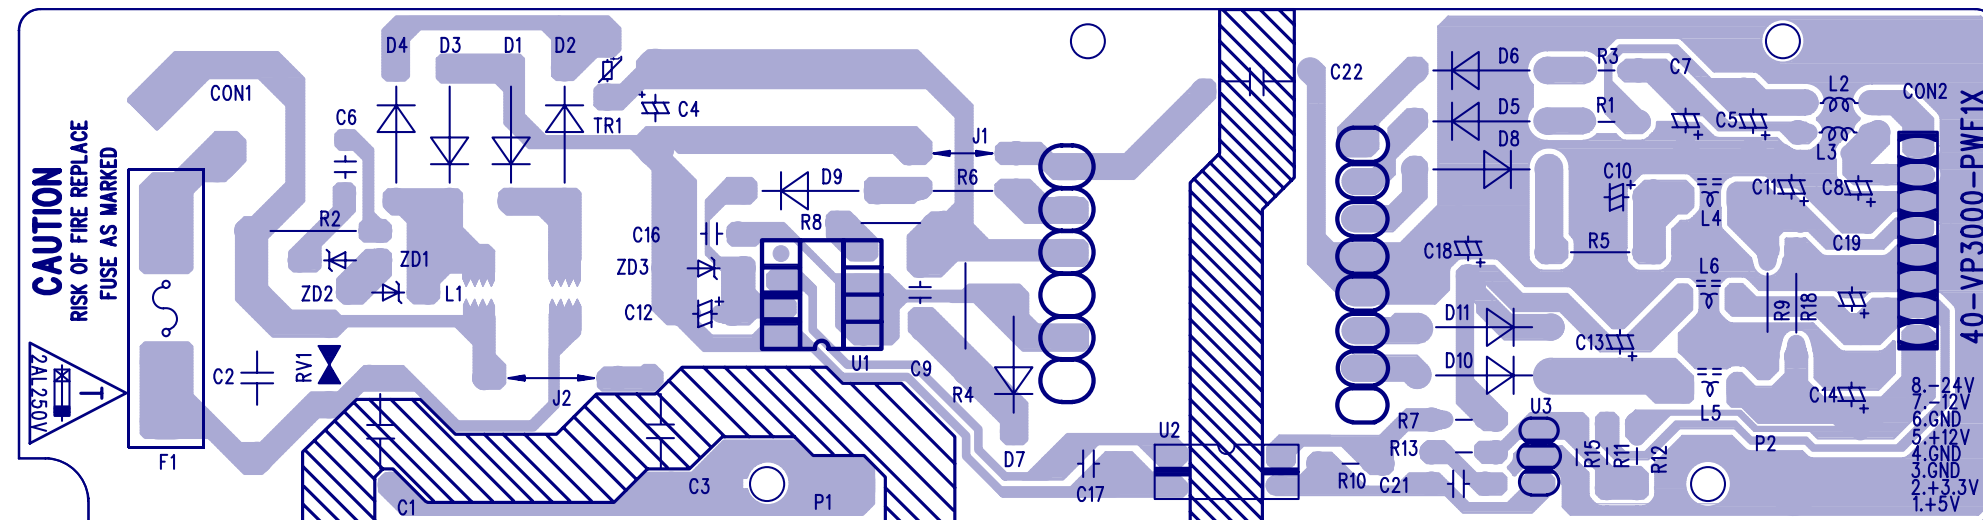

Power Board for DVP3002/93 DVP3020/05

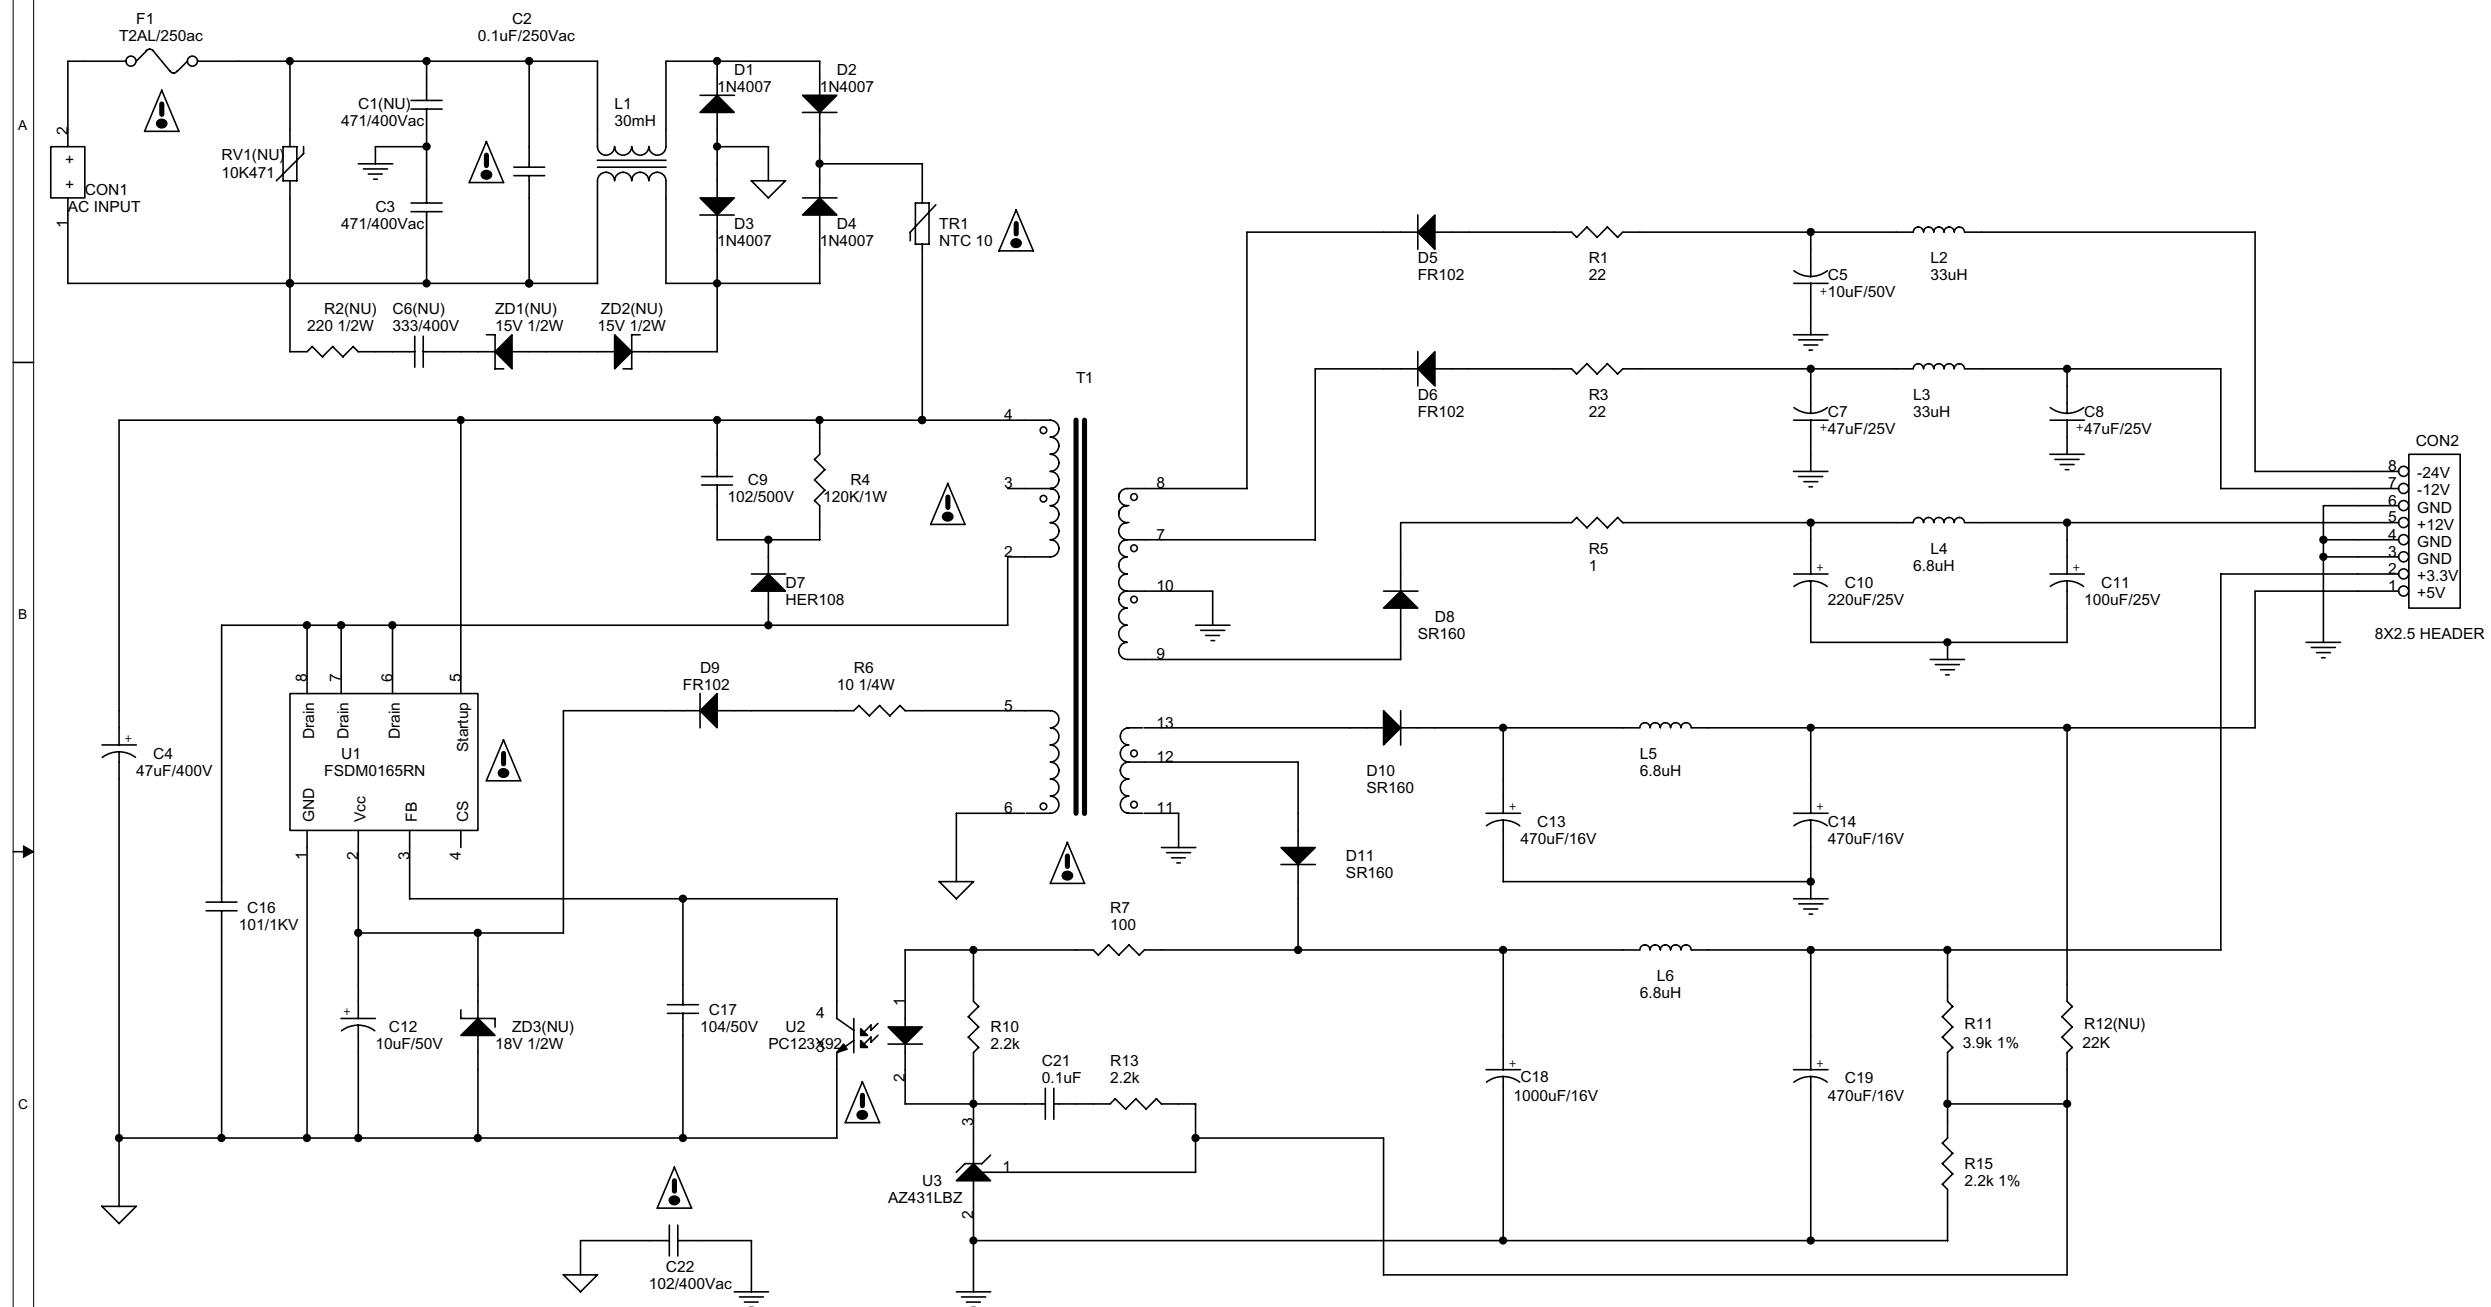


C1	A1
C2	A1
C3	A1
C4	B1
C5	A4
C6	A1
C7	B4
C8	B4
C9	B2
C10	B4
C11	B4
C12	C1
C13	B3
C14	B4
C16	C1
C17	C2
C18	C3
C19	C4
C22	C2
C21	C2
CON1	A1
CON2	B5
D1	A2
D2	A2
D3	A2
D4	A2
D5	A3
D6	B3
D7	B2
D8	B3
D9	B2
D10	B3
D11	C3
F1	A1
L1	A2
L2	A4
L3	B4
L4	B4
L5	B3
L6	C3
R1	A3
R2	A1
R3	B3
R4	B2
R5	B3
R6	B2
R7	C2
R10	C2
R11	C4
R12	C4
R13	C2
R15	C4
R17	C2
RV1	A1
T1	B2
TR1	A2
U1	B1
U2	C2
U3	C2
ZD1	A1
ZD2	A2
ZD3	C1


*** CAUTION :**

THE PARTS MARKED WITH  ARE IMPORTANT PARTS ON THE SAFETY.
PLEASE USE THE PARTS HAVING THE DESIGNATED PARTS NUMBER WITHOUT FAIL.


Power Board Print-layout (Top Side) for DVP3002/93 DVP3020/05

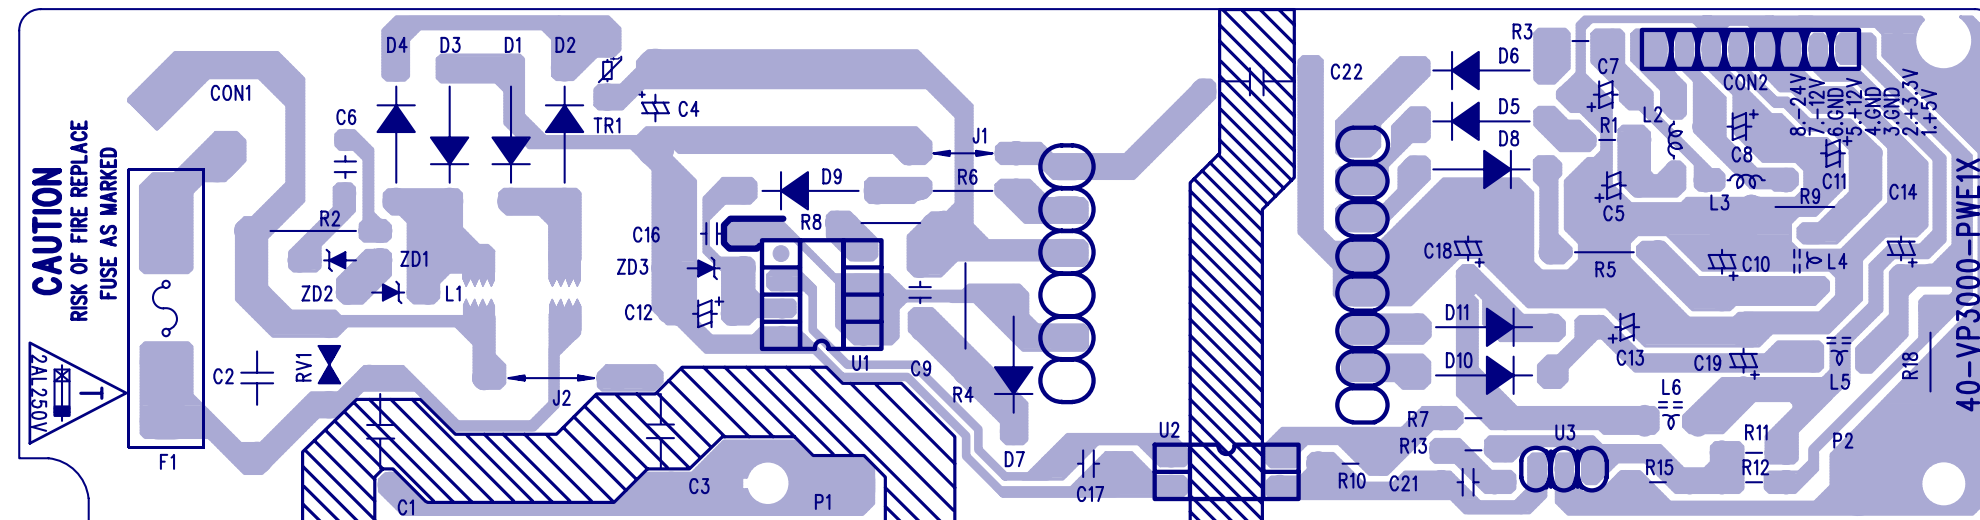















Main Board : AUDIO FILTER & OUT PUT for DVP3015K /3020(K)/3026(K)/3028

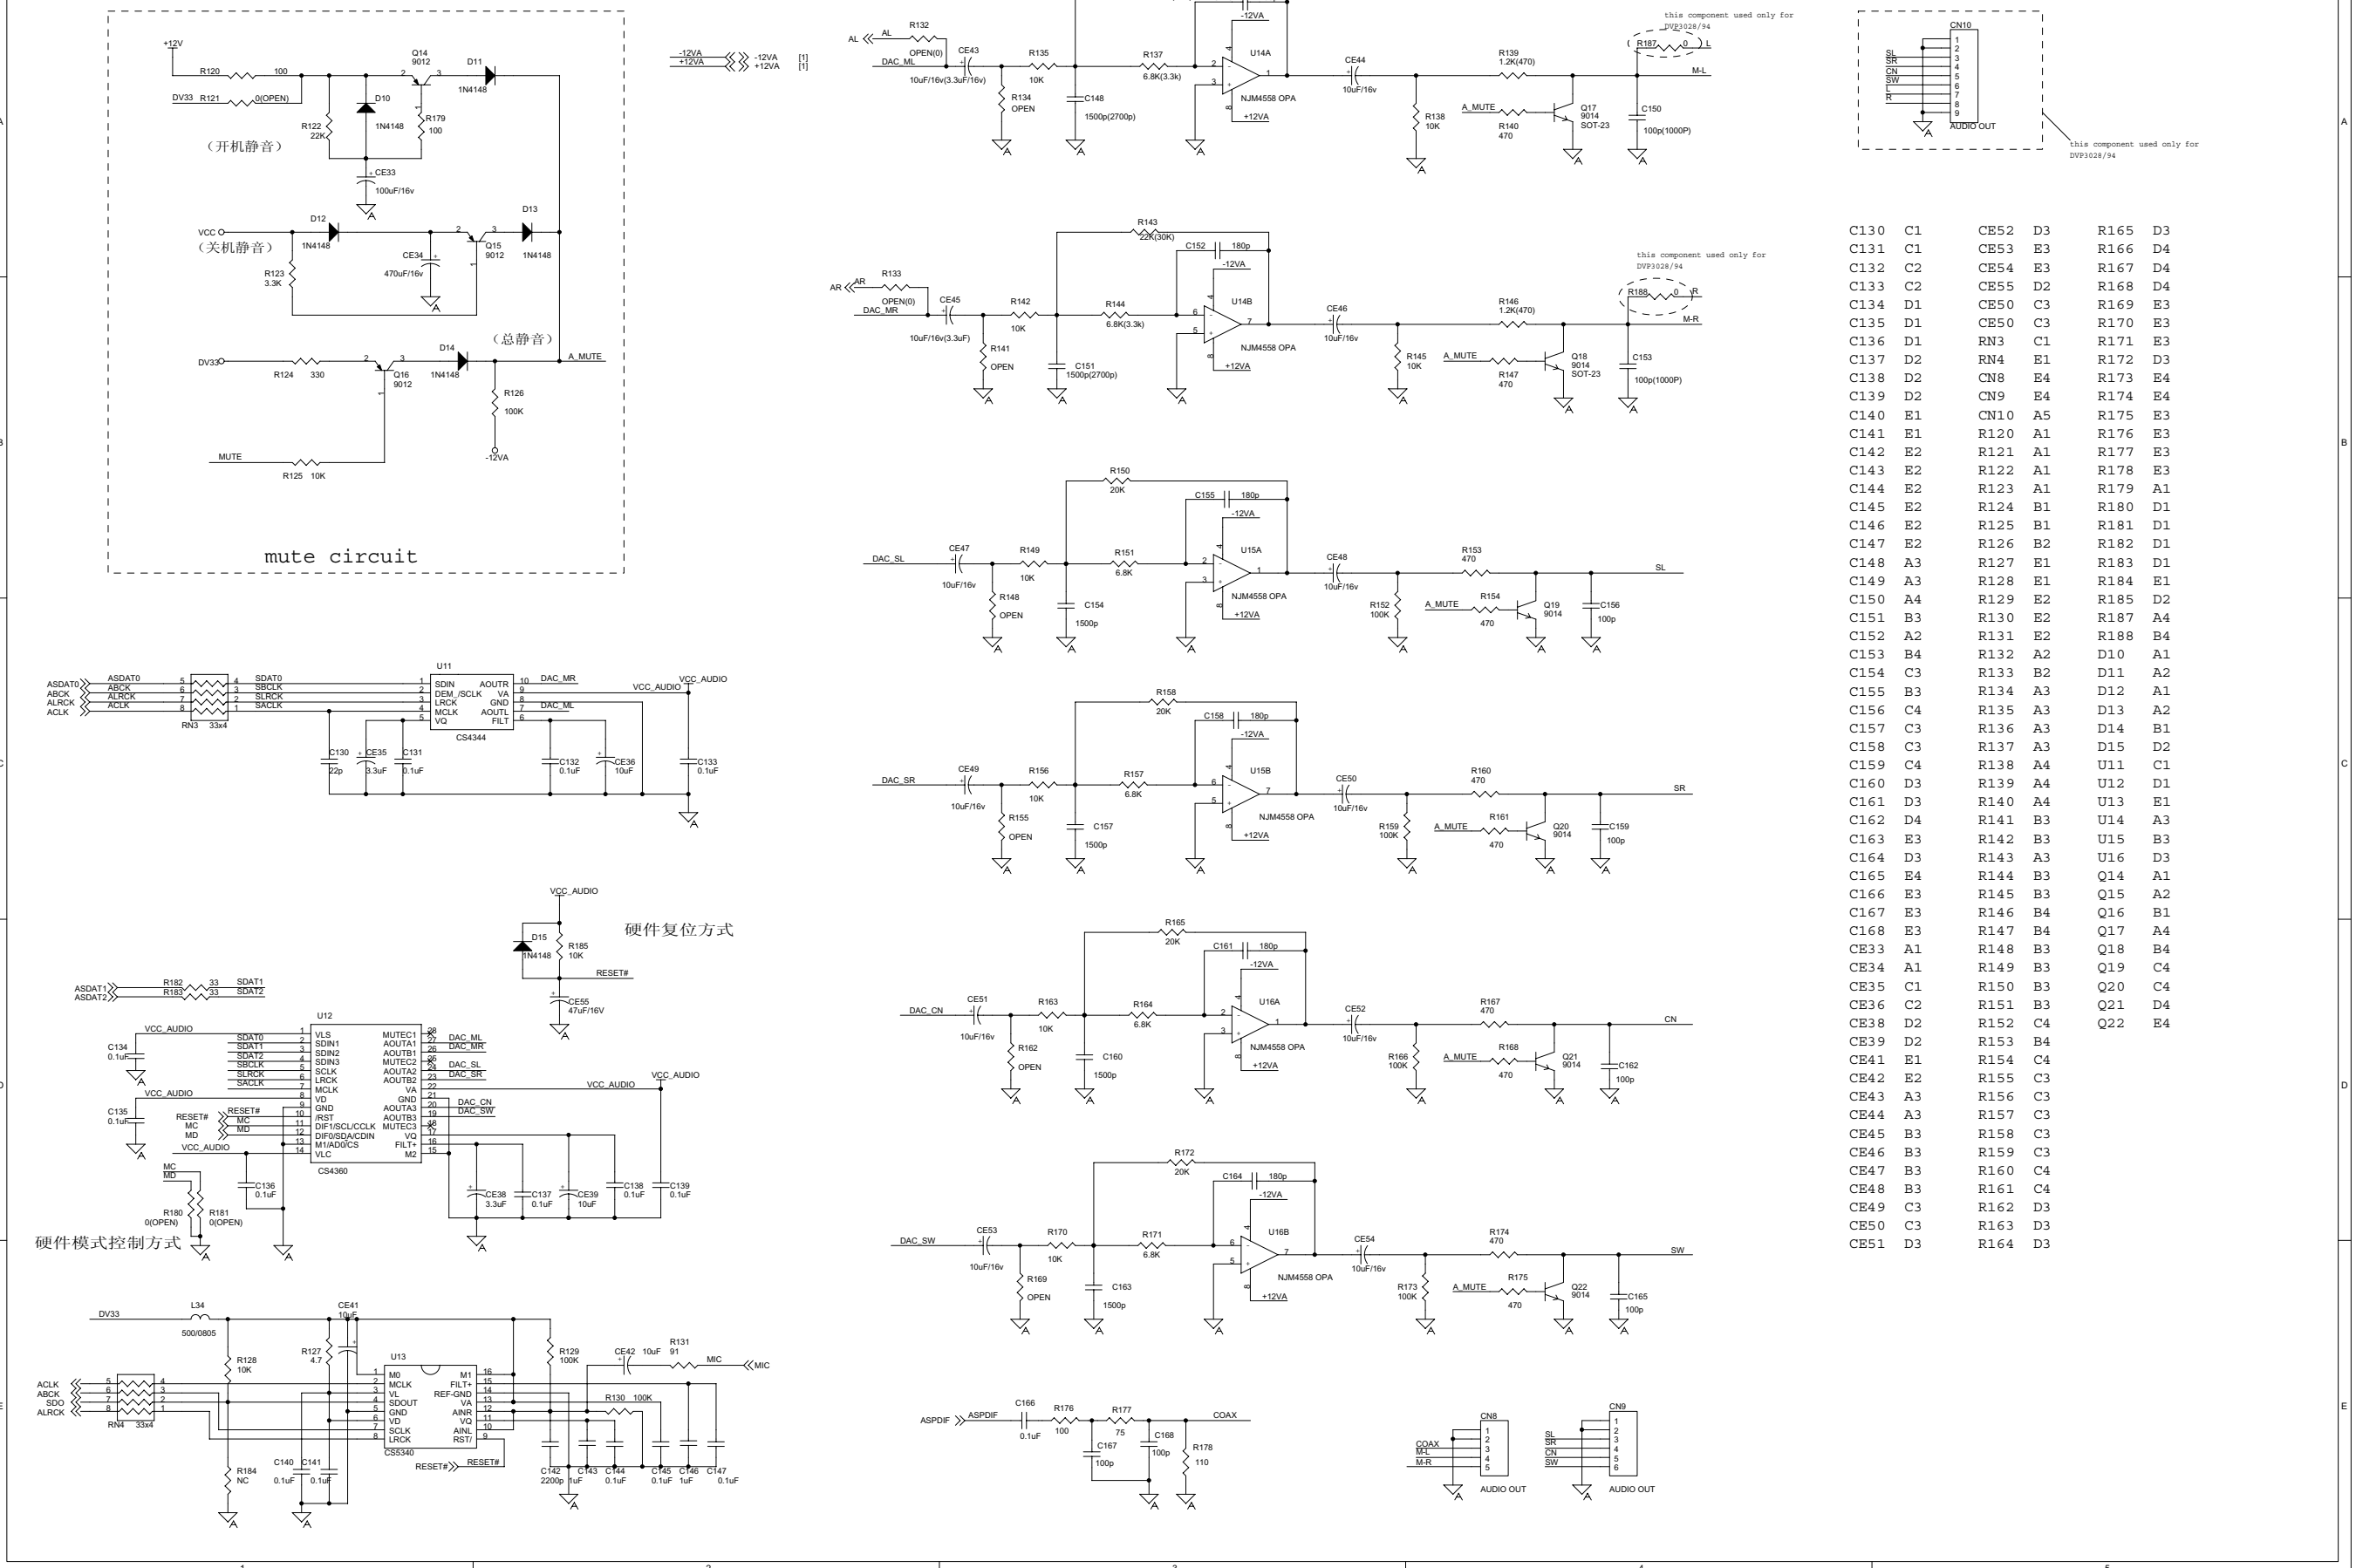

Main Board: MPEG & SERVO for DVP3015K/3020(K)/3026(K)/3028

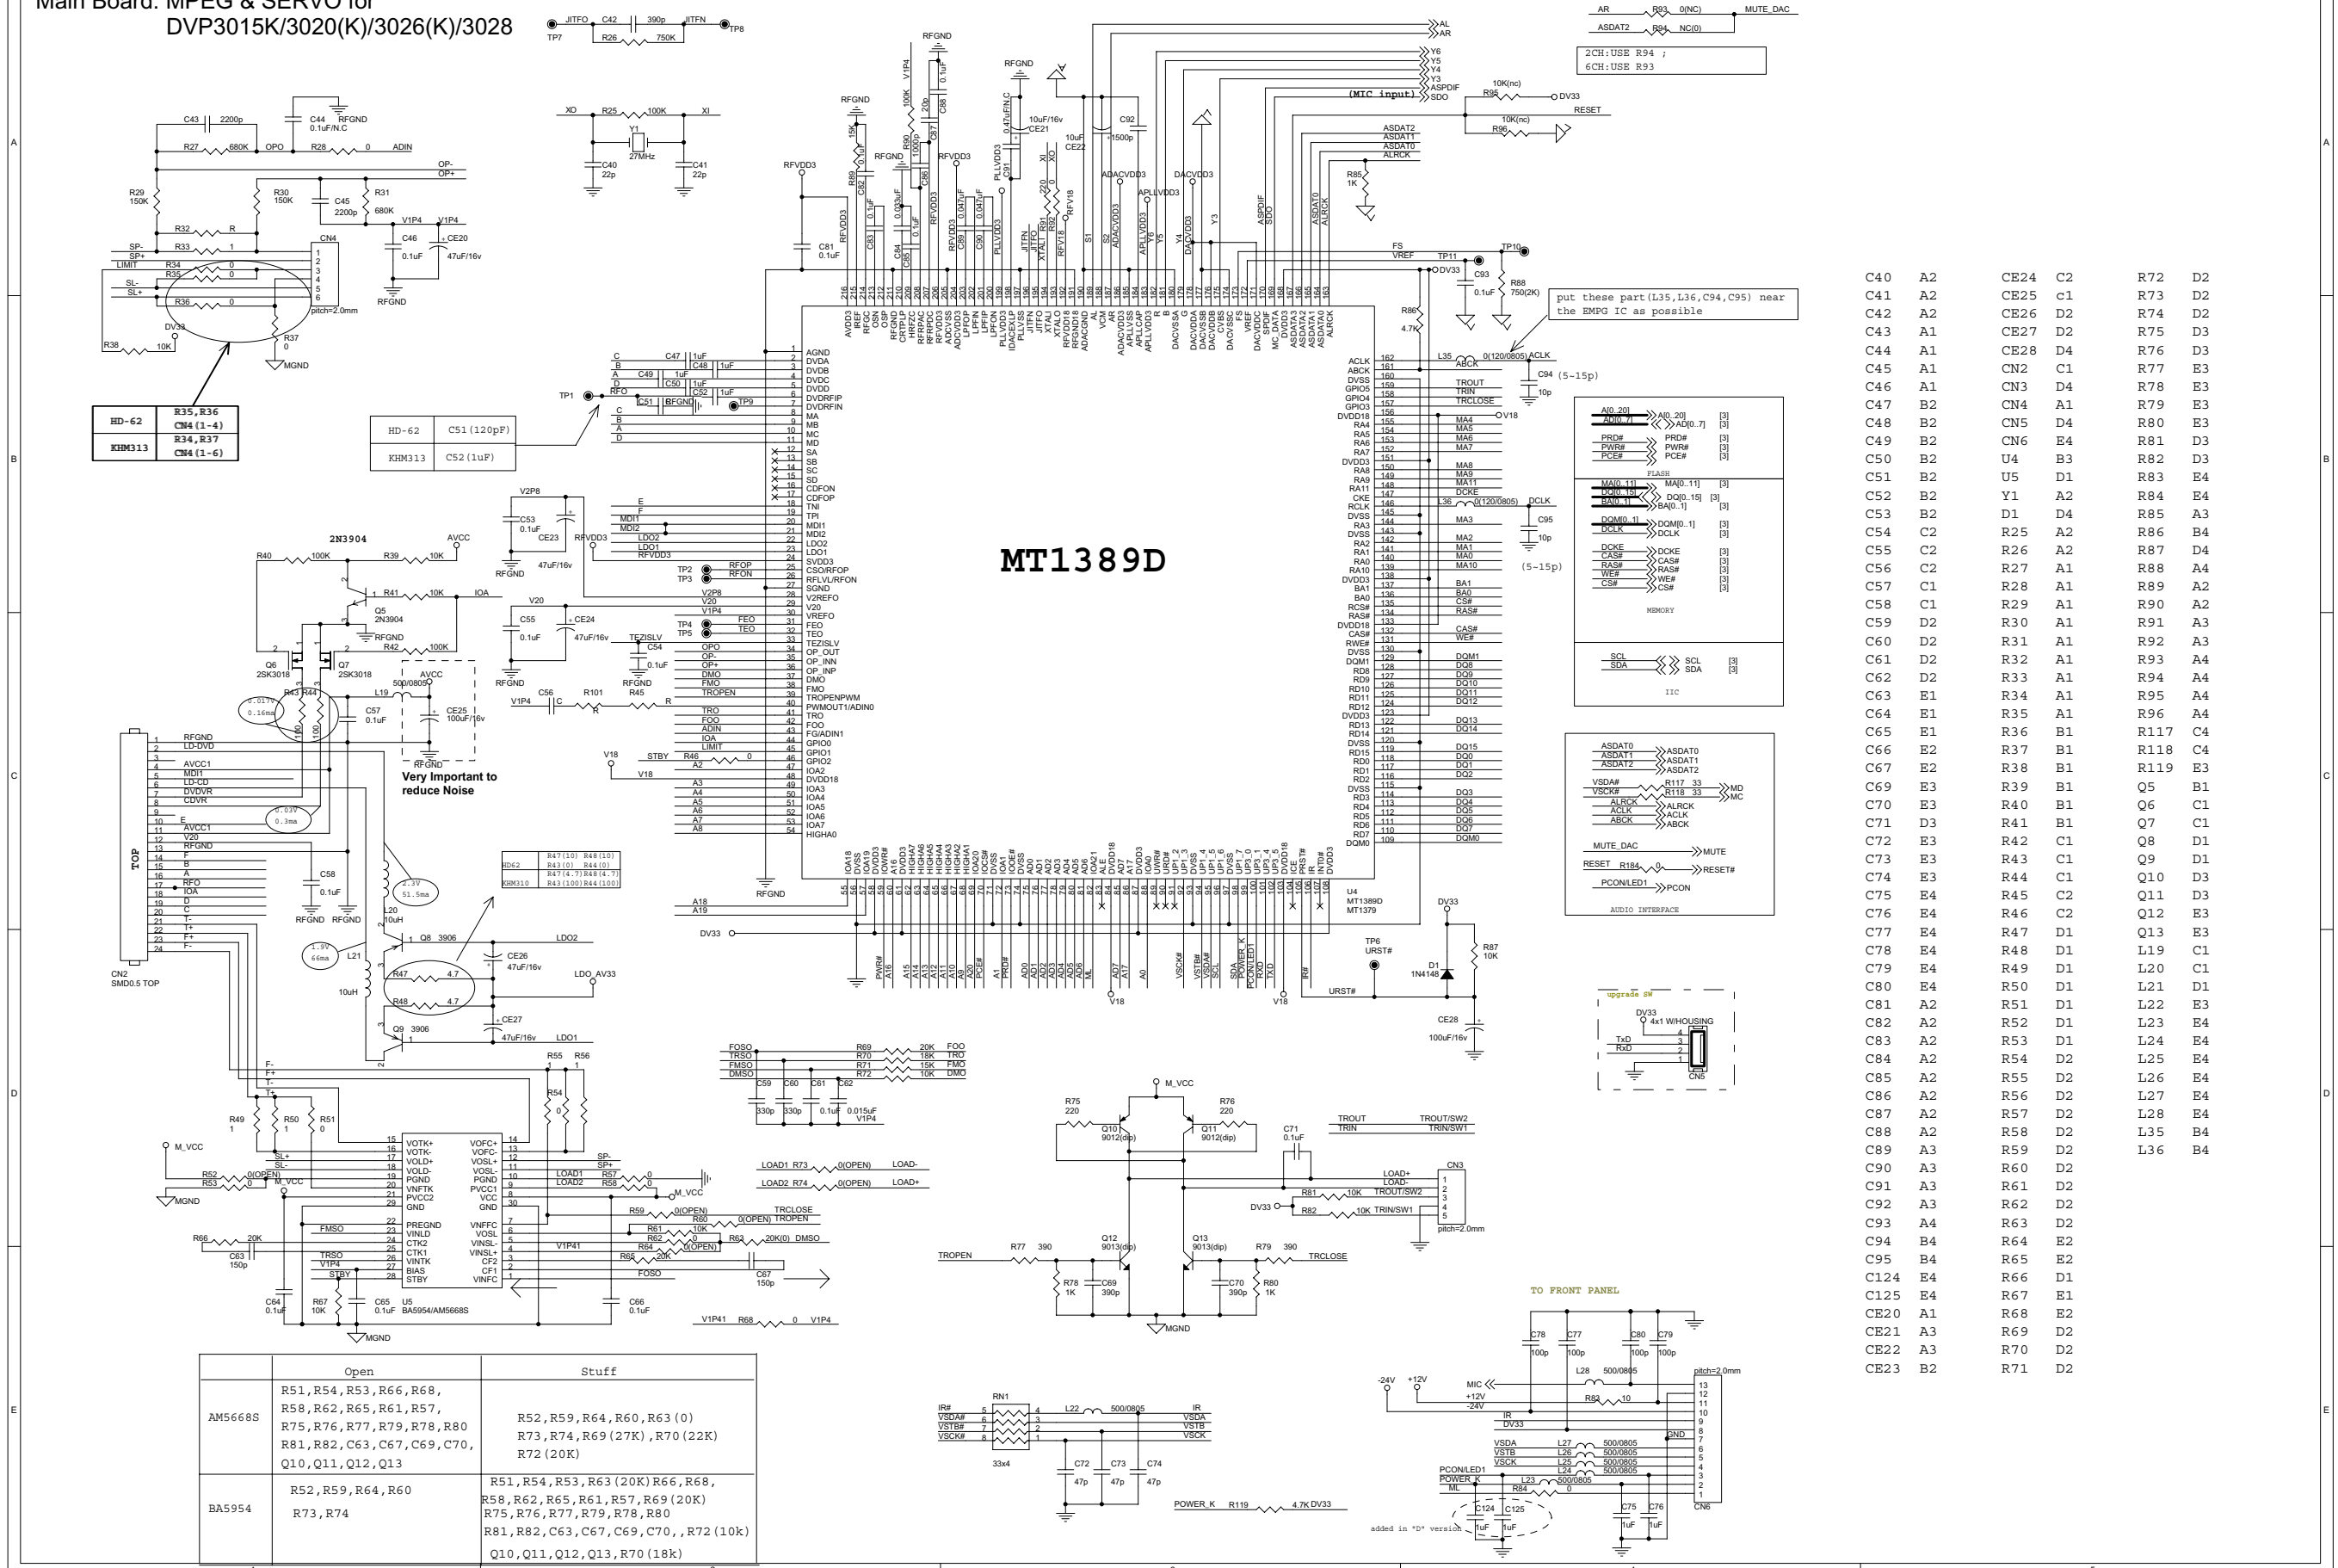



Main Board : SDRAM,FLASH,VIDEO for
DVP3015K / 3020(K)/3026(K)/3028

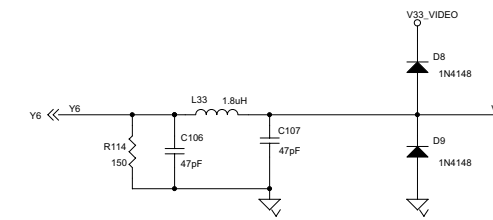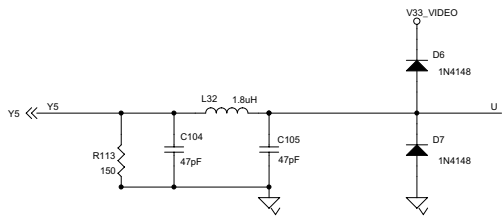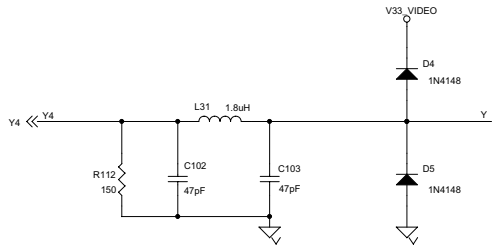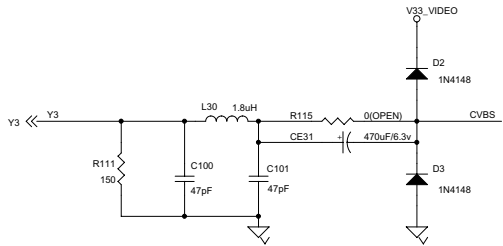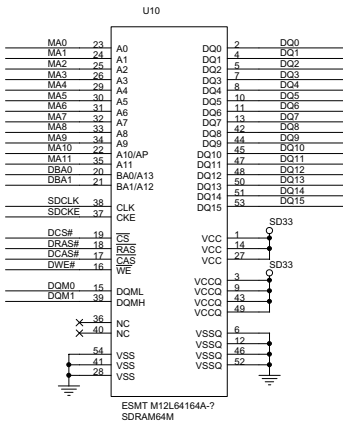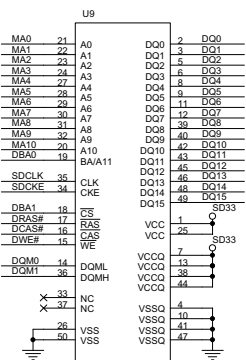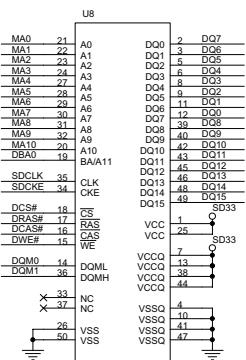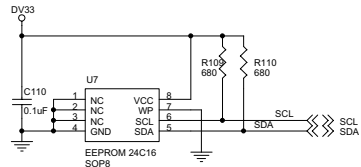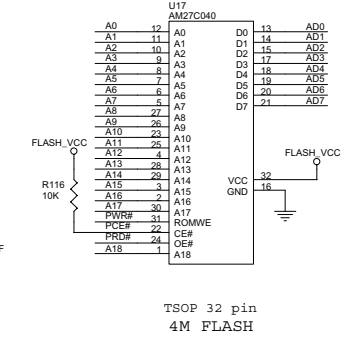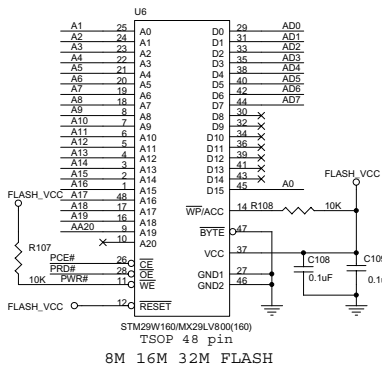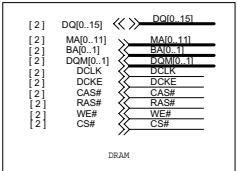


- C100 A3
- C101 A4
- C102 B3
- C103 B4
- C104 C3
- C105 C4
- C106 C3
- C107 C4
- C108 C1
- C109 C1
- C110 C2
- C111 E1
- C112 E1
- C113 E1
- C114 E1
- C115 E1
- C116 E1
- C117 E1
- C118 E1
- C119 E2
- C120 E2
- C121 E2
- C122 E2
- CE31 A4
- R102 A2
- R103 A2
- R104 A2
- R106 B2
- R107 C1
- R108 C1
- R109 C3
- R110 C3
- R111 A3
- R112 B3
- R113 C3
- R114 C3
- R115 A4
- R116 C2
- D2 A4
- D3 A4
- D4 B4
- D5 B4
- D6 B4
- D7 C4
- D8 C4
- D9 C4
- U6 B1
- U7 C2
- U8 D1
- U9 D2
- U10 D2
- U17 B2
- CN7 D4

E

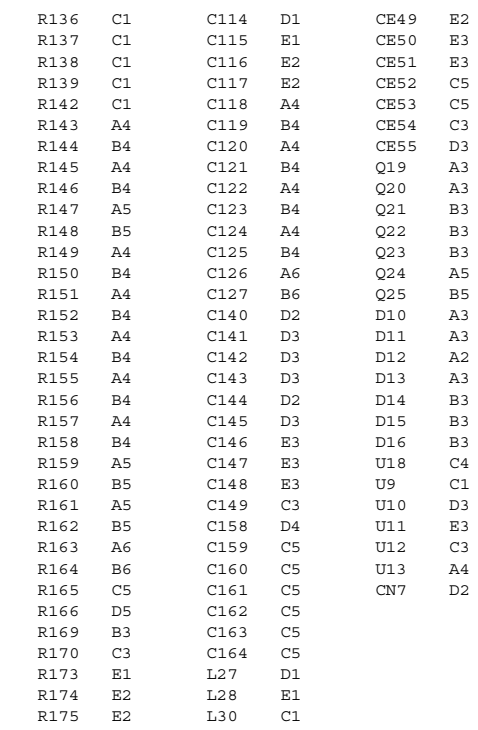


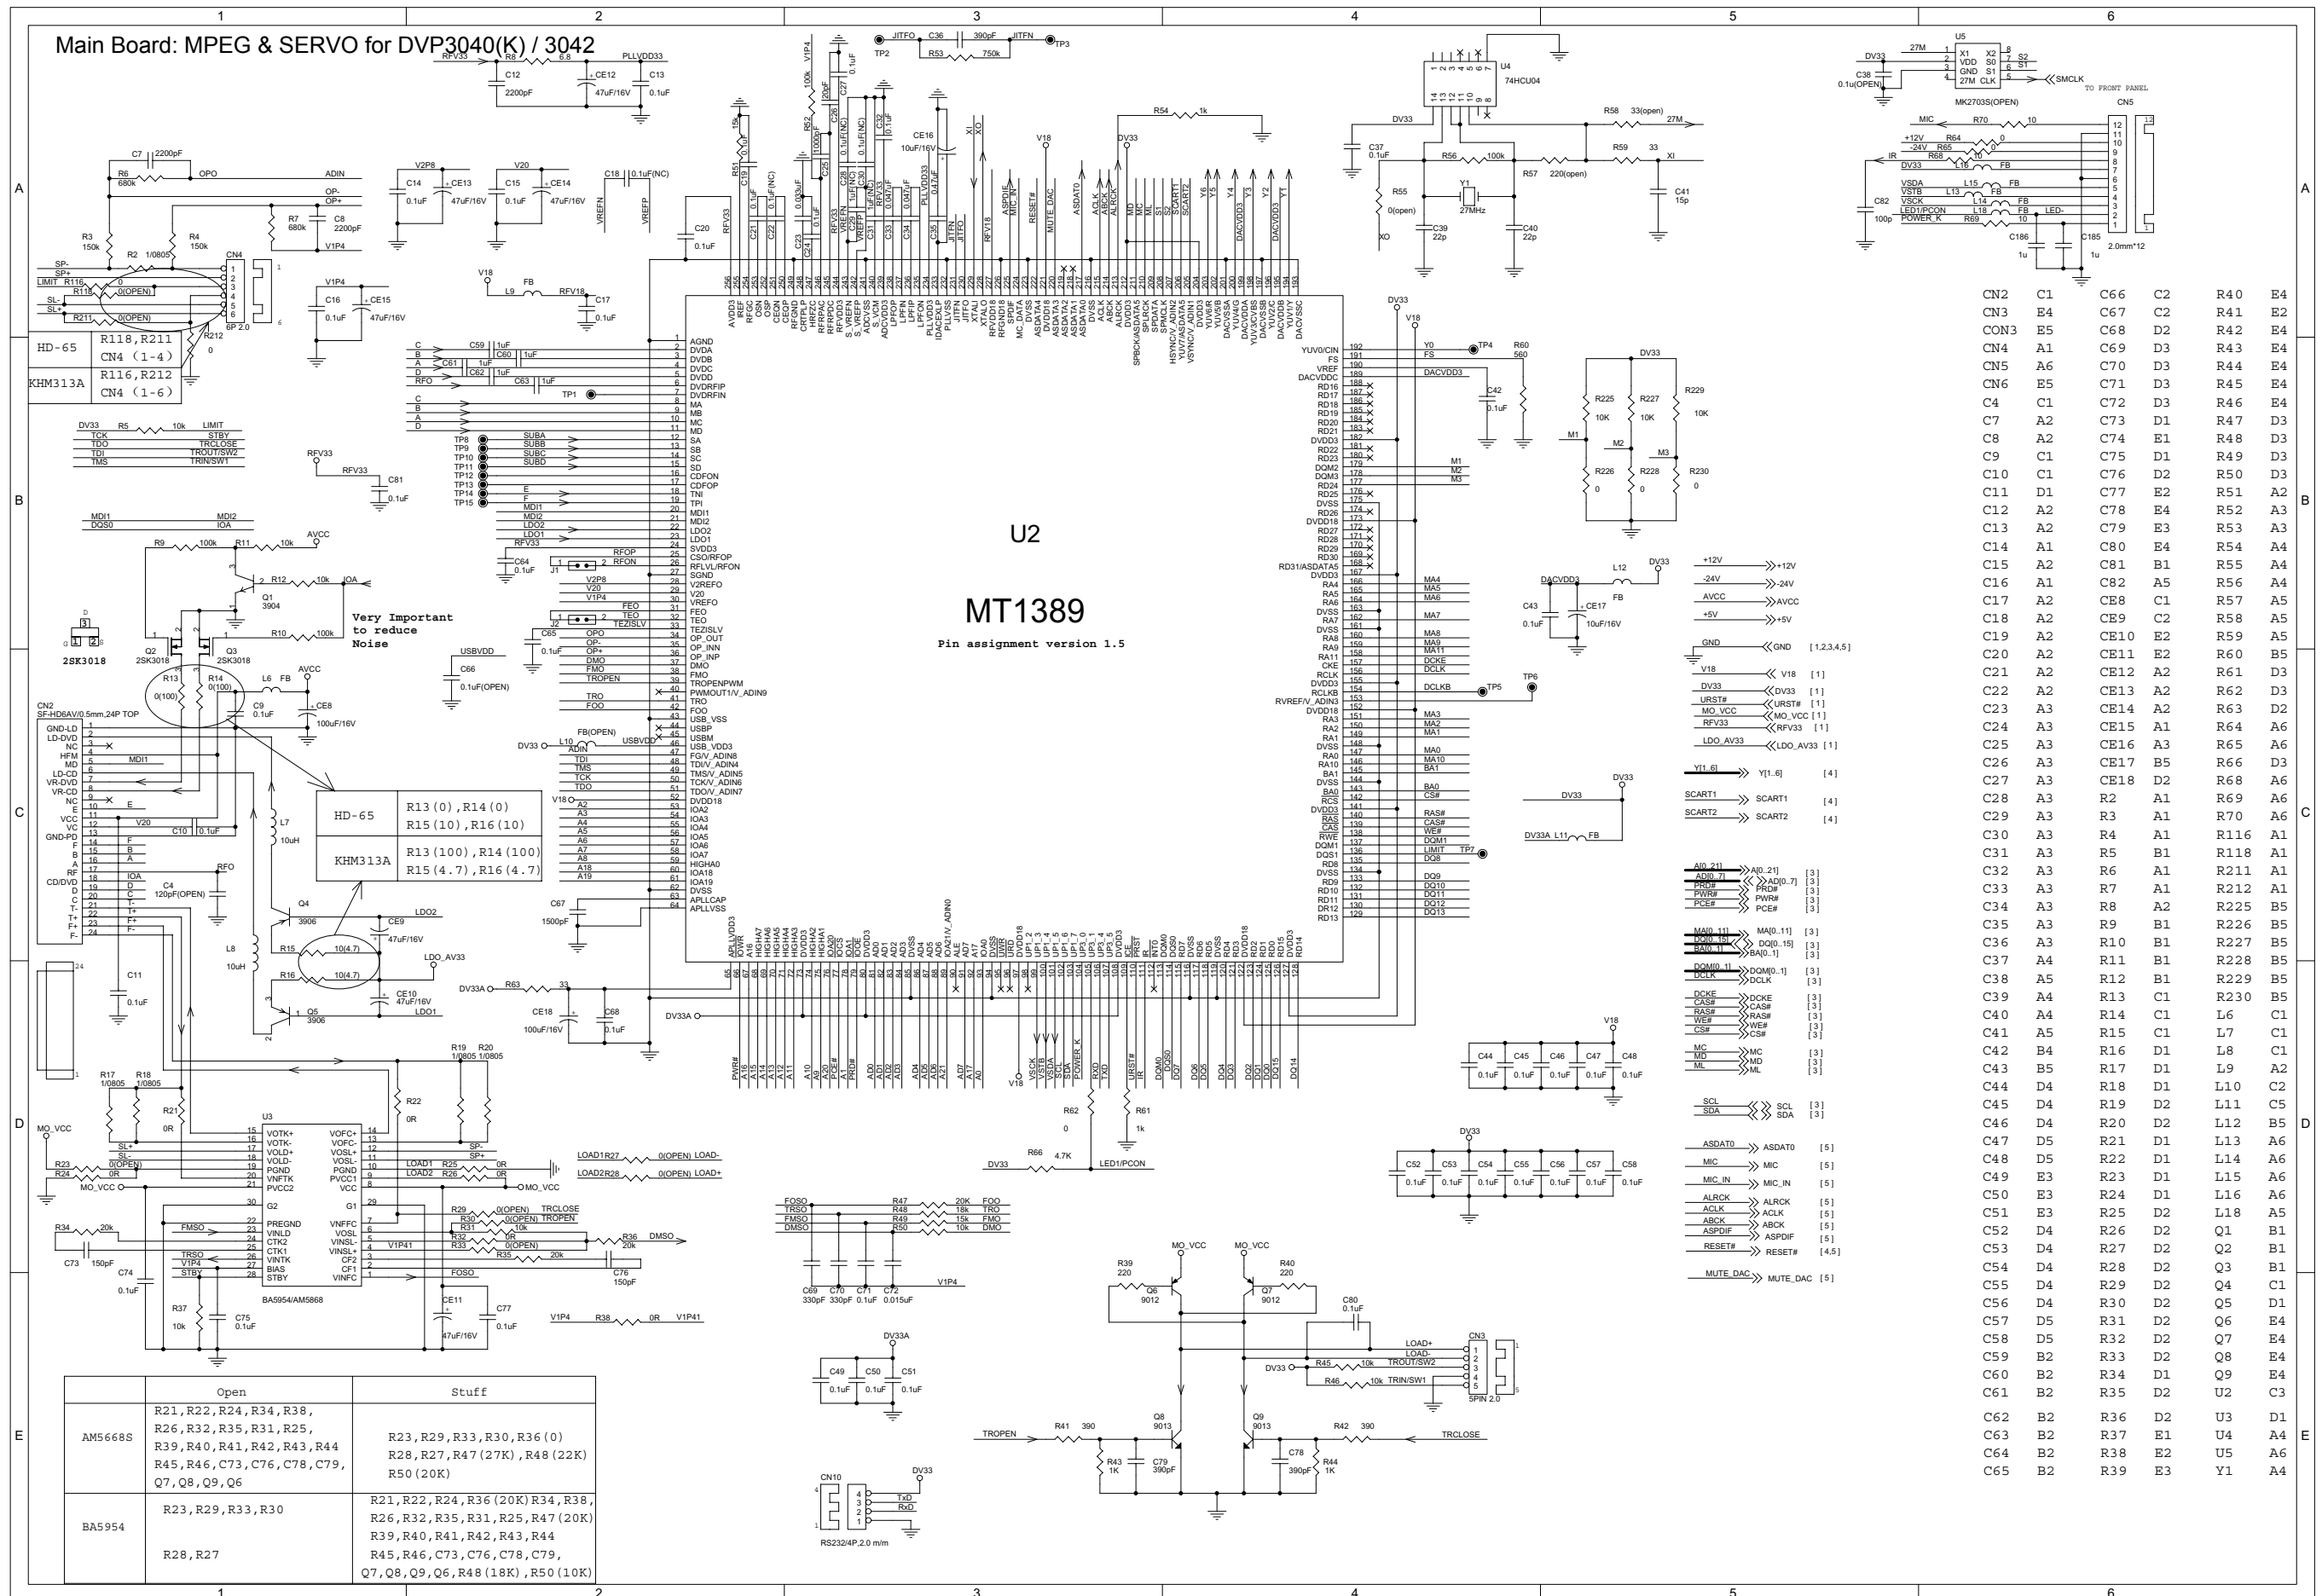

Main Board: SDRAM,FLASH,VIDE FILTER & SCART OUT PUT for DVP3040(K) / 3042

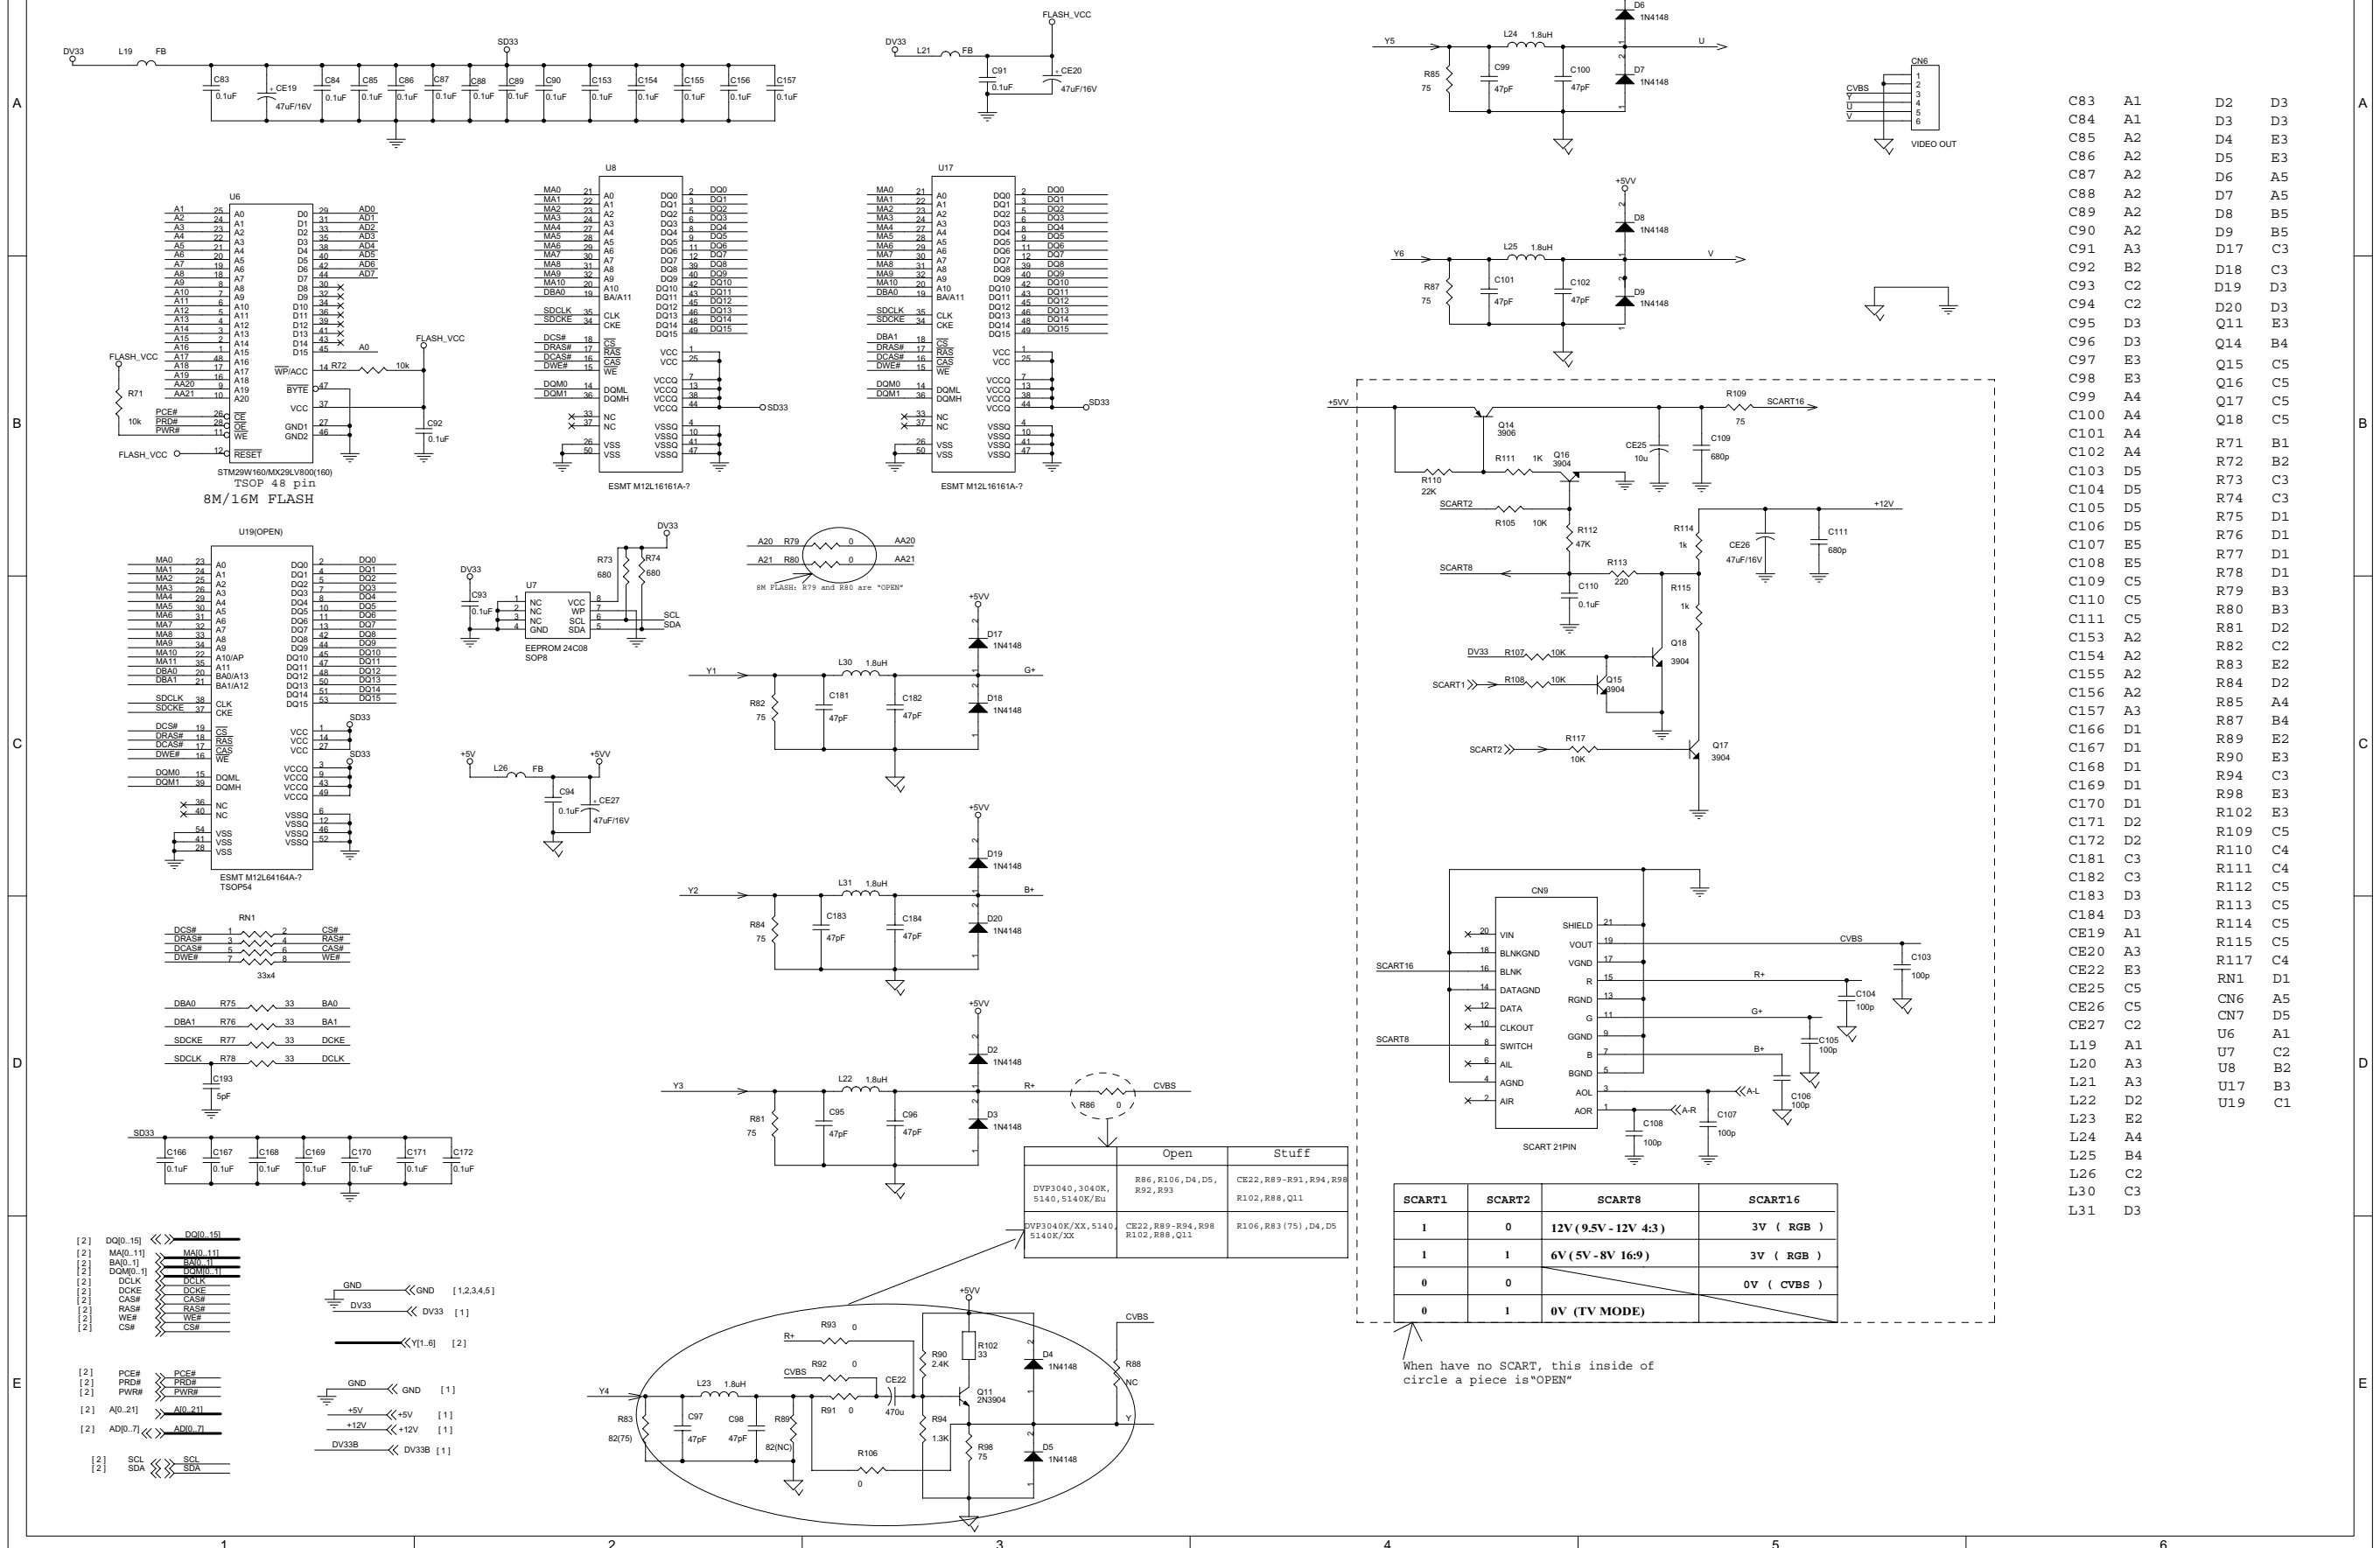

R120	C3	R205	C1	L27	D1
R123	A2	R206	C2	L28	E1
R124	A2	R207	D2	Q19	A3
R125	A2	R208	B1	Q20	A3
R126	A2	R209	E3	Q21	B3
R127	B2	R210	E3	Q22	B3
R128	B2	R213	E3	Q23	B3
R129	B2	R224	C1	Q24	A5
R130	B2	C112	D1	Q25	B5
R131	B3	C113	E1	Q26	C5
R132	B3	C114	C1	Q27	D5
R133	B3	C115	E1	Q28	D5
R134	B1	C116	E1	Q29	E5
R135	B1	C117	A4	Q30	B5
R136	B1	C118	A4	D10	A3
R137	B1	C119	B4	D11	A3
R138	B1	C120	A4	D12	A2
R139	B1	C121	B4	D13	A3
R140	B1	C122	A4	D14	B3
R141	B1	C123	B4	D15	B3
R142	C1	C126	A6	D16	B3
R143	A4	C127	B6	ZD1	C1
R144	B4	C128	C4	U9	C1
R145	A4	C129	D4	U10	C1
R146	B4	C130	D4	U12	D3
R147	A5	C131	E2	U13	A4
R148	B5	C132	C5	U14	A4
R149	A4	C133	C5	U13	C5
R150	B4	C134	D5	U15	D5
R151	A4	C135	E5	U16	E3
R152	B4	C136	C6	U20	C3
R153	A4	C137	D6	CN7	D2
R154	B4	C138	D6	CN8	E2
R155	A4	C139	E5		
R156	B4	C140	C2		
R157	A4	C141	C2		
R158	B4	C142	D2		
R159	A5	C143	D2		
R160	B5	C144	C1		
R161	A5	C145	C3		
R162	B5	C146	E3		
R163	A6	C147	E3		
R164	B6	C148	E3		
R169	C3	C149	E2		
R170	C3	C150	E2		
R173	E1	C151	E2		
R174	E1	C174	D3		
R175	E1	C177	D1		
R176	C4	C178	D1		
R177	D4	C179	E1		
R178	D4	C180	E1		
R179	E4	CE28	D1		
R180	C4	CE29	E1		
R181	D4	CE30	C1		
R182	D4	CE31	A3		
R183	E4	CE32	A3		
R184	C4	CE33	A4		
R185	C4	CE34	B4		
R186	D4	CE35	A5		
R187	E4	CE36	B4		
R188	C4	CE37	C4		
R189	D4	CE38	D4		
R190	D4	CE39	D4		
R191	E4	CE40	E4		
R192	C5	CE41	C5		
R193	D5	CE42	D5		
R194	D5	CE43	D5		
R195	E5	CE44	E5		
R196	C5	CE45	C2		
R197	D5	CE46	C1		
R198	D5	CE47	D2		
R199	E5	CE48	D2		
R200	C5	CE49	E3		
R201	D5	CE50	E3		
R202	D5	CE51	E3		
R203	E5	CE54	D3		
R204	C1	CE55	C2		

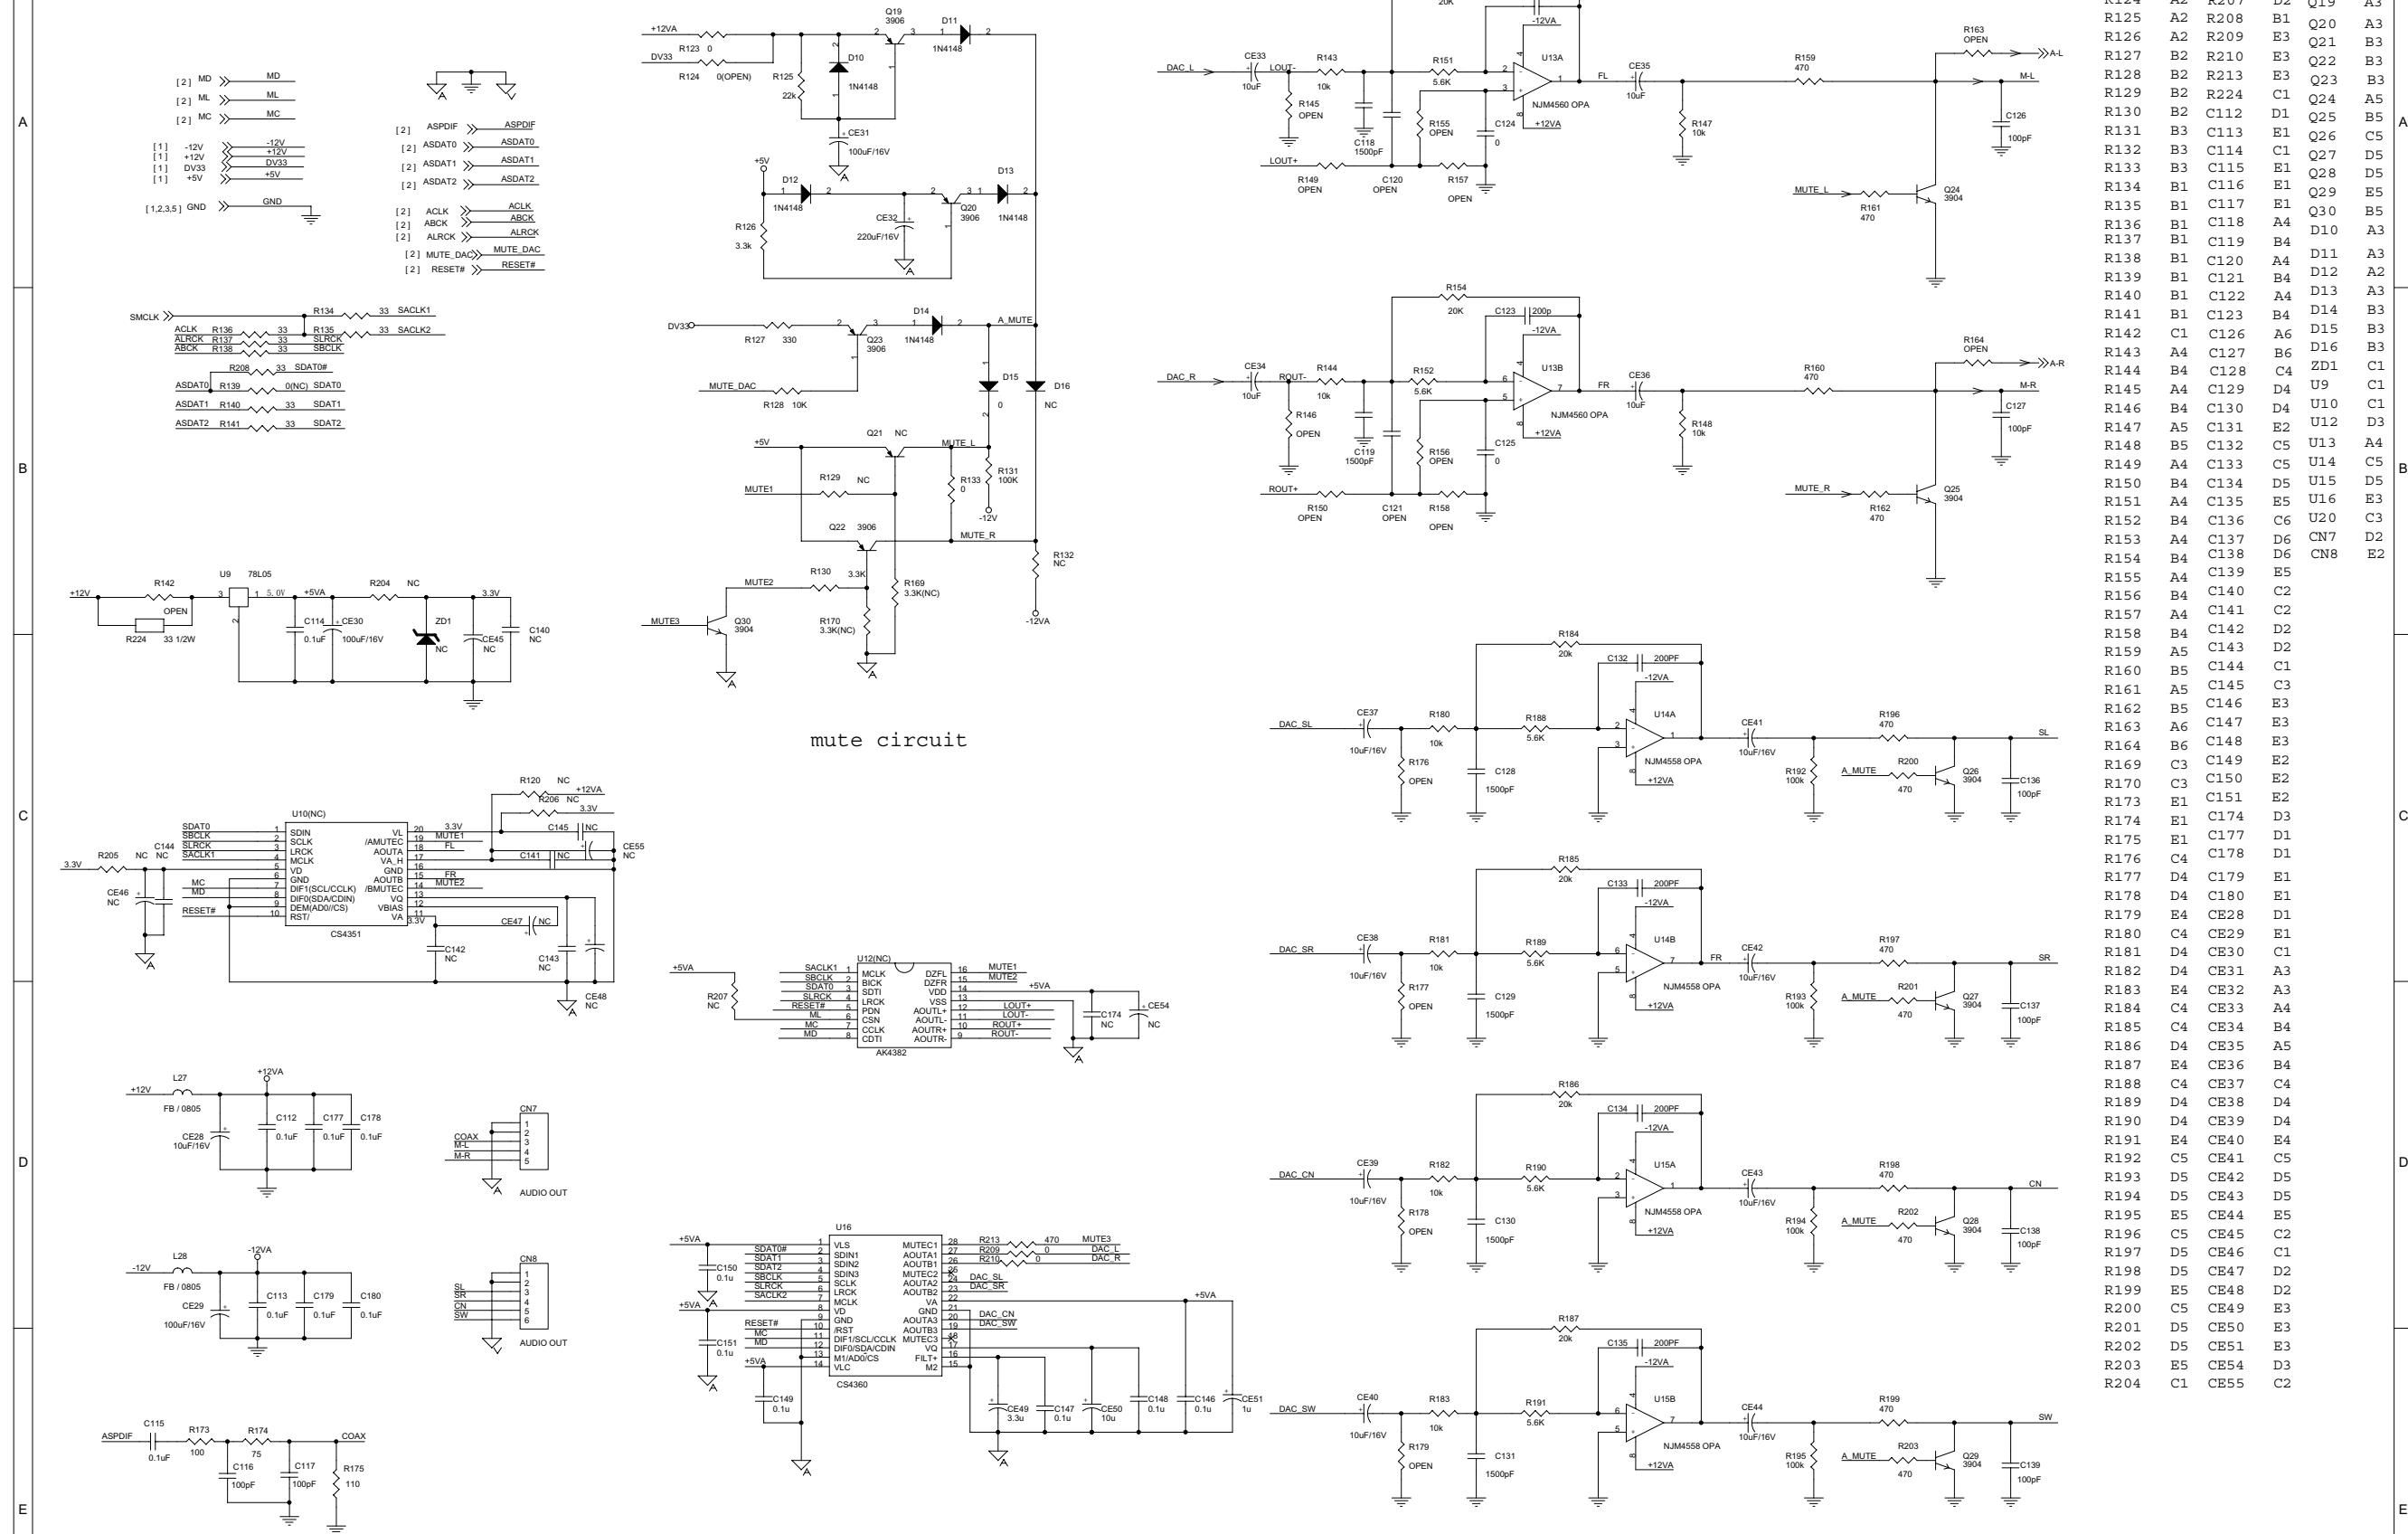

MT1389
Pin assignment version 1.5

Very Important to reduce Noise












Pin	Open	Stuff
1	R21, R22, R24, R34, R38, R26, R32, R35, R31, R25, R39, R40, R41, R42, R43, R44, R45, R46, C73, C76, C78, C79, Q7, Q8, Q9, Q6	R23, R29, R33, R30, R36 (0) R28, R27, R47 (27K), R48 (22K) R50 (20K)
2	R21, R22, R24, R36 (20K) R34, R38, R26, R32, R35, R31, R25, R47 (20K) R39, R40, R41, R42, R43, R44, R45, R46, C73, C76, C78, C79, Q7, Q8, Q9, Q6, R48 (18K), R50 (10K)	

CON3	E5	C69	D3	R42	E4	B
CN4	A1	C70	D3	R43	E4	
CN5	A6	C71	D3	R44	E4	
CN6	E5	C72	D3	R45	E4	
C4	C1	C73	D1	R46	E4	
C7	A2	C74	E1	R47	D3	
C8	A2	C75	D1	R48	D3	
C9	C1	C76	D2	R49	D3	
C10	C1	C77	E2	R50	D3	
C11	D1	C78	E4	R51	A2	
C12	A2	C79	E3	R52	A3	B
C13	A2	C80	E4	R53	A3	
C14	A1	C81	B1	R54	A4	
C15	A2	C82	A6	R55	A4	
C16	A1	C185	A6	R56	A4	
C17	A2	C186	A6	R57	A5	
C18	A2	CE8	C1	R58	A5	
C19	A2	CE9	C2	R59	A5	
C20	A2	CE10	E2	R60	B5	
C21	A2	CE11	E2	R61	D3	
C22	A2	CE12	A2	R62	D3	D
C23	A3	CE13	A2	R63	D2	
C24	A3	CE14	A2	R64	A6	
C25	A3	CE15	A1	R65	A6	
C26	A3	CE16	A3	R66	D3	
C27	A3	CE17	B5	R67	A6	
C28	A3	CE18	D2	R68	A6	
C29	A3	R2	A1	R69	A6	
C30	A3	R3	A1	R70	A6	
C31	A3	R4	A1	R116	A1	
C32	A3	R5	B1	R118	A1	
C33	A3	R6	A1	R211	A1	
C34	A3	R7	A1	R212	A1	
C35	A3	R8	A2	R225	B5	
C36	A3	R9	B1	R226	B5	
C37	A4	R10	B1	R227	B5	
C38	A5	R11	B1	R228	B5	
C39	A4	R12	B1	R229	B5	
C40	A4	R13	C1	R230	B5	
C41	A5	R14	C1	L6	C1	D
C42	B4	R15	C1	L7	C1	
C43	B5	R16	D1	L8	C1	
C44	D4	R17	D1	L9	A2	
C45	D4	R18	D1	L10	C2	
C46	D4	R19	D2	L11	C5	
C47	D5	R20	D2	L12	B5	
C48	D5	R21	D1	L13	A6	
C49	E3	R22	D1	L14	A6	
C50	E3	R23	D1	L15	A6	
C51	E3	R24	D1	L16	A6	E
C52	D4	R25	D2	L17	A6	
C53	D4	R26	D2	L18	A6	
C54	D4	R27	D2	L29	A6	
C55	D4	R28	D2	Q1	B1	
C56	D4	R29	D2	Q2	B1	
C57	D5	R30	D2	Q3	B1	
C58	D5	R31	D2	Q4	C1	
C59	B2	R32	D2	Q5	D1	
C60	B2	R33	D2	Q6	E4	
C61	B2	R34	D1	Q7	E4	E
C62	B2	R35	D2	Q8	E4	
C63	B2	R36	D2	Q9	E4	
C64	B2	R37	E1	U2	C3	
C65	B2	R38	E2	U3	D1	
C66	C2	R39	E3			
C67	C2	R40	E4	U4	A4	
C68	D2	R41	E2	Y1	A4	
CN2	C1					
CN3	E4					

The schematic diagram illustrates the power supply section of the ADXL055 evaluation board. It features a 5V regulator (L18) with a feedback (FB) connection. The output of the regulator is connected to a series of capacitors (C83 to C157) and a diode (SD33). The capacitors are connected to ground (A20, A21) and the diode is connected to the positive supply line.








Component values and connections:

- Capacitors: C83 (0.1uF), CE19 (47uF/16V), C84 (0.1uF), C85 (0.1uF), C86 (0.1uF), C87 (0.1uF), C88 (0.1uF), C89 (0.1uF), C90 (0.1uF), C153 (0.1uF), C154 (0.1uF), C155 (0.1uF), C156 (0.1uF), C157 (0.1uF).
- Diode: SD33.
- Ground connections: A20, R79, (0)(OPEN), AA20; A21, R80, (0)(OPEN), AA21.

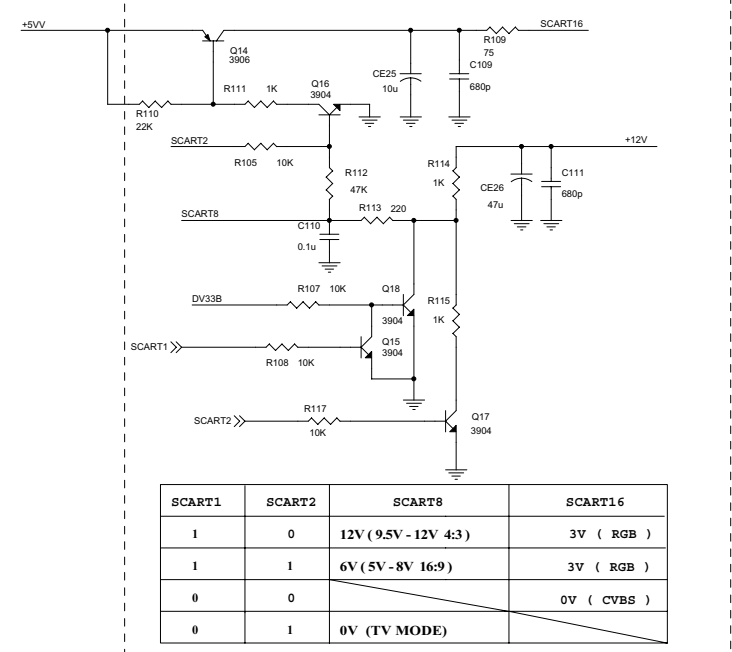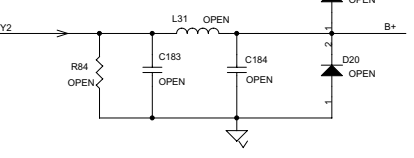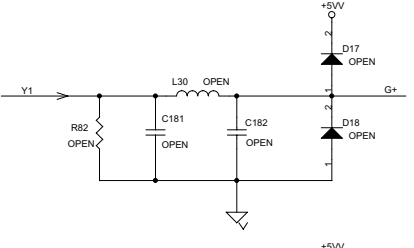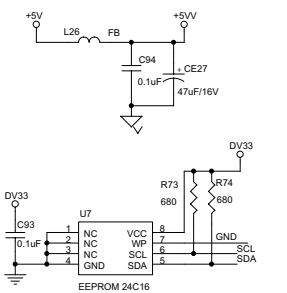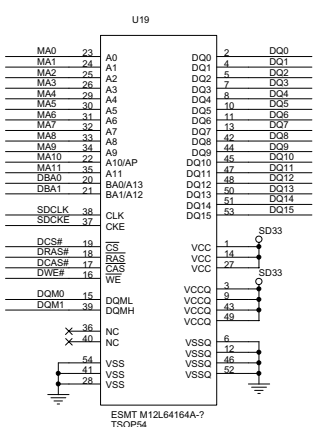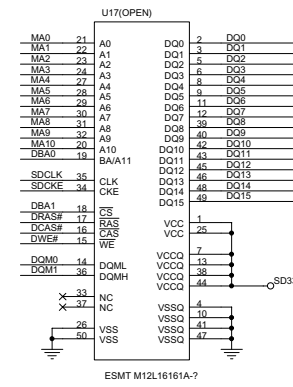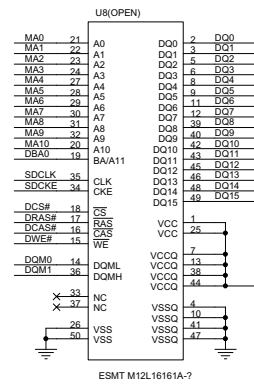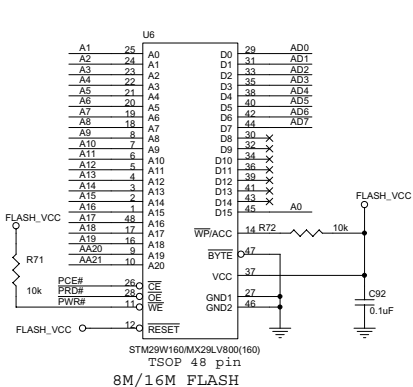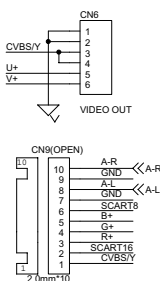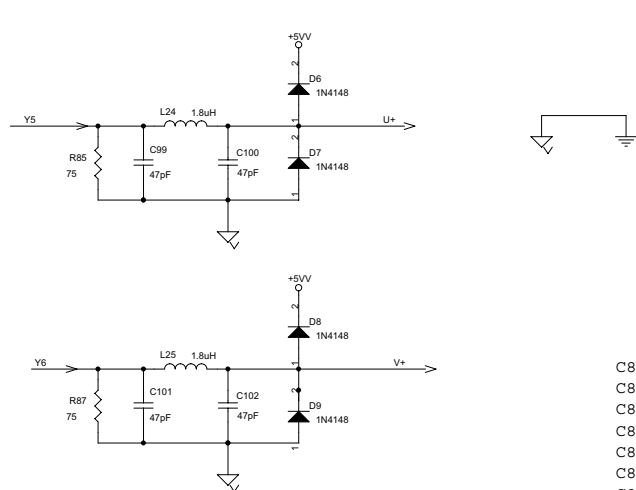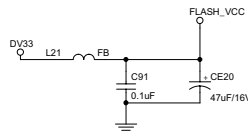


SCART1	SCART2	SCART8	SCART16
1	0	12V (9.5V - 12V 4:3)	3V (RGB)
1	1	6V (5V - 8V 16:9)	3V (RGB)
0	0		0V (CVBS)
0	1	0V (TV MODE)	

This inside of circle a piece
is "OPEN"

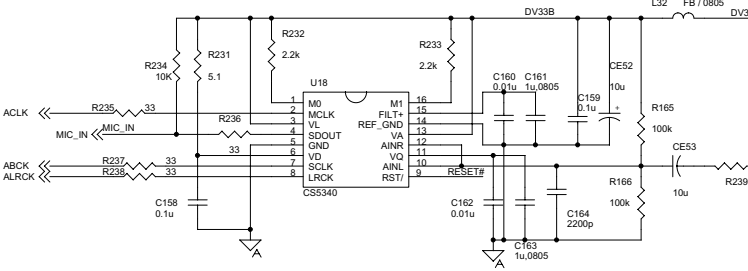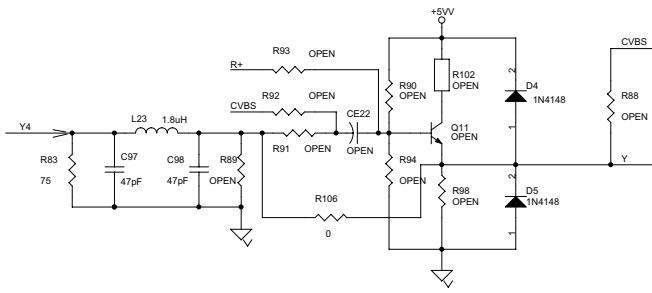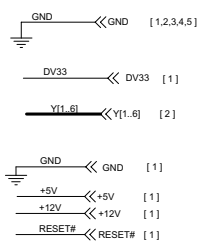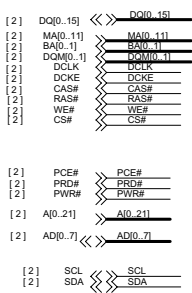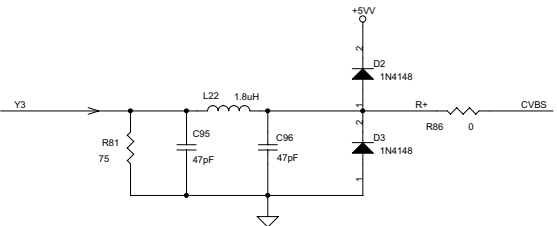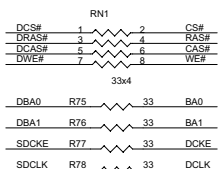



Main Board Print-layout (Top Side) for DVP3015K,DVP3020(K) ,DVP3026(K),DVP3028,DVP3040(K),DVP3042,DVP3046

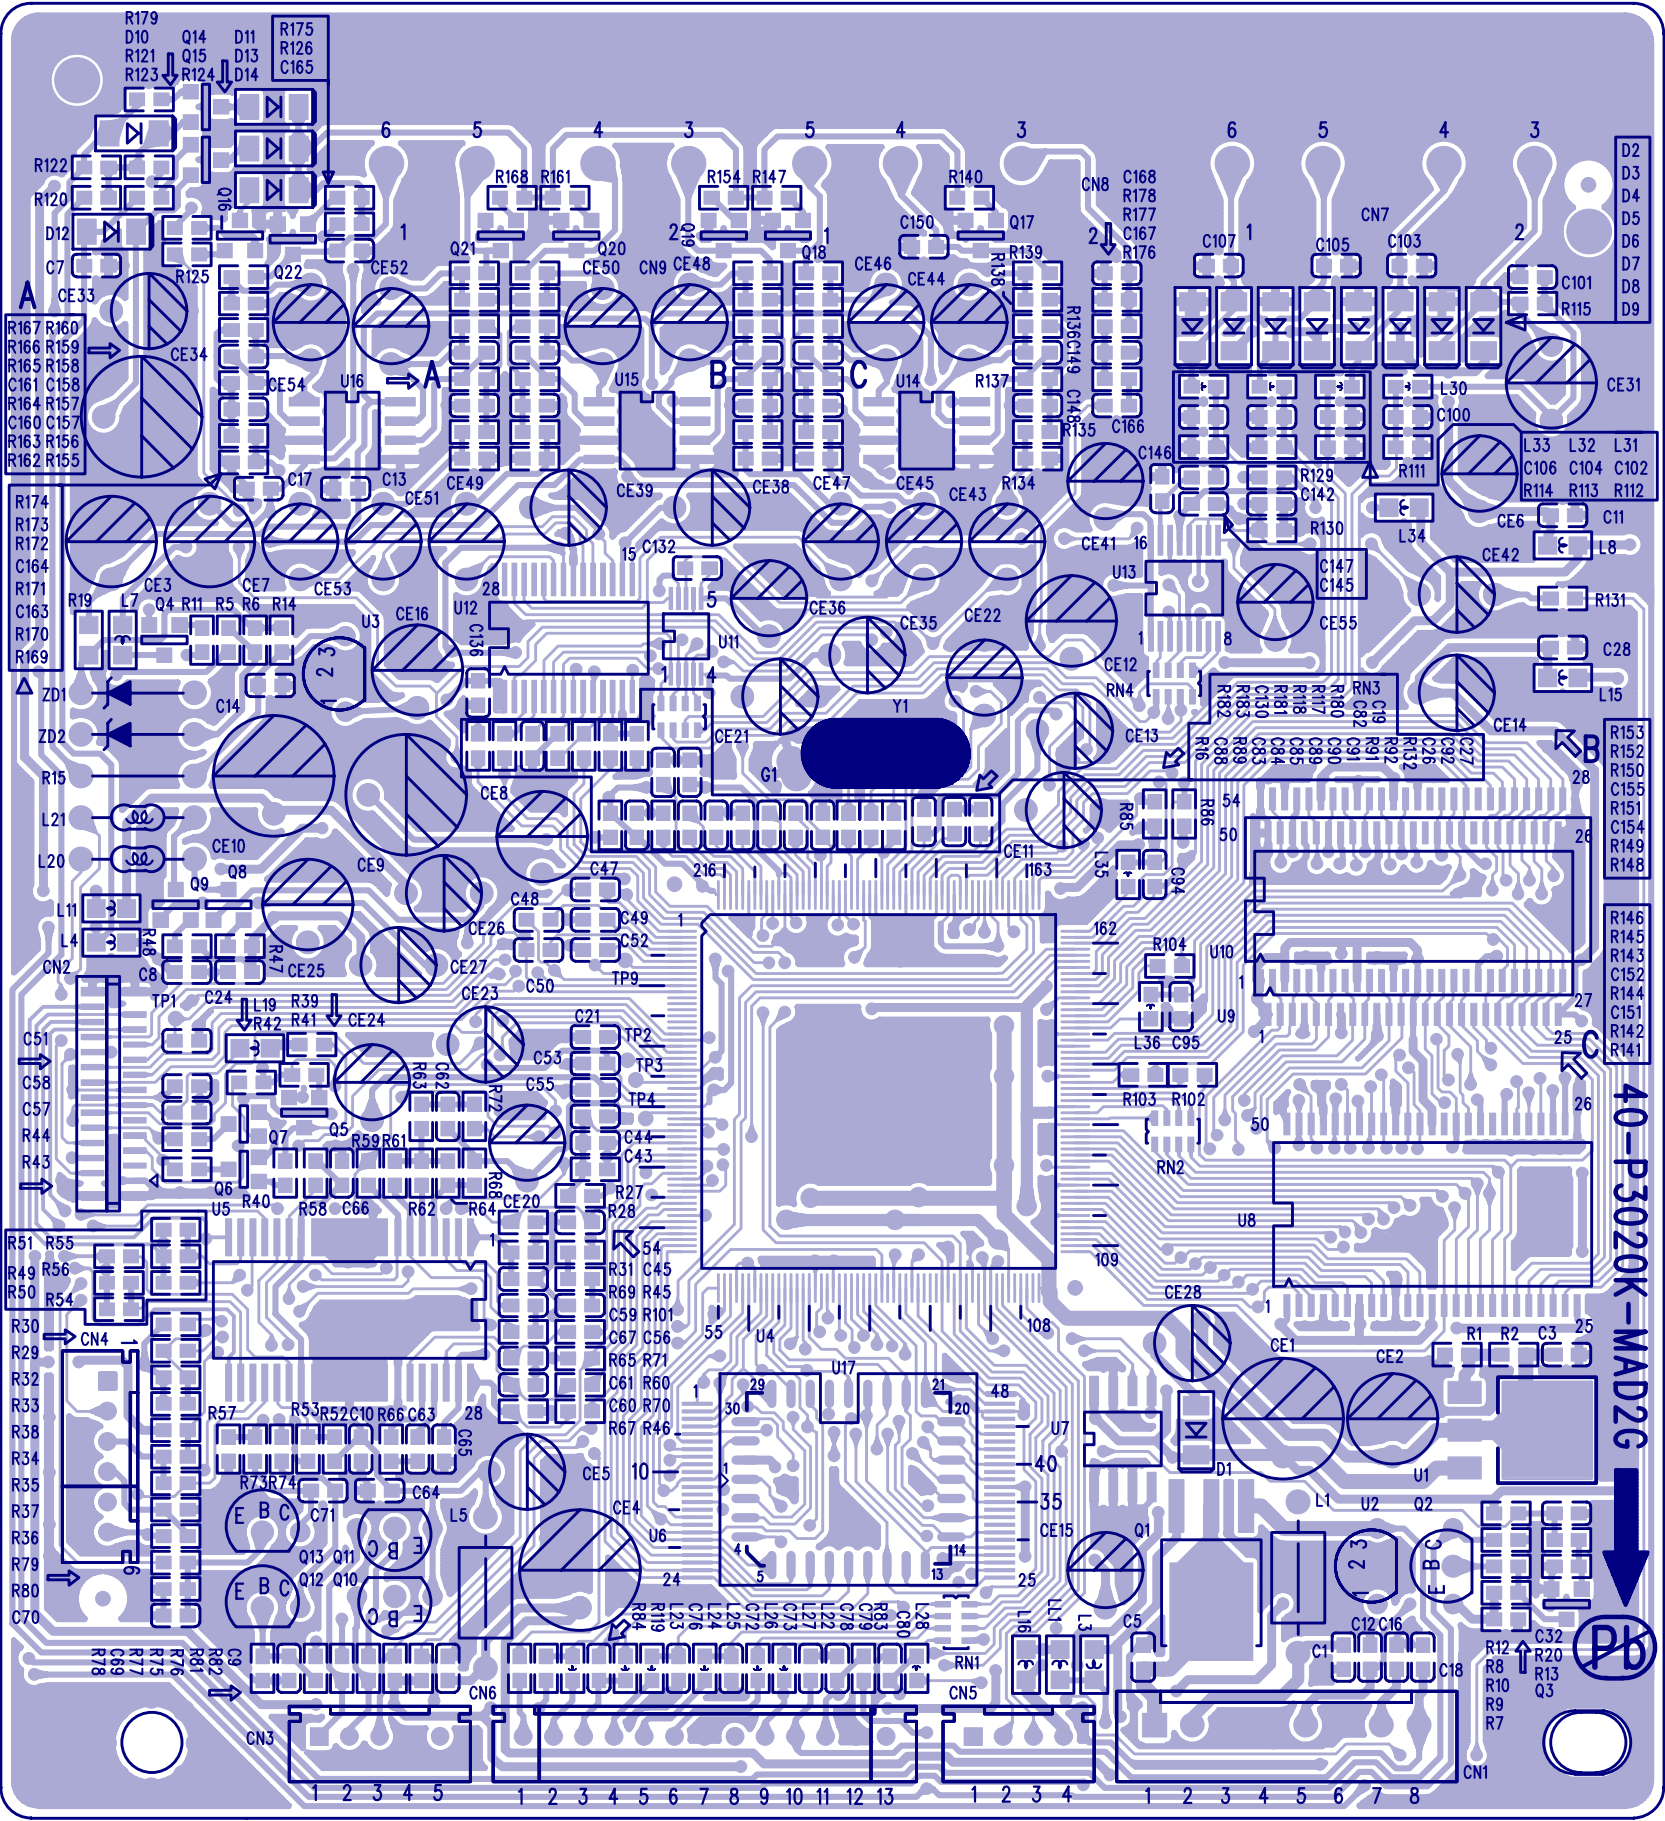


Main Board : INDEX & POWER for DVP3002/93 DVP3020/05

- 1 INDEX & POWER
- 2 RF, SERVO & MPEG - MT1389D
- 3 MEMORY /VIDEO OUT
- 4 AUDIO OUT






NAME	TYPE	DEVICE
VCC	Digital 5V	SUPPLY
DV33	Digital 3.3V	MT1389D
RFV33	Servo 3.3V	MT1389D
LDO_AV33	Laser Diode 3.3V	
AVCC	RF 5V	PICKUP HEADER
V18	Digital 1.8V	MT1389D
SD33	Digital 3.3V	SDRAM
+12V	Audio +12V	OP AMP.
-12V	Audio -12V	OP AMP.
AVDD	Audio 5V	VCC_AUDIO
DVDD	Audio 3V3	VCC3_AUDIO

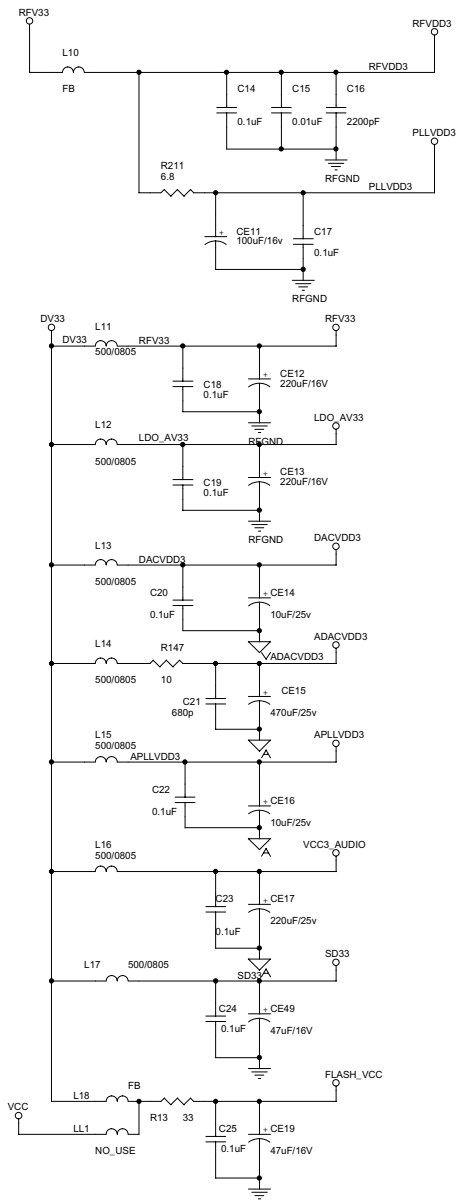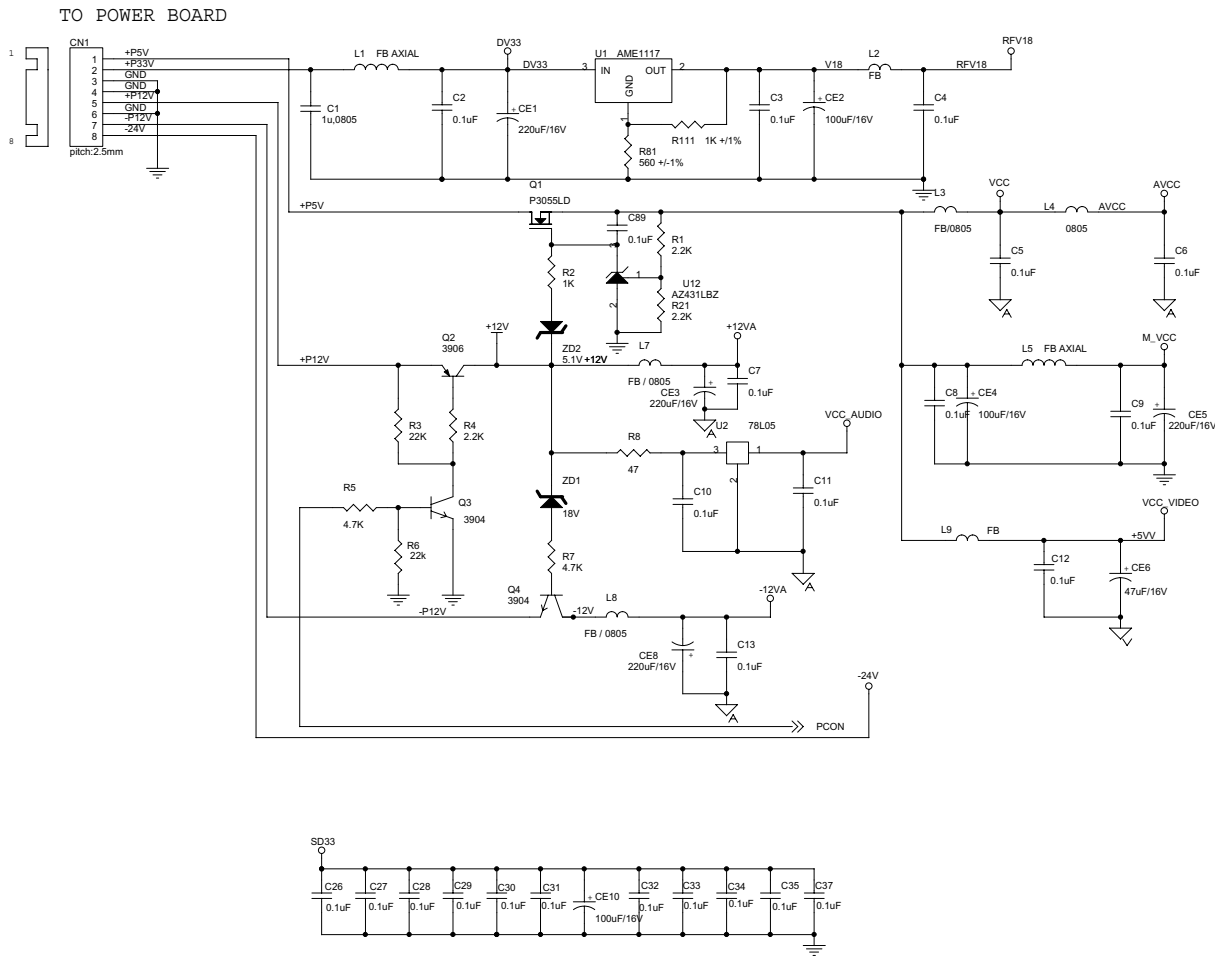










C1	C2	CE1	C2
C2	C2	CE2	C3
C3	C3	CE3	D2
C4	C3	CE4	D3
C5	D3	CE5	D3
C6	D4	CE6	E3
C7	D3	CE8	E2
C8	D3	CE10	F2
C9	D3	CE11	C4
C10	D3	CE12	C5
C11	D3	CE13	C5
C12	E3	CE14	D5
C13	E3	CE15	D5
C14	B4	CE16	D5
C15	B5	CE17	E5
C16	B5	CE49	E5
C17	B5	CN1	C1
C18	C4		
C19	E5	R1	D2
C19	C4	R2	D2
C20	D4	R3	D2
C21	D4	R4	D2
C21	D5	R5	D2
C22	D4	R6	E2
C23	D5	R7	E2
C24	E5	R8	D2
C25	E5	R13	E4
C26	F2	R21	D2
C27	F2	R81	C2
C28	F2	R111	C2
C29	F2	R147	D4
C30	F2	R211	B4
C31	F2	Q1	C2
C32	F2	Q2	D2
C33	F2	Q3	D2
C34	F2	Q4	E2
C35	F3	U1	C2
C37	F3	U2	D3
C89	D2	U12	D2
L1	C2		
L2	C3	ZD1	D2
L3	D3	ZD2	D2
L4	D3		
L5	D3		
L7	D2		
L8	E2		
L9	E3		
L10	B4		
L11	C4		
L12	C4		
L13	C4		
L14	D4		
L15	D4		
L16	D4		
L17	E4		
L18	E4		

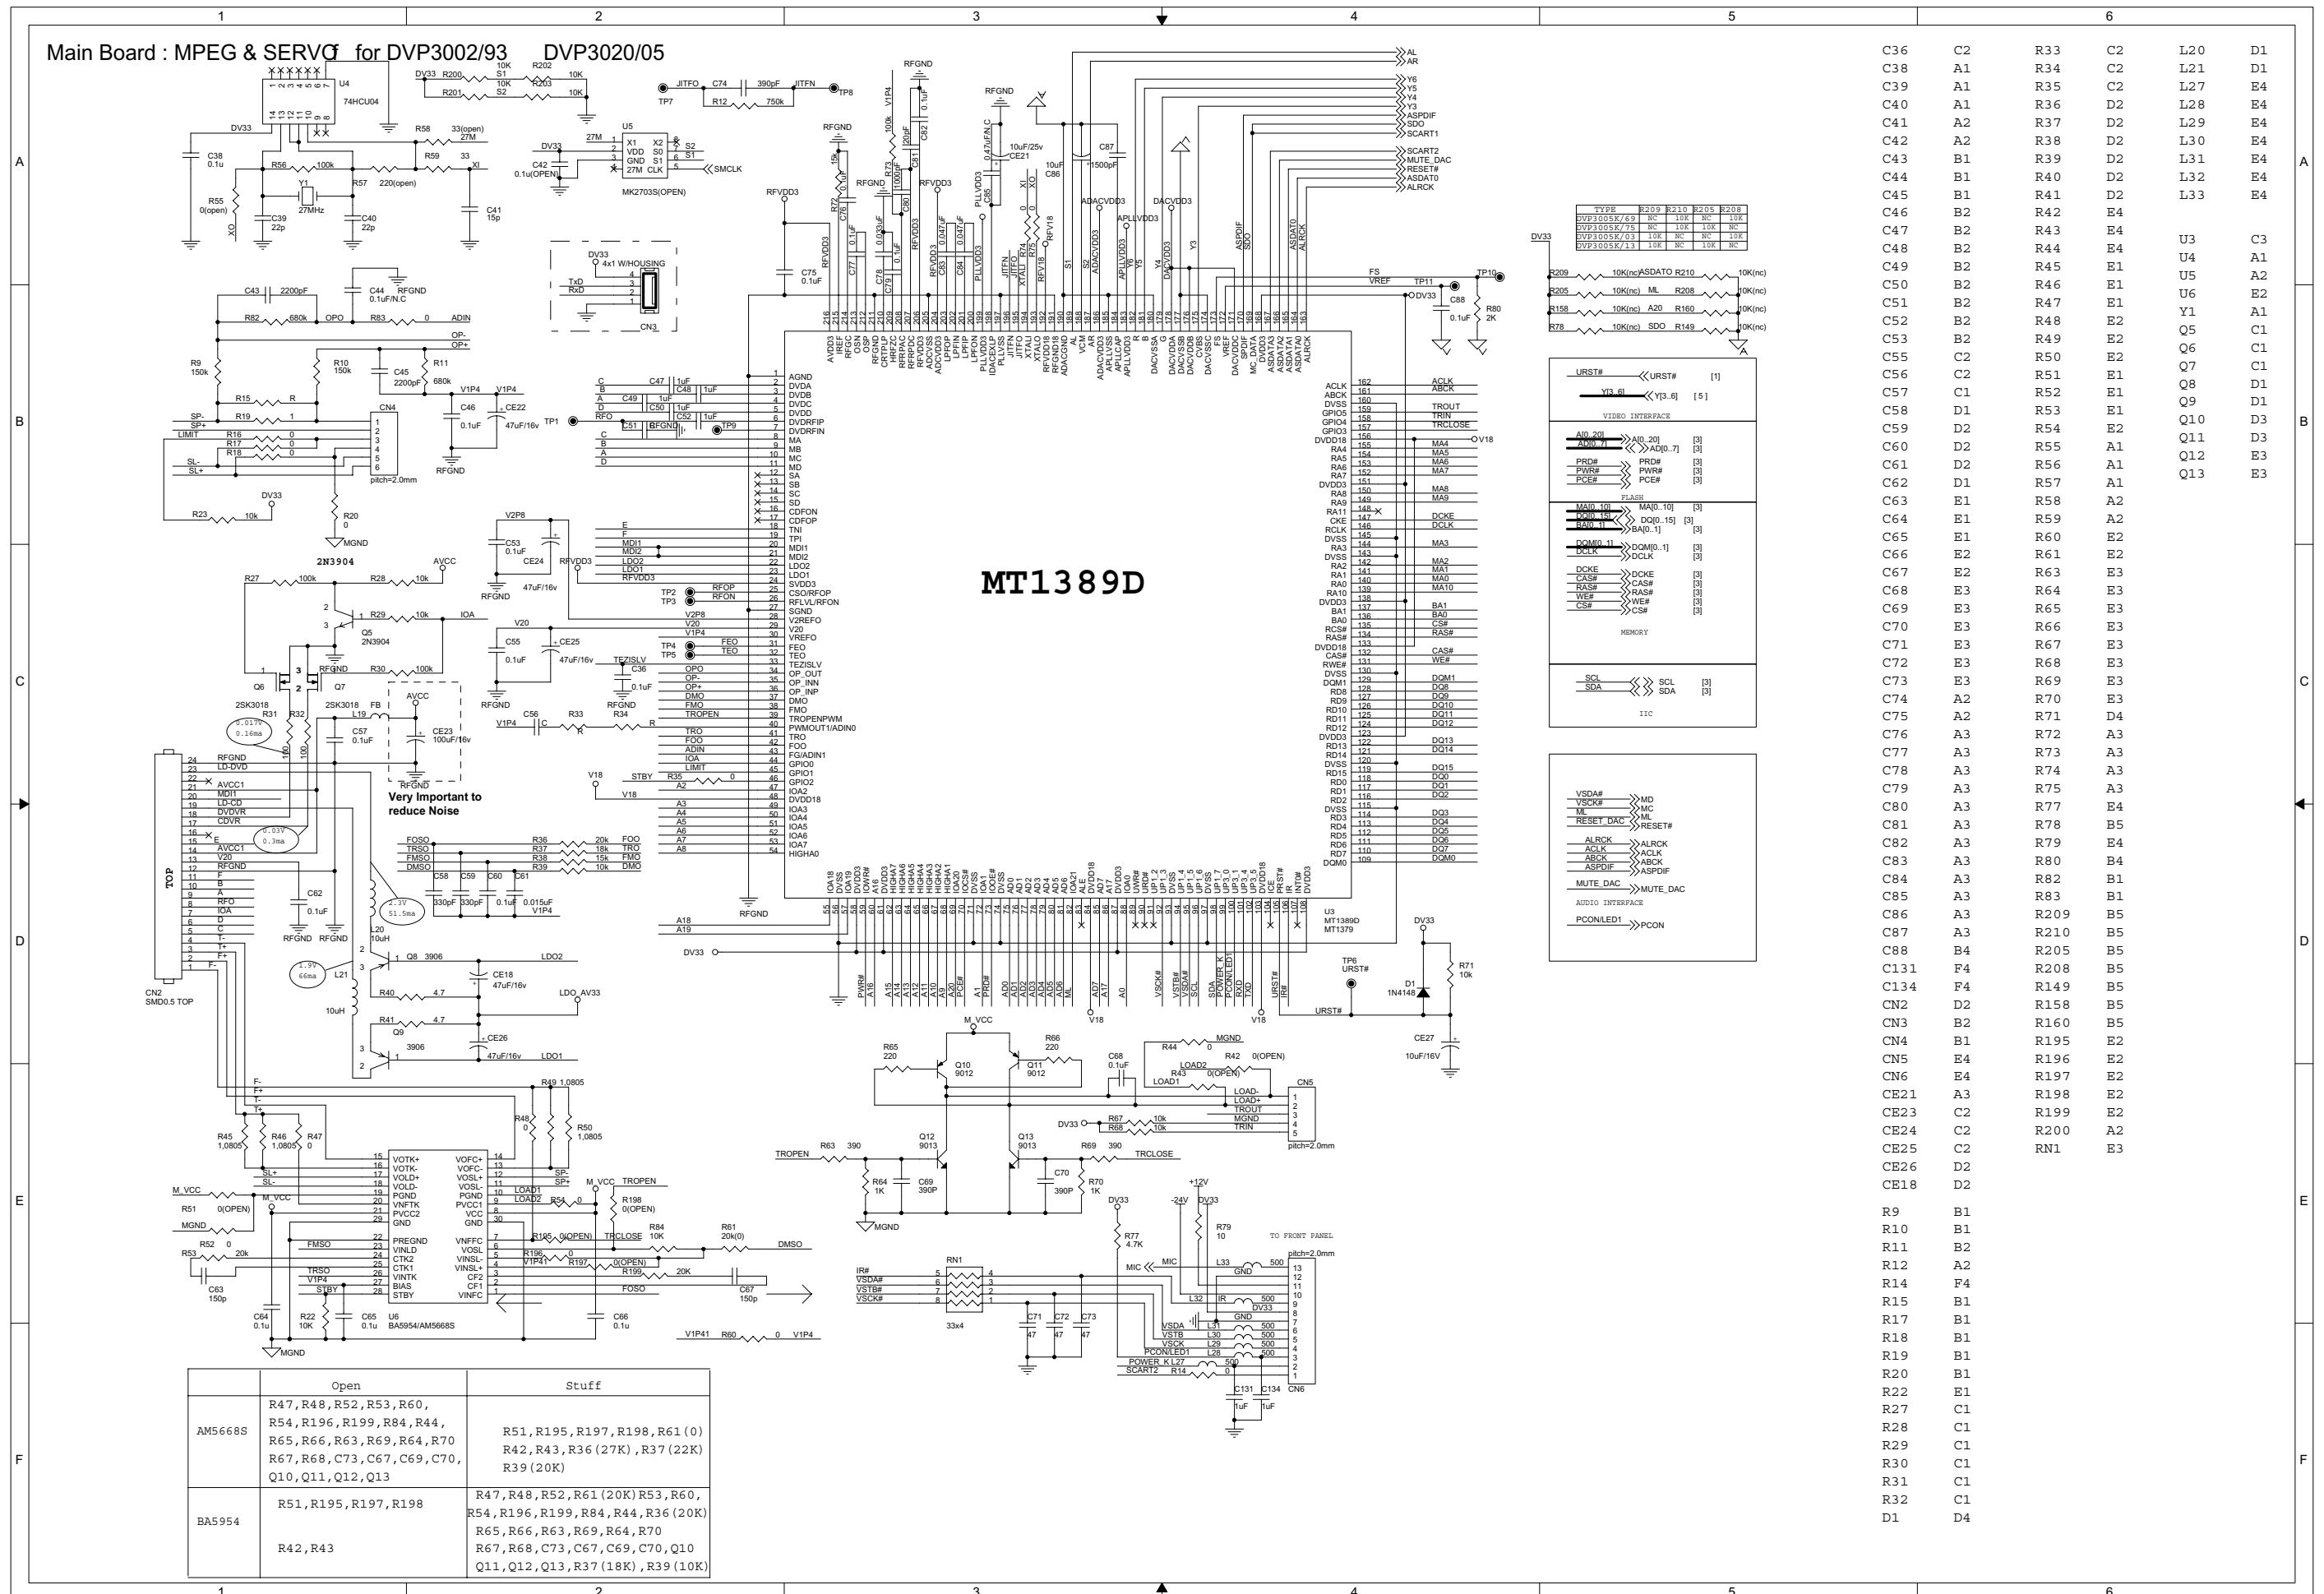

Main Board : SDRAM,FLASH,VIDE FILTER & SCART OUT PUT for DVP3002/93 DVP3020/05

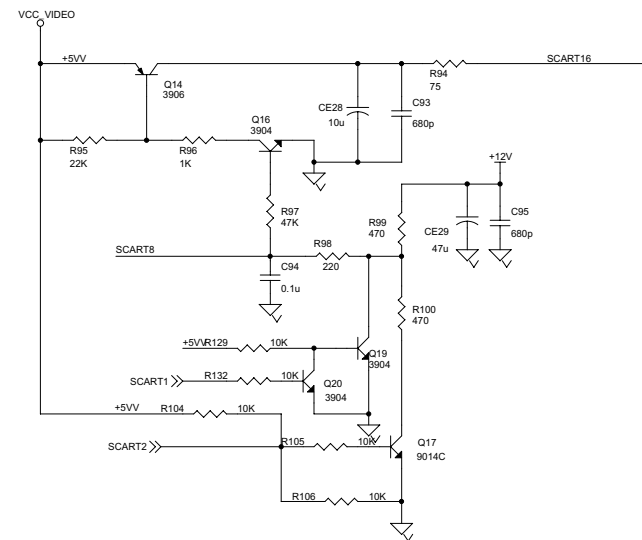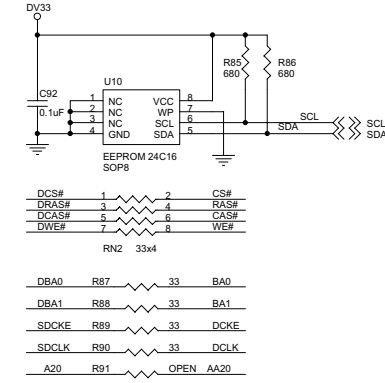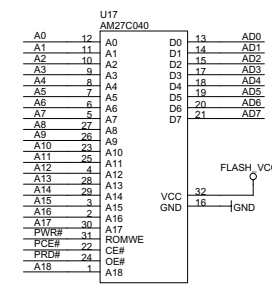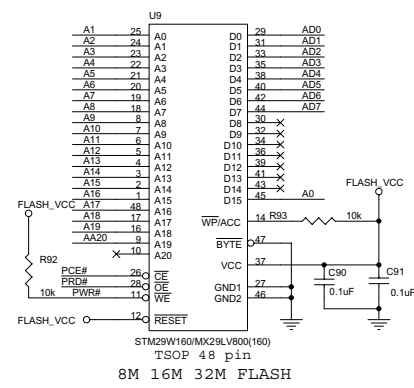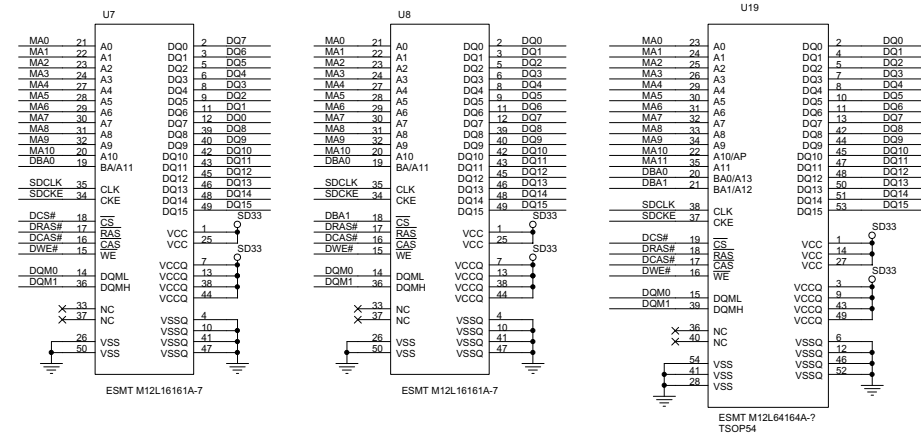


SCART1	SCART2	SCART8	SCART16
1	0	12V (9.5V - 12V 4:3)	3V (RGB)
1	1	6V (5V - 8V 16:9)	3V (RGB)
0	0	0V TV MODE	0V (CVBS)

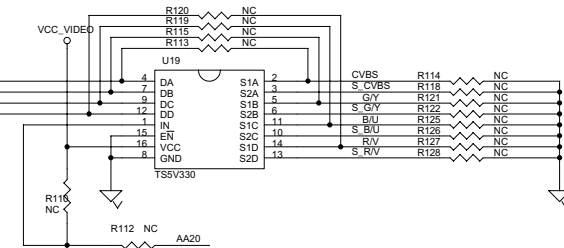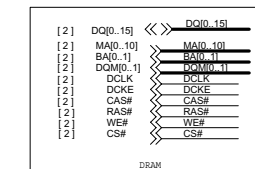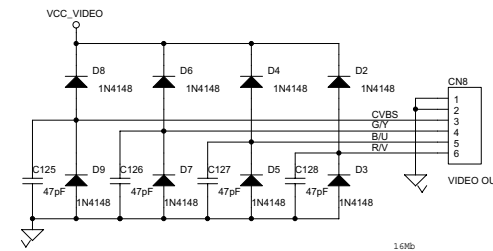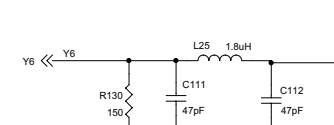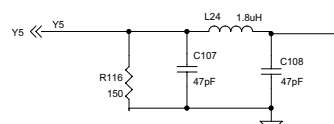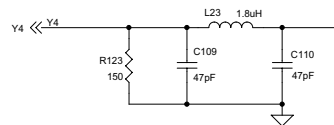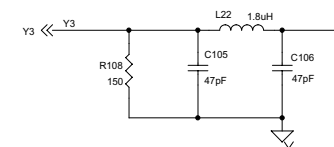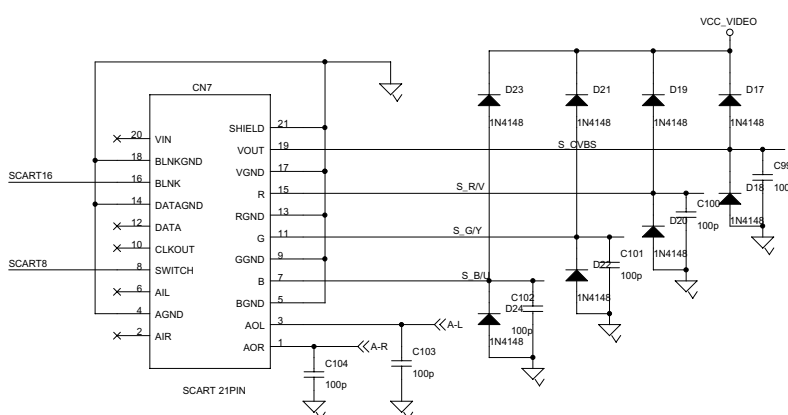



C92	A5	R85	A5
C93	C2	R86	A5
C94	C1	R87	B5
C99	E2	R88	B5
C100	E2	R89	B5
C101	E2	R90	B5
C102	F2	R91	B5
C103	F1	R92	B3
C104	F1	R93	A3
C105	D3	R94	B2
C106	D3	R95	C1
C109	E3	R96	C1
C110	E3	R97	C1
C107	E3	R98	C1
C108	E3	R99	C2
C111	F3	R100	C2
C112	F3	R104	D1
C125	C4	R105	D1
C126	C4	R106	D1
C127	C5	R108	D3
C128	C5	R110	E4
CE28	C1	R112	E4
CE29	C2	R113	D4
CN7	E1	R114	E5
CN8	C5	R115	D4
Q14	B1	R116	E3
Q16	C1	R118	E5
Q17	D1	R119	D4
Q19	C1	R120	D4
Q20	C1	R121	E5
D2	C5	R123	E3
D3	C5	R125	E5
D4	C5	R126	E5
D5	C5	R127	E5
D6	C5	R128	E5
D7	C5	R129	C1
D8	C4	R130	F3
D9	C4	R132	C1
D17	E2	RN2	A5
D18	E2	U7	A1
D19	E2	U8	A2
D20	E2	U9	A3
D21	E2	U10	A5
D22	F2	U12	E4
D23	E2	U17	A4
L22	D3	U19	A2
L23	D3		
L24	E3		
L25	F3		

R24	D1	C54	D1
R25	D2	C96	D3
R26	D2	C97	D4
R62	D4	C98	D4
R76	D4	C113	D2
R137	D3	C114	D2
R138	D4	C115	A3
R139	D4	C116	A3
R140	B1	C117	A3
R141	B1	C118	A4
R142	B1	C119	D2
R143	B2	C120	D2
R144	B1	C121	B3
R145	B2	C123	B3
R148	C1	C122	B3
R150	A2	C124	A3
R151	A2	C129	D3
R152	A3	C130	D4
R153	A3	C132	D4
R154	A3	C133	D4
R155	A3	C134	D4
R156	A3	C135	D4
R157	A3	C136	D4
R159	A4	C137	D5
R160	A4	C138	C1
R161	A4	C139	C1
R165	A4	C140	C2
R166	B2	C141	C2
R167	B3	C142	D2
R168	B3	C145	B3
R169	B3	C146	B4
R170	B3		
R172	B2	CE9	C4
R173	B3	CE37	C1
R175	B4	CE38	C2
R176	B4	CE40	A2
R177	B4	CE41	A3
R181	B4	CE43	C4
R184	B3	CE42	B3
R185	C3	CE45	B2
R186	C4	CE47	D2
R187	D4	CE48	D2
R188	A1	CN10	B5
R189	A1		
R190	A1	Q23	A1
R192	A1	Q24	A2
R193	B1	Q25	B1
R194	B1	Q26	B1
RN5	D3	Q27	B1
RN4	C1	Q29	B4
		Q31	B4
D10	A1		
D11	A2	L26	C3
D12	A1	U11	A3
D13	A2	U13	D4
D14	A1	U14	C2
D15	B2	U15	C1
D16	B2	U16	D1

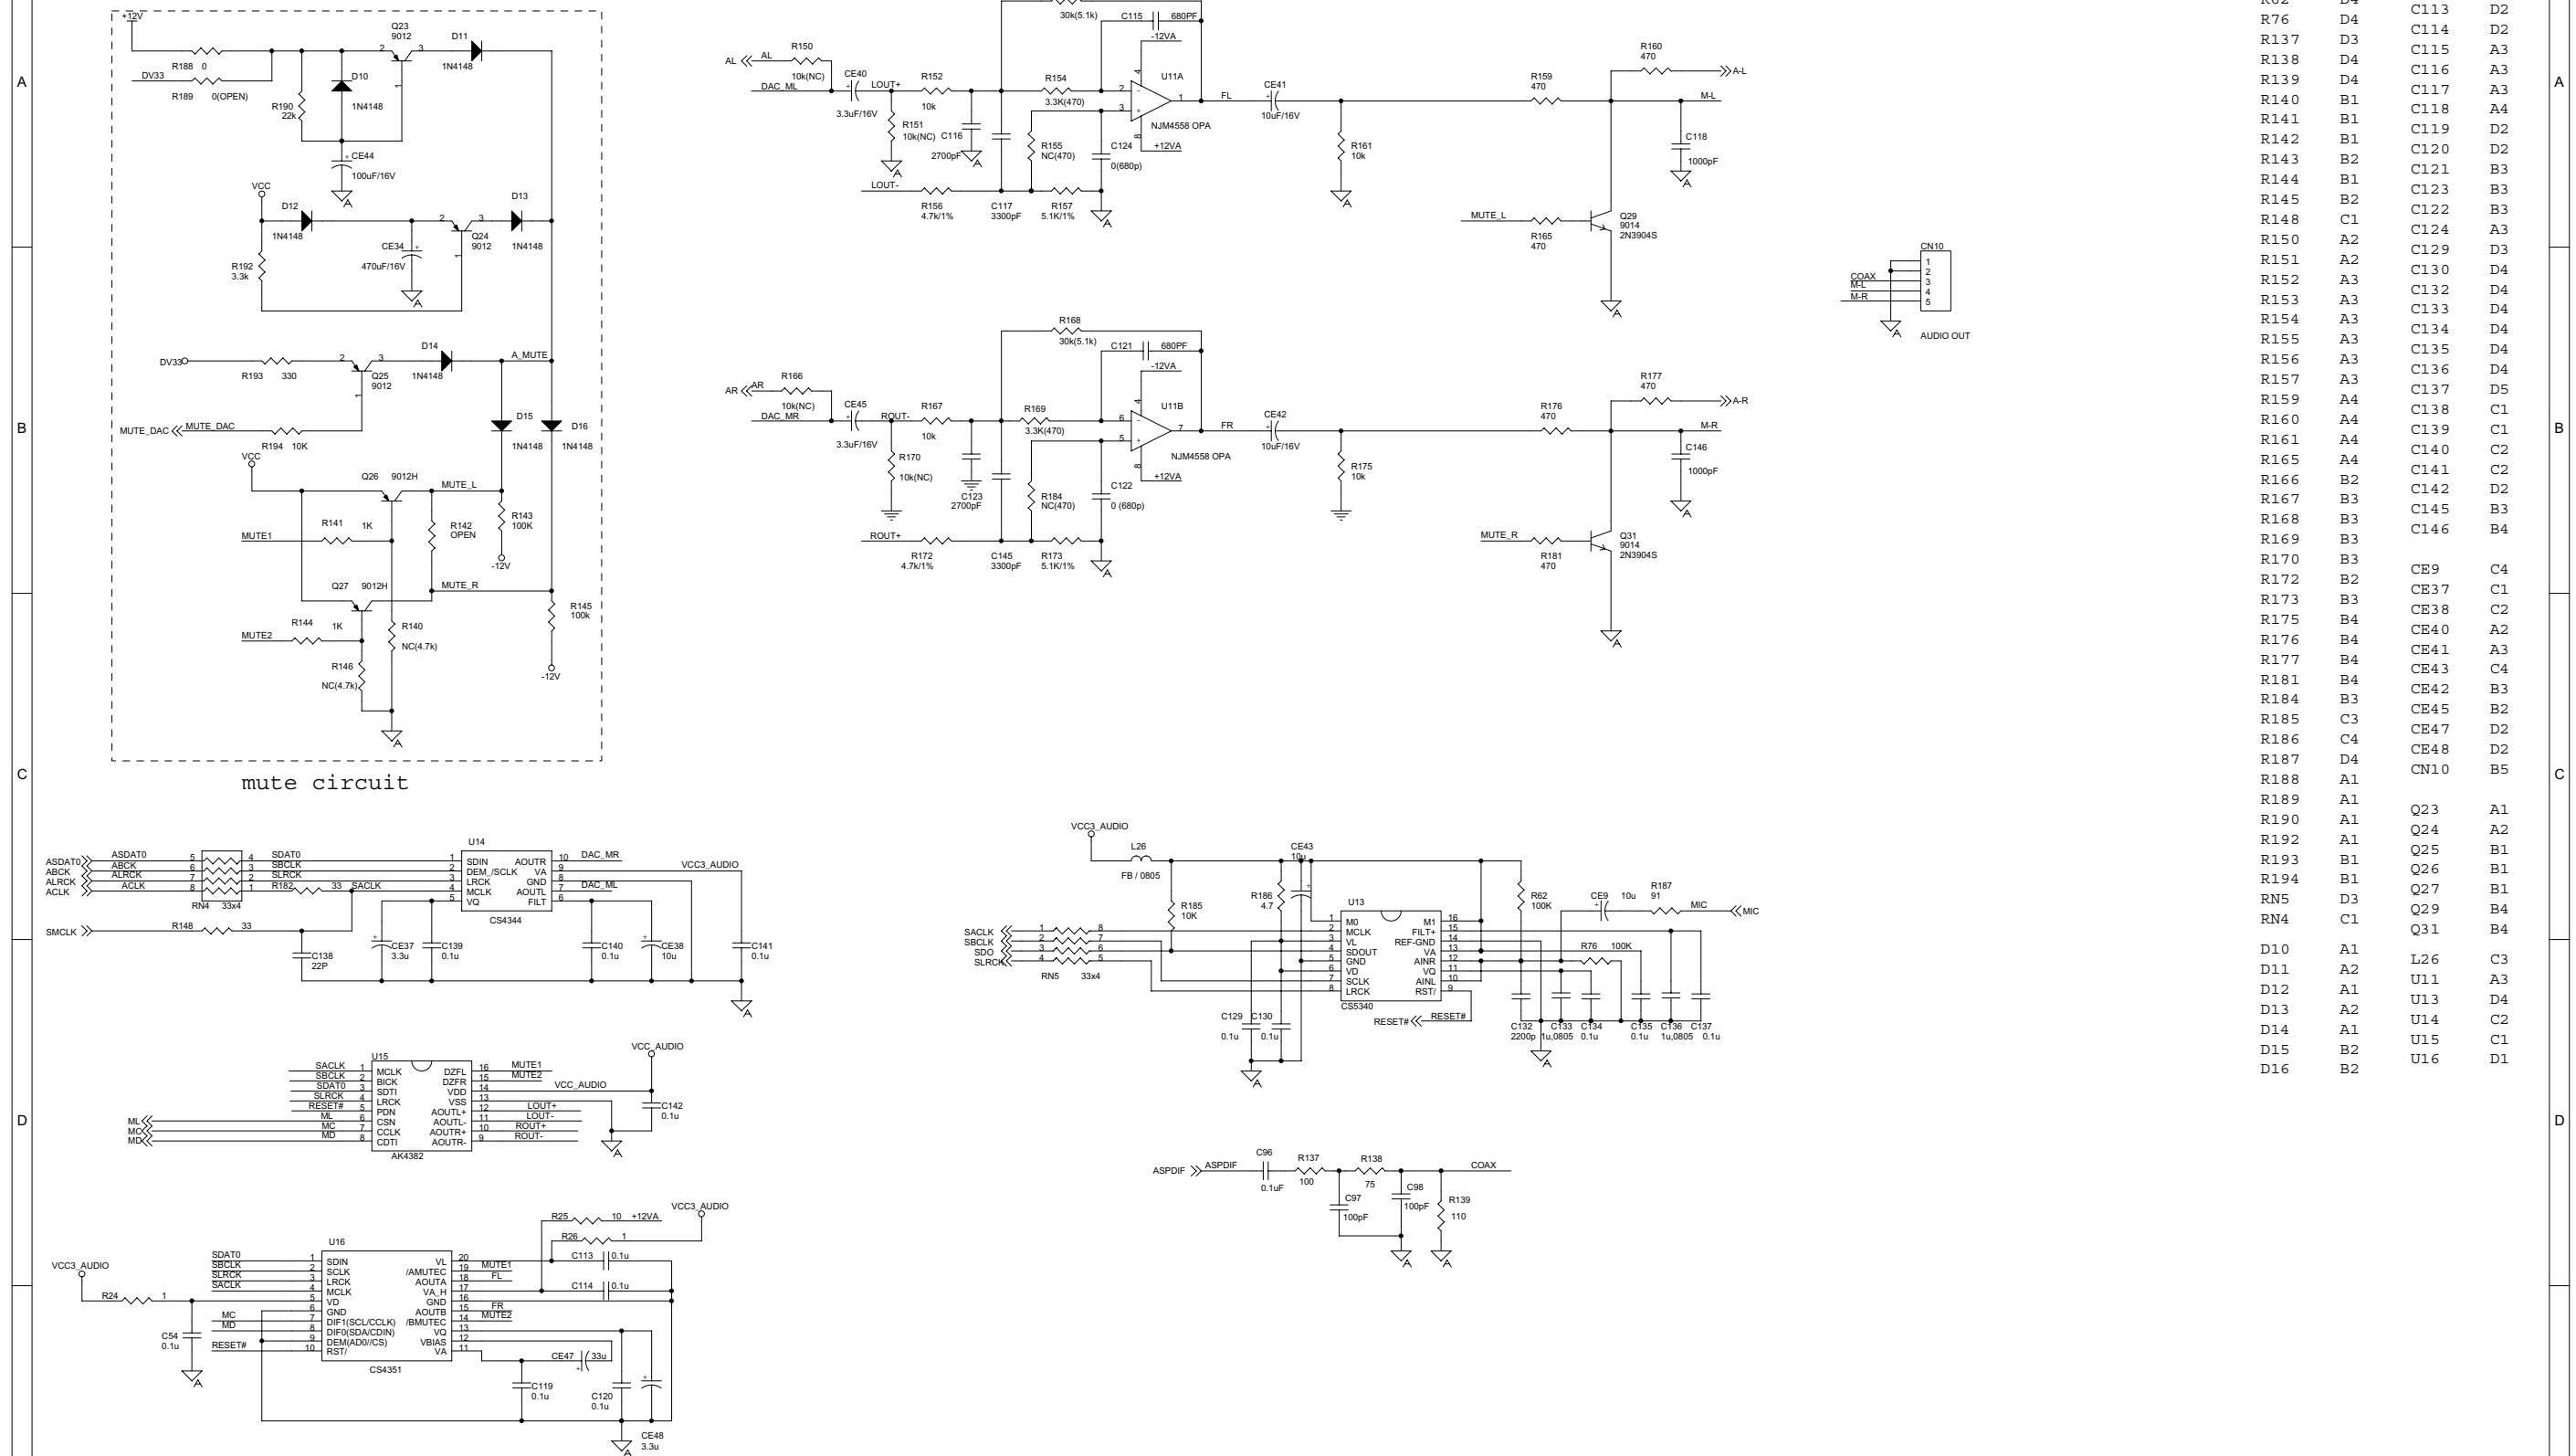



Main Board Print-layout (Top Side) for DVP3002/93 DVP3020/05

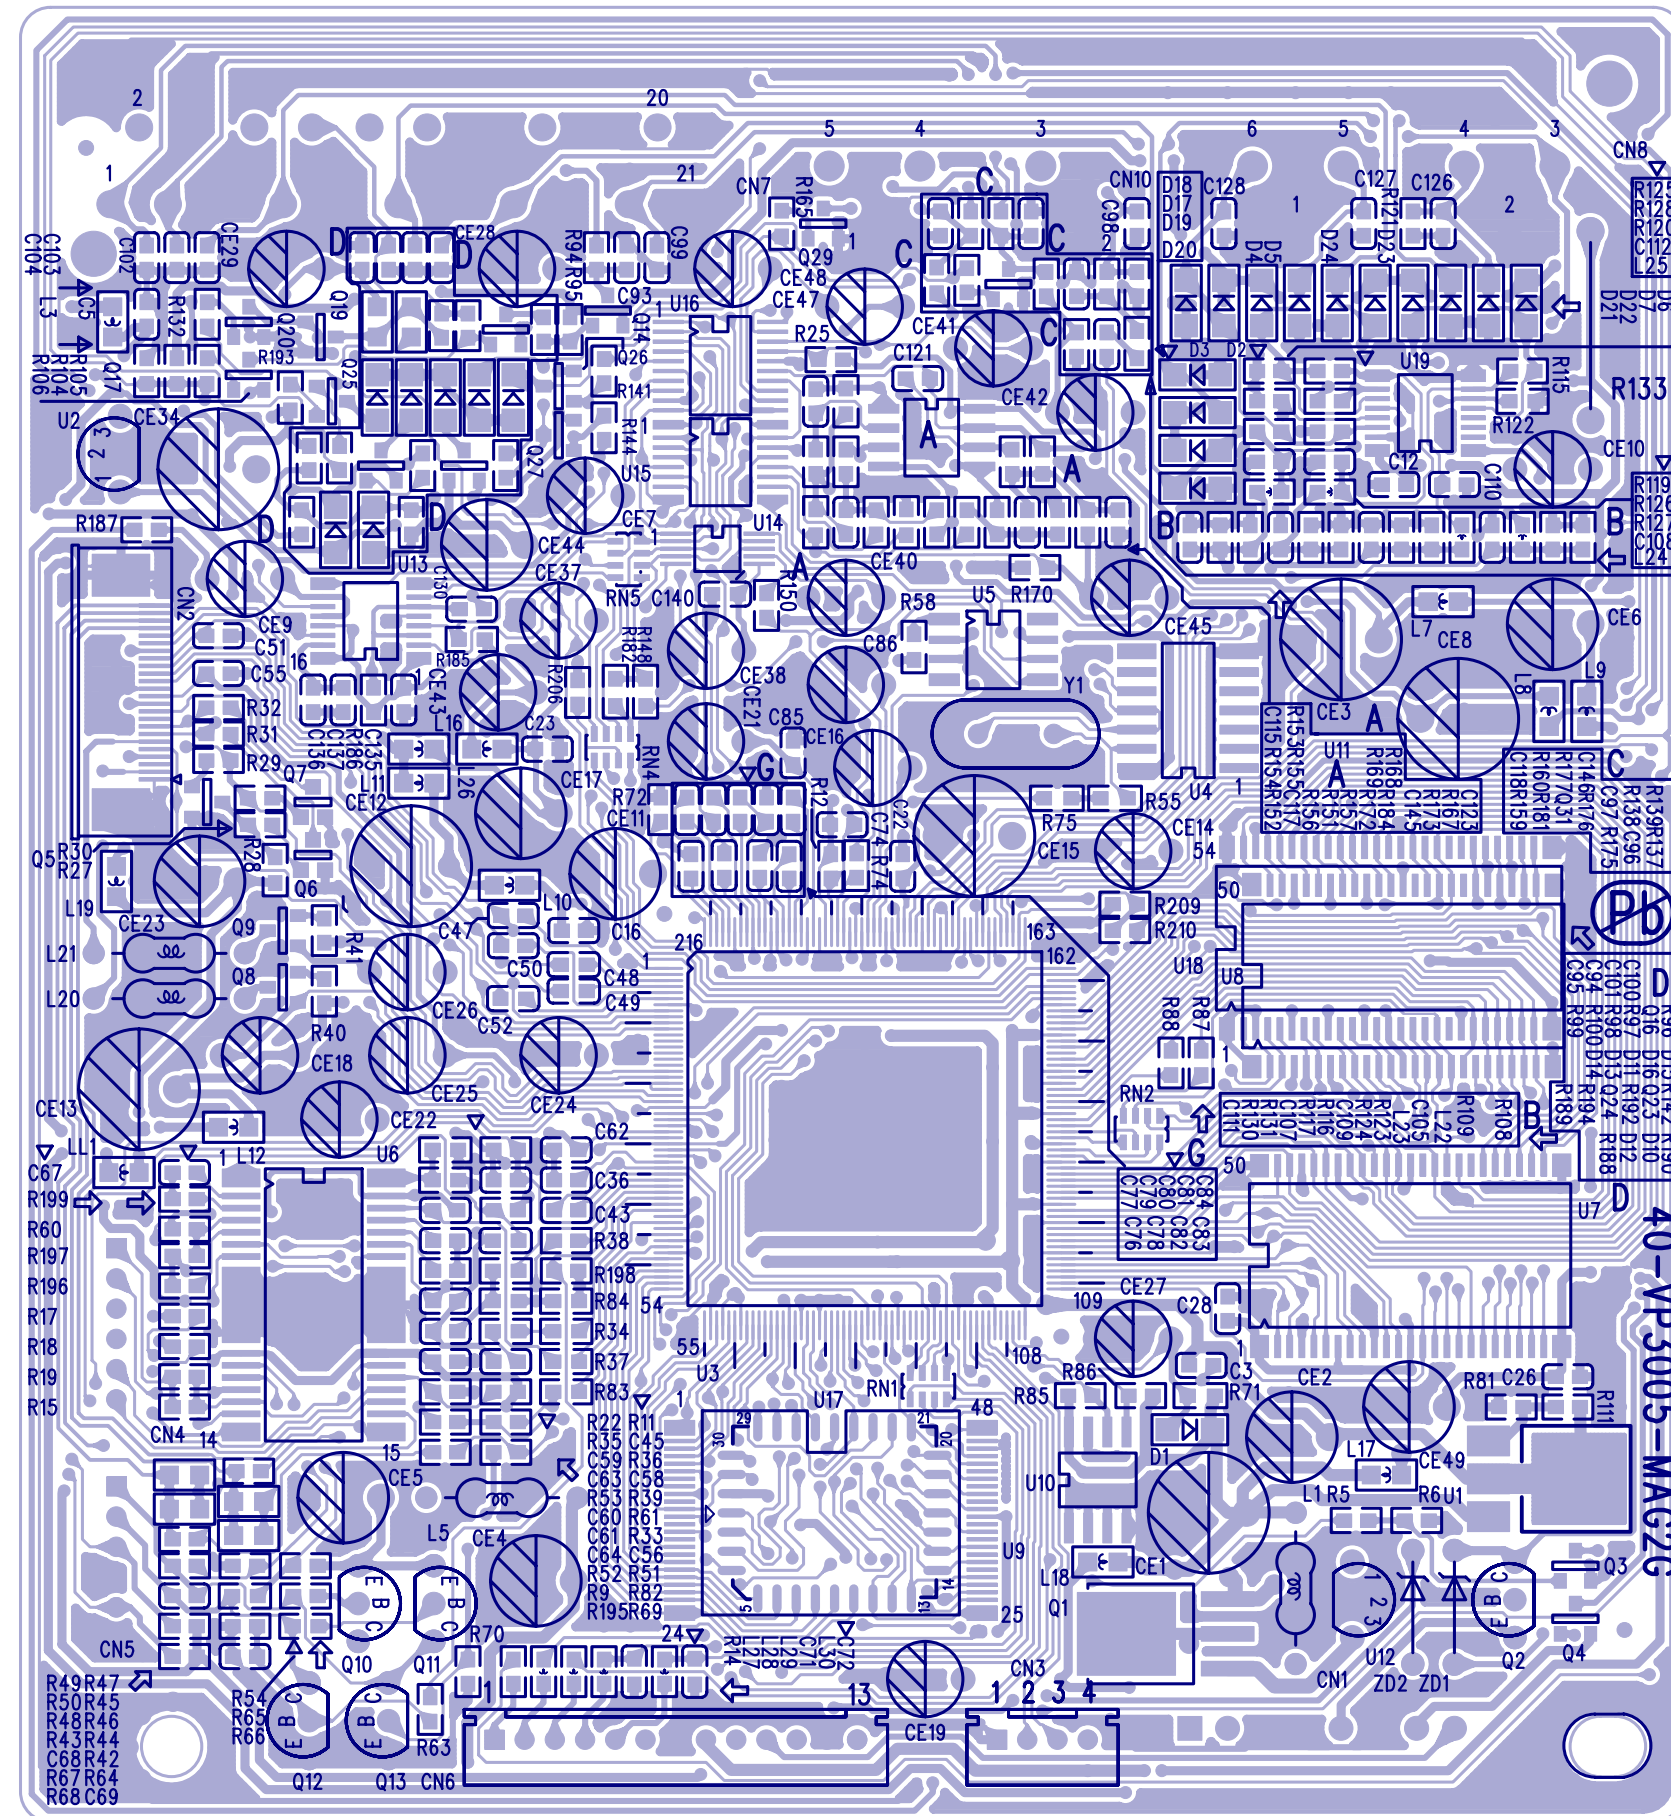

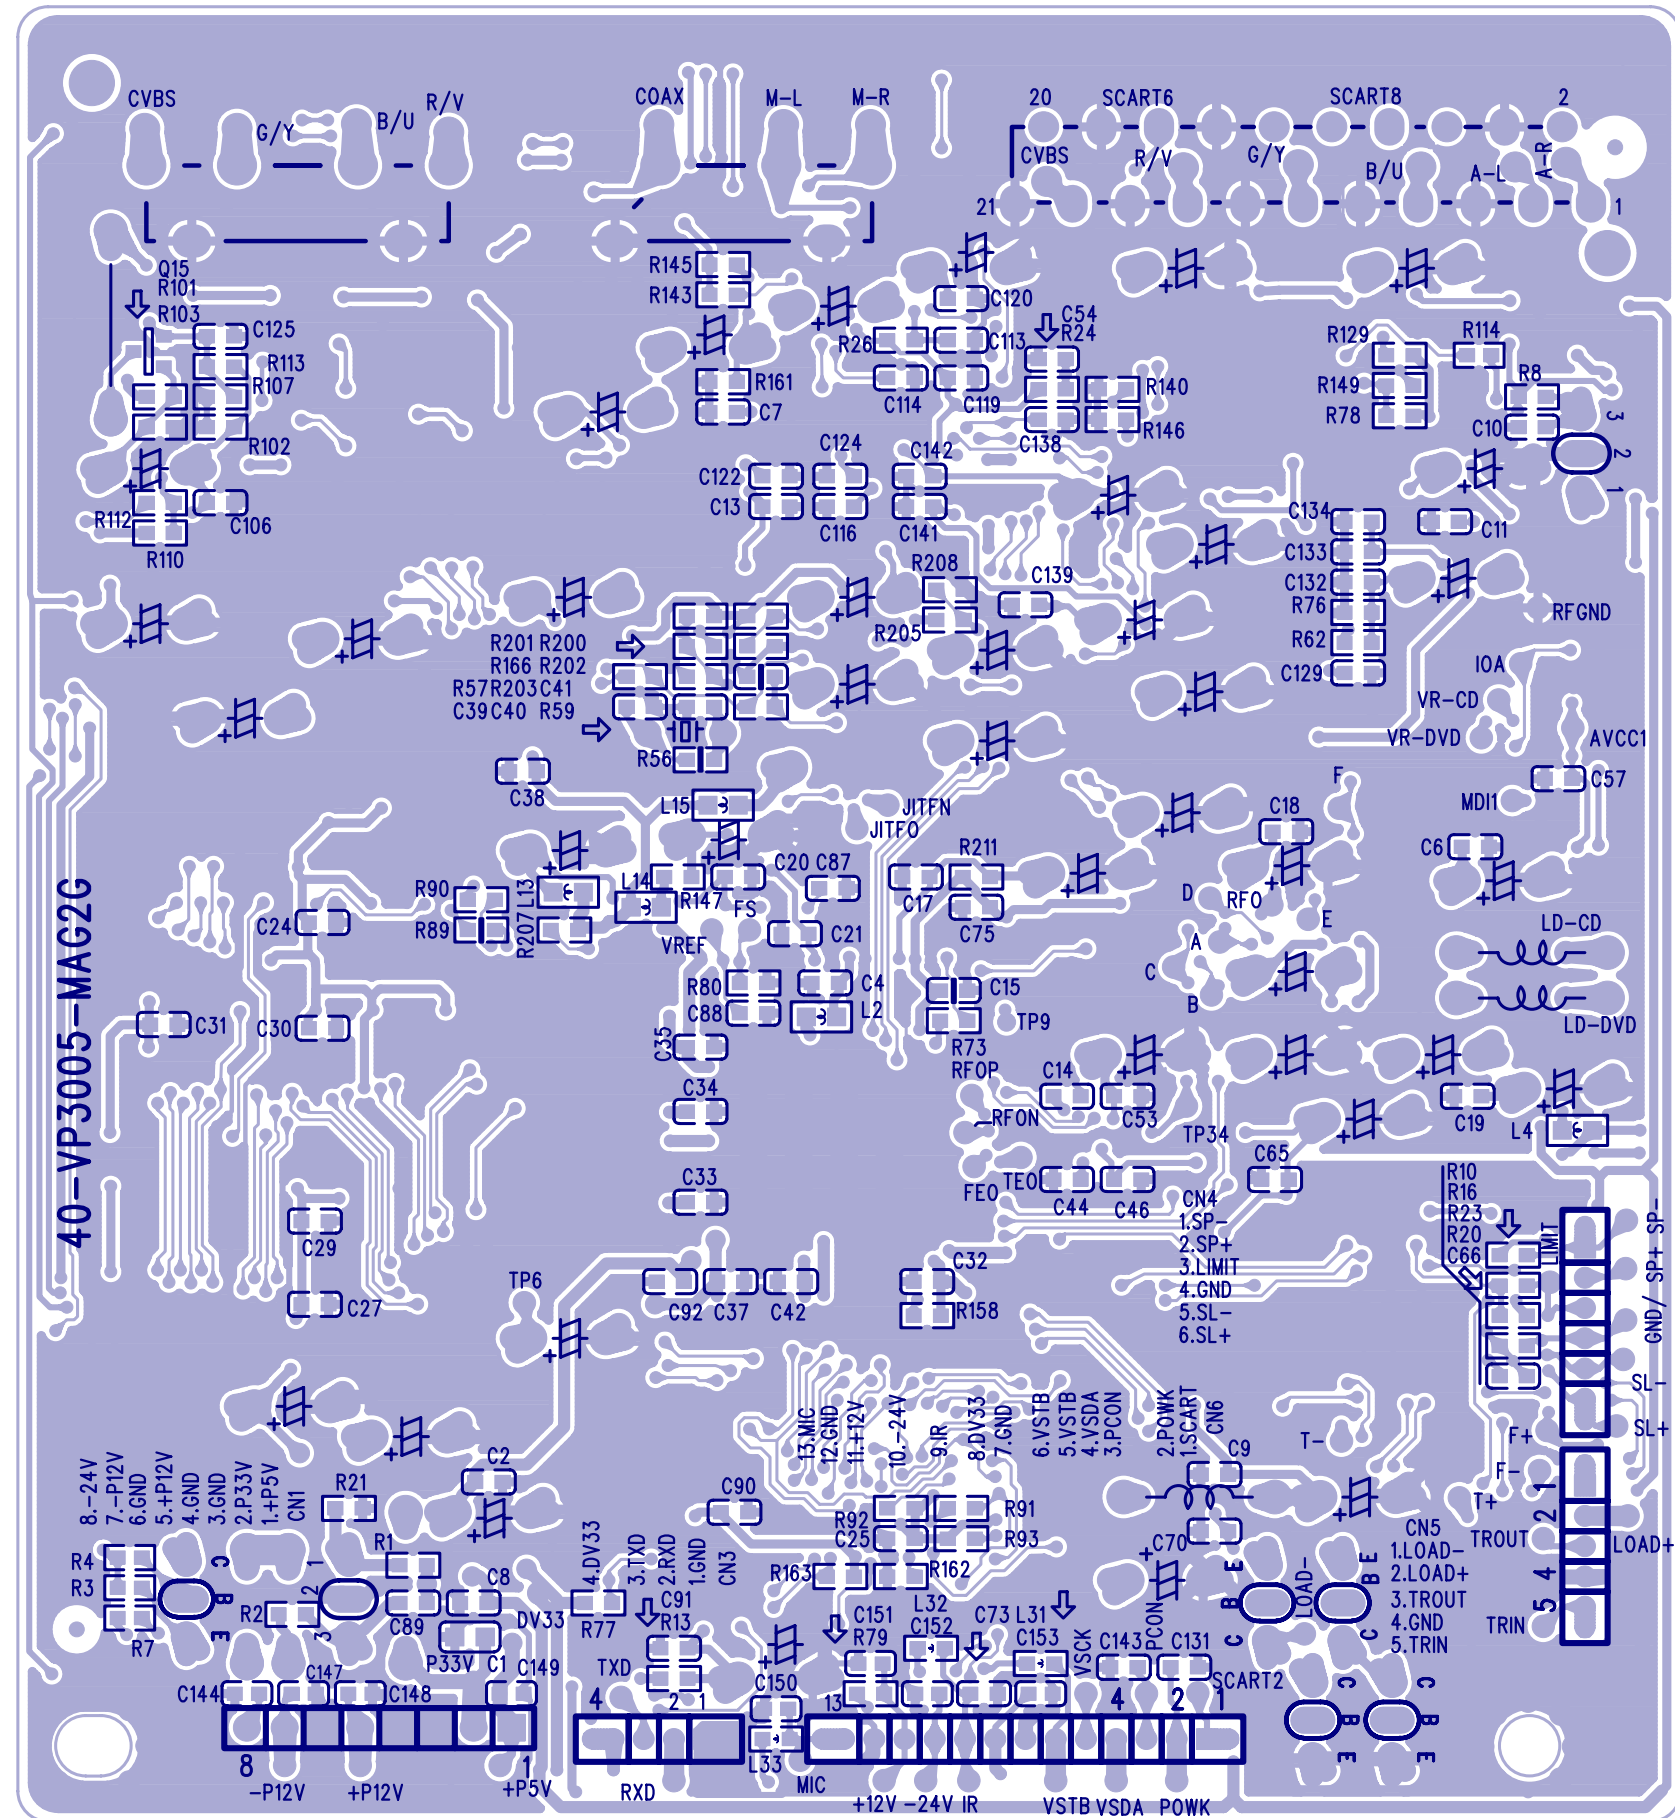


DVP3002 Mechanical Exploded view

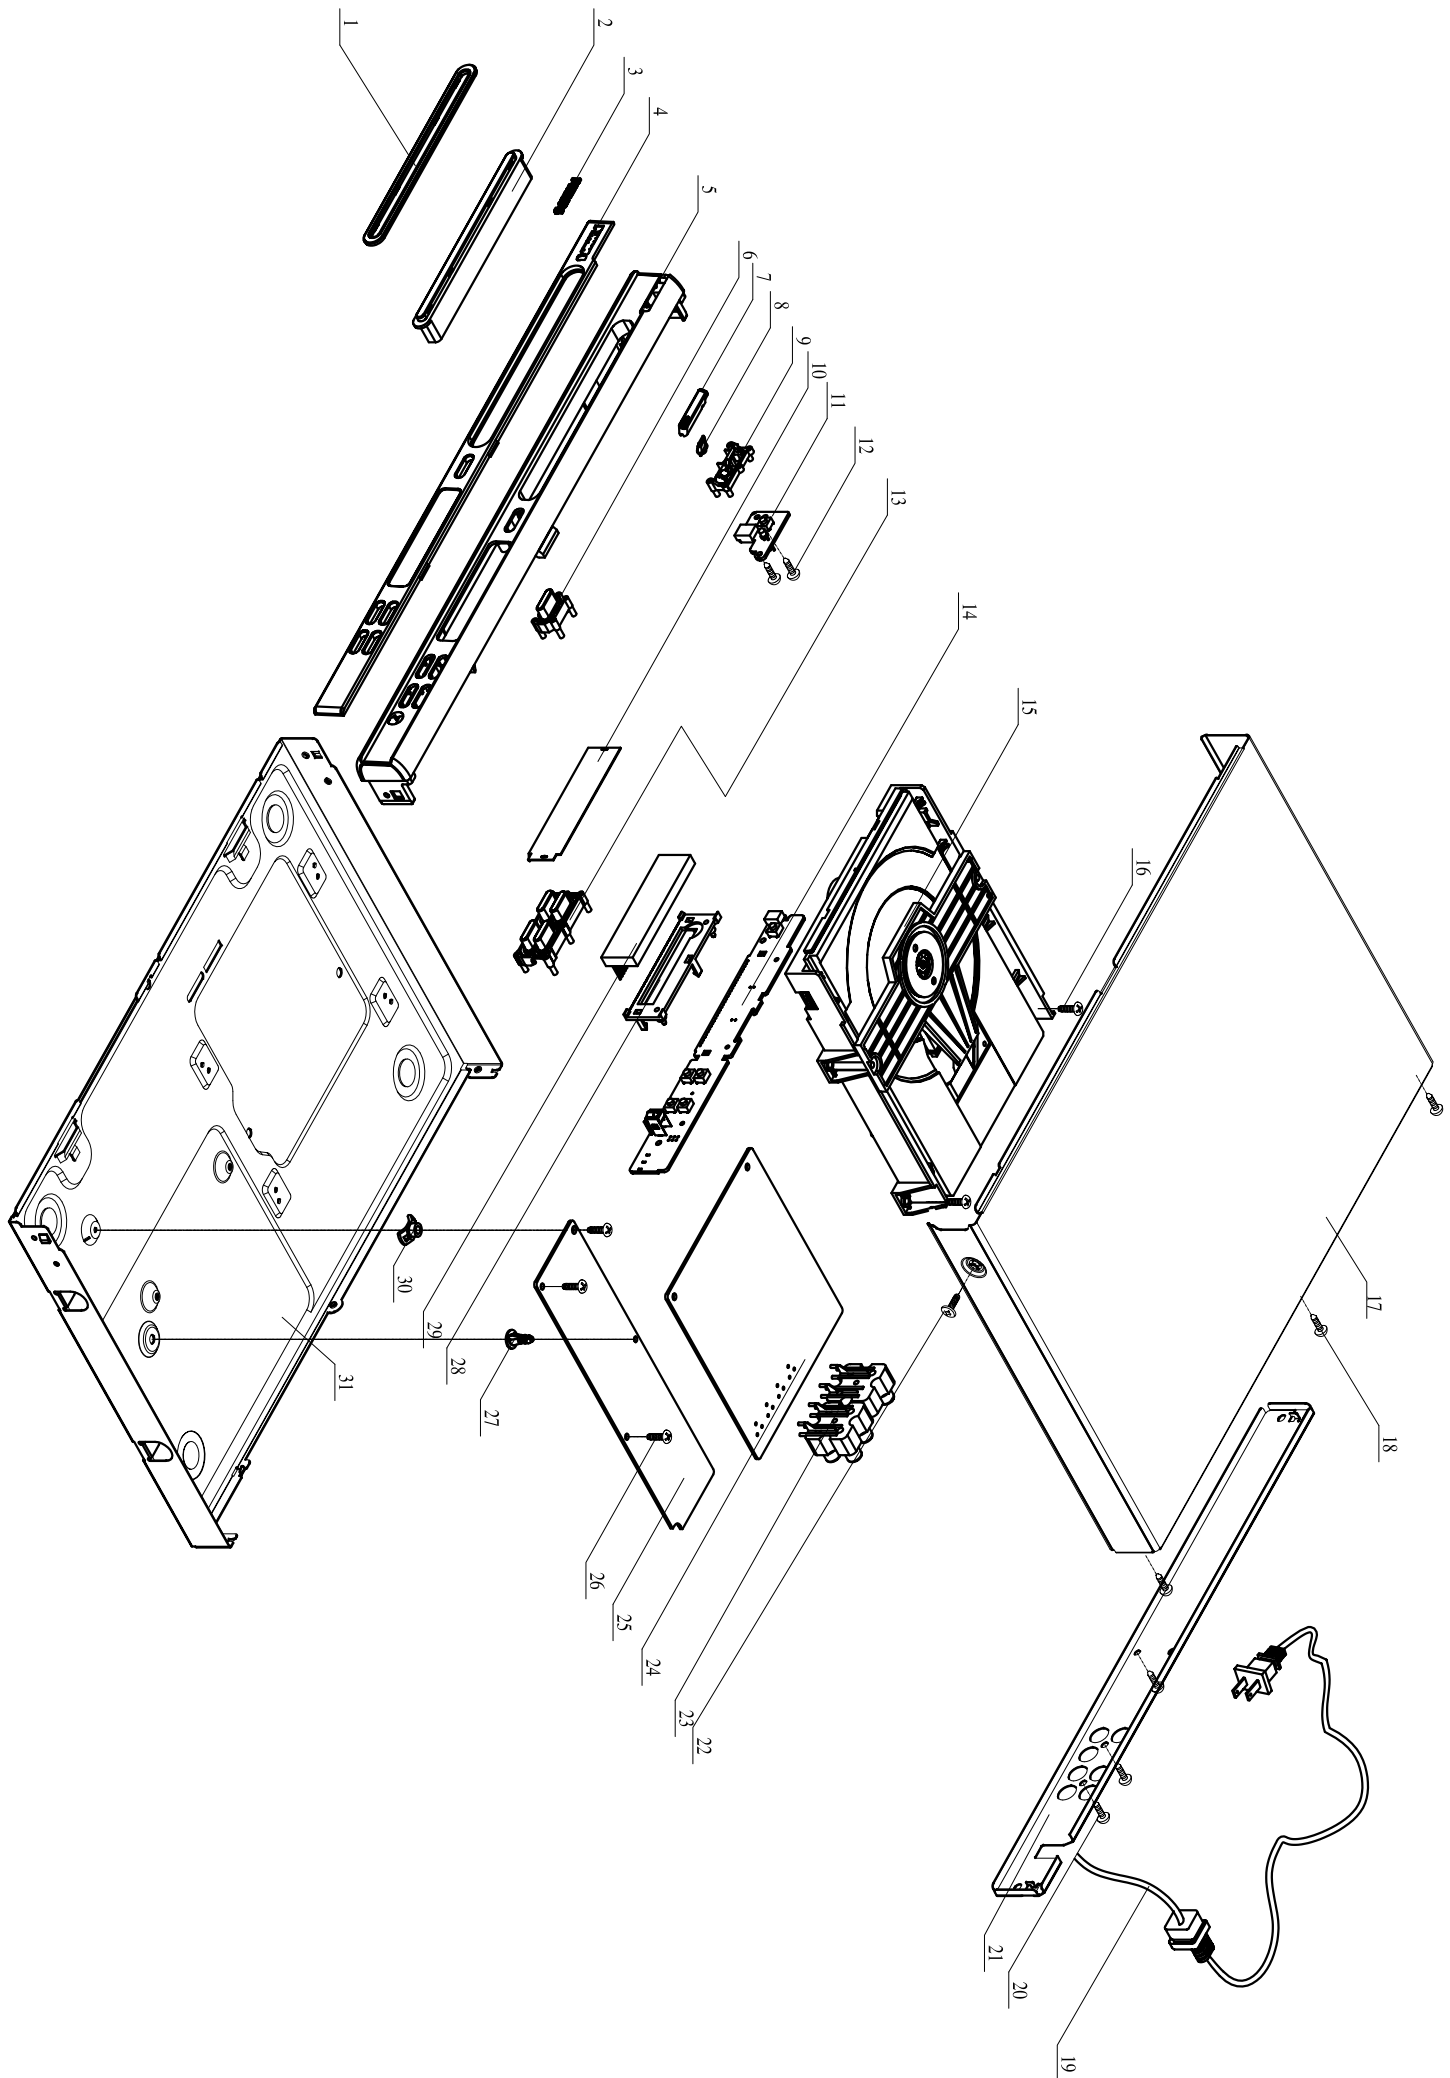

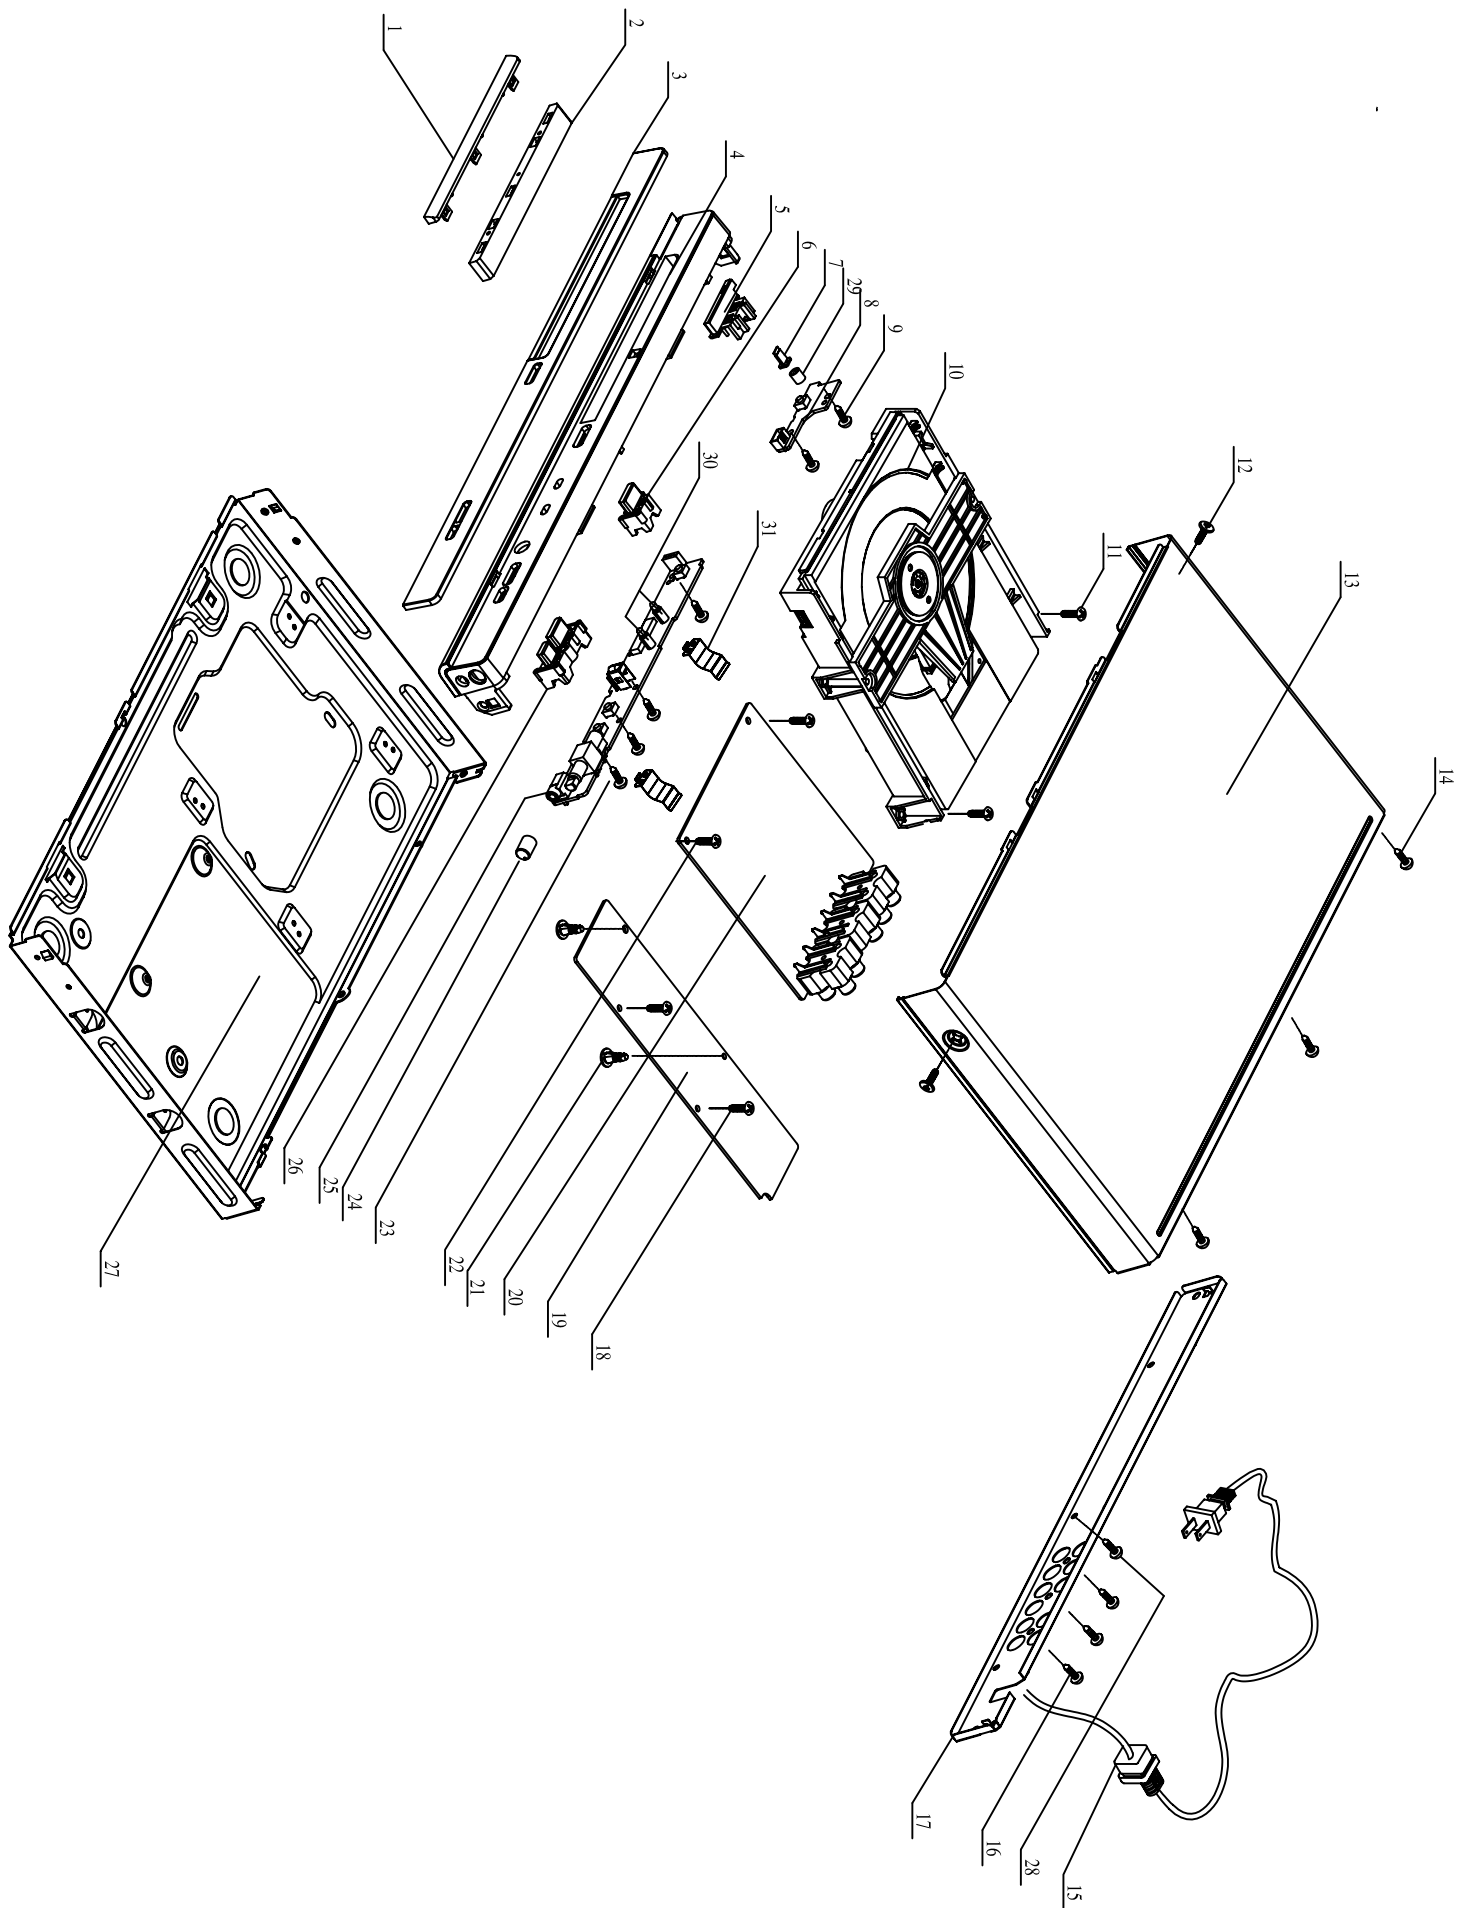

DVP3020(K)/3026(K)/3040(K)/3028/3042/3046 Mechanical Exploded View

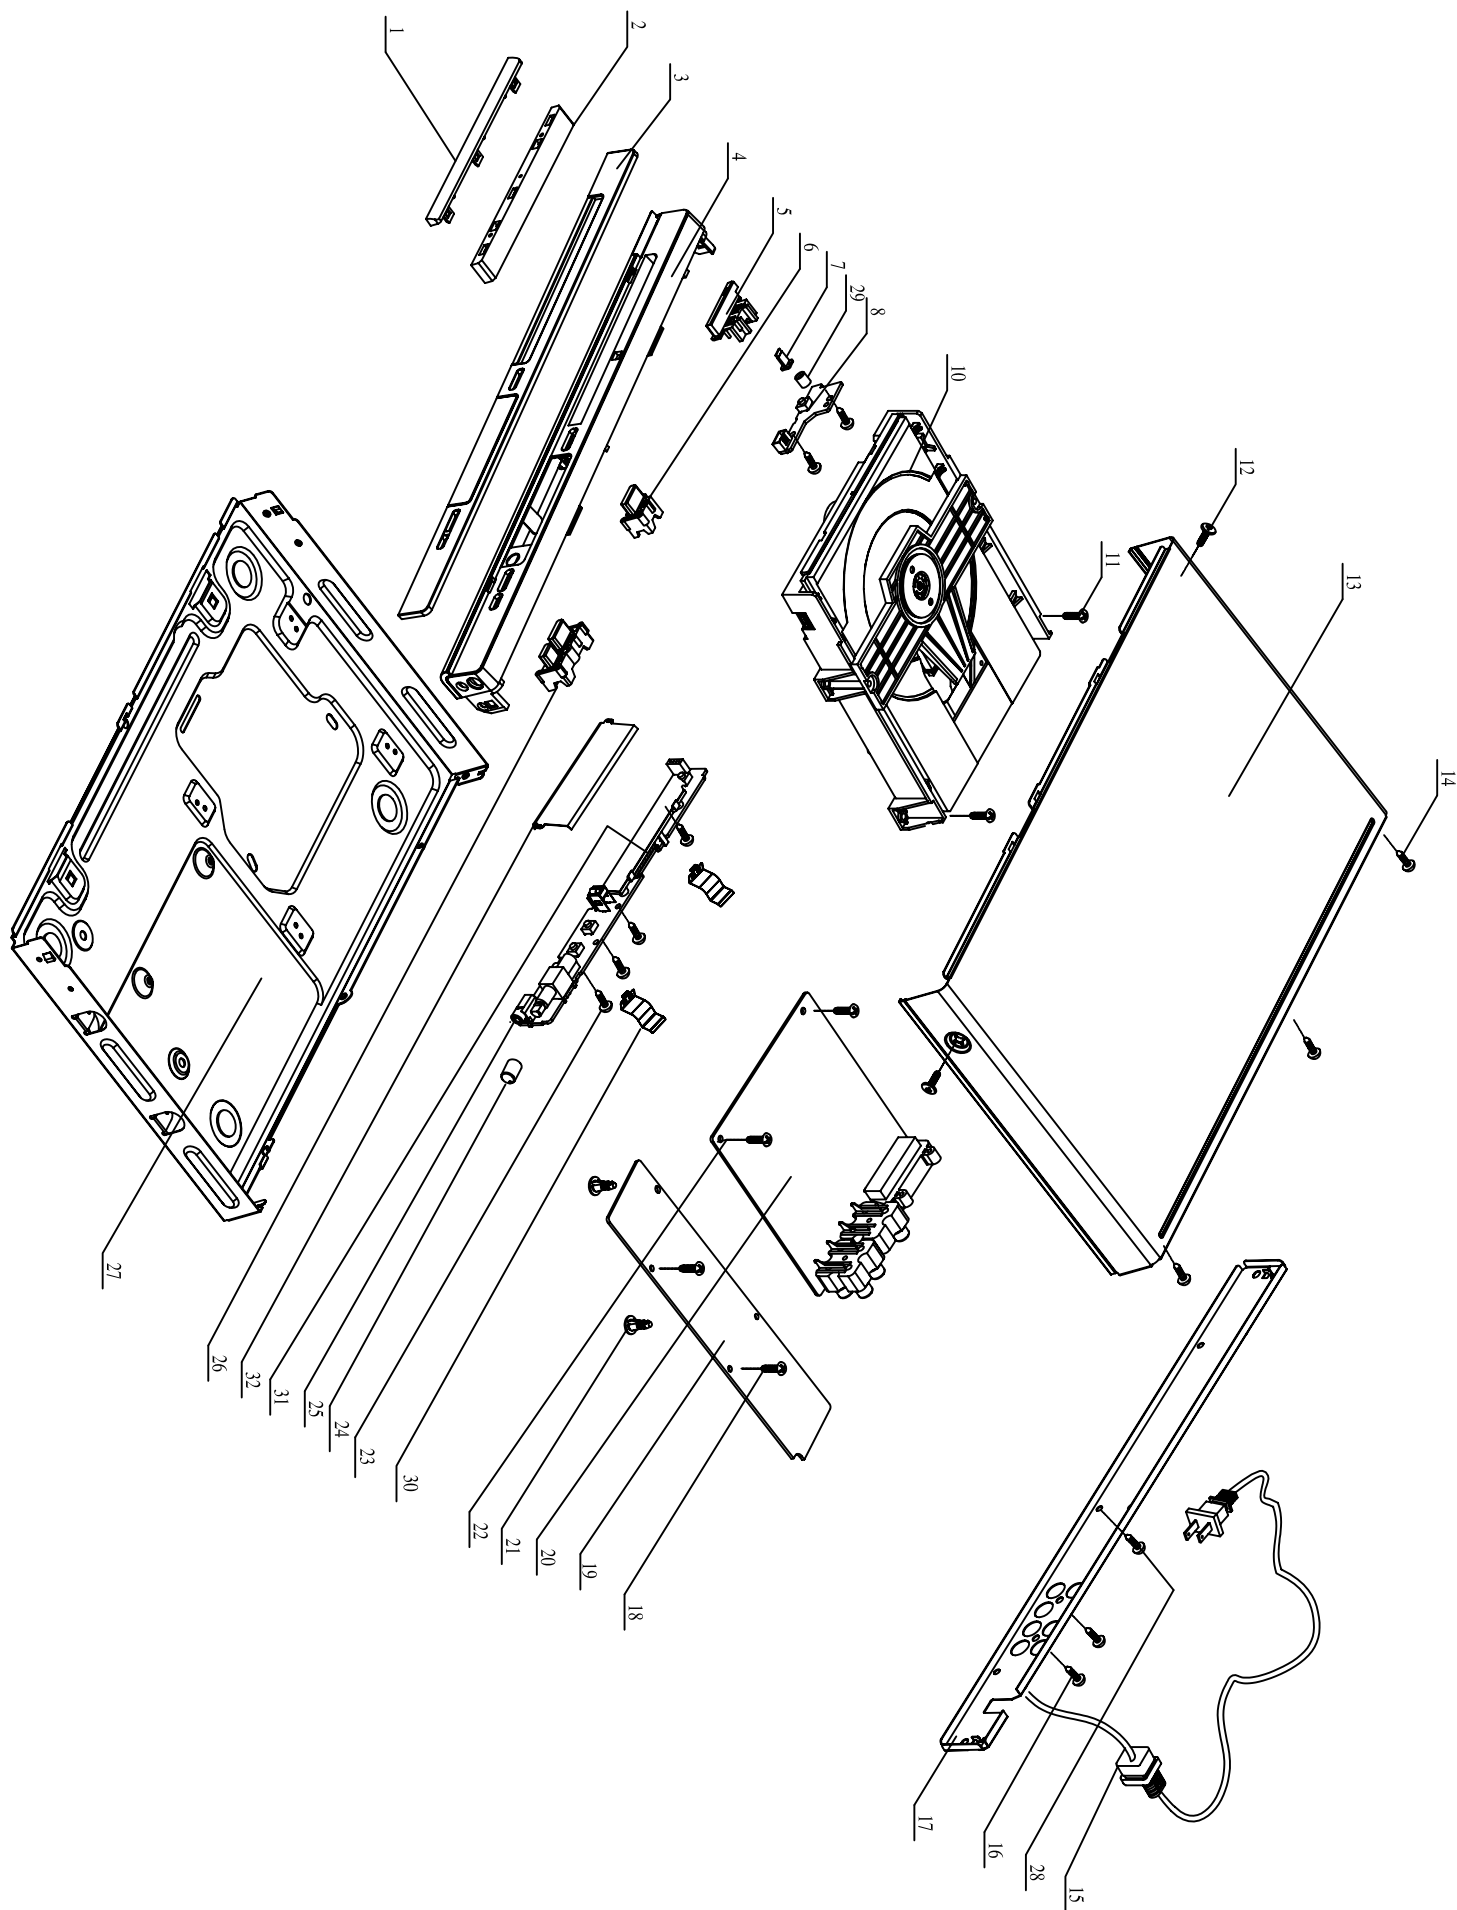

MAIN ENCASING & ACCESSORIES PARTS LIST

DVP3040K/98/55/51/93/78

10	9965 000 34182	ASS'Y-LOADER
15	9965 000 23298 \$	MAINS CABLE 1 65M W/2PIN CONN
15	9965 000 23406 \$	MAINS CABLE 1.65M (/93 ONLY)
19	9965 000 34180	ASS'Y-PW BD
20	9965 000 34195	ASSY-MAIN BD (/98/55 ONLY)
20	9965 000 34177	ASSY-MAIN BD (/51 ONLY)
20	9965 000 34906	ASSY-MAIN BD (/93 ONLY)
20	9965 000 38692	ASSY-MAIN BD (/78 ONLY)
24	9965 000 34179	ASS'Y-FB BD
08	9965 000 34178	ASS'Y-SW BD
AC	9965 000 22497	AUDIO CABLE 1 5M WHITE/RED
RC	9965 000 34181	REMOTE CONTROL
VC	9965 000 22495	VIDEO CABLE 1 5M YEL

DVP3040/37/12 & DVP3042/12

RC	9965 000 34176	REMOTE CONTROL
----	----------------	----------------

DVP3020K/03 & DVP3015K/03

RC	9965 000 34181	REMOTE CONTROL
----	----------------	----------------

DVP3020/98/55/94/78/75/77

10	9965 000 34190	ASS'Y- LOADER
15	9965 000 34200 \$	POWER CORD1880 +/-20MM (/55 ONLY)
15	9965 000 13933 \$	POWER CORD 1880 +/-20MM (98 ONLY)
15	9965 000 23404 \$	MAIN CABLE 165M W/2PIN (/95 ONLY)
15	9965 000 23298 \$	MAIN CABLE 165M W/2PIN (94 ONLY)
19	9965 000 34189	ASS'Y-PW BD (/55/78/94/77/75 ONLY)
19	9965 000 34192	ASS'Y-PW BD (/98 ONLY)
20	9965 000 34193	ASSY-MAIN BD (/98/55 ONLY)
20	9965 000 34898	ASSY-MAIN BD (/94 ONLY)
20	9965 000 34899	ASSY-MAIN BD (/78/77 ONLY)
20	9965 000 34897	ASSY-MAIN BD (/75 ONLY)
24	9965 000 34194	ASS'Y-FB BD
24	9965 000 34900	ASS'Y-FB BD (/78/77 ONLY)
08	9965 000 34178	ASS'Y-SW BD
AC	9965 000 22497	AUDIO CABLE 1 5M WHITE/RED
RC	9965 000 34176	REMOTE CONTROL
VC	9965 000 22495	VIDEO CABLE 1 5M YEL

DVP3020/05

RC	9965 000 34176	REMOTE CONTROL
----	----------------	----------------

DVP3002/93

24	9965 000 34896	ASSY-MAIN BD
11	9965 000 26762	ASS'Y-SWITCH BOARD
14	9965 000 26771	ASS'Y - FRONT CTL BD
25	9965 000 26761	ASS'Y-POWER BOARD
RC	3141 017 90220	REMOTE CONTROL DVD-Q30/751
15	9965 000 34182	ASS'Y-LOADER
VC	9965 000 22495	VIDEO CABLE 1,5M YEL
AC	9965 000 22497	AUDIO CABLE 1,5M WHITE/RED
19	9965 000 23406 \$	MAINS CABLE 1,65M W/2PIN CONN.

DVP3046/94

20	9965 000 34907	ASSY-MAIN BD
8	9965 000 34178	ASS'Y-SW BD
24	9965 000 34194	ASS'Y-FB BD
19	9965 000 34180	ASS'Y-PW BD
RC	9965 000 34176	REMOTE CONTROL
10	9965 000 34182	ASS'Y-LOADER
VC	9965 000 22495	VIDEO CABLE 1,5M YEL
AV	9965 000 22497	AUDIO CABLE 1,5M WHITE/RED
15	9965 000 23298 \$	MAINS CABLE 1,65M W/2PIN CONN.

DVP3026K/93/98

20	9965 000 34904	ASSY-MAIN BD (93)
20	9965 000 34905	ASSY-MAIN BD (98)
8	9965 000 34178	ASS'Y-SW BD
24	9965 000 34179	ASS'Y-FB BD
19	9965 000 34189	ASS'Y-PW BD (93)
19	9965 000 34192	ASS'Y-PW BD (98)
RC	9965 000 34181	REMOTE CONTROL
10	9965 000 34190	ASS'Y- LOADER
VC	9965 000 22495	VIDEO CABLE 1,5M YEL
AV	9965 000 22497	AUDIO CABLE 1,5M WHITE/RED
15	9965 000 23406 \$	MAINS CABLE 1,65M W/2PIN CONN. (93)
15	9965 000 13933 \$	POWER CORD 1880 +/-20MM (98)

DVP3026/94

20	9965 000 34903	ASSY-MAIN BD
8	9965 000 34178	ASS'Y-SW BD
24	9965 000 34194	ASS'Y-FB BD
19	9965 000 34189	ASS'Y-PW BD
RC	9965 000 34176	REMOTE CONTROL
10	9965 000 34190	ASS'Y- LOADER
VC	9965 000 22495	VIDEO CABLE 1,5M YEL
AC	9965 000 22497	AUDIO CABLE 1,5M WHITE/RED
15	9965 000 23298 \$	MAINS CABLE 1,65M W/2PIN CONN.

DVP3015K/93/98/55/74

10	9965 000 34190	ASS'Y- LOADER
15	9965 000 23406 \$	MAINS CABLE 1 65M (/93/55)
15	9965 000 23298 \$	MAINS CABLE 1 65M (74)
15	9965 000 13933 \$	POWER CORD 1880 +/-20MM (98)
19	9965 000 34189	ASS'Y-PW BD (/55/93/74)
19	9965 000 34192	ASS'Y-PW BD (98)
20	9965 000 34191	ASSY-MAIN BD(74)
20	9965 000 34187	ASSY-MAIN BD (93/98/55)
25	9965 000 34188	ASS'Y-FB BD
08	9965 000 34178	ASS'Y-SW BD
AC	9965 000 22497	AUDIO CABLE 1 5MM WHITE/RED
RC	9965 000 34181	REMOTE CONTROL
VC	9965 000 22495	VIDEO CABLE 1 5M YEL

Note: Only the parts mentioned in this list are normal service spare parts.

DVP3020K/98/61/55/74/96

20	9965 000 34901	ASSY-MAIN BD (/98/74 ONLY)
20	9965 000 34902	ASSY-MAIN BD (/61/55 ONLY)
20	9965 000 38690	ASSY-MAIN BD (/96 ONLY)
8	9965 000 34178	ASS'Y-SW BD
VC	9965 000 22495	VIDEO CABLE 1,5M YEL
24	9965 000 34179	ASS'Y-FB BD
AC	9965 000 22497	AUDIO CABLE 1,5M WHITE/RED
15	9965 000 13933 \$	MAINS CORD 1880 +/-20MM (/98 ONLY)
15	9965 000 34200 \$	MAINS CORD1880 /-20MM (/55 ONLY)
15	9965 000 23517 \$	MAINS CABLE 1,65M (/61 ONLY)
15	9965 000 23298 \$	MAINS CABLE 1,65M (74 ONLY)
19	9965 000 34192	ASS'Y-PW BD (/98 ONLY)
19	9965 000 34189	ASS'Y-PW BD (/61/55/74 ONLY)
RC	9965 000 34181	REMOTE CONTROL
10	9965 000 34190	ASS'Y- LOADER

DVP3020/61/74/96

8	9965 000 34178 S	ASS'Y-SW BD
10	9965 000 34190 S	ASS'Y- LOADER
15	9965 000 23517 \$	MAINS CABLE 1,65M (/61 Only)
15	9965 000 23298 \$	MAINS CABLE 1,65M (/74 Only)
15	9965 000 29257 \$	AC CORD PLUG (/96 Only)
19	9965 000 34189 S	ASS'Y-PW BD
20	9965 000 34193 S	ASSY-MAIN BD
24	9965 000 34194 S	ASS'Y-FB BD
AC	9965 000 22497 S	AUDIO CABLE 1,5M WHITE/RED
RC	9965 000 34176 S	REMOTE CONTROL
VC	9965 000 22495 S	VIDEO CABLE 1,5M YEL
15	9965 000 29257 \$	AC CORD PLUG (/96 Only)

DVP3028/94

8	9965 000 34178	ASS'Y-SW BD
10	9965 000 34190	ASS'Y- LOADER
15	9965 000 23298 \$	MAINS CABLE 1,65M W/2PIN CONN.
19	9965 000 34189	ASS'Y-PW BD
20	9965 000 38691	ASSY-MAIN BD
24	9965 000 34194	ASS'Y-FB BD
AC	9965 000 22497	AUDIO CABLE 1,5M WHITE/RED
RC	9965 000 34176	REMOTE CONTROL
VC	9965 000 22495	VIDEO CABLE 1,5M YEL

Note: Only the parts mentioned in this list are normal service spare parts.

REVISION LIST

Version 1.0

* Initial release

Version 1.1

- Update of partlist with additional model.

-DVP3040k/93

-DVP3015k/03

-DVP3020/94/78/77/75

-DVP3046/94

-DVP3042/12

-DVP3026K/93/98

-DVP3026/94

-DVP3020K/98/66/55/03

-DVP3002/93

Version 1.2

- Update of partlist with additional model.

-DVP3015K/74

-DVP3020/61/74/96

-DVP3020K/74/96

-DVP3028/94

-DVP3040k/78