

# ELECTRONIC KITCHEN SCALE

Dear Customer,

Thank you for purchasing a Terrillon electronic kitchen scale. We hope you will find it satisfactory. Please read these instructions carefully to take full advantage of your scale.

## THE SCALE

### FEATURES

- Maximum capacity: 5 Kg
- Graduation: 1 g
- Weighing with automatic tare (allows you to weigh different ingredients successively without removing them from the platform)
- Measures liquids in milliliters
- Timer (countdown)



### TURNING THE SCALE ON

#### 1) Batteries :

Open the housing located on the bottom of the scale and connect the 2 lithium CR2032 batteries (included with the scale) by removing the red tongue: the widest part of the battery should be on the top. The "+" must remain visible once the batteries are installed.

2) Place your scale on a hard, flat surface.

3) Press the button « Tare » to turn the scale on.

The display reads:  then .

*Remark:*

*If your scale has a conversion switch on the base, you can change the measuring units from Metric to Imperial or vice versa, by simply activating this conversion switch located on the under-side of the scales.*

### OPERATION FLOW



\*After turning the scale on, place the ingredient directly on the platform or pour it into the container. The weight is displayed. As you add weight, the weight displayed increases.

**To use the tare function:**


Install the container, salad bowl, etc. on the platform before turning the scale on.

**To weigh different ingredients individually and successively:**

- Weigh the first food item as explained previously\*.

- Press the button « Tare » to reset the scale. The display reads:  then .



- Then add the second food item. The display indicates the weight of the second item only.

And so on... Proceed in the same manner for all the successive food items. If items are removed after having established the tare, the negative value that appears on the display corresponds to the weight of the items removed. For example: .

**To measure liquids in milliliters**

In weigh mode, press the "H<sub>2</sub>O" button to move to the "liquid measurement" function. Press the "H<sub>2</sub>O" button again to return to the weigh function.


### TURNING THE SCALE OFF

When the screen displays , press the « Tare » button. If the screen displays something else, press the « Tare », wait for the  display and press the again « Tare ».


In all cases, the scale will turn off automatically after 2 minutes if no button is activated.

### SPECIAL DISPLAYS

**Overload**

When the scale is overloaded, the screen displays : . Remove the weight immediately or you will damage your scale.

**Low battery indicator (valid for the scale and the timer)**

Replace the battery when the scale display reads .

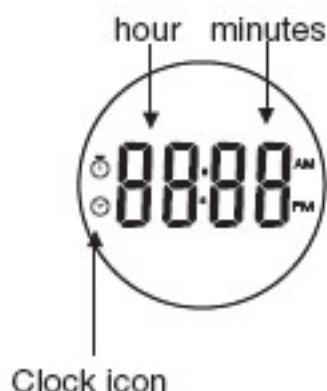
**Terrillon®**

## THE CLOCK - TIMER

### In Timer mode



### In Clock mode



### In clock mode 24h Format

- 1) Open the battery housing located on the back of the timer and connect the A76 battery (supplied with the scale) by removing the red tongue: the widest part of the battery should be on the top. The "+" must remain visible once the batteries are installed.
- 2) As soon as the battery is inserted, the scale goes into clock mode and the format is 24 h.
- 3) To set the time, press on the button « clock set » on the back of the appliance.  
On the screen the « 00:00 » flash. Press on « ▲ » or « ▼ » to increase or decrease the time.  
By pressing and holding the button down, the figures go faster.
- 4) To validate the time chosen, wait for a few seconds.

#### Remarks:

Every time you change batteries, the clock format is to be reset as above. In sleep mode, when there is no countdown, the time is displayed.

### In Timer mode

Maximum programming:  
99 minutes 59 seconds.

- 1) In clock mode, press on « ▲ » or « ▼ » to go into timer mode. The symbol of the timer ⏰ and the duration previously scheduled are displayed.
- 2) Press on buttons « ▲ » or « ▼ » to schedule the duration of the countdown.  
For the figures to go faster, press and hold the button down.
- 3) To validate the time chosen, wait for 3 seconds. Then the timer symbol ⏰ flashes signaling the count down.
- 4) At the end of the countdown, the alarm rings for 30 seconds. The « 00:00 » flashes on the screen. It is then possible to turn the alarm off by pressing on any button.

To stop the countdown, press on « ▲ » or « ▼ ».

At that time, if you wish to readjust the time of the timer, press again on « ▲ » or « ▼ ».

To go back in clock mode, press on « ▲ » or « ▼ » and do not push on any button for 10 seconds.

The scale and the timer are separate. You may use both appliances separately or simultaneously.

### USE PRECAUTIONS for the scale and timer

- Clean your scale with a sponge and soapy water, avoiding solvents and abrasive cleansers. Do not immerse it in water.
- Do not place your scale in the microwave oven.
- Remove the battery when the scale is not used for extended periods.



Do not throw used batteries away.  
Dispose of them in a container designed for this purpose so that they can be collected and recycled.

Terrailon®