

Booklet Base

293
206

To > Carman - From > Kalai

Only change 2 pages as attached.
Others remain ~~the~~ unchanged



Keeping Connected With You and Your Baby.™

- 1-800-233-5921 8 AM - 7 PM E. S. T.
U. S. and Canada
- Piqua, Ohio 45356
- www.evenflo.com



Underwriters Laboratory listed adapters
FCC approved/One-year limited warranty.

World's best baby care
evenflo®

O W N E R ' S
M A N U A L

Constant Care 4000™
Parent Pager Monitor

IMPORTANT: READ AND KEEP THESE
INSTRUCTIONS FOR FUTURE REFERENCE.

©Evenflo Company, Inc. 2000

25700098 B/2000

P. 01

96%

12-OCT-2000 10:15

Thank You for purchasing the Evenflo
Constant Care 4000 Parent Pager.

Understanding how your monitor works helps you obtain the highest performance performance levels. Before setting up and using your Constant Care 4000 Parent Pager, please read this Owner's Manual completely. It provides helpful tips to ensure the best operating circumstances for assisting you in monitoring your child.

We are pleased you chose to buy an Evenflo product and want you to be just as pleased. We try very hard to produce and deliver a quality product in terms of appearance and performance and that is why it is covered by a LIMITED ONE-YEAR WARRANTY against defects in workmanship or material. Sometimes, however, a product with a problem slips through our system, or questions arise regarding the product. When this happens, we want to help solve the problem as soon as it is brought to our attention. We therefore ask that you:

- Retain this notice for future reference and attach your sales receipt.

- Record here the:

Model Number: _____

Date of purchase: _____

Date of manufacture: _____

Most problems can be handled promptly with a toll-free phone call. Before returning the product to the store, please let us try to help you. Call us on our toll-free number at 1-800-233-5921, Monday through Friday 8:00 a.m. to 7:00 p.m. E.S.T.

To help us help you, please have available or include in your correspondence all relative information such as the Model Number, Date of Manufacture, nature of the problem, etc. If you have any questions or problems with your Evenflo Constant Care 4000 Parent Pager please do not return it to the store; call Evenflo's Parent Link at 1-800-233-5921 (U.S. and Canada).



P 2
WARNINGS

- DO NOT OPEN. NO USER SERVICEABLE PARTS INSIDE. RISK OF ELECTRIC SHOCK. MAY CAUSE INJURY, FIRE, OR DEATH.
- DO NOT use near water or outdoors.
- DO NOT place furniture on cord.
- NEVER place the baby's unit or its adapter in the crib or playpen, or within the child's reach.
- DO NOT hang this monitor near or on crib. The cord can present a strangulation hazard.
- Always keep the unit out of children's reach.
- DO NOT use this monitor if it is broken or missing parts.
- This product is designed and intended to be used solely to monitor the actions of a sleeping child.
- DO NOT use this monitor with products that warn the user: "NEVER LEAVE CHILD UNATTENDED".
- This product does not replace responsible adult supervision of a child.
- You should check your child regularly as this product will not detect your child's quiet activities.
- This product is not intended to be used as a medical monitor, and its use should not replace adult supervision.
- Make sure the Parent's and Baby's units are functioning properly, on the same channel, and within reception range of each other.
- It is essential to check the sound reception regularly.
- Your adapters are equipped with polarized alternating current line plugs (a plug having one blade wider than the other). This plug will fit into the outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Most building codes currently require polarized electrical outlets. Do not defeat the safety purpose of the polarized plug.

IMPORTANT SAFETY INSTRUCTIONS

The Evenflo Constant Care 4000 Parent Pager should not be used as a replacement for adult supervision of children. Please note that any modification of the transmitter or receiver will violate FCC compliance and can void the user's authority to operate this monitor set.

1. Read and observe all warnings on the product and in this Owner's Manual. Pay special attention to information marked "WARNING" and "IMPORTANT". This information can affect your child's safety. Keep this Owner's Manual nearby for quick and easy reference.
2. Avoid placement near water or moisture. Do not use baby's unit outdoors. Do not use your monitor near a bathtub, shower, sink, laundry tub, swimming pool, wet basement, or other locations where water or moisture may result in electrocution.
3. Allow for proper ventilation of the adapters and the monitors. Do not place your monitor on or under a rug, bed, sofa, blanket or similar object that blocks its ventilation. Do not place it in a built-in installation such as a bookcase or stereo cabinet. These may impede the air flow through the ventilation openings.
4. Remove the batteries from the monitor components and unplug the AC adapters if the monitor will not be used for a long period of time.
5. Avoid placement near heat sources. Do not use your monitor near a radiator, stove, heat register, or other appliance (including amplifiers and TVs) that produce heat. Heat can damage the case of components.
6. This monitor can be operated by batteries (Parent's Unit uses three AAA batteries and Baby's Unit uses one 9 Volt battery) or by the Evenflo AC adapters provided. The Evenflo AC adapters provided must be plugged into standard household outlets (120V AC outlet). Do not use extension cords.
7. Protect the AC adapter cords. Route cords so they are not walked on or pinched by items placed upon them, and pay particular attention to cords at the AC adapter plugs, wall plugs, and where they plug into the transmitter or receiver.
8. Do not immerse any component in water. Clean the monitor with a dry cloth.
9. Do not use near fluorescent lights, appliances with motors, televisions, fans or other machinery. These items may interfere with the quality of your unit's transmission or reception.
10. Adapter must be removed from either the transmitter or receiver for battery operation. In case of power outage, the batteries will not act as a backup if the AC adapters are engaged.
11. Do not use the monitor if:
 - Either adapter cord has been damaged.
 - Objects have fallen or liquid has been spilled into any of its components.
 - It has been exposed to rain or water.
 - It has been dropped or something inside is damaged.
 - If any parts are missing or broken. Call Evenflo's Parent Link at 1-800-233-5921 for instructional literature or product information if needed.
12. Refer to the Troubleshooting Chart in this Owner's Manual before returning your monitor for servicing. You may be able to solve the problem on your own in very little time.
13. If service is required due to a possible defect, and the monitor is still under warranty, see Limited Warranty for instructions. This product should be serviced only by qualified service personnel at Evenflo Company, Inc. when:
 - An AC adapter or its plug has been damaged.
 - Objects have fallen or liquid has been spilled into the Transmitter or Receiver.
 - The Transmitter or Receiver do not appear to operate normally or exhibit a marked change in performance.
14. There are no serviceable parts inside these monitors. Do not open the cases.

Helpful Hints

- For best results, use your AC adapters with the monitor. The power is more consistent than that of the battery, and using the adapter provides clearer reception.
- In some homes, battery operation will dramatically reduce the effective range of the system.
- For best results, use your adapter when you are in the same place (such as your bedroom at night or the kitchen during the day) over a long period of time. The adapter provides maximum power, and additional antenna length.
- This nursery monitor operates over public airwaves. Transmissions from your Baby's Unit may be picked up by another product operating on the same frequency. Your Parent's Unit may also pick up transmissions from another product on the same frequency. If interference occurs, change BOTH your Baby's and Parent's units to the alternate frequency channel.
- Always make sure that both units are on the same frequency channel. It is possible for the Parent's Unit to pick up the Baby's Unit even if they are not on the same channel when both units are close together; however, you'll experience static and interference.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class II digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Features

Out-Of-Range Alarm: An alarm will sound through your Parent's Unit if:

- The units are taken out of range of one another.
- The units are set to different channels.
- Power to the Baby's Unit is lost.
- A strong interfering signal starts on the selected channel.

The Out-Of-Range Alarm can only be stopped by re-establishing contact between the two units or by turning off the Parent's Unit. This alarm feature is designed to give you confidence and reassurance that your Evenflo Constant Care 4000 Parent Pager is functioning properly.


Operational Range: Your monitor's typical transmission/reception range is typically 600 feet depending on battery power and possible obstructions (i.e. walls) that radio waves encounter. The methods and materials used in your home's construction, terrain and other factors may also affect transmission.

Power Indicator Light: The Power Indicator Light will illuminate green whenever the unit is turned on, whether the unit is stationary (plugged into the adapter) or portable (using battery power).

Channel A/B: If interference occurs, change BOTH your Baby's Unit and Parent's Unit to the alternate frequency channel. The Constant Care 4000 Parent Pager operates over public airwaves. Transmission from your Baby's Unit may be picked up by another product if it is on the same frequency. Your Parent's Unit may also pick up transmission from another product if it is broadcasting from the same frequency.

Using Your Monitor


Before you set up your monitor, please read all instructions and warnings carefully and completely.

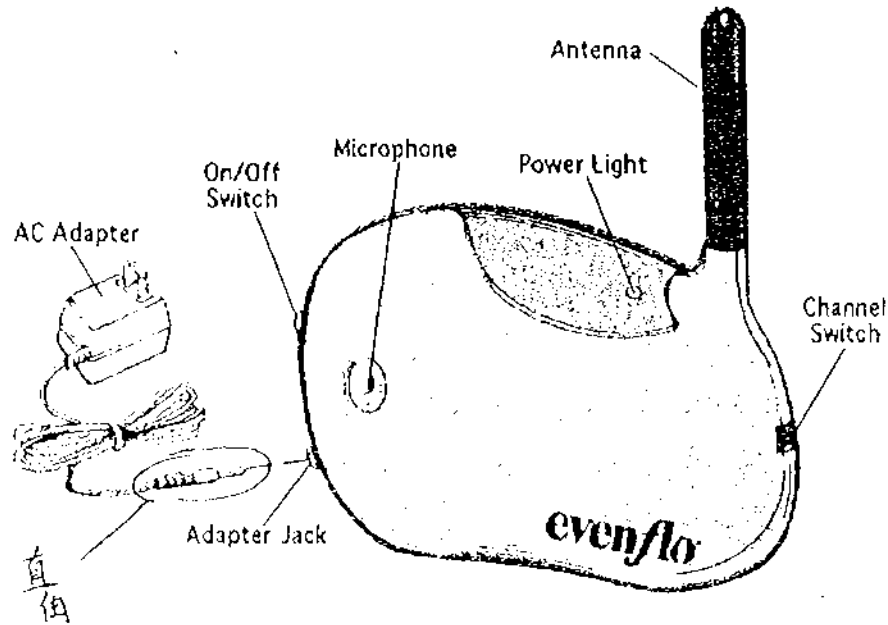

The Baby's Unit

The Baby's Unit is a transmitter, which sends sounds to the Parent's Unit (receiver). It is powered either a 9 volt battery or by an AC adapter which is included.

1. Place the Baby's Unit on a hard flat surface 5 to 10 feet away from the baby. Do not place it on a soft surface or it may tip over.
2. Aim the front of the Baby's Unit towards the baby. Be sure that there aren't any large objects blocking the path between the Baby's Unit and the baby.
3. Attach the AC adapter to the Baby's Unit, fully extend the cord, and plug the adapter into an electrical outlet. Use only the adapters included.
4. Check the channel switch. Insure the Baby's Unit is set to the same channel as the Parent's Unit.
5. Slide the Power Switch to ON. The Power Light will glow green. *red*
6. Turn the Baby's Unit OFF when not in use.
7. Low Battery. (Power led flash)

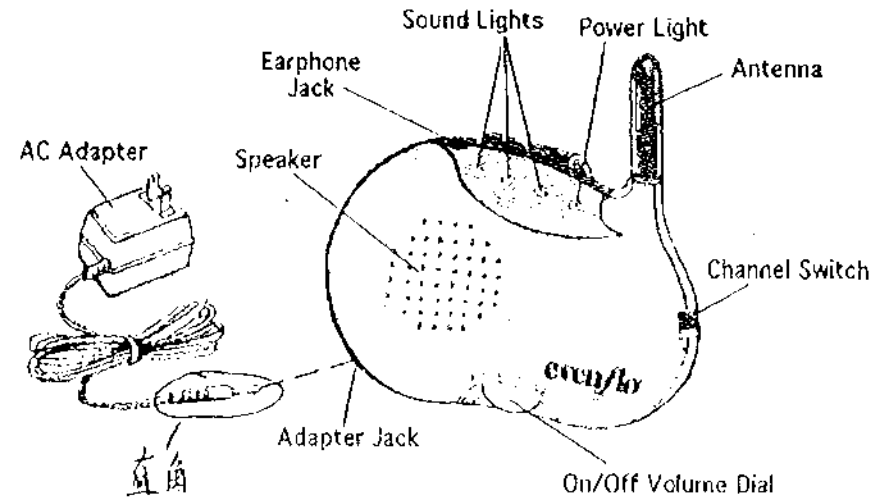

The Parent's Unit

The Parent's Unit receives sound from the Baby's Unit (Transmitter) and is powered either by three AAA batteries or by an AC adapter which is included.

1. Check the channel switch. Insure the Baby's Unit is set to the same channel as the Parent's Unit.
2. Move to a room away from the Baby's Unit.
3. Place the Parent's Unit where you can easily monitor it by sight or sound. You can use the Parent's unit three ways:
 - When using batteries, place it where you can easily see or hear it.
 - When using batteries, wear it using the belt clip.
 - When using the adapter plugged into a standard wall outlet.
4. Turn on the Parent's unit by rotating the ON/OFF Volume Control; adjust the volume. The Power Light will glow green.
5. Turn OFF the Parent's Unit when not in use.
6. Have someone speak into the Baby's Unit to verify sound transmission.
7. Low Battery (Power Led flash)

Troubleshooting Guide

PROBLEM	POSSIBLE CAUSE	SOLUTION
Power indicator light isn't working.	<ul style="list-style-type: none"> • Unit isn't getting power. • Battery may be weak. 	<ul style="list-style-type: none"> • Make sure unit is properly plugged into the wall and the outlet is switched on. • Replace battery.
Audio Out-of-Range alarm sounds	<ul style="list-style-type: none"> • Parent's Unit may be outside the transmission range of the Baby's Unit. • Baby's Unit and Parent's unit are on different channels. • Baby's Unit is not turned on, or may not be plugged into a working outlet. • Battery in baby's unit may be low. 	<ul style="list-style-type: none"> • Move Parent's Unit closer to the Baby's Unit. • Make sure that both units are set to the same channel. • Turn the ON/OFF switch on the Baby's Unit to the "ON" position. • Check the AC outlet to be sure it is working. • Battery needs to be replaced.
Reception is poor due to static, buzzing or interference.	<ul style="list-style-type: none"> • Other household appliances, cordless phones, fluorescent lights or motors may be disrupting the signal. • Parent's Unit may be out of effective range. • Battery may be weak. 	<ul style="list-style-type: none"> • Turn off, unplug or move the device that is causing the problem. • Move the Parent's Unit closer to the Baby's Unit. • Replace battery.
Parent's Unit is making a loud feedback noise.	<ul style="list-style-type: none"> • Baby's Unit is picking up sounds from the Parent's Unit because they are too close to each other. • Volume may be set too high. 	<ul style="list-style-type: none"> • Move the Parent's Unit at least 10 feet away from the Baby's Unit. • Lower the volume.
Parent's unit is picking up sounds or static from outside your home.	<ul style="list-style-type: none"> • A neighbor has a similar baby monitor, cordless phone or walkie talkie that is transmitting sounds on the same frequency channel. 	<ul style="list-style-type: none"> • Change the frequency channel that is in use. Be sure to change the channel on BOTH units.
Power indicator light blinks.	<ul style="list-style-type: none"> • Battery in Parent's unit may be low. 	<ul style="list-style-type: none"> • Change the batteries.