

## Attachment (sending)

### Attaching files

#### You can send i-mode mail with files attached.

- Up to 10 files of up to 2 Mbytes in total can be attached.
- Files prohibited to be attached to mail and outputting from FOMA terminal (except files with "File restricted" set for File restriction with your terminal or PDF data not downloaded from i-mode) or files unavailable due to UIM operation restriction cannot be attached.
- File types that can be attached are as shown below.

File type	Condition of attachment
Image* <sup>1</sup>	<ul style="list-style-type: none"> <li>• Only JPEG and GIF format images, GIF animation and Flash graphics can be attached (created animation cannot be attached)</li> </ul>
Movie/i-motion/ Sound* <sup>2</sup>	<ul style="list-style-type: none"> <li>• Only MP4 format movie/i-motion can be attached (ASF format or partially downloaded movie/i-motion cannot be attached)</li> <li>• Movies/i-motion with replay restriction set cannot be attached*<sup>3</sup></li> </ul>
Melody	<ul style="list-style-type: none"> <li>• Only melodies in SMF or MFI format can be attached</li> </ul>
ToruCa* <sup>4</sup>	<ul style="list-style-type: none"> <li>• ToruCa in the "Used ToruCa" folder cannot be attached</li> <li>• Attachment is unavailable depending on settings of IP (Information Provider)</li> </ul>
PDF data	<ul style="list-style-type: none"> <li>• PDF data partially downloaded or failed in downloading cannot be attached</li> </ul>
Phonebook entry	—
Schedule data	—
Bookmark data	—
Other	<ul style="list-style-type: none"> <li>• Word, Excel or PowerPoint file can be attached</li> </ul>

- \*1 When sending a JPEG image larger than 10,000 bytes to a 2M incompatible i-mode terminal, it is reduced in the i-shot Center to a size that the receiving terminal supports. To an i-mode terminal with mova service, only one JPEG image can be sent. Note that i-mode mail with URL for image viewing is received by the terminal of the receiver's side.
- \*2 Movie/i-motion with images may be converted to continuous still images and played depending on receiver's terminals or devices.  
When sending to 2M incompatible i-mode terminal, a movie recorded in Compatible mode is recommended. →P149  
When the receiver's terminal is 2M incompatible i-mode terminal, movies/i-motion are saved in i-motion mail Center and the terminal receives i-mode mail containing URL for i-motion viewing.  
Sound recorded with the Sound recorder or Record voice is attached as movie/i-motion containing only sound. i-mode terminals with mova service cannot receive movies/i-motion containing only sound.
- \*3 Files may not be attached to the mail even when replay restriction is not set.
- \*4 ToruCa (Details) may not be received even if the receiver's device is compatible with ToruCa.

#### On the mail creation screen, select the attachment field ▶ Select a file to attach

The selected file is displayed in the attachment field of the mail creation screen.

- If microSD card is installed, a screen appears asking to select an attachment source from "Phone memory" or "microSD".

#### Selecting an image ("1 Image")

- For JPEG image larger than QVGA (240×320, 320×240), converting confirmation screen to QVGA size appears.
- For an image with location information, a confirmation screen for pasting location URL to the message text appears. Select "No" to attach only the image.
- For a JPEG format image exceeding 2 Mbytes in size, it is converted to a size available for mail attachment.
- When "Activate camera" is selected as an attachment source, you can shoot and attach a still image. →P141

#### Selecting a movie/i-motion ("2 i-motion")

- When "Activate camera" is selected as an attachment source, you can shoot and attach a movie. →P145


**Selecting "[3] Melody"**

- Melodies are saved in "Mail attach melody" folder by default. →P429

**Selecting "[4] ToruCa"**


- When ToruCa (Details) can be attached, a confirmation screen for attaching ToruCa with the detail information to mail appears.
- When ToruCa (Details) cannot be attached, a confirmation screen appears if you attach ToruCa to mail, though the detail information is not included. If you select "Yes", the detail information is cut off, but if there is detail information in the site, it can be downloaded at the receiving side.

**Selecting bookmark data ("[7] Bookmark")**

- When "Phone memory" is selected as an attachment source, each time  is pressed on a bookmark list, the bookmark list switches i-mode and Full Browser.

**Selecting ("[9] Record voice")**

- Sound data can be recorded and attached to mails.  
Method of recording sound →P145 Step 2 and the following steps in "Recording movies with Camera"


**2 Edit the mail** **✓INFORMATION**

- Attachments not supported by the receivers' terminals may be deleted or may not be displayed/played correctly.
- Sending an attachment file of a certain size may take time.

**◆ Changing/Removing attachments****<Example> Canceling****1 On the mail creation screen, place the cursor on the attachment field****2**  ▶ "Yes"**Changing:**  ▶ **Retry attaching files →P187****Save i-mode mail****Saving i-mode mail and sending later****◆ Saving i-mode mail**

i-mode mail in the process of creation can be saved instead of sending.

- Savable number →P471

**1**  **[3] on the mail creation screen**

i-mode mail is saved in "Unsent" folder of Unsent messages, and a confirmation screen for pasting Shortcut icons appears.

**✓INFORMATION**


- When saving Decome-Anime, a confirmation screen for saving appears. Note that, if saved, the message text cannot be edited.



**◆ Automatically sending mail from a place where radio waves reach <Auto-send>**





You can set so that i-mode mail created out of service area is automatically sent when moving to a place where radio waves reach.

- Up to 5 mails can be registered.

**1 On the mail creation screen,**  **[2]**

-  appears at the top of the display.
- i-mode mail with Auto-send set is saved in "Unsent" folder of Unsent messages.

**◆ When moving to a place where radio waves reach**Automatically sent. During automatic sending,  blinks. When transmission is complete correctly, the i-mode mail is saved in a folder of Outbox and  disappears.

- When transmission is interrupted or failed,  blinks instead of , and the i-mode mail is saved in "Unsent" folder of Unsent messages.  
Place the cursor on i-mode mail failed in automatic sending in Unsent messages and press  **[5] [2]** to display the reason for unsending.
- When all failed auto-send mails saved in "Unsent" folder disappear by editing, canceling or deleting,  disappears.

**✓INFORMATION**

- When failed to be sent because of out of service area, it is resent up to 2 times.
- Not sent automatically while creating a mail or editing signature.

**✦Canceling Auto-send setting**

- 1 **4** ▶ **Select a folder** ▶ **Place the cursor on the i-mode mail and** ▶ **"Yes"**

**✓INFORMATION**

- Auto-send setting is canceled also in the cases below.
  - When the mail creation screen appears by selecting unsent Auto-send mail
  - When an unsent Auto-send mail is moved to a folder for Message i-appli
  - When UIM is replaced
  - When Host number or Host address is changed in Host selection
  - When 2in1 is ON in B mode

**◆ Editing/Sending sent/saved i-mode mail**

Sent i-mode mail and SMS, i-mode mail and SMS saved or failed to be sent can be edited and sent.

- For Decome-Anime, the message text cannot be edited.

- 1 ▶ **4** or **5** ▶ **Select a folder**

- For SMS, appears.

**2 Select a mail**

**Re-editing the sent mail** : Place the cursor on the mail and

**3 Edit the mail** ▶ **Quick mail****Creating mail quickly**

i-mode mail and SMS can be sent by simple operation to the parties with **phonebook number 0-99 in FOMA terminal phonebook.**

- When multiple phone numbers or mail addresses are saved in a phonebook entry, the destination is the first mail address for i-mode mail and the first phone number for SMS.

**<Example> Sending an i-mode mail in phonebook number 23**

- 1 **Phonebook number** (**2** **3**) ▶

The i-mode mail creation screen destined to the mail address saved in phonebook number that you entered appears.

**Creating SMS** : **Phonebook number** ▶ (**1 sec. or more**)

The SMS creation screen destined to the phone number saved in phonebook number that you entered appears.

**Mail auto receive****When i-mode mail is received**

- Savable number→P471


**Receive an i-mode mail**

and blink and "Receiving messages..." appears.

Mail ring alert sounds, the light turns on or blinks, and the reception result screen appears.

The received i-mode mail is saved in a folder of Inbox.

- : Cancel receiving  
The mail may be received depending on the radio wave conditions.

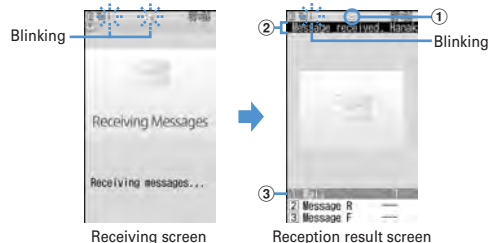**① Icon**

- : Unread i-mode mail exists
- : Unread i-mode mail and SMS exist

**② Reception result ticker**







### ③ Number of received i-mode mails

- If you do not press any key for about 15 seconds after the reception result screen appears, the previous screen automatically reappears.

#### When reception has failed

"X" appears on the right side of "Mail" on the reception result screen. To receive again, perform i-mode inquiry.


### ✓INFORMATION



- When multiple mail and/or MessageR/F are received at the same time, the terminal operates depending on the conditions set for the mail or MessageR/F received last.
- An i-mode mail of up to 100 Kbytes including attachment files can be automatically received. Attachment files exceeding 100 Kbytes can be manually downloaded from i-mode Center. →P193
- Extremely large i-mode mail may be returned with an error message to the sender without being accepted in the i-mode Center.
- When the memory space is not enough or when exceeding the savable number, the unread or unprotected received mails are overwritten chronologically. A large number of existing mails may be deleted depending on the size of the received mail.
- In the cases below, received i-mode mail is stored in the i-mode Center.
  - When the power is OFF
  - During a videophone call
  - Accessing Data Center
  - During a PushTalk session
  - In Self mode
  - In Omakase Lock
  - During FirstPass center connection
  - When reception has failed
  - Out of i-mode service area
  - When receiving SMS
  - When Receive option setting is "ON"
  - During infrared communication/iC transmission
  - When storage area is filled with mail unread or protected
- If there is not enough memory space available because memory is filled with unread and protected mails, reception of i-mode mail is stopped,  and  appear on the screen. To receive, changing unread mail to read mail (→P201), displaying the contents of unread mails (→P195), deleting unnecessary mails (→P201) or unprotecting (→P201) is required.
- If there are remaining i-mode mail in the i-mode Center,  or  appears. It may not appear even when there is i-mode mail. When exceeding the savable number in the i-mode Center, the icon changes to  or .

- You may not automatically receive i-mode mail soon after sent. Perform i-mode inquiry.

## ◆ Displaying newly-received i-mode mail

### 1 On the reception result screen,



- MessageR/F can be displayed by pressing  or .

### 2 Select a folder ▶ Select a mail

Playing Flash graphics with a melody or sound effect →P209  
Reading received mail details screen →P197

## ◆ Operating WEBmail

To send mails from/receive mails to address B with 2in1 ON, you need to connect to WEBmail site. Only when 2in1 ON in B or Dual mode, you can connect to the WEBmail site.

- 2in1 is a charged service requiring subscription.

### 1 ▶ Select i-mode password entry field ▶ Enter i-mode password ▶ "決定 (Yes)"

You are connected to WEBmail site.

- For operations in WEBmail site, refer to "Mobile Phone User's Guide [2in1]".

## Receive option

### Receiving i-mode mail to select

You can check the subject of i-mode mail stored in the i-mode Center to select if you receive or delete i-mode mail without receiving it.

- To use Receive option, Receive option setting must be set to "ON" in advance.

## ❖ When mail arrives at i-mode Center

"You have mail at i-mode center." appears on the display.

- Even when i-mode mail is stored in i-mode Center, ring alert, vibrator, etc. do not operate.
- By pressing keys except **[TV]**, **[D]** or **[MULTI]**, "You have mail at i-mode center" disappears.

## ✓ INFORMATION

- In All lock, Omakase Lock, Personal data lock or Lock on close, no messages appear.
- If you perform Check new message, all the messages are received. To inhibit reception of mails, deselect "Mail" from the inquiry items for Check msg option.
- Area Mail, SMS and MessageR/F are received automatically even when Receive option setting set to "ON".

## ◆ Selecting mail to receive



You are connected to the i-mode Center and can view the list of i-mode mail stored.




- Icons displayed at the end of the mail are defined as follows.  
 : Image is attached : Melody is attached : i-motion is attached  
 : ToruCa is attached : File other than the above is attached

## 2 "保留 (Hold)" ▶ Select from "受信 (Receive)", "削除 (Delete)" or "保留 (Hold)" for each mail

- When "保留 (Hold)" is selected, the mails are stored at the i-mode Center as they are.
- To delete all mails stored at the i-mode Center, select "削除 (Delete)" of "iモードセンターから全てのメールを (All mails from i-mode Center)".
- For more than one page, select "前ページ (Previous page)" or "次ページ (Next page)" at the end of the mail list to view the previous or next page.

## 3 "受信 / 削除 (Receive/Delete)" ▶ "決定 (Select)"



## i-mode message

### Checking for i-mode mail

You can make inquiry for any i-mode mail delivered while you were out of service area or the power was turned OFF.

MessageR/F can also be checked at the same time if it is set in Check msg option.

- Under some radio wave conditions, you cannot perform i-mode message.

## 1 Side key [▼] (1 sec. or more)

- During i-mode message, the light blinks in rainbow. When there are no newly received i-mode mail after i-mode message, the light blinks in red. When i-mode message failed, the light blinks in yellow.

## ✓ INFORMATION

- You can also press to check new message.
- By default, Check new message is available by pressing side key [▼] for 1 second or more with FOMA terminal folded.
- You can also use a menu on the sub-display to perform Check new message. →P35

## Replying to i-mode mail

### Replying to i-mode mail

You can reply to the received i-mode mail or SMS.

- You may not reply to some received mails.
- You cannot reply to received SMS sent from "User unset", "Payphone" or "Not support".

#### 1 1 ▶ Select a folder ▶ Place the cursor on the mail and

The Reply format screen appears.

- For a mail sent to multiple addresses, the selection screen of the addresses to reply to appears.
- The Reply format screen does not appear in the cases below. Go to Step 3.
  - When Activate quick reply is "OFF"
  - When no quick reply format is registered
  - When replying to SMS





#### 2 1

Using Quick reply :  - .


Selected quick reply format is inserted.


#### 3 Edit the mail ▶

The sender's mail address or phone number of the received mail is entered in the receiver field, the subject of the received mail is entered in the subject field with "REX:" (X is the number of replies except "1") prefixed at the beginning (only i-mode mail).

- The status icon of received mail changes from  to , or from  to .

#### ✓INFORMATION

- You can set if you use Quick reply when replying and set the text of the Quick reply. →P208
- You can set if you quote the message when replying and set Quote characters added at the beginning of the quoted message. →P208
- When pressing  and selecting "Reply/Forward" on the received message list screen or details screen, "Reply" (received message text not quoted) or "Reply with quote" (received message text quoted) can be selected regardless of the settings of Reply format. The same operation is available from the received mail details screen of microSD card.
- Replying quoting Decome-Anime is unavailable.

- Operation for replying by Decome-Anime : On the received mail list screen and details screen,  → "Reply/Forward" → "Use Decome-Anime"  
The same operation is available from the received mail details screen of microSD card.
- The received mail attachments are not attached for replies.
- When the link item that can activate the melody or i-appli attached in the received message text, it is not attached to reply mail and not quoted as characters.
- If file restriction is set to the image attached to message text, it is not quoted for replies. When the total size of images in text exceeds 90 Kbytes after quotation, a screen showing the deletion of excessive images appears.

## Forwarding i-mode mail

### Forwarding i-mode mail





You can forward received i-mode mail or SMS to other addresses. i-mode mail is forwarded as i-mode mail and SMS is as SMS.

#### 1 1 ▶ Select a folder ▶ Place the cursor on the mail and


The subject of the received mail is entered in the subject field with "FWX:" (X is the number of forwarding except "1") prefixed at the beginning (only i-mode mail) and the text of the received mail is entered in the message text field.

- When a received mail with an attachment is forwarded, the attachment is also set. Note that a Receive option attachment file being or not downloaded is not set.

#### 2 Edit the mail ▶

- The status icon of received mail changes from  to , or from  to .

#### ✓INFORMATION

- Operations from received mail details screen :  1 4  
The same operation is available from the received mail details screen of microSD card.
- When the link item that can activate the melody or i-appli attached in the received message text, it is not set to forwarded mail and is not quoted as characters.
- Regarding attachments to received mail (image, melody and ToruCa), files that cannot be attached to mail or output from FOMA terminal are not attached to forwarded mail. When forwarding the received mails of microSD card, all attachment files are canceled.

- When forwarding Decome-Anime, the message text cannot be edited. For Decome-Anime that cannot be attached to mail or output from FOMA terminal, the Decome-Anime is canceled and the mail creation screen appears.
- When the images in received message text to be forwarded exceeds 90 Kbytes, a screen showing the deleting of excessive images appears.
- If transferring a received mail sent to Address B or Number B and saved to FOMA terminal with 2in1 ON in Dual mode, it is sent as a mail from Address A or Number A.

### Attachment (Receive option)

## Downloading Receive option attachment file

You can download the receive option attachment file which is being or not yet downloaded, attached to the received i-mode mail.

- When the total size of text and attachment file exceeds 100 Kbytes, a part or all of attachment file is received as a Receive option attachment file.
- When there is an attachment file which is being or not yet downloaded, its storage period in the i-mode Center is displayed on the received message details screen.
- The maximum size of each file that can be downloaded is 2 Mbytes.

- 1   Select a folder ▶ Select i-mode mail with an attachment file


File icon, file name and file size

Storage period in the i-mode Center




Icon definitions→P197 "Received message details screen"

## 2 Select the file name

- If you press  and select "No" while downloading, downloading is terminated and the downloaded part is saved.
- Operations after downloading are the same as those of an attachment file automatically received.→P193

### INFORMATION

- When the memory space is not enough for the receive option attachment file to be downloaded, downloading is unavailable. Retry downloading after deleting files attached to received i-mode mail (→P195), displaying the contents of unread mails (→P195), changing state of unread mails to read (→P201), unprotecting (→P201) and/or deleting unnecessary mails (→P201).
- Read mails may be deleted when downloading a Receive option attachment file of a certain size.
- When downloading interrupts because of out of service area etc., resuming confirmation screen appears. When "No" is selected, the downloaded part is saved and  appears as attachment icon.

### Attachment (auto receive)

## Operating Auto receive attachment files

You can display/save the file attached to an i-mode mail.

- The files below cannot be displayed or played on this FOMA terminal. And, they can be saved only to microSD card.
  - Flash graphics exceeding 100 Kbytes
  - Melody exceeding 100 Kbytes
  - ToruCa exceeding 1,024 bytes or ToruCa (Details) exceeding 100 Kbytes
- The files below, when attached to i-mode mail, cannot be displayed. Check the contents after saving.
  - Multiple phonebook data
  - Multiple schedule data
  - Multiple bookmark data
- Savable number→P471

<Example> i-mode mail with an image attached

File icon, file name and file size



Icon definitions→P197 "Received message details screen"

## ◆ Displaying/Playing

- The files not compatible with this FOMA terminal cannot be displayed or played.



### 1 ▶ Select a folder ▶ Select an i-mode mail

### 2 Select the file name

- For an image, display/not display is switched.
- If there is detail information in ToruCa, it can be downloaded from the site.  
→P245 Step 2 in "Displaying ToruCa"

Displaying the data of phonebook, schedule and bookmark :   

### ✓ INFORMATION

- An image that the width is larger than the display size is displayed being scaled down.
- Select the file name of the image to display the image attached to Deco-mail.
- Displaying/Playing is not available for some receiver's terminal or the received file.
- When the character in the text is mistakenly recognized as the data of the melody, place the cursor on the melody and select  → "Attachment" → "Display data" so that it can be displayed as characters. Press  on the first line of the data-displayed melody to redisplay the melody.
- The same operation is available from sent mail details screen.
- Playing i-motion attached to a mail on a PC requires i-motion compatible software. For details, refer to DoCoMo website.

## ◆ Saving

- Savable file types and saving destinations are as shown below.

File type	Save to	
	FOMA terminal	microSD card
<b>Image</b>	Folder of My Picture	Any of "My Picture", "Other images" or "Deco-mail pict"
<b>i-motion</b>	"i-mode" folder of i-motion	For no file restriction, "Movie" folder (for i-motion with voice only, "Other movie" folder) For file restriction, a folder selected in "Movie" folder
<b>Melody</b>	"i-mode" folder of Melody	"Melody" folder
<b>ToruCa</b>	"ToruCa" of ToruCa content	"ToruCa" folder

File type	Save to		
	FOMA terminal	microSD card	
<b>PDF data</b>	"i-mode" folder of My Document	"My Document" folder	
<b>Phonebook entry</b>	FOMA terminal phonebook	"Phonebook" folder	
<b>Schedule data</b>	Scheduler	"Schedule" folder	
<b>Bookmark data</b>	<b>i-mode</b>	Folder in the first line of Bookmark	"Bookmark" folder
	<b>Full Browser</b>	Folder in the first line of Bookmark	
<b>Word, Excel, PowerPoint file</b>	Folder of Other	"Other" folder	
<b>Various files*</b>	—	"Other" folder	

\* File not supported by this FOMA terminal. Only saving and transfer to microSD card are available. Note that the file name may be changed while saving.




### <Example> Saving ToruCa

### 1 ▶ Select a folder ▶ Select an i-mode mail

### 2 Place the cursor on the file name and

Saving image of Deco-mail :    ▶ Select the image

The next procedure→P166 Step 2 and the following steps in "Downloading images"

Saving melody : Place the cursor on the melody and   

The next procedure→P167 Step 3 in "Downloading melodies"

### 3 or

- For some ToruCa, only one of the saving destinations can be selected.


**Saving an image :** The next procedure→P166 Step 2 and the following steps in "Downloading images"

**Saving i-motion :** The next procedure→P176 Step 3 in "Downloading i-motion from sites"




**Saving PDF data :** The next procedure→P167 Step 3 in "Downloading PDF data"



**Saving the data of phonebook, schedule and bookmark :** 

- When changing the title of bookmark data, up to 12 two-byte (24 one-byte) characters can be entered.
- If adding the bookmark without entering the title of bookmark data, the URL is displayed on the bookmark list.
- If pressing  when microSD card is installed, it is saved to microSD card.
- For multiple numbers of data, a saving destination selection screen appears.

**Saving Word, Excel and PowerPoint files :** 

- When changing the display name, up to 36 characters can be entered.
- When there are more than one folder in Other, a screen for selecting a save destination folder appears. The files are saved to a selected folder.
- When  appears in the guide area, press  to switch the saving destination and press  to save to microSD card.

**Saving other files :** "Yes"**✓INFORMATION**

- Images with horizontal and vertical (or vice versa) sizes larger than 864×480 in GIF format or 1,728×2,304 in JPEG format cannot be saved in FOMA terminal. And, some JPEG images cannot be saved depending on the JPEG type. And, for some types of JPEG, images cannot be saved.
- Some ToruCa can be saved only once.
- The file can be saved in the same way from sent mail details screen.

**◆ Checking file name**


**1**  **1** ▶ Select a folder ▶ Select an i-mode mail

**2** Place the cursor on the file name and  **6**  **2**

**Checking the title of the attached melody :** Place the cursor on the melody and  **6**  **5**

**Checking the title of the melody attached to the message text :** Place the cursor on the melody and  **6**  **4**


**✓INFORMATION**



- Operation to check the file name from sent mail details screen : Place the cursor on the file name and  → "Attachment" → "Check title" or "Display file name".

**Deleting attachment****Deleting the file attached to i-mode mail**



- You cannot delete image or melody attached in the message text and link item to activate i-α.plli.

**1**  **1** ▶ Select a folder ▶ Select an i-mode mail

**2** Place the cursor on the file name and  **6**  **4**

- To delete all attached files at a time, place the cursor on the file name and press  **6**  **5**.

**Deleting melodies or receive option attachment files :** Place the cursor on the file name and  **6**  **3**

- To delete all attached melodies or Receive option attachment file at a time, place the cursor on the file name of melodies or Receive option attachment file and  **6**  **4**.

**3** "Yes"

- The file name of the deleted attachment is displayed in a light color and cannot be selected.

**✓INFORMATION**

- File attached to a sent mail can be operated in the same way.

**Inbox/Outbox****Displaying mail in Inbox/Outbox**

Received/Sent/Unsent i-mode mail, SMS or Message R/F can be checked.

- "Welcome  F906i  mail is saved in Inbox by default.
- Savable number → P471

<Example> Displaying received mails

**1**  **1**

Displaying sent mail folder list :  **5**

Displaying unsent mail folder list :  **4**

## 2 Select a folder

The received mail list is displayed.

- Select a folder for Message i-appli to activate the corresponding i-appli. To display a mail without starting i-appli, place the cursor on the folder for Message i-appli and press **[F6]** **[1]**.

## 3 Select a mail to display

Useful functions of Mail→P203

### ◆ Reading folder list screen

#### ◆ Inbox folder list screen




#### ① Usage rate of the memory space

#### ② Page/Total pages

#### ③ Folder

- (gray) : No mail   □ (blue) : No unread mail
- : No unread mail or no mail (Secret attribute ON)
- : No unread mail or no mail (used in Message i-appli)
- : Unread mail exist   □ : Unread mail exist (Secret attribute ON)
- : Unread mail exist (used in Message i-appli)

#### ◆ Outbox/Unsent folder list screen




#### ① Page/Total pages

#### ② Folder

- (gray) : No mail   □ (blue) : Mail exist
- : Secret attribute ON   □ : Message i-appli

## ◆ Message list/Details screen

### ◆ Inbox message list screen

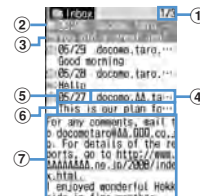

#### ① Page/Total pages

#### ② Status icon

- ✉ : Unread   ✉ : Unread (unable to reply)   ✉ : Read   ✉ : Read (unable to reply)
- ✉ : Read (replied)   ✉ : Read (forwarded)   ✉ : Protected
- ✉ : Protected (unable to reply)   ✉ : Protected (replied)   ✉ : Protected (forwarded)

\* For replied and forwarded, indication priority is given to the last operation icon.

#### ③ Attachment/SMS/Notification/Message i-appli/Area Mail icon

- 🖼 : Image   🎵 : i-motion   🎵 : Melody   🎵 : ToruCa
- 📄 : PDF data   📇 : Phonebook data   📅 : Schedule data
- 📖 : Bookmark data   📄 : Word file   📄 : Excel file
- 📄 : PowerPoint file   📄 : Files that cannot be displayed on this FOMA terminal
- 📄 : Multiple files are attached   📄 : SMS
- 📄 : SMS report request, Missed call notification or Notify recorded message
- 📄 : Mail to be used in Message i-appli   📄 : i-appli To exists
- 📄 : Area Mail   📄 : Area Mail to be used in Message i-appli
- 📄 : Invalid data attached

\* When List style of Message list is "Display 1 row", the icon below appears at the end of data and time.

- 📄 : A file is attached   📄 : Area Mail
- 📄 : Area Mail to be used in Message i-appli

#### ④ Sender

When added to the phonebook, the name is displayed.  
For Area Mail, "Area Mail" appears.

**⑤ Reception date and time**

The time is displayed on the reception day and the date is displayed on other than the reception day.


**⑥ Subject**

It may not be displayed depending on the i-mode mail. For Area Mail and SMS, the beginning of the message is displayed.

**⑦ Message text**

The message of the mail at the cursor position is displayed.

- For SMS sent from an overseas sender, the sender address is preceded by "+".
- For i-mode mail or SMS received while staying overseas (except GMT+09:00), ☎ may appear succeeding the receiving date and time.
- When 2in1 is ON in Dual mode, ☎ appears at the top of the subject for i-mode mail for Address B or Number B, and at the top of the message text for SMS. For the mail list of microSD card backed up, ☎ is displayed at the end.

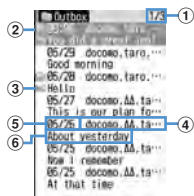**❖ Outbox/Unsent message list screen****① Page/Total pages****② Status icon**

No icon : Unprotected

☎ : Protected ☎ : Auto-send set ☎ : Failed in Auto-send

☎ : Protected + Auto-send set ☎ : Protected + failed in Auto-send

**③ Attachment files/SMS/Message i-appli icon → P196 "Inbox message list screen"**

\* When List style of Message list for the sent message is "1 row", if there is an attachment file, ☎ appears at the end of data and time.

\* When icon is not displayed at the position of ②, the icon of ③ is displayed at the position of ②.

**④ Receiver**

When added to the phonebook, the name is displayed.

**⑤ Sent/Saved date & time**

The time is displayed on the reception day and the date is displayed on other than the reception day.

**⑥ Subject**

For SMS, the beginning of the message is displayed.

- When i-mode mail or SMS is created, saved and send while staying overseas (except GMT+09:00), ☎ may appear succeeding the sending date and time.

**❖ Received message details screen****① Address type icon**

☎☎☎ : Receiver (☎ and ☎ only for i-mode mail)

For i-mode mail, you can check which address type is applied to you as a receiver.

**② Status/Notification icon**

☎ : Read ☎ : Read (unable to reply) ☎ : Read (replied)

☎ : Read (forwarded) ☎ : Protected ☎ : Protected (unable to reply)

☎ : Read (protected/replied) ☎ : Protected (forwarded)

\* For replied and forwarded, indication priority is given to the last operation icon.

**③ Types of attachment/SMS icon/Area Mail icon****Types of attachment**

☎ : Image ☎ : i-motion ☎ : Melody ☎ : ToruCa

☎ : PDF data ☎ : Phonebook data ☎ : Schedule data

☎ : Bookmark data ☎ : Word file ☎ : Excel file

☎ : PowerPoint file ☎ : Files that cannot be displayed on this FOMA terminal

☎ : Multiple attachments exist ☎ : i-appli (i-appli To)

☎ : Invalid data attached

\* Depending on the conditions of attachment files, icons below appear below the message text with the icon above.

☎ : Copyrighted (Mail attachment or output from FOMA terminal unavailable)

✘ / / : Data error/Data exceeded ? : Receive option attachment file not yet downloaded

↓ : Receive option attachment file being downloaded

✘ : Downloading of the receive option attachment file unavailable

#### SMS icon

✉ : SMS

#### Area Mail icon

✉ : Area Mail ✉ : Area Mail to be used in Message i-appli

#### ④ Mail number/number of items

#### ⑤ Reception date and time

#### ⑥ Address type of sender's/broadcast address

✉ : Sender ✉ : Sender (unable to reply)

✉ : Receiver (only for i-mode mail)

✉ : Receiver (unable to reply) (only for i-mode mail)

#### ⑦ Subject

• For i-mode mail or SMS received while staying overseas (except GMT+09:00), 🌐 may appear succeeding the receiving date and time.

• When 2in1 is ON in Dual mode, 📧 appears at the end of the reception date and time for i-mode mail or SMS for Address B or Number B.

#### Viewing Decome-Anime

If selecting Decome-Anime from received mail list, Flash graphics of Decome-Anime text are played.

• For Decome-Anime with sound effect, the sound effect is played at the volume set by Melody volume of Adjust volume.

Operations while displaying Decome-Anime are as shown below.

⏮ : Play from the beginning

⏪ | 0 | 9 | ⏩ | ⏭ : Play

Side keys [▲▼] : Adjust volume

⏸ : Stop playing

✉ : Return to received mail details screen/Display Decome-Anime

#### ❖ Zooming in/out display of received mails <Quick zoom>

In received message list screen and received message details screen, message can be zoomed up/down at 15 levels.

• The operations below can be performed.

1 / 3 : Zoom in/out


2 : Initial screen reappears

⏪ / ⏩ : Scroll (only for list screens)

• When displaying key operation list, press ⏮ on each screen, and select "Display" → "Key function help".

• Zoom out/in operation of Decome-Anime is unavailable.

#### ❖ Sent message details screen



#### ① Status icon

No icon : Unprotected 📧 : Protected

#### ② Attachment files/SMS icon → P197 "Received message details screen"

#### ③ Mail number/number of items

#### ④ Sent date and time

#### ⑤ Address type icon

✉ : Receiver (Cc and Bcc only for i-mode mail)

#### ⑥ Subject

• When i-mode mail or SMS is sent while staying overseas (except GMT+09:00), 🌐 may appear succeeding the sending date and time.

#### Viewing Decome-Anime

Operations while displaying Decome-Anime are the same as those of received mails.

#### ✓ INFORMATION



• Replying to "Welcome ❖ F906i 📧" mail saved by default is unavailable.

Note that communication fee for receiving "Welcome ❖ F906i 📧" mail is not charged.

• Characters that cannot be displayed are replaced with spaces or other characters.

• When the subject exceeds the maximum number of characters that can be received, the excessive characters are deleted.

• When the message exceeds the number of characters that can be received, "!" or "!!" is inserted at the end and the remainder of the message is deleted automatically.

- When receiving a mail decorated on a PC, operations by i-mode terminals may not be the same as those on a PC.
- When the file attached to the received mail is larger than the data size that can be received (the data size that can be attached→P187) or for some files, it is deleted at the i-mode Center and [添付ファイル削除 (attachment files deleted)] is displayed below the subject.
- Only one melody or link item to start i-appli attached in the text of message, is valid. If multiple melodies or link items are attached, those attached data become invalid and  or  is displayed on the received mail list screen or details screen.
- The subject and sender of received SMS, SMS report request, missed call notification and Notify recorded message are displayed as follows.

Item	Subject	Sender
SMS	Received SMS	Phone numbers
SMS report request	SMS report request	SMS Center
Notify missed call	Notify missed call	DoCoMo SMS
Notify recorded message	Answer videophone	DoCoMo MSG

For SMS sent, "Sent SMS" appears as a subject.


- \* When the phone number is added to the phonebook, the name is displayed on the sender's terminal.
- \* When the caller ID is not notified, the characters below are displayed in the sender field.  
"User unset" (Message was sent with setting not to notify the caller ID)  
"Payphone" (Message was sent from a payphone)  
"Not support" (Message was sent using a procedure that does not provide caller ID information)


## ◆ Storing mail in Data Center <Data Security Service>

By using Data Security Service, i-mode mail and SMS can be stored in Data Center on the network.

- Data Security Service→P133
- This is a charged service requiring subscription. When having not subscribed to this service, attempting to connect to Data Center displays the screen indicating that.
- Up to 10 mails can be stored by one operation.
- If the files are attached to i-mode mail, when saving they are deleted. Note that, images or melodies in the message or Flash graphics in Decome-Anime message text (except those whose mail attachment or output from FOMA terminal is prohibited) are not deleted.
- SMS report request cannot be stored.


- For details of restoration, refer to "Mobile Phone User's Guide [i-mode] FOMA version". Restored mails are protected except for the cases below.
  - When received mail or SMS saved in Data Center is unread
  - When the number of protected mail saved has reached the limit
- Logs saved in Data Center can be checked.→P91

1  ▶ 1 or 4 - 5 ▶ Select a folder

2  4 5 ▶ Select a mail

Saving an unsent mail :  4 3 ▶ Select a mail

3  ▶ "Yes" ▶ Authenticate

-  : Canceling saving

4 Check the communication result

- The communication result display disappears after about 5 seconds.

## ◆ Creating/Deleting folders


- You can set secret attribute to a created folder. In Privacy mode (when Mail & Logs is "Hide secrecy fldrs"), folders with Secret attribute "ON" are not displayed.
- Setting Privacy mode→P124

### ◆ Creating folders


- In Inbox, up to 40 folders in addition to "Inbox", "MessageR" and "MessageF" folder and folder for Message i-appli can be created.
- In Outbox or Unsent messages, up to 20 folders in addition to "Outbox", "Unsent" folder and the folder for Message i-appli can be created respectively.
- Folder settings for "Inbox", "MessageR", "MessageF", "Outbox" or "Unsent" folders and the folder for Message i-appli cannot be changed.

1  ▶ 1 or 4 - 5

2  1

Changing folder setting : Place the cursor on the folder and  3

Changing the order of the folder : Place the cursor on the folder and

 ▶ 7 or 8

### 3 Set the required items

- Folder name** : Up to 8 two-byte (16 one-byte) characters can be entered.
- Secret attribute** : Set if you display a folder in Privacy mode (when Mail & Logs is "Hide secrecy fldrs").

### ❖ Deleting folders

- "Inbox", "MessageR", "MessageF", "Outbox" and "Unsent" folders cannot be deleted.
- Folders containing protected mails cannot be deleted.
- A folder for Message i-appli cannot be deleted if the i-appli for the folder exists.


1  ▶ **1** or **4** - **5** ▶ **Place the cursor on the folder and**  
 **2** ▶ **Authenticate** ▶ "Yes"

### ❖ Checking number of mail items <Check No. of msgs>

The number of Inbox/Outbox/Unsent messages are checked for each folder.

1  ▶ **1** or **4** - **5** ▶ **Place the cursor on the folder and**  
 **5**

### ✓INFORMATION



- Operation from mail list :  → "Display" → "Check No. of items"

### ❖ Displaying mail address <Display address>

- The mail address cannot be checked from the unsent message details screen.

1  ▶ **1** or **5** ▶ **Select a folder** ▶ **Select a**  
**mail** ▶  **3** **2**


### ✓INFORMATION


- You can check also by selecting a sender or an address to check on the message details screen.
  - Operation from the received/sent/unsent mail list : Place the cursor on the mail and  → "Display" → "Display address"
- When there is more than one address, all mail addresses are displayed for sent mail and unsent mail, addresses of the sender and receivers except yours ("TO:" "CC:") are displayed for received mail.
- Operations from the mail template details screen :  **4** **2**



### ❖ Moving received/sent/unsent mail to another folder <Move message>

- Mails can also be copied to microSD card. → P310

<Example> Moving 1 item

1  ▶ **1** or **4** - **5** ▶ **Select a folder**

2 **Place the cursor on the mail and**  **4** **1** **1**

Moving selected items :  **4** **1** **2** ▶ **Select mails** 

Moving all items in the folder :  **4** **1** **3**

3  ▶ **Select the destination folder** ▶ "Yes"

### ❖ Searching for mail

You can search for mails by a sender/receiver of received/sent mails registered in phonebook or by a sent/received date.

<Example> Searching the phonebook

1  ▶ **1** or **5**


2  **9** **1** ▶ **Search the phonebook**

- Place the cursor on the phonebook entry or date to list the corresponding mails.
- When searching sent mails by phonebook, broadcast messages are also searched (the first destination is displayed on the screen).


Searching by sent/received date :  **9** **2** ▶ **Search for the date**

### 3 Select a phonebook data


Mails searched from all mails are listed.

- From the search result screen, the same operations as on the mail list are enabled.
- Press  **0** to cancel searching.

Searching by sent/received date : **Select the date**

- Mails can also be searched by pressing  and entering a date.

### ✓INFORMATION

- Operation from the of received/sent mails list : Press  → "Search message" → "With phonebook" or "With scheduler"
- In such a case, only the mails in the folder are searched.

## ◆ Sorting received/sent mail <Sort>

The sorting order of the mail list in Inbox and Outbox can be changed temporarily. When the display ends, the order returns to "By date".

1 [✉] ▶ **1** or **5** ▶ **Select a folder**

2 [MENU] **7** **4**

Sorting sent mails : [MENU] **5**

3 **1** - **4**

### ✓INFORMATION

- For sorting "By sender" or "By address", even when the mail address is added to the phonebook, mails are not sorted by the name saved in the phonebook but in the mail address order.
- When the one- and two-byte characters are mixed in the titles of mails, the sort result "By title" may not match the order of the Japanese syllabary.
- If SMS or Area Mail is included, as the beginnings of message are displayed in the list screen, the result of sorting by "By title" does not match the order of the Japanese syllabary.

## ◆ Changing read/unread state of received mail

- Read/Unread state of received mails protected cannot be changed.

<Example> Changing 1 item from unread to read

1 [✉] **1** ▶ **Select a folder**

2 **Place the cursor on the received mail to change and** [MENU] **5** **1**

Changing 1 item from read to unread : **Place the cursor on the mail and**

[MENU] **5** **2**

Changing selected items from unread to read : [MENU] **5** **3** ▶ **Select mails** ▶ [OK] ▶ "Yes"

Changing selected items from read to unread : [MENU] **5** **4** ▶ **Select mails** ▶ [OK] ▶ "Yes"

Changing all items in a folder to read : [MENU] **5** **5** ▶ "Yes"

Changing all items in a folder to unread : [MENU] **5** **6** ▶ "Yes"

## ◆ Protecting received/sent mail <Protect mail>

By protecting received or sent or unsend mails, they can be prevented from being erroneously deleted or being overwritten because of the lack of the memory space.

- Protectable number→P471
- Unread mail cannot be protected.
- Operation for protecting/unprotecting selected Area Mails is unavailable.

<Example> Protecting 1 item

1 [✉] ▶ **1** or **4** - **5** ▶ **Select a folder**

2 **Place the cursor on the mail and** [MENU] **3** **1**

- The status icon changes to one of the followings.  
Inbox : [✉] (Read), [✉] (Unable to reply), [✉] (Replied), [✉] (Forwarded)  
Sent/Unsent mails : [✉]

Protecting selected items : [MENU] **3** **2** ▶ **Select mails** ▶ [OK]

Protecting all items in the folder : [MENU] **3** **3**

Unprotecting 1 item : **Place the cursor on the mail and** [MENU] **3** **4**

Unprotecting selected items : [MENU] **3** **5** ▶ **Select mails** ▶ [OK]

Unprotecting all items in the folder : [MENU] **3** **6**

### ✓INFORMATION

- Operations from the mail details screen : [MENU] **8**
- When "Protect all" is selected, mail is protected in the chronological order, most recent first, until the limit is reached.

## ◆ Deleting mail <Delete mail>

### ❖ Deleting received mail

1 [✉] **1**

- To delete all mails, press [MENU] **4** **6**, perform authentication and go to Step 4.

2 **Select a folder** ▶ [MENU] **2**

- To delete a received mail, select the folder and place the cursor on the received mail to delete and press [MENU] **2**.

**3** [1]-[7]

Deleting selected items : [2] ▶ Select mails ▶ [6]

Deleting all items in a folder : [4] ▶ Authenticate

**4** "Yes"

## ❖ Deleting sent/unsent mail

&lt;Example&gt; Deleting 1 item

**1** [Envelope icon] ▶ [4] or [5]**2** Select a folder ▶ Place the cursor on the mail and [ME] [2] [1]

Deleting selected items : Select the folder ▶ [ME] [2] [2] ▶ Select mails ▶ [6]

Deleting all items in a folder : Select a folder ▶ [ME] [2] [3] ▶ Authenticate

Deleting all items : [ME] [4] [2] ▶ Authenticate

**3** "Yes"

## ✓ INFORMATION

- Operations from the folder list : [ME] [4]
- Operations from the mail details screen : [ME] [9]

**Mail logs****Using mail logs**

This function is used to record the destination, sender's address and other data of sent/received mail as mail logs. You can create a mail or add to the phonebook.

- Up to 30 items can be recorded for each of sent mails and received mails. When exceeding the limit, record is overwritten chronologically.
- With 2in1 ON, up to 30 received mails for Address/Number A and up to 30 received mails for Address/Number B are recorded; up to 60 received mails in total are recorded. Only logs for Address/Number A are displayed in A mode and only those for Address/Number B are displayed in B mode. In Dual mode, all send/receive logs are displayed.
- When multiple mails are sent to the same destination, only the latest item is recorded in Sent msg log.

- Received mail logs of i-mode mails or SMS that cannot be replied to are not recorded.

## ◆ Displaying mail logs

&lt;Example&gt; Displaying Sent msg logs

**1** [Envelope icon] ▶ [6]

- Select the party to display details screen.



Sent msg log list



Sent msg log details

- Icon definitions
  - [Envelope icon] : i-mode mail logs
  - [SMS icon] : SMS logs
  - [Address icon] : Received message logs for Address B or Number B (with 2in1 ON in Dual mode)
  - [Phone icon] : Sent message log recorded while staying overseas (except GMT+09:00)

\* May not be displayed when sending date/time is not recorded etc.

Displaying received message logs : [Envelope icon] ▶ [6]

## ❖ Using mail logs

**Creating i-mode mail** : Place the cursor on the log to send mail to and [Envelope icon] ▶ Edit the mail ▶ [6]

- For SMS log, a mail creation screen with a mail address set as destination appears if the mail address is saved in the phonebook, and the mail creation screen with a phone number set as destination appears if the mail address is not saved.



**Creating SMS** : Place the cursor on the log and  (1 sec. or more) ▶ **Edit**

**SMS** ▶ 

- For i-mode mail log, SMS cannot be created unless a phone number is saved with mail address in the phonebook.

**Adding to phonebook** :

① **Place the cursor on the log to save to phonebook and**  ▶ **4** or

**5** ▶ **1** or **2**

- When adding data to phonebook entry saved already, select the phonebook entry.

② **Add the name, mail address, etc.**

Phonebook new entry → P83

**Making calls** :  or 

- For i-mode mail logs, a call cannot be made unless a phone number is saved with mail address in the phonebook.

**Making PushTalk calls** : 

- For i-mode mail logs, a PushTalk call cannot be made unless a phone number is saved with mail address in the phonebook (except for the case that the mail address is "phone number@docomo.ne.jp").

**Displaying redial/received call logs** : 

◆ **Switching mail logs details screens <View preference>**

1 **On the mail logs details screen,**  **9** ▶ **1** - **3**

Setting items → P87 "Switching details screen display"


◆ **Deleting mail logs**

<Example> Deleting 1 item

1 **Display the mail logs list**

2 **Place the cursor on the mail logs list and**  **6** **1**

**Deleting selected items** :  **6** **2** ▶ **Select a mail logs list** ▶ 

**Deleting all items** :  **6** **3** ▶ **Authenticate**

3 "Yes"

✓ **INFORMATION** -----

- Operations from the sent/received msg log details screen :  **6**

## Useful functions of Mail

◆ **Using Phone To (AV Phone To)/Mail To/SMS To/Web To/Media To functions**

1 **On the sent/received msg log details screen, place the cursor on the phone number, mail address, URL or 1Seg watching information**

- Only information which the cursor can be placed on can be selected. The next procedure → P169 Step 2 in "Using Phone To (AV Phone To)/Mail To/SMS To/Web To/Media To function"



✓ **INFORMATION** -----


- This function is not available for Decome-Anime or mails stored in Data Center.
- This function may not be available for mails received from a PC or others.

◆ **Copying texts**

You can copy characters in mail. Copied characters can be pasted in entry fields in the mail creation screen or phonebook data entry screen.

- The last copied item is recorded until the power is turned OFF and they can be pasted any number of times.

1  ▶ **1** or **5** ▶ **Select a folder** ▶ **Select a mail** ▶  **2**

- To copy a selected item, place the cursor on the item to copy and press  **2**.

## 2 Select a copy option


**Copy text :** Copy a specified range of characters.

Copying method→P383 Step 2 and the following steps in "Copying/Cutting characters"

**Copy title :** Copy the title.

**Copy selected item :** Copy selected items (mail address, phone number, etc.).  
Pasting method→P383

### ✓INFORMATION



- Operation from the details screen of mail template or the details screen of SMS in UIM :  → "Copy" or "Move/Copy".
- For SMS stored in UIM, you can copy the message body, address or sender.
- For Deco-mail, only text is copied and decorations are not copied.
- For Decome-Anime, the message text cannot be copied.
- Text in the Date To format can be saved as schedule after being pasted to Notepad. → P371

## ◆ Making call from mail <Phone call>

If the sender of a received mail or mail address of sent/unsent mails are saved with phone number in phonebook, calls can be made (for SMS or mail that the address is "phone number@docomo.ne.jp", a call can be made without saving).

**<Example> Making a call**

1  ▶  or  -  ▶ **Select a folder ▶ Place the cursor on the mail and**  

- When the mail has multiple destinations, select a mail address of the party to be called.
- When operating from the received message/sent message details screen, place the cursor on the sender, receiver or phone number and press  .

2 **Set a condition for dialing** ▶ 







Making a call under set conditions→P59

## ◆ Adding phone number, mail address and URL in the phonebook





You can add the phone number, mail address and URL that you can place the cursor on to the phonebook entry from mail.

**<Example> Adding a phone number**

1  ▶  or  ▶ **Select a folder ▶ Select a mail**

2 **Place the cursor on the phone number and**   ▶  or  ▶  or 



- When adding data to phonebook entry saved already, select the phonebook entry.

**Adding a URL :** **Place the cursor on the URL and**   ▶  or 

3 **Add the name, mail address, etc.**







Phonebook new entry→P83

### ✓INFORMATION

- You can operate also from the SMS details screen of UIM.
- Operations from mail details screen of microSD card :  
- Registering from Deco-mail may be unavailable.
- When multiple addresses are listed in the mail text, you may not be able to add them.

## ◆ Registering URL as bookmark

If there is a URL in the text of the mail, you can directly register the URL from the message details screen.

1  ▶  or  ▶ **Select a folder ▶ Select a mail ▶ Place the cursor on the URL and**    ▶ **Select a folder to register in**

The next procedure →P163 Step 2 in "Registering in Bookmark"

### ✓INFORMATION

- You can operate also from the SMS details screen of UIM.
- Registering from Deco-mail may be unavailable.

## Mail settings

### Setting mail function of FOMA terminal

#### ◆ Sorting mail automatically into designated folders <Sort method>

You can set sort methods and automatically sort received/sent mail to specified folders.

- Up to 30 methods for received mail and sent mail can be registered.
- Ordinary mails can also be sorted to the folder for Message i-apppli, but message i-apppli sorting method takes precedence.

#### ❖ Setting whether to sort automatically <Auto-sort ON/OFF>

  **2** ▶ **1** ▶ Set the required items ▶ 

**Inbox auto sort** : Set if you sort received mails.


**Outbox auto sort** : Set if you sort sent mails.

#### ❖ Setting sort methods


- To set and activate sort method, set Auto-sort ON/OFF to "ON". →P205
- Sent/Received mails are not sorted.


  **2** ▶ **2** or **3**




Registered sort methods  
(in the order of priority)




- Icon definitions :

 : Mail address (Outbox sorting)

 : Mail address (Inbox sorting)


 : Subject  : Ph.book number  : Ph.book group

 : Not in phonebook  : No method

## 2 ▶ Set sort rule

### Specifying Mail address :

Sort mails from specified mail addresses. The mail address specifies the entire address including the character succeeding symbol @. Addresses exceeding 50 one-byte characters cannot be specified.

- If you add and specify the same mail address in FOMA terminal and UIM phonebooks, it is sorted as the mail address of FOMA terminal phonebook.
- If the specified mail address is i-mode terminal, it is sorted even if it is specified with the domain (@docomo.ne.jp) omitted. However, if the address is "Phone number @docomo.ne.jp", add only the mobile phone number excluding the domain (@docomo.ne.jp).
- When specifying phone numbers, you can sort SMS as well.
- To select from the mail logs
  - ① **1** ▶ **1** or **2** ▶ Select mail logs
- To select from phonebook
  - ① **1** **3** ▶ Select the phonebook data
- To enter directly
  - ① **1** **4** ▶ Enter a mail address ▶ 

### Specifying Subject :

Sort mail having a subject that includes the specified characters (up to 100 two-byte (200 one-byte) characters).

- You cannot sort SMS by subject.

① **2** ▶ Enter the subject ▶ 

### Specifying Ph.book number :

Sort mail by mail address or phone number of the specified phonebook number in FOMA terminal phonebook. i-mode mail are sorted by checking mail address with that in the phonebook as sort method. SMS are sorted by checking phone numbers with that in the phonebook.

① **3** ▶ Enter the phonebook number ▶  ▶ 

### Specifying Ph.book group :

Sort mail by mail address or phone number saved in the group of the phonebook.

① **4** ▶ **1** or **2** ▶ Select a group

### Specifying Not in phonebook :

Sort mail from mail address or phone number not saved in the phonebook.

① **5**

**Specifying No method :**

Sort all mail into the folder specified in Step 3 without setting rule.


①  

**3 Select the folder to sort**

- When the folder for Message i-appli is selected, a message appears notifying the mails in the selected folder is used for the i-appli. Select "Yes" to set the folder for sorting.

**4 Select a priority level**

A new method is added to the selected row.













































- To add the first method, select "Add last".
- Methods are sorted sequentially from the one with the highest priority level.
- When registered methods are changed, "Move to last" is displayed instead of "Add last".

**✓INFORMATION**

- If multiple conditions are set, judgment is made from the condition with higher priority and sorted to the folder that matched for the condition first. A mail that was not matched for any condition is saved in the "Inbox" or "Outbox" folder.





**❖Setting sort methods from sent/received mails**

1                      **Select a folder ▶ Place the cursor on the mail and**                     **Check the saved contents** 















The next procedure→P206 Step 3 and the following steps in "Setting sort methods"

- When Auto-sort ON/OFF is "OFF", a confirmation screen for setting to "ON" appears.





**✓INFORMATION**

- Operations from the mail details screen :    

**❖Checking, changing or deleting sorting methods****<Example> Checking**

1          **or**     

**2 Select sorting rule****Changing sort methods :**

① **Place the cursor on the sort method and**    

Operations for specifying sort method→P205 Step 2-4 in "Setting sort methods"


② "Yes"

**Changing sort priority : Place the cursor on the sort method and**

         **Select the position to move to**

- To move to the end of the list, select "Move to last".

**Deleting :**














① **Place the cursor on the sort method and**         

- When "Delete all" is selected, perform authentication.



② "Yes"

**◆ Setting mail signatures <Signature>****❖Setting whether to insert signature automatically**

You can set if you automatically insert the signature when composing, replying or forwarding mail.

1             

**❖Registering signature**

1                      **Enter the signature (up to 4,999 two-byte (9,998 one-byte) characters)** 

### ✓INFORMATION

- The background color set for the signature is not reflected when decorations and/or characters is already entered in the message text or when quoting the received mail to reply to or forward a mail.
- Signature is also counted as the number of characters of message text.
- Signature cannot be inserted in Decome-Anime.
- Signature cannot be inserted to SMS in the cases below.
  - In case of signature including characters that can not be inserted in the message text when Font type in SMS settings is "English"
  - When a signature has been decorated
  - When the text exceeds 70 characters by inserting signature

### ◆ Setting items of i-mode inquiry <Check msg option>

1 ▶ Select the item to check

- You cannot save unless you select any of the items.

### ◆ Setting to select and receive only necessary mail <Receive option>

1 ▶ or

- When setting to "ON", a message screen of inability of automatic reception appears. Press .

### ✓INFORMATION

- When Receive option is "ON", Chat mail is not available.

### ◆ Adding address to mail group <Mail group>

By registering multiple mail addresses in a mail group, i-mode mail can be sent to multiple receivers by a simple operation.

- Up to 20 mail groups can be added. Up to 5 mail addresses can be added for 1 mail group.

1

2

Creating a mail : ▶ Edit the mail

Editing mail group names : Place the cursor on the mail group and

Copying mail group names : Place the cursor on the mail group and

Deleting mail group : Place the cursor on the mail group and ▶

or ▶ "Yes"

- When "All items" is selected, perform authentication.

Operating mail address registered in a mail group : Select a mail group ▶ Go to Step 5

### 3 Enter the mail group name (up to 8 two-byte (16 one-byte) characters) ▶

- Press to add other mail group continuously.

### 4 Select a mail group for registering a mail address

▶ Set the required items

Address Type : Set "TO", "CC" or "BCC".

Address : Up to 50 one-byte characters can be entered.

- When entering from mail logs or phonebook, press , and press - , and select a destination.

Editing registered mail address : Place the cursor on the mail address (or name) and ▶ Edit

Deleting a registered mail address : Place the cursor on the mail address (or name) and ▶ "Yes" ▶ Go to Step 7

Displaying details of registered mail address : ▶ When finishing checking

6

- To add another mail address, repeat the operation from Step 5.

7

### ✓INFORMATION

- If no address type is set for TO, mail cannot be sent.

## ◆ Setting whether to quote message when reply <Reply format>

You can set if you quote the body of the message when replying to an i-mode mail or SMS. And, you can set the type of quote characters added to the quoted message.

### 1 [☐] [≡] [4] [1] ▶ Set the required items ▶ [📧]

**Quote** : Set if you quote message when replying to a mail.

**Quote characters** : Up to 1 two-byte (2 one-byte) characters can be entered.

- The quote characters are included in the total character count for the body of the message.
- When a character that cannot be sent has been set, the default quote character is used.

## ◆ Setting Quick reply <Activate quick reply>

You can set if you use Quick reply to reply to i-mode mail.

### 1 [☐] [≡] [4] [2] ▶ [1] or [2]

## ◆ Registering quick reply format <Quick reply presets>

- Up to 5 items can be registered.

### 1 [☐] [≡] [4] [3]

### 2 Selecting a format ▶ Enter a text (Up to 20 two-byte (40 one-byte) characters) ▶ [📧] ▶ "Yes"

**Viewing the message text** : Place the cursor on the message text and [📧].

**Deleting a format** : Place the cursor on the text and [ME] [1] ▶ "Yes"


**Resetting all formats** : [NE] [2] ▶ Authenticate ▶ "Yes"

**Adding new format** : "<New reply format>" ▶ Enter a text ▶ [📧]

## ◆ Setting display style of mail list <Message list>

The display style of the list of mails in Inbox and Outbox can be set.

**<Example> Received mail list displayed when List style is "2 row (addr+sub) ", and Display preview is "Yes"**

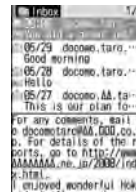

### 1 [☐] [≡] [6] [5] ▶ Set the required items ▶ [📧]

**List style** : Set display style.

**Display preview** : Set if you display message under the received mail list.

**Auto status change** : When all texts are displayed under the received mail list, set if you change them to read.

### ✓INFORMATION

- The list display style of Unsent messages and SMS of UIM are 2 rows regardless of this setting and Display preview is not displayed.
- For the display style of mail search result screen, Display preview is not displayed regardless of this setting.
- When setting Auto status change to "ON", selecting "Unread item only" from By display type and displaying the received mail list, the mail is not set to Read even if all the message text is displayed under the received mail list.

## ◆ Setting if you receive attachments automatically <Incoming msg. attach>

You can set in advance if you receive files attached to i-mode mail depending on file types.

- Files set not to be received automatically are the received as receive option attachment files. →P193

**1** **6** **3** ▶ **Select a file item to receive** ▶

- "Tool data" indicates the data of phonebook, bookmark and schedule.
- "Other" indicates Excel, Word, PowerPoint or other data.

### ✓INFORMATION

- Images or melodies attached to message text are automatically received regardless of this setting.

## ◆ Setting if you play melodies or sound effects automatically <Attachment auto-play>

You can set if you automatically play melody or sound effect when displaying the screen below.

- Details screen of i-mode mail or MessageR/F attached melody
- Details screen of i-mode mail or MessageR/F that melody is attached to the message text
- Details screen of i-mode mail that Flash graphics with sound effect is pasted to the message text
- Screen that Flash graphics of the message text of Decome-Anime with sound effect is played

**1** **6** **4** ▶ **1** or **2**

### ✓INFORMATION

- When a received mail, sent mail, mail template or MessageR/F with an attached melody is displayed with "Auto play" set, the attached melody is played once with the volume set in Melody effect sound of Adjust volume. When multiple melodies are attached, the melodies are played sequentially. Press to stop playing the melody halfway.
- When setting to "Auto play" if displaying Decome-Anime with sound effect, it is played at the volume set by Melody effect sound of Adjust volume. Press to stop playing. If a melody is attached to the mail, only the melody is played. If displaying the preview screen for creating Decome-Anime with sound effect, the retry screen of sent/received Decome-Anime or Decome-Anime template details screen, sound effect is played regardless of this setting.
- When MessageR/F is automatically displayed, the melody is not automatically played even with "Auto play" set.

## ◆ Selecting type of mail to display <By display type>

You can display only the mails of specified type in the received and sent mail lists temporarily. When the list display is closed, sorting is restored to "Display all items".

- You cannot select the display type for unsent messages and SMS of UIM.

**1** ▶ **1** or **5** ▶ **Select a folder** ▶ **7** **2** ▶ **1** or **2**

Mails of the selected display type are displayed.

- For received mail, you can also select "Read item only" and "Protected item only".
- For "Read item", protected received mails are not displayed.

## ◆ Changing mail font size <Font size>

You can change the font size to display mails from among the 5 types of "Larger" (56 dots), "Large" (48 dots), "Medium (standard)" (40 dots), "Small" (32 dots) and "Smaller" (24 dots).

- This item is set to "Medium (standard)" by default.
- The font size for Deco-mail pictogram (Pictogram D) is not changed.


**1** ▶ **1** or **5** ▶ **Select a folder** ▶ **Select a mail** ▶ **3** **1** ▶ **1** - **5**

### ✓INFORMATION

- Operation from MessageR/F details screen : **6**
- Operation from the details screen of mail template or SMS in UIM : → "Display" → "Font size"
- Operation from details screen of received mail, sent mail or unsent mail of microSD card : **3**
- The changed font size remains until the setting is changed again.
- This setting is reflected to Mail view in Font size.
- Font size for creating or editing a mail can be changed by Font size. →P113

### ◆ Setting mail reception notification for terminal in operation <Display priority>

You can set if you display a receiving screen, reception result screen or Auto sending screen by priority when i-mode mail, SMS or MessageR/F is received during FOMA terminal operation.



**Continue operation** : Display none of the receiving screen, reception result screen and sending screen.

**Show message** : Display the receiving screen, reception result screen and sending screen.

**Open:Cont/Close:Show** : Continue operation when FOMA terminal is open and prioritizes reception notification when the terminal is folded.

### ✓INFORMATION

- When "Continue operation" is set while displaying the menu, receiving or reception result screen appears, the ring tone sounds and the light go on. And, Auto-sending screen also appears.
- Even with "Show message" set, no receiving or reception result screen appears and none of ring tone and light operate when i-mode mail, SMS or MessageR/F is received during voice call. Camera activated, playing streaming-type i-motion, i-appli operation, alarm sounding or Area Mail reception. The sending screen does not appear either.

### Receive MessageR/F

#### When MessageR/F is received


- Savable number →P471

#### 1 Receive MessageR/F

and (blue) or (green) blink and "Receiving messages..." appears. MessageR/F ring alert sounds, the light turns on or blinks, and the reception result screen appears.

The received MessageR/F is saved in FOMA terminal.

- : Cancel receiving  
May be received depending on the reception conditions.

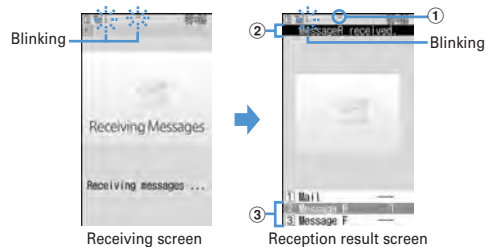

#### ① Icon

(blue) : Unread MessageR exist (green) : Unread MessageF exist

#### ② Reception result ticker

#### ③ The number of received MessageR/F







- The contents of unread MessageR/F are displayed after the reception result screen appears, and if you do not press any key for about 15 seconds, the previous screen reappears.

#### When reception has failed

"X" appears on the right side of "Message R" or "Message F" on the reception result screen. To receive again, perform Check new message.




**INFORMATION**

- When multiple mail and/or MessageR/F are received at the same time, the terminal operates depending on the conditions set for the mail or MessageR/F received last.
- When MessageR/F is received, the MessageR/F in the i-mode Center is deleted.
- In the cases below, received MessageR/F is stored in the i-mode Center.
  - When the power is OFF
  - During a videophone call
  - Accessing Data Center
  - During a PushTalk session
  - In Self mode
  - In Omakase Lock
  - During FirstPass center connection
  - When reception has failed
  - Out of i-mode service area
  - When receiving SMS
  - Infrared communication/iC transmission
  - When the memory space is filled with MessageR/F unread or protected
- When the memory space is not enough or when exceeding the savable number, a new MessageR/F overwrites the chronologically oldest message except for unprotected unread messages.
- If there is not enough memory space available because the memory space is filled with unread and protected MessageR/F, reception of MessageR/F is stopped,  (red) or  (red) appears on the screen. To receive, displaying the contents of unread MessageR/F (→P212), deleting unnecessary MessageR/F (→P213) or unprotecting (→P213) is required.
- If there are remaining MessageR/F in the i-mode Center,  or  appears. It may not appear even when there are MessageR/F. When the i-mode Center reaches the maximum number of mail items that can be stored, the icon changes to  or .

**Displaying new MessageR/F**

- On the reception result screen, **2** or **3**



- Press **1** to display i-mode mail.
- The received MessageR is saved in "MessageR" folder. The received MessageF is saved in "MessageF" folder.

**2 Select MessageR/F**

Playing when a melody is attached →P209  
 Displaying MessageR/F →P212

**Displaying MessageR/F automatically <Auto-display>**

You can set if you display the contents (for about 15 seconds) when the screen returns from the reception result screen to the screen prior to the reception.

-   **6** **6** ▶ **1** - **5**

**INFORMATION**


- If you do not press any key during automatic display, MessageR/F is saved in unread state.
- Auto-display is available only when received automatically on the stand-by display.

## MessageR / MessageF

### Displaying MessageR/F stored in FOMA terminal

- 1 [M] [1] ▶ "MessageR" or "MessageF" ▶ Select MessageR/F to display

#### ◆ MessageR/F list/Details screen

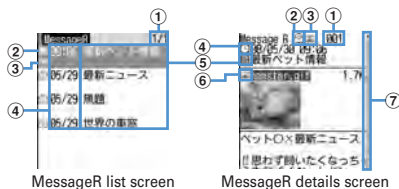

- 1 Page/Total pages (list screen), MessageR/F No. (details screen)
- 2 Status icon  
List screen  
[M]: Unread [R]: Read [P]: Protected  
Details screen  
[M]: Read [P]: Protected
- 3 Attachment icon  
List screen  
[I]: Image [M]: Melody [T]: ToruCa [M]: Multiple files are attached  
Details screen  
[I]: Image [M]: Melody [T]: ToruCa [M]: Multiple files are attached
- 4 Reception date and time
  - For list screen, the time is displayed on the reception day and the date is displayed on the other day.
- 5 Title

#### ⑥ Attachment icon (Detail)

- [I]: Image
- [M]: Image (Cannot be attached to mail nor output from FOMA terminal)
- [X]: Image (Data error) [M]: Melody
- [M]: Melody (Cannot be attached to mail nor output from FOMA terminal)
- [M]: Melody (Data error) [T]: ToruCa [M]: ToruCa (Data error)

#### ⑦ Scroll bar

- If pressing [M] for 1 second or more when all the lines are not displayed, the current position relative to the whole display appears temporarily. If pressing [M] [7] on the MessageR/F details screen, you can switch display/hide.
- Font size of the MessageR/F details screen can be changed.→P209


#### ◆ Displaying/Saving attached files

### 1 Display the list of MessageR/F

Icon definitions→P212 "MessageR/F list/Details screen"

### 2 Select MessageR/F with an attached file

### 3 Place the cursor on the file name of the attached file to save and



The next procedure for image→P166 Step 2 and the following steps in "Downloading images"

The next procedure for melody→P167 Step 3 in "Downloading melodies"

- For ToruCa, the selection screen of the saving destination appears. The save destination becomes "ToruCa" of ToruCa when [1] is pressed and "ToruCa" of microSD card when [2] is pressed. Only one of the destinations above is enabled for some ToruCa.
- ToruCa exceeding 1,024 bytes can be saved only to microSD card.

#### Displaying/Playing : Select a file name

- When an attached file is an image, Display/Not display of image is switched.
- ToruCa exceeding 1,024 bytes cannot be displayed.

Displaying title : Place the cursor on the file and [M] [5] [3]

- An attached file of image cannot be operated.

### ✓INFORMATION

- Saving image in the message text or background image : **[M]** **[4]** → **[1]** or **[2]** →  
Select the image to save
- For some ToruCa, saving is enabled only once.

### ◆ Protecting MessageR/F <Protect message>



By protecting, they can be prevented from being erroneously erased or being overwritten because of the lack of the memory space.


- Protectable number → P471
- Unread MessageR/F cannot be protected.

<Example> Protecting 1 item


#### 1 Display the list of MessageR/F

#### 2 Place the cursor on the MessageR/F and **[M]** **[2]** **[1]**

The MessageR/F is protected and the icon changes from  to .

Protecting selected items : **[M]** **[2]** **[2]** ▶ Select MessageR/F ▶ 

Unprotecting 1 item : Place the cursor on the MessageR/F and **[M]** **[2]** **[3]**

Unprotecting selected items : **[M]** **[2]** **[4]** ▶ Select MessageR/F ▶ 

Unprotecting all items : **[M]** **[2]** **[5]**

### ✓INFORMATION

- Operation from MessageR/F details screen : **[M]** **[1]**


### ◆ Deleting MessageR/F <Delete message>

<Example> Deleting 1 item

#### 1 Display the list of MessageR/F

#### 2 Place the cursor on the MessageR/F and **[M]** **[1]** **[1]**

Deleting read items only : **[M]** **[1]** **[2]**

Deleting selected items : **[M]** **[1]** **[3]** ▶ Select MessageR/F ▶ 

Deleting all items : **[M]** **[1]** **[4]** ▶ Authenticate

#### 3 "Yes"

### ✓INFORMATION

- Operation from MessageR/F details screen : **[M]** **[2]**

### ◆ Selecting type of MessageR/F to display <Display by type>

You can display only the MessageR/F of specified type in the MessageR/F list temporarily. When the list display is closed, sorting is restored to "Display all".

#### 1 Display the list of MessageR/F ▶ **[M]** **[3]** ▶ **[1]** - **[4]**

- Protected MessageR/F is not displayed when selecting "Display read only".

### ◆ Sorting MessageR/F <Sort>

The MessageR/F list can be sorted temporarily.

#### 1 Display the list of MessageR/F ▶ **[M]** **[4]** ▶ **[1]** - **[3]**

### ✓INFORMATION

- When a mixture of bookmarks with titles containing one- and two-byte characters, alphabetic characters and/or kanji and those displayed with URLs are sorted "By title", the result may not be in the order of Japanese syllabary.

## Early Warning "AreaMail"

This is a service that you can receive emergency earthquake flash report etc. delivered by the Meteorological Agency.

- The receiving setup is required to use Area Mail. →P215
- Area Mail can be received even if you do not subscribe to i-mode.
- Area Mail cannot be received in the cases below. And, Area Mail that could not be received cannot be received later.
  - In Omakase Lock
  - In Self mode
  - During accessing Data Center
  - In International Roaming
  - While updating software
- Area Mail may not be received in the cases below. And, Area Mail that could not be received cannot be received later.
  - During voice call
  - During videophone call
  - During PushTalk session
  - In i-mode communication
  - In data communication




## Receiving Area Mail

### When receiving Early Warning "AreaMail"

- Savable/Protectable number →P471




#### ◆ When receiving Area Mail of Earthquake Early Warning

✉ turns on, the light blinks in red, the dedicated buzzer alarm sound is emitted, the vibrator operates and the contents display screen appears.

- The contents display screen is cleared by pressing any of , , .
- The vibrator operates with the operating pattern of "Sync melody".
- In Silent mode, FOMA terminal operates depending on the setting of Silent mode or Personalized silent mode. Note that, even with Vibrate alert of Silent mode or Personalized silent mode "OFF", vibrator operates in "Sync melody". And, if any item in sound setting of Personalized silent mode is set to other than "Silent", the dedicated buzzer alarm sound is emitted.

#### ◆ When received an Area Mail except Earthquake Early Warning

✉ turns on, the light blinks in red, the dedicated Area Mail ring alert sounds, the reception completion screen or contents display screen appears.

- It depends on the setting of the distributor which of the distribution completion screen or the contents display screen appears when receiving an Area Mail.
- The contents display screen is cleared by pressing any of , , , and the reception completion screen is cleared by pressing any key or doing nothing for approximately 15 seconds.
- The volume of the Area Mail ring tone depends on the alert volume in Mail/Msg alert vol. of Adjust volume.
- The ring time of the Area Mail ring tone depends on Ring time (sec) of Mail ring alert of Mail/Msg ring alert of Ring alerts & Sounds.
- In Silent mode, FOMA terminal operates depending on the setting of Silent mode or Personalized silent mode.

#### ✓INFORMATION

- Area Mail is saved in the folder of Inbox. Regardless of the memory space of whole Inbox, when exceeding the savable number of Area Mail, the unprotected received Area Mail is overwritten chronologically.

## Area Mail

### Setting Early Warning "AreaMail"

#### ◆ Setting if you use Area Mail <Receive setting>

- 1 [M] [9] [2] [1] ▶ Check "Notice" ▶ Select "Use Area Mail function?" field ▶ [1] or [2] ▶ [M]

#### ◆ Adding/Deleting Area Mail to use <Receive entry>

- Up to 20 items can be added.

<Example> Save

- 1 [M] [9] [2] [2]
- 2 [M] ▶ Authenticate ▶ Set the required items ▶ [M]

**Area Mail name** : Enter any name in up to 15 two-byte (30 one-byte) characters.

**Message ID** : Enter ID of 4 digits provided by the service provider.

- Receive entry is not required for receiving emergency information (emergency earthquake flash report, disaster/evacuation information) only.

**Editing** : Place the cursor on the Area Mail name, and

- [M] [1] ▶ Authenticate ▶ Set the required items ▶ [M]

**Deleting** : Place the cursor on the Area Mail name and

- [M] [2] ▶ Authenticate

- "Emergency information" saved by default cannot be edited or deleted.

#### ◆ Setting the ring time of the buzzer <Beep time>

- 1 [M] [9] [2] [3] ▶ Enter the time (1-30 sec.) ▶ [M]


## Creating and sending chat mail

### Creating and sending chat mail

Mail can be sent and received to/from multiple addresses like making conversation on one screen.

- Chat mail is not available when Receive option is "ON", when the memory space is not enough or when 2in1 is ON in B mode.
- When chat mail is sent to a terminal incompatible with chat mail, the receiver's terminal receives a mail with title "チャットメール (Chat mail)".
- A mail that "チャットメール (Chat mail)" is included in the title can be received as a chat mail.

#### ◆ Reading the chat mail screen

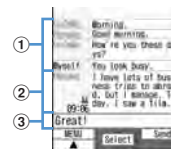

Chat mail screen

##### ① Send/Receive logs

Up to 100 logs from the latest one are displayed.



- When ▲ and/or ▼ is displayed in the guide area, you can scroll the screen by pressing [G]. Press [F2] or [M] to scroll the screen by pages. Pressing [M] [5] [1] displays the first line and pressing [M] [5] [2] displays the last line.

- The sender's nickname appears on the left side.

##### ② Details field

Display details of the latest chat mail or the chat mail at the cursor position. The number of the characters that can be displayed is up to 250 two-byte (500 one-byte) characters.

- When not all characters can be displayed, ◀ ▶ appear at the left and right bottom of the field. The page in the field can be changed by [M].



- The sender's nickname and the date or time the mail was sent/received (time for the current day and date for another day) appear on the left side.  appears for a mail that contains unregistered broadcast address as a member. When mail is sent or received while staying overseas (except GMT+09:00),  may appear.

### ③ Message text



## ◆ Adding/Editing chat member <Chat member setting>


- Up to 5 items can be saved.

### 1 ▶ "Yes"

- When any member is already registered, the chat mail screen appears. Press  .

### 2




**Deleting 1 item :** Place the cursor on the member and   ▶ "Yes" ▶ Go to Step 4

**Displaying the details :**   ▶ When finishing checking, 

**Switching all members to mail group :**   ▶ Select a mail group ▶ "Yes" ▶ Go to Step 4

### 3 Set the required items ▶

**Address :** Up to 50 one-byte characters can be entered.

- If a party to be saved has secret code set, save the party by searching the phonebook that the party's secret code is saved or by entering only the phone number of the party.
- When entering from mail logs or phonebook, press , and press  , and select a destination.

**Nickname :** Up to 4 two-byte (8 one-byte) characters can be entered.

- When the mail address in the address field matches the mail address saved in the phonebook, the saved name (the first 4 two-byte (8 one-byte) characters) is displayed.
- When no nickname is entered on the chat mail screen, on the chat mail screen till the 8th characters preceding symbol @ are displayed.

**Font color :** Select color for nickname.

### 4

- Press  and repeat Step 3 to add another member.

## ◆ Setting personal data

Your nickname and the font color can be set to display on the chat mail screen.

### 1 On the Chat mail screen, ▶ Set the required items ▶

**Nickname :** Up to 4 two-byte (8 one-byte) characters can be entered.

- "Myself" appears when no nickname is entered.

**Text color :** Select color for nickname.

## ◆ Creating and sending chat mail

- When sending chat mail, all registered members are set as receivers. Members can be selected on the send screen. All members are selected at the end of Chat mail or when the member information has been changed.
- The sent chat mail is saved in a folder of Outbox.

### 1

- Press "Yes" when a confirmation screen for adding member appears asking if you add members.

### 2 Select the message text field ▶ Enter the message text (up to 250 two-byte (500 one-byte) characters)

**Copying and pasting the text from the chat mail log :** Place the cursor on the chat mail to copy and  




Method of copying/pasting characters → P383

**Selecting members to send to :**   ▶ Select members ▶ 

### 3

- When the chat mail is sent correctly, it is displayed in the chat mail screen.

**Replying to all broadcast address members of the received mail :**

## ✓ INFORMATION

- If sending of chat mail failed or chat mail was not sent, it is saved in "Unsent" folder of Unsent messages. In "Unsent" folder, only one chat mail item can be saved. If sending fails again, the chat mail saved in "Unsent" folder is overwritten. And, the chat mail saved in "Unsent" folder is displayed in the message text field when Chat mail has started. To resend chat mail, send from the chat mail screen.

## ◆ Receiving chat mail <Receiving chat mail>

### ❖ When Chat mail is not activated

When chat mail or mail with a title containing "チャットメール (Chat mail)" is received, it is saved in a folder of Inbox.


- When chat mail is received from a party registered as a member, starting Chat mail reads the chat mail automatically to the chat mail screen.
- When receiving from a party not registered as a member, register that party as a member in the steps below to read the chat mail to the chat mail screen.

#### 1 ▶ Select a folder ▶ Place the cursor on the received mail and ▶ "Yes" ▶ Select members to save ▶ Edit

Setting chat member→P216 Step 3 and the following steps in "Adding/Editing chat member"

#### 2 "Yes"

### ❖ INFORMATION

- Operations from received mail details screen :  →"Display"→"Start chat mail"  
You can operate sent mail with "チャットメール (Chat mail)" contained in the subject in the same way.
- Deco-mail, HTML mail received from a PC etc. cannot be read into the chat mail screen.

### ❖ When Chat mail is activated

When receiving a chat mail or mail with a title containing "チャットメール (Chat mail)" from the party registered as a member, a confirmation screen informing the log is updated appears, and the mail is read into the chat mail.

- When FOMA terminal is open, even if you receive chat mail, mail or MessageR/F, ring alert or vibrator does not operate.
- When receiving from a party not registered as a member, the mail is saved in a folder of Inbox.

Follow the operations in "When Chat mail is not activated" to read the mail into the chat mail screen.→P217

### ❖ When receiving chat mail stored in i-mode Center

You can make inquiry for any chat mail delivered while you were out of service area, the power was turned OFF or other cases. At this time, if the i-mode Center stores i-mode mail, it is received at the same time.


#### 1 On the chat mail screen,


If there is chat mail, a message screen appears indicating that the log is updated and the received chat mail is added on the chat mail screen.

### ❖ Displaying broadcast addresses



Broadcast addresses of received chat mail, if any, can be displayed for check.

#### 1 On the chat mail screen, place the cursor on the chat mail and

- For other receivers of broadcast address not registered as a member, "Not recorded" appears in the nickname field; and, if a mail address saved in the phonebook, the name is displayed. Press  to display mail address.


**Adding an unrecorded receiver of broadcast address to a member :** On the broadcast address list screen, place the cursor on the broadcast address and .

The next procedure→P216 Step 3 and the following steps in "Adding/Editing chat member"

**Copying broadcast address :** On the broadcast address list screen, place the cursor on the broadcast address and  

## ❖ Deleting all data of the chat mail log



- Unprotected chat mail in Inbox or Outbox folder are deleted.

1 On the chat mail screen,   ▶ "Yes"

### ✓ INFORMATION

- The procedure for replying to chat mail as i-mode mail is the same as that for i-mode mail.
- Even if the chat mail screen contains information (phone numbers, mail addresses or URL), Phone To (AV Phone To), Mail To, SMS To, Web To or i-appli To cannot be used. And, attached file is not displayed. If you end without deleting chat mail and display the chat mail from a folder of Inbox, these functions can be used.
- When chat mail is deleted from the folder of Inbox/Outbox, the nickname is displayed as "-----", date or time as "--/--" and the text as "Deleted." on the chat mail screen.
- The chat mail displayed on the chat mail screen is set as read mail in the folder of Inbox.

## ❖ Quitting Chat mail

1 On the chat mail screen,  or  ▶ "Yes" or "No"

- Select "Yes" to delete all chat mail items. In that case, unprotected chat mails in Inbox or Outbox folder are deleted.
- Select "No" to display the previous chat mail next time you start Chat mail.





## Creating and sending SMS


### Creating and sending SMS

You can send a character message to a mobile phone number as the destination.

- SMS can be sent to or received from parties using overseas service providers except DoCoMo. For the service areas and overseas service providers, refer to the DoCoMo website.
- Savable number → P471
- Reading received/sent/unsent SMS list/details screen → P196

<Example> Creating/Sending by entering address directly

-     ▶ Select the receiver field
- "Direct input" ▶ Enter the address (up to 20 one-byte numeric characters)

- For a destination using an overseas service provider except DoCoMo, you can send SMS after entering 21 characters maximum including "+".
- For a destination using an overseas service provider except DoCoMo, enter "+" (Press  for 1 sec. or more), "country code" and "mobile phone number of the destination" in this order or enter "010", "country code" and "mobile phone number of the destination" in this order (Also enter "+" and "010" when replying to SMS from an overseas sender). Omit "0", if any, at the beginning of the mobile phone number.

Entering from mail logs : Select "Sent msg log" or "Received msg log" ▶ Select a log

Entering by searching phonebook : "View phonebook" ▶ Search the phonebook ▶ Select a phonebook entry to send SMS

- Select the message text field ▶ Enter the message text

- When "Japanese" is set for Font type in SMS settings, up to 70 characters can be entered. When "English" is set, up to 160 characters including one-byte alphanumerics and symbols (except for ` , , [ , ] , ^ , \* and ` ) can be entered.

Inserting signature :   

- 



- To save SMS without sending it, if pressing **[M] [2]**, it is saved in "Unsent" folder of Unsent messages, and the confirmation screen for pasting Shortcut icon appears.

### ✓INFORMATION

- When sending is completed correctly, the SMS is saved in a folder of Outbox. When the memory space is not enough or when exceeding the savable number, the unprotected sent mails are overwritten chronologically.
- Depending on the radio wave conditions, font type or the terminal of the other party, characters may not be displayed correctly at the receiver side.
- The type of font and whether to receive SMS report request are set in SMS settings beforehand. You can also change the settings of SMS report request and Keep in SMS center after starting creation of SMS.
- You can insert a line feed by pressing **[↵]** while entering the message text (except number entry mode), but the line feed is replaced with a blank for some terminals of the other party.
- When Font type is Japanese, if you use one-byte katakana, the receiver may not be able to display them correctly. If you use pictograms, ♥ is replaced with ♡, and each of pictograms except ☺ is replaced with a space.
- When Font type is English and symbols ( | ^ { } [ ] ~ ¥ ) are entered, the number of characters that can be sent is reduced. Moreover, symbol ( ^ ) can be entered and sent, but it is replaced with a space on the receiver's terminal.
- When Font type is set to "Japanese", if you enter only one-byte alphanumeric or one-byte symbols and send, the Font type is changed to "English" before sending.
- Saved in "Unsent" folder of Unsent messages when sending failed.
- If setting SMS report request to "Request" and send SMS, you receive SMS report that notifies you that the other FOMA terminal received the SMS. SMS report request is saved in the folder of Inbox.
- Even if Activate/Deactivate of caller ID notification is "Not notify", caller ID is sent to the receiver when SMS is sent.
- When the memory space of Unsent messages is not enough or when exceeding the savable number, SMS cannot be created. Delete unnecessary i-mode mail and/or SMS from the folder of Unsent messages.
- With the 2in1 service activated, you cannot send SMS for Number B.

### ✦Editing/Sending sent or saved SMS


Sent SMS and SMS saved before sending or failed to send can be edited or sent.  
→P189

## Receive SMS

### When SMS is received

- Savable number→P471


#### 1 Receive SMS

 blinks and "Receiving message..." appears.


Mail ring alert sounds, the light turns on or blinks, and the reception result screen appears.

The received SMS is saved in a folder of Inbox.

- While receiving SMS, **[C]** : Cancel receiving  
May be received depending on the reception conditions.

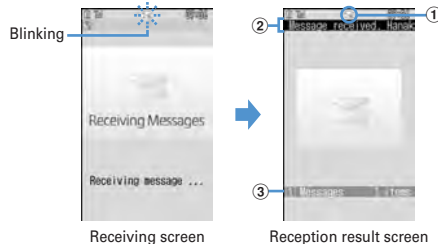

#### ① Icon

 : Unread SMS exist  : Unread i-mode mail and SMS exist

#### ② Reception result ticker

#### ③ Number of received SMS

- If you do not press any key for about 15 seconds after the reception result screen appears, the previous screen automatically reappears.

**Reading received SMS immediately** : On the reception result screen,





**[1] ▶ Select a folder ▶ Select SMS**

- You can reply to and/or forward received SMS. →P192

**When reception has failed**

"X" appears on the right side of "Messages" on the reception result screen. To receive again, perform check new SMS.

**✓INFORMATION**

- When multiple mail and/or MessageR/F are received at the same time, the terminal operates depending on the conditions set for the mail or MessageR/F received last.
- When the memory space is not enough or when exceeding the savable number, the unread or unprotected received mails are overwritten chronologically.
- While receiving i-mode mail, MessageR/F or Area Mail, automatic reception of SMS is unavailable. Perform Check new SMS.
- When SMS is received from parties of overseas service providers except DoCoMo, "+" is prefixed to the mail address of the sender. When the phone number with prefix "+" is saved in phonebook, the name saved in the phonebook entry is displayed.
- When Message scan of Set scan is "Valid", if you receive and try to display SMS with a phone number or URL, a warning message screen appears.
- If there is not enough memory space available because it is filled with unread and protected mails, reception of SMS is stopped and  or  appears on the screen. To receive, changing unread mail to read mail (→P201), displaying the contents of unread mails (→P195), deleting unnecessary mails (→P201) or unprotecting (→P201) is required.
- When UIM already contains the maximum number of SMS (20 items), SMS may not be received even if there is space available in Inbox folder. At this time,  or  appears on the screen. Move to FOMA terminal (→P222) or delete SMS in UIM. → P222
- If received SMS specified to save to UIM, it is saved directly to UIM. Note that, when the number of SMS saved in UIM has reached 20 items, SMS cannot be received. Delete unnecessary SMS and perform Check new SMS.

**Check new SMS****Checking for SMS**

**You can make inquiry for any SMS delivered while you were out of service area, the power was turned OFF or other cases.**

- Depending on the radio wave conditions, you may not be able to perform Check new SMS from SMS Center.

**✓INFORMATION**

- Receiving SMS may take time.

**SMS settings****Setting SMS**

**You usually do not need to change SMSC, Address and Type of Number settings.**

**1** **Set the required items**

**Font type** : Select the font type of the message to send. The maximum number of characters that can be sent differs by the font type.

**SMS report request** : Select if you request SMS report request when sending SMS.

**Keep in SMS center** : Select the storage period of sent SMS in the Short Message Center in cases the receiver cannot receive the SMS.

- When "0 day" is set, SMS is deleted from the SMS Center after resending of it is repeated for a certain period of time.


**SMSC** : Select SMSC when using SMS services except DoCoMo.

- When setting to "Others", enter a mail address of up to 20 one-byte characters in the Address field.

**Type of Number** : Select from "International" or "Unknown".

- If selecting "Others" in SMSC field and setting numbers for Address field, Type of Number needs to be set to "Unknown".

**✓INFORMATION**

- Operations from SMS creation screen :  **3**

In that case, only SMS report request and Keep in SMS center can be set. The settings are effective only for SMS being created.

- Settings of Font type, Keep in SMS center, SMSC and Type of Number are saved in UIM.

## SMS saved to UIM

## Saving SMS in UIM

## ◆ Moving/Copying SMS to UIM

- Unsent SMS cannot be saved in UIM.
- When moving or copying a sent SMS, if there are corresponding SMS report requests, they are moved or copied together. You cannot move or copy only sent SMS or only SMS report request.
- Savable number→P471

## &lt;Example&gt; Moving 1 item

1 [Envelope icon] ▶ [1] or [5] ▶ Select a folder

2 Place the cursor on the SMS and [ME] [4] [2] [1]

Moving selected items : [ME] [4] [2] [2] ▶ Select SMS ▶ [6]

Copying 1 item : Place the cursor on SMS and [ME] [4] [3] [1]

Copying selected items : [ME] [4] [3] [2] ▶ Select SMS ▶ [6]


3 "Yes"

## ✓ INFORMATION

- Operation from received mail details screen or sent mail details screen : [ME] [2] → [5] or [6]
- When protected SMS is moved/copied to UIM, its protection is canceled in the moving/copying destination.

## ◆ Displaying SMS of UIM

1 [Envelope icon] [9] [1] ▶ [2] or [3]



## ① Page/Total pages

## ② Status icon

[Envelope icon] : Unread (able to reply) [Envelope icon] : Unread (unable to reply) [Envelope icon] : Read (able to reply)

[Phone icon] : Read (unable to reply) [Envelope icon] : SMS report request, missed call notification, recorded message notification

[Error icon] : SMS error

## ③ Sent/Received date and time

The time is displayed on the reception day and the date is displayed on other than the reception day.

Note that except for sent SMS with SMS report request set, the sent date and time are deleted.

## ④ Sender/Receiver

When saved in the phonebook, the name is displayed.

## ⑤ Top of the message

The SMS report request is displayed as "SMS report request", Missed call notification as "Notify missed call" and Notify recorded message as "Answer videophone".

- Read/Unread icon in the list indicates whether SMS of UIM was displayed. The state of read/unread before moving or copying is also carried over.
- For SMS sent from an overseas sender, the sender address is preceded by "+".
- For the SMS which contains error, [Phone icon] or [Error icon] appears. For SMS with [Error icon] displayed, the reception date/time appears as "--/--" (only on the day of reception), and the sender or the top of the message is not displayed. SMS that [Error icon] is displayed is SMS that detail cannot be displayed.
- When SMS is received while staying overseas (except GMT+09:00), [Phone icon] may appear at the end of the receiving date and time.

## 2 Select SMS to display



### ① Icon

: Received (able to reply)  
 : Received (unable to reply)  
 : Sent SMS report request, missed call notification or recorded message notification  
 : SMS of UIM

### ② Mail No./No. of msgs

### ③ Icon

: Date and time  
 : Receiver  
 : Sender  
 : Sender (unable to reply)

The SMS report request is displayed as "SMS Center", the missed call notification as "DoCoMo SMS" and the recorded message notification as "DoCoMo MSG".

: Subject "Received SMS" "Sent SMS" "SMS report request" "Notify missed call" "Answer videophone"

- When sent SMS is moved or copied to UIM, the sent date and time are deleted from the sent SMS of UIM. Note that the sent date and time are displayed in the sent SMS with SMS report request set.
- For the SMS which contains error, appears instead of and except does not appear.
- When SMS is received while staying overseas (except GMT+09:00), may appear at the end of the receiving date and time.

### ✓INFORMATION

- From SMS of UIM, you can also reply to or forward received SMS, resend SMS already sent, change the font size, save in the phonebook, etc. The operation is the same as that of received/sent SMS.
- When performing reply/forward, resend, etc. from the SMS of UIM, the sent SMS is saved in a folder of Outbox of FOMA terminal.

## ◆ Moving/Copying SMS of UIM to FOMA terminal

- When moving or copying a sent SMS with SMS report request, the corresponding SMS report request is moved or copied to the folder of Inbox together. You cannot move or copy either sent SMS or SMS report request.

<Example> Moving 1 item to FOMA terminal

1 [9] [1] ▶ [2] or [3]

2 Place the cursor on the SMS and [3] [1]

Moving selected items : [3] [2] ▶ Select SMS ▶

Copying 1 item : Place the cursor on the SMS and [3] [3]

Copying selected items : [3] [4] ▶ Select SMS ▶

3 ▶ Select the destination folder ▶ "Yes"

### ✓INFORMATION

- Operation from SMS details screen of UIM : [2] → [1] or [2]
- When the memory space is not enough or when exceeding the savable number, SMS cannot be moved or copied. Unprotected i-mode mail and/or SMS, if any, are not overwritten. Delete unnecessary i-mode mail and/or SMS from folders of Inbox and Outbox.

## ◆ Deleting SMS of UIM

- When deleting a sent SMS, the corresponding SMS report request of UIM is also deleted together.

<Example> Deleting 1 item

1 [9] [1] ▶ [2] or [3]

2 Place the cursor on the SMS and [2] [1]

Deleting selected items : [2] [2] ▶ Select SMS ▶

Deleting all items : [2] [3] ▶ Authenticate

Deleting all items of SMS report request : [2] [4] ▶ Authenticate

3 "Yes"

### ✓INFORMATION

- Operation from the SMS details screen of UIM : [6]

# i-αppli

<b>i-αppli</b> .....	224
<b>Downloading i-αppli</b> .....	224
<b>Starting i-αppli</b> .....	225
<b>Starting i-αppli quickly</b> .....	236
<b>Automatically starting i-αppli</b> .....	236
<b>Starting i-αppli from site, mail or ToruCa</b> .....	<b>i-αppli To</b> 237
<b>Operating i-αppli stand-by display</b> .....	<b>i-αppli stand-by display</b> 238
<b>Managing i-αppli</b> .....	238
<b>Using various functions from i-αppli</b> .....	240

## i-αppli

By downloading i-αppli from sites, FOMA terminal can be used more conveniently. Direct registration to phonebook and schedule is available from some i-αppli, or Data Box including saving and obtaining image can be operated with some i-αppli.

And, since this FOMA terminal is compatible with large-capacity Mega i-αppli, you can play high-resolution 3D and long role-playing games.

- For details of i-mode, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

### ✓INFORMATION

- Any image or movie saved by i-αppli or i-αppliDX is saved in "i-mode", "Deco-mail picture" or "Deco-mail pict" folder of My Picture, "i-mode" folder of i-motion or added album respectively, or in the i-αppli. Any ToruCa saved by i-αppli is saved in "ToruCa" of ToruCa content.
- When ring tone is saved by i-αppliDX, it is saved in "i-mode" folder of Melody or in the i-αppli.


## Downloading i-αppli

You can download i-αppli from sites and store it in FOMA terminal.

- The maximum size of i-αppli that can be saved is 1 Mbyte.
- Savable number→P471


### 1 Displaying a site ▶ Select an i-αppli

The selected i-αppli is downloaded.

- While downloading, press  and select "Yes" to stop downloading.
- When downloading is terminated or communication is interrupted, a confirmation screen for resuming may appear. If selecting "Yes", downloading is resumed, and if selecting "No", a confirmation screen for partial saving appears when it is available. When partial saving is unavailable, the downloaded part is deleted. The rest of the i-αppli partially saved can be downloaded→P225 Step 3 in "Starting i-αppli"


### When Software info disp. is "ON"

A confirmation screen of i-αppli information and downloading appears.

- The detail information of the i-αppli to be downloaded can be displayed by pressing .

### Downloading i-αppli that uses the saved data, the serial number of your mobile phone/UIM/IC card or microSD card

Downloading confirmation screen appears.

- With "Guide" displayed on the guide area, press  to check details of the data used by the i-αppli.


### When the selected i-αppli is already downloaded.

A screen indicating that the data is already downloaded appears. When the new version of the i-αppli is released, upgrading confirmation screen appears. When already downloaded with another UIM, a confirmation screen for overwriting appears.

## 2 Select a destination to save

- Some i-αppli shows setting screens for Set stand-by disp. (i-αppli stand-by), Use network, Use location info. (Location usage setting), and/or Program guide key setting.  
Setting items→P227 Step 1 in "Setting operating condition of i-αppli"

## 3 "Yes" or "No"

- When setting Set stand-by disp. to "Yes", setting confirmation screen appears. If you select "Yes", i-αppli is set for stand-by display and if Show ticker of i-Channel ticker is "Yes", the ticker is canceled.
- When downloading i-αppli to use mail function with 2in1 ON in B mode, the site screen reappears after selecting the saving destination. When the setting screen is displayed, press  to return to the site screen.

### ✓INFORMATION

- When exceeding the savable number/area→P322
- Checking memory space→P321
- Downloading of i-αppli may be unavailable if memory space in the IC card is not sufficient (regardless of memory space in the i-αppli storage area) or the i-αppli to be downloaded is Osaifu-Keitai compatible i-αppli that uses the same services as those used by another Osaifu-Keitai compatible i-αppli already saved. Delete the i-αppli following instructions displayed on the screen. Note that, some types of i-αppli may not be displayed as ones to be deleted or may require to be started or downloaded again and the data in the IC card to be deleted.

## ◆ Downloading Message i-appli

When Message i-appli is downloaded, the folders for Message i-appli are automatically created in the folder list of Inbox, Outbox and Unsent messages. The automatically created folder name is set to the name of the Message i-appli downloaded, which cannot be changed.

- Up to 5 items of Message i-appli can be saved (included in the savable number, 300 of i-appli). When exceeding the savable number, follow the instructions on the screen and delete stored folder for Message i-appli.
- If Message i-appli that uses the same mail folder has already been saved in FOMA terminal, it cannot be downloaded.
- If a Message i-appli is tried to be downloaded again while only the relevant Message i-appli folder remains, a confirmation screen for using mail folder appears. If you do not use, download after deleting the mail folder.
- If a mail that supports Message i-appli to be downloaded has already been saved in FOMA terminal, a confirmation screen for moving to the folder created automatically when downloading appears.

## ◆ Setting whether to display i-appli information when downloading <Software info disp.>

1 [ME] [i-appli] 2 3 ▶ 1 or 2

## Starting i-appli

### 1 [OK] (1 sec. or more)

Displaying only Osaifu-Keitai compatible i-appli : [OS] [Osaifu-Keitai]

1 ▶ Go to Step 3

Displaying only GPS compatible i-appli : →P254

### 2 Select a folder

- Icon definitions

[Folder icon] / [Folder icon] : Stored folder by default with/without i-appli

[Folder icon] / [Folder icon] : Created folder with/without i-appli

### 3 Select i-appli to start



Graphical display

- Icon definitions (Only marks with \* are displayed in IC card content.)
  - [OS] : Osaifu-Keitai compatible i-appli
  - [iC] : IC card data transferred by iCお引こしサービス (iC transfer service)
  - [M] : Message i-appli [iDX] : i-appliDX
  - [Orange] (orange) : i-appli
  - [iA] / [iA\*] : i-appli setting available/currently set for i-appli stand-by display
  - [Auto] : Auto start set
  - [iA/Orange] (upper half in gray, lower half in orange)\* : i-appli partially saved
  - [iA/Gray] : i-appli unavailable due to UIM operation restriction.
  - [iA/Star] : i-appli of stopped condition by IP (Information Provider)
  - [SSL] : i-appli downloaded from SSL page
  - [iA/NoStart] : Unable to start when 2in1 is ON in B mode

- : i-αppli registered as one-key shortcut
- : i-αppli registered as two-key shortcut
- : i-αppli set with Individual IC card lock : GPS compatible i-αppli
- : Program guide key setting available/set to ON
- : Search by i-mode (displayed in stored folder and IC card content)→P298

- Each time you press , display view switches in the order of graphical display→list display→thumbnail display.
- When "Confirm every session" is Set NW transmission of the i-αppli to be started, connection confirmation screen appears.
- When partially saved i-αppli is selected, downloading confirmation screen of the rest appears. The i-αppli can be started after the rest is downloaded; when download is disabled, the i-αppli partially saved may be deleted.
- When IC card data transferred by iCお引っこしサービス (iC transfer service) is selected, downloading confirmation screen or connection confirmation screen to the site appears. The related Osaifu-Keitai compatible i-αppli can be started after it is downloaded.
- To quit i-αppli, operate in the procedure specified for each i-αppli. You can also quit i-αppli by pressing and then selecting "Yes".

### ✓INFORMATION

- Some i-αppli may have different display area, screen mode may not be changed by rotating the display.
- i-αppli that vertical and horizontal (or vice versa) size is less than 432×240 dots are displayed with horizontal and vertical size doubled.
- On a full-screen or wide display giving 864 vertical or horizontal dots, each time you press side key [], you can switch displaying and hiding of the battery icon.
- The volume of sound emitted during i-αppli operation can be adjusted. Note that some i-αppli have no sound.→P96, 228
- Some i-αppli can start specified i-αppli (when not specified, select an i-αppli). Note that, if the specified i-αppli in not on the Software list, it must be downloaded.
- Images used on i-αppli (shot using the camera from i-αppli, obtained using the i-αppli infrared communication/iC transmission function) or the data you entered may be sent to the server via Internet.
- Partially saved i-αppli is allowed displaying software description, deletion and folder change.
- IC card data transferred by iCお引っこしサービス (iC transfer service) allows only deletion.

- i-αppli that uses microSD card can save data in it. Data saved in microSD card may not be available for other models. i-αppli that uses microSD card can be viewed with "i-αppli data".→P315
- i-αppli may be interrupted when any of the conditions below occur. When the operating function ends, i-αppli restarts, but some i-αppli does not return to the state of the time of interruption.
  - When there is an incoming call or PushTalk call
  - When Lock on close is activated
  - When the date and time specified in watching reservation/recording reservation of 1Seg, countdown timer, alarm clock or schedule come
  - When the function is switched over to another function
- When you are out of service area or the saved data cannot be used, i-αppli may not start or not operate correctly.
- For certain i-αppli, the IP (Information Provider) may access i-αppli saved in the mobile phone and directly set operation disabled state. In such a case, i-αppli startup, stand-by display settings, upgrading, etc. are disabled, enabling only deletion and software description display. To resume using i-αppli, notification of i-αppli enabled must be received; contact the IP (Information Provider).
- For certain i-αppli, the IP (Information Provider) may send data to i-αppli saved in the mobile phone.
- When the IP (Information Provider) requests i-αppli for stopping or restarting or sends data to i-αppli, FOMA terminal makes communications and blinks. In this case, no communication fee is charged.
- For i-αppli builders
  - If i-αppli does not operate normally while building, trace information may help. Press [i-αppli] on the stand-by display to display Trace information. Note that Trace information cannot be displayed if i-αppli that records Trace information is not in the software list.
  - To delete Trace information, press and select "Yes".



### ◆ Displaying Security error history


- When i-αppli ended with an error because i-αppli cannot use the saved data, the name of the i-αppli, date and time, and cause of security error are recorded.
- Up to 20 items can be recorded. When exceeding the limit, record is overwritten chronologically.

- 1 [i-αppli]
  - To delete histories, press and select "Yes".







## ◆ Displaying i-appli description <Software description>

1  (1 sec. or more) ▶ Select a folder ▶ Place the cursor on the i-appli and 

- Displayed items differ by i-appli.
- To check the site certificate of the i-appli downloaded from SSL page, press  on the Software description screen.

## ◆ Setting operating condition of i-appli <Software settings>

- You cannot select the item not supported by the i-appli.
- When 2in1 is ON in Dual mode or B mode, "Set i-appli display" and "Set NW transmission during i-appli display" cannot be selected.

1  (1 sec. or more) ▶ Select a folder ▶ Place the cursor on the i-appli and   ▶ Set the required items ▶ 

**Set i-appli display** : Set if you set i-appli as stand-by display. Only one i-appli can be set.

**Set NW transmission during i-appli display** : Set if you allow automatic communication while the i-appli stand-by display is running.

**Set NW transmission** : Set if you allow automatic communication while the i-appli is running.

**Use icons** : Set if you enable icons for mail, MessageR/F, battery, Silent mode and signal level for i-appli.

**Start from browser** : Set if you allow starting the i-appli from site (i-appli To).

**Start from ToruCa** : Set if you allow starting the i-appli from ToruCa (i-appli To).

**Start from mailer** : Set if you allow starting the i-appli from mail (i-appli To).

**Start from Location Service menu** : Set if you allow starting the i-appli from link item of location information in site, MessageR/F or ToruCa (i-appli To).

**Start from external** : Set if you allow starting the i-appli from external device (i-appli To).

**Start from data broadcasting site** : Set if you permit activation from 1Seg data broadcasting site.

**Allow ring tone/image changes by software\*** : Set if you allow i-appli to automatically change the settings of a ring alert, stand-by display image, etc.

**Confirm all changes\*** : Set if you display a confirmation screen each time the settings of ring alert or images are changed.

**Allow access to phone book/call records by software\*** : Set if you allow i-appli to refer to phonebook, redial or received call logs automatically. This setting applies to ToruCa saved in FOMA terminal.

**Location usage setting\*** : Set if you enable GPS compatible i-appli to use location information automatically.

**Program guide key setting\*** : Set if you set i-appli in program guide i-appli activated from 1Seg. Only one i-appli can be set.






\* Available only for i-appliDX.

## ✓INFORMATION

- When setting Set i-appli display to "Yes", setting confirmation screen appears (except when the i-appli is already set to the stand-by display). If you select "Yes", stand-by screen is set and if Show ticker of i-Channel ticker is "Yes", the ticker is canceled.
- If you set "No" for Set NW transmission, the i-appli may not be started and timely information such as stock prices or weather information may not be provided by i-appli.
- If you set "Yes" for Use icons, since icons for unread messages, unread MessageR/F, remaining battery level, Silent mode, and antenna icon may be sent to IPs (Information Providers) through the Internet, it may give the information to a third party. Some i-appli requiring icons may not operate when "No" is set.
- When "No" is selected in Program guide key setting, cancellation confirmation screen appears.

## ◆ Setting operations while i-appli is active

### ◆ Setting Display light

1  [i-appli]   ▶  or 






- When setting to "Terminal settings", it depends on Display light time (Normal use) of settings of Display & Key light.

## ✓INFORMATION

- i-appli stand-by display light depends on the setting of Display & Key light.
- Even if "Software" is set, the light turns off in Public mode when the time specified in Display light time (Normal use) of Display & Key light has elapsed.
- This setting is also reflected to Display light time (i-appli) of Display & Key light.

## ❖ Setting vibrator

Set if you allow the vibrator operation by i-αappli.

1  [i-αappli]   ▶  or 

### ✓ INFORMATION

- This setting is also reflected to Vibrate alert/effect (i-αappli effect) of Alerts & Sounds.

## ❖ Setting power saving

Set brightness of the display, key lighting and volume.

### <Example> Presetting

1  [i-αappli]  

2  ▶  or 

- "Power saved mode" sets Brightness to "Brightness 1", Key lighting to "OFF" and Sound effect volume to "Level 1" (not changed if set to "Silent").  
For "Default mode", this function resets each setting to default state.

Changing brightness :  ▶  - 

Changing key lighting :  ▶  or 

Changing volume :  ▶ Side key [ ▼] or  ▶ 

## ◆ Motion tracking

This FOMA terminal is compatible with motion tracking of operating i-αappli (tilting or shaking FOMA terminal) using recognition technology of In-camera.

- May unavailable in the cases below.
  - When the lens of In-camera is soiled
  - When your clothing looks similar to the background
  - When the background is not fixed like when moving
  - When in a dark place or where back ground is too bright

### WARNING

Motion tracking compatible i-αappli is a game to operate by tilting or shaking FOMA terminal. There is a risk that FOMA terminal hits people or objects around you by shaking it too much, causing an accident or damage. When you play, grip FOMA terminal firmly, do not shake it too much and confirm the safety around you while playing.


## ◆ Using preinstalled i-αappli


- The i-αappli below are stored by default.
  - チャクルンジャーカート ネオ (Chakuranger Cart Neo)
  - ケータイ脳カストretching2 (Keitai Brain Stretching 2)
  - 太鼓の達人 4 F (Master of Drums 4 F)
  - ウォーキングチェッカー (Walking checker)
  - 日英版しゃべって翻訳 for F (J-E Speech Translation for F)
  - 日中版しゃべって翻訳 for F (J-C Speech Translation for F)
  - アバターメーカー for F (Avatar maker for F)
  - 地図アプリ (Map application)
  - モバイルGoogleマップ (Mobile Google map)
  - Gガイド番組表リモコン (G-GUIDE TV Remote Controller)
  - i アプリバンキング (i-αappli banking)
  - 楽天出品アプリ2 (Rakuoku auctioning application 2)
  - iD 設定アプリ (iD setting application)
  - DCMXクレジットアプリ (Credit service application)
  - FOMA通信環境確認アプリ (FOMA communication environment check application)
- If you delete stored i-αappli, you can download the software from "@Fケータイ 応援団 (@ F mobile phone supporters)" site. →P321

## ◆ チャクレンジャーカート ネオ (Chakuranger Cart Neo)


This is a game of car race to compete with the computer for ranking or to record the running time.

### ■ Title screen


Pressing  on the title screen displays the items.

Press  to display  
 "グランプリ (Grand prix)",  
 "タイムアタック (Time attack)",  
 "ダウンロード (Download)",  
 "オプション (Option)" and  
 "ヘルプ (Help)" in order



 : Sound ON/OFF

 : Exit i-appli

 : Determine the item.

- If you set ジェスチャーテック (Gesture Tek) to "ON" in "オプション (Option)", you can use motion tracking, and if you select "セッティング (Setting)", you can adjust the Gesture Tek.
- If you select "ダウンロード (Download)", you can download a new course, and up to 6 courses can be saved. A packet communication fee is required for downloading.

### ■ How to play

Select "グランプリ (Grand Prix)" or "タイムアタック (Time Attack)", select character, challenge level of course following the instruction on the screen, and start the race.

- For details of the game, see "ヘルプ (Help)".
- This application is compatible with the motion tracking.

©T2iE/iwasaki

## ◆ ケータイ脳カストretching2 (Keitai Brain Stretching 2 (editing supervised by Professor Ryuta Kawashima at Tohoku University))


You solve various problems to estimate your brain age or train brain.

### ■ MENU screen


Pressing  on the title screen displays MENU screen.




- ① Start training with problems suitable for the player's brain age and display past records
- ② Select problem to start training and display past records
- ③ Display a calendar, set sound/vibrator and clear data
- ④ Display operation descriptions

 : Return to the title screen.

 : Exit i-appli.


 : Move the cursor.

 : Determine the item.

 : Adjust volume.

 : Vibrator ON/OFF.


### ■ How to play

When "毎日！トレーニング (Train everyday!)" is selected, 3 questions of the current day are given. Selecting "選んで！トレーニング (Select training!)" selects a game for training. Before solving a problem, read the description displayed by pressing . Depending on the training conditions, a new problem appears.

## ❖ 太鼓の達人 4 F (Master of Drums 4 F)


This is a game to press corresponding keys on good timing to the kind of the drum played. The difficulty level varies by the tune.


### ■ Mode selection screen


Pressing  on the title screen displays the mode selection screen.



- ① Start game
- ② Change the clothes of Wada-don appearing in the game to something you like
- ③ Key setting, extra items (change of key settings), volume adjusting of BGM or SE (tone), shake/not shake, display play log


 : Return to the title screen.

 : Moving of the cursor

 : Determine the item.

### ■ How to play

Select "演奏ゲーム (Music playing game)" on the mode selection screen, and select the tune to be played and its difficulty level, then the game starts. Press corresponding keys on good timing to the kind of the drum played on the display.

- For key assignment, see キー設定 (key settings) of "ゲーム設定 (game settings)".
- If pressing  on the title screen, the description of the game is displayed.

© 2000-2008 NBGI


## ❖ ウォーキングチェッカー (Walking checker)


The data such as the number of steps or consumed calories recorded by Pedometer (→P372) can be graphed out or automatically sent via mail.

- When mail is automatically sent, i-appli automatically starts.
- Precautions for auto start→P237

### ■ Menu screen

Menu screen appears when activated.

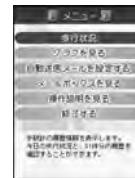


 : Move the cursor


 : Determine the item

- For details of each item, see "操作説明を見る".

## ❖ 日英版しゃべって翻訳 for F (J-E Speech Translation for F)

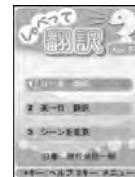

By voice entry, translate mainly words for traveling from Japanese to English and vice versa.

- To use, you are required to agree to the Terms of Service.
- A packet communication fee is charged separately.
- For operation method, refer to "チュートリアル (tutorial)" by pressing  on the title screen.

- You can use all functions free of charge till 60th days from the first activation. You are charged from 61st day to use all the functions, and My Menu registration is required from "しゃべって翻訳 (Speech Translation)" site of ATR-Trek.

i-mode site : iMenu →メニューリスト (Menu list)→辞書/便利ツール (Dictionary/ Convenient tool)→しゃべって翻訳 (Speech Translation)

QR code for  
site access



© ATR-Trek Co., Ltd. 2007

### ❖ 日中版しゃべって翻訳 for F (J-C Speech Translation for F)



By voice entry, translate mainly words for traveling from Japanese to Chinese and vice versa.

- For precautions, refer to "日英版しゃべって翻訳 for F (J-E Speech Translation for F)".

© ATR-Trek Co., Ltd. 2007

### ❖ アバターメーカー for F (Avatar maker for F)

Create avatar (character). The created avatar can be used as Deco-mail component or Deco-mail pictogram .

#### ■ Title screen

- At the first time of activation, a confirmation screen for creating the folder for saving avatar appears. If selecting "はい (Yes)", you can create a folder in My Picture of FOMA terminal. Then, the title screen appears.



- ① Creating avatar
- ② Editing saved avatars
- ③ Saving the saved avatar in My Picture of FOMA terminal as Deco-mail component or Deco-mail pictogram

#### ④ Exiting i-appli

**[M]** : Exit i-appli

**[H]** : Display "ヘルプメニュー (Help menu)"

**[C]** : Move the cursor

**[O]** : Determine the item.

#### ■ Creating method

Select "新規作成 (Create)" Select creating method, and select 輪郭 (Silhouette), 髪型 (Hair style), Face parts, etc, following the instruction on the screen to create an avatar. When you create, press **[M]** to save it in the application by selecting "名前を付けて保存 (Save as)". If selecting "保存してアバター出力 (save and output avatar)", after saved in i-appli, it is saved in My Picture of FOMA terminal as Deco-mail component, Deco-mail pictogram.

- In Privacy mode ("Authorized access" set for My Picture), creating folder, reading from My Picture or saving to My Picture is unavailable.
- For details, see "ヘルプメニュー (Help menu)".

### ❖ 地図アプリ (Map application)

A useful application that allows you to search the destination or display means of transportation by using GPS function equipped with FOMA terminal.

Operating procedure of "地図アプリ (Map application)"→P254


### ❖ モバイルGoogleマップ (Mobile Google map)


You can search for area information or shop information by displaying the map. And, you can switch to aerial photograph mode which is visually easy to see, and you can obtain the information of the town.


#### ■ Map screen

- You are required to agree to the Terms of Service at the first time you use this application.




 : Display "メニュー" (menu)"


 : Search (Search shop or service information or location of the area and display it on the map)


 : Moving of the cursor

 : Zoom out

 : Switch map/aerial photo

 : Zoom in

 : Display current location

 : Saving to/displaying お気に入り (your favorite)

- A packet communication fee is charged separately.

- For details, see "ヘルプ (Help)" of メニュー (Menu).

©2008 Google – Map data ©2008 Geocentre Consulting, NFGIS, Zenrin, Europa Technologies

### ❖ Gガイド番組表リモコン (G-GUIDE TV Remote Controller)



\* The display is an example.

It may differ from actual display.

- Program guide available in the area you live is displayed.

This is a convenient application containing a TV program table and AV remote controller function with no monthly fee.

You can easily obtain the TV program information of terrestrial digital, terrestrial analog or BS digital of your preferred time any time and anywhere. You can know the title, contents, start/end time, etc. of TV programs. And, you can activate 1Seg from Program guide, and Program guide from 1Seg. If there is any program you are interested in, you can make a watching reservation of the program to DVD recorder etc. via Internet (DVD recorder etc. compatible with remote watching reservation function is required. When using, the initial setting of this application is required). Moreover, you can search program information by keyword of TV category or favorite personalities, or pickup keyword at the top of the main display, etc. And, you can perform remote controlling operation of TV, video or DVD player (→P325) (some models are not applicable).

- The first time you use this i-appli, initial setup and agreement to the Terms of Service are required.
- A packet communication fee is required separately.
- With 2in1 ON in B mode, this function is unavailable.
- When using overseas, set Date & time of FOMA terminal to Japan time.
- For details of G-GUIDE TV Remote Controller, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

### ■ Watching reservation function

You can select a program from Program guide of this i-appli and reserve 1Seg watching.

#### Watching reservation :

Activate this i-appli, select a program to reserve, select "視聴予約 (Reserve)" from menu "予約実行 (Reserved program)" and, when the reservation scheduler is activated, reserve the program according to the instruction given on the screen.

### ■ Recording reservation function

You can select a program to record from Program guide of this i-appli and make a recording reservation of 1Seg.

#### Recording reservation :

Activate this i-appli, select a program to make a recording reservation, select "予約実行 (Reserved program)" from メニュー (Menu) "#ワンセグ録画予約 (1Seg Recording reservation)" and, when the reservation scheduler is activated, reserve the program according to the instruction given on the screen. (Recording reservation can be made also by selecting a program to make a recording reservation and pressing **[F3]**.)

### ■ Remote recording reservation function

If a DVD recorder etc. applicable with remote recording reservation is available, you can make recording reservation from a program table of this application even while going out.

For remote recording reservation, initialization in this application is necessary.

#### Initialization procedure :

- ① **Set DVD recorder etc. for Internet connection (See the operation manual of the DVD recorder etc.).**
- ② **Start this application, select "リモート録画予約 (Remote recording reservation)" from メニュー (Menu) and perform initialization according to the prompt displayed.**

#### Reserving program :

After initialization has completed, specify your favorite program and select "リモート録画予約 (Remote recording reservation)" from メニュー (Menu). Thus, you are connected with the DVD recorder etc. set in this application via Internet and can make recording reservation.

## ◇ i アプリバンキング (i-appli banking)



\* The display is an example.  
It may differ from actual display.

This is i-appli for conveniently using mobile banking. Mobile banking is a service that allows you to use your FOMA terminal for inquiring for the balance, checking details of deposits and withdrawals, transferring and other operations on your own account anywhere at any time. When activating i-appli, you are only required to enter a password set by yourself; after that, you can use mobile banking for up to 2 financial institutions.

- Before using mobile banking, you are required to have an account of and make a subscription to one of financial institutions applicable to the mobile banking service.
- A packet communication fee is required separately.
- For details of i-appli banking, refer to "Mobile Phone User's Guide [i-mode] FOMA version".
- For information about i-appli banking, visit i-mode site.

i-mode site : iMenu→メニューリスト (Menu list)→モバイルバンキング (Mobile banking)→i アプリバンキング (i-appli banking)

QR code for  
site access



## ◆ 楽オク出品アプリ2 (Rakuoku auctioning application 2)



\* The display is an example.  
It may differ from actual display.

"楽オク出品アプリ2 (Rakuoku auctioning application 2)" is a convenient application for easily auctioning in Rakuoku from any place, at any time.

With guide display, it is available even to beginners of auctioning. And, using convenient functions for image shooting, editing, log saving, etc., you can make auctioning from a site in a shorter period of time.

- Before using for the first time, you have to agree with "Terms of Service".
- A packet communication fee is required separately.
- For details of Rakuoku, refer to "Mobile Phone User's Guide [i-mode] FOMA version".
- Auctioning in Rakuoku requires your subscription for a membership of and auctioning in Rakuten.
- For information about Rakuoku, see i-mode site.

i-mode site : iMenu →オークション (Auction)

QR code for  
site access



## ◆ iD 設定アプリ (iD setting application)



\* The display is an example.  
It may differ from actual display.

Charge-free Electronic money "iD" is a service that enables shopping only by holding up an Osaifu-Keitai or credit card loaded with "iD". You can enjoy shopping simply and conveniently without signing your name unlike in a conventional way. It also supports cashing, depending on the card issuer.

- To use "iD", you need to own an Osaifu-Keitai with the necessary settings done with iD-αappli and the card i-αappli provided by a card issuer, in addition to subscribing to an iD-compatible card issuer.
- When using "iD" with an Osaifu-Keitai, you need to take preparatory actions for usage at iD i-αappli, download or activate the card i-αappli provided by the card issuer and take preparatory actions for usage at card i-αappli side. Note that, some card can be used only by preparatory actions for usage at iD i-αappli without preparatory actions for usage at card i-αappli.
- The charges required for iD-compatible service (including the annual charge) vary by card issuer.
- For information regarding "iD", refer to the "iD" i-mode site.  
i-mode site : iMenu →メニューリスト (Menu list) → 「iD」

QR code for  
site access






## ❖ DCMXクレジットアプリ (DCMX Credit service application)



\* The display is an example.  
It may differ from actual display.

"DCMX" is a credit service compatible with "iD" provided by NTT DoCoMo group. There are 2 types of DCMX : DCMX mini that allows you to use up to ¥10,000 per month and DCMX/DCMX GOLD that allows you to use more amount of money than DCMX mini while saving DoCoMo points.

Using DCMX mini, a credit payment service becomes available right now by making application from this application.

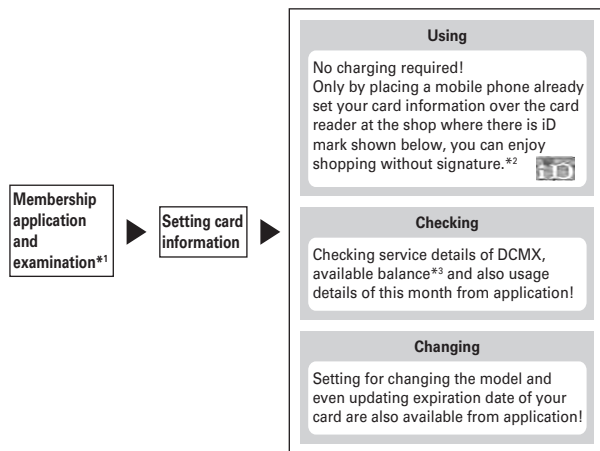

- \*1 A membership examination is carried out online at your application for DCMX mini. For application for services except DCMX mini, you are connected to i-mode application page.
- \*2 Entry of security code may be required under certain conditions.
- \*3 Only DCMX mini is available.
- For details of the service and application, refer to i-mode site of DCMX.  
i-mode site : iMenu → DCMX iD

QR code for  
site access



## ❖ INFORMATION

- When starting this application for the first time, agreement with "Precautions on Usage" is necessary.
- A packet communication fee is required for various settings and operations.

### Precautions related to Osaifu-Keitai compatible i-appli

- DoCoMo assumes no responsibility for the information set in the IC card.

## ❖ FOMA通信環境確認アプリ (FOMA communication environment check application)

FOMA communication environment check application is an application to check if FOMA terminal can use FOMA high-speed area.



\* The display is an example.  
It may differ from actual display.

- When using FOMA communication environment check application, agreement with "ご利用上の注意 (Precautions on Usage)" is necessary.
- Depending on the communication condition (weather, radio wave conditions or congestion of the network) at the time of communication confirmation, different communication results or the result of out of service area may be displayed even if the place or the time zone is the same.
- If you activate another function while using this application, you may not confirm correctly.

### Starting i-αppli quickly

i-αppli can be started by a simple operation from the stand-by display.

#### ◆ Registering i-αppli as one-key/two-key shortcut

- You can register one item of one-key shortcut.
- You can register one item of two-key shortcut for each key of keypad, up to 10 items in total.

<Example> Registering two-key shortcut

1 **[OK]** (1 sec. or more) ▶ Select a folder

2 Place the cursor on the i-αppli and **[MENU]** **[8]** **[2]**

Registering i-αppli shortcut : Place the cursor on the i-αppli to set and

**[MENU]** **[8]** **[1]**

- Same operations are required also for canceling.

### 3 Select a destination to register

- Icon numbers (9-9) correspond to keypads (**[0]** - **[9]**) used to activate two-key shortcut.
- When a destination already registered is selected, overwriting confirmation screen appears.

#### ✓INFORMATION

- The i-αppli registered to the one-key shortcut can be checked by Software information.
- Press **[MENU]** [i-αppli] **[2]** **[6]** on the stand-by display to display the Shortcut list. Detail info can be displayed and perform Cancel two-key s.cut from the submenu of the list screen.

#### ◆ Starting i-αppli using one-key/two-key shortcut

<Example> Starting i-αppli using two-key shortcut

1 **[0]** - **[9]** ▶ **[OK]** (1 sec. or more)

Starting i-αppli using one-key shortcut : **[OK]** (1 sec. or more)

### Automatically starting i-αppli

#### ◆ Setting whether to start automatically <Auto start>

Set all i-αppli, which are set to "ON" for User in Set auto start info., at once to start automatically.

1 **[MENU]** [i-αppli] **[2]** **[2]** ▶ **[1]** or **[2]**

## ◆ Setting date and time of auto start <Set auto start info.>

Set the conditions such as ON/OFF of automatic start or start time for each i-αppli and display the preset details.

- The conditions that can be set depend on the i-αppli.
- Some i-αppli may not be able to start automatically.
- When Auto start is "OFF", Auto start information cannot be registered.

**[ ] (1 sec. or more) ▶ Select a folder ▶ Place the cursor on the i-αppli to set and [ ] 5 ▶ Set the required items ▶ [ ]**

**User** : Select if you perform auto start with the conditions below.

**Time** : Enter the time for auto start of the i-αppli.

**Repeat** : Set the condition for repetitive auto start of the i-αppli.

**Weekly** : Set the day of the week for auto start when "Weekly" is set for Repeat.

**Date** : Set the date for auto start when "Onetime" is set for Repeat.

**Software** : Set if you automatically start at the intervals preset for the i-αppli.

**i-αppli 1-4** : For some i-αppliDX, up to 4 conditions of auto start can be set while it is running. Set if you enable those settings.

### ✓ INFORMATION

- Even with auto start set, automatic activation does not occur in the cases below, causing  $\mathcal{R}_x$  to appear on the stand-by display and to be recorded in Start failure hist.
  - When the screen except the stand-by display appears
  - When unavailable due to UIM operation restriction (except for preinstalled i-αppli)
  - When UIM cannot be detected
  - When the interval of auto start is too short
  - When All lock, Omakase Lock, Personal data lock or Privacy mode is ON (when i-αppli is "Authorized access")
  - When 2in1 is ON in B mode (only for i-αppli to use mail function)
  - When the i-αppli usage is stopped by IP (Information Provider)
- Even if you change "Repeat" of multiple i-αppli to set them start automatically at the same time, only one of them can be activated at one time. The information of the i-αppli that failed to be activated is recorded in Start failure hist., however,  $\mathcal{R}_x$  does not appear on the stand-by display.

## ◆ Displaying the start failure history

When auto start of the i-αppli fails,  $\mathcal{R}_x$  appears on the stand-by display and the name of the i-αppli, date and time, and causes are recorded.

- Up to 20 items can be recorded. When exceeding the limit, record is overwritten chronologically.
- When displaying Start failure hist. or when the next auto start is successful,  $\mathcal{R}_x$  on the stand-by display disappears.

**[ ] [ ] [i-αppli] [3] [1]**

- To delete histories, press [ ] and select "Yes".

### i-αppli To

## Starting i-αppli from site, mail or ToruCa

**[ ] Select a link item enabling to start i-αppli of the site, i-mode mail or ToruCa ▶ "Yes"**



### ✓ INFORMATION

- i-αppli not saved in FOMA terminal cannot be started with i-αppli To. Some i-αppli can be started immediately after being downloaded from a site, without saving.
- Partially saved i-αppli cannot be started from mail with i-αppli To.
- For i-αppli starting just after downloading from sites, communication confirmation screen while they are activated may appear.
- Some i-αppli program may not be saved in FOMA terminal.
- If the i-αppli is set not to start with i-αppli To, the i-αppli cannot be started. →P227

## i-αppli stand-by display



### Operating i-αppli stand-by display

When the i-αppli is set for the stand-by display, you can start the i-αppli from the stand-by display to operate.

- While displaying i-αppli stand-by display,  or  appears on the top of the display in gray.
- Setting i-αppli stand-by display → P103, 227

### Starting i-αppli of i-αppli stand-by display


1 On the i-αppli stand-by display,  ▶ Operate the i-αppli

 or  on the top of the display flash in orange.

#### ✓INFORMATION



- When FOMA terminal is turned ON while setting the i-αppli stand-by display, activating confirmation screen of the i-αppli stand-by display appears. The display starts when selecting "Yes" or performing no operations for approximately 5 seconds. Selecting "No" cancels i-αppli stand-by display. Note that when the power is turned ON by Auto power ON, the i-αppli stand-by display automatically appears, without displaying the confirmation screen.
- When setting i-αppli that performs communication to i-αppli stand-by display, it may not operate correctly depending on radio wave conditions etc.
- With 2in1 ON in Dual mode or B mode in All lock, Omakase Lock, Personal data lock or Privacy mode (when i-αppli is "Authorized access"), the i-αppli stand-by display is temporarily canceled and the default image is displayed.
- When an error that cancels the i-αppli stand-by display occurs, canceling confirmation screen for the i-αppli stand-by display appears. If you select "Yes", it is canceled and recorded in Abnormal exit hist.

### Quitting i-αppli and returning to the i-αppli stand-by display


1 While running i-αppli,  ▶ "End"

 or  on the top of the display changes from orange to gray.

The procedure to exit i-αppli and return to the i-αppli stand-by display depends on the i-αppli.

- When selecting "Cancel", the i-αppli stand-by display is canceled.  or  on the top of display disappears.

#### ✓INFORMATION


- Canceling operation from Software list :  → "i-αppli display" → "Cancel"

### Displaying the abnormal exit history

When an error that cancels i-αppli stand-by display occurs, the name of the i-αppli, date and time can be recorded.

- Up to 20 items can be recorded. When exceeding the limit, record is overwritten chronologically.




1  [i-αppli]  

- To delete histories, press  and select "Yes".

## Managing i-αppli

### Upgrading i-αppli <Upgrade>

When the i-αppli is updated, upgrade is available.

1  (1 sec. or more) ▶ Select a folder ▶ Place the cursor on the i-αppli and   ▶ "Yes"

#### ✓INFORMATION

- When upgrading i-αppli, data such as game scores stored in i-αppli may be erased.
- Some i-αppli may inquire the DoCoMo server about the availability depending on the length of time of use and number of times of use. If the server gives a notice of the i-αppli having been updated, it can be upgraded after confirming if you upgrade it.
- Some i-αppli is automatically upgraded.

## ◆ Creating/Deleting folders

- Up to 20 items can be registered.
- Stored folders by default cannot be deleted.

### <Example> Creating folders

1 (1 sec. or more)

2

**Changing folder name** : Place the cursor on the folder and

**Changing the order of the folder** : Place the cursor on the folder and

► or

**Deleting folders** :

① **Place the cursor on the folder** and

- When i-αppli is saved in the folder, perform authentication.

② "Yes"

- For some i-αppli saved in the folder, a confirmation screen for deleting i-αppli or mail folder appears. → P239 Step 3 in "Deleting i-αppli".

3 **Enter the folder name (up to 8 two-byte (16 one-byte) characters)** ►

## ◆ Moving i-αppli to another folder

### <Example> Moving 1 item

1 (1 sec. or more) ► **Select a folder**

2 **Place the cursor on the i-αppli** and

**Moving selected items** : ► **Select i-αppli** ►

**Moving all items in the folder** :

3 **Select a folder to move to** ► "Yes"

## ◆ Deleting i-αppli

- For some Osaifu Keitai compatible i-αppli, the data in the IC card needs to be deleted by activating or redownloading i-αppli before being deleted.
- Depending on the Osaifu-Keitai compatible i-αppli, you may not be able to delete.

### <Example> Deleting 1 item

1 (1 sec. or more) ► **Select a folder**

2 **Place the cursor on the i-αppli** and

**Moving selected items** : ► **Select i-αppli** ►

**Deleting all items in a folder** : ► **Authenticate**

3 "Yes"

- When attempting to delete Message i-αppli, deleting confirmation screen for the message folder appears.

- "Yes" : Deletes the message folder and all messages stored in the folder.

- "No" : Deletes i-αppli only.


However, if there is any protected mail in the mail folder, you cannot delete the i-αppli or mail folder even if "Yes" is selected.

- If deleting i-αppli by "Selected items" or "All items" and it includes a Osaifu-Keitai compatible i-αppli which needs to delete data in the IC card beforehand, a confirmation screen for deleting other i-αppli appears.
- When deleting i-αppli set in Program guide key setting, deleting confirmation screen appears.
- When deleting i-αppli that uses data of microSD card, deleting confirmation screen for data of microSD card may appear.
  - "Yes" : Deletes the data of microSD card.
  - "No" : Deletes i-αppli only.


### ✓ INFORMATION

- Delete all i-αppli in the folder from the folder list :
- When only the i-αppli has been deleted and the mail folder used for Message i-αppli is left undeleted, the mail can be displayed from the submenu of the mail folder list. → P195
- When the folder for Message i-αppli to be deleted is being used (including displaying list), the i-αppli may not be deleted.



## ◆ Sorting i-αppli <Sort software>

1  [i-αppli] 2 1 ▶ 1 - 5

### ✓INFORMATION

- Operations from the Software list :  9
- For download time and access time, the time set for Date & time is recorded.
- If one- and two-byte characters/alphanumeric are included in the name of i-αppli, the result of sort "By name" may not match the order of the Japanese syllabary.
- The access frequency is carried over when upgrading the i-αppli version.
- The access frequency does not include the number of starts as i-αppli stand-by display.
- Selecting "By software size" sorts the i-αppli from large to small.



## ◆ Checking number of i-αppli in folder <Software in folder>

1  (1 sec. or more) ▶ Place the cursor on the folder and 

Icon definitions→P225 Step 3 in "Starting i-αppli"

## ◆ Checking current settings of i-αppli <Software information>

The settings such as the saved number of i-αppli, i-αppli stand-by display, one-key shortcut or auto start can be checked.

1  (1 sec. or more) ▶ 

## Using various functions from i-αppli

- i-αppli applicable to each function is required.
- Some i-αppli may need different operation or be unavailable.

## ◆ Making a call from i-αppli

1 Select a phone number ▶ Set a condition for dialing ▶ 

Making a call under set conditions→P59

## ◆ Using camera function from i-αppli

1 Operate i-αppli to use camera function

### ✓INFORMATION

- When activating Camera from i-αppli, the still image/movie is saved in i-αppli (in "i-mode" or "Deco-mail picture" folder of My Picture, "i-mode" folder of i-motion or added album). In some cases, automatically sent to the server.

## ◆ Using Bar code reader from i-αppli

1 Operate i-αppli to read a code

- The scanned data is used by i-αppli and saved.

## ◆ Using infrared communication from i-αppli

- Infrared communication may not be made depending on the other party's device even if it has infrared communication function.

1 "Yes" on the confirmation screen of infrared communication

- i-αppli can also be executed by receiving i-αppli starting data via infrared communication.

## ◆ Using ToruCa from i-αppli

From i-αppli, you can save ToruCa or select ToruCa in the folder for using or searching.

<Example> Saving

1 Select "Yes (NewEntry)" on the confirmation screen of saving the ToruCa

The ToruCa is saved to "ToruCa" of ToruCa content.

Overwriting ToruCa : "Yes (OverWrite)" ▶ Select a folder ▶ Select ToruCa to be overwritten

Displaying : "Preview"

# Osaifu-Keitai/ToruCa

<b>Osaifu-Keitai</b> .....	242
<b>iCお引こしサービス (iC transfer service)</b> .....	243
<b>Starting Osaifu-Keitai compatible i-appli</b> .....	243
<b>Checking IC owner information</b> .....	<a href="#">Check IC owner</a> 244
<b>ToruCa</b> .....	<a href="#">ToruCa</a> 244
<b>Downloading ToruCa</b> .....	<a href="#">ToruCa download</a> 245
<b>Displaying ToruCa</b> .....	<a href="#">ToruCa list</a> 245
<b>Setting ToruCa functions</b> .....	248
<b>Preventing use of IC card function</b> .....	<a href="#">IC card lock</a> 249

## Osaifu-Keitai

Osaifu-Keitai allows you not only to pay money only by holding FOMA terminal over the IC card reader in stores etc., but also to use it as a point card or a coupon ticket.

Moreover, by using communication, you can conveniently use Osaifu-Keitai to credit electronic money in a bank account, to check the balance or usage history, etc. And, for your safe usage, various security systems are equipped. For details, refer to "Mobile Phone User's Guide [i-mode] FOMA version".

- To use Osaifu-Keitai compatible service, you are required to download Osaifu-Keitai compatible i-appli from Osaifu-Keitai compatible site\*, and make settings
  - i モードサイト (i-mode site) : iMenu → メニューリスト (Menu list) → "おサイフケータイ (Osaifu-Keitai)"
- The data (including electronic money, points, etc.) in the IC card may be lost or modified because of the malfunction of FOMA terminal (When we take your Osaifu-Keitai for repair etc., as we cannot take it with data remained, you are required to erase the data by yourself). For support such as reissuance, restoration, temporary preservation or transfer of data except transfer by iCお引っこしサービス (iC transfer service), confirm with Osaifu-Keitai compatible service provider. For important data, be sure to use a service with backup service.
- If the data in the IC card is lost, modified or damaged by any means related to Osaifu-Keitai compatible service such as malfunction or model change, DoCoMo assumes no responsibility for the loss of data.
- If FOMA terminal is stolen or misplaced, immediately contact your subscribed IP (Information Provider) etc. for Osaifu-Keitai compatible service. This FOMA terminal allows you to use Omakase Lock or IC card lock. → P121, 249

## ◆ Using Osaifu-Keitai

### Step 1

#### Downloading Osaifu-Keitai compatible i-appli → P224

iD 設定アプリ (iD setting application) and DCMX クレジットアプリ (DCMX Credit service application) are stored by default. Press **[OS]** [Osaifu-Keitai] **[B]** to connect to the site for downloading Osaifu-Keitai compatible i-appli.

### Step 2

#### Make initial settings of the service by starting Osaifu-Keitai compatible i-appli → P243


After starting Osaifu-Keitai compatible i-appli and make settings following the instruction on the screen, you can charge (credit) money or check the balance or the usage history using the mobile phone.

### Step 3

#### Holding FeliCa mark over IC card reader

You can use the i-mode terminal as electronic money to purchase, or use as a passenger ticket by placing the FeliCa mark of Osaifu-Keitai over the IC card reader. This function can be used without starting the Osaifu-Keitai compatible i-appli.

\* No communication fee is charged.

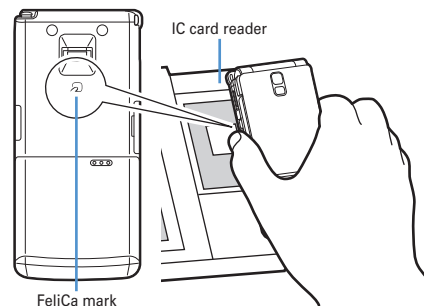



**✓INFORMATION**

- With IC card light "ON", when holding the FeliCa mark over the IC card reader scanning area, the light blinks.
- If the recognition is not performed successfully by scanning the FeliCa mark of FOMA terminal with the IC card reader, shift the mark back and forth or right and left when scanning.
- Even when Osaifu-Keitai is being turned OFF or after it is turned OFF, you can use the functions of Osaifu-Keitai by holding the FeliCa mark over the IC card reader. Note that, when the battery pack is not installed, or even when the battery pack is installed, if it has not been used for a long time or if it was left alone after battery alarm sounded without charging, Osaifu-Keitai may not be used.
- You cannot start the Osaifu-Keitai compatible i-αappli to read/write data in the IC card or download ToruCa with the power OFF.
- i-αappli may be started when holding the FeliCa mark over the IC card reader.
- When scanning the FeliCa mark with the IC card reader, take care not to give a strong shock to FOMA terminal.

**iCお引っこしサービス (iC transfer service)**

**iCお引っこしサービス (iC transfer service)\*<sup>1</sup> is a service that, when replacing Osaifu-Keitai in such cases as model change or repair, transfers data in an IC card collectively\*<sup>2</sup> to a new Osaifu-Keitai\*<sup>3</sup>.**

**After data in IC card is transferred, Osaifu-Keitai compatible services can be used easily by only downloading\*<sup>4</sup> Osaifu-Keitai compatible iC i-αappli. iCお引っこしサービス is available at a sales outlet such as DoCoMo Shop near you. For details, refer to "Mobile Phone User's Guide [i-mode] FOMA version".**

- \*<sup>1</sup> Both the source and the destination of the data need to be iCお引っこしサービス compatible FOMA terminal. For using iCお引っこしサービス, visit available sales outlet such as DoCoMo Shop near you.
- \*<sup>2</sup> Some Osaifu-Keitai compatible services are not covered by iCお引っこしサービス, so only the Osaifu-Keitai compatible data saved in IC card covered by iCお引っこしサービス can be transferred.
- \*<sup>3</sup> As this service "transfer", not "copy", data, the data saved in IC card does not remain in the original FOMA terminal. There may be a case that you cannot use iCお引っこしサービス, use the backup service for Osaifu-Keitai compatible service compatible with each Osaifu-Keitai.
- \*<sup>4</sup> i-αappli downloading and settings require packet communication fee.

**Starting Osaifu-Keitai compatible i-αappli**

- When first starting or downloading Osaifu-Keitai compatible i-αappli, UIM in use is registered as the owner (IC owner) of the IC card in the Osaifu-Keitai. After that, IC card function cannot be used unless the UIM registered as the IC owner is installed. Note that, when replacing UIM with another one, IC card function cannot be used unless the IC owner is changed. →P244

**1** **ME** [Osaifu-Keitai] **1**

The next procedure →P225 Step 3 in "Starting i-αappli"

**✓INFORMATION**

- When Osaifu-Keitai compatible i-αappli starts, Osaifu-Keitai may be unavailable by placing the FeliCa mark over the IC card reader.
- Active Osaifu-Keitai compatible i-αappli may be interrupted in the cases below. In that case, the data being read/written may be discarded.
  - When there is an incoming call or PushTalk call
  - When Lock on close is activated
  - When the date and time specified in the watching reservation/recording reservation of 1Seg, countdown timer, alarm clock or schedule come.
  - When the function is switched over to another function
- When you are out of service area or the saved data cannot be used, some Osaifu-Keitai compatible i-αappli may not start or not operate correctly.
- Press **ME** [Osaifu-Keitai] **2** to activate DCMXクレジットアプリ (Credit service application).

## Check IC owner

### Checking IC owner information

You can check if the UIM in use is registered as the owner (IC owner) of the IC card in the Osaifu-Keitai.

#### 1 [Osaifu-Keitai]

- If not registered as IC owner, install a UIM registered as IC owner, or select "How to reset IC owner" and change IC owner. Step 2 in "Changing IC owner" → P244 Step 2 in "Changing IC owner"

#### ❖ Changing IC owner

To change IC owner, you need to reset IC owner. By resetting, Osaifu-Keitai compatible i-αppli other than iD 設定アプリ (iD setting application) are deleted. Note that, for Osaifu-Keitai compatible i-αppli that the data in IC card is saved, the data in IC card needs to be deleted by activating or redownloading i-αppli before being reset. After reset, if starting or downloading Osaifu-Keitai compatible i-αppli, it is registered as IC owner.

#### 1 [Osaifu-Keitai]

2 "Reset IC owner" ▶ "Yes" ▶ "Authenticate" ▶ "Yes"

## ToruCa

### ToruCa

ToruCa is an electronic card that can be obtained using Osaifu-Keitai; it can be used conveniently as a flier, restaurant card, coupon ticket, etc.


ToruCa can be downloaded from the IC card reader, site, etc. and can be easily exchanged using mail, infrared communication/iC transmission or microSD card.

- Compatible models : ToruCa can be used on the models supporting ToruCa. For details, refer to "Mobile Phone User's Guide [i-mode] FOMA version".


#### ❖ Flow of using ToruCa




Obtain ToruCa by holding Osaifu-Keitai over the IC card reader



Select ToruCa from ToruCa list

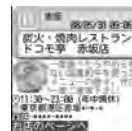


ToruCa (Details)

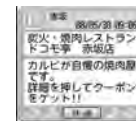

Download detail information by pressing the "詳細 (Details)" button

**ToruCa download****Downloading ToruCa**

- The savable size of each ToruCa is 1 Kbyte. The maximum size of each ToruCa (Details) is 100 Kbytes.
- Savable number→P471

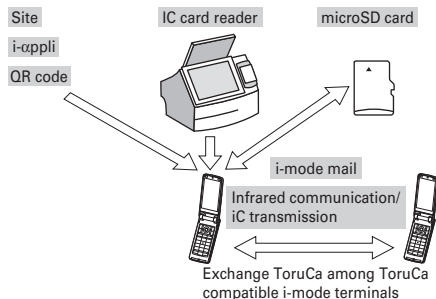**❖ ToruCa download method**

- The procedure for obtaining from IC card reader is the same as Step 3 in "Using Osaifu-Keitai".→P242
- Reading QR code→P153
- Downloading from a site→P168
- Attaching to i-mode mail/saving→P187, 194
- Saving from i-appli→P240
- Exchanging data between FOMA terminal and microSD card→P310
- Infrared communication/iC transmission→P323, 324

**✓INFORMATION**

- When obtaining ToruCa with an IC card reader, operations are performed according to the settings from ToruCa preference, ToruCa alert, ToruCa auto-read, ToruCa receive of Light alert and ToruCa receive alert of Adjust volume.
- The obtained/downloaded ToruCa is saved in "ToruCa". However, if ToruCa is obtained from IC card reader, it is saved according to ToruCa sort rule.
- When Auto-display of ToruCa preference is "ON", if ToruCa is obtained from IC card reader, connecting confirmation screen to the site for downloading details may appear. If no key operations are made during automatic display, ToruCa is saved under unread state.
- ToruCa downloaded in the methods below is saved as read ToruCa.
  - Reading QR code
  - Downloading from a site
  - Receiving by i-mode mail
  - Receiving read ToruCa through infrared communication/iC transmission
- When attaching ToruCa (Details) to mail, sent via infrared communication/iC transmission or moved/copied to microSD card, a message may appear indicating that the detail information is not contained or saved.
- For some ToruCa, updating, moving/copying, transmission through mail attachment or infrared communication may be disabled.
- Checking memory space→P321
- When exceeding the savable number/area→P322


**ToruCa list****Displaying ToruCa**

1 **ME** [Osaifu-Keitai] **3** ▶ Select a folder



- ☐ (gray) : No ToruCa
- ☐ (blue) : No unread ToruCa
- ☐ (gray) : Unread ToruCa exists
- ☐ (gray) : No used ToruCa
- ☐ (blue) : Used ToruCa exists

## 2 Select ToruCa

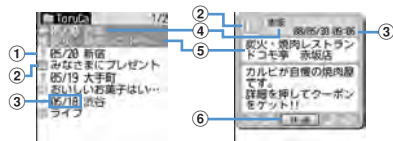

### ① Status icon

☐ : Unread ☐ : Read

### ② Category icon

### ③ Download date

### ④ Index

### ⑤ Title

### ⑥ "詳細 (Details)" button

Displayed when there is detail information. Detail information can be downloaded from a site.

### Attaching to mail : Place the cursor on the ToruCa and ☐

- When ToruCa (Details) can be attached, a confirmation screen for attaching including details appears. When ToruCa (Details) cannot be attached, a confirmation screen for attaching excluding details appears.
- Press **[MENU] [2]** to attach the displayed ToruCa to the mail.

## ◆ Operations while displaying ToruCa (Details)

### Updating the display : **[MENU] [1]** ▶ "Yes"

### Adding phone number and mail address into phonebook :

- ① Place the cursor on the phone number or mail address and **[MENU] [4]** ▶ **[1]** or **[2]**
- ② **[1]** or **[2]**
  - When adding data to existing phonebook entry, select the phonebook entry.
- ③ Add the phone number or mail address.  
Phonebook new entry → P83

### Registering URL in bookmark : Place the cursor on the URL and

**[MENU] [4] [3]** ▶ Select a folder to add to

The next procedure → P163 Step 2 in "Registering in Bookmark"

### Saving image : **[MENU] [4] [4]** ▶ Select the image

- Press **[MENU] [4] [5]** to save a background image.

The next procedure → P166 Step 2 and the following steps in "Downloading images"

### Using location information : Select location information.

The next procedure → P170 Step 2 in "Using location information"

### Replaying Flash graphics or GIF animation : **[MENU] [7]**

### Uploading image or movie/i-motion : "View"

The next procedure → P169 Step 2 in "Uploading image or movie/i-motion to sites"

## ✓ INFORMATION

- For some ToruCa, an expiration date is set. After expiration, the background of the ToruCa list is displayed in different color.
- If ToruCa includes phone numbers, mail addresses or URL, Phone To (AV Phone To), Mail To, SMS To and Web To functions can be used.
- Category marks specific to ToruCa issuers may appear on the ToruCa list and ToruCa (Details) (they are not included in category marks in "Category", searching and/or ToruCa sorting method).
- When Flash graphics are not in place within ToruCa (Details), the operation starts when they are in place within the display by scrolling.
- ToruCa in "Used ToruCa" folder cannot be displayed.
- A packet communication fee is required for downloading detail information.
- ToruCa (Details) may not be received even if the receiver's device is compatible with ToruCa.

## ◆ Searching ToruCa

### <Example> Searching by category

**1** **[MENU] [Osaifu-Keitai] [3]** ▶ **[MENU] [1]** ▶ Select Search method field

**2** **[1]** ▶ Select Category field ▶ **[1] - [5]**



Category icon included in the category at the cursor position

Category selection screen

**Searching by title :** **[2]** ▶ Enter a part of the title in the entry filed for Search text (up to 10 two-byte (21 one-byte) characters)

**Searching by index :** **[3]** ▶ Enter a part of the index in the entry filed for Search text (up to 7 two-byte (15 one-byte) characters)

### 3

#### ✓INFORMATION

- Searching ToruCa in the folder : **[ME] [2]**
- ToruCa in "Used ToruCa" folder cannot be searched for.

#### ◆ Creating/Deleting folders

- Up to 20 folders can be created in addition to "ToruCa" and "Used ToruCa" folders.

<Example> Creating folders

1 **[ME] [Osaifu-Keitai] [3]**

2 **[ME] [2]**

**Changing folder name :** Place the cursor on the folder and **[ME] [4]** ▶ Go to Step 3

**Changing the order :** Place the cursor on the folder and **[ME] ▶ [9]** or **[0]**

**Deleting :** Place the cursor on the folder and **[ME] [3]** ▶ Authenticate ▶ "Yes"

3 Enter the folder name (up to 8 two-byte (16 one-byte) characters) ▶ **[OK]**

#### ✓INFORMATION

- "ToruCa" and "Used ToruCa" folders cannot be renamed, sorted or deleted.

#### ◆ Deleting ToruCa

<Example> Deleting 1 item

1 **[ME] [Osaifu-Keitai] [3]** ▶ Select a folder

2 Place the cursor on ToruCa and **[ME] [3] [1]**

**Deleting selected items :** **[ME] [3] [2]** ▶ Select ToruCa ▶ **[OK]**

**Deleting all items in a folder :** **[ME] [3] [3]** ▶ Authenticate

3 "Yes"

#### ✓INFORMATION

- Deleting displayed ToruCa : **[ME] [9]**
- Deleting ToruCa in "Used ToruCa" folder : Place the cursor on the ToruCa and **[OK]** → "Yes".

#### ◆ Moving ToruCa to another folder

- ToruCa also can be moved/copied to microSD card. →P310

<Example> Moving 1 item

1 **[ME] [Osaifu-Keitai] [3]** ▶ Select a folder

2 Place the cursor on the ToruCa and **[ME] [4] [1] [1]**

**Moving selected items :** **[ME] [4] [1] [2]** ▶ Select ToruCa ▶ **[OK]**

**Moving all items in the folder :** **[ME] [4] [1] [3]**

3 Select a folder to move to ▶ "Yes"

#### ✓INFORMATION

- Deleting displayed ToruCa : **[ME] [3] [1]**
- ToruCa cannot be moved to "Used ToruCa" folder.

#### ◆ Sorting ToruCa <Sort>

The ToruCa list can be sorted temporarily.

1 **[ME] [Osaifu-Keitai] [3]** ▶ Select a folder ▶ **[ME] [5] [2]** ▶ **[1]** - **[5]**

#### ✓INFORMATION

- When the one- and two-byte characters are mixed in the titles of ToruCa, the sort result by "By title" and "By index" may not match the order of the Japanese syllabary.
- When selecting "By name", the ToruCa list is sorted in the order of ID included as data in ToruCa (ID cannot be displayed).

#### ◆ Checking the number of ToruCa <Check No. of items>

1 **[ME] [Osaifu-Keitai] [3]** ▶ **[ME] [6]**

#### ✓INFORMATION

- Checking the number of items saved in the folder : **[ME] [5] [1]**
- ToruCa in "Used ToruCa" folder are not included in the number of saved items.

## Setting ToruCa functions

### ◆ Setting the operation of ToruCa downloading <ToruCa preference>

You can set if you obtain ToruCa from IC card reader and the operations for obtaining from IC card reader.

#### 1 [Osaifu-Keitai] ▶ Set the required items ▶

**ToruCa receive** : When setting to "ON", ToruCa is obtained from IC card reader.

**Duplication check** : When setting to "ON", a new ToruCa is not downloaded if it is duplicated with the existing one.

**Auto-sort** : When setting to "ON", sort ToruCa according to ToruCa sort rule.

**Auto-display** : When setting to "ON", downloaded ToruCa is automatically displayed for 15 seconds only when the stand-by display is active.

### ◆ Setting operations for checking completion of ToruCa download <ToruCa alert>

You can set lighting and/or sound volume for notifying completion of ToruCa obtaining from the IC card reader.

#### 1 [Osaifu-Keitai] ▶ Set the required items ▶

**Light alert** : Set if you make the light blink when obtaining is completed.

**Light color** : Set the lighting color of the light.

**Receive alert volume** : Set the volume of the alert activated when obtaining ToruCa has completed.

### ◆ Using ToruCa auto-read <ToruCa auto-read>

You can set if you automatically read enabled ToruCa when using it by placing FOMA terminal over an IC card reader. When set to "ON", enabled ToruCa is automatically recognized and moved to "Used ToruCa" folder. If not setting this function to "ON", some ToruCa may not be able to use.

- Up to 20 ToruCa can be stored into "Used ToruCa" folder. When exceeding the limit, record is overwritten chronologically.

#### 1 [Osaifu-Keitai] ▶ or

#### ✓INFORMATION

- When this function is "OFF", if you hold FOMA terminal over an IC card reader, a confirmation screen for using ToruCa auto-read or a screen indicating that ToruCa auto-read is disabled may appear. When using ToruCa, set to "ON".

### ◆ Setting sort method of ToruCa <ToruCa sort rule>


You can set sort method of ToruCa obtained with an IC card reader to specified folders.

- Up to 20 items can be registered.
- To enable execution of sort method, Auto-sort of ToruCa preference should be "ON".

#### <Example> Sorting by category

#### 1 [Osaifu-Keitai]

Registered sort methods  
(in the order of priority)





 : Category  : Title  : Index  
No icon : No method

#### 2 ▶ Select Sort by: field

#### 3 ▶ Select Category field ▶ -

Category selection screen → P246

**Sorting by title** :  ▶ Enter a part of the title in the field for Enter text (up to 10 two-byte (21 one-byte) characters)

**Sorting by index** :  ▶ Enter a part of the index in the field for Enter text (up to 7 two-byte (15 one-byte) characters)

**Sorting by no method** : 

#### 4 Selecting Location: filed ▶ Select a folder ▶

#### 5 Select a priority

Sort method is added above the selected row.

- When registering the first sort method, select "Add to last" (When changing a registered method, "Move to last" is displayed).

**INFORMATION**

- "Used ToruCa" folder cannot be specified to the folder to sort.

**Checking, changing or deleting sorting methods****<Example> Checking sorting methods**

**1** **[ME]** **[Osaifu-Keitai]** **[5]** **[4]**

**2 Selecting sorting methods**

A sort method details screen appears.

**Changing** : Place the cursor on the sort method and **[ME]** **[2]** ▶ Select the Sort by: field

- When operating from the sort method details screen, press **[ME]** **[1]** and select the Sort by: field.  
The next procedure →P248 Step 3 and the following steps in "Setting sort method of ToruCa"

**Changing sort priority** : Place the cursor on the sort method to change and **[ME]** **[5]**

The next procedure →P248 Step 5 in "Setting sort method of ToruCa"

**Deleting** : Place the cursor on the sort method and **[ME]** ▶ **[3]** or **[4]** ▶ "Yes"

- When selecting "All items", perform authentication.
- When operating from the sort method details screen, press **[ME]** **[2]**.

**IC card lock****Preventing use of IC card function****With IC card lock set, the functions below become unavailable.**

- Use of IC card
- ToruCa obtained from IC card reader
- Download or use of Osaifu-Keitai compatible i-appli
- Initializing IC owner
- iC transmission
- To activate both IC card lock and All lock, first start IC card lock and then start All lock.

**1 [ ] (1 sec. or more) ▶ "Yes"**

When activating IC card lock, **[ ]** or **[ ]** (for individual IC card lock) appears on the stand-by display.

**Canceling** : **[ ]** (1 sec. or more) ▶ **Authenticate**

**Activating/Canceling with FOMA terminal folded.**

- When canceling, use Fingerprint authentication.

**1 During the clock display on sub-display, [ ] ▶ Place the cursor on "Lock IC card" using side keys [▲▼] and [ ]**

The light turns on in blue for approximately 3 seconds when activating IC card lock.

**Canceling** : During the clock display on sub-display, [ ] ▶ Place the cursor on "Unlock IC card" using side keys [▲▼] and [ ] ▶ **Authenticate**

The light blinks in blue for about 3 seconds when canceling IC card lock.

- In a state waiting for authentication, the light remains flashing in red. If pressing side keys [▲▼], [ ] or [ ], IC card lock cancellation is stopped and the light turns off.
- The light blinks in red for about 1.5 seconds after failing in authentication.

**INFORMATION**

- When removing the battery pack or activating Omakase Lock, IC card functions are unavailable regardless of the IC card lock settings.
- During IC card lock, deletion of some Osaifu-Keitai compatible i-appli may be disabled.