




# Color Monitor

## USER GUIDE

### Model :79FT

Please read this manual carefully before operating your set.  
Retain it for future reference.  
Record model number and serial number of the set.  
See the label attached on the back cover and quote this  
information to your dealer when you require service.

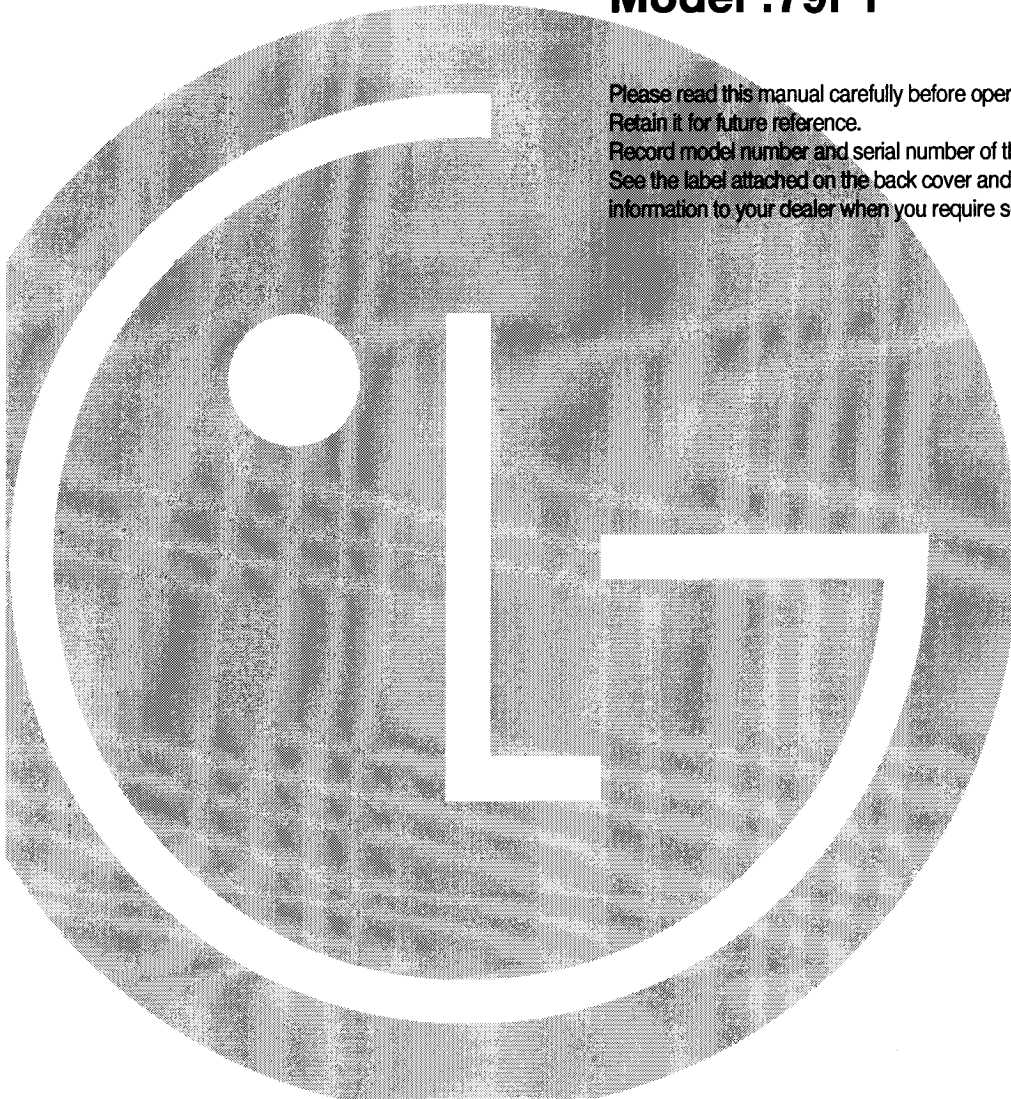

## AGENCY REGULATORY NOTICE

### FCC Compliance Statement

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception (which can be determined by turning the equipment off and on), the user is encouraged to try to correct the interference by using one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**Caution:** Changes or modifications not expressly approved by the party responsible for compliance could void the user's (or your) authority to operate the equipment. Only peripherals (digital input/output devices, terminals, printers, etc.) certified to comply with the Class B limits may be attached to this monitor. Operation with non-certified peripherals is likely to result in interference to radio and TV reception.

Only shielded Signal Cables may be used with this System.

---

**Canadian  
D.O.C.  
Notice**

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Cet appareil numérique de la classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

**TCO'95  
Compliance**



This monitor complies with TCO'95 (The Swedish Confederation of Professional Employees) guidelines for low frequency electric fields, magnetic fields, static electricity, and visual ergonomic requirements. Furthermore, this model is produced with concern for the environment and contains no harmful substances in any of its components.

**CE  
Conformity  
Notice**



Products with the "CE" Marking comply with the EMC Directive(89/336/EEC) and LOW VOLTAGE Directive (73/23/EEC) issued by the Commission of the European Community.

Compliance with these directives implies conformity to the following European Norms :

- EN 55022 ; Radio Frequency Interference
- EN 50082-1:1992 ; Electromagnetic Immunity
- EN 60555-2 ; Power Line Harmonics
- EN 60555-3 ; Voltage Fluctuations
- EN 60950 ; Product Safety

## Table of Contents

---

<b>Introduction</b>	
Features .....	A1
<b>Monitor Registration</b>	
Notice .....	A2
Trademark Acknowledgments .....	A2
<b>Important Precautions</b>	
On Safety .....	A3
On Installation .....	A4
On Cleaning .....	A4
On Repacking .....	A4
<b>Connecting the monitor</b>	
Connecting to an IBM PC .....	A5
Connecting to an Apple Macintosh .....	A6
<b>Location and Function of Controls</b>	
Front View .....	A7
Rear View .....	A7
<b>Control Panel Function</b>	
OSD Enter Button .....	A8
OSD Exit Button .....	A8
OSD Select/Adjustment Buttons .....	A8
Brightness Adjustment Control .....	A8
Contrast Adjustment Control .....	A8
Power (DPMS) Indicator .....	A8
Power ON/OFF Button .....	A8
<b>On Screen Display (OSD) Control Adjustment</b> .....	A9
<b>On Screen Display (OSD) Selection and Adjustment</b> .....	A10
<b>Video Memory Modes</b>	
Factory Preset Timing Signal Chart .....	A16
User Modes .....	A18
Recalling Display Modes .....	A18
<b>Energy Saving Design</b>	
Power Consumption .....	A19
<b>MPR II, Self Diagnostics and DDC</b>	
Low Radiation Compliance (MPR II) .....	A20
Self Diagnostics .....	A20
DDC (Display Data Channel) .....	A20
<b>Troubleshooting and Service</b>	
Troubleshooting .....	A21
Service .....	A22
<b>Specifications</b>	
Specifications .....	A23

## **Introduction**

---

Thank you for purchasing a high resolution monitor. It will give you high resolution performance and convenient reliable operation in a variety of video operating modes.

### **Features**

- The monitor is a 17 inches (16.0 inches viewable ) intelligent, microprocessor based monitor compatible with most analog RGB (Red, Green, Blue) display standards, including IBM PC®, PS/2®, Apple®, Macintosh®, Centris®, Quadra®, and Macintosh II family.
- The monitor provides crisp text and vivid color graphics with VGA, SVGA, XGA, and VESA Ergo modes (non-interlaced), and most Macintosh compatible color video cards when used with the appropriate adaptor. The monitor's wide compatibility makes it possible to upgrade video cards or software without purchasing a new monitor.
- Digitally controlled auto-scanning is done with the microprocessor for horizontal scan frequencies between 30 and 96kHz, and vertical scan frequencies between 50-160Hz. The microprocessor-based intelligence allows the monitor to operate in each frequency mode with the precision of a fixed frequency monitor.
- The microprocessor-based digital controls allow you to adjust conveniently a variety of image controls by using the OSD (On Screen Display).
- The monitor has 37 memory locations for display modes, 12 of which are factory preset to popular video modes.
- This monitor is capable of producing a maximum horizontal resolution of 1600 dots and a maximum vertical resolution of 1200 lines. It is well suited for CAD work and sophisticated windowing environments.
- For greater user health and safety, this monitor complies with the stringent Swedish TCO'95 requirements for low radiation emissions.
- For low cost of monitor operation, this monitor is certified as meeting the EPA Energy Star requirements, and utilizes the VESA Display Power Management Signalling (DPMS) protocol for power saving during non-use periods.

## Monitor Registration

---

The model and serial numbers are found on the rear of this unit. These numbers are unique to this unit and not available to others. You should record requested information here and retain this guide as a permanent record of your purchase. Staple your receipt here.

Date of Purchase : \_\_\_\_\_  
Dealer Purchased From : \_\_\_\_\_  
Dealer Address : \_\_\_\_\_  
Dealer Phone No. : \_\_\_\_\_  
Model No. : \_\_\_\_\_  
Serial No. : \_\_\_\_\_

### Notice

All rights reserved. Reproduction in any manner, in whole or in part, is strictly prohibited without the written permission of LG Electronics Inc.

### Trademark Acknowledgments

**LG** is a trademark of **LG Electronics Inc.**

**IBM** is a registered trademark and **VGA** is a trademark of International Business Machines Corporation.

---

**Warning** : To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

**Avertissement** : Ne pas placer cet appareil dans un endroit humide. Cela peut entraîner un incendie ou une décharge électrique.

## **Important Precautions**

---

This unit has been engineered and manufactured to assure your personal safety, but improper use can result in potential electrical shock or fire hazard. In order not to defeat the safeguards incorporated in this monitor, observe the following basic rules for its installation, use, and servicing. Also follow all warnings and instructions marked directly on your monitor.

### **On Safety**

---

Use only the power cord supplied with the unit. In case you use another power cord, make sure that it is certified by the applicable standards (UL/CSA or VDE) if not being provided by the supplier.

Operate the monitor only from a power source indicated in the specifications of this manual or listed on the monitor. If you are not sure what type of power supply you have in your home, consult with your dealer.

Overloaded AC outlets and extension cords are dangerous. So are frayed power cords and broken plugs. They may result in a shock or fire hazard. Call your service technician for replacement.

### **Do not Open the Monitor**

- There are no user serviceable components inside.
- There are Dangerous High Voltages inside, even when the power is OFF.
- Contact your dealer if the monitor is not operating properly.

### **To Avoid Personal Injury :**

- Do not place the monitor on a sloping shelf unless properly secured.
- Use only a stand recommended by the manufacturer.
- Do not try to roll a stand with small casters across thresholds or deep pile carpets.

### **To Prevent Fire or Hazards:**

- Always turn the monitor OFF if you leave the room for more than a short period of time. Never leave the monitor ON when leaving the house.
- Keep children from dropping or pushing objects into the monitor's cabinet openings. Some internal parts carry hazardous voltages.

- 
- Do not add accessories that have not been designed for this monitor.
  - During a lightning storm or when the monitor is to be left unattended for an extended period of time, unplug it from the wall outlet.
  - Do not bring magnetic devices such as magnets or motors near the picture tube.
- 

### **On Installation**

---

Do not allow anything to rest upon or roll over the power cord, and do not place the monitor where the power cord is subject to damage.

---

Do not use this monitor near water such as near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.

---

Monitors are provided with ventilation openings in the cabinet to allow the release of heat generated during operation. If these openings are blocked, built-up heat can cause failures which may result in a fire hazard. Therefore, NEVER:

- Block the bottom ventilation slots by placing the monitor on a bed, sofa, rug, etc.
  - Place the monitor in a built-in enclosure unless proper ventilation is provided.
  - Cover the openings with cloth or other material.
  - Place the monitor near or over a radiator or heat source.
- 

### **On Cleaning**

---

- Unplug the monitor before cleaning the face of the picture tube.
  - Use a slightly damp (not wet) cloth. Do not use an aerosol directly on the picture tube because overspray may cause electrical shock.
- 

### **On Repacking**

---

- Do not throw away the carton and packing materials. They make an ideal container in which to transport the unit. When shipping the unit to another location, repack it in its original material.
-



## **Connecting the Monitor**

---

### **Connecting to IBM PC**

Figure 3 shows the signal cable connections from the monitor to the Video Graphics Array (VGA) port typical in an IBM PC or PC compatible. This also applies to any graphics video card for PC-CAD or workstation that has a 15 pin high density (3 row) D-Sub connector.

1. Power off both the monitor and PC.
2. Connect the 15 pin VGA connector of the supplied signal cable to the output VGA video connector on the PC and the matching input connector on the rear of the monitor. The connectors will mate only one way. If you cannot attach the cable easily, turn the connector upside down and try again. When mated, tighten the thumbscrews to secure the connection.
3. Power ON the PC, then the monitor.
4. If you see the **SELF DIAGNOSTICS** message, check the signal cable and connectors.
5. After using the system, power OFF the monitor, then the PC.

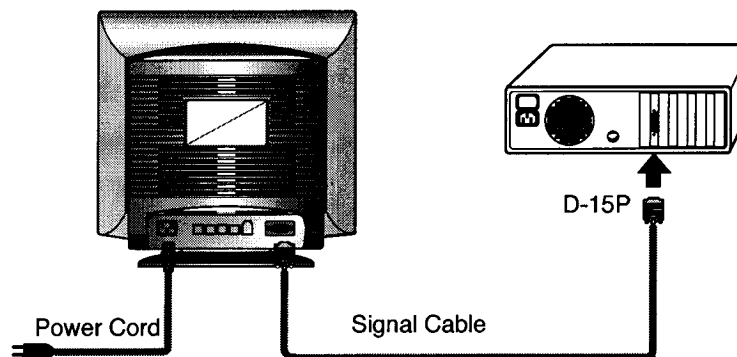


Figure 3.

---

## Connect an Apple Macintosh

Figure 4 shows the connection to an Apple Macintosh, using a separately purchased adapter.

- 1 Power OFF both the monitor and the PC.
- 2 Locate the appropriate MAC to VGA adapter block at your local computer store. This adapter changes the high density 3 row 15 pin VGA connector to the correct 15 pin 2 row connection to mate with your MAC. Attach the other end of the signal cable to the side of the adapter block with 3 rows.
- 3 Connect the attached adapter block/signal cable to the video output on your MAC.
- 4 Power ON the PC, then the monitor.
- 5 If you see the **SELF DIAGNOSTICS** message, check the signal cable and connectors.
- 6 After using the system, power OFF the monitor, then the PC.

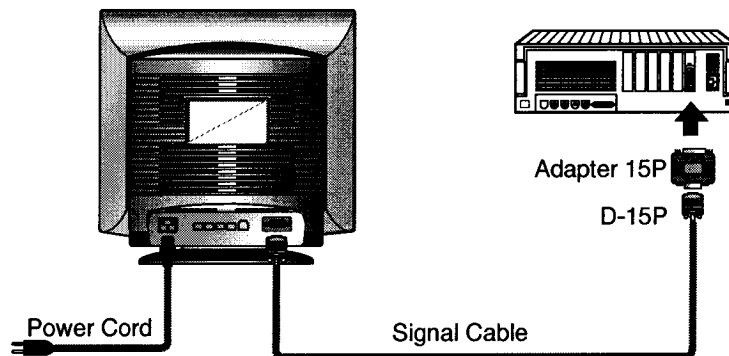





Figure 4.


## Making use of USB (Universal Serial Bus) in Windows 98

This monitor provide a hub which supports the USB standard. When connecting to a USB compliant PC or another hub, the monitor functions as a hub to which the USB compliant peripherals can be connected. The USB standardized connectors enable the easy connection with these peripherals.

### Connection

- (1) Connect the upstream port of the monitor to the downstream port of the USB compliant PC or another hub using the USB cable.
- (2) Connect the USB compliant peripherals to the downstream ports the monitor

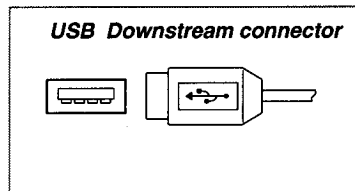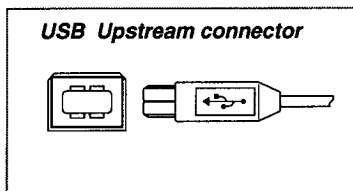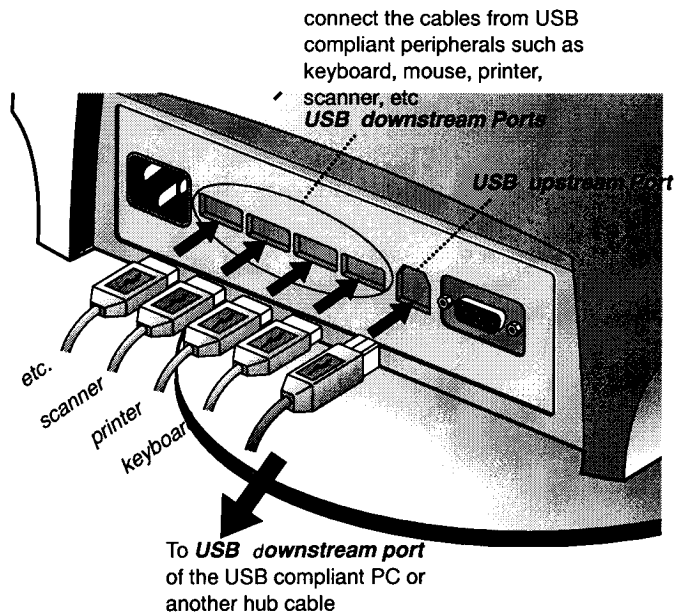

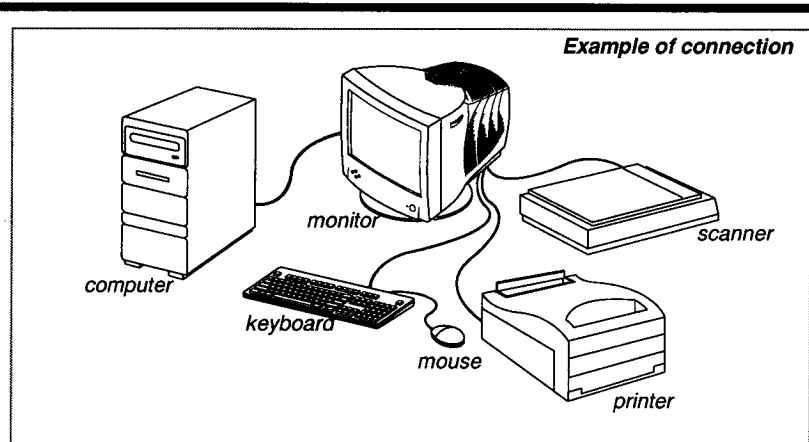

**Note :** To activate the USB hub function, the monitor must be connected to a USB compliant PC(OS) or another hub with the USB cable(enclosed).

When connecting the USB cable, check that the shape of the connector at the cable side matches the shape at the connecting side.

When the monitor is not on, the peripherals connected to the downstream ports will not operate.

Even if the monitor is in a power saving mode, USB compliant devices will function when they are connected the USB ports(both the upstream and downstream) of the monitor.

**As an added advantage,** the monitor can be controlled from a PC with a mouse or keyboard when utilizing the "LGUSBV1.ZIP" file downloaded from LG Internet site(<http://www.lge.co.kr>)


### USB specifications

USB standard	Rev. 1.0 complied self-powered hub
Downstream power supply	500mA for each (MAX)
Communication speed	12 Mbps (full), 1.5 Mbps (low)
USB port	1 Upstream port 4 Downstream ports


## Location and Function of Controls

---

### Front View

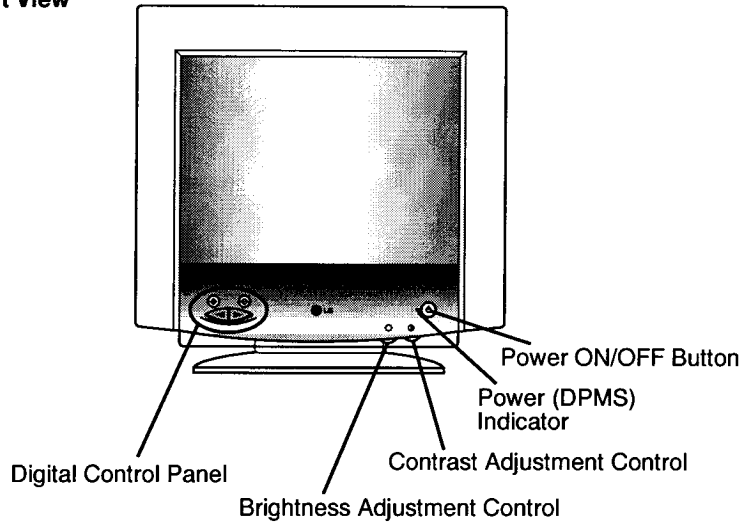




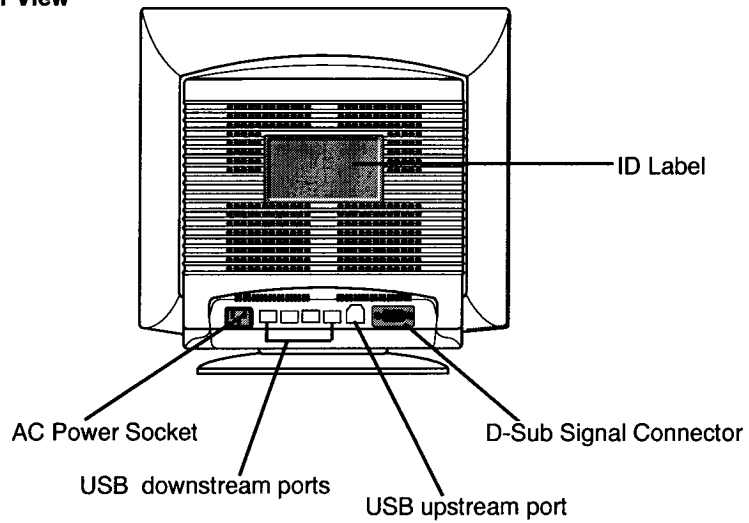




### Rear View

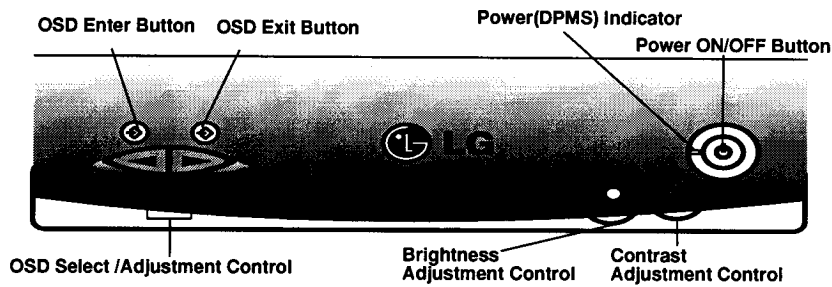

## Control Panel Function

### Digital Controls Panel




Control	Function
 <b>OSD Enter Button</b>	Use this button to start/enter and exit from the On Screen Display (OSD). If there is no OSD on the screen, One click (press) of this button will show the Main Menu.
 <b>OSD Exit Button</b>	To disappear of the OSD on the screen.
 <b>OSD Select/Adjustment Control</b>	Use this knob for selecting (highlighting) an OSD icon to be adjusted. It is also used for selecting the level of the selected item to be adjusted.
 <b>Brightness Adjustment Control</b>	Used to adjust the brightness of the screen.
 <b>Contrast Adjustment Control</b>	Adjust the display to the contrast desired.
 <b>Power (DPMS) Indicator</b>	This indicator lights up green when the monitor operates normally. If the monitor is in DPM (Energy Saving) mode (stand-by/suspend/power off), this indicator color changes to amber.
 <b>Power ON/OFF Button</b>	Use this button to turn the monitor on or off.

## On Screen Display (OSD) Control Adjustment

Making adjustments to the image size, position and operating parameters of the monitor are quick and easy with the On Screen Display Control system, using only the Enter button and Adjustment Control buttons. A quick example is given below to familiarize you with the use of the controls. Following this section is an outline of the available adjustments and selections you can make using the OSD.



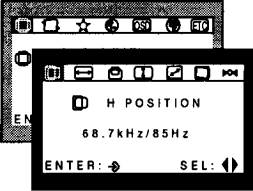

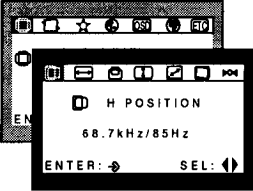

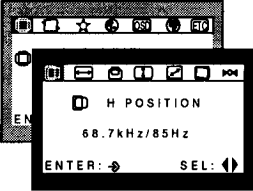

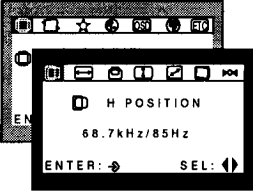

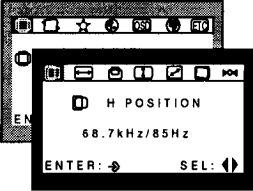

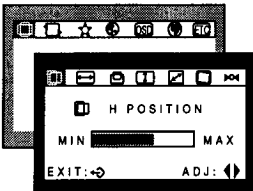

**Note** : Allow the monitor to stabilize for at least 30 minutes before making image adjustment.

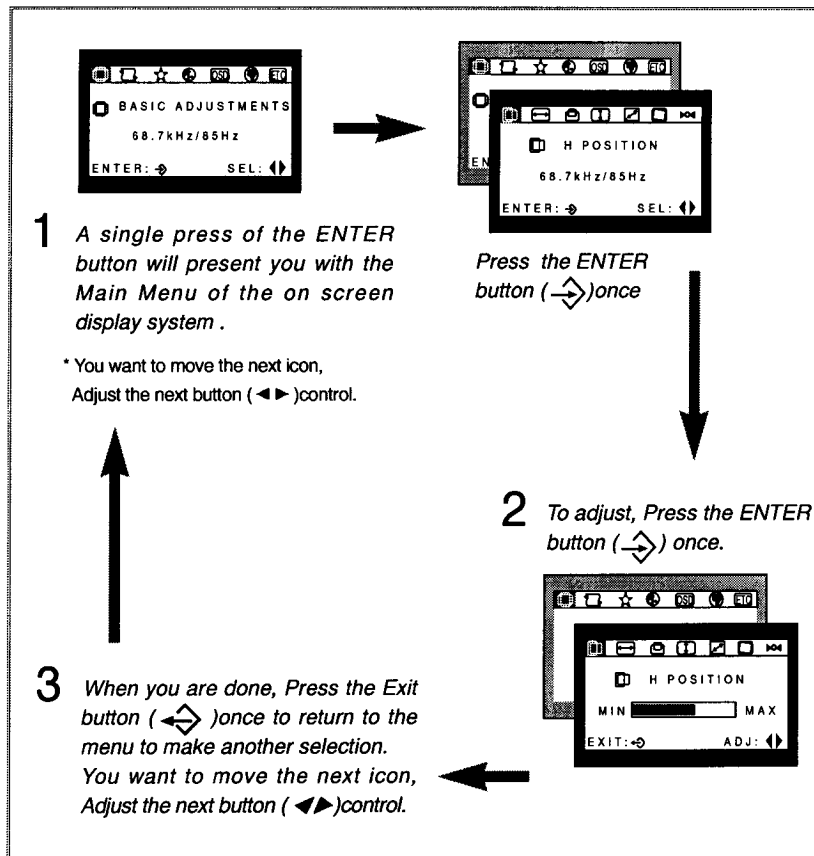








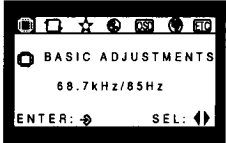


## On Screen Display(OSD) Selection and Adjustment




You were introduced to the procedure of selection and adjusting an item using the OSD system.

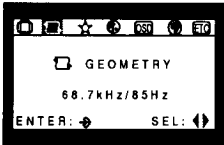
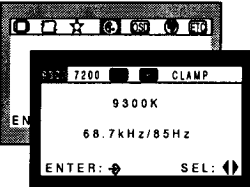
Listed below are the icons, icon names, and icon descriptions of the items that are shown on the Menu.

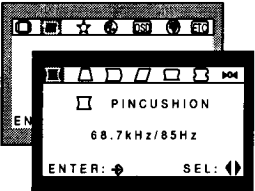

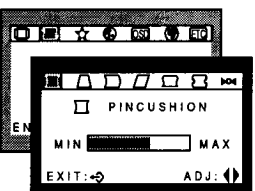




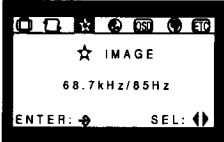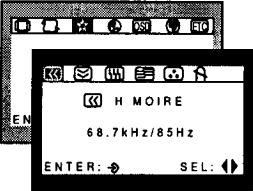

OSD Adjust	Description
	 <b>H Position (Horizontal Position)</b> To move picture image left and right.
	 <b>H Size (Horizontal Size)</b> To adjust image width.
	 <b>V Position (Vertical Position)</b> To move image up and down.
	 <b>V Size (Vertical Size)</b> To adjust image height.
	 <b>Zoom</b> To adjust horizontal and vertical image size simultaneously.
	 <b>Tilt</b> To correct image rotation.
	 <b>Recall</b> If the monitor is operating in a factory preset mode, this control will reset the image to the factory preset mode. If the monitor is operating in a user mode, this control has no effect.





OSD Adjust	Description
 <p>The image shows the 'GEOMETRY' OSD menu. At the top, there is a navigation bar with icons for menu, back, star, forward, and exit. Below it, the text reads 'GEOMETRY' and '68.7kHz/85Hz'. At the bottom, there are controls for 'ENTER' (a right arrow) and 'SEL' (left and right arrows).</p>	<p> <b>(side) Pincushion</b> To correct the bowing in and out of the image.</p> <hr/> <p> <b>Trapezoid</b> To correct geometric distortion.</p> <hr/> <p> <b>Pin balance (Side pincushion balance)</b> To correct the balance of both sides bowling.</p> <hr/>
 <p>The image shows the 'PINCUSHION' OSD menu. It features the same navigation bar as the 'GEOMETRY' menu. The text reads 'PINCUSHION' and '68.7kHz/85Hz'. At the bottom, there are controls for 'ENTER' (a right arrow) and 'SEL' (left and right arrows).</p>	<p> <b>Parallelogram</b> This control adjusts for a skewing of the screen image.</p> <hr/> <p> <b>Pin S Adjust</b> To correct the balance of both sides S bowling.</p> <hr/>
 <p>The image shows the 'PINCUSHION' OSD menu with a slider control. It features the same navigation bar. The text reads 'PINCUSHION' and '68.7kHz/85Hz'. Below the text is a horizontal slider bar with 'MIN' on the left and 'MAX' on the right. At the bottom, there are controls for 'EXIT' (a right arrow) and 'ADJ' (left and right arrows).</p>	<p> <b>Pin W Adjust</b> To correct the balance of both sides W bowling.</p> <hr/> <p> <b>Recall</b> Select the <b>Recall</b> screen to reset Side Pincushion Balance, Parallelogram, Pin S Adjust and Pin W Adjust to their original factory preset settings. If the monitor is operating in a user mode, this control has no effect.</p>

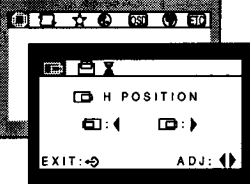OSD Adjust	Description
	<p><b>H Moire (Horizontal Moire)</b>  Reduce horizontal moire when interference patterns of dark steady wavy lines appear on your screen. The moire adjustments may affect the focus of the screen.</p>
	<p><b>V Moire (Vertical Moire)</b>  Reduce vertical moire when interference patterns of dark steady wavy lines appear on your screen. The moire adjustments may affect the focus of the screen.</p>
	<p><b>H Convergence (Horizontal Convergence)</b>  This item allows you to adjust the horizontal convergence. The horizontal convergence control adjust the alignment of the red and blue horizontal fields.</p>
	<p><b>V Convergence (Vertical Convergence)</b>  This item allows you to adjust the vertical convergence. The vertical convergence control adjust the alignment of the red and blue vertical fields.</p>
	<p><b>Purity</b>  This control adjust the purity of the overall image. You should only use this control if you notice an unevenness in a color.</p>
	<p><b>Degauss</b>  Used to demagnetize the picture to give a more accurate image and color.</p>

OSD Adjust	Description
	<p><b>9300 9300K</b> To appear the display's color temperature. Slightly bluish white.</p>
	<p><b>7200 7200K</b> To appear the display's color temperature. Slightly reddish white.</p>
	<p><b>User</b> To set your own color levels. Allow for specific adjustments to Red, Green and Blue (R/G/B).</p>
	<p><b>Color Temp (Temperature)</b> Temperature range is from 4000K to 10000K. So, user easily color set without adjustment Red, Green and Blue (R/G/B).</p>
	<p><b>CLAMP Clamp</b> In case of input SOG(Sync On Green) Video Signal, the back raster will appear the green. Then, to select the SOG(Sync On Green) in the clamp, will take you back to the original back raster.</p>


OSD Adjust	Description
 <p>The screenshot shows the 'OSD ADJUST' menu with the text '68.7kHz/85Hz' and navigation options 'ENTER: →' and 'SEL: ◀▶'.</p>	<p> <b>H Position (Horizontal Position)</b> This item lets you adjust the OSD horizontal position.</p>
 <p>The screenshot shows the 'H POSITION' menu with the text '68.7kHz/85Hz' and navigation options 'ENTER: →' and 'SEL: ◀▶'.</p>	<p> <b>V Position (Vertical Position)</b> This item lets you adjust the OSD vertical position.</p>
 <p>The screenshot shows the 'OSD TIME' menu with navigation options 'EXIT: →' and 'ADJ: ◀▶'.</p>	<p> <b>OSD Time</b> To control OSD display time from 5 second to 120 second.</p>
 <p>The screenshot shows the 'LANGUAGE' menu with the text '68.7kHz/85Hz' and navigation options 'ENTER: →' and 'SEL: ◀▶'.</p>	<p> <b>Language</b> To choose the language in which the control names are displayed. OSD Menus are available in 7 language: <b>English, Deutsch, Français, Español, Italiano, Svenska and Suomi.</b></p>
 <p>The screenshot shows the language selection menu with options: ENGLISH, DEUTSCH, FRANÇAIS, ESPAÑOL, ITALIANO, SVENSKA, SUOMI. Navigation options 'EXIT: →' and 'SEL: ◀▶' are visible.</p>	

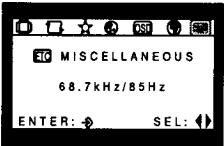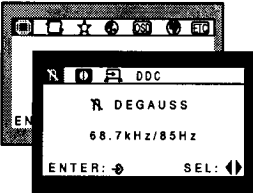OSD Adjust	Description
	<p><b>Degauss</b> Used to demagnetize the picture to give a more accurate image and color.</p> <hr/> <p><b>Information</b> To inform users of preset and user mode data. This item provides information about the stored video modes.</p>
	<p><b>Video Level</b> To select input signal Level (0.7V or 1.0V).</p> <hr/> <p><b>DDC (Display Data Channel)</b> To select the DDC function.</p>

## Video Memory Modes


The monitor has 37 memory locations for display modes, 12 of which are factory preset to popular video modes.

### Factory Preset Timing Signal Chart

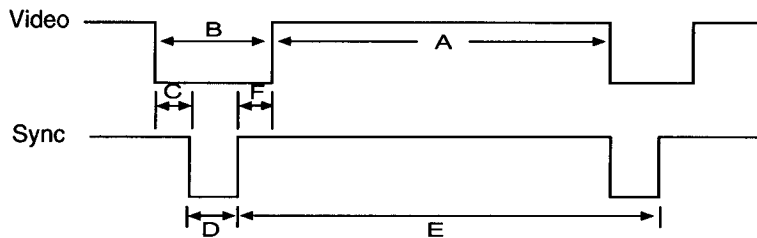

		Mode1	Mode2	Mode3	Mode4	Mode5	Mode6	Symbol	
		VESA							
H O R I Z O N T A L	Polarity	-	-	-	-	+	+		
	Frequency	kHz	31.469	31.469	43.269	49.725	53.674	60.023	
	Total Period	uS	31.778	31.778	23.112	20.111	18.631	16.660	A
	Data Period	uS	25.422	25.422	17.778	14.525	14.222	13.003	B
	Blanking	uS	6.356	6.356	5.334	5.586	4.409	3.657	C
	Front Porch	uS	0.640	0.636	1.556	0.559	0.569	0.203	D
	Pulse Width	uS	3.810	3.813	1.556	1.117	1.138	1.219	E
Back Porch	uS	1.9060	1.907	2.222	3.910	2.702	2.235	F	
V E R T I C A L	Polarity	+	-	-	-	+	+		
	Frequency	Hz	70.082	59.940	85.008	74.550	85.061	75.029	
	Total Period	mS	14.270	16.683	11.763	13.414	11.756	13.328	A
	Data Period	mS	12.710	15.253	11.093	12.549	11.178	12.795	B
	Blanking	mS	1.557	1.430	0.670	0.865	0.578	0.533	C
	Front Porch	mS	0.413	0.318	0.023	0.040	0.019	0.017	D
	Pulse Width	mS	0.064	0.064	0.069	0.061	0.056	0.050	E
Back Porch	mS	1.080	1.048	0.578	0.764	0.503	0.466	F	
Resolution		720 x 400	640 x 480	640 x 480	832 x 624	800 x 600	1024 x 768		
Recall		YES	YES	YES	YES	YES	YES		

## Factory Preset Timing Signal Chart

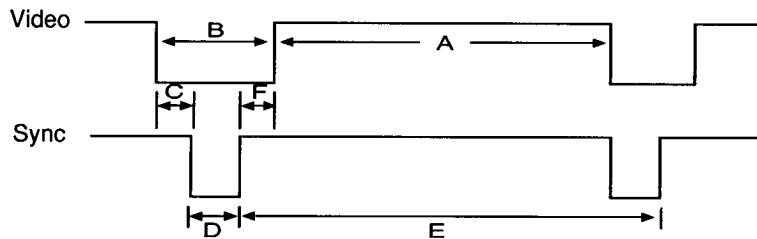

		Mode7	Mode8	Mode9	Mode10	Mode11	Mode12	Symbol	
		VESA				APPLE			
H O R I Z O N T A L	Polarity	+	-	+	+	+	+		
	Frequency	kHz	68.677	68.681	77.487	79.976	91.146	93.750	
	Total Period	uS	14.561	14.560	14.815	12.504	10.971	10.666	A
	Data Period	uS	10.836	11.560	10.667	9.481	8.127	7.901	B
	Blanking	uS	3.725	3.040	4.148	3.023	2.844	2.765	C
	Front Porch	uS	0.508	0.320	0.593	0.119	0.406	0.316	D
	Pulse Width	uS	1.016	1.280	1.185	1.067	1.016	0.948	E
Back Porch	uS	2.201	1.440	2.370	1.837	1.422	1.501	F	
V E R T I C A L	Polarity	+	-	+	+	+	+		
	Frequency	Hz	84.997	75.062	85.057	75.025	85.024	75.000	
	Total Period	mS	11.765	13.322	13.333	13.329	11.762	13.333	A
	Data Period	mS	11.183	12.667	12.800	12.804	11.235	12.800	B
	Blanking	mS	0.582	0.655	0.533	0.525	0.527	0.533	C
	Front Porch	mS	0.015	0.044	0.015	0.013	0.011	0.011	D
	Pulse Width	mS	0.044	0.044	0.044	0.038	0.033	0.032	E
Back Porch	mS	0.523	0.567	0.474	0.475	0.483	0.490	F	
Resolution		1024 x 768	1152 x 870	1152 x 864	1280 x 1024	1280 x 1024	1600 x 1200		
Recall		YES	YES	YES	YES	YES	YES		

---

### **User Modes**

Modes 1-25 are empty and can accept new video data. If the monitor detects a new video mode that has not been present before or is not one of the preset modes, it stores the new mode automatically in one of the empty modes starting with mode 1.

If you use up the 25 blank modes and still have more new video modes, the monitor replaces the information in the user modes starting with mode 1.

### **Recalling Display Modes**

When your monitor detects a mode it has seen before, it automatically recalls the image settings you may have made the last time you used that mode.

You may, however, manually force a recall of each of the 12 preset modes by pressing the Recall button. All preset modes are automatically recalled as the monitor senses the incoming signal.

The ability to recall the preset modes is dependent on the signal coming from your PC's video card or system. If this signal does not match any of the factory modes, the monitor automatically sets itself to display the image.



## Energy Saving Design

This monitor complies with the EPA's Energy Star program, which is a program designed to have manufacturers of computer equipment build circuitry into their products to reduce power consumption during time of non-use.

This monitor also goes into its energy saving mode if you exceed the monitor's operating limits, such as the maximum resolution of 1600x1200 or the frequency refresh rates of 30-96kHz horizontal or 50-160Hz vertical. When this monitor is used with a Green or EPA Energy Star PC, or a PC with a screen blanking software following the VESA Display Power Management Signalling (DPMS) protocol, this monitor can conserve significant energy by reducing power consumption during periods of non-use. When the PC goes into the energy saving mode, the monitor will go into a suspended operation state, indicated by the Power LED light changing from a green color to an amber color. After an extended period in the suspended mode, the monitor will then enter a semi-OFF mode to conserve more energy. In the semi-OFF mode or DPMS OFF mode as we call it in our specifications, the Power LED will still show an amber color. When you awaken your PC by hitting a key or moving the mouse, the monitor will also awaken to its normal operating mode, indicated by the green Power LED light. By following these conventions, the power consumption can be reduced to the following levels:

### Power Consumption

Mode	Hori. Sync	Verti. Sync	Video	Power Consumption	LED Color
Normal(Max.)	On	On	Normal	≤ 150W	Green
Stand-by	Off	On	Off	≤ 8W	Amber
Suspend	On	Off	Off	≤ 8W	Amber
Off	Off	Off	Off	≤ 3W	Amber

## Low Radiation Compliance (MPR II)

---

This monitor meets one of the strictest guidelines available today for low radiation emissions, offering the user extra shielding and an antistatic screen coating. These guidelines, set forth by a government agency in Sweden, limit the amount of emission allowed in the Extremely Low Frequency (ELF) and Very Low Frequency (VLF) electromagnetic range.

## Self Diagnostics



This monitor can sense when there is a possible problem present, and informs you of this condition by presenting you with a **SELF DIAGNOSTICS** OSD. This OSD may pop up when it is On but no signal is detected. In this case the message **CHECK SIGNAL CABLE** will be high lighted, alerting you to check the signal cable connections.

## DDC (Display Data Channel)

DDC is a communication channel over which the monitor automatically informs the host system (PC) about its capabilities. This monitor has two DDC function; DDC1, DDC2B. DDC1 and DDC2B carry out uni-directional communication between the PC and the monitor. Under these situations, the PC sends display data to the monitor but not commands to control the monitor settings.

**Note** : PC must support DDC functions to do this.

If your monitor is displaying a mono chrome image or the wrong resolution, select the DDC OFF function.

## Troubleshooting

---

### Self diagnostics message.

- The signal cable is not connected.
- 

### OUT OF FREQUENCY message appears.

- The frequency of the sync input is outside the operating range of the monitor.

\*Horizontal Frequency: 30-96kHz

\*Vertical Frequency: 50-160Hz

Use the graphics board's utility software to change the frequency setting (Refer to the manual for graphics board).

---

### The power LED is illuminated amber.

- Display power management mode.
  - There is no sync signal.
  - The signal cable is not fastened securely.
  - Check the computer power and graphics adapter configuration.
- 

### The image on the SCREEN is not centered, or too small, or not a rectangle shape.

- Image adjustment not been done yet in the current operating mode. Use the SELECT and ◀ or ▶ buttons to set the image to your liking.
- 

### The monitor doesn't enter the power saving off mode (Amber).

- Computer video signal is not VESA DPMS standard. Either the PC or the video controller card is not using the VESA DPMS power management function.

**Note :** If the power indicator(LED) light is blinking amber, may result in abnormal condition of the monitor.

Then press a power ON/OFF button on the front panel control and call your service technician for more information.

---

## **Service**

---

Unplug the monitor from the wall outlet and refer servicing to qualified service personnel when :

- The power cord or plug is damaged or frayed.
- Liquid has been spilled into the monitor.
- The monitor has been exposed to rain or water.
- The monitor does not operate normally following the operating instructions. Adjust only those controls that are covered in the operating instructions. An improper adjustment of other controls may result in damage and often requires extensive work by a qualified technician to restore the monitor to normal operation.
- The monitor has been dropped or the cabinet has been damaged.
- The monitor exhibits a distinct change in performance.
- Snapping or popping from the monitor is continuous or frequent while the monitor is operating. It is normal for some monitors to make occasional sounds when being turned on or off, or when changing video modes.

---

Do not attempt to service the monitor yourself, as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

---

When replacement parts are required, have the service technician verify in writing that the replacements used have the same safety characteristics as the original parts. Use of manufacturer specified replacements can prevent fire, shock, and other hazards.

---

Upon completion of any service or repairs to the monitor, ask the service technician to perform the safety check described in the manufacturer's service manual.

---

When a video monitor reaches the end of its useful life, improper disposal could result in a picture tube implosion. Ask a qualified service technician to dispose of the monitor.

---

## Specifications


### Sync Signal Types

Priority	Type	H. Sync	V. Sync
1	Separate Sync	H. Sync	V. Sync
2	Composite Sync	H/V. Sync	N.C
3	Sync On Green	N.C	N.C

(N.C : No Connection)

### Signal Connector Pin Assignment

#### 15Pin D-Sub Signal Connector



Pin	Signal (D-Sub)
1	Red
2	Green
3	Blue
4	Ground
5	Self-Test
6	Red Ground
7	Green ground
8	Blue Ground
9	NC
10	Ground
11	Ground
12	SDA
13	H. Sync
14	V. Sync
15	SCL

## Specification

---

### Picture Tube

- 17 inch (16.0 inches viewable)
- 90 degree deflection, Dark face
- 0.24mm strip pitch High contrast
- W-ARAS(Wide-Anti-Reflective Anti-Static )Coating

### Sync Input

- Horizontal Frequency :30-96kHz (Automatic)
- Vertical Frequency :50-160Hz (Automatic)
- Input Form :Separate TTL, Positive/Negative  
Composite TTL, Positive/Negative  
SOG(Sync On Green)
- Signal input :15pin D-Sub Connector

### Video Input

- Display Area :32.51 x 24.38 cm (H x V)
- Input Form :Separate, RGB Analog, 0.7Vp-p/75 ohm,  
Positive

### Power Input

- AC 100-240V 50/60Hz 2.0A

### Dimensions (with tilt/swivel stand)

- Width : 416mm
- Height : 432mm
- Depth : 440mm

### Weight

- Net: 18.0 kg

Information in this document is subject to change without notice and does not represent a commitment on the part of LG Electronics Inc.