

Contents

ENGLISH

Introduction	A1
Connecting the Monitor	A2
Location and Function of Controls	A3
Control Panel Function	A4
On Screen Display (OSD) Control Adjustment	A5
On Screen Display(OSD) Selection and Adjustment	A6
Video Memory Modes	A8
Troubleshooting	A9
Specifications	A10

DEUTSCH

Einleitung	B1
Anschließen	B2
Ort und Funktion der Bedienelemente	B3
Bedienelemente der Bildkontrolle.....	B4
On Screen Display (OSD) Anpassung	B5
OSD Einstellung und Auswahlssymbole	B6
Videospeichermodi	B8
Störungen.....	B9
Produktbeschreibung	B10

FRANÇAIS

Introduction	C1
Branchement du Moniteur	C2
Nomenclature et Fonctions	C3
Fonctions du Panneau de Commande	C4
Réglage des Commandes Affichage Écran.....	C5
Options de sélection et de Réglage OSD (affichage écran)	C6
Mise en Mémoire de Modes Vidéo.....	C8
Quelques Conseils en Cas D'incident.....	C9
Spécifications D'entree	C10

ITALIANO

Introduzione	D1
Collegamento del Monitor	D2
Posizione e Funzione dei Conandi di Controllo ..	D3

Funzione del Pannello di Controllo.....	D4
Controllo Regolazione On Screen Display (OSD)	D5
Elementi di Selezione e Regolazione dell'OSD	D6
Modalità di Memoria Video	D8
In Caso di Problemi	D9
Specifiche.....	D10

ESPAÑOL

Introducción	E1
Conectando del Monitor	E2
Ubicacion y Funcion de los Controles	E3
Función del Panel de Control	E4
Ajuste del Control de Exhibición en Pantalla (OSD)	E5
Ajuste del OSD y Selección de Elementos	E6
Modos de Memoria de Video	E8
Sugerencias para Localizar las Fallas.....	E9
Especificaciones	E10

PORTUGUÊS

Introdução.....	F1
Conectando o Monitor	F2
Posição dos Controles e Descrição	F3
Funções do Painel de Controle	F4
Ajuste On Screen Display(OSD)	F5
Ajustes OSD e Itens de Seleção	F6
Modos de Memória de Vídeo	F8
Resolvendo Problemas.....	F9
Especificações	F10

NEDERLANDS

Inleiding	N1
De Monitor Aansluiten	N2
De plaatsing en de werking van de knoppen.....	N3
Het bedieningspaneel	N4
Bediening via het beeldscherm OSD (On Screen Display)	N5
Kiezen en instellen via het OSD-systeem.....	N6
Modi voor videogeheugen.....	N8
Problemen oplossen.....	N9
Specificaties	N10

FCC Warning

Class B Computing Device

Information to the User

This equipment has been tested and found to comply with the limits for a class B digital device pursuant to part 15 of FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help and for additional suggestions.

The user may find the following booklet prepared by the Federal Communications Commission helpful: "How to Identify and Resolve Radio-TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington, D.C. 20402, Stock No. 004-000-00345-4.

FCC Warning

The user is cautioned that changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

NOTE: In order for an installation of this product to maintain compliance with the limits for a Class B device, **shielded cables** must be used.

Introduction

The FLATRON LCD 563LE/LS Flat Panel Monitor has an active matrix TFT (Thin-Film Transistor) LCD (Liquid Crystal Display). This monitor is designed for use in small working areas or for those who need more working space on the desk.

ENGLISH

Features


- The FLATRON LCD 563LE/LS is a 15.1-inch (15.1 inches viewable) intelligent microprocessor based monitor.
- Digitally controlled auto-scanning is done with the microprocessor for horizontal scan frequencies between 31 and 61kHz, and vertical scan frequencies between 56 and 75Hz.
- The microprocessor-based digital controls allow you to adjust conveniently a variety of image controls by using the OSD (On Screen Display).
- It supports resolutions up to 1024x768, and has a wide viewing angle of ± 60 degrees horizontal and ± 45 degrees vertical.
- The monitor is shipped with 14 factory pre-programmed video modes that are permanently resident. In addition, there are 16 user-storable modes, for a total of 30 memory modes.
- Plug and play capability if supported by your system.
- This monitor has DDC 2B function.*
- Compliant with the following regulated specifications :*
 - EPA ENERGY STAR
 - Swedish TCO'99

**For detailed information, please refer to the Reference Guide provided.*

Connecting the Monitor

On the back of the monitor are two plug-in connections; one for the AC power cord, and the other for the signal cable from the video card.


- ① Power off both the monitor and PC.
- ② Connect the 15 pin VGA connector of the supplied signal cable to the output VGA video connector on the PC and the matching input connector on the rear of the monitor. The connectors will mate only one way. If you cannot attach the cable easily, turn the connector upside down and try again. When mated, tighten the thumbscrews to secure the connection.
- ② Locate the appropriate MAC to VGA adapter block at your local computer store. This adapter changes the high density 3 row 15 pin VGA connector to the correct 15 pin 2 row connection to mate with your MAC. Attach the other end of the signal cable to the side of the adapter block with 3 rows.
Connect the attached adapter block/signal cable to the video output on your MAC.
- ③ Connect the plug from the AC-DC adapter into the connector on the display unit. ① Connect one end of the AC power cord into the AC-DC adapter. ② Plug the other end into a properly grounded three-prong AC outlet. ③
- ④ Power on the PC, then the monitor.
- ⑤ If you see the **NO SIGNAL** message, check the signal cable and connectors.
- ⑥ After using the system, power off the monitor, then the PC.

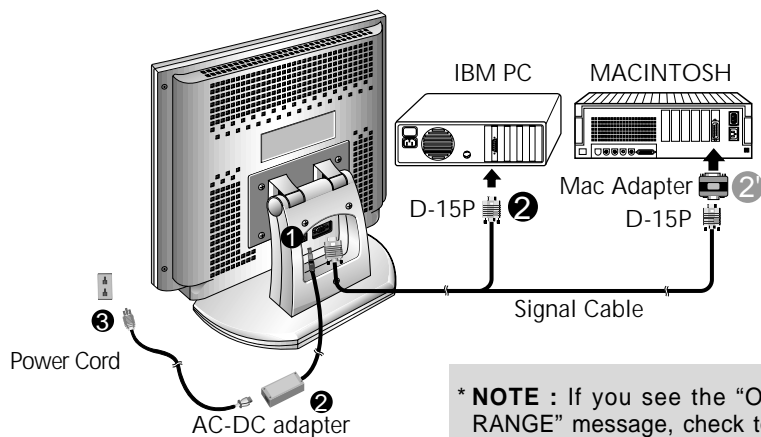


* **NOTE** : If you see the "OUT OF RANGE" message, check to make sure your system is set to one of the factory preset modes.(see page A8)

Location and Function of Controls

Front View

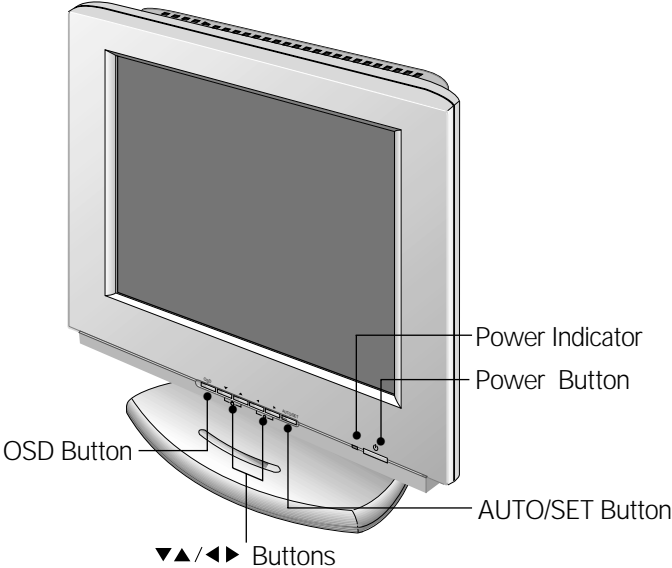




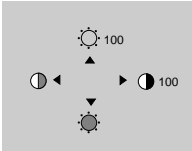


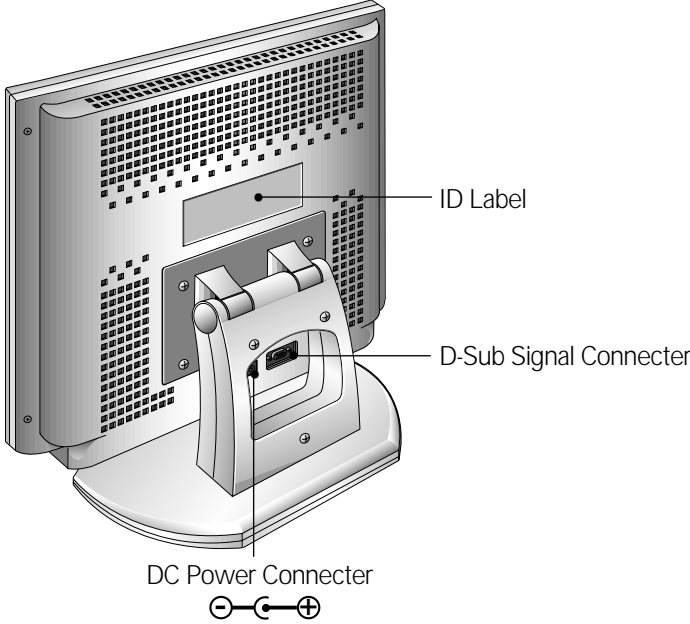

Rear View

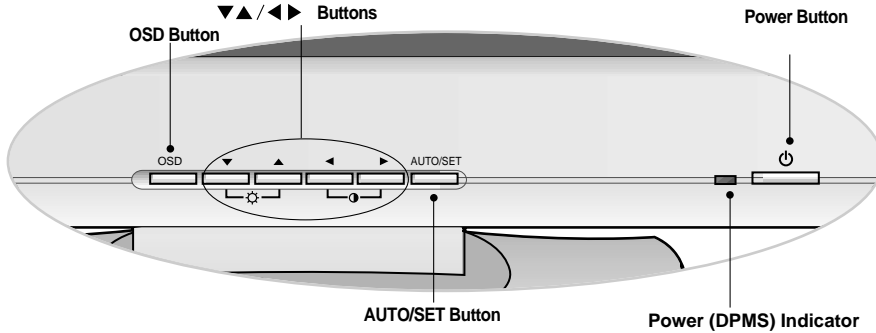

Control Panel Function

Front Panel Controls



Control	Function
 OSD Button	<p>Use this button to enter and from the on screen display (OSD).</p>
 Buttons 	<p>Use these buttons to choose or adjust items in the on screen display.</p> <p><Shortcut Keys></p> <ul style="list-style-type: none"> Brightness and Contrast can be adjusted directly without entering the On Screen Display (OSD) system. Touch the ▼/▲/◀/▶ buttons to adjust the settings and then the OSD button to save all changes. The Brightness and Contrast functions are also available in the On Screen Display (OSD) menu.
 AUTO/SET Button 	<p>Use this button to enter a selection in the on screen display.</p> <p>* AUTO adjustment function</p> <p>Touch the AUTO/SET button before using OSD menu. This button is for the automatic adjustment of the screen position, clock and phase.</p> <p>Note: Some signal from some graphics boards may not function properly. If the results are unsatisfactory, adjust your monitor's Position, Clock and Phase manually.</p>
 Power (DPMS) Indicator	<p>This indicator lights up green when the monitor operates normally. If the monitor is in DPM (Energy Saving) mode (stand-by/ suspend/power off), this indicator color changes to amber.</p>
 Power Button	<p>Use this button to turn the monitor on or off.</p>


On Screen Display (OSD) Control Adjustment

Making adjustments to the image size, position and operating parameters of the monitor are quick and easy with the On Screen Display Control system. A quick example is given below to familiarize you with the use of the controls. Following section is an outline of the available adjustments and selections you can make using the OSD.

NOTE

- Allow the monitor to stabilize for at least 30 minutes before making image adjustment.




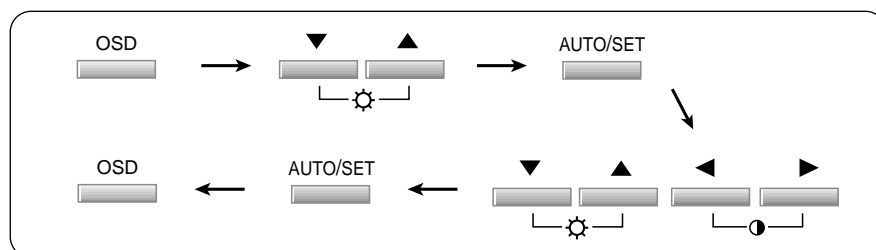







To make adjustments in the On Screen Display, follow these steps:

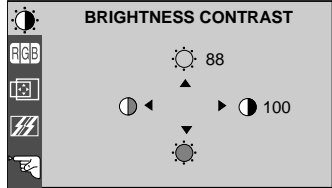



- 1 Press the **OSD Button**, then the main menu of the OSD appears.
- 2 To access a control, use the **▼▲ Buttons**. When the icon you want becomes highlighted, press the **AUTO/SET Button**.
- 3 Use the **▼▲/◀▶ Buttons** to adjust the item to the desired level.
- 4 Accept the changes by pressing the **AUTO/SET Button**.
- 5 Exit the OSD by Pressing the **OSD Button**.

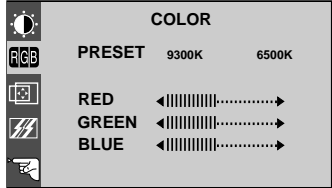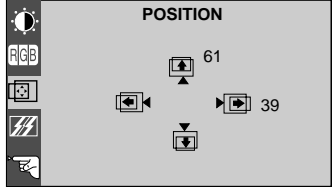On Screen Display(OSD) Selection and Adjustment

You were introduced to the procedure of selection and adjusting an item using the OSD system. Listed below are the icons, icon names, and icon descriptions of the items that are shown on the Menu.

OSD Adjust	Description
	<p>  Brightness Used to adjust the brightness of the screen.</p> <p>  Contrast Adjust the display to the contrast desired.</p>
	<p>PRESET 9300K/ 6500K To appear the displays color temperature.</p> <ul style="list-style-type: none"> • 9300K:Slightly bluish white. • 6500K:Slightly reddish white. <p>RED To set your own color levels.</p> <p>GREEN To set your own color levels.</p> <p>BLUE To set your own color levels.</p>
	<p>  Vertical Position To move image up and down.</p> <p>  Horizontal Position To move picture image left and right.</p>

On Screen Display(OSD) Selection and Adjustment

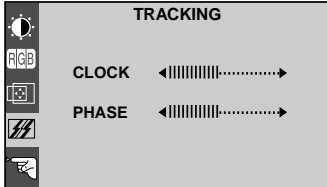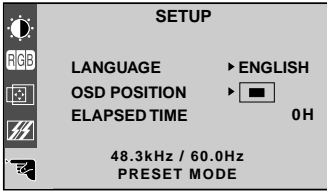OSD Adjust	Description
 <p>The screenshot shows the 'TRACKING' OSD menu. On the left is a vertical toolbar with icons for brightness, contrast, RGB, tracking, phase, and a cursor. The main area contains 'CLOCK' and 'PHASE' settings, each with a horizontal bar graph and arrows for adjustment.</p>	<p>CLOCK To minimize any vertical bars or stripes visible on the screen background. The horizontal screen size will also change.</p> <p>PHASE To adjust the focus of the display. This item allows you to remove any horizontal noise and clear or sharpen the image of characters.</p>
 <p>The screenshot shows the 'SETUP' OSD menu. On the left is the same vertical toolbar. The main area contains 'LANGUAGE' (set to ENGLISH), 'OSD POSITION' (with a small black square), 'ELAPSED TIME' (0H), and 'PRESET MODE' (48.3kHz / 60.0Hz).</p>	<p>LANGUAGE To choose the language in which the control names are displayed.</p> <p>OSD POSITION To adjust position of the OSD window on the screen.</p> <p>ELAPSED TIME To display the use time of monitor</p>

Video Memory Modes

The monitor has 30 memory locations for display modes, 14 of which are factory preset to popular video modes.

Display Modes (Resolution)

	Display Modes (Resolution)	Horizontal Freq.(kHz)	Vertical Freq.(Hz)
1	VGA 640 x 350	31.47	70
2	VGA 720 x 400	31.47	70
3	VGA 640 x 480	31.47	60
4	MAC 640 x 480	35.00	67
5	VESA 640 x 480	37.86	73
6	VESA 640 x 480	37.50	75
7	VESA 800 x 600	35.16	56
8	VESA 800 x 600	37.88	60
9	VESA 800 x 600	48.08	72
10	VESA 800 x 600	46.88	75
11	MAC 832 x 624	49.72	75
12	VESA 1024 x 768	48.36	60
13	VESA 1024 x 768	56.48	70
14	VESA 1024 x 768	60.02	75

Note : This LCD monitor has been pre-adjusted to the video mode of VESA 1024x768 @75Hz.

User Modes

- Modes 15-30 are empty and can accept new video data. If the monitor detects a new video mode that has not been present before or is not one of the preset modes, it stores the new mode automatically in one of the empty modes starting with mode 15.

If you use up the 16 blank modes and still have more new video modes, the monitor replaces the information in the user modes starting with mode 15.

Troubleshooting

Check the following before calling for service.

Display Position is incorrect.

- Push the **AUTO/SET** Button.
- If the results are unsatisfactory, adjust the image position using the H position and V position icon in the on screen display.

On the screen background, vertical bars or stripes are visible.

- Push the **AUTO/SET** Button.
- If the results are unsatisfactory, decrease the vertical bars or stripes using the **CLOCK** icon in the on screen display.

Any horizontal noise appearing in any image or characters are not clearly portraided.

- Push the **AUTO/SET** Button.
- If the results are unsatisfactory, decrease the horizontal bars using the **PHASE** icon in the on screen display.

NO SIGNAL message.

- The signal cable is not connected, or is loose. Check and secure the connection.

OUT OF RANGE message appears.

Picture is blank.

- The frequency of the signal from the video card is outside the operating range of the monitor.

Horizontal Frequency: 31kHz-61kHz

Vertical Frequency: 56Hz-75Hz

* Use the graphics board's utility software to change the frequency setting (Refer to the manual for graphics board).

* You can change the setup to the supported resolution using the **Safe Mode** (Press the F8 key during booting the system).


The power LED is illuminated amber.

- The monitor is in its display power management mode.
- There is no active signal coming from the PC.
- The signal cable is not fastened securely.
- Check the computer power and graphics adapter configuration.

The monitor doesn't enter the power saving off mode (Amber).

- Computer video signal is not VESA DPMS standard. Either the PC or the video controller card is not using the VESA DPMS power management function.

Specifications

Display	Type	15.1inch (38.35cm) Flat Panel Active matrix-TFT LCD, Anti-Glare coating
	Viewable Size	15.1inch (38.35cm)
	Pixel pitch	0.3 x 0.3mm
	True color	FLATRON LCD 563LE : 16, 7 million color FLATRON LCD 563LS : 262, 144 color
Sync Input	Horizontal Freq.	31 - 61kHz (Automatic)
	Vertical Freq.	56 - 75Hz (Automatic)
	Input Form	Separate TTL, Positive/Negative
	Signal Input	15 pin D-Sub Connector
Video Input	Display Area	307 x 230mm / 12.1 x 9.1inch
	Input Form	Separate, RGB Analog, 0.714Vp-p/75ohm, Positive
	Resolution	VESA 1024 x 768/ 75Hz max
Power Consumption	Normal	≤ 30W
	Stand-by/Suspend	≤ 3W
	Power Off	≤ 3W
Dimensions	Width	38.92 cm / 15.95 inches
	Height	36.16 cm / 14.24 inches
	Depth	18.24 cm / 7.18 inches
Power Input	DC 12V 3A	
AC-DC Adapter	Input	AC 100-240V 50-60Hz 1.2A~0.6A
	Output	DC 12V 1.5A 
Weight	Net	5.2 kg (11.46 lbs)
Tilt Range	Down	5°
	Up	30°
Environmental Conditions	Operating Condition	
	Temperature	10 °C to 35 °C
	Humidity	10 % to 80 % non-Condensing
	Storage Condition	
Temperature	-20 °C to 60 °C	
Humidity	5 % to 95 % non-Condensing	

NOTE

- Information in this document is subject to change without notice.