

Table Genie


System Interface Transmitter

QUICK SETUP & OPERATION


To Assemble the Table Genie

1. Remove Table Genie from packaging.
2. Contents will include:
 - 1 Table Genie
 - 1 Table Plate
 - 1 Double-side foam tape
 - 1 AA Battery
3. Pull the release tab back, then lift and remove the battery cover.
4. Insert the AA battery.
5. Reassemble the Table Genie

Release Tab of Battery Cover
Pull in Direction of Arrows

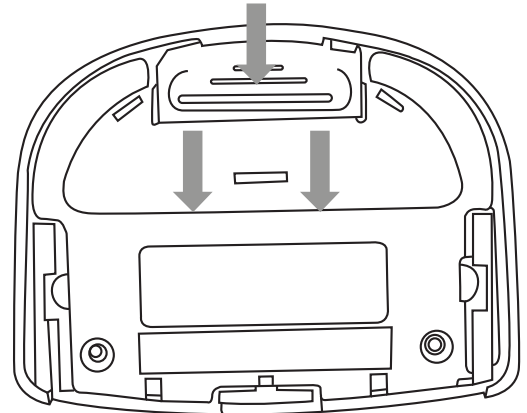

Battery

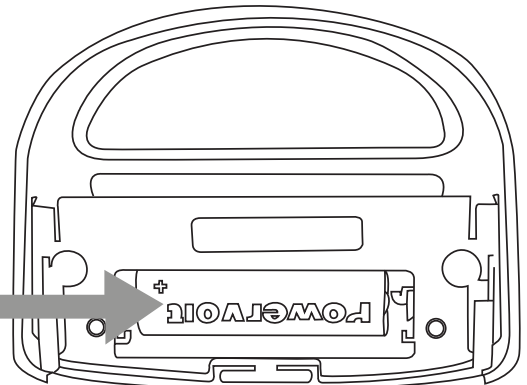


To Mount the Table Genie To the Table:

1. Choose to either use Double sided Foam Tape or 3 screws to hold the Table Plate to the Table.
2. Secure Table Plate to the Table.
3. Slide the Table Genie onto the Table Plate.

Push For Service Monitor

1. Press ENTER.
2. Press EXIT.

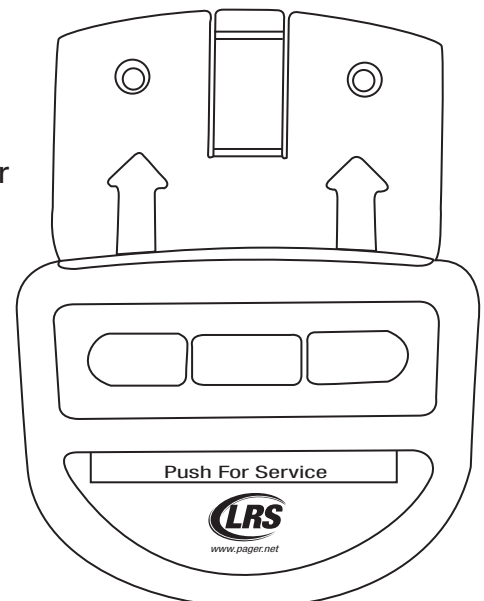

Associating Table Genie

1. From the Setup menu select SYSTEM TOOLS.
2. Select WPAN.
3. Select Associate (the unit will stay in associate for 5 minutes and then associate will have to be restarted.)
4. Install a battery in the Table Genie and press all 3 buttons after the unit begins to flash. Then:
 - The buttons will light back and forth.
 - The buttons will flicker rapidly.
 - The buttons will go out.
 - The popup will ask for the entry of a table number.
5. Repeat steps 3 and 4 until all units are associated.
6. To exit, press EXIT on T7502.

Note: If unit fails to join, remove battery, put unit aside, and repeat process after all other units are joined.

Operation

1. When a button is pressed on the Table Genie, a table number will be displayed and timer will start on the monitor.
2. The last pressed button on the Table Genie will blink until cleared.
3. To clear a unit, use the user defined cancel sequence (see user manual to change.)
4. When cleared, the button will stop flashing and the monitor will clear.
5. If the table monitor is not cleared
 - Within a preset time, the color for that table will change to yellow.
 - If the table is still not cleared after another preset time, the monitor for that table will turn red and the manager will be paged.
 - The manager will periodically be re-paged until the table is cleared.

Setup for Table Genie Operation

From the Setup menu select GLOBAL SETTINGS.

1. Select OPERATION MODE then Push For Service Monitor
2. Press ENTER.
3. Press EXIT.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause harmful interference.

Warning: Changes or modifications not expressly approved by Long Range Systems could void the user's authority to operate the equipment.

XU-0058 091114