


## Getting Started

### Power-On and Self-Test

When you connect the Disk Array to the Host computer, You should press the ON/OFF Power Supply Switch on the both power supply units and the Main Switch. It will turn the Disk Array on and the Self-Test will be started automatically.

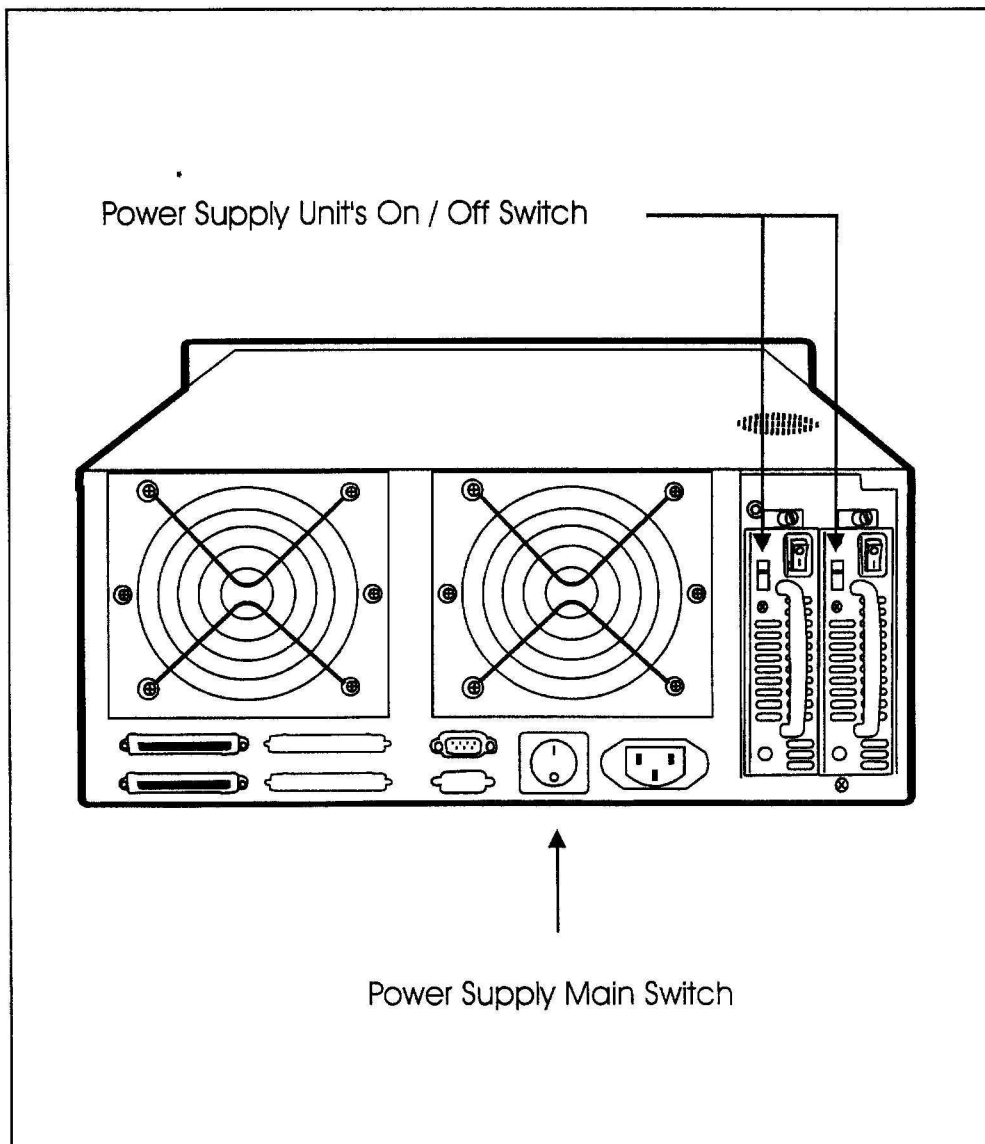

## Getting Started

### LED Display & Function Keys

#### ◎LED Display

Shown below is the LED Display. Please refer to the illustration, the LEDs inform you of the Disk Array's current operating status. Upon activating a certain function, the corresponding LED indicator should turn on indicating that the feature is engaged.

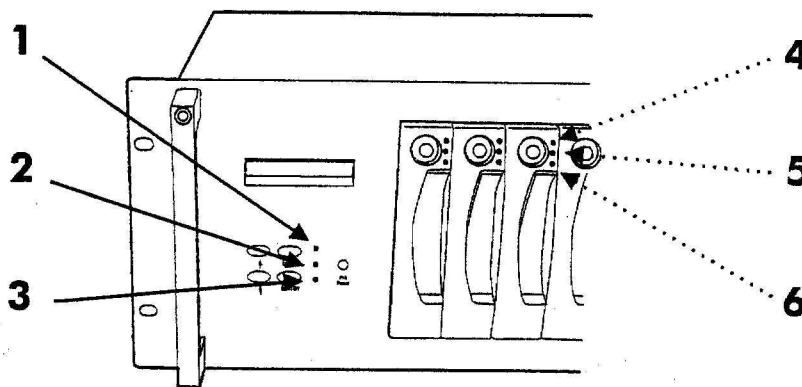


Figure : LED Display

| LED                               | Descriptions                                                                                |
|-----------------------------------|---------------------------------------------------------------------------------------------|
| 1. Power Unit 1 Indicator         | light up : "Green" , It lights when the Power Unit 1 is plugged and operating functionally. |
| 2. Power Unit 2 Indicator         | light up : "Green" , It lights when the Power Unit 2 is plugged and operating functionally. |
| 3. Host Computer Access Indicator | light up : "Yellow" , Indicates Host computer is currently accessing the Disk Array         |
| 4. HDD Power-On Indicator         | light up : "Green" , It lights when the HDD frame is locked and Power-On                    |
| 5. HDD Access Indicator           | light up : "Yellow" , when HDD is accessed                                                  |
| 6. HDD Error Indicator            | light up : "Red" , when the HDD not installed or error.                                     |

## Getting Started

---

### Function Keys

The four function keys at the top of the front panel perform the following functions :

|                               |                                              |
|-------------------------------|----------------------------------------------|
| ( ↑ ) Up Arrow / Right Arrow  | Use to scroll the cursor Upward / Rightward  |
| ( ↓ ) Down Arrow / Left Arrow | Use to scroll the cursor Downward / Leftward |
| ( Enter )                     | Use to confirm a selected item               |
| ( ESC )                       | Use to exit a selection                      |