 A Phoenix Mecano Company	Issue Department:	Date:	2019.01.07
	System Instruction	Author:	
	Instruction of RF27		
		Edition:	V0.0
Page 1 of 5			


Instruction of RF27

1 Key description

1.1 appearance




Figure 1 button of remote

 A Phoenix Mecano Company	Issue Department:	Date:	2019.01.07
	System Instruction	Author:	
	Instruction of RF27		
		Edition:	V0.0
Page 2 of 5			


2 Key description



Buttons & LEDs	Key value	Specification
B1:	CHILD LOCK	Press and hold child lock button till the backlight flashes remote enters locking or unlocking mode.
B2:	PAIR	press and hold pair button ,the remote enters pairing mode

 <small>A Phoenix Mecano Company</small>	Issue Department:	Date:	2019.01.07
	System Instruction	Author:	
	Instruction of RF27		
		Edition:	V0.0
Page 3 of 5			

B3:	M	Click M button, the bed moves to M position, press and hold M button for 5s, until backlight flashes, the control set the current position as M position
B4:	FLASH LIGHT	Click FLASH LIGHT button, open or close flash light
B5:	ZG	Click zeroG button, the bed moves to zeroG position, press and hold zeroG button for 5s, until backlight flashes, the control set the current position as zeroG position
B6:	HEAD UP	Press and hold head up button, head actuator moves out, stop when released
B7:	TV/PC	Click TV/PC button, the bed moves to TV/PC position, press and hold TV/PC button for 5s, until backlight flashes, the control set the current position as TV/PC position
B8:	FOOT UP	Press and hold foot up button, foot actuator moves out, stop when released
B9:	FLAT	Press and hold flat button, the bed goes flat
B10:	FOOTDOWN	Press and hold foot down button, foot actuator moves out, stop when released
B11:	ANTI SNORE	Click antisnore button, the bed moves to antisnore position, press and hold antisnore button for 5s until backlight flashes, the control set the current position as antisnore position
B12:	HEAD DOWN	Press and hold head down button, head actuator moves out, stop when released
B13:	LOUNGE	Click lounge button, the bed moves to lounge position, press and hold lounge button for 5s, until backlight flashes, the control set the current position as lounge position
B14:	MESSAGE HEAD	Click message head button to switch message intensity of head massage motors
B15:	TIMER	Click timer button to switch massage time
B16:	MESSAGE FOOT	Click message foot button to switch massage


 <small>A Phoenix Mecano Company</small>	Issue Department:	Date:	2019.01.07
	System Instruction	Author:	
	Instruction of RF27		
		Edition:	V0.0
Page 4 of 5			

		intensity of foot massage motors
B17:	MASSAGE ON/OFF	Click massage on/off button to turn on/off head & foot massage motors
B18:	UNDER BED LIGHT	Click under bed light button to turn on/off the under bed light
B19:	MASSAGE TYPE	Click massage type button to switch massage mode
LED 1:	LED 1	Massage time: 10 minutes
LED 2:	LED 2	Massage time: 20 minutes
LED 3:	LED 3	Massage time: 30 minutes
Other function 1:	Zero G + Flat	Press and hold zeroG and flat button for 5s until backlight flashes, the memory positions of control box reset to default settings

FCC Warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

	Issue Department:	Date:	2019.01.07
	System Instruction	Author:	
Instruction of RF27		Edition:	V0.0
Page 5 of 5			

ISED RSS Warning:

This device complies with Innovation, Science and Economic Development Canada licence exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'ISED applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes:

- (1) l'appareil ne doit pas produire de brouillage, et
- (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.


ISED RF exposure statement:

This equipment complies with ISED radiation exposure limits set forth for an uncontrolled environment. The device has been evaluated to meet general RF exposure requirement.

Le matériel est conforme aux limites de dose d'exposition aux rayonnements énoncés pour un autre environnement. ce dispositif a été évalué à satisfaire l'exigence générale de l'exposition aux rf.



FCC ID: PCU-RF27
IC: 21319-RF27

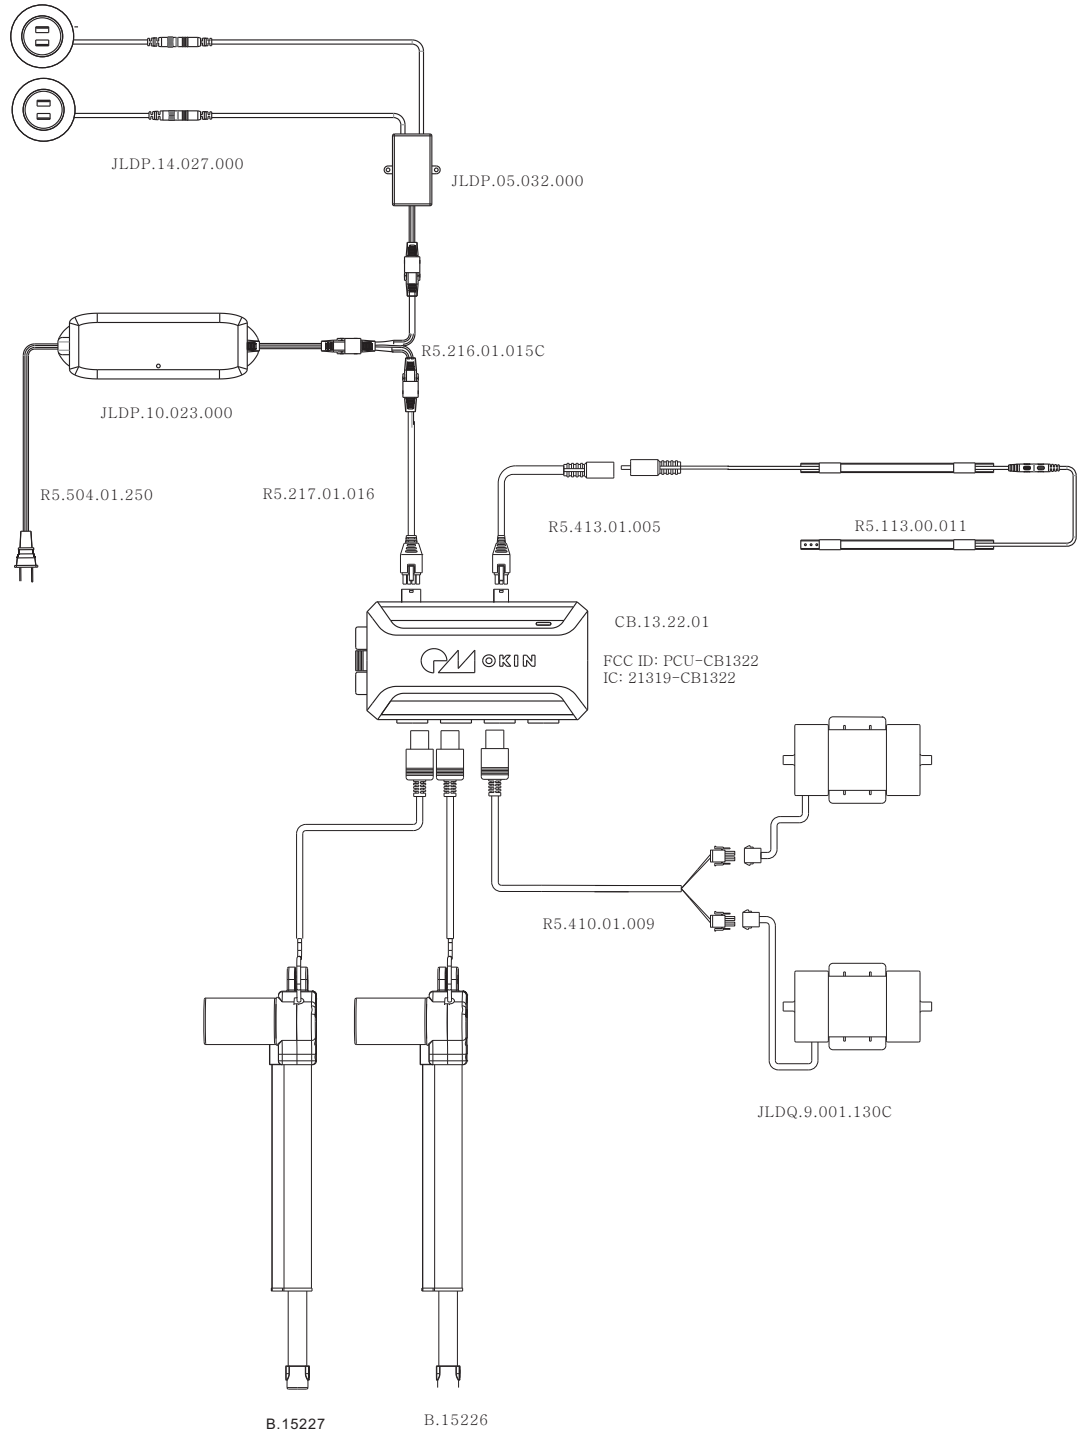

NO.	Product name	Product code	number
1	Head Motor	B.15227	1
2	Foot Motor	B.15226	1
3	Massage Motor	JLDQ.9.001.130C	2
4	Message Motor Cable	R5.410.01.009	1
5	Control Box	CB.13.22.01	1
6	Power Supply	JLDP.10.023.000	1
7	Power Cord	R5.217.01.016	1
8	ANSI power cord	R5.504.01.250	1
9	Y cable	R5.216.01.015C	1
10	Patch cord of LED strip	R5.413.01.005	1
11	LED strip/ LED	R5.113.00.011	1
12	USB Socket/USB	JLDP.05.032.000	1
13	Double USB Chager	JLDP.14.027.000	1
14	19Keys remote	RF27	1