
SmartPad™



Quick Start Guide

**Seiko Instruments USA Inc.
www.seikosmart.com**

Follow these easy steps to get started using your SmartPad and InkNote Manager software. Refer to the *User's Guide* on the CD-ROM for more information.

1. Install the Software

Before you install InkNote Manager, review the system requirements in the Readme.txt file or in the *User's Guide* (UsersGuide.pdf). Both files are on the CD-ROM.

- To use SmartPad with a Palm OS handheld, Palm HotSync Manager version 3.0.1 or later (part of Palm Desktop) must be working. To confirm that HotSync is installed and running properly, put your Palm OS handheld in the cradle or connect the cable and press the HotSync button on the cradle or cable.
- To use SmartPad with a Pocket PC device, Microsoft ActiveSync (version 3.1 or later) must be operating and have an active partnership with your Pocket PC. The words “Connected” and “Synchronized” must appear in the ActiveSync window. In addition, it must be configured to synchronize “Files.” If these conditions are not met, refer to the documentation you received with your Pocket PC device to get ActiveSync working.

To install InkNote Manager:

1. Connect your handheld and desktop computer using a cradle, cable, or infrared connection.
2. Insert the software CD-ROM in your computer's CD drive. The setup program starts automatically.
3. Follow the on-screen instructions.
4. The first time you start InkNote Manager on your handheld you will be asked to choose the pen hardware you are using. Tap SmartPad, then tap OK.

If you have a previous version of InkNote Manager, the setup program will uninstall it. Once it has been uninstalled, restart Setup by following the procedure below.

If the setup program doesn't start automatically:

1. On your desktop computer, click **Start, Run**.

-
2. In the Open box, type *d:\setup* (replace *d* with the drive letter of your CD drive) and then click **OK**.

Alternatively, double-click **My Computer**, double-click the icon for your CD drive, and then double-click **Setup.exe**.


Setup Tips

- During setup you might be asked for the hardware serial number. The serial number is located under the paper writing pad, in the lower-left hand corner.
- The first part of the serial number might already be displayed in the form. Be sure you don't repeat the first few characters. The hardware serial number begins with the characters SP00.
- On Windows NT, 2000, or XP, you must have administrative rights to install the software.
- If you get an error during setup, disable your anti-virus program and run setup again.

2. Install the SmartPad Portfolio Batteries

The SmartPad portfolio is powered by two AAA batteries. To install the batteries in the SmartPad portfolio:

1. Press down on the top edge of the battery cover and then slide the cover toward the bottom of the portfolio to remove the cover.

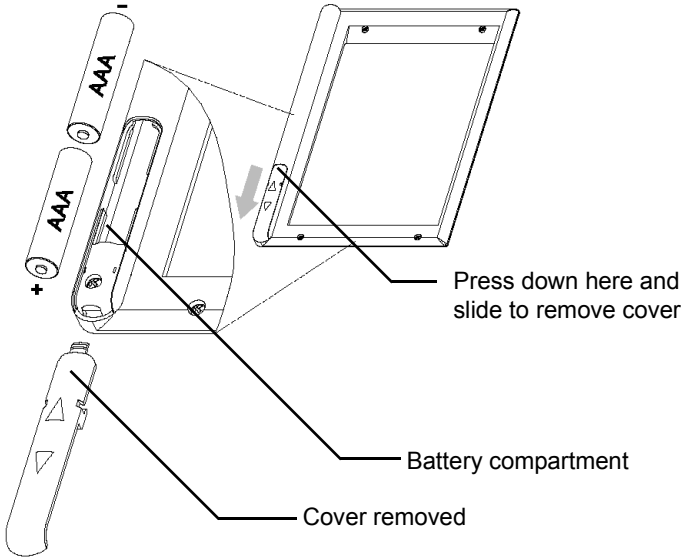

2. Insert the batteries into the battery compartment. Be sure the positive (+) end of both batteries points toward the bottom of the portfolio.
3. Replace the battery cover and slide it into place.


3. Attach Your Handheld

Your handheld must be placed in the designated area of the SmartPad portfolio so the infrared ports of the two devices can communicate properly. Two self-adhesive strips of hook-and-loop material keep the handheld securely in place.

The hook-and-loop material provides an extremely aggressive bond. That's terrific if you plan to leave your handheld in the SmartPad portfolio nearly all the time. But if you expect to frequently remove and replace the handheld from the portfolio, we suggest you use only half of the self-adhesive loop material, as follows:

1. Without separating the backing strips, remove the two loop strips from the portfolio's hook strips to which they're attached.
2. Cut one of the strips in half lengthwise. Save the other strip for future use.
3. Replace the two half strips on the portfolio's matching hook material.
4. Continue with the following procedure.

To attach the handheld:

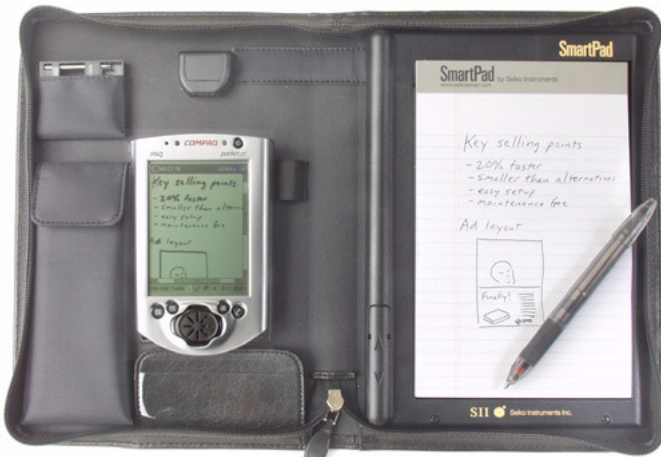

1. Remove the backing from the self-adhesive strips in the SmartPad portfolio.
2. Place the handheld on the strips, centering it on the pad area to which the hook-and-loop strips are attached.
3. Press firmly to adhere the strip to your handheld.

-
4. Remove your handheld from the SmartPad, turn the handheld over, and press the loop strips so that they're securely, permanently adhered.

4. Begin Creating Ink Notes

You are ready to create your first ink note. Use the SmartPad pen end on your SmartPad writing pad. Use a stylus or the stylus pen cap on your handheld. Do not use the pen on the handheld screen; it might scratch the surface.

To create an ink note:

1. Launch InkNote Manager on your handheld.
2. Write on the SmartPad tablet with the SmartPad pen. An ink note will appear on the screen.

5. Learn More

The *User's Guide* provides a comprehensive reference for SmartPad.

To read the *User's Guide*:

- On your desktop computer, open the **Start** menu and choose **Programs, Seiko InkNote Manager, View User Guide**.

To get additional help:

- In InkNote Manager, choose **File, Help** (handheld version) or **Help, Help contents** (desktop version).
- Visit us on the Web at www.seikosmart.com/support
- Call Seiko support at:
 - United States: (800) 757-1011
 - Canada: (800) 757-1011
 - United Kingdom: 00 800 727 97870
 - France: 00 800 727 97870
 - Germany: 00 800 727 97870
 - Central Europe: 00 49 4105 1559 136
 - Brazil: 55 (11) 5041 9515

To purchase supplies:

- Visit us on the Web at www.seikosmart.com
- From the US and Canada call (800) 688-0817

20-91156-01