

STR-DE245/DE345

SERVICE MANUAL

Ver 1.0 2000. 02



Photo: STR-DE345

AEP Model
UK Model
E Model
Australian Model
STR-DE245/DE345
US Model
Canadian Model
Chinese Model
PX Model
STR-DE345

Manufactured under license from Dolby Laboratories Licensing Corporation.

“DOLBY” the double-D symbol  “AC-3” and “Pro Logic” are trademarks of Dolby Laboratories Licensing Corporation.

SPECIFICATIONS

POWER OUTPUT AND TOTAL HARMONIC DISTORTION

With 8-ohm load, both channels driven, from 20 – 20,000 Hz rated 100 watts per channel minimum RMS power, with no more than 0.09% total harmonic distortion from 250 milliwatts to rated output.

Amplifier section

Rated Power Output at Stereo Mode (8 Ω at 20 Hz – 20 kHz, THD 0.09 %)
100W + 100W

Reference Power Output (8 Ω at 1 kHz, THD 0.7%)
Front: 100 W + 100 W
Center: 100 W
Rear: 100 W + 100 W

Frequency response TV/SAT, CD, MD/TAPE, VIDEO, 5.1CH/DVD
10 – 50 kHz $^{+0.5}_{-2.0}$ dB

Inputs	Sensitivity	Impedance	S/N
CD, 5.1CH/DVD, MD/TAPE, TV/SAT, VIDEO	150 mV	50 kilohms	85 dB

Outputs

MD/TAPE REC OUT:
Voltage: 150 mV,
Impedance: 10 kilohms
VIDEO AUDIO OUT:
Voltage: 150 mV,
Impedance: 10 kilohms
SUB WOOFER:
Voltage: 2 V
Impedance: 1 kilohms
PHONES: Accepts low and high impedance headphones

Full mute
+6 dB at 70 Hz
 ± 6 dB at 100 Hz and 10 kHz

Muting
BASS BOOST
TONE

Tuner section

FM Stereo, FM/AM superheterodyne tuner

FM tuner section

Tuning range
Antenna terminals
Intermediate frequency
Sensitivity

Usable sensitivity
S/N

Harmonic distortion at 1 kHz
Separation
Frequency response
Selectivity

87.5 – 108.0 MHz
75 Ω , unbalanced
10.7 MHz
Mono: 18.3 dBf, 4.5 μ V
Stereo: 38.3 dBf, 45 μ V
11.2 dBf, 2 μ V (IHF)
Mono: 76 dB
Stereo: 70 dB
Mono: 0.3 %
Stereo: 0.5 %
45 dB at 1 kHz
30 Hz – 15 kHz $^{+0.5}_{-2.0}$ dB
60 dB at 400 kHz

AM tuner section

Tuning range 10 kHz interval*
530 – 1,710 kHz
9 kHz interval
531 – 1,710 kHz
Antenna Loop antenna
Intermediate frequency 450 kHz
Usable sensitivity 50 dB/m (at 1,000 kHz or 999 kHz)
54 dB (at 50 mV/m)
S/N 0.5 % (50 mV/m, 400 Hz)
Harmonic distortion
Selectivity At 10 kHz: 40 dB
At 9 kHz: 35 dB

* You can change the AM tuning interval between 9 kHz and 10 kHz. Turn off the receiver and press the I/⏻ (power) for more than 4 seconds until “INITIAL” appears.

- 1) After turning in any AM station, turn off the receiver.
- 2) Hold down PRESET TUNING + button and press the I/⏻ (power) button . “9 k STEP” appears.

To change to 10 k Step, repeat step 1 and 2 until “10 k STEP” appears. Note that all preset stations, index names and sound field are cleared after you make the procedure above.

— Continued on next page —

FM STEREO FM-AM RECEIVER

SONY®

VIDEO section

Inputs
VIDEO, TV/SAT, 5.1CH/DVD:
1 Vp-p 75 Ω

Outputs
VIDEO, MONITOR:
1 Vp-p 75 Ω

General

System
Tuner section: PLL
quartz-locked digital
synthesizer system

Preamplifier section:
Low-noise NF type
equalizer

Power amplifier section:
Pure-complementary
SEPP

Power requirements
120 V AC, 60 Hz

Power consumption
235 W

Dimensions
17 × 5⁶/₈ × 12 inches
(430 × 145 × 304 mm)


Mass (Aporox.)
7.3 kg (16 lb 2 oz)

Supplid accessories
FM wire antenna (1)
AM loop antenna (1)
Remote commander (remote) (1)
Size AA (R6) batteries (2)
Operating Instructions of the remote RM-PP404

Design and specifications are subject to change without notice.

MODEL IDENTIFICATION

— BACK PANEL —

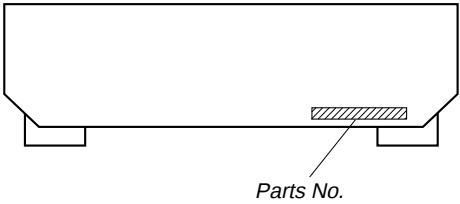

MODEL	PARTS No.
DE345: US model	4-226-462-0□
DE345: Canadian model	4-226-462-1□
DE345: Australian model	4-226-462-2□
DE345: Singapore, Malaysia model	4-226-462-3□
DE345: Chinese model	4-226-462-4□
DE345: E, Saudi Arabia, PX model	4-226-462-5□
DE345: AEP model	4-226-462-6□
DE345: Russian, East European model	4-226-462-7□
DE345: Mexican model	4-226-462-8□
DE345: Argentine model	4-226-462-9□
DE245: Australian model	4-226-468-2□
DE245: Singapore, Malaysia model	4-226-468-3□
DE245: E, Saudi Arabia model	4-226-468-4□
DE245: AEP, UK model	4-226-468-5□
DE245: Mexican, Russian, East European model	4-226-468-6□

SAFETY CHECK-OUT

After correcting the original service problem, perform the following safety checks before releasing the set to the customer: Check the antenna terminals, metal trim, “metallized” knobs, screws, and all other exposed metal parts for AC leakage. Check leakage as described below.

LEAKAGE

The AC leakage from any exposed metal part to earth ground and from all exposed metal parts to any exposed metal part having a return to chassis, must not exceed 0.5 mA (500 microamperes). Leakage current can be measured by any one of three methods.

1. A commercial leakage tester, such as the Simpson 229 or RCA WT-540A. Follow the manufacturers’ instructions to use these instruments.
2. A battery-operated AC milliammeter. The Data Precision 245 digital multimeter is suitable for this job.
3. Measuring the voltage drop across a resistor by means of a VOM or battery-operated AC voltmeter. The “limit” indication is 0.75 V, so analog meters must have an accurate low-voltage scale. The Simpson 250 and Sanwa SH-63Trd are examples of a passive VOM that is suitable. Nearly all battery operated digital multimeters that have a 2V AC range are suitable. (See Fig. A)

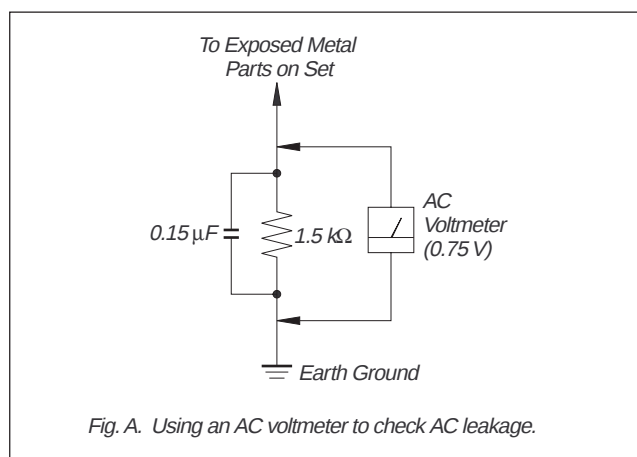


Fig. A. Using an AC voltmeter to check AC leakage.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK $\triangle$ OR DOTTED LINE WITH MARK $\triangle$ ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

ATTENTION AU COMPOSANT AYANT RAPPORT À LA SÉCURITÉ!

LES COMPOSANTS IDENTIFIÉS PAR UNE MARQUE $\triangle$ SUR LES DIAGRAMMES SCHÉMATIQUES ET LA LISTE DES PIÈCES SONT CRITIQUES POUR LA SÉCURITÉ DE FONCTIONNEMENT. NE REMPLACER CES COMPOSANTS QUE PAR DES PIÈCES SONY DONT LES NUMÉROS SONT DONNÉS DANS CE MANUEL OU DANS LES SUPPLÉMENTS PUBLIÉS PAR SONY.

与安全有关的零部件须知

在原理图上用阴影及 $\triangle$ 标记来识别的零部件在安全操作上是具有关键性的。这些零部件要用本手册中所示的部件号对应的索尼零部件进行更换。


在安全操作上具有关键性的电路调整与索尼公司出版的维修手册完全一致。在更换关键零部件时或怀疑动作失常时，请进行这些调整操作。

TABLE OF CONTENTS

1. GENERAL	4
2. TEST MODE	6
3. DIAGRAMS	
3-1. Block Diagram	7
3-2. IC Block Diagrams	8
3-3. IC Pin Function Description	8
3-4. Circuit Boards Location	9
3-5. Printed Wiring Board Main Section	10
3-6. Schematic Diagram Main Section (1/3)	11
3-7. Schematic Diagram Main Section (2/3)	12
3-8. Schematic Diagram Main Section (3/3)	13
3-9. Printed Wiring Board Panel Section	14
3-10. Schematic Diagram Panel Section	15
3-11. Printed Wiring Board Power Section	16
3-12. Schematic Diagram Power Section	17
3-13. Printed Wiring Board Video Section	18
3-14. Schematic Diagram Video Section	18
4. EXPLODED VIEWS	
4-1. Front Panel Section	19
4-2. Chassis Section	20
5. ELECTRICAL PARTS LIST	21


SECTION 1 GENERAL

Front Panel

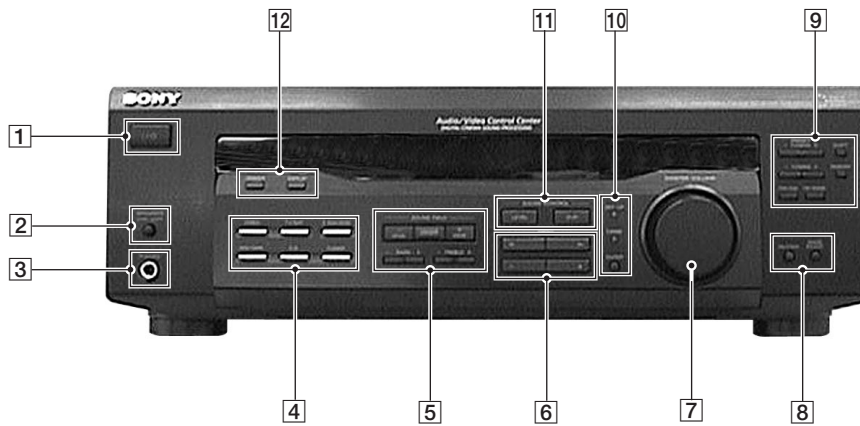

- | | |
|---|--|
| <p>1 I/⏻ (POWER) button</p> <p>2 SPEAKERS ON/OFF SWITCH button</p> <p>3 PHONE jack</p> <p>4 VIDEO button
TV/SAT button
5.1CH/DVD button
MD/TAPE button
CD button
TUNER button</p> <p>5 SOUND FIELD ON/OFF,
MODE $\left[\begin{smallmatrix} + \\ - \end{smallmatrix} \right]$ buttons
BASS $\left[\begin{smallmatrix} + \\ - \end{smallmatrix} \right]$ buttons
TREBLE $\left[\begin{smallmatrix} + \\ - \end{smallmatrix} \right]$ buttons</p> <p>6 MENU $\left[\begin{smallmatrix} \leftarrow \\ \rightarrow \end{smallmatrix} \right]$, $\left[\begin{smallmatrix} + \\ - \end{smallmatrix} \right]$ buttons</p> <p>7 MASTER VOLUME control</p> | <p>8 MUTING button
BASS BOOST button</p> <p>9 PRESET/PTY SELECT $\left[\begin{smallmatrix} + \\ - \end{smallmatrix} \right]$, $\left[\begin{smallmatrix} \leftarrow \\ \rightarrow \end{smallmatrix} \right]$ buttons
TUNING $\left[\begin{smallmatrix} + \\ - \end{smallmatrix} \right]$ buttons
FM/AM button
FM MODE button
SHIFT button
MEMORY button</p> <p>10 SET UP button
NAME button
ENTER button</p> <p>11 SOUND CONTROL LEVEL,SUR buttons</p> <p>12 DIMMER button
DISPLAY button</p> |
|---|--|

Rear Panel

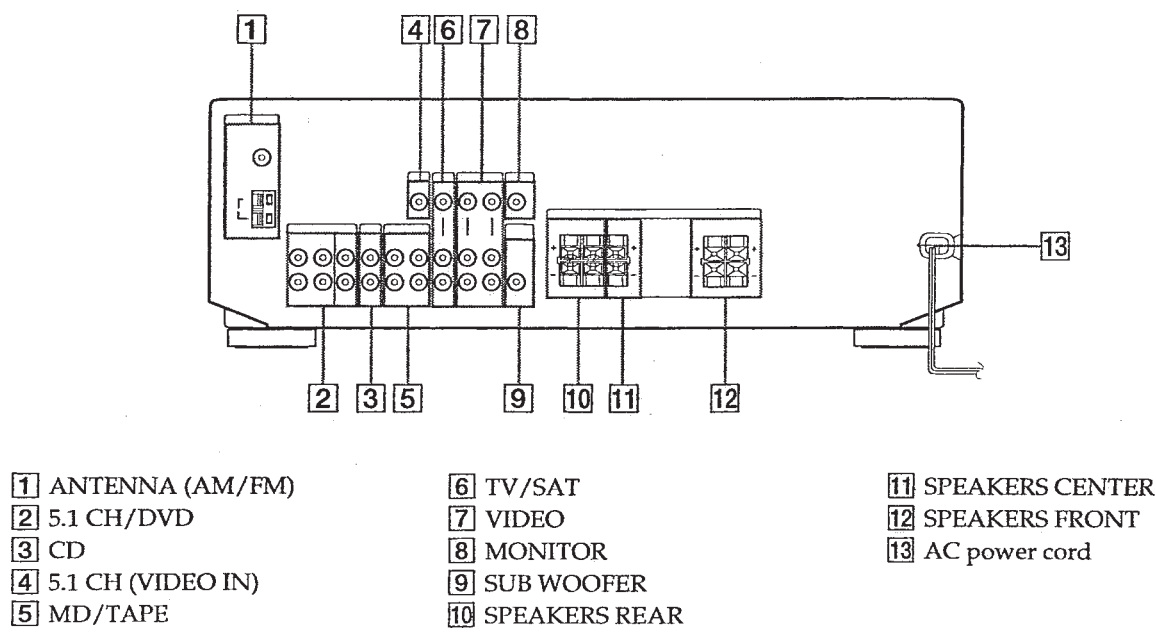

SECTION 2 TEST MODE

SOFTWARE VERSION DISPLAY MODE

* The software version is displayed.

* Procedure:

While depressing the TUNER and the VIDEO buttons simultaneously, press the power [I/⏻] button to turn on the main power. The model name, destination and the software version are displayed.

FLUORESCENT INDICATOR TUBE TEST MODE

* All fluorescent segments are tested. When this test is activated, all segments turn on at the same time, then each segment turns on one after another.

* Procedure:


While depressing the TV/SAT and the CD buttons simultaneously, press the power [I/⏻] button to turn on the main power.

1. All segments turn on.




SET UP, SOUND FIELD, BASS BOOST and MUTING LED turn on.

2. Press the VIDEO button, confirm display

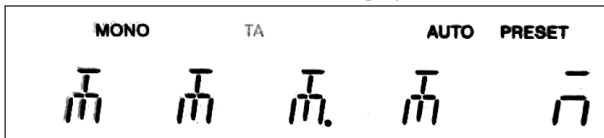

BASS BOOST, MUTING, SET UP and NAME LED turn on.

3. Press the VIDEO button, confirm display

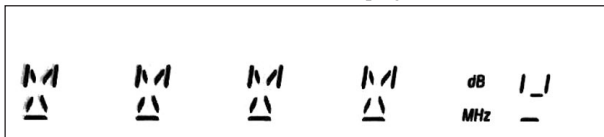

SOUND CONTROL LEVEL, SOUND CONTROL SUR and SOUND FIELD LED turn on.

4. Press the VIDEO button, All segments turn off.

5. Every pressing of the VIDEO button turns on each segment one after another in the following order.

(Not only the VIDEO button, but also the other buttons such as TV/SAT, MD/TAPE, CD, TUNER can be used.)

FACTORY SET MODE

* All preset contents are reset to the default setting.

* Procedure:

While depressing the VIDEO and the CD buttons simultaneously, press the power [I/⏻] button to turn on the main power. The message FACTORY appears and the present contents are reset to the default values.

ALL CLEAR MODE

* All preset contents are cleared when this mode is activated. Use this mode before returning the product to clients upon completion of repair.

* Procedure:

While depressing the TUNER and the MD/TAPE buttons simultaneously, press the power [I/⏻] button to turn on the main power. The message INITIAL appears and initialization is performed.

SURROUND CLEAR MODE

* The preset sound field is cleared when this mode is activated. Use this mode before returning the product to clients upon completion of repair.

* Procedure:

While depressing the SOUND FIELD ON/OFF button, press the power [I/⏻] button to turn on the main power. The message SURR CLR appears and initialization is performed.

AM CHANNEL STEP 9 kHz/10 kHz SELECTION MODE

* Either the 9 kHz step or 10 kHz step can be selected for the AM channel step.

* Procedure:

Set the FUNCTION to AM. Turn off the main power.

While depressing the TUNING+ button or the PRESET+ button, press the power [I/⏻] button to turn on the main power. Either the message AM 9 k STEP or AM 10 k STEP appears. Select the desired step.

* For US/Canadian/E model only

KEY CHECK MODE

* Button check

* Procedure:

While depressing the MD/TAPE and the CD buttons simultaneously, press the power [I/⏻] button to turn on the main power.


“RES 36 KEY” appears.

Every pressing of any button other than [I/⏻] and SPEAKERS counts down the buttons. The buttons which are already counted once are not counted again. When all buttons are pressed “RES 00 KEY” appears.

When MASTER VOLUME is rotated in clockwise direction, “VOL MIN”, “VOL 1” to “VOL 30”, “VOL MAX” appear.


SECTION 3
DIAGRAMS

3-1. BLOCK DIAGRAM

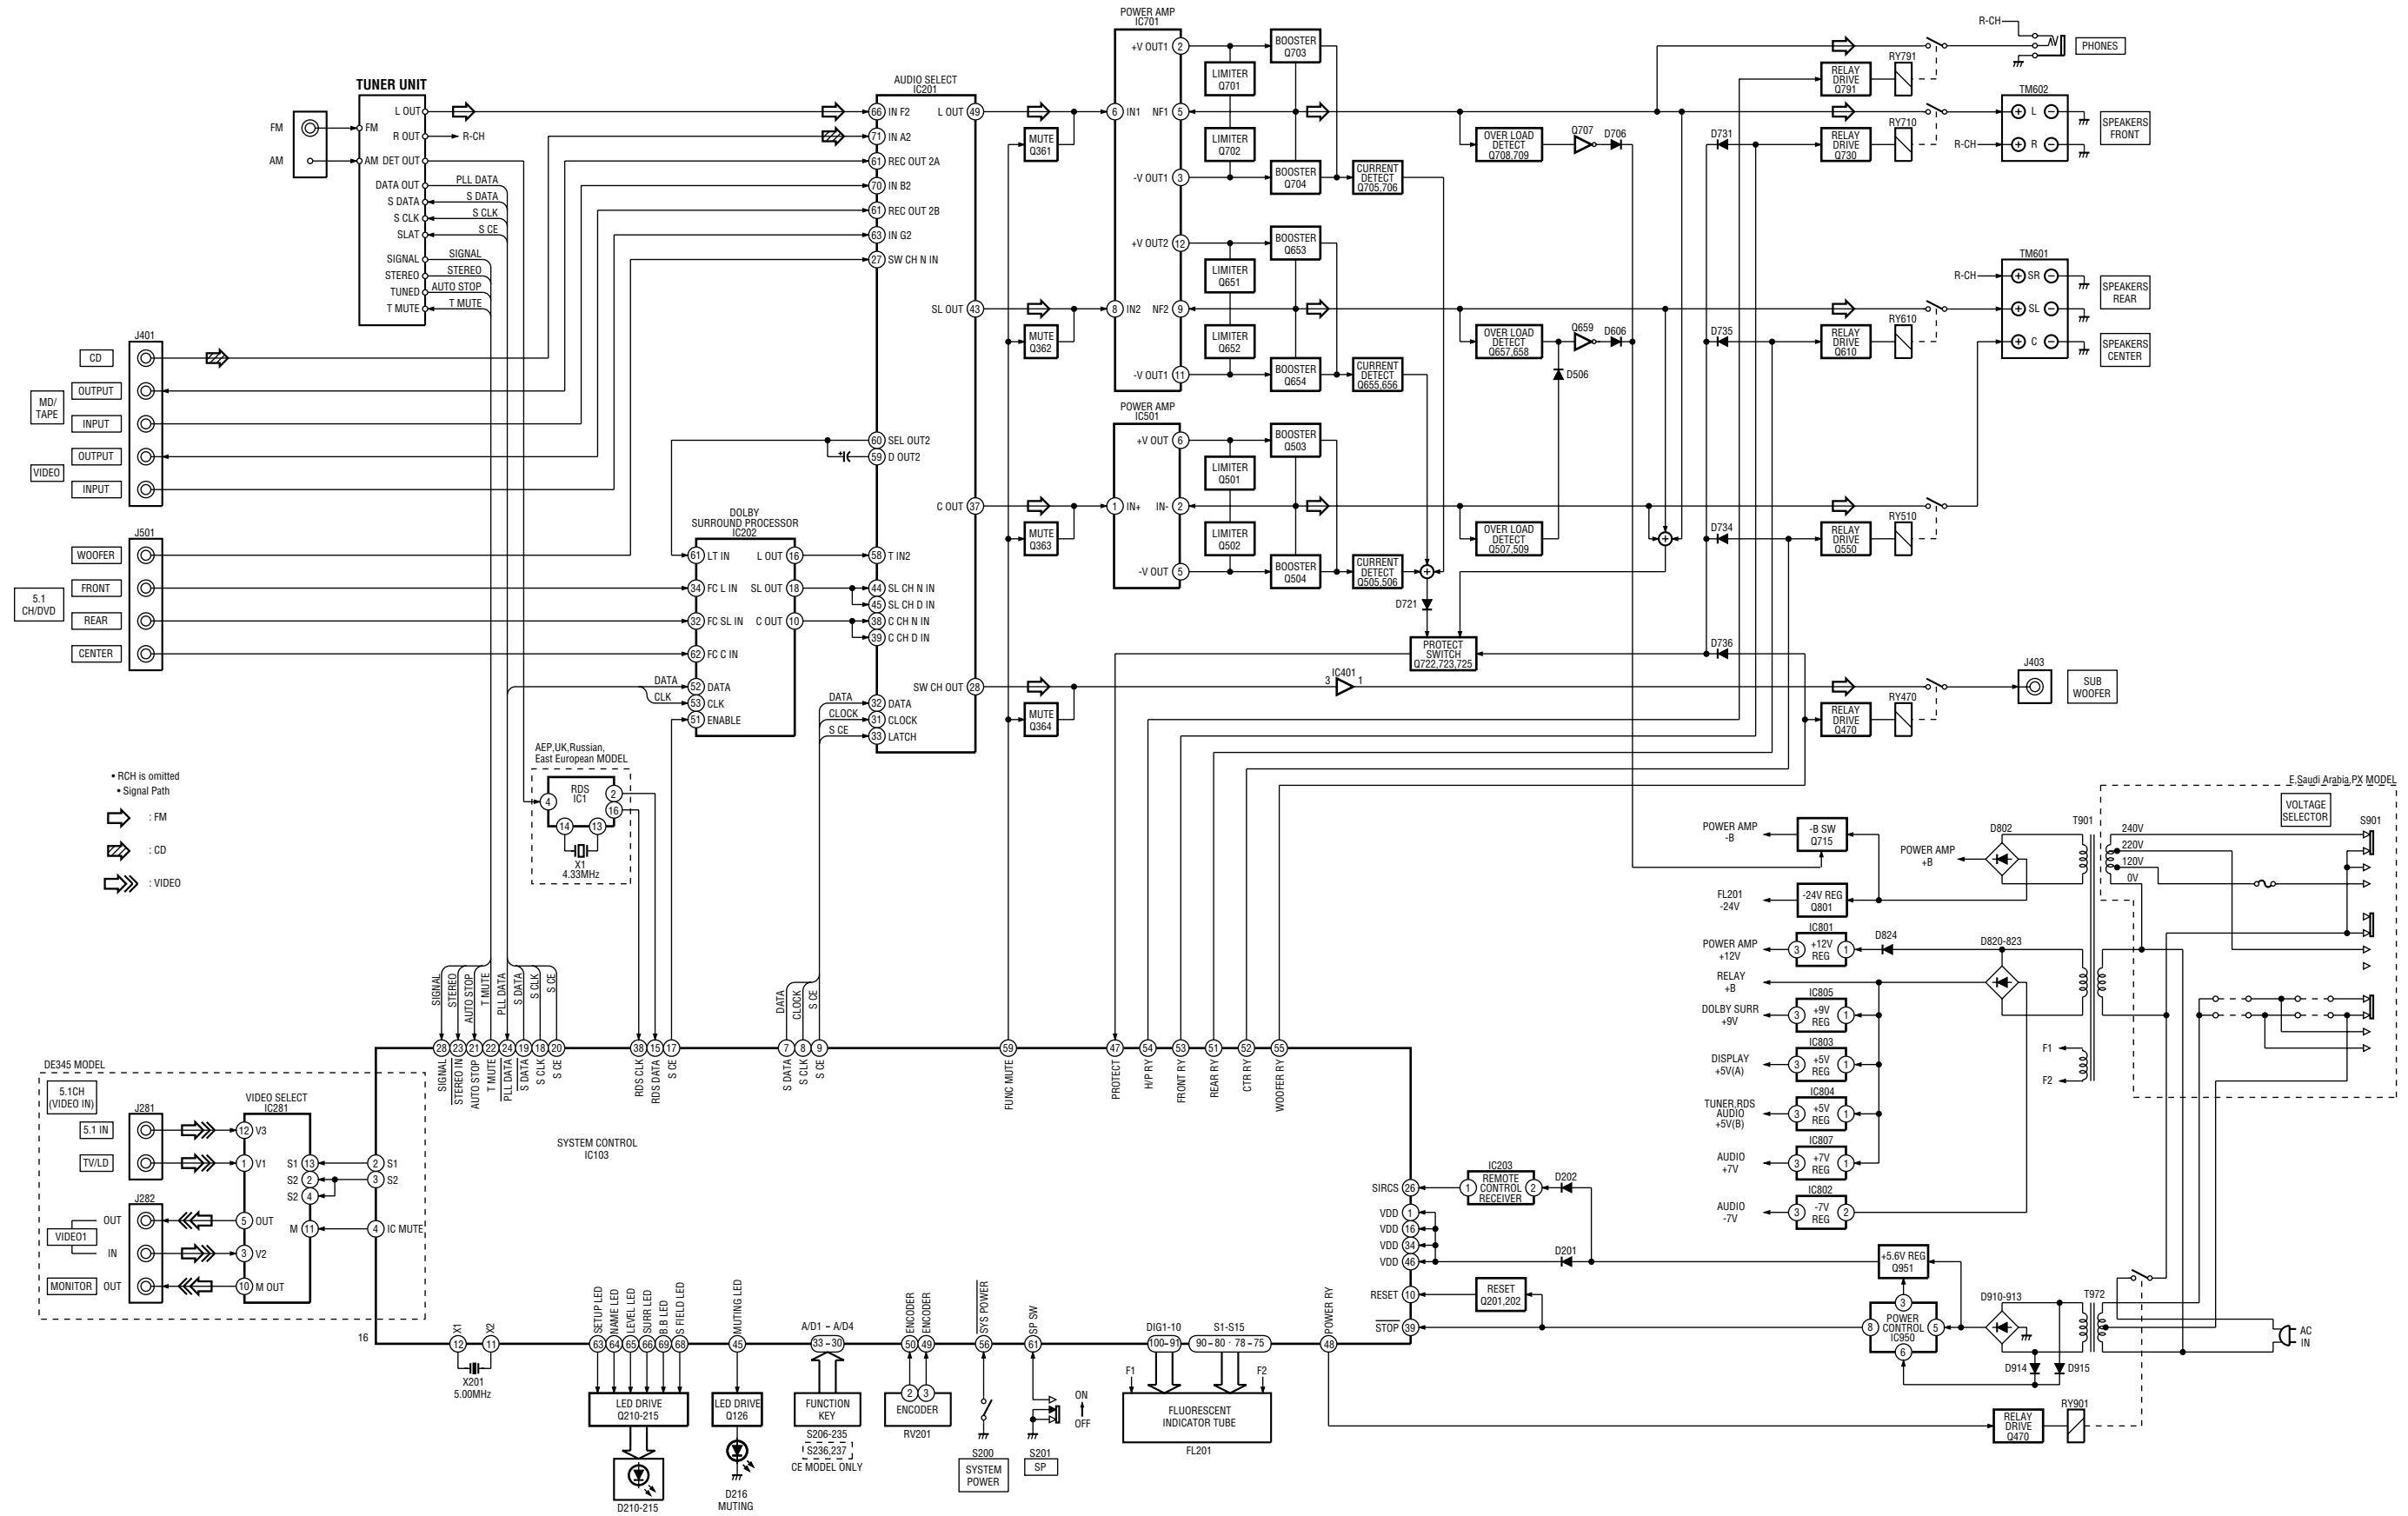


3-2. IC BLOCK DIAGRAMS


IC281 NJM2279 (VIDEO BOARD)

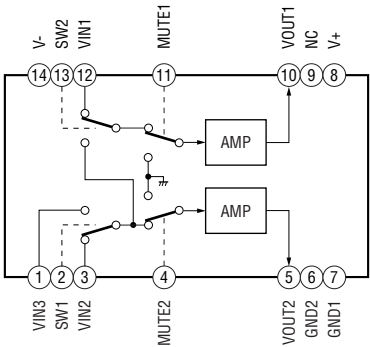


IC701, IC702 uPC2581V (MAIN BOARD)

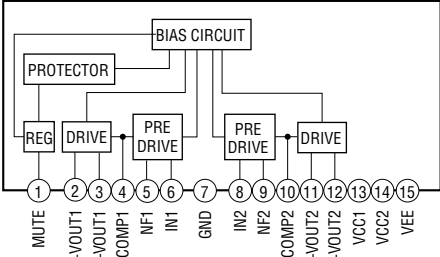


IC501 STK350-230 (MAIN BOARD)

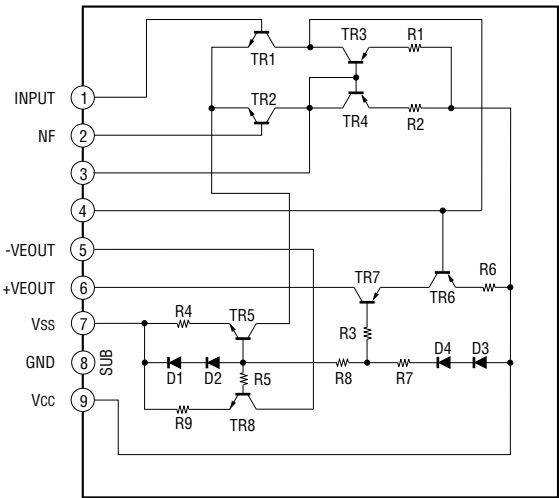

IC1 BU1924 (MAIN BAORD)

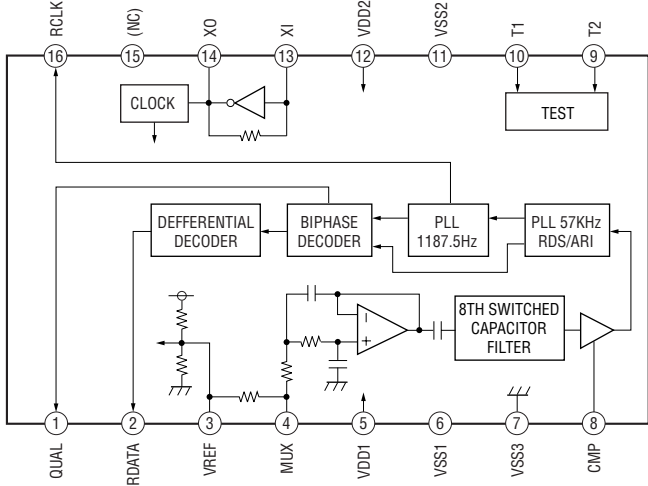

IC950 NJM2103 (POWER BOARD)

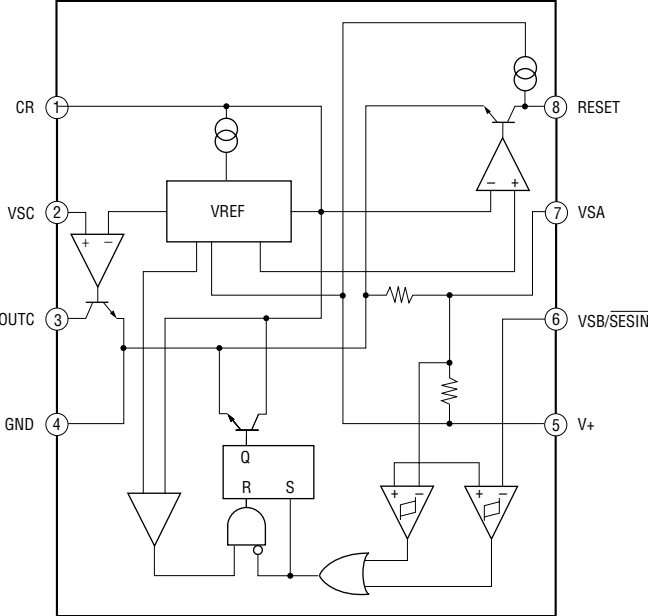


3-3. IC PIN FUNCTION DESCRIPTION

IC103 μPD780205GF (DISPLAY BOARD)

Pin No.	Pin Name	I/O	Description
1	VDD +5V	I	Power supply to μ-com
2	S1	O	Control Video IC switching
3	S2	O	Control Video IC switching
4	IC.MUTE	O	Control mute of Video IC
5	P34	—	
6	P33	—	
7	S.DATA (M61501FP)	O	Volume IC data
8	S.CLK (M61501FP)	O	Volume IC clock
9	S.CE (M61501FP)	O	Volume IC enable
10	RESET	I	Read μ-com reset signal
11	X2	—	
12	X1	—	For μ-com clock
13	VSS	—	Programming pow. supply
14	—	—	No use
15	RDS.DATA.IN	I	Read decoded RDS data
16	VDD +5V	—	Power supply to μ-com
17	S.CE (LV1050M)	O	Chip enable for ICs
18	S.CLK(DOLBY.TUNER)	O	Output clock signal
19	S.DATA(DOLBY.TUNER)	O	Output data signal
20	S.CE (TUNER)	O	Chip enable for ICs
21	AUTO-STOP	I	Tuner has tuned to a freq.
22	T.MUTE	O	Mute tuner during scanning
23	STEREO-IN	I	Tuned freq. has stereo
24	PLL.DATA	I	Input tuner freq. data
25	AVSS	—	Analog ground
26	SIRCS	I	Read remote comm. signal
27	P16	—	
28	SIGNAL	I	Detect RDS signal level
29	VERSION	I	Read version setting
30	A/D IV	I	Read key push signal
31	A/D III	I	Read key push signal
32	A/D II	I	Read key push signal
33	A/D I	I	Read key push signal
34	AVDD +5.0V	—	Analog Power Supply
35	AVREF	—	Analog reference ground
36	P03	—	
37	P02	—	
38	RDS.CLK.IN	I	Read decoded RDS clock
39	STOP	I	Read signal when AC off
40	VSS	—	μ-com ground
41	P74	—	
42	P73	—	
43	P72	—	
44	P71	—	
45	MUTING LED	O	Control mute LED
46	VDD +5.0V	—	Power supply to μ-com
47	PROTECT	I	Detect Protector Status
48	POWER-RY	O	Control Power relay
49	ENCODER	I	Read volume encoder changing
50	ENCODER	I	Read volume encoder changing

Pin No.	Pin Name	I/O	Description
51	REAR-RY	O	Control rear relay on/off
52	CTR-RY	O	Control center relay
53	FRONT-RY	O	Control speaker relay
54	H/P-RY	O	Control Headphone relay
55	WOOFER RY	O	Control Woofer relay
56	SYS.POWER	I	Detect power switch key
57	P115	—	
58	P114	—	
59	FUNC.MUTE	O	Control muting circuit
60	P112	—	
61	SP SW	I	Read speaker switch condition
62	P110	—	
63	SET UP LED	O	Control Setup LED
64	NAME LED	O	Control Name LED
65	LEVEL LED	O	Control LEVEL LED
66	SURR LED	O	Control SURR LED
67	P103	—	
68	S.FIELD LED	O	Control SF LED
69	B.B. LED	O	Control Bass Boost LED
70	P100	—	
71 – 74	P97 – P94	—	
75 – 78	S15 – S12	O	Output signal to FL tube
79	VLOAD	I	Negative power supply
80 – 84	S11 – S7	—	
85 – 90	S6 – S1	O	Output signal to FL tube
91 – 100	DIG10 – DIG1	O	Output signal to FL tube

3-4. CIRCUIT BOARDS LOCATION

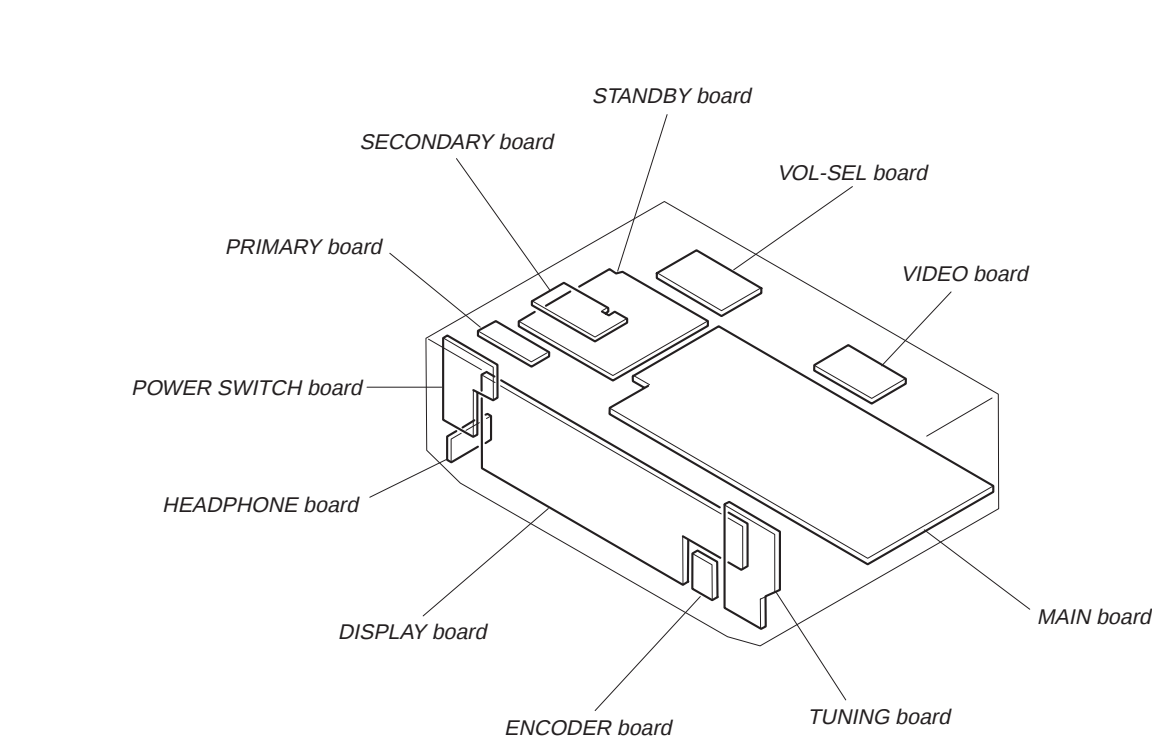

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS.
(In addition to this necessary note is printed in each block.)

For schematic diagrams.

Note:

- All capacitors are in μF unless otherwise noted. pF : μF 50 WV or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $\frac{1}{4}\text{W}$ or less unless otherwise specified.
- % : indicates tolerance.
- Δ : internal component.
- : nonflammable resistor.
- : fusible resistor.
- : panel designation.

Note:

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

以阴影和 Δ 标志来识别的零部件，在安全方面具有关键性。因此只能以规定号码的零部件来更换。

Note:



Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

- : B+ Line.
- : B- Line.
- : adjustment for repair.
- Voltages and waveforms are dc with respect to ground under no-signal (detuned) conditions. No mark : FM
- Voltages are taken with a VOM (Input impedance 10 M Ω). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with a oscilloscope.
- Circled numbers refer to waveforms.
- Signal path.
 - : FM
 - : CD
 - : VIDEO
 - : PHONO
- Abbreviation
 - CND : Canadian model.
 - AUS : Australian model.
 - SP : Singapore model.
 - MY : Malaysia model.
 - AR : Argentine model.
 - CH : Chinese model.
 - MX : Mexican model.
 - CIS : Russian model.
 - EA : Saudi Arabia model.
 - EE : East European model.


For printed wiring boards.

Note:


- : parts extracted from the component side.
- : Through hole.
- : internal component.
- : Pattern from the side which enables seeing.

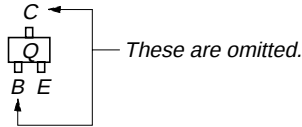


• Waveform – MAIN SECTION –

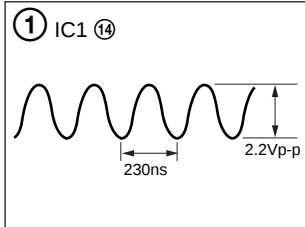

– PANEL SECTION –

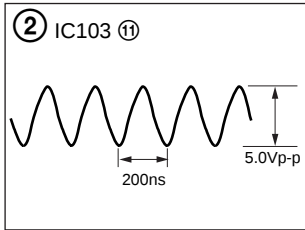

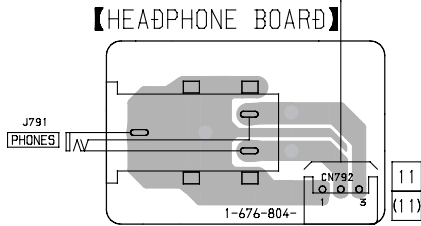



- **Semiconductor Location**

Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location	Ref. No.	Location
D470	B-6	D757	D-7	IC807	B-6	Q610	B-7	Q751	D-7	IC3517	J-12	Q3502	H-12
D505	D-3	D791	D-9			Q651	D-5	Q752	E-7	Q3301	G-3	Q3503	H-12
D506	D-4	D801	C-10	Q361	B-5	Q652	E-6	Q753	E-7	Q3302	G-3	Q3504	G-12
D508	D-3	D802	B-10	Q362	B-6	Q653	E-5	Q754	E-7	Q3303	G-4	Q3505	G-12
D510	B-8	D804	C-10	Q363	B-6	Q654	E-6	Q755	D-7	Q3304	G-3	Q3506	G-12
D605	D-6	D820	C-9	Q364	B-7	Q655	D-5	Q756	D-7	Q3305	G-3	Q3511	G-11
D606	C-6	D821	C-10	Q365	C-6	Q656	D-6	Q757	D-7	Q3306	H-3	Q3512	H-11
D607	D-6	D822	C-10	Q366	C-6	Q657	D-6	Q758	D-7	Q3307	G-6	Q3513	G-11
D608	D-6	D823	C-9	Q470	B-6	Q658	D-6	Q759	D-8	Q3308	B-11	Q3514	G-11
D610	B-7	D824	B-9	Q501	D-2	Q659	D-6	Q791	D-9	Q3309	H-5	Q3515	I-11
D627	D-9	D825	B-10	Q502	E-3	Q701	D-4	Q801	D-9	Q3310	D-12	Q3516	I-11
D706	D-5			Q503	E-3	Q702	E-4			Q3311	H-5	Q3517	H-11
D710	B-8	IC1	B-2	Q504	E-3	Q703	E-4	IC3505	G-11	Q3312	D-12	Q3518	H-11
D721	C-9	IC201	B-4	Q505	D-2	Q704	E-5	IC3506	I-10	Q3313	H-5	Q3519	J-11
D722	B-8	IC202	C-3	Q506	D-2	Q705	D-5	IC3507	I-11	Q3314	D-12	Q3520	J-11
D725	D-8	IC401	B-5	Q507	D-3	Q706	D-4	IC3508	H-10	Q3315	G-5	Q3521	J-11
D726	D-8	IC501	C-4	Q509	D-3	Q707	D-5	IC3509	H-11	Q3401	G-8	Q3522	J-11
D727	D-4	IC701	C-6	Q550	B-7	Q708	D-5	IC3510	J-10	Q3402	H-8		
D728	D-4	IC702	C-7	Q601	D-8	Q709	D-5	IC3511	J-11	Q3403	H-7		
D731	B-8	IC801	C-8	Q602	E-8	Q715	C-8	IC3512	J-10	Q3404	H-7		
D732	B-8	IC802	C-9	Q603	E-8	Q722	B-9	IC3513	J-11	Q3405	H-7		
D734	B-8	IC803	C-9	Q604	E-9	Q723	C-8	IC3514	I-11	Q3406	G-6		
D735	B-7	IC804	C-9	Q605	D-9	Q725	B-8	IC3515	J-11	Q3407	D-4		
D736	B-6	IC805	A-2	Q606	D-8	Q730	B-8	IC3516	I-12	Q3501	H-12		


3-6. SCHEMATIC DIAGRAM MAIN SECTION (1/3)

- Refer to page 8 for IC Block Diagrams.

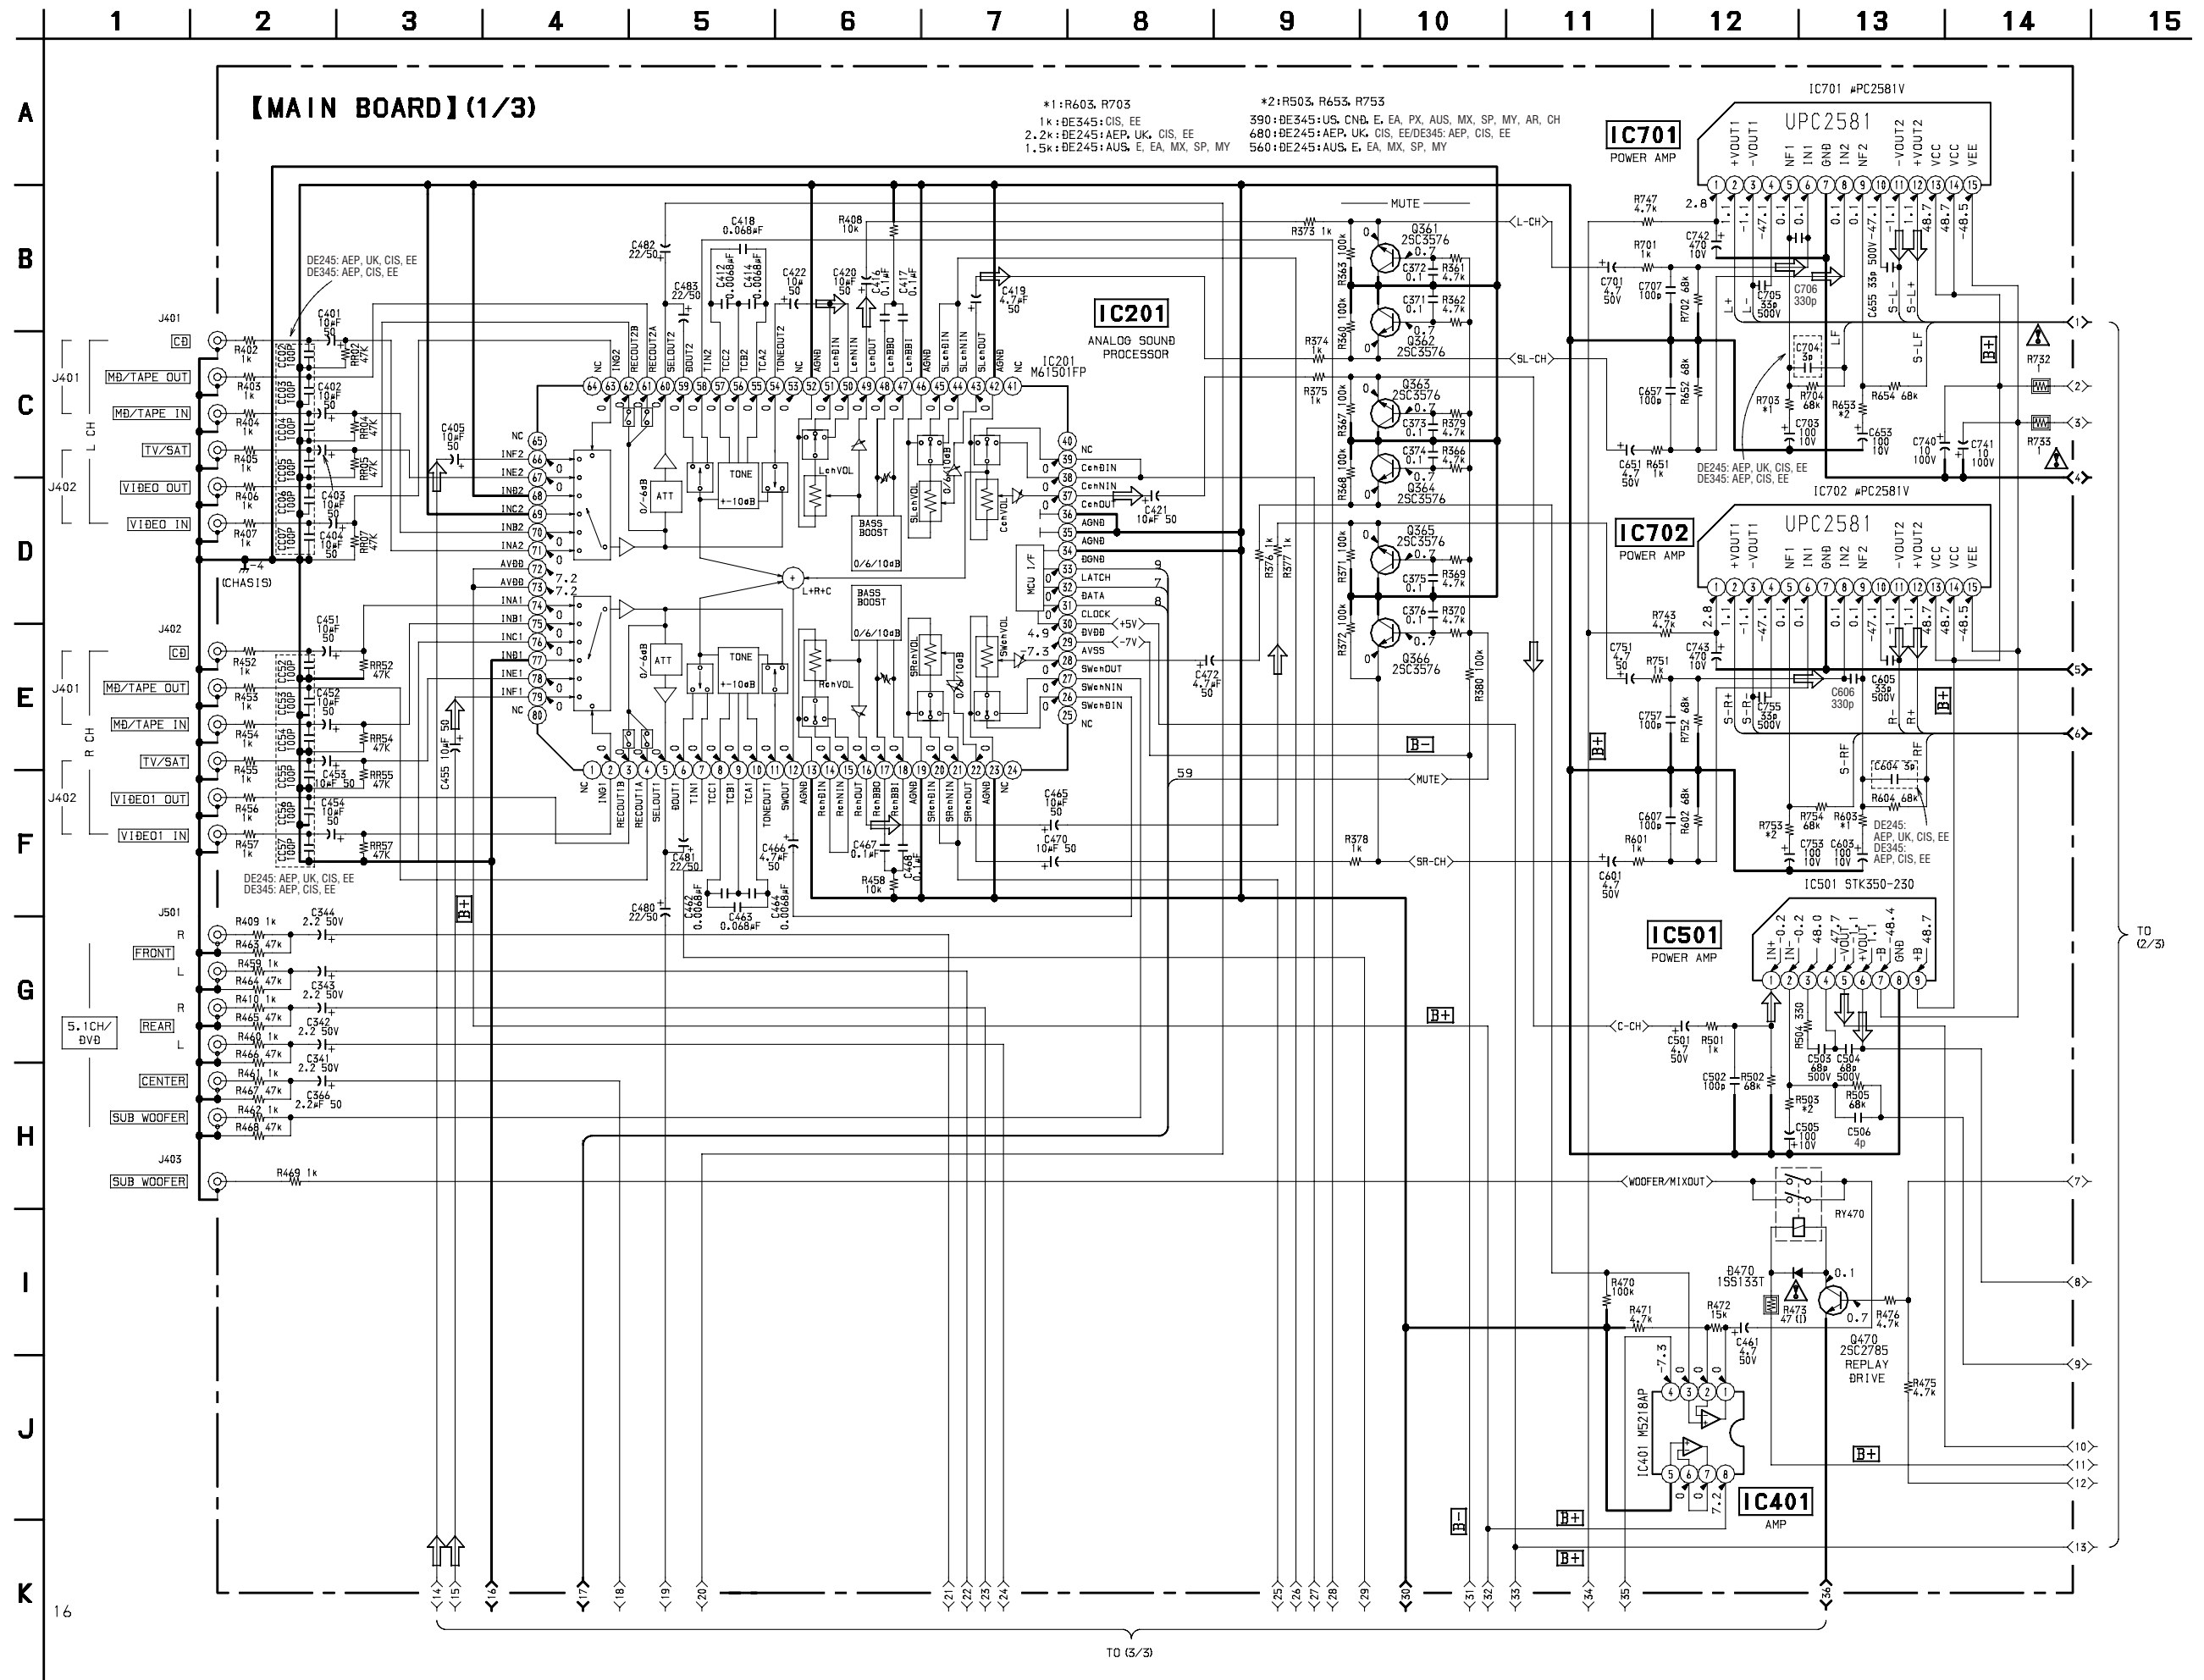


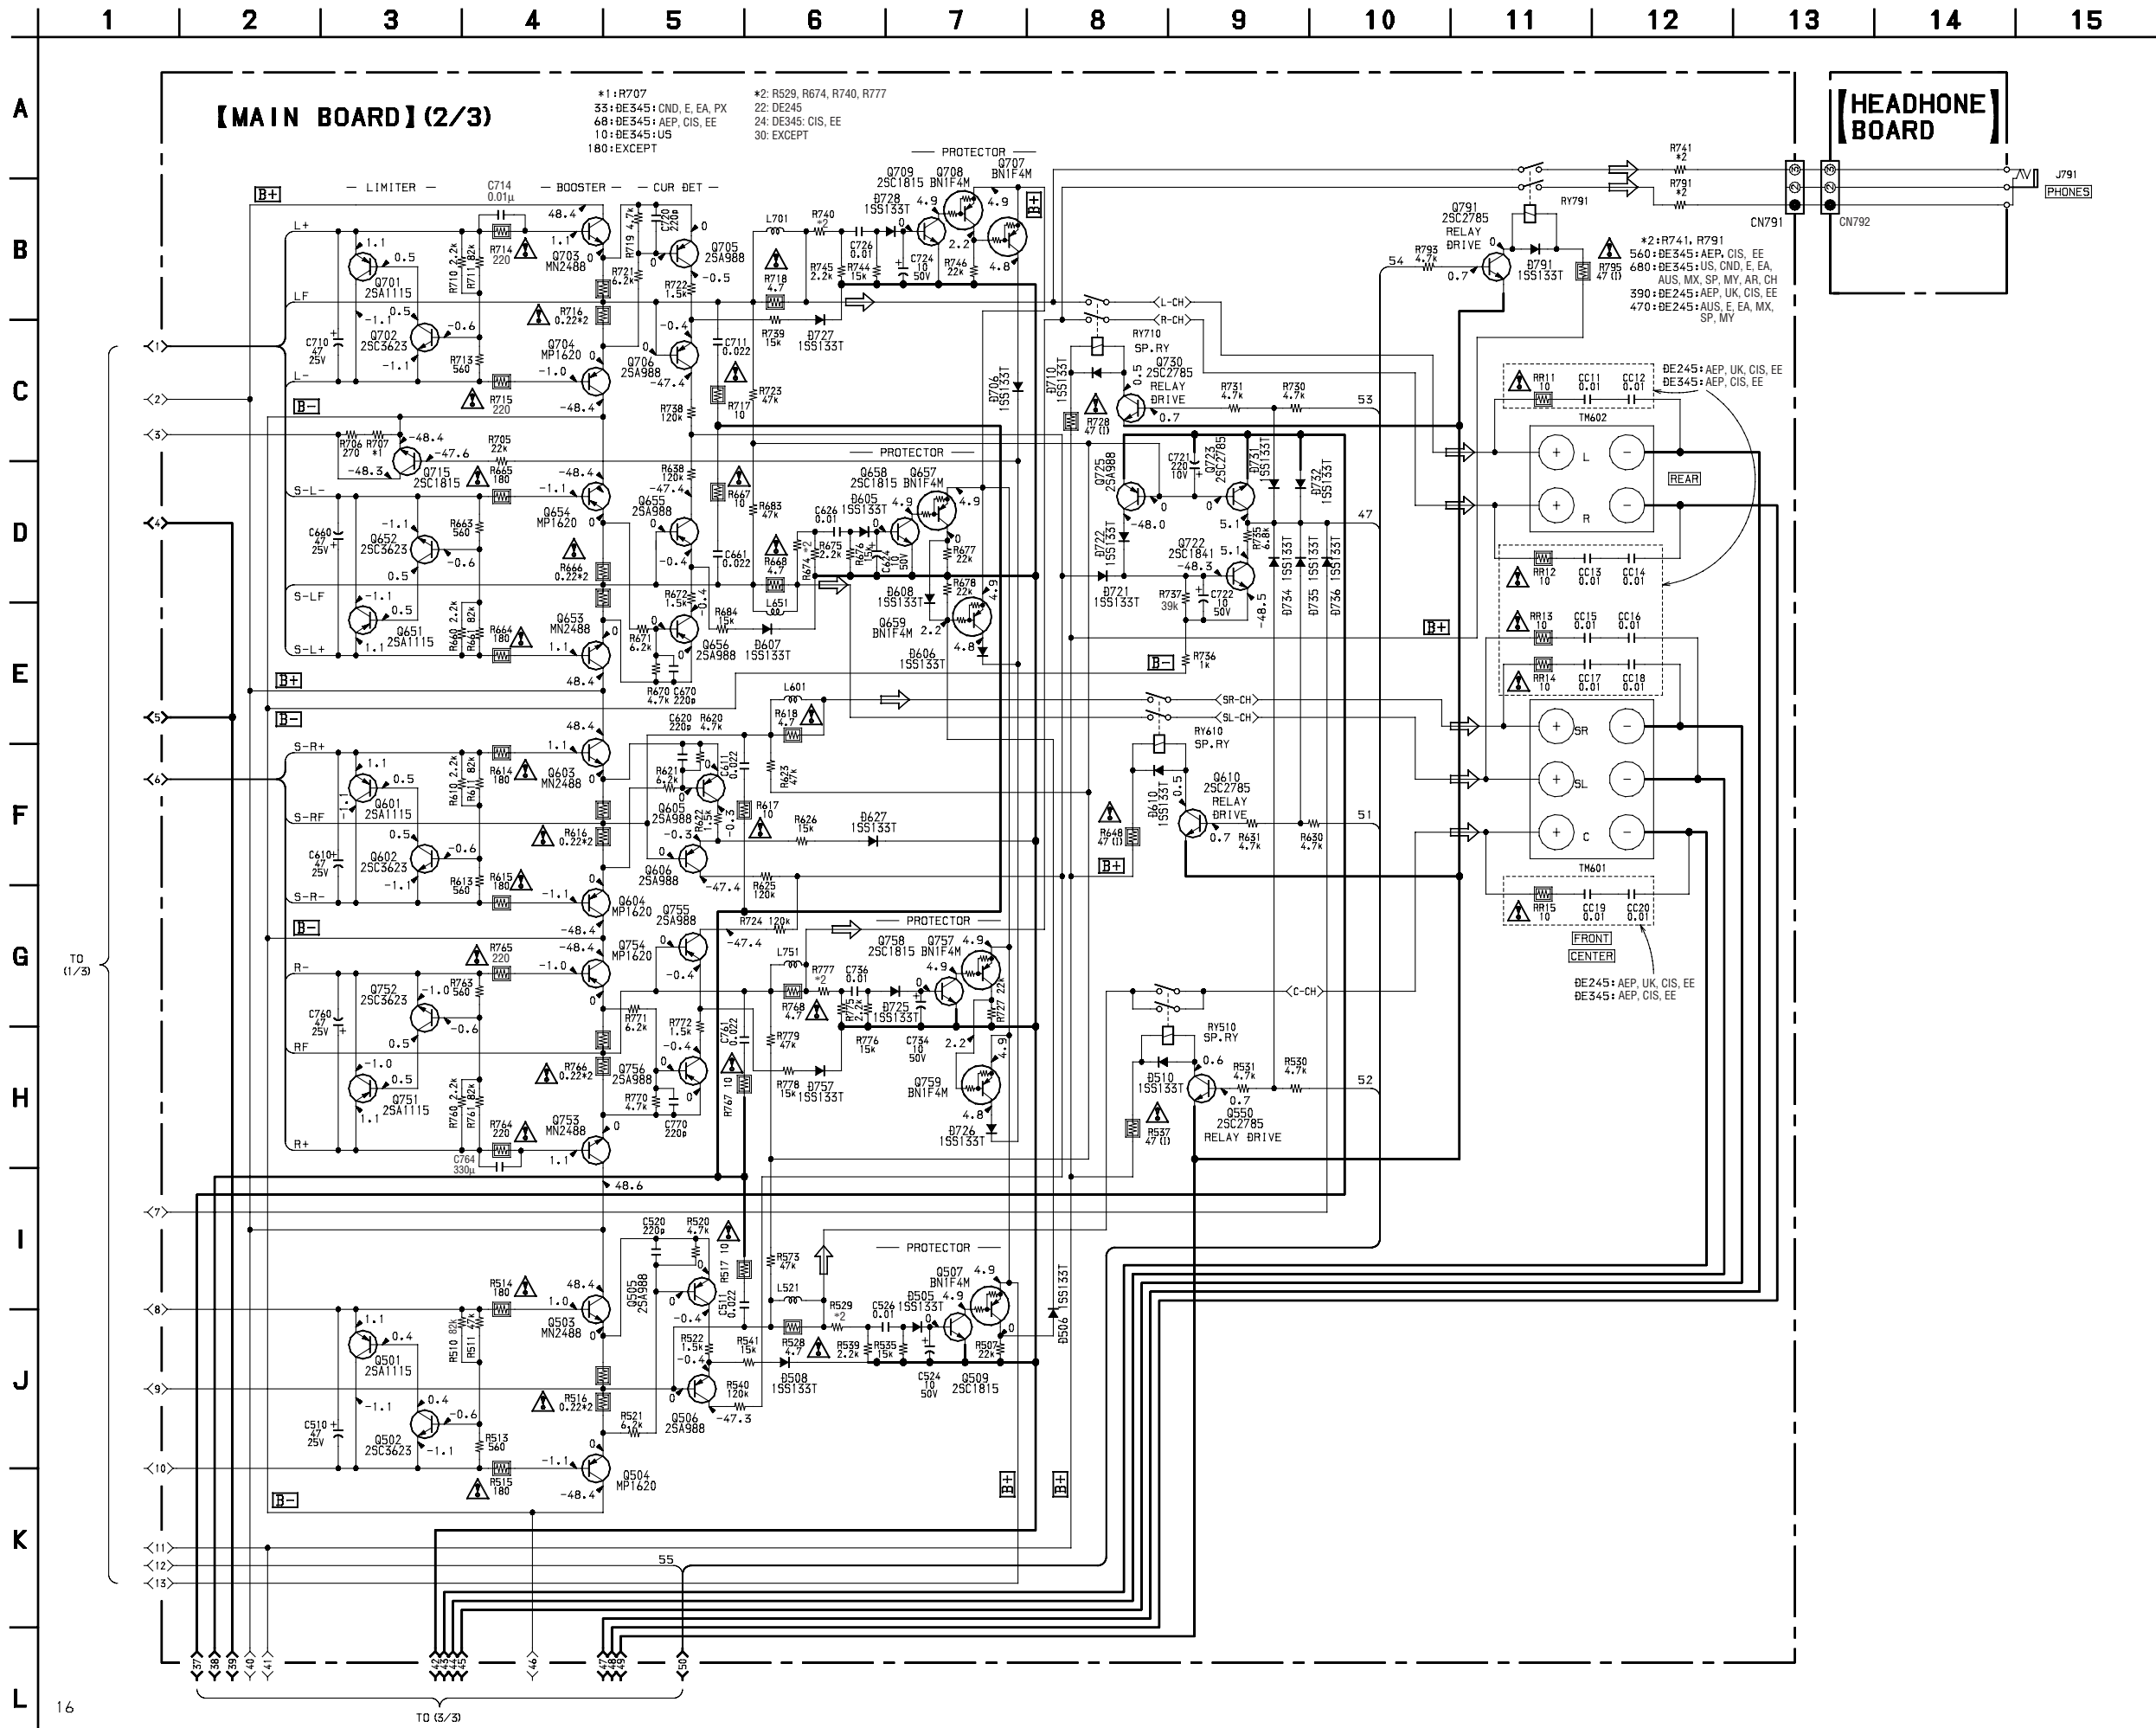

- 16

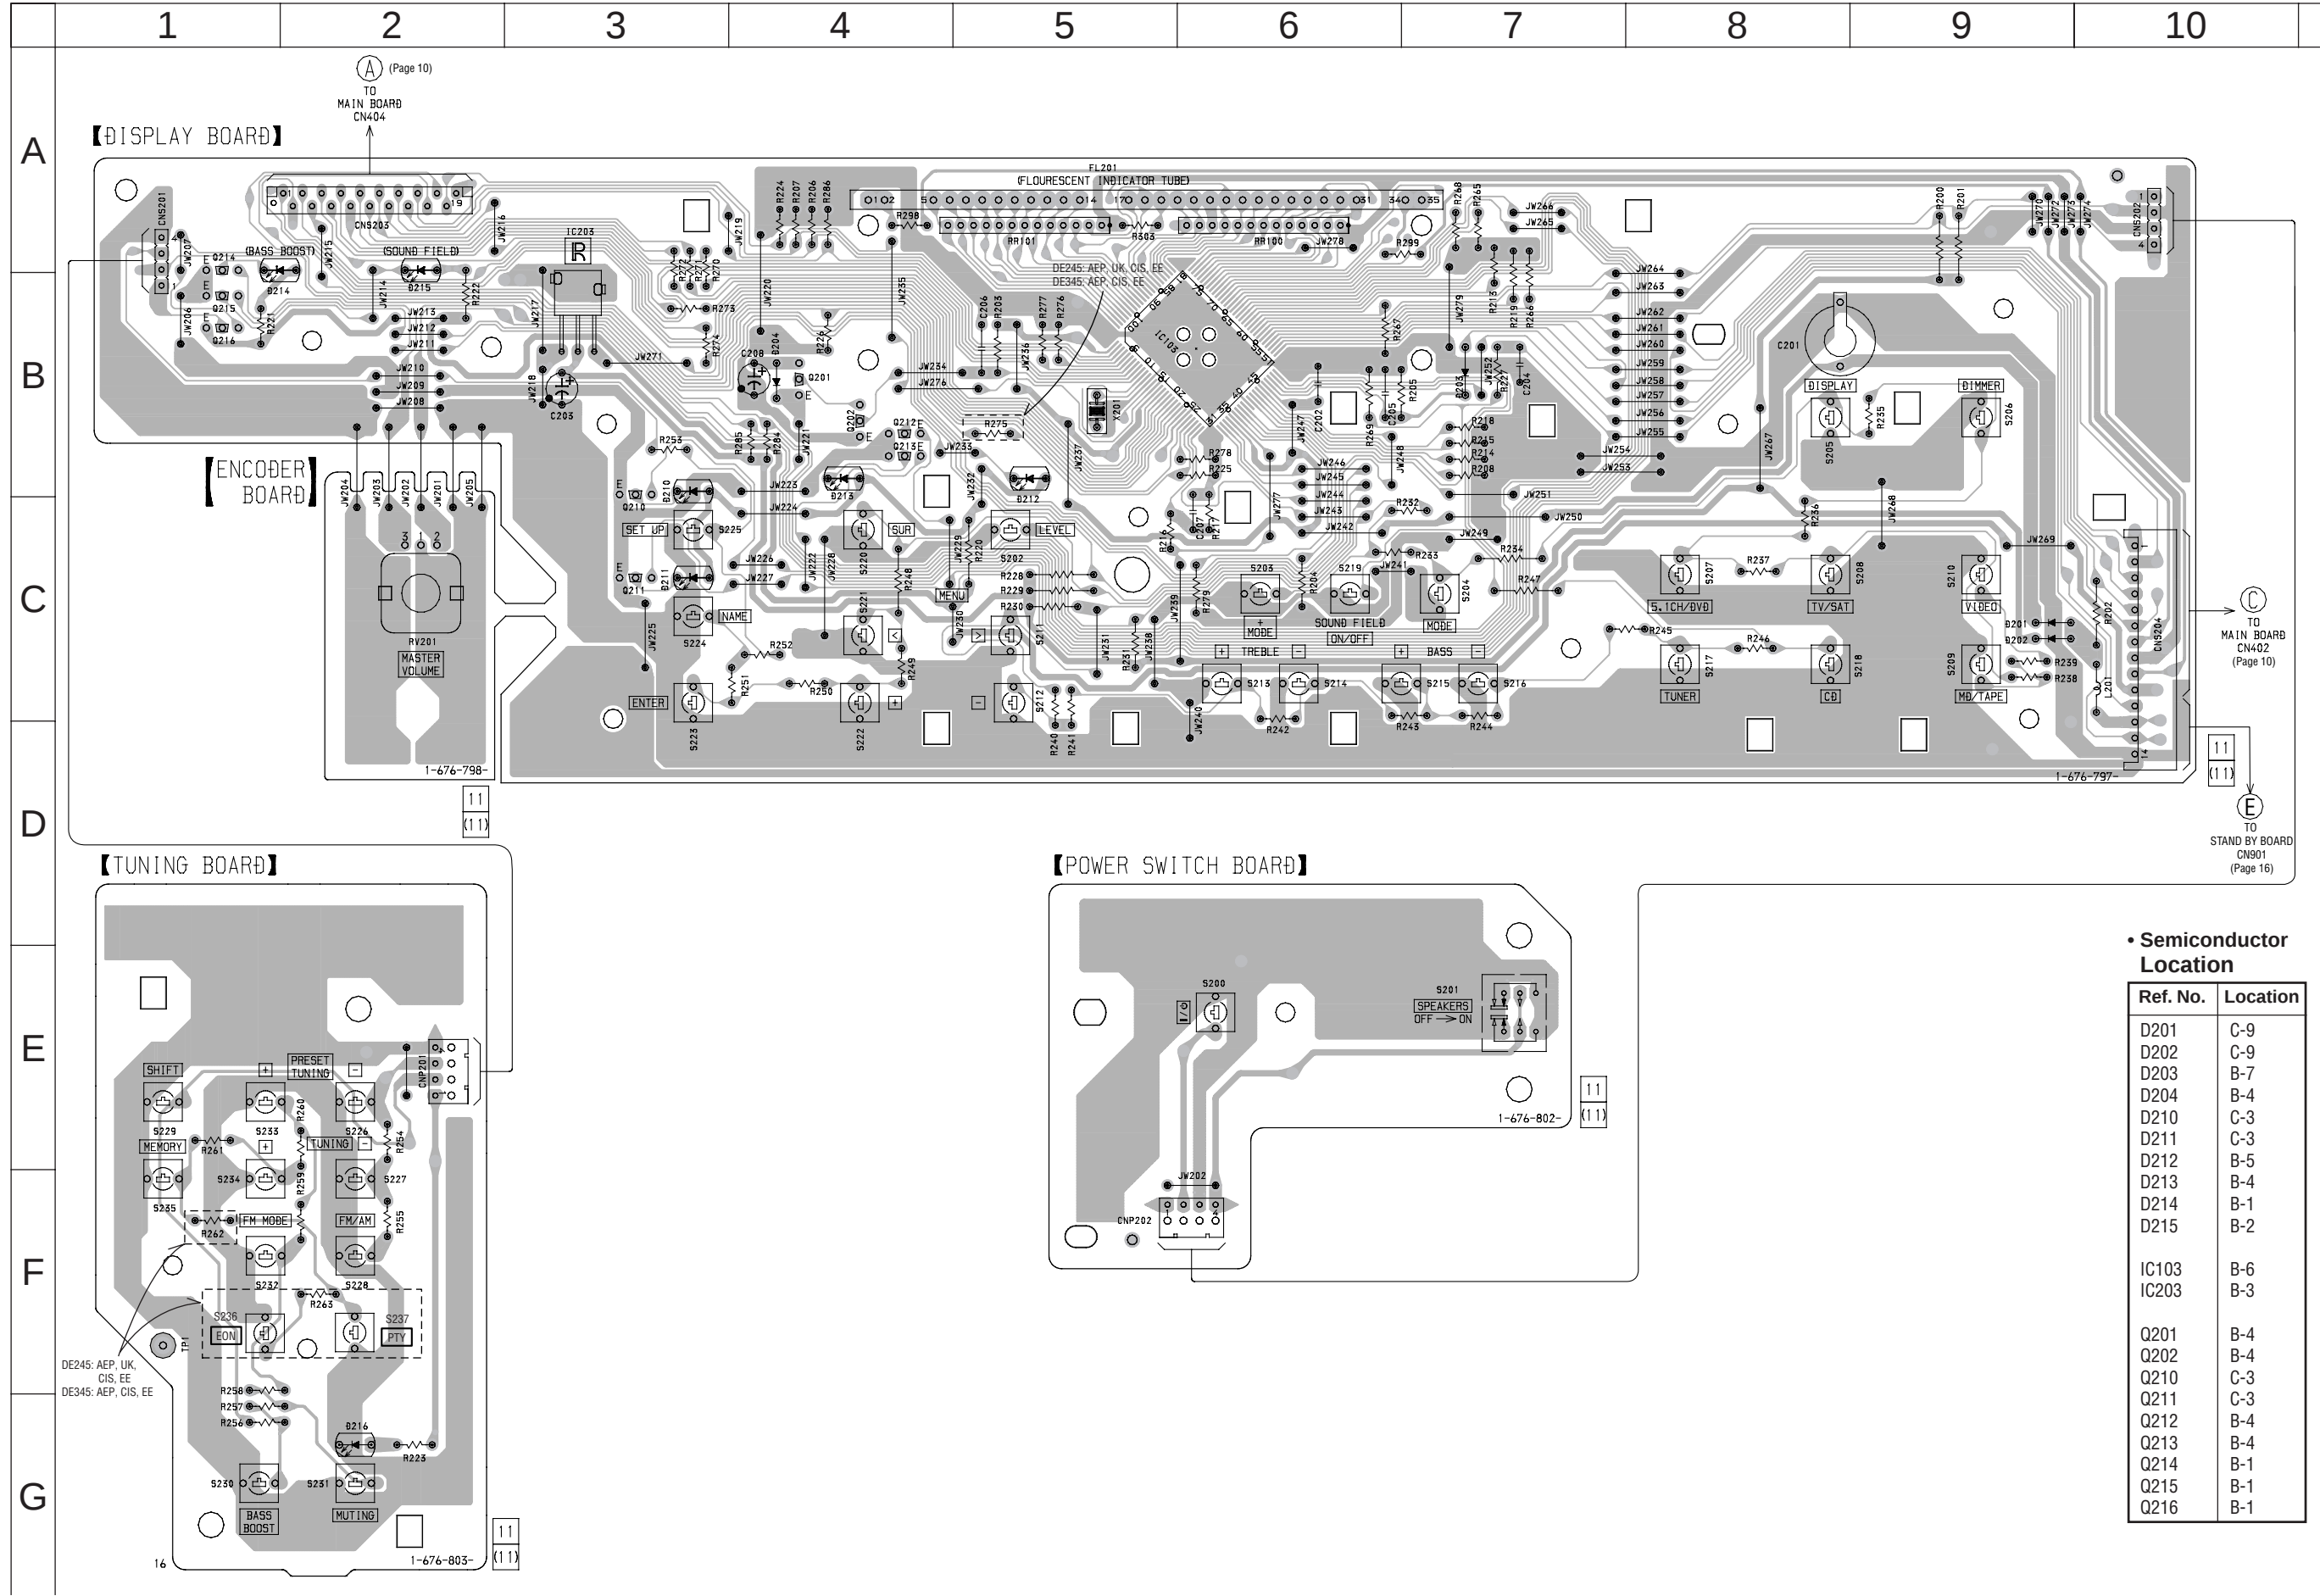


3-10. SCHEMATIC DIAGRAM PANEL SECTION • Refer to page 8 for IC Pin Function.

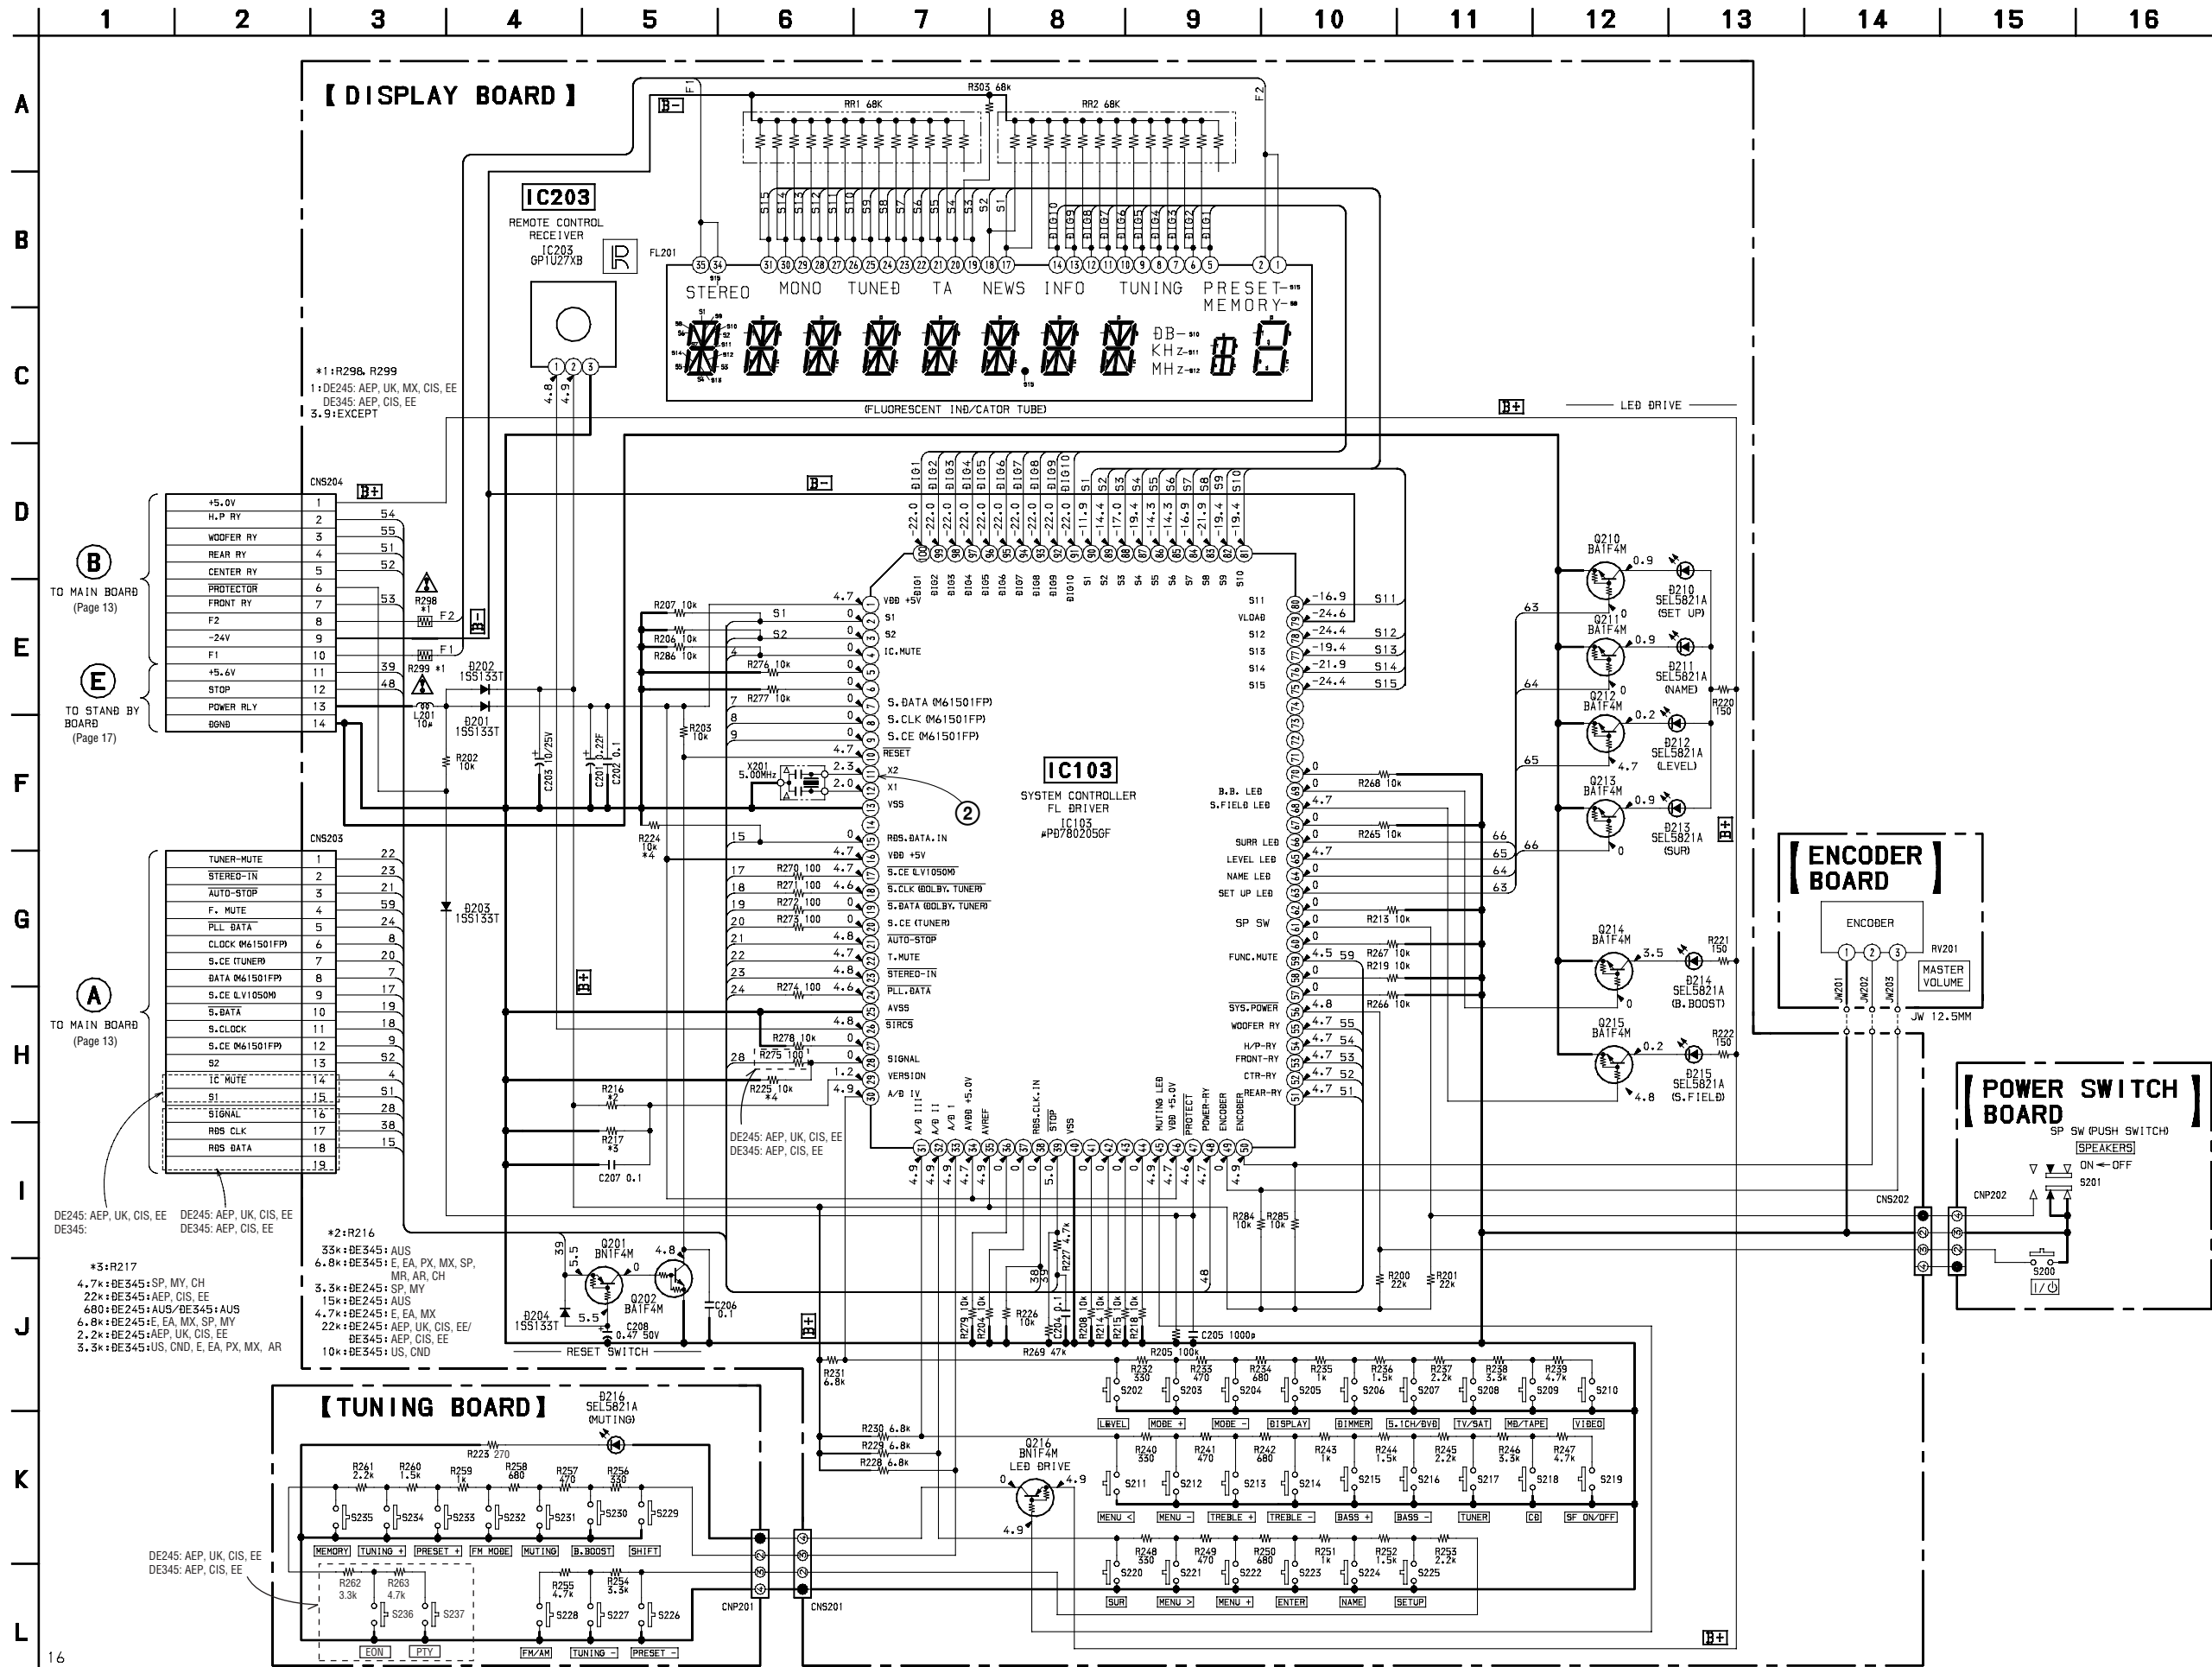




3-12. SCHEMATIC DIAGRAM POWER SECTION


• Refer to page 8 for IC Block Diagrams.

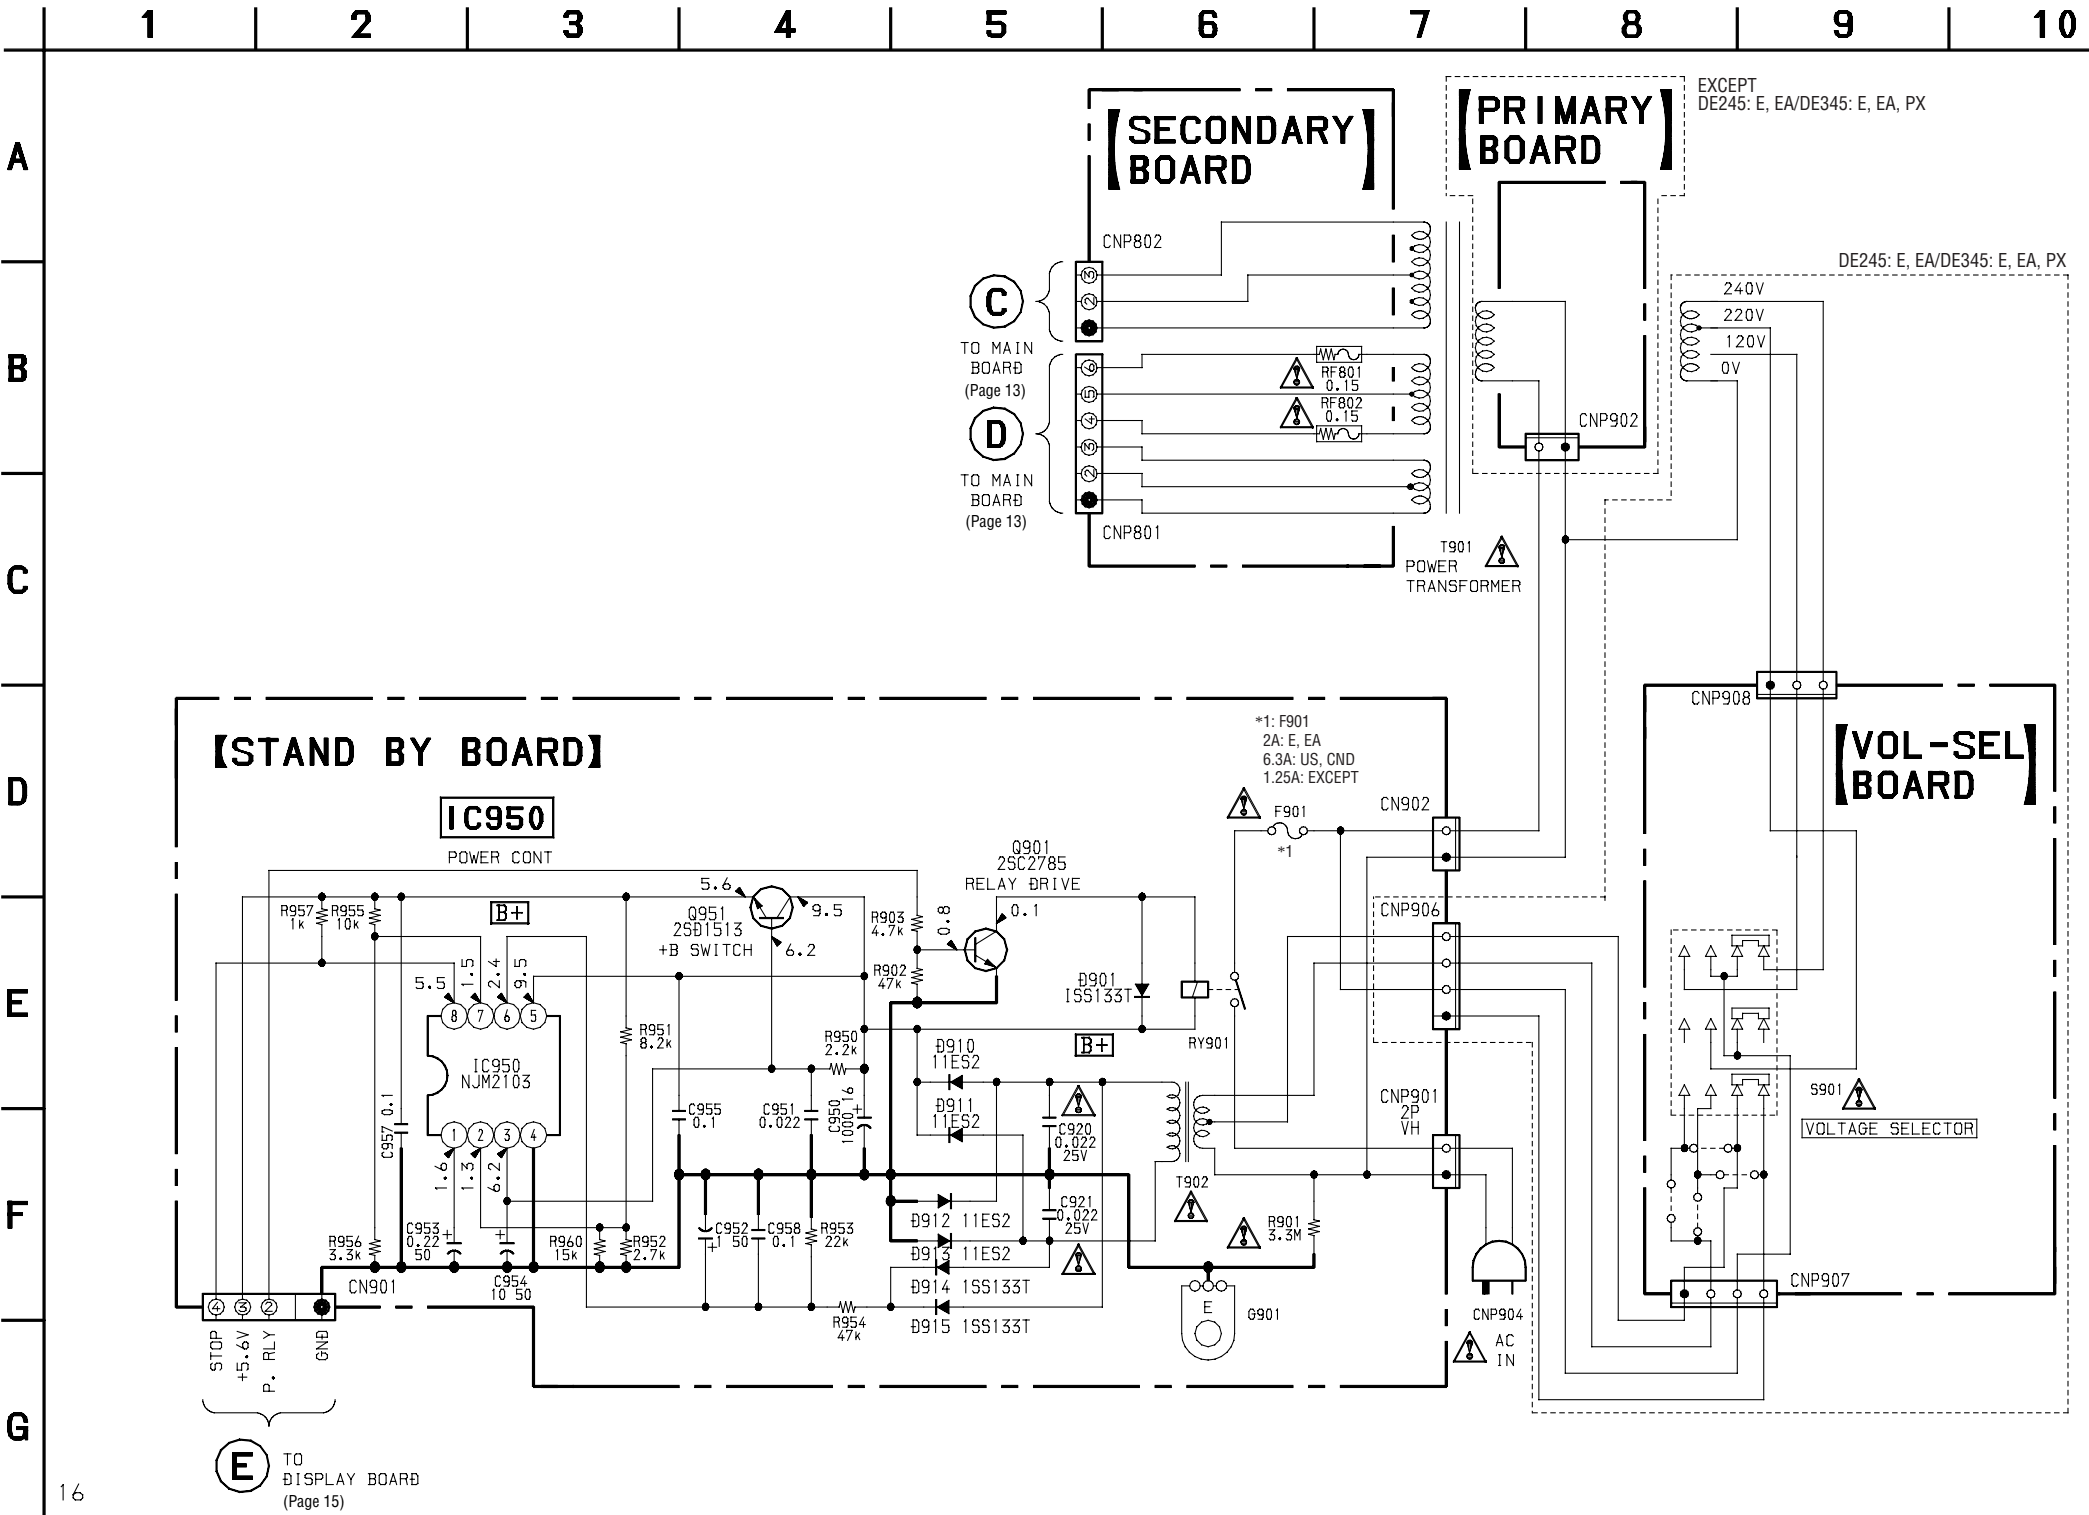

3-13. PRINTED WIRING BOARD VIDEO SECTION • Refer to page 9 for Circuit Boards Location.

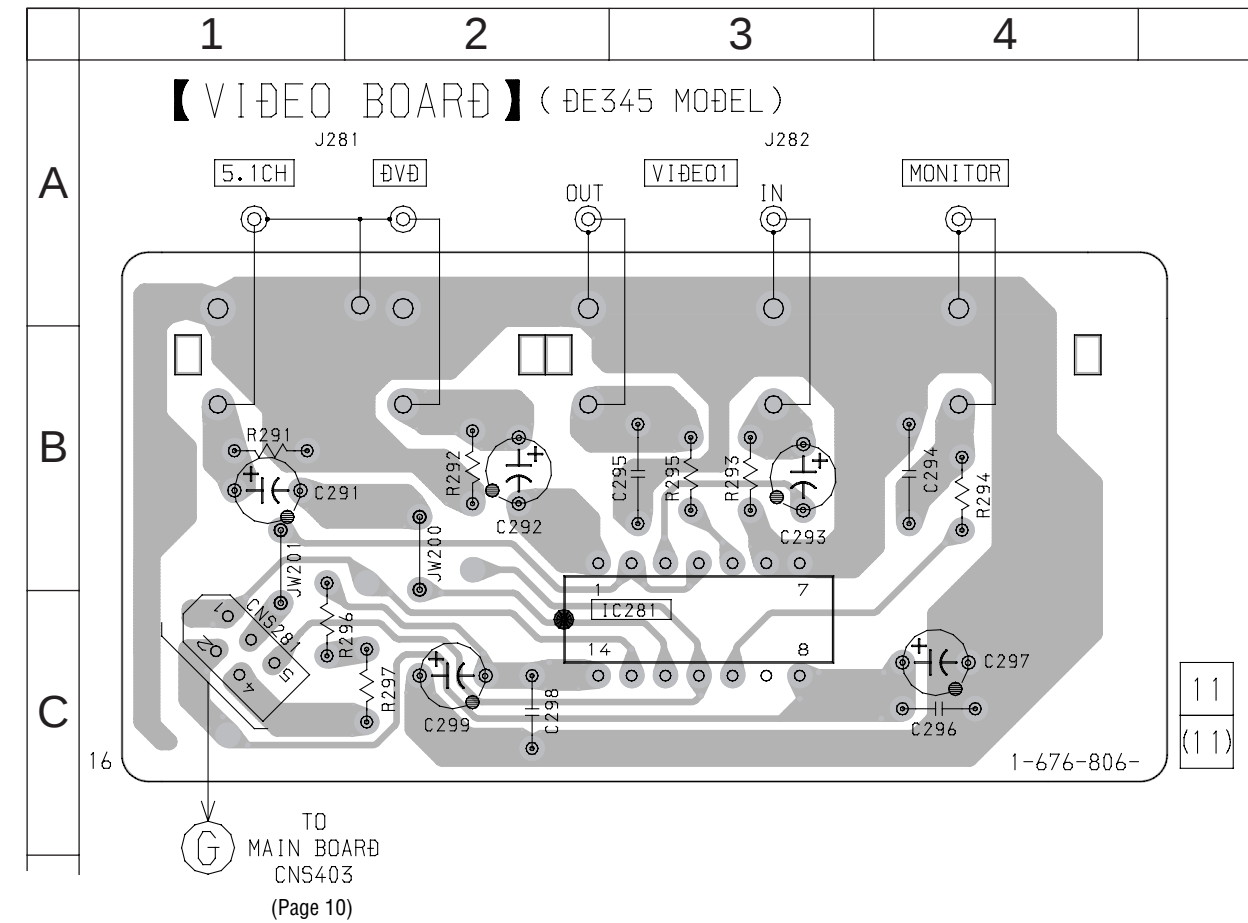

3-14. SCHEMATIC DIAGRAM VIDEO SECTION • Refer to page 8 for IC Block Diagrams.

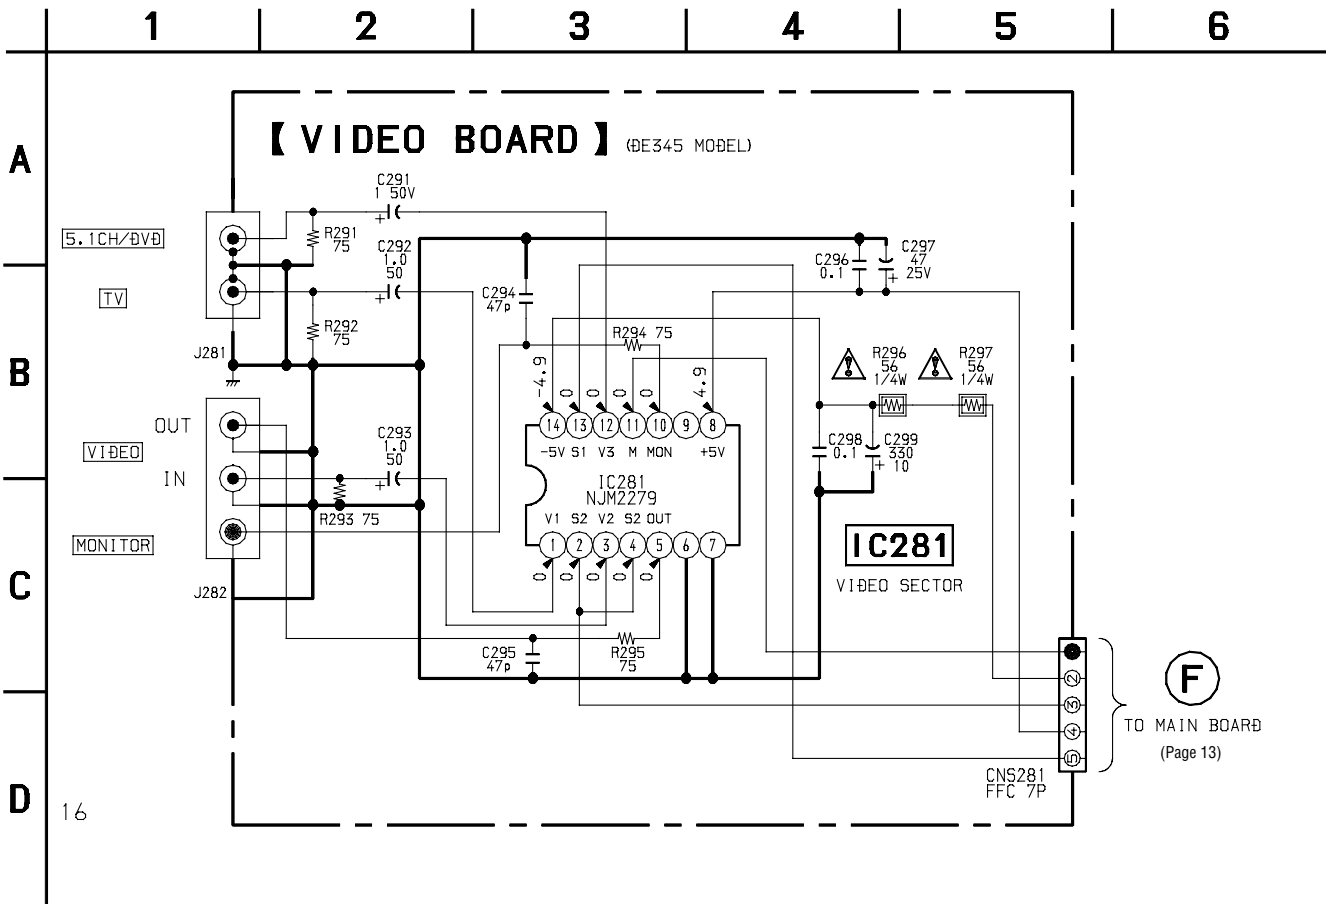

SECTION 4
EXPLODED VIEWS

NOTE:

- XX, -X mean standardized parts, so they may have some differences from the original one.
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (# mark) list and accessories and packing materials are given in the last of this parts list.


- Color Indication of Appearance Parts Example:
KNOB, BALANCE (WHITE) . . . (RED)
Parts of Color Cabinet's Color
- Abbreviation
CND : Canadian model.
AUS : Australian model.
SP : Singapore model.
MY : Malaysia model.
AR : Argentine model.
CH : Chinese model.
MX : Mexican model.
CIS : Russian model.
EA : Saudi Arabian model.
EE : East European model.

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque Δ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.



以阴影和 Δ 标志来识别的零部件在安全方面具有关键性。因此只能以规定号码的零部件来更换。

4-1. FRONT PANEL SECTION

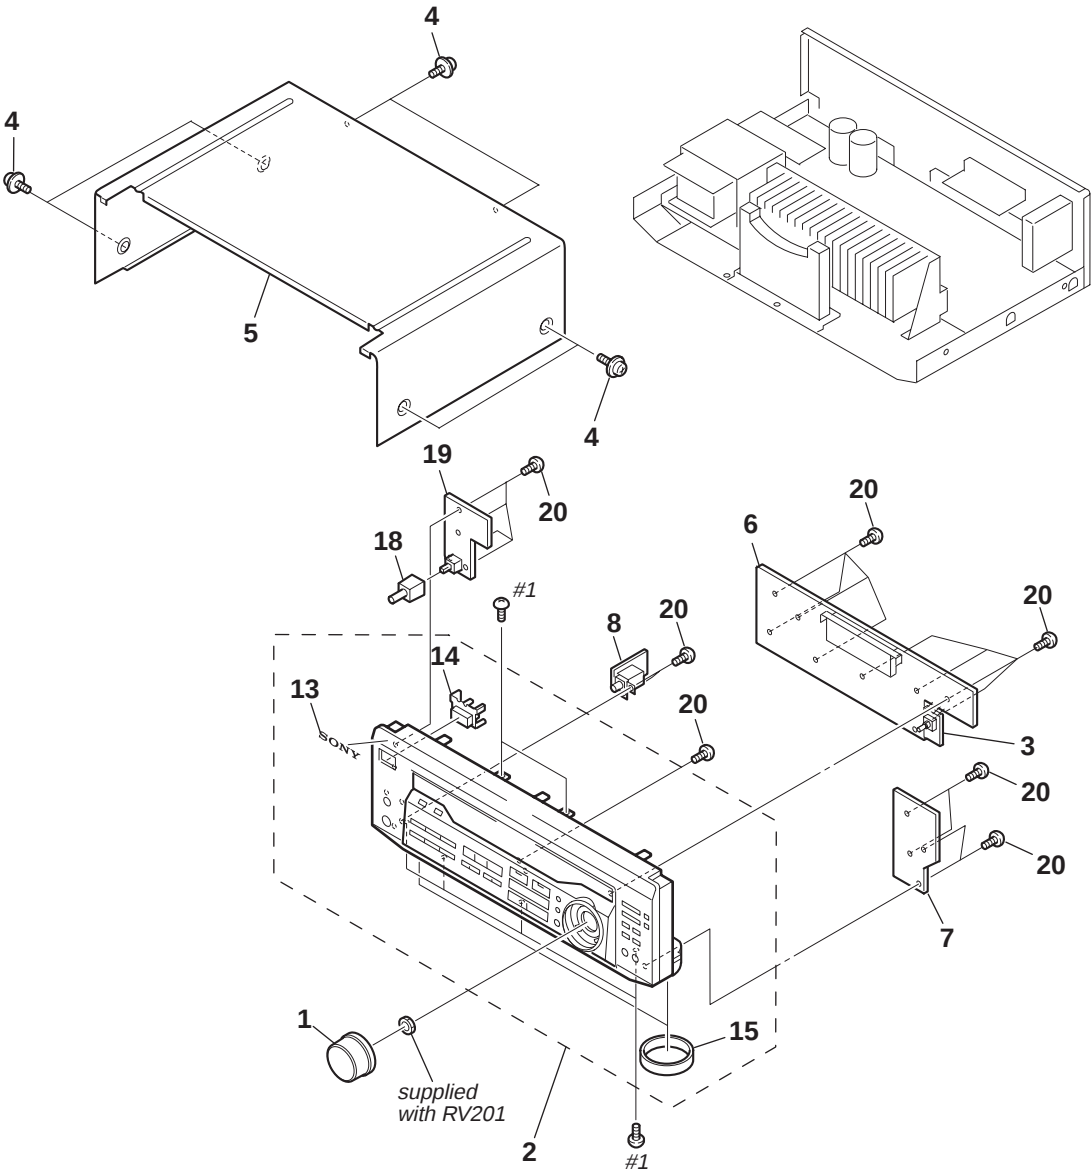

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
1	4-226-453-01	KNOB(VOL-E3) (DE245:AUS,SP,MY/DE345:US,CND,E,EA,PX,AUS,MX,SP,MY,AR,CH)		6	A-4428-390-A	DISPLAY BOARD, COMPLETE (DE345:SP,MY,CH)	
1	4-226-453-31	KNOB(VOL-E3) (BLACK) (DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)		6	A-4428-393-A	DISPLAY BOARD, COMPLETE (DE345:E,EA,PX)	
1	4-226-453-61	KNOB(VOL-E3) (DE245:E,EA,MX)		6	A-4428-397-A	DISPLAY BOARD, COMPLETE (DE345:CND)	
1	4-226-453-71	KNOB(VOL-E3) (SILVER) (DE245:AEP,UK,CIS,EE)		6	A-4428-400-A	DISPLAY BOARD, COMPLETE (DE245:AUS)	
2	X-4952-589-1	FRONT PANEL ASSY (DE345:US,CND)		6	A-4428-404-A	DISPLAY BOARD, COMPLETE (DE245:SP,MY)	
2	X-4952-630-1	FRONT PANEL ASSY (BLACK) (DE245:AEP,UK,CIS,EE)		6	A-4428-406-A	DISPLAY BOARD, COMPLETE (DE245:E,EA)	
2	X-4952-915-1	FRONT PANEL ASSY (SILVER) (DE245:AEP,UK,CIS,EE)		6	A-4428-409-A	DISPLAY BOARD, COMPLETE (DE245:AEP,UK,CIS,EE)	
2	X-4952-631-1	FRONT PANEL ASSY (DE345:E,EA,PX,AUS,MX,SP,MY,AR)		6	A-4428-413-A	DISPLAY BOARD, COMPLETE (DE345:AEP,CIS,EE)	
2	X-4952-632-1	FRONT PANEL ASSY (DE345:CH)		6	A-4473-331-A	DISPLAY BOARD, COMPLETE (DE345:MX)	
2	X-4952-633-1	FRONT PANEL ASSY (DE345:AEP,CIS,EE)		6	A-4473-333-A	DISPLAY BOARD, COMPLETE (DE345:AR)	
2	X-4952-634-1	FRONT PANEL ASSY (DE245:AUS,SP,MY)		6	A-4473-336-A	DISPLAY BOARD, COMPLETE (DE245:MX)	
2	X-4952-932-1	FRONT PANEL ASSY (DE245:E,EA,MX)		7	1-676-803-11	TUNING BOARD	
3	1-676-798-11	ENCODER BOARD		8	1-676-804-11	HEADPHONE BOARD	
4	4-210-291-01	SCREW (CASE 3 TP2)		13	4-996-698-81	EMBLEM, SONY	
5	4-218-845-01	UPPER CASE (DE245:AUS,E,EA,SP,MY/DE345:US,CND,E,EA,PX,AUS,MX,SP,MY,AR,CH)		14	4-996-683-61	BUTTON (POWER)	
5	4-998-206-41	UPPER CASE (BLACK)		15	4-977-593-01	RING(DIA. 50), ORNAMENTAL	
5	4-998-206-61	UPPER CASE (SILVER)		18	4-226-445-01	BUTTON (S) (DE245:AUS,SP,MY/DE345:US,CND,E,EA,PX,AUS,MX,SP,MY,AR,CH)	
6	A-4428-267-A	DISPLAY BOARD, COMPLETE (DE345:US)		18	4-226-445-31	BUTTON (S) (DE245:AEP,UK,CIS,EE/DE345:AP,CIS,EE)	
6	A-4428-383-A	DISPLAY BOARD, COMPLETE (DE345:CND)		18	4-226-445-61	BUTTON (S) (DE245:E,EA,MX)	
6	A-4428-386-A	DISPLAY BOARD, COMPLETE (DE345:AUS)		19	1-676-802-11	POWER SWITCH BOARD	
6				20	4-951-620-01	SCREW (2.6X8), +BVTP	

4-2. CHASSIS SECTION

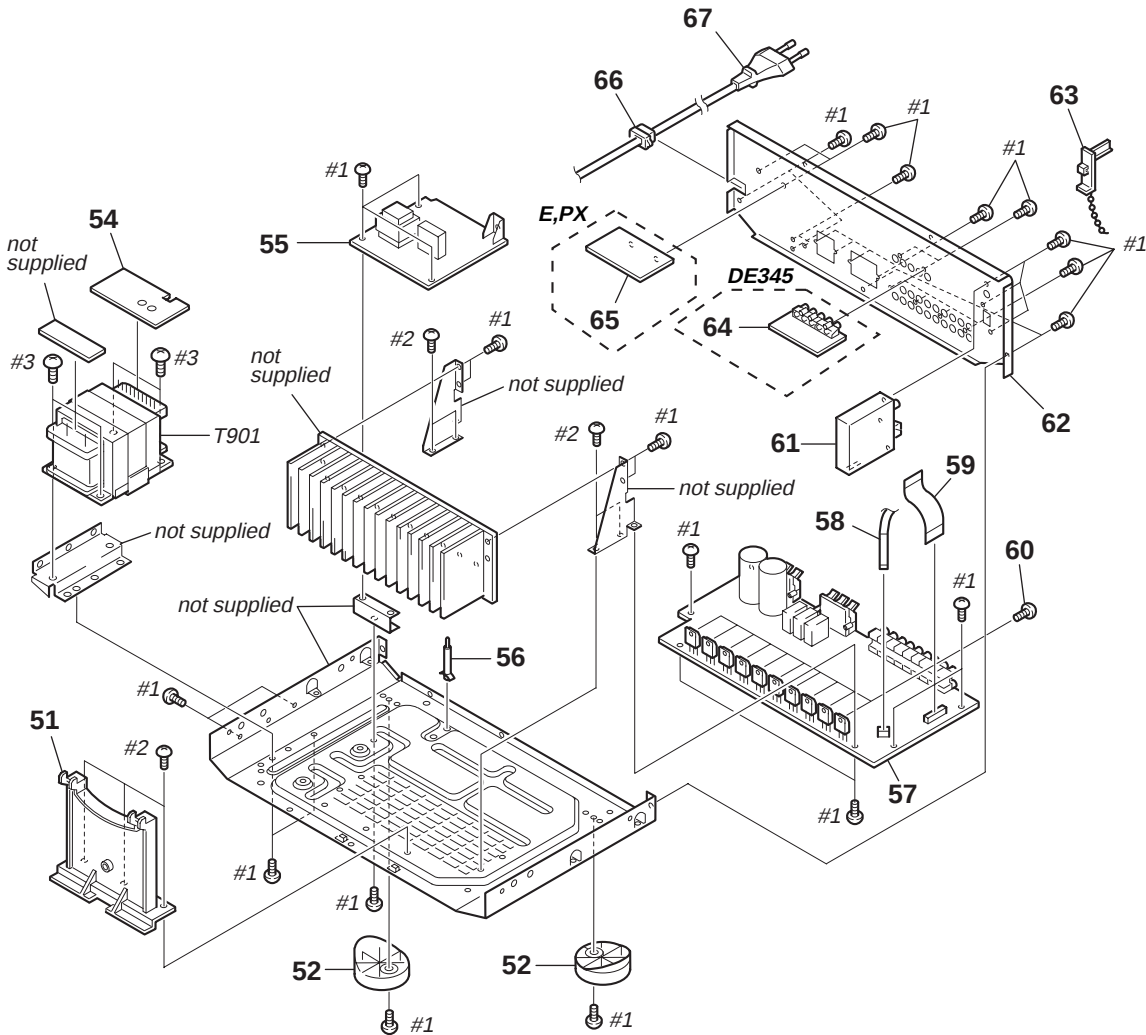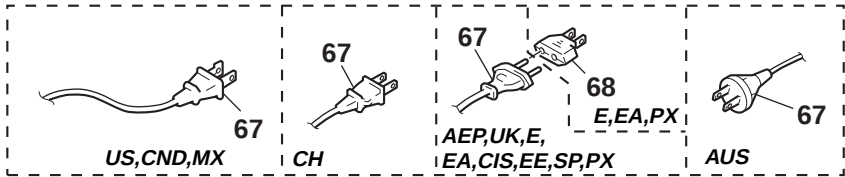

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
51	4-226-458-01	SUB-MOLD (E3)		61	1-693-407-41	TUNER	
52	X-4951-458-1	FOOT ASSY (DE245:AUS,E,EA,SP,MY/ DE345:US,CND,E,EA,PX,AUS,MX,SP,MY,AR,CH)		62	4-226-462-01	BACK PANEL (E3) (DE345:US)	
52	X-4952-804-1	FOOT ASSY (DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)		62	4-226-462-11	BACK PANEL (E3) (DE345:CND)	
52	X-4952-941-1	FOOT ASSY (DE245:MX)		62	4-226-462-21	BACK PANEL (E3) (DE345:AUS)	
54	1-676-800-11	SECONDARY BOARD		62	4-226-462-31	BACK PANEL (E3) (DE345:SP,MY)	
55	A-4428-270-A	STAND BY BOARD, COMPLETE (DE345:US,CND,MX)		62	4-226-462-41	BACK PANEL (E3) (DE345:CH)	
55	A-4428-279-A	STAND BY BOARD, COMPLETE (DE245:MX)		62	4-226-462-51	BACK PANEL (E3) (DE345:E,EA,PX)	
55	A-4428-388-A	STAND BY BOARD, COMPLETE (DE345:AUS)		62	4-226-462-61	BACK PANEL (E3) (DE345:AEP)	
55	A-4428-391-A	STAND BY BOARD, COMPLETE (DE345:SP,MY,AR)		62	4-226-462-71	BACK PANEL (E3) (DE345:CIS,EE)	
55	A-4428-392-A	STAND BY BOARD, COMPLETE (DE345:CH)		62	4-226-468-21	BACK PANEL (E2) (DE245:AUS)	
55	A-4428-395-A	STAND BY BOARD, COMPLETE (DE345:E,EA,PX,MY)		62	4-226-468-31	BACK PANEL (E2) (DE245:SP,MY)	
55	A-4428-402-A	STAND BY BOARD, COMPLETE (DE245:AUS)		62	4-226-468-41	BACK PANEL (E2) (DE245:E,EA)	
55	A-4428-405-A	STAND BY BOARD, COMPLETE (DE245:SP,MY)		62	4-226-468-51	BACK PANEL (E2) (DE245:AEP,UK)	
55	A-4428-407-A	STAND BY BOARD, COMPLETE (DE245:E,EA)		62	4-226-468-61	BACK PANEL (E2) (DE245:MX,CIS,EE)	
55	A-4428-411-A	STAND BY BOARD, COMPLETE (DE245:AEP,UK,CIS,EE)		62	4-226-462-81	BACK PANEL (E3) (DE345:MX)	
55	A-4428-416-A	STAND BY BOARD, COMPLETE (DE345:AEP,CIS,EE)		62	4-226-462-91	BACK PANEL (E3) (DE345:AR)	
56	4-924-098-01	HOLDER, PC BOARD		63	4-956-370-12	BAND, PLUG FIXED (DE245:AUS/DE345:AUS)	
57	A-4428-268-A	MAIN BOARD, COMPLETE (DE345:US)		64	1-676-806-11	VIDEO BOARD (DE345)	
57	A-4428-387-A	MAIN BOARD, COMPLETE (DE345:AUS,SP,MY,CH)		65	1-676-805-11	VOL-SEL BOARD (DE245:E,EA/DE345:E,EA,PX)	
57	A-4428-394-A	MAIN BOARD, COMPLETE (DE345:CND,E,EA,PX)		66	3-703-244-00	BUSHING (FBS001), CORD	
57	A-4428-398-A	MAIN BOARD, COMPLETE (DE245:E,EA)		△ 67	1-696-847-11	CORD, POWER (AUS)	
57	A-4428-401-A	MAIN BOARD, COMPLETE (DE245:AUS,SP,MY)		△ 67	1-777-071-21	CORD, POWER (AEP,UK,E,EA,CIS,EE,SP,MY,PX)	
57	A-4428-410-A	MAIN BOARD, COMPLETE (DE245:AEP,UK,CIS,EE)		△ 67	1-783-205-11	CORD, POWER (CH)	
57	A-4428-414-A	MAIN BOARD, COMPLETE (DE345:AEP,CIS,EE)		△ 67	1-783-820-11	CORD, POWER (US,CND,MX)	
57	A-4473-330-A	MAIN BOARD, COMPLETE (DE345:MX)		68	1-569-008-21	ADAPTOR, CONVERSION 2P (E,EA,PX)	
57	A-4473-332-A	MAIN BOARD, COMPLETE (DE345:AR)		△ T901	1-435-267-11	TRANSFORMER, POWER (DE245:AUS)	
57	A-4473-335-A	MAIN BOARD, COMPLETE (DE245:MX)		△ T901	1-435-268-11	TRANSFORMER, POWER (DE245:SP,MY)	
58	1-773-001-11	WIRE(FLAT TYPE) (15 CORE)		△ T901	1-435-269-11	TRANSFORMER, POWER (DE245:E,EA)	
59	1-769-850-11	WIRE(FLAT TYPE) (5 CORE)(DE345)		△ T901	1-435-270-11	TRANSFORMER, POWER (DE245:AEP,UK,CIS,EE)	
60	3-905-609-01	SCREW (TRANSISTOR)		△ T901	1-435-564-11	TRANSFORMER, POWER (DE245:MX)	
				△ T901	1-435-271-11	TRANSFORMER, POWER (DE345:US)	
				△ T901	1-435-272-11	TRANSFORMER, POWER (DE345:CND)	
				△ T901	1-435-273-11	TRANSFORMER, POWER (DE345:AUS)	
				△ T901	1-435-274-11	TRANSFORMER, POWER (DE345:SP,MY,AR,CH)	
				△ T901	1-435-275-11	TRANSFORMER, POWER (DE345:E,EA,PX)	
				△ T901	1-435-276-11	TRANSFORMER, POWER (DE345:AEP,CIS,EE)	
				△ T901	1-435-565-11	TRANSFORMER, POWER (DE345:MX)	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.	Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.	以阴影和 △ 标志来识别的零部件，在安全方面具有关键性。因此只能以规定号码的零部件来更换。
--	--	---

DISPLAY

Ref. No.	Part No.	Description	Remarks		
< RESISTOR >					
R200	1-249-433-11	CARBON	22K	5%	1/4W
R201	1-249-433-11	CARBON	22K	5%	1/4W
R202	1-249-429-11	CARBON	10K	5%	1/4W
R203	1-249-429-11	CARBON	10K	5%	1/4W
R204	1-249-429-11	CARBON	10K	5%	1/4W
R205	1-249-441-11	CARBON	100K	5%	1/4W
R206	1-249-429-11	CARBON	10K	5%	1/4W
R207	1-249-429-11	CARBON	10K	5%	1/4W
R208	1-249-429-11	CARBON	10K	5%	1/4W
R213	1-249-429-11	CARBON	10K	5%	1/4W
R214	1-249-429-11	CARBON	10K	5%	1/4W
R215	1-249-429-11	CARBON	10K	5%	1/4W
R216	1-249-435-11	CARBON	33K	5%	1/4W
				(DE345:AUS)	
R216	1-249-427-11	CARBON	6.8K	5%	1/4W F
			(DE345:E,EA,PX,MX,SP,MY,AR,CH)		
R216	1-247-843-11	CARBON	3.3K	5%	1/4W
				(DE245:SP,MY)	
R216	1-249-431-11	CARBON	15K	5%	1/4W
				(DE245:AUS)	
R216	1-249-425-11	CARBON	4.7K	5%	1/4W F
				(DE245:E,EA,MX)	
R216	1-247-863-91	CARBON	22K	5%	1/4W
				(DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)	
R216	1-249-429-11	CARBON	10K	5%	1/4W
				(DE345:US,CND)	
R217	1-249-425-11	CARBON	4.7K	5%	1/4W F
				(DE345:SP,MY,CH)	
R217	1-247-863-91	CARBON	22K	5%	1/4W
				(DE345:AEP,CIS,EE)	
R217	1-249-415-11	CARBON	680	5%	1/4W F
				(DE245:AUS/DE345:AUS)	
R217	1-249-427-11	CARBON	6.8K	5%	1/4W F
				(DE245:E,EA,MX,SP,MY)	
R217	1-249-421-11	CARBON	2.2K	5%	1/4W F
				(DE245:AEP,UK,CIS,EE)	
R217	1-247-843-11	CARBON	3.3K	5%	1/4W
			(DE345:US,CND,E,EA,PX,MX,AR)		
R218	1-249-429-11	CARBON	10K	5%	1/4W
R219	1-249-429-11	CARBON	10K	5%	1/4W
R220	1-249-407-11	CARBON	150	5%	1/4W F
R221	1-249-407-11	CARBON	150	5%	1/4W F
R222	1-249-407-11	CARBON	150	5%	1/4W F
R224	1-249-429-11	CARBON	10K	5%	1/4W
R225	1-249-429-11	CARBON	10K	5%	1/4W
R226	1-249-429-11	CARBON	10K	5%	1/4W
R227	1-249-425-11	CARBON	4.7K	5%	1/4W F
R228	1-249-427-11	CARBON	6.8K	5%	1/4W F
R229	1-249-427-11	CARBON	6.8K	5%	1/4W F
R230	1-249-427-11	CARBON	6.8K	5%	1/4W F
R231	1-249-427-11	CARBON	6.8K	5%	1/4W F
R232	1-249-411-11	CARBON	330	5%	1/4W
R233	1-249-413-11	CARBON	470	5%	1/4W F
R234	1-249-415-11	CARBON	680	5%	1/4W F
R235	1-249-417-11	CARBON	1K	5%	1/4W F
R236	1-249-419-11	CARBON	1.5K	5%	1/4W F
R237	1-249-421-11	CARBON	2.2K	5%	1/4W F
R238	1-247-843-11	CARBON	3.3K	5%	1/4W

Ref. No.	Part No.	Description	Remarks		
R239	1-249-425-11	CARBON	4.7K	5%	1/4W F
R240	1-249-411-11	CARBON	330	5%	1/4W
R241	1-249-413-11	CARBON	470	5%	1/4W F
R242	1-249-415-11	CARBON	680	5%	1/4W F
R243	1-249-417-11	CARBON	1K	5%	1/4W F
R244	1-249-419-11	CARBON	1.5K	5%	1/4W F
R245	1-249-421-11	CARBON	2.2K	5%	1/4W F
R246	1-247-843-11	CARBON	3.3K	5%	1/4W
R247	1-249-425-11	CARBON	4.7K	5%	1/4W F
R248	1-249-411-11	CARBON	330	5%	1/4W
R249	1-249-413-11	CARBON	470	5%	1/4W F
R250	1-249-415-11	CARBON	680	5%	1/4W F
R251	1-249-417-11	CARBON	1K	5%	1/4W F
R252	1-249-419-11	CARBON	1.5K	5%	1/4W F
R253	1-249-421-11	CARBON	2.2K	5%	1/4W F
R265	1-249-429-11	CARBON	10K	5%	1/4W
R266	1-249-429-11	CARBON	10K	5%	1/4W
R267	1-249-429-11	CARBON	10K	5%	1/4W
R268	1-249-429-11	CARBON	10K	5%	1/4W
R269	1-249-437-11	CARBON	47K	5%	1/4W
R270	1-247-807-31	CARBON	100	5%	1/4W
R271	1-247-807-31	CARBON	100	5%	1/4W
R272	1-247-807-31	CARBON	100	5%	1/4W
R273	1-247-807-31	CARBON	100	5%	1/4W
R274	1-247-807-31	CARBON	100	5%	1/4W
R275	1-247-807-31	CARBON	100	5%	1/4W
			(DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)		
R276	1-249-429-11	CARBON	10K	5%	1/4W
R277	1-249-429-11	CARBON	10K	5%	1/4W
R278	1-249-429-11	CARBON	10K	5%	1/4W
R279	1-249-429-11	CARBON	10K	5%	1/4W
R284	1-249-429-11	CARBON	10K	5%	1/4W
R285	1-249-429-11	CARBON	10K	5%	1/4W
R286	1-249-429-11	CARBON	10K	5%	1/4W
△ R298	1-249-388-61	CARBON	3.9	5%	1/4W
			(DE245:E,AUS,SP/DE345:US,CND,E,EA,PX,AUS,MX,SP,MY,AR,CH)		
△ R298	1-249-381-11	CARBON	1	5%	1/4W F
			(DE245:AEP,UK,MX,CIS,EE/DE345:AEP,CIS,EE)		
△ R299	1-249-388-61	CARBON	3.9	5%	1/4W
			(DE245:E,AUS,SP/DE345:US,CND,E,EA,PX,AUS,MX,SP,MY,AR,CH)		
△ R299	1-249-381-11	CARBON	1	5%	1/4W F
			(DE245:AEP,UK,MX,CIS,EE/DE345:AEP,CIS,EE)		
R303	1-249-439-11	CARBON	68K	5%	1/4W

< SWITCH >

S202	1-771-410-21	SWITCH, TACTILE (LEVEL)
S203	1-771-410-21	SWITCH, TACTILE (MODE +)
S204	1-771-410-21	SWITCH, TACTILE (MODE -)
S205	1-771-410-21	SWITCH, TACTILE (DISPLAY)
S206	1-771-410-21	SWITCH, TACTILE (DIMMER)
S207	1-771-410-21	SWITCH, TACTILE (5.1CH/DVD)
S208	1-771-410-21	SWITCH, TACTILE (TV/SAT)
S209	1-771-410-21	SWITCH, TACTILE (MD/TAPE)
S210	1-771-410-21	SWITCH, TACTILE (VIDEO)
S211	1-771-410-21	SWITCH, TACTILE (MENU <)

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

以阴影和 △ 标志来识别的零部件，在安全方面具有关键性。因此只能以规定号码的零部件来更换。

DISPLAY

ENCODER

HEADPHONE

MAIN

Ref. No.	Part No.	Description	Remarks
S212	1-771-410-21	SWITCH, TACTILE (MENU -)	
S213	1-771-410-21	SWITCH, TACTILE (TREBLE +)	
S214	1-771-410-21	SWITCH, TACTILE (TREBLE -)	
S215	1-771-410-21	SWITCH, TACTILE (BASS +)	
S216	1-771-410-21	SWITCH, TACTILE (BASS -)	
S217	1-771-410-21	SWITCH, TACTILE (TUNER)	
S218	1-771-410-21	SWITCH, TACTILE (CD)	
S219	1-771-410-21	SWITCH, TACTILE (SF ON/OFF)	
S220	1-771-410-21	SWITCH, TACTILE (SUR)	
S221	1-771-410-21	SWITCH, TACTILE (MENU >)	
S222	1-771-410-21	SWITCH, TACTILE (MENU +)	
S223	1-771-410-21	SWITCH, TACTILE (ENTER)	
S224	1-771-410-21	SWITCH, TACTILE (NAME)	
S225	1-771-410-21	SWITCH, TACTILE (SET UP)	
< VIBRATOR >			
X201	1-579-233-11	VIBRATOR, CERAMIC 5MHZ	

	1-676-798-11	ENCODER BOARD	

< VARIABLE RESISTOR >			
RV201	1-418-773-11	ENCODER	

	1-676-804-11	HEADPHONE BOARD	

< CONNECTOR >			
* CN792	1-564-518-11	PLUG, CONNECTOR 3P	
< JACK >			
J791	1-750-733-11	JACK (LARGE TYPE)(PHONES)	

A-4428-268-A	MAIN BOARD, COMPLETE (DE345:US)		

A-4428-387-A	MAIN BOARD, COMPLETE		
(DE345:AUS,SP,MY,CH)			

A-4428-394-A	MAIN BOARD, COMPLETE		
(DE345:CND,E,EA,PX)			

A-4428-398-A	MAIN BOARD, COMPLETE (DE245:E,EA)		

A-4428-401-A	MAIN BOARD, COMPLETE (DE245:AUS,SP,MY)		

A-4428-410-A	MAIN BOARD, COMPLETE		
(DE245:AEP,UK,CIS,EE)			

A-4428-414-A	MAIN BOARD, COMPLETE (DE345:AEP,CIS,EE)		

A-4473-330-A	MAIN BOARD, COMPLETE (DE345:MX)		

A-4473-332-A	MAIN BOARD, COMPLETE (DE345:AR)		

A-4473-335-A	MAIN BOARD, COMPLETE (DE245:MX)		

Ref. No.	Part No.	Description	Remarks
< CAPACITOR >			
C3	1-162-288-31	CERAMIC 330PF 10% 50V	
(DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)			
C4	1-126-961-11	ELECT 2.2uF 20.00% 50V	
(DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)			
C5	1-164-159-21	CERAMIC 0.1uF 50V	
(DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)			
C6	1-162-291-31	CERAMIC 560PF 10.00% 50V	
(DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)			
C7	1-128-808-21	CERAMIC 82PF 5% 50V	
(DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)			
C10	1-164-159-21	CERAMIC 0.1uF 50V	
(DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)			
C301	1-136-165-00	MYLAR 0.1uF 5.00% 50V	
C302	1-126-959-11	ELECT 0.47uF 20.00% 50V	
C303	1-126-794-11	ELECT 4.7uF 20.00% 50V	
C304	1-126-959-11	ELECT 0.47uF 20.00% 50V	
C305	1-126-794-11	ELECT 4.7uF 20.00% 50V	
C306	1-136-167-00	MYLAR 0.15uF 5.00% 50V	
C307	1-126-962-11	ELECT 3.3uF 20.00% 50V	
C308	1-136-167-00	MYLAR 0.15uF 5.00% 50V	
C309	1-136-167-00	MYLAR 0.15uF 5.00% 50V	
C310	1-126-962-11	ELECT 3.3uF 20.00% 50V	
C311	1-136-167-00	MYLAR 0.15uF 5.00% 50V	
C312	1-126-794-11	ELECT 4.7uF 20.00% 50V	
C313	1-126-959-11	ELECT 0.47uF 20.00% 50V	
C314	1-126-794-11	ELECT 4.7uF 20.00% 50V	
C315	1-126-959-11	ELECT 0.47uF 20.00% 50V	
C316	1-136-165-00	MYLAR 0.1uF 5.00% 50V	
C317	1-136-165-00	MYLAR 0.1uF 5.00% 50V	
C318	1-126-964-11	ELECT 10uF 20.00% 50V	
C319	1-126-964-11	ELECT 10uF 20.00% 50V	
C320	1-126-964-11	ELECT 10uF 20.00% 50V	
C321	1-126-964-11	ELECT 10uF 20.00% 50V	
C322	1-126-934-11	ELECT 220uF 20.00% 10V	
C323	1-126-934-11	ELECT 220uF 20.00% 10V	
C325	1-126-961-11	ELECT 2.2uF 20.00% 50V	
C326	1-126-934-11	ELECT 220uF 20.00% 10V	
C327	1-164-159-21	CERAMIC 0.1uF 50V	
C328	1-126-964-11	ELECT 10uF 20.00% 50V	
C329	1-126-964-11	ELECT 10uF 20.00% 50V	
C330	1-126-964-11	ELECT 10uF 20.00% 50V	
C331	1-126-964-11	ELECT 10uF 20.00% 50V	
C332	1-124-252-00	ELECT 0.33uF 20% 50V	
C333	1-126-959-11	ELECT 0.47uF 20.00% 50V	
C334	1-126-934-11	ELECT 220uF 20.00% 10V	
C335	1-164-159-21	CERAMIC 0.1uF 50V	
C336	1-136-177-00	MYLAR 1uF 5.00% 50V	
C337	1-136-177-00	MYLAR 1uF 5.00% 50V	
C338	1-136-165-00	MYLAR 0.1uF 5.00% 50V	
C339	1-136-165-00	MYLAR 0.1uF 5.00% 50V	
C340	1-126-956-91	ELECT 0.1uF 20.00% 50V	
C341	1-126-961-11	ELECT 2.2uF 20.00% 50V	
C342	1-126-961-11	ELECT 2.2uF 20.00% 50V	
C343	1-126-961-11	ELECT 2.2uF 20.00% 50V	
C344	1-126-961-11	ELECT 2.2uF 20.00% 50V	
C345	1-136-157-00	MYLAR 0.022uF 5.00% 50V	

Ref. No.	Part No.	Description	Remarks			Ref. No.	Part No.	Description	Remarks		
C346	1-128-809-11	CERAMIC	100PF	5%	50V	C454	1-126-964-11	ELECT	10uF	20.00%	50V
C347	1-128-809-11	CERAMIC	100PF	5%	50V	C455	1-126-964-11	ELECT	10uF	20.00%	50V
C348	1-126-961-11	ELECT	2.2uF	20.00%	50V	C461	1-126-794-11	ELECT	4.7uF	20.00%	50V
C349	1-130-494-11	MYLAR	0.082uF	5%	50V	C462	1-130-481-00	MYLAR	0.0068uF	5%	50V
C350	1-137-367-11	MYLAR	0.0033uF	5.00%	50V	C463	1-137-375-11	MYLAR	0.068uF	5.00%	50V
C351	1-130-494-11	MYLAR	0.082uF	5%	50V	C464	1-130-481-00	MYLAR	0.0068uF	5%	50V
C352	1-126-934-11	ELECT	220uF	20.00%	10V	C465	1-126-964-11	ELECT	10uF	20.00%	50V
C353	1-164-159-21	CERAMIC	0.1uF		50V	C466	1-126-794-11	ELECT	4.7uF	20.00%	50V
C354	1-135-518-11	CERAMIC	51PF	5%	50V	C467	1-136-165-00	MYLAR	0.1uF	5.00%	50V
C355	1-128-809-11	CERAMIC	100PF	5%	50V	C468	1-136-165-00	MYLAR	0.1uF	5.00%	50V
C356	1-128-805-21	CERAMIC	47PF	5%	50V	C470	1-126-964-11	ELECT	10uF	20.00%	50V
C357	1-162-203-31	CERAMIC	15PF	5.00%	50V	C472	1-126-794-11	ELECT	4.7uF	20.00%	50V
C358	1-128-809-11	CERAMIC	100PF	5%	50V	C480	1-126-965-11	ELECT	22uF	20.00%	50V
C359	1-136-357-11	MYLAR	680PF	5.00%	50V	C481	1-126-965-11	ELECT	22uF	20.00%	50V
C360	1-136-161-00	MYLAR	0.047uF	5.00%	50V	C482	1-126-965-11	ELECT	22uF	20.00%	50V
C361	1-136-157-00	MYLAR	0.022uF	5.00%	50V	C483	1-126-965-11	ELECT	22uF	20.00%	50V
C362	1-136-173-00	MYLAR	0.47uF	5.00%	50V	C501	1-126-794-11	ELECT	4.7uF	20.00%	50V
C363	1-126-967-11	ELECT	47uF	20.00%	50V	C502	1-128-809-11	CERAMIC	100PF	5%	50V
C364	1-126-961-11	ELECT	2.2uF	20.00%	50V	C503	1-102-989-00	CERAMIC	68PF	5.00%	500V
C365	1-126-961-11	ELECT	2.2uF	20.00%	50V	C504	1-102-989-00	CERAMIC	68PF	5.00%	500V
C366	1-126-961-11	ELECT	2.2uF	20.00%	50V	C505	1-104-665-11	ELECT	100uF	20.00%	10V
C367	1-136-165-00	MYLAR	0.1uF	5.00%	50V	C506	1-102-230-91	CERAMIC	4PF	10.00%	50V
C368	1-164-159-21	CERAMIC	0.1uF		50V	C510	1-104-664-11	ELECT	47uF	20.00%	25V
C371	1-164-159-21	CERAMIC	0.1uF		50V	C511	1-137-372-11	MYLAR	0.022uF	5.00%	50V
C372	1-164-159-21	CERAMIC	0.1uF		50V	C520	1-128-813-11	CERAMIC	220PF	5%	50V
C373	1-164-159-21	CERAMIC	0.1uF		50V	C524	1-126-964-11	ELECT	10uF	20.00%	50V
C374	1-164-159-21	CERAMIC	0.1uF		50V	C526	1-127-876-21	CERAMIC	0.01uF	10%	50V
C375	1-164-159-21	CERAMIC	0.1uF		50V	C601	1-126-794-11	ELECT	4.7uF	20.00%	50V
C376	1-164-159-21	CERAMIC	0.1uF		50V	C603	1-104-665-11	ELECT	100uF	20.00%	10V
C401	1-126-964-11	ELECT	10uF	20.00%	50V	C604	1-102-936-00	CERAMIC	3.0PF	+0.25PF	50V
C402	1-126-964-11	ELECT	10uF	20.00%	50V	C605	1-102-233-00	CERAMIC	33PF	10.00%	500V
C403	1-126-964-11	ELECT	10uF	20.00%	50V	C606	1-128-815-21	CERAMIC	330PF	5%	50V
C404	1-126-964-11	ELECT	10uF	20.00%	50V	C607	1-128-809-11	CERAMIC	100PF	5%	50V
C405	1-126-964-11	ELECT	10uF	20.00%	50V	C610	1-104-664-11	ELECT	47uF	20.00%	25V
C412	1-130-481-00	MYLAR	0.0068uF	5%	50V	C611	1-137-372-11	MYLAR	0.022uF	5.00%	50V
C414	1-130-481-00	MYLAR	0.0068uF	5%	50V	C620	1-128-813-11	CERAMIC	220PF	5%	50V
C416	1-136-165-00	MYLAR	0.1uF	5.00%	50V	C624	1-126-964-11	ELECT	10uF	20.00%	50V
C417	1-136-165-00	MYLAR	0.1uF	5.00%	50V	C626	1-127-876-21	CERAMIC	0.01uF	10%	50V
C418	1-137-375-11	MYLAR	0.068uF	5.00%	50V	C651	1-126-794-11	ELECT	4.7uF	20.00%	50V
C419	1-126-794-11	ELECT	4.7uF	20.00%	50V	C653	1-104-665-11	ELECT	100uF	20.00%	10V
C420	1-126-964-11	ELECT	10uF	20.00%	50V	C655	1-102-233-00	CERAMIC	33PF	10.00%	500V
C421	1-126-964-11	ELECT	10uF	20.00%	50V	C657	1-128-809-11	CERAMIC	100PF	5%	50V
C422	1-126-964-11	ELECT	10uF	20.00%	50V	C660	1-104-664-11	ELECT	47uF	20.00%	25V
C433	1-128-809-11	CERAMIC	100PF	5%	50V	C661	1-137-372-11	MYLAR	0.022uF	5.00%	50V
C434	1-128-813-11	CERAMIC	220PF	5%	50V	C670	1-128-813-11	CERAMIC	220PF	5%	50V
C435	1-128-813-11	CERAMIC	220PF	5%	50V	C701	1-126-794-11	ELECT	4.7uF	20.00%	50V
C441	1-164-159-21	CERAMIC	0.1uF		50V	C703	1-104-665-11	ELECT	100uF	20.00%	10V
C442	1-164-159-21	CERAMIC	0.1uF		50V	C704	1-102-936-00	CERAMIC	3.0PF	+0.25PF	50V
C443	1-164-159-21	CERAMIC	0.1uF		50V	(DE245: AEP,UK,CIS,EE/DE345: AEP,CIS,EE)					
C445	1-164-159-21	CERAMIC	0.1uF		50V	C705	1-102-233-00	CERAMIC	33PF	10.00%	500V
C446	1-164-159-21	CERAMIC	0.1uF		50V	C706	1-128-815-21	CERAMIC	330PF	5%	50V
C447	1-164-159-21	CERAMIC	0.1uF		50V	C707	1-128-809-11	CERAMIC	100PF	5%	50V
C451	1-126-964-11	ELECT	10uF	20.00%	50V	C710	1-104-664-11	ELECT	47uF	20.00%	25V
C452	1-126-964-11	ELECT	10uF	20.00%	50V	C711	1-137-372-11	MYLAR	0.022uF	5.00%	50V
C453	1-126-964-11	ELECT	10uF	20.00%	50V	C714	1-127-876-21	CERAMIC	0.01uF	10%	50V
						C720	1-128-813-11	CERAMIC	220PF	5%	50V

Ref. No.	Part No.	Description	Remarks			Ref. No.	Part No.	Description	Remarks																		
C721	1-126-934-11	ELECT	220uF	20.00%	10V	CC06	1-128-809-11	CERAMIC	100PF	5%	50V																
C722	1-126-964-11	ELECT	10uF	20.00%	50V			(DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)																			
C724	1-126-964-11	ELECT	10uF	20.00%	50V			CC07	1-128-809-11	CERAMIC	100PF	5%	50V														
C726	1-127-876-21	CERAMIC	0.01uF	10%	50V					(DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)																	
C734	1-126-964-11	ELECT	10uF	20.00%	50V					CC12	1-164-096-11	CERAMIC	0.01uF		50V												
C736	1-127-876-21	CERAMIC	0.01uF	10%	50V	CC14	1-164-096-11	CERAMIC	0.01uF				50V														
														(DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)													
										(DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)																	
										(DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)																	
										(DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)																	
C740	1-128-582-11	ELECT	10uF	20.00%	100V	CC16	1-164-096-11	CERAMIC	0.01uF		50V																
C741	1-128-582-11	ELECT	10uF	20.00%	100V							(DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)															
C742	1-126-925-11	ELECT	470uF	20.00%	10V							(DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)															
C743	1-126-925-11	ELECT	470uF	20.00%	10V							CC18	1-164-096-11	CERAMIC	0.01uF		50V										
(DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)																											
C751	1-126-794-11	ELECT	4.7uF	20.00%	50V	CC20	1-164-096-11	CERAMIC	0.01uF		50V																
C753	1-104-665-11	ELECT	100uF	20.00%	10V													(DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)									
C755	1-102-233-00	CERAMIC	33PF	10.00%	500V													CC52	1-128-809-11	CERAMIC	100PF	5%	50V				
C757	1-128-809-11	CERAMIC	100PF	5%	50V							(DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)															
C760	1-104-664-11	ELECT	47uF	20.00%	25V							CC53	1-128-809-11	CERAMIC	100PF	5%	50V										
C761	1-137-372-11	MYLAR	0.022uF	5.00%	50V	CC54	1-128-809-11	CERAMIC	100PF	5%	50V																
																		C764	1-128-815-21	CERAMIC	330PF	10%	50V	(DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)			
												C770	1-128-813-11	CERAMIC	220PF	5%	50V	CC55	1-128-809-11	CERAMIC	100PF	5%	50V				
												C801	1-126-947-11	ELECT	47uF	20.00%	35V							(DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)			
												C802	1-126-947-11	ELECT	47uF	20.00%	35V							CC56	1-128-809-11	CERAMIC	100PF
C803	1-128-591-11	ELECT	6800uF	20.00%	56V	CC57	1-128-809-11	CERAMIC	100PF	5%	50V																
												(DE245:EXCEPT E,EA)															
												C803	1-125-897-11	ELECT	10000uF	20.00%	71V	(DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)									
												(DE345:US,CND,E,EA)															
												C803	1-107-766-11	ELECT	8200uF	20.00%	71V	(DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)									
C803	1-117-203-11	ELECT	10000uF	20.00%	63V	CN402	1-691-772-11	PLUG (MICRO CONNECTOR)	10P																		
												(DE345:AUS,SP,MY,MX,AR)															
												(DE245:E,EA)															
												C804	1-128-591-11	ELECT	6800uF	20.00%	56V	CN403	1-569-315-11	SOCKET, CONNECTOR	5P						
												(DE245:EXCEPT E,EA)															
C804	1-125-897-11	ELECT	10000uF	20.00%	71V	(DE345:AEP,AUS,MX,SP,MY,AR,CIS,EE,CH)																					
(DE345:US,CND,E,EA)																											
C804	1-107-766-11	ELECT	8200uF	20.00%	71V	CN404	1-794-003-11	CONNECTOR	15P																		
(DE345:AUS,SP,MY,MX,AR)																											
C804	1-107-766-11	ELECT	8200uF	20.00%	71V							CN404	1-794-005-11	CONNECTOR	19P												
(DE345:AUS,SP,MY,MX,AR)																											
C804	1-117-203-11	ELECT	10000uF	20.00%	63V													CN404	1-794-002-11	CONNECTOR	13P	(DE245:AUS,E,EA,MX,SP,MY)					
(DE245:E,EA)																											
C805	1-130-781-00	MYLAR	0.22uF	5.00%	100V	* CN791	1-564-705-11	PIN, CONNECTOR (SMALL TYPE)	3P																		
C806	1-130-781-00	MYLAR	0.22uF	5.00%	100V	* CN801	1-564-521-11	PLUG, CONNECTOR	6P																		
C807	1-104-664-11	ELECT	47uF	20.00%	25V	* CN802	1-564-214-11	PIN, CONNECTOR (B3PS-VH)	3P																		
												C808	1-104-664-11	ELECT	47uF	20.00%	25V	CNS401	1-569-321-11	SOCKET, CONNECTOR	15P						
												C810	1-126-960-11	ELECT	1uF	20.00%	50V						CNS403	1-569-315-11	SOCKET, CONNECTOR	5P	(DE345)
												C811	1-126-942-61	ELECT	1000uF	20.00%	25V										
												C812	1-126-941-11	ELECT	470uF	20.00%	25V	D301	8-719-070-77	DIODE	SVC201SPA-M1-AC						
C813	1-101-001-00	CERAMIC	0.001uF	50V	D470	8-719-991-33	DIODE	1SS133T-77																			
									C814	1-101-001-00	CERAMIC	0.001uF	50V	D505	8-719-991-33	DIODE	1SS133T-77										
									C815	1-126-967-11	ELECT	47uF	20.00%									50V	D506	8-719-991-33	DIODE	1SS133T-77	
									C816	1-126-951-11	ELECT	470uF	20.00%									35V					D508
									C817	1-104-664-11	ELECT	47uF	20.00%	25V	D510	8-719-991-33	DIODE	1SS133T-77									
C818	1-126-960-11	ELECT	1uF	20.00%	50V	D605	8-719-991-33	DIODE	1SS133T-77																		
										C822	1-126-965-11	ELECT	22uF	20.00%					50V	D606	8-719-991-33	DIODE	1SS133T-77				
										C826	1-104-664-11	ELECT	47uF	20.00%					25V					D607	8-719-991-33	DIODE	1SS133T-77
										C827	1-126-960-11	ELECT	1uF	20.00%					50V								
										C828	1-126-960-11	ELECT	1uF	20.00%	50V	D610	8-719-991-33	DIODE	1SS133T-77								
C829	1-104-664-11	ELECT	47uF	20.00%	25V	D627	8-719-991-33	DIODE	1SS133T-77																		
										CC02	1-128-809-11	CERAMIC	100PF	5%	50V					D706	8-719-991-33	DIODE	1SS133T-77				
																								(DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)			
																								(DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)			
										CC03	1-128-809-11	CERAMIC	100PF	5%	50V	D721	8-719-991-33	DIODE	1SS133T-77								
(DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)																											
CC04	1-128-809-11	CERAMIC	100PF	5%	50V	D722	8-719-991-33	DIODE	1SS133T-77																		
										(DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)																	
										(DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)																	
CC05	1-128-809-11	CERAMIC	100PF	5%	50V	D725	8-719-991-33	DIODE	1SS133T-77																		
(DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)																											
CC05	1-128-809-11	CERAMIC	100PF	5%	50V					D726	8-719-991-33	DIODE	1SS133T-77														
														(DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)													
														(DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)													

MAIN

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
D731	8-719-991-33	DIODE 1SS133T-77				< TRANSISTOR >	
D732	8-719-991-33	DIODE 1SS133T-77					
D734	8-719-991-33	DIODE 1SS133T-77		Q361	8-729-823-22	TRANSISTOR 2SC3576-AC	
D735	8-719-991-33	DIODE 1SS133T-77		Q362	8-729-823-22	TRANSISTOR 2SC3576-AC	
D736	8-719-991-33	DIODE 1SS133T-77		Q363	8-729-823-22	TRANSISTOR 2SC3576-AC	
				Q364	8-729-823-22	TRANSISTOR 2SC3576-AC	
				Q365	8-729-823-22	TRANSISTOR 2SC3576-AC	
D757	8-719-991-33	DIODE 1SS133T-77					
D791	8-719-991-33	DIODE 1SS133T-77					
D801	8-719-934-13	DIODE HZS24-1LTD		Q366	8-729-823-22	TRANSISTOR 2SC3576-AC	
D802	8-719-072-05	DIODE RBV-602LF-A		Q470	8-729-119-78	TRANSISTOR 2SC2785TP-HFE	
D804	8-719-109-85	DIODE MTZJ-T-77-5.1B		Q501	8-729-119-76	TRANSISTOR 2SA1115TP-EF	
				Q502	8-729-141-30	TRANSISTOR 2SC3623ATP-LK	
				Q503	8-749-010-25	IC MN2488-OPY-M	
D820	8-719-200-82	DIODE 11ES2-NTA1B					
D821	8-719-200-82	DIODE 11ES2-NTA1B					
D822	8-719-200-82	DIODE 11ES2-NTA1B		Q504	8-749-010-26	IC MP1620-OPY-M	
D823	8-719-200-82	DIODE 11ES2-NTA1B		Q505	8-729-140-82	TRANSISTOR 2SA988TP-PAFAEA	
D824	8-719-200-82	DIODE 11ES2-NTA1B		Q506	8-729-140-82	TRANSISTOR 2SA988TP-PAFAEA	
				Q507	8-729-900-63	TRANSISTOR BN1F4M-TP	
D825	8-719-200-82	DIODE 11ES2-NTA1B		Q509	8-729-281-53	TRANSISTOR 2SC1815GR-TPE2	
		< EARTH >		Q550	8-729-119-78	TRANSISTOR 2SC2785TP-HFE	
* G401	1-537-738-21	TERMINAL, EARTH		Q601	8-729-119-76	TRANSISTOR 2SA1115TP-EF	
* G441	1-537-738-21	TERMINAL, EARTH		Q602	8-729-141-30	TRANSISTOR 2SC3623ATP-LK	
* G442	1-537-738-21	TERMINAL, EARTH		Q603	8-749-010-25	IC MN2488-OPY-M	
		< IC >		Q604	8-749-010-26	IC MP1620-OPY-M	
IC1	8-759-541-48	IC BU1924 (DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)		Q605	8-729-140-82	TRANSISTOR 2SA988TP-PAFAEA	
IC201	8-759-655-38	IC M61501FP		Q606	8-729-140-82	TRANSISTOR 2SA988TP-PAFAEA	
IC202	8-759-655-37	IC LV1050M		Q610	8-729-119-78	TRANSISTOR 2SC2785TP-HFE	
IC401	8-759-636-74	IC M5218AP-22		Q651	8-729-119-76	TRANSISTOR 2SA1115TP-EF	
IC501	8-749-011-16	IC STK350-230		Q652	8-729-141-30	TRANSISTOR 2SC3623ATP-LK	
IC701	8-759-326-52	IC uPC2581V		Q653	8-749-010-25	IC MN2488-OPY-M	
IC702	8-759-326-52	IC uPC2581V		Q654	8-749-010-26	IC MP1620-OPY-M	
IC801	8-759-376-91	IC uPC78M12AHF		Q655	8-729-140-82	TRANSISTOR 2SA988TP-PAFAEA	
IC802	8-759-604-95	IC M5F79M07L		Q656	8-729-140-82	TRANSISTOR 2SA988TP-PAFAEA	
IC803	8-759-039-69	IC uPC7805AHF		Q657	8-729-900-63	TRANSISTOR BN1F4M-TP	
IC804	8-759-039-69	IC uPC7805AHF		Q658	8-729-281-53	TRANSISTOR 2SC1815GR-TPE2	
IC805	8-759-701-59	IC M5F78M09L		Q659	8-729-900-63	TRANSISTOR BN1F4M-TP	
IC807	8-759-605-00	IC M5F78M07L		Q701	8-729-119-76	TRANSISTOR 2SA1115TP-EF	
		< JACK >		Q702	8-729-141-30	TRANSISTOR 2SC3623ATP-LK	
J401	1-774-411-11	JACK, PIN 6P (MD/TAPE)		Q703	8-749-010-25	IC MN2488-OPY-M	
J402	1-770-015-11	JACK, PIN 6P (VIDEO)		Q704	8-749-010-26	IC MP1620-OPY-M	
J403	1-774-785-11	JACK, PIN 1P (SUB WOOFER)		Q705	8-729-140-82	TRANSISTOR 2SA988TP-PAFAEA	
J501	1-779-599-11	JACK, PIN 6P (5.1CH/DVD)		Q706	8-729-140-82	TRANSISTOR 2SA988TP-PAFAEA	
		< COIL >		Q707	8-729-900-63	TRANSISTOR BN1F4M-TP	
L1	1-410-521-11	INDUCTOR 100uH (DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)		Q708	8-729-900-63	TRANSISTOR BN1F4M-TP	

Ref. No.	Part No.	Description	Remarks	Ref. No.	Part No.	Description	Remarks
Q791	8-729-119-78	TRANSISTOR 2SC2785TP-HFE		R454	1-249-417-11	CARBON 1K 5%	1/4W F
Q801	8-729-140-97	TRANSISTOR 2SB734-T-34		R455	1-249-417-11	CARBON 1K 5%	1/4W F
< RESISTOR >				R456	1-249-417-11	CARBON 1K 5%	1/4W F
R5	1-249-421-11	CARBON 2.2K 5%	1/4W F	R457	1-249-417-11	CARBON 1K 5%	1/4W F
		(DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)		R458	1-249-429-11	CARBON 10K 5%	1/4W
R6	1-247-807-31	CARBON 100 5%	1/4W	R459	1-249-417-11	CARBON 1K 5%	1/4W F
		(DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)		R460	1-249-417-11	CARBON 1K 5%	1/4W F
R7	1-247-807-31	CARBON 100 5%	1/4W	R461	1-249-417-11	CARBON 1K 5%	1/4W F
		(DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)		R462	1-249-417-11	CARBON 1K 5%	1/4W F
R301	1-249-439-11	CARBON 68K 5%	1/4W	R463	1-249-437-11	CARBON 47K 5%	1/4W
R302	1-249-436-11	CARBON 39K 5%	1/4W	R464	1-249-437-11	CARBON 47K 5%	1/4W
R306	1-249-441-11	CARBON 100K 5%	1/4W	R465	1-249-437-11	CARBON 47K 5%	1/4W
R307	1-249-441-11	CARBON 100K 5%	1/4W	R466	1-249-437-11	CARBON 47K 5%	1/4W
R308	1-249-436-11	CARBON 39K 5%	1/4W	R467	1-249-437-11	CARBON 47K 5%	1/4W
R309	1-249-441-11	CARBON 100K 5%	1/4W	R468	1-249-437-11	CARBON 47K 5%	1/4W
R310	1-249-441-11	CARBON 100K 5%	1/4W	R469	1-249-417-11	CARBON 1K 5%	1/4W F
R330	1-249-441-11	CARBON 100K 5%	1/4W	R470	1-249-441-11	CARBON 100K 5%	1/4W
R331	1-249-441-11	CARBON 100K 5%	1/4W	R471	1-249-425-11	CARBON 4.7K 5%	1/4W F
R360	1-249-441-11	CARBON 100K 5%	1/4W	R472	1-249-431-11	CARBON 15K 5%	1/4W
R361	1-249-425-11	CARBON 4.7K 5%	1/4W F	△ R473	1-249-401-11	CARBON 47 5%	1/4W F
R362	1-249-425-11	CARBON 4.7K 5%	1/4W F	R475	1-249-425-11	CARBON 4.7K 5%	1/4W F
R363	1-249-441-11	CARBON 100K 5%	1/4W	R476	1-249-425-11	CARBON 4.7K 5%	1/4W F
R364	1-249-441-11	CARBON 100K 5%	1/4W	R501	1-249-417-11	CARBON 1K 5%	1/4W F
R365	1-249-441-11	CARBON 100K 5%	1/4W	R502	1-249-439-11	CARBON 68K 5%	1/4W
R366	1-249-425-11	CARBON 4.7K 5%	1/4W F	R503	1-249-412-11	CARBON 390 5%	1/4W F
R367	1-249-441-11	CARBON 100K 5%	1/4W		(DE345:US,CND,E,EA,PA,AUS,MX,SP,MY,AR,CH)		
R368	1-249-441-11	CARBON 100K 5%	1/4W	R503	1-249-415-11	CARBON 680 5%	1/4W F
R369	1-249-425-11	CARBON 4.7K 5%	1/4W F		(DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)		
R370	1-249-425-11	CARBON 4.7K 5%	1/4W F	R503	1-249-414-11	CARBON 560 5%	1/4W F
R371	1-249-441-11	CARBON 100K 5%	1/4W		(DE245:AUS,E,EA,MX,SP,MY)		
R372	1-249-441-11	CARBON 100K 5%	1/4W	R504	1-249-411-11	CARBON 330 5%	1/4W
R373	1-249-417-11	CARBON 1K 5%	1/4W F	R505	1-249-439-11	CARBON 68K 5%	1/4W
R374	1-249-417-11	CARBON 1K 5%	1/4W F	R507	1-247-863-91	CARBON 22K 5%	1/4W
R375	1-249-417-11	CARBON 1K 5%	1/4W F	R510	1-247-877-11	CARBON 82K 5%	1/4W F
R376	1-249-417-11	CARBON 1K 5%	1/4W F	R511	1-249-437-11	CARBON 47K 5%	1/4W
R377	1-249-417-11	CARBON 1K 5%	1/4W F	R513	1-249-414-11	CARBON 560 5%	1/4W F
R378	1-249-417-11	CARBON 1K 5%	1/4W F	△ R514	1-249-408-11	CARBON 180 5%	1/4W F
R379	1-249-425-11	CARBON 4.7K 5%	1/4W F	△ R515	1-249-408-11	CARBON 180 5%	1/4W F
R380	1-249-441-11	CARBON 100K 5%	1/4W	△ R516	1-234-182-11	ENCAPSULATED COMPONENT	
R402	1-249-417-11	CARBON 1K 5%	1/4W F	△ R517	1-249-393-11	CARBON 10 5%	1/4W F
R403	1-249-417-11	CARBON 1K 5%	1/4W F	R520	1-249-425-11	CARBON 4.7K 5%	1/4W F
R404	1-249-417-11	CARBON 1K 5%	1/4W F	R521	1-247-850-91	CARBON 6.2 5%	1/4W F
R405	1-249-417-11	CARBON 1K 5%	1/4W F	R522	1-249-419-11	CARBON 1.5K 5%	1/4W F
R406	1-249-417-11	CARBON 1K 5%	1/4W F	R528	1-249-389-11	CARBON 4.7 5%	1/4W F
R407	1-249-417-11	CARBON 1K 5%	1/4W F	R529	1-247-863-91	CARBON 22K 5%	1/4W
R408	1-249-429-11	CARBON 10K 5%	1/4W		(DE245)		
R409	1-249-417-11	CARBON 1K 5%	1/4W F	R529	1-247-864-91	CARBON 24K 5%	1/4W
R410	1-249-417-11	CARBON 1K 5%	1/4W F		(DE345:CIS,EE)		
R435	1-249-418-11	CARBON 1.2K 5%	1/4W F	R529	1-247-866-91	CARBON 30K 5%	1/4W
R442	1-249-418-11	CARBON 1.2K 5%	1/4W F		(EXCEPT DE345:CIS,EE)		
R443	1-249-418-11	CARBON 1.2K 5%	1/4W F	R530	1-249-425-11	CARBON 4.7K 5%	1/4W F
R447	1-249-436-11	CARBON 39K 5%	1/4W	R531	1-249-425-11	CARBON 4.7K 5%	1/4W F
R448	1-249-436-11	CARBON 39K 5%	1/4W	R535	1-249-431-11	CARBON 15K 5%	1/4W
R449	1-247-863-91	CARBON 22K 5%	1/4W	R537	1-249-401-11	CARBON 47 5%	1/4W F
R452	1-249-417-11	CARBON 1K 5%	1/4W F	R539	1-249-421-11	CARBON 2.2K 5%	1/4W F
R453	1-249-417-11	CARBON 1K 5%	1/4W F	R540	1-247-881-00	CARBON 120K 5%	1/4W
				R541	1-249-431-11	CARBON 15K 5%	1/4W
				R573	1-249-437-11	CARBON 47K 5%	1/4W

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

以阴影和 △ 标志来识别的零部件，在安全方面具有关键性。因此只能以规定号码的零部件来更换。

Ref. No.	Part No.	Description	Remarks
R601	1-249-417-11	CARBON 1K 5%	1/4W F
R602	1-249-439-11	CARBON 68K 5%	1/4W
R603	1-249-417-11	CARBON 1K 5%	1/4W F
R603	1-249-421-11	CARBON 2.2K 5%	1/4W F (DE345:US,CND,E,EA,PX,AUS,MX,SP,MY,AR,CH) (DE245:AEP,UK,CIS,EE)
R603	1-249-419-11	CARBON 1.5K 5%	1/4W F (DE245:US,CND,AUS,E,EA,MX,SP,MY/DE345:AEP,CIS,EE)
R604	1-249-439-11	CARBON 68K 5%	1/4W
R610	1-249-421-11	CARBON 2.2K 5%	1/4W F
R611	1-249-440-11	CARBON 82K 5%	1/4W
R613	1-249-414-11	CARBON 560 5%	1/4W F
△ R614	1-249-408-11	CARBON 180 5%	1/4W F
△ R615	1-249-408-11	CARBON 180 5%	1/4W F
△ R616	1-234-182-11	ENCAPSULATED COMPONENT	
R617	1-249-393-11	CARBON 10 5%	1/4W F
△ R618	1-249-389-11	CARBON 4.7 5%	1/4W F
R620	1-249-425-11	CARBON 4.7K 5%	1/4W F
R621	1-247-850-11	CARBON 6.2K 5%	1/4W
R622	1-249-419-11	CARBON 1.5K 5%	1/4W F
R623	1-249-437-11	CARBON 47K 5%	1/4W
R625	1-247-881-00	CARBON 120K 5%	1/4W
R626	1-249-431-11	CARBON 15K 5%	1/4W
R630	1-249-425-11	CARBON 4.7K 5%	1/4W F
R631	1-249-425-11	CARBON 4.7K 5%	1/4W F
R638	1-247-881-00	CARBON 120K 5%	1/4W
△ R648	1-249-401-11	CARBON 47 5%	1/4W F
R651	1-249-417-11	CARBON 1K 5%	1/4W F
R652	1-249-439-11	CARBON 68K 5%	1/4W
R653	1-249-412-11	CARBON 390 5%	1/4W F (DE345:US,CND,E,EA,PX,AUS,MX,SP,MY,AR,CH)
R653	1-249-415-11	CARBON 680 5%	1/4W F (DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)
R653	1-249-414-11	CARBON 560 5%	1/4W F (DE245:AUS,E,EA,MX,SP,MY)
R654	1-249-439-11	CARBON 68K 5%	1/4W
R660	1-249-421-11	CARBON 2.2K 5%	1/4W F
R661	1-249-440-11	CARBON 82K 5%	1/4W
R663	1-249-414-11	CARBON 560 5%	1/4W F
△ R664	1-249-408-11	CARBON 180 5%	1/4W F
△ R665	1-249-408-11	CARBON 180 5%	1/4W F
△ R666	1-234-182-11	ENCAPSULATED COMPONENT	
△ R667	1-249-393-11	CARBON 10 5%	1/4W F
△ R668	1-249-389-11	CARBON 4.7 5%	1/4W F
R670	1-249-425-11	CARBON 4.7K 5%	1/4W F
R671	1-247-850-11	CARBON 6.2K 5%	1/4W
R672	1-249-419-11	CARBON 1.5K 5%	1/4W F
R674	1-247-863-91	CARBON 22K 5%	1/4W (DE245)
R674	1-247-864-91	CARBON 24K 5%	1/4W (DE345:CIS,EE)
R674	1-247-866-91	CARBON 30K 5%	1/4W (EXCEPT DE345:CIS,EE)
R675	1-249-421-11	CARBON 2.2K 5%	1/4W F
R676	1-249-431-11	CARBON 15K 5%	1/4W

Ref. No.	Part No.	Description	Remarks
R677	1-247-863-91	CARBON 22K 5%	1/4W
R678	1-247-863-91	CARBON 22K 5%	1/4W
R683	1-249-437-11	CARBON 47K 5%	1/4W
R684	1-249-431-11	CARBON 15K 5%	1/4W
R701	1-249-417-11	CARBON 1K 5%	1/4W F
R702	1-249-439-11	CARBON 68K 5%	1/4W
R703	1-249-414-11	CARBON 560 5%	1/4W F (DE345:AEP,CIS,EE)
R703	1-249-417-11	CARBON 1K 5%	1/4W F (DE345:US,CND,E,EA,PX,AUS,MX,SP,MY,AR,CH)
R703	1-249-421-11	CARBON 2.2K 5%	1/4W F (DE245:AEP,UK,CIS,EE)
R703	1-249-419-11	CARBON 1.5K 5%	1/4W F (DE245:AUS,E,EA,MX,SP,MY)
R704	1-249-439-11	CARBON 68K 5%	1/4W
R705	1-247-863-91	CARBON 22K 5%	1/4W
R706	1-216-453-00	METAL OXIDE 270 5%	2W
R707	1-215-883-11	METAL OXIDE 33 5%	2W (DE345:CND,E,EA,PX)
R707	1-215-885-00	METAL OXIDE 68 5%	2W (DE345:AEP,CIS,EE)
R707	1-215-880-00	METAL OXIDE 10 5%	2W (DE345:US)
R707	1-216-452-11	METAL OXIDE 180 5%	2W (DE245:AEP,UK,AUS,E,EA,MX,CIS,EE,SP,MY/DE345:AUS,MX,SP,MY,AR,CH)
R710	1-249-421-11	CARBON 2.2K 5%	1/4W F
R711	1-249-440-11	CARBON 82K 5%	1/4W
R713	1-249-414-11	CARBON 560 5%	1/4W F
△ R714	1-249-409-11	CARBON 220 5%	1/4W F
△ R715	1-249-409-11	CARBON 220 5%	1/4W F
△ R716	1-234-182-11	ENCAPSULATED COMPONENT	
△ R717	1-249-393-11	CARBON 10 5%	1/4W F
△ R718	1-249-389-11	CARBON 4.7 5%	1/4W F
R719	1-249-425-11	CARBON 4.7K 5%	1/4W F
R721	1-247-850-11	CARBON 6.2K 5%	1/4W
R722	1-249-419-11	CARBON 1.5K 5%	1/4W F
R723	1-249-437-11	CARBON 47K 5%	1/4W
R724	1-247-881-00	CARBON 120K 5%	1/4W
R727	1-247-863-91	CARBON 22K 5%	1/4W
△ R728	1-249-401-11	CARBON 47 5%	1/4W F
R730	1-249-425-11	CARBON 4.7K 5%	1/4W F
R731	1-249-425-11	CARBON 4.7K 5%	1/4W F
△ R732	1-249-381-11	CARBON 1 5%	1/4W F
△ R733	1-249-381-11	CARBON 1 5%	1/4W F
R735	1-249-427-11	CARBON 6.8K 5%	1/4W F
R736	1-249-417-11	CARBON 1K 5%	1/4W F
R737	1-247-869-91	CARBON 39K 5%	1/4W F
R738	1-247-881-00	CARBON 120K 5%	1/4W
R739	1-249-431-11	CARBON 15K 5%	1/4W
R740	1-247-863-91	CARBON 22K 5%	1/4W (DE245)
R740	1-247-864-91	CARBON 24K 5%	1/4W (DE345:CIS,EE)
R740	1-247-866-91	CARBON 30K 5%	1/4W (EXCEPT DE345:CIS,EE)
R741	1-216-455-11	METAL OXIDE 560 5%	2W (DE345:AEP,CIS,EE)
R741	1-215-868-00	METAL OXIDE 680 5%	1W (DE345:US,CND,E,EA,PX,AUS,MX,SP,MY,AR,CH)

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

以阴影和 △标志来识别的零部件，在安全方面具有关键性。因此只能以规定号码的零部件来更换。

MAIN

POWER SWITCH

PRIMARY

SECONDARY

Ref. No.	Part No.	Description	Remarks
R741	1-216-454-11	METAL OXIDE 390 5% 2W (DE245:AEP,UK,CIS,EE)	
R741	1-215-867-00	METAL OXIDE 470 5% 1W (DE245:AUS,E,EA,MX,SP,MY)	
R743	1-249-425-11	CARBON 4.7K 5% 1/4W F	
R744	1-249-431-11	CARBON 15K 5% 1/4W	
R745	1-249-421-11	CARBON 2.2K 5% 1/4W F	
R746	1-247-863-91	CARBON 22K 5% 1/4W	
R747	1-249-425-11	CARBON 4.7K 5% 1/4W F	
R751	1-249-417-11	CARBON 1K 5% 1/4W F	
R752	1-249-439-11	CARBON 68K 5% 1/4W	
R753	1-249-412-11	CARBON 390 5% 1/4W F (DE345:US,CND,E,EA,PX,AUS,MX,SP,MY,AR,CH)	
R753	1-249-415-11	CARBON 680 5% 1/4W F (DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)	
R753	1-249-414-11	CARBON 560 5% 1/4W F (DE245:AUS,E,EA,MX,SP,MY)	
R754	1-249-439-11	CARBON 68K 5% 1/4W	
R760	1-249-421-11	CARBON 2.2K 5% 1/4W F	
R761	1-249-440-11	CARBON 82K 5% 1/4W	
R763	1-249-414-11	CARBON 560 5% 1/4W F	
△ R764	1-249-409-11	CARBON 220 5% 1/4W F	
△ R765	1-249-409-11	CARBON 220 5% 1/4W F	
△ R766	1-234-182-11	ENCAPSULATED COMPONENT	
△ R767	1-249-393-11	CARBON 10 5% 1/4W F	
△ R768	1-249-389-11	CARBON 4.7 5% 1/4W F	
R770	1-249-425-11	CARBON 4.7K 5% 1/4W F	
R771	1-247-850-11	CARBON 6.2K 5% 1/4W	
R772	1-249-419-11	CARBON 1.5K 5% 1/4W F	
R775	1-249-421-11	CARBON 2.2K 5% 1/4W F	
R776	1-249-431-11	CARBON 15K 5% 1/4W	
R777	1-247-864-91	CARBON 24K 5% 1/4W (DE345:CIS,EE)	
R777	1-247-866-91	CARBON 30K 5% 1/4W (EXCEPT DE345:CIS,EE)	
R778	1-249-431-11	CARBON 15K 5% 1/4W	
R779	1-249-437-11	CARBON 47K 5% 1/4W	
R791	1-216-455-11	METAL OXIDE 560 5% 2W (DE345:AEP,CIS,EE)	
R791	1-215-868-00	METAL OXIDE 680 5% 1W (DE345:US,CND,E,EA,PX,AUS,MX,SP,MY,AR,CH)	
R791	1-216-454-11	METAL OXIDE 390 5% 2W (DE245:AEP,UK,CIS,EE)	
R791	1-215-867-00	METAL OXIDE 470 5% 1W (DE245:AUS,E,EA,MX,SP,MY)	
R793	1-249-425-11	CARBON 4.7K 5% 1/4W F	
△ R795	1-249-401-11	CARBON 47 5% 1/4W F	
△ R803	1-249-386-11	CARBON 2.7 5% 1/6W F	
R804	1-249-426-11	CARBON 5.6K 5% 1/4W	
RR02	1-249-437-11	CARBON 47K 5% 1/4W	
RR04	1-249-437-11	CARBON 47K 5% 1/4W	
RR05	1-249-437-11	CARBON 47K 5% 1/4W	
RR07	1-249-437-11	CARBON 47K 5% 1/4W	

Ref. No.	Part No.	Description	Remarks
△ RR11	1-249-393-11	CARBON 10 5% 1/4W F (DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)	
△ RR12	1-249-393-11	CARBON 10 5% 1/4W F (DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)	
△ RR13	1-249-393-11	CARBON 10 5% 1/4W F (DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)	
△ RR14	1-249-393-11	CARBON 10 5% 1/4W F (DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)	
△ RR15	1-249-393-11	CARBON 10 5% 1/4W F (DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)	
RR52	1-249-437-11	CARBON 47K 5% 1/4W	
RR54	1-249-437-11	CARBON 47K 5% 1/4W	
RR55	1-249-437-11	CARBON 47K 5% 1/4W	
RR57	1-249-437-11	CARBON 47K 5% 1/4W	
< RELAY >			
RY470	1-755-267-11	RELAY	
RY510	1-755-170-11	RELAY (12V)	
RY610	1-755-170-11	RELAY (12V)	
RY710	1-755-170-11	RELAY (12V)	
RY791	1-515-614-11	RELAY	
< TERMINAL >			
TM601	1-537-510-11	TERMINAL BOARD (SPEAKER) (6P)	
TM602	1-537-925-31	TERMINAL BOARD	
< VIBRATOR >			
X1	1-579-900-21	VIBRATOR, CRYSTAL 4.33MHz (DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)	

	1-676-802-11	POWER SWITCH BOARD	

< CONNECTOR >			
CNP202	1-573-105-11	CONNECTOR, PC BOARD 4P	
< SWITCH >			
S200	1-771-410-21	SWITCH, TACTILE (POWER)	
S201	1-771-854-11	SWITCH, PUSH (1 KEY)(SPEAKER)	

PRIMARY BOARD			

(EXCEPT DE245:E,EA/DE345:E,EA,PX)			
< CONNECTOR >			
* CNP902	1-564-321-21	PIN, CONNECTOR 2P	

	1-676-800-11	SECONDARY BOARD	

< RF MODULATOR >			
△ RF801	1-243-833-81	FUSIBLE 0.15 5% 1/2W	
△ RF802	1-243-833-81	FUSIBLE 0.15 5% 1/2W	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

以阴影和 △ 标志来识别的零部件，在安全方面具有关键性。因此只能以规定号码的零部件来更换。

Ref. No.	Part No.	Description	Remarks
	A-4428-270-A	STANDBY BOARD, COMPLETE (DE345:US,CND,MX)	
	A-4428-279-A	STANDBY BOARD, COMPLETE (DE245:MX)	
	A-4428-388-A	STANDBY BOARD, COMPLETE (DE345:AUS)	
	A-4428-391-A	STANDBY BOARD, COMPLETE (DE345:SP,MY,AR)	
	A-4428-392-A	STANDBY BOARD, COMPLETE (DE345:CH)	
	A-4428-395-A	STANDBY BOARD, COMPLETE (DE345:E,EA,PX)	
	A-4428-402-A	STANDBY BOARD, COMPLETE (DE245:AUS)	
	A-4428-405-A	STANDBY BOARD, COMPLETE (DE245:SP,MY)	
	A-4428-407-A	STANDBY BOARD, COMPLETE (DE245:E,EA)	
	A-4428-411-A	STANDBY BOARD, COMPLETE (DE245:AEP,UK,CIS,EE)	
	A-4428-416-A	STANDBY BOARD, COMPLETE (DE345:AEP,CIS,EE)	
	1-533-293-31	FUSE HOLDER < CAPACITOR >	
△ C920	1-161-494-00	CERAMIC 0.022uF 25V	
△ C921	1-161-494-00	CERAMIC 0.022uF 25V	
C950	1-126-767-11	ELECT 1000uF 20.00% 16V	
C951	1-161-494-00	CERAMIC 0.022uF 25V	
C952	1-126-960-11	ELECT 1uF 20.00% 50V	
C953	1-124-464-11	ELECT 0.22uF 20% 50V	
C954	1-126-964-11	ELECT 10uF 20.00% 50V	
C955	1-164-159-21	CERAMIC 0.1uF 50V	
C957	1-164-159-21	CERAMIC 0.1uF 50V	
C958	1-164-159-21	CERAMIC 0.1uF 50V	
		< CONNECTOR >	
CN901	1-691-766-11	PLUG (MICRO CONNECTOR) 4P	
CNP901	1-564-321-00	PIN, CONNECTOR 2P	
CNP906	1-568-106-11	PIN, CONNECTOR 4P (DE245:E,EA/DE345:E,EA,PX)	
		< DIODE >	
D901	8-719-991-33	DIODE 1SS133T-77	
D910	8-719-200-82	DIODE 11ES2-NTA1B	
D911	8-719-200-82	DIODE 11ES2-NTA1B	
D912	8-719-200-82	DIODE 11ES2-NTA1B	
D913	8-719-200-82	DIODE 11ES2-NTA1B	
D914	8-719-991-33	DIODE 1SS133T-77	
D915	8-719-991-33	DIODE 1SS133T-77	
		< FUSE >	
△ F901	1-532-285-00	FUSE (1.25A) (AEP,UK,AUS,CIS,EE,SP,MY,CH)	
△ F901	1-532-388-51	FUSE (2A) (E,EA)	
△ F901	1-532-748-11	FUSE (6.3A) (US,CND)	

Ref. No.	Part No.	Description	Remarks
		< EARTH >	
* G901	1-537-738-21	TERMINAL, EARTH	
		< IC >	
IC950	8-759-333-83	IC NJM2103D	
		< TRANSISTOR >	
Q901	8-729-119-78	TRANSISTOR 2SC2785TP-HFE	
Q951	8-729-045-21	TRANSISTOR 2SD1513TP-LK	
		< RESISTOR >	
△ R901	1-202-725-00	SOLID 3.3M 10% 1/2W	
R902	1-249-437-11	CARBON 47K 5% 1/4W	
R903	1-249-425-11	CARBON 4.7K 5% 1/4W	F
R950	1-249-421-11	CARBON 2.2K 5% 1/4W	F
R951	1-249-428-11	CARBON 8.2K 5% 1/4W	F
R952	1-249-422-11	CARBON 2.7K 5% 1/4W	F
R953	1-247-863-91	CARBON 22K 5% 1/4W	
R954	1-249-437-11	CARBON 47K 5% 1/4W	
R955	1-249-429-11	CARBON 10K 5% 1/4W	
R956	1-247-843-11	CARBON 3.3K 5% 1/4W	
R957	1-249-417-11	CARBON 1K 5% 1/4W	F
R960	1-249-431-11	CARBON 15K 5% 1/4W	
		< RELAY >	
RY901	1-755-276-11	RELAY, POWER	
		< TRANSFORMER >	
△ T902	1-435-281-11	TRANSFORMER, POWER (DE245:MX/DE345:US,CND,MX)	
△ T902	1-435-282-11	TRANSFORMER, POWER (DE245:AEP,UK,AUS,CIS,EE,SP,MY/DE345:AEP,AUS,SP,MY,AR,CIS,EE,CH)	
△ T902	1-435-283-11	TRANSFORMER, POWER (DE245:E,EA/DE345:E,EA,PX)	

	1-676-803-11	TUNING BOARD *****	
		< CONNECTOR >	
CNP201	1-573-105-11	CONNECTOR, PC BOARD 4P	
		< DIODE >	
D216	8-719-046-39	DIODE SEL5821A-TP15 (MUTING)	
		< RESISTOR >	
R223	1-247-817-91	CARBON 270 5% 1/4W	F
R254	1-247-843-11	CARBON 3.3K 5% 1/4W	
R255	1-249-425-11	CARBON 4.7K 5% 1/4W	F
R256	1-249-411-11	CARBON 330 5% 1/4W	
R257	1-249-413-11	CARBON 470 5% 1/4W	F

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

以阴影和 △ 标志来识别的零部件，在安全方面具有关键性。因此只能以规定号码的零部件来更换。

Ref. No.	Part No.	Description	Remarks		
R258	1-249-415-11	CARBON	680	5%	1/4W F
R259	1-249-417-11	CARBON	1K	5%	1/4W F
R260	1-249-419-11	CARBON	1.5K	5%	1/4W F
R261	1-249-421-11	CARBON	2.2K	5%	1/4W F
R262	1-247-843-11	CARBON	3.3K	5%	1/4W
(DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)					
R263	1-249-425-11	CARBON	4.7K	5%	1/4W F
(DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)					
< SWITCH >					
S226	1-771-410-21	SWITCH, TACTILE (PRESET -)			
S227	1-771-410-21	SWITCH, TACTILE (TUNING -)			
S228	1-771-410-21	SWITCH, TACTILE (FM/AM)			
S229	1-771-410-21	SWITCH, TACTILE (SHIFT)			
S230	1-771-410-21	SWITCH, TACTILE (B.BOOST)			
S231	1-771-410-21	SWITCH, TACTILE (MUTING)			
S232	1-771-410-21	SWITCH, TACTILE (FM MODE)			
S233	1-771-410-21	SWITCH, TACTILE (PRESET +)			
S234	1-771-410-21	SWITCH, TACTILE (TUNING +)			
S235	1-771-410-21	SWITCH, TACTILE (MEMORY)			
S236	1-771-410-21	SWITCH, TACTILE (EON)			
(DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)					
S237	1-771-410-21	SWITCH, TACTILE (PTY)			
(DE245:AEP,UK,CIS,EE/DE345:AEP,CIS,EE)					

	1-676-806-11	VIDEO BOARD (DE345)			

< CAPACITOR >					
C291	1-126-960-11	ELECT	1uF	20.00%	50V
C292	1-126-960-11	ELECT	1uF	20.00%	50V
C293	1-126-960-11	ELECT	1uF	20.00%	50V
C294	1-162-215-31	CERAMIC	47PF	5%	50V
C295	1-162-215-31	CERAMIC	47PF	5%	50V
C296	1-164-159-21	CERAMIC	0.1uF		50V
C297	1-104-664-11	ELECT	47uF	20.00%	25V
C298	1-164-159-21	CERAMIC	0.1uF		50V
C299	1-126-924-11	ELECT	330uF	20.00%	10V
< CONNECTOR >					
CNS281	1-569-315-11	SOCKET, CONNECTOR 5P			
< IC >					
IC281	8-759-333-84	IC NJM2279D			
< JACK >					
J281	1-695-317-11	JACK, PIN 2P (5.1CH/DVD)			
J282	1-766-199-11	JACK, PIN 3P (VIDEO)			
< RESISTOR >					
R291	1-247-804-11	CARBON	75	5%	1/4W
R292	1-247-804-11	CARBON	75	5%	1/4W
R293	1-247-804-11	CARBON	75	5%	1/4W
R294	1-247-804-11	CARBON	75	5%	1/4W
R295	1-247-804-11	CARBON	75	5%	1/4W

Ref. No.	Part No.	Description	Remarks		
△ R296	1-249-402-11	CARBON	56	5%	1/4W F
△ R297	1-249-402-11	CARBON	56	5%	1/4W F

	1-676-805-11	VOL-SEL BOARD (DE245:E,EA/DE345:E,EA,PX)			

	1-533-293-31	FUSE HOLDER			
		< CONNECTOR >			
* CNP908	1-564-687-11	PIN, CONNECTOR 3P			
		< SWITCH >			
△ S901	1-571-437-21	SWITCH, POWER VOLTAGE CHANGE(VOLTAGE)			

		MISCELLANEOUS			

58	1-773-001-11	WIRE(FLAT TYPE) (15 CORE)			
59	1-769-850-11	WIRE(FLAT TYPE) (5 CORE)(DE345)			
61	1-693-407-41	TUNER			
△ 67	1-696-847-11	CORD, POWER (AUS)			
△ 67	1-777-071-21	CORD, POWER (AEP,UK,E,CIS,EE,SP,MY,PX)			
△ 67	1-783-205-11	CORD, POWER (CH)			
△ 67	1-783-820-11	CORD, POWER (US,CND,MX)			
68	1-569-008-21	ADAPTOR, CONVERSION 2P (E,EA,PX)			
△ T901	1-435-267-11	TRANSFORMER, POWER (DE245:AUS)			
△ T901	1-435-268-11	TRANSFORMER, POWER (DE245:SP,MY)			
△ T901	1-435-269-11	TRANSFORMER, POWER (DE245:E,EA)			
△ T901	1-435-270-11	TRANSFORMER, POWER			
		(DE245:AEP,UK,CIS,EE)			
△ T901	1-435-564-11	TRANSFORMER, POWER (DE245:MX)			
△ T901	1-435-271-11	TRANSFORMER, POWER (DE345:US)			
△ T901	1-435-272-11	TRANSFORMER, POWER (DE345:CND)			
△ T901	1-435-273-11	TRANSFORMER, POWER (DE345:AUS)			
△ T901	1-435-274-11	TRANSFORMER, POWER (DE345:SP,MY,AR,CH)			
△ T901	1-435-275-11	TRANSFORMER, POWER (DE345:E,EA,PX)			
△ T901	1-435-276-11	TRANSFORMER, POWER (DE345:AEP,CIS,EE)			
△ T901	1-435-565-11	TRANSFORMER, POWER (DE345:MX)			

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Les composants identifiés par une marque △ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

以阴影和 △ 标志来识别的零部件，在安全方面具有关键性。因此只能以规定号码的零部件来更换。

Ref. No.	Part No.	Description	Remarks
		ACCESSORIES & PACKING MATERIALS	

	1-418-833-11	REMOTE COMMANDER (DE245)	
	1-501-594-11	ANTENNA (FM)	
	1-501-721-11	ANTENNA (LOOP)	
	1-793-184-21	CONNECTOR (F TYPE ADAPTOR)	
		(DE245:E,EA,MX/DE345:US,CND,E,EA,PX,MX,AR)	
	4-227-866-11	MANUAL, INSTRUCTION (ENGLISH)	
		(DE345:US,CND,E,EA,PX,AUS,SP,MY,CH)	
	4-227-866-21	MANUAL, INSTRUCTION (FRENCH,SPANISH)	
		(DE345:CND,E,EA,PX,SP,MY)	
	4-227-866-31	MANUAL, INSTRUCTION (CHINESE)	
		(DE345:E,EA,PX,SP,MY,CH)	
	4-227-866-41	MANUAL, INSTRUCTION	
		(ENGLISH,POLISH,RUSSIAN)(DE345:CIS,EE)	
	4-227-866-51	MANUAL, INSTRUCTION (DANISH,FINNISH)	
		(DE345:AEP)	
	4-227-866-61	MANUAL, INSTRUCTION	
		(DUTCH,SWEDISH,GERMAN,ITALIAN,PORTUGUESE)(DE345:AEP)	
	4-227-866-71	MANUAL, INSTRUCTION	
		(ENGLISH,FRENCH,SPANISH)(DE345:AEP)	
	4-227-866-81	MANUAL, INSTRUCTION (ENGLISH,TURKISH)	
		(DE345:CIS,EE)	
	4-227-986-11	INSTRUCTION MANUAL (ENGLISH)	
		(DE345:US)	
	4-227-986-21	INSTRUCTION MANUAL	
		(ENGLISH,FRENCH,SPANISH,CHINESE)	
		(DE245:AUS,E,EA,MX,SP,MY/	
		DE345:CND,E,EA,MX,PX,AUS,SP,MY,AR)	
	4-227-986-31	INSTRUCTION MANUAL (CHINESE) (DE345:CH)	
	4-227-986-41	INSTRUCTION MANUAL	
		(ENGLISH,FRENCH,DUTCH,SWEDISH)	
		(DE245:AEP,UK/DE345:AEP)	
	4-227-986-51	INSTRUCTION MANUAL	
		(GERMAN,SPANISH,ITALIAN,PORTUGUESE)	
		(DE245:AEP,UK/DE345:AEP)	
	4-227-986-61	INSTRUCTION MANUAL	
		(ENGLISH,RUSSIAN,POLISH)	
		(DE245:CIS,EE/DE345:CIS,EE)	
	4-227-986-71	INSTRUCTION MANUAL (ENGLISH,TURKISH)	
		(DE245:CIS,EE/DE345:CIS,EE)	
	8-917-423-90	REMOTE COMMANDER RM-PP404 SET	
		(DE345)	
	4-228-696-01	REMOTE COVER (DE245)	
	4-978-977-01	REMOTE COVER (DE345)	

Ref. No.	Part No.	Description	Remarks

		HARDWARE LIST	

#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 IT-3	
#2	7-685-645-79	SCREW +BVTP 3X6 TYPE2 N-S	
#3	7-685-881-09	SCREW +BVTT 4X8 (S)	