


# Acuity® and Mobile Acuity LT Central Monitoring Systems

---

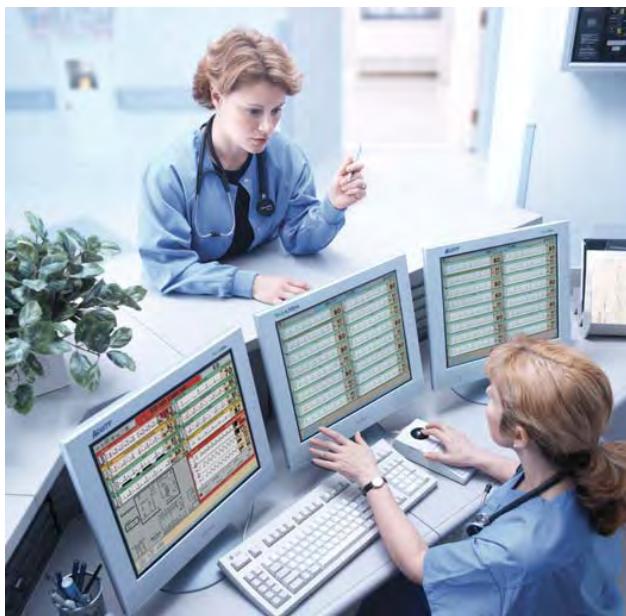

---

## Directions for use

Software version 8.2x

**WelchAllyn®**

Advancing Frontline Care™

© 2013 Welch Allyn. All rights are reserved. To support the intended use of the product described in this publication, the purchaser of the product is permitted to copy this publication, for internal distribution only, from the media provided by Welch Allyn. No other use, reproduction, or distribution of this publication, or any part of it, is permitted without written permission from Welch Allyn.

Welch Allyn FOSS. This product may contain software known as "free" or "open source" software (FOSS). Welch Allyn uses and supports the use of FOSS. We believe that FOSS makes our products more robust and secure, and gives us and our customers greater flexibility. To learn more about FOSS that may be used in this product, please visit our FOSS website at [www.welchallyn.com/opensource](http://www.welchallyn.com/opensource).

Welch Allyn assumes no responsibility for any injury to anyone, or for any illegal or improper use of the product, that might result from failure to use this product in accordance with the instructions, cautions, warnings, or statement of intended use published in this manual.

Welch Allyn, Acuity, AcuityLink, Propaq, Micropaq, Flexible Monitoring and FlexNet are registered trademarks of Welch Allyn. ParamSet is a trademark of Welch Allyn. For patent information, please visit [www.welchallyn.com/patents](http://www.welchallyn.com/patents).

C-LOCK and Nellcor are registered trademarks of Nellcor Puritan Bennett. Masimo and Signal IQ are registered trademarks of Masimo Corporation.

Software in this product is copyrighted by Welch Allyn or its vendors. All rights are reserved. The software is protected by United States of America copyright laws and international treaty provisions applicable worldwide. Under such laws, the licensee is entitled to use the copy of the software incorporated with this instrument as intended in the operation of the product in which it is embedded. The software may not be copied, decompiled, reverse-engineered, disassembled or otherwise reduced to human-perceivable form. This is not a sale of the software or any copy of the software; all right, title and ownership of the software remain with Welch Allyn or its vendors.

For information about any Welch Allyn product, visit [www.welchallyn.com/about/company/locations.htm](http://www.welchallyn.com/about/company/locations.htm).

Manual DIR 80018355 Ver A



Welch Allyn Protocol, Inc.  
8500 SW Creekside Place  
Beaverton, Oregon 97008-7101 USA

**EC REP**

Regulatory Affairs Representative  
Welch Allyn Limited  
Navan Business Park  
Dublin Road, Navan  
County Meath, Republic of Ireland

[www.welchallyn.com](http://www.welchallyn.com)



CE 0297

**WelchAllyn®**

# Contents

---

<b>1 - General information .....</b>	<b>1</b>
Indications for use .....	1
General description .....	1
Conventions .....	2
General warnings and cautions .....	3
Acuity System compliance with safety standards .....	7
Related documents .....	8
<b>2 - Acuity System overview .....</b>	<b>9</b>
System configurations .....	9
Central station screen .....	16
<b>3 - Admit and begin monitoring .....</b>	<b>25</b>
Preadmit a patient to Acuity System monitoring .....	25
Readmit a discharged patient .....	27
Begin patient monitor communication with the system .....	28
Enter and confirm a patient's ID or room at the central station .....	40
<b>4 - Adjust monitoring settings and patient information .....</b>	<b>43</b>
Set up typical monitoring at the Virtual Monitor .....	43
Adjust a patient's alarm limits .....	46
Adjust general printing settings .....	48
Adjust a patient's waveform displays .....	51
Arrhythmia Analysis option .....	52
ST Analysis option .....	69
Edit patient information .....	79
<b>5 - Respond to alarms and alerts .....</b>	<b>83</b>
Overview of central station alarm and alert indications .....	83
Suspend an audible alarm or alert tone for 90 seconds .....	84
Remove a latched arrhythmia alarm .....	87
Respond to specific alarms and alerts .....	88
Summary of Acuity System alarm and alert levels .....	95
<b>6 - Review or print patient data .....</b>	<b>97</b>
Review patient data .....	97
Print and review printouts .....	115

<b>7 - Move a monitored patient .....</b>	<b>125</b>
Move the patient and monitor to a new location .....	125
Move the patient to a different monitor .....	131
<b>8 - Discontinue Acuity System monitoring .....</b>	<b>133</b>
Stop monitoring a patient .....	133
Discharge a patient from Acuity System monitoring .....	136
<b>9 - Status icons .....</b>	<b>137</b>
Status icon colors .....	137
Patient/monitor status icons .....	138
System component status icons .....	145
<b>10 - Troubleshooting and maintenance .....</b>	<b>149</b>
Contact information .....	149
Contents .....	150
Troubleshooting .....	151
Maintenance .....	164
<b>11 - Specifications .....</b>	<b>175</b>
Monitor/Acuity System compatibility .....	175
General system monitoring capabilities .....	175
Acuity System heart rate .....	177
Acuity System pacemaker detection .....	178
Acuity System alarm and alert indications .....	179
Electromagnetic standards compliance .....	184
Acuity System customizable defaults and factory defaults .....	188
<b>Warranty .....</b>	<b>201</b>
<b>Index .....</b>	<b>203</b>

# 1

# General information

---

## Indications for use

The Acuity® Central Monitoring Station is intended to be used by clinicians for the central monitoring of neonatal, pediatric, and adult patients in health care facilities.

In addition to the central monitoring of patient data, waveforms, alarms and alerts, the Acuity software can include operational modules to provide extended recording of patient data (Full Disclosure), arrhythmia monitoring and ST analysis.

- Full disclosure stores patient data for up to 96 hours
- Arrhythmia monitoring module provides real-time monitoring and alarms for specific changes in cardiac rhythms. The clinician is responsible for determining the clinical significance of each detected arrhythmia event or alarm. The arrhythmia module is not intended for use with neonatal patients.
- ST analysis module provides real-time monitoring and alarms for ST segment deviations, from a reference beat, for patients with suspected heart disease and anomalies. The clinician is responsible for determining the clinical significance of each selected ST segment deviation or alarm. The ST analysis module is not intended for use with neonatal patients.

## General description

The Acuity Central Monitoring System (Acuity System) is Welch Allyn's central monitoring solution. It consists of a central monitoring station, Acuity System software and a collection of other commercially available networking products.

The Acuity System is available in multiple product configurations. Acuity Systems can be customized to meet a customer's unique needs based on hospital policy, health care facility size and patient census and floor layout. In all cases, the user must carefully review the features and functionality of the Acuity System to ensure that selected configurations meet specific clinical needs.

The Acuity System supports patient information management, patient vital-sign alarm and equipment alert management, patient data and waveform monitoring and review, system administration and ongoing service.

The Welch Allyn Connectivity Server (WACS) module consists of a server platform on which one or more of the following software options are installed: Web Server (Acuity System patient printout files available on Web browsers), AcuityLink® (Acuity System patient information delivered to mobile devices), HL7 Interface options, Third Party Data Stream Interface and Clinician Notifier Barcode Interface.

Acuity System software further processes data acquired from patient monitors. Acuity Systems with the Arrhythmia Analysis module calculate heart rate using multiple ECG leads and arrhythmia analysis algorithms.

The Acuity System is not directly connected to patients. It is designed to be used as a central monitoring system for a set of patient monitors that support both continuously and intermittently acquired data. Supported monitors include, but are not limited to, the following Welch Allyn devices: Propaq® Encore, Propaq CS, Propaq LT, Micropaq®, and Welch Allyn 1500 Patient Monitor®, as configured to interface with the Acuity System.

The Acuity System and distributed monitoring devices are prescription devices to be used by authorized health care professionals using standard institutional procedures and standards of care for patient monitoring. Staff training in the operation of the Acuity System and the patient monitoring devices connected to it is essential for optimal use. Users should be skilled at the level of a technician, nurse, physician, health care provider or medical specialist, with the knowledge and experience to acquire and interpret patients' vital-signs data.

Individuals using the Acuity System should be familiar with its operation as described in this manual, and they should understand all warnings and cautions in the manual.

## Conventions



**WARNING** Indicates conditions or practices that could lead to illness, injury, or death.



**Caution** Indicates conditions or practices that could damage the equipment or other property.



On the product, means "Consult the accompanying documentation."

# General warnings and cautions

## Warnings

Related to system components and configuration



**WARNING** Use only accessories approved by Welch Allyn. The use of any other accessories can result in inaccurate patient data, can damage the equipment, and can void your product warranty. See the accessory list or visit [www.welchallyn.com](http://www.welchallyn.com).



**WARNING** Always use accessories according to the standards of your facility and according to the manufacturer's directions.



**WARNING** Welch Allyn has verified that Welch Allyn-specified network requirements for this Acuity System have been met. Altering the cabling or connecting the Acuity System to another type of power source could damage the equipment, cause system restarts or hazardous conditions on the network, or result in inaccurate patient information at the Acuity Central Station.



**WARNING** Do not change Acuity System components or configuration, such as removing or adding a printer or substituting hardware, without approval by Welch Allyn. Such changes could degrade system performance and affect patient monitoring.



**WARNING** Devices connected to the Acuity System must be certified for overall system compliance according to the European Norm 60601-1 and 60950 safety standards. The interconnection of any device with an Acuity System must comply with IEC 60601-1-1. Devices listed in the *Acuity System installation planning guide* comply with these standards. If in doubt about network connectors or devices, please consult your facility's Biomedical Engineering department or Welch Allyn Technical Support.



**WARNING** It is strongly recommended that Acuity Systems be installed with continuous power sources and redundant means of operator surveillance, such as secondary central stations and hallway message panels. Acuity System alarms, alerts or other events can go unnoticed if clinical personnel are not present at the Acuity Central Station or if interruptions occur in power or system operations. You are responsible to provide percent reliable power to the central station. The central station will only work with reliable AC power.



**WARNING** Ensure that no headphones or headphone adapters are connected to the headphone input of your computer. A connection in the headphone jack of a computer will cancel speaker output for any audible alarms associated with the Acuity System.



**WARNING** Ensure that the volume level on your computer is not set too low or is not set to mute as this may cause you to miss audible alarms generated from the Acuity System.



**WARNING** Replace central station hardware within the the lesser of 3 years or the original equipment manufacturer's specification. Failure to perform preventative maintenance can impact system performance and availability.



**WARNING** The bedside patient monitor is the primary alarming source for the patient, and the central station is a backup alarm source. The central station is only as reliable as its network and should be relied on only as a backup alarming device.



**WARNING** Lethal arrhythmia (LTA) analysis by the central station is only as reliable as the connection to the bedside monitor. With the exception of the Welch Allyn 1500 monitor in a disconnected state, which provides its own LTA analysis and alarm, the central station is the primary source for LTA analysis. LTA alarms will occur at the central station and will also be communicated to the bedside monitor for annunciation. Thus, in a central station workflow, LTA analysis and alarming will only be as reliable as the network.



**WARNING** A paired system CPU (high-availability pair) is strongly recommended to provide system redundancy.



**WARNING** The electronic medical record system (EMR) is not intended to serve as a primary monitoring system for alarms or as an exclusive source for patient data in determining patient care. The Acuity System is capable of transferring historical patient data to most customer-specified EMR systems through the Welch Allyn Connectivity Server (WACS). However, the transferred patient data is not a substitute for the patient data collected by the primary monitoring system.

Related to close physical surveillance and specific patient populations



**WARNING** It is important that clinicians understand and communicate to all staff using the Acuity Central Station that any arrhythmia analysis software program is an effective tool to assist in patient care, but arrhythmia analysis packages are unable to achieve 100 percent accuracy for all morphologies and occurrences of QRS and PVC detection. Thus, close physical surveillance and clinical interpretation of cardiac data must still be an integral part of every patient's care. Clinicians must review all data obtained from the Acuity System before implementing therapy based on the data.



**WARNING** Ensure that Acuity System patients are kept under close surveillance, especially patients prone to arrhythmia events. Use the Acuity System only in conjunction with close surveillance by trained clinicians.



**WARNING** Do not use the Arrhythmia Analysis or ST Analysis feature on neonates. The Arrhythmia Analysis and ST Analysis options are not intended for use with neonatal patients.



**WARNING** Keep *all* pacemaker patients under close observation. Rate meters might continue to count the pacemaker rate during occurrences of cardiac arrest or some arrhythmias. Do not rely solely upon rate meter alarms.



**WARNING** Central station alarms and other events can go unnoticed if clinical personnel are not present at the central station or if interruptions occur in power or system operations.



**WARNING** The leading cause of patient death or serious injury reported with the use of patient monitoring equipment is failure to respond to alarms notifying the user of an adverse change in patient condition. If you are relying on visual alarm notifications, maintain a clear line of sight and remain within 4 meters of the central station. If you are relying on audio alarm notifications, make sure that you can hear audio alarms from where you are. Set the volume as needed considering the environment and ambient noise levels. Verify that the alarm is audible to a clinician working at the maximum distance from the central station.

## Related to monitoring interruption



**WARNING** If you view an Acuity System display remotely and its primary Acuity System fails, you lose all access to the remote display. Monitoring a patient at an Auto-Open Secondary (AOS) or Patient List Review (PLR) remote station is not a substitute for monitoring a patient at the primary Acuity Central Station.



**WARNING** Use wireless monitors only on patients who can tolerate intermittent monitoring interruptions. All wireless systems are prone to intermittent signal dropout. During signal dropout periods, arrhythmia and ST-segment analyses cannot be performed, and the Acuity System does not show alarms or alerts.



**WARNING** If an Acuity Central Station display is intentionally or inadvertently muted, alarm and alert tones do not occur at the display. If your central station display includes audible tones, remain aware of whether they are occurring. If they appear to have stopped, ensure that tones are restored.



**WARNING** If normal central processing unit (CPU) operation is interrupted, for example, during CPU maintenance, scheduled and unscheduled reboots, power loss or a high-availability (HA) CPU switchover period, central station monitoring and analysis temporarily stop.

The Acuity System cannot collect patient review data during the interruption period. That data becomes permanently unavailable.

Auto-reboots and HA CPU switchovers occur infrequently, but poor environmental conditions and failure to perform preventative maintenance can increase frequency of occurrence.



**WARNING** Whenever an interruption in Acuity System CPU operation occurs, please contact Welch Allyn Technical Service soon to ensure that your entire system has returned to normal operating condition and that it does not require further service.



**WARNING** Auto-reboots can occur during internal software checks, and wireless connection can be occasionally disrupted. During this period, the bedside monitors continue to provide their primary alarming functions.

## Cautions



**Caution** U. S. Federal law restricts this device to sale by or on the order of a physician.



**Caution** Make sure that your barcode scanner is properly configured by Welch Allyn before use.

# Acuity System compliance with safety standards



The CE Mark and Notified Body Registration Number signify that the product meets all essential requirements of European Medical Device Directive 93/42/EEC.

**Table 1. Acuity System compliance with safety standards**

Acuity System component(s)	Product category	Organization and standard
Propaq Encore, Propaq CS, Propaq LT, Welch Allyn 1500 Patient Monitor and Micropaq monitors	Medical Equipment	EN 60601-1:1990 A1:1992, A2:1995
Wireless Micropaq, Propaq LT and Propaq CS monitors		IEEE 802.11, Wireless LAN Medium Access Control (MAC) and Physical Layer (PHY) Specifications
		IEEE 802.11a, 802.11e, 802.11h, 802.1X, 5 GHz
All components operating together as a system	Electromagnetic compatibility for Medical Equipment	IEC 60601-1-2:2007
All components operating together as a system	Medical Systems	IEC 60601-1-1:2000
All information systems components	Information Technology Equipment	EN 60950:1994
Acuity System cordless receiver cabinet	Electromagnetic compatibility	FCC Class A <sup>a</sup>

a. When the equipment is operated in a commercial environment, Class A limits provide reasonable protection against harmful interference. The equipment generates, uses and can radiate radio frequency energy; if it is not used in accordance with this reference guide, or if it is modified from original installation, it might cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user is required to correct the interference at his own expense.

# Related documents

---

## Acuity and Mobile Acuity LT Central Monitoring Systems

### Directions for use

Acuity and Mobile Acuity LT Central Monitoring Systems directions for use and in-service guide CD-ROM (multilanguage)

*Acuity and Mobile Acuity LT Central Monitoring Systems directions for use*

*Acuity Central Monitoring System in-service guide (English)*

### Mobile Acuity LT installation guide (printed)

*Mobile Acuity LT System installation guide (En, Fr, Ger, Sp, It, Pol)*

### Quick card

*Acuity System Icons (English, printed)*

---

## Welch Allyn Connectivity Server (WACS)

Welch Allyn Connectivity Server (WACS) CD-ROM (English):

*Welch Allyn Connectivity Server directions for use*

*Welch Allyn Connectivity Server programmer's guide*

*AcuityLink-Clinician Notifier directions for use*

## AcuityLink-Clinician Notifier Software

*AcuityLink-Clinician Notifier software installation instructions (English)*

---

## Welch Allyn patient monitors

*Micropaq Monitor directions for use CD-ROM (multilanguage)*

*Propaq LT Monitor directions for use CD-ROM (multilanguage)*

*Propaq CS Monitor directions for use CD-ROM (multilanguage)*

*Propaq Encore Monitor directions for use CD-ROM (multilanguage)*


*Welch Allyn 1500 Patient Monitor directions for use CD-ROM (multilanguage)*

---

## 2

## Acuity System overview

## System configurations

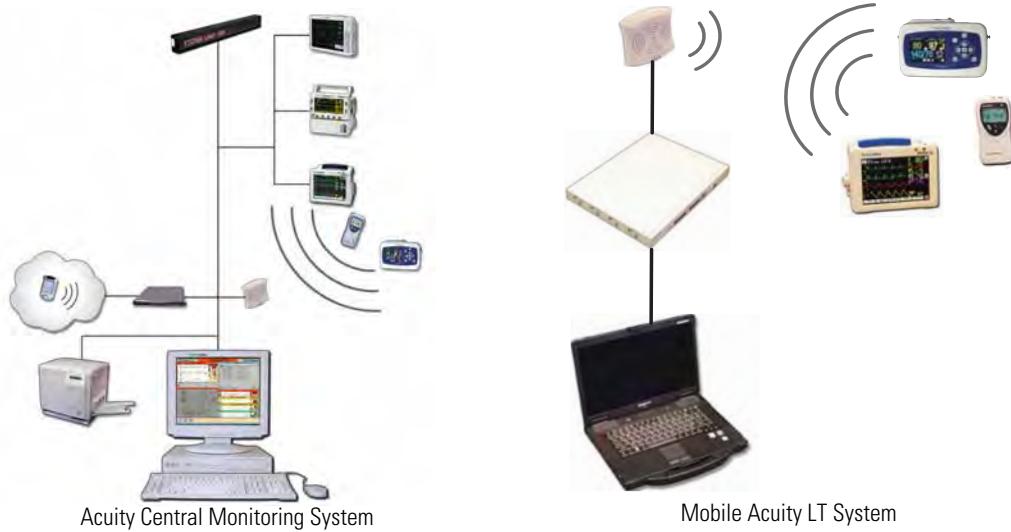


The Acuity System consists of an Acuity Central Station that receives, displays and analyzes information from various wireless and hardwired monitoring devices. Mobile Acuity LT Central Stations are laptop computers.

Some Acuity Systems can send patient data to Internet browsers and hospital information systems (HISs) via the optional Welch Allyn Connectivity Server (WACS). The systems can receive patient information also from HISs.

The FlexNet® concept allows several Acuity Systems to centrally monitor groups of patients resident on local Acuity Systems within a hospital and on networked Acuity Systems in smaller clinics or hospitals. Transfers can occur from system to system and remote viewing of real-time and historical Full Disclosure data is available for consultation from any of the Acuity Systems.

## Diagram of the System

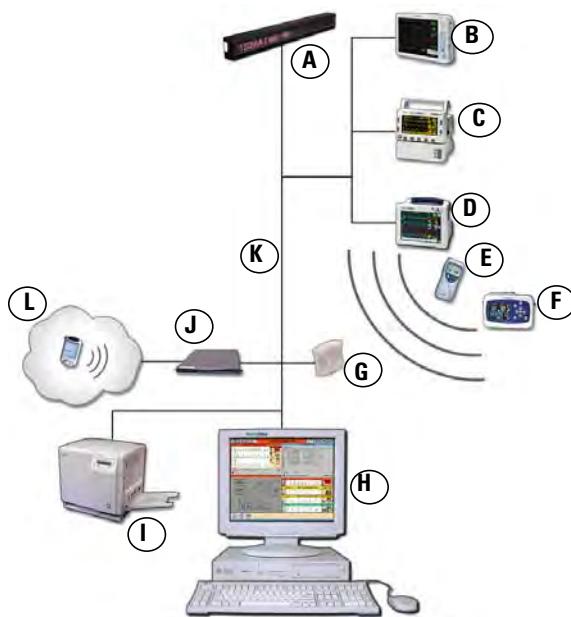

A. Hallway message panel	Optional panels, located throughout a unit, visually indicate alarms and some alerts.
B. Welch Allyn 1500 Patient Monitor	Hardwired, full-featured monitors with 12-lead ECG analysis and large displays
C. Propaq Encore monitor	Hardwired, portable, full-featured vital-sign monitors
D. Propaq CS monitor	Wireless or hardwired full-featured vital-sign monitors with large displays
E. Micropaq monitor	Small, wireless monitors that measure ECG and SpO <sub>2</sub> . These monitors are useful for ambulatory patients
F. Propaq LT monitor	Small, wireless monitors that measure ECG/Resp, SpO <sub>2</sub> and NIBP. These monitors are capable of displaying large numerics.
G. Wireless access point	Connects wireless monitors and the Acuity Central Station.
H. Acuity Central Station	Monitors all connected patients, stores patient information, and displays alarms and alerts.
I. Laser printer	Optional laser printers give you printouts of various types of patient information.
J. Welch Allyn Connectivity Server (WACS)	An option to the Acuity System. WACS is a server platform on which software options are installed.
K. Hospital network	Carries information to the Acuity System and carries patient data to the hospital information system (HIS/CIS).
L. Mobile device running Clinician Notifier software	AcuityLink is a WACS option that delivers Acuity System patient information to mobile devices running Clinician Notifier software.


**Note** Some patient monitors that can communicate within the Acuity System might not be represented in this diagram.

## Networked Acuity System features

Networked Acuity Systems include various features. This section presents these network features:

- Remote Patient List Review (PLR) station
- Paired system CPUs (high-availability pairs)

### Remote Patient List Review (PLR) station

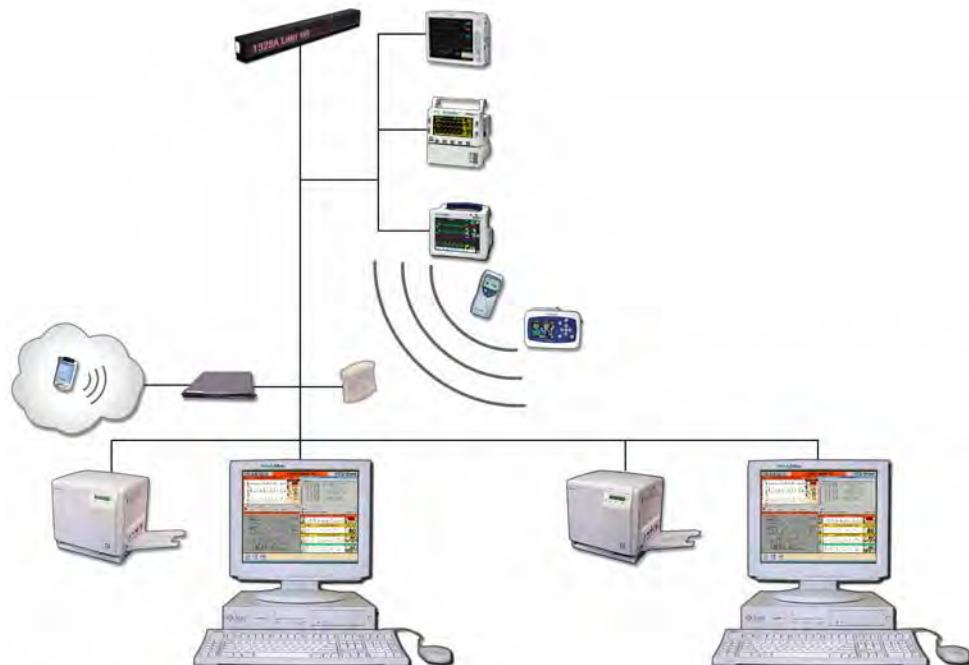

Networked Acuity System with a remote Patient List Review (PLR) station

Some networked Acuity Systems include one or more remote Patient List Review stations. Clinicians can do these things at a PLR station:

- Open Waveform Windows.
- Open a Virtual Monitor.
- View realtime vital signs in all relevant windows.
- Open review windows.
- Print records and specify auto-printing for a patient.



**WARNING** If you view an Acuity System display remotely and its primary Acuity System fails, you lose all access to the remote display. Monitoring a patient at an Auto-Open Secondary (AOS) or Patient List Review (PLR) remote station is not a substitute for monitoring a patient at the primary Acuity Central Station.

### To open a Waveform Window on a PLR station screen


PLR stations are typically part of an extended Acuity System network.

To open a patient's Waveform Window from a PLR station, first locate the patient via the Patient List, and then open the patient's Waveform Window.

1. In the lower left corner of the Acuity Central Station screen, click . The Patient List window appears.
2. Scroll the patient list.
  - If the patient is listed, proceed to Step 4.
  - If the patient is not listed, click **Other Patients** to view networked Acuity System units.The Other Patients Lists window appears.
3. List patients by one of these criteria:
  - Click **Unit**, and then select the unit name from the list in the box on the right.
  - Click **Last Name** or **First Name**, and then click the first letter of the name.
4. Click a column heading to sort the list by name, location or ID.  
Actively monitored patients are listed at the top.
5. Locate the patient name in the list, and then click the name.
6. Click .

The patient's Waveform Window appears on the PLR station screen.

### To close a Waveform Window on a PLR station screen

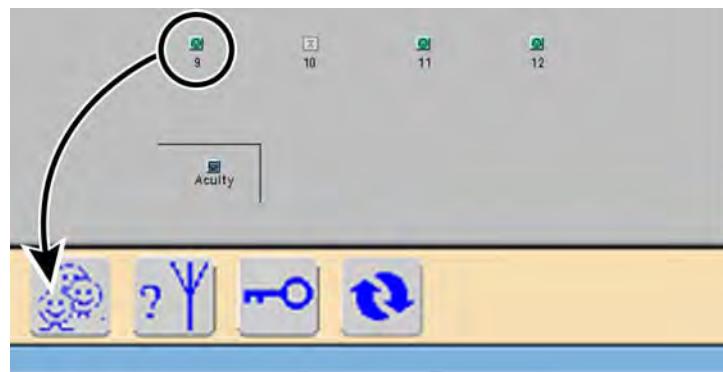

1. Drag the corresponding map icon to .

The Waveform Window and map icon close.

## Flexible patient access (FPA) using virtual network computing (VNC)

**Note** The FPA using VNC configuration is a licensable feature. To order this feature, contact your Welch Allyn sales representative ([see page ii](#)).

The flexible patient access option allows you to connect to a Patient List Remote using a VNC connection. Each purchased VNC license allows one VNC client to view real-time and full-disclosure data on monitored patients.

The Acuity Central Station supports two editions of the VNC server, however these two editions cannot be mixed on a single Patient List Remote. The VNC Free Edition Server is pre-installed as a part of the Acuity System, however a license must be purchased in order to use FPA. The VNC Enterprise Edition Server offers features not included in the free edition, and can be purchased for an additional fee.

There are three screen resolutions available for the VNC connection.

Resolution	View type	Standard port number
1280 x 1024	Standard resolution	5
1680 x 1050	Widescreen resolution	6
1024 x 704	Single patient view	7

### To log on to flexible patient access using VNC

1. Ensure that you have installed a version of the VNC client application.
2. Launch your VNC client application.  
The VNC connection screen appears.
3. Enter the IP address or host name, a colon, and the port number of the VNC server and press **OK**. Do not add spaces between your entries.

**Note** It is recommended that your biomedical engineer work with your facility's IT department and add the host name of your VNC port forwarder to the domain name server (DNS), so that changes to the port forwarder IP address do not affect VNC users. It is also recommended that you use "acuity" as the host name of the port forwarder.

4. Enter your VNC client password.

If you are using the VNC Enterprise Edition Server, enter your user name and password.

5. Press **OK**.

The Remote Patient List Review window appears. For more information see “[Remote Patient List Review \(PLR\) station](#)” on page 11.



**Note** FPA connections are not shared between individual client connections. The Acuity Central Station allows only one client to connect to each display session. When you disconnect from a remote viewing session, the windows and views are not reset. It is recommended that you close all patient windows on the viewing client before disconnecting.


## Paired system CPUs (High-availability pairs) and switchovers

Acuity Systems that typically support at least 29 patients include a high availability (HA) central processing unit (CPU). The HA CPU is a redundant Acuity System CPU.

An HA CPU assumes control if the Acuity System CPU's operation is interrupted. An HA CPU "switchover" occurs to ensure minimal loss of Acuity Central Station monitoring capability. Historical data that had been gathered by the non-operational CPU before the switchover might not be available for some patients until that CPU becomes operational.

At any one time, displays in a paired CPU system should all receive input from either the Acuity System CPU or the HA CPU.

### To ensure that all displays in a paired CPU system receive input from the same CPU

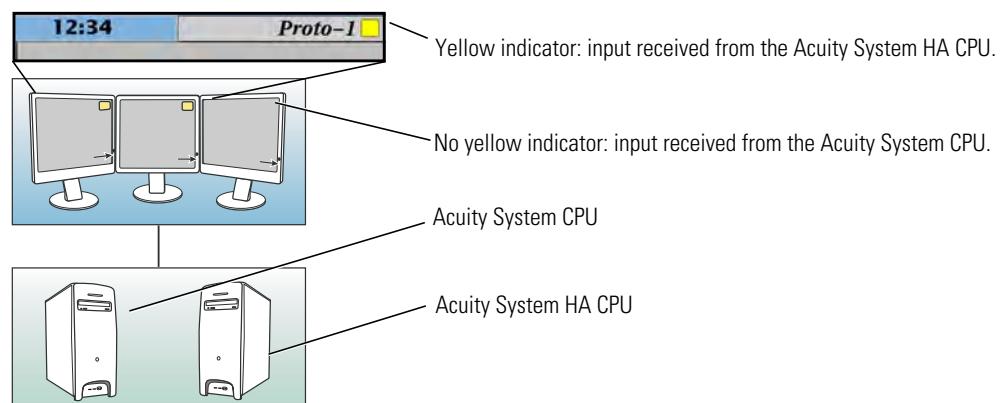

#### During normal operating conditions

1. Ensure that none of the displays shows a yellow indicator in the top right corner. If none shows a yellow indicator, the system is receiving input properly. If any display shows a yellow indicator, proceed to the next step.
2. On any display with a yellow indicator, press the video input button, generally located on the front of the display.

All displays now receive input from the Acuity System CPU, and alarms and alerts appear on all of them. No displays show a yellow indicator.

#### During interruption of Acuity System CPU operation

1. Ensure that all displays show a yellow indicator in their top right corners. If any display does *not* show a yellow indicator, proceed to the next step.
2. On any display *without* a yellow indicator, press the video input button, generally located on the front of the display.

All displays now receive input from the Acuity System HA CPU, and they all show a yellow indicator. If one or more of the displays is blank, or if all Virtual Monitors do not reappear with their original border colors in approximately five minutes, see [Table 10](#) on page 151.




**WARNING** Whenever an interruption in Acuity System CPU operation occurs, please contact Welch Allyn Technical Service soon to ensure that your entire system has returned to normal operating condition and that it does not require further service.

## Central station screen

**Note** Depending upon the default screen color scheme of your Acuity Central Station (black-on-white or color-on-black), your screen colors may not match those shown in this manual.

Depending upon the selected screen view, the Acuity Central Station screen can include these areas:

- Map area
- Virtual Monitor
- Utility space
- Waveform Windows area

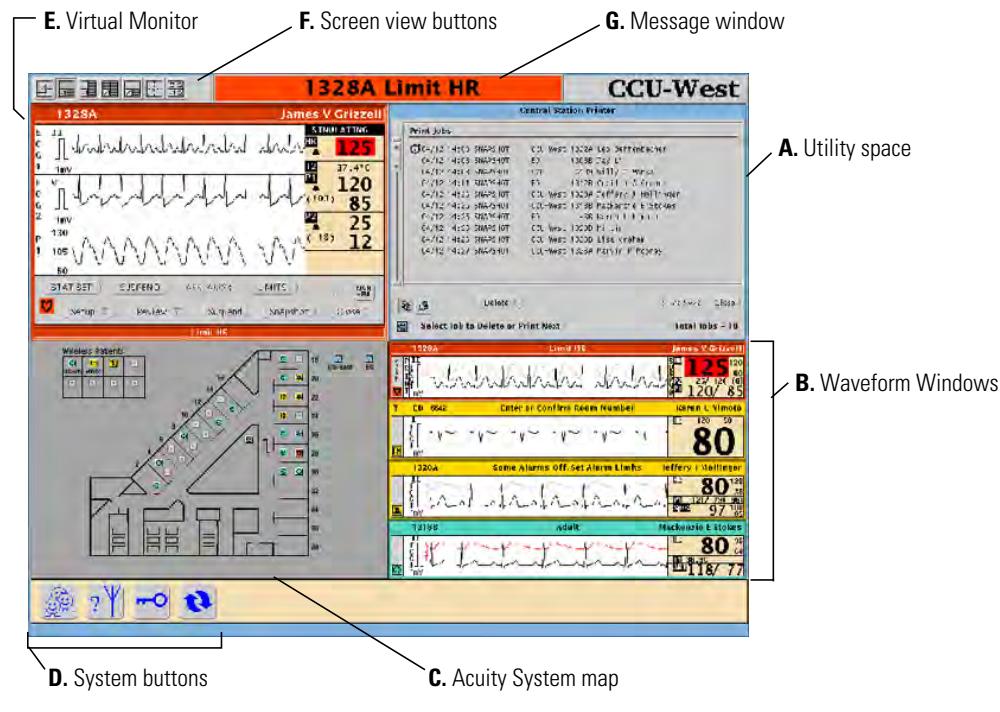

A. Utility space

Displays a patient's Setup windows, Review windows, Patient List window, and Central Station Printer windows.

B. Waveform Windows

Abbreviated Virtual Monitors.

C. Acuity System map

Shows the location and status of patients, and it displays status icons for system equipment.

You open a patient's Waveform Window or Virtual Monitor by clicking the patient's map icon once or twice.

D. System buttons

Open the patient list, show patients who are connected to wireless monitors, open system administration windows, and sort the order of Waveform Windows.

E. Virtual Monitor

Displays the patient's vital-signs information and status.

F. Screen view buttons      Change the overall Acuity System screen view. They vary in appearance according to your system configuration.

G. Message window      Displays the date and time or the location of alarms and alerts. It matches (optional) hallway message panel messages.

**Note** Welch Allyn Acuity Systems communicate with some patient monitors that include Masimo® Corporation SpO<sub>2</sub> measurement capabilities. If a monitor communicating with your Acuity System has such capabilities, the monitor's corresponding Acuity System Virtual Monitor, Waveform Window, some review windows and some printouts include SpO<sub>2</sub> Perfusion Index (PI) and Signal IQ™ indicators and numerics.

For more information regarding Perfusion Index (PI) and Signal IQ™, please refer to Masimo Corporation literature or <http://www.masimo.com>.

## System screen views


You can change the screen view of the Acuity Central Station display by clicking these buttons along the top left of the Acuity Central Station screen. Your system includes some or all of these choices.

If your system includes multiple screens, the additional screens show Waveform Windows or Virtual Monitors.

Button	Description	
	Expands the map to cover most of the Acuity Central Station screen. Map shows room locations and status icons of all monitored patients. One Virtual Monitor and review window cover part of the map.	
Map View		
	4-Waveforms View	 The 4-waveforms view shows four Waveform Windows, two utility windows and one Virtual Monitor. A utility window can cover the map.
	8-Waveforms View	 If your system includes multiple screens, this view can show two utility windows and one Virtual Monitor.
	12-Waveforms View	 Shows eight Waveform Windows and one Virtual Monitor. A utility window can cover the map.
	Half Screen Review View	 Shows 12 Waveform Windows. A Virtual Monitor can cover the map and can be replaced by a utility window.
	Full-Screen Review View	 The top half of this view shows a review window and the bottom right quarter of the screen shows four Waveform Windows. The map in the bottom left quarter might be covered by a Virtual Monitor or utility window.
	All Monitors View	 If your system includes multiple screens, a Virtual Monitor replaces the Waveform Windows.
		 Shows one review window for one patient.
		 Shows three Virtual Monitors and one utility window that can cover the map; shows no Waveform Windows.

## System buttons

The system buttons in the lower left corner of the Acuity Central Station screen provide quick access to frequently used system-wide functions.

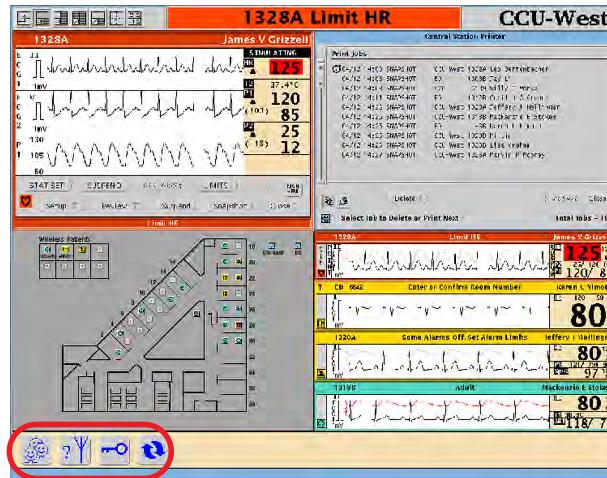

The Patient List button opens the Patient List window, which enables you to preadmit, readmit, transfer, and discharge patients in your Acuity System. You can also view and print stored waveforms and trends of patients who have not been monitored by the Acuity System for (up to) 96 hours.

If your Acuity System is connected within a network of Acuity Systems, depending upon the type of network, you can perform the above functions for networked patients. You can also locate networked patients, edit their patient information, change their alarm limits and suspend their alarms and alerts.



A Patient List button is displayed also in review windows that have been opened by way of the Patient List window.



When you click and hold the View Wireless button, the map icons of all patients that are connected to wireless monitors change to Wireless icons; other patient icons become gray boxes. The map returns to normal when you release the button on your mouse or trackball.



The System Administration button opens a window that allows designated system administrators to create new user identifications and to adjust system time.



The Sort Windows button sorts all Waveform Windows and any open Virtual Monitor windows by room number, in alphanumeric order. The sorting only applies to the current screen view.

- Waveform Windows for monitors without confirmed patient IDs are located at the end.
- For networked Acuity Systems with more than one Acuity System unit, rooms are grouped together according to Acuity System unit.
- The order in which windows are displayed depends on how your system has been configured. Generally, windows are displayed from top to bottom and left to right.



If the Sort Windows button is grayed-out, your system is not configured to sort windows. In this case, each Waveform Window space is assigned to a particular room, and unassigned wireless monitors occupy unoccupied Waveform Window spaces. Wireless monitors are “bumped out” to different unoccupied spaces if their spaces become occupied by hardwired monitors.

## Central station map and status icons

Your system includes a map that is similar to one of these examples. An Acuity Central Station map shows status icons for these things:

- System components
- Each patient monitor (and associated patient) that is communicating with the Acuity System

For a complete description of all Acuity status icons, see ["Status icons" on page 137](#).

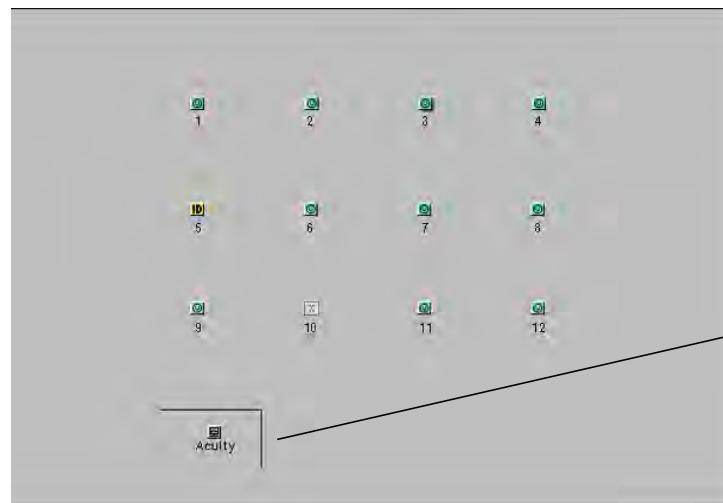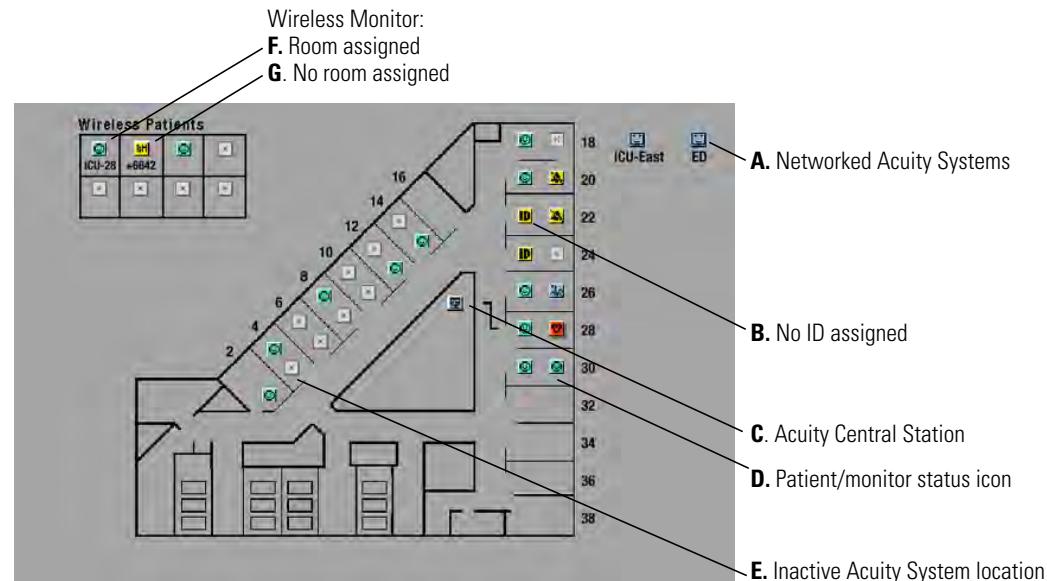

**A. Networked Acuity Systems** These status icons represent networked Acuity Systems, and they indicate the state of communications with the networked systems.

**B. No ID assigned** No patient ID number has been assigned to the patient connected to this monitor.

**C. Acuity Central Station** Icon indicates the Acuity Central Station status. Click to open the Acuity Central Station Printers window.

D. Patient/monitor status icon Icons appear at locations with active monitors. Click a map icon once to open the patient's Waveform Window or twice to open the Virtual Monitor. For details about all map icons, see ["Patient/monitor status icons"](#) on page 138.


E. Inactive Acuity System location No hardwired monitor is connected to this Acuity System port, or no wireless monitor has been assigned to this location.

Wireless Monitor:  
F. Room assigned A room number has been assigned to this patient connected to a wireless monitor.

G. No room assigned No room number has been assigned to this patient connected to a wireless monitor. The number is the device ID number, and it is replaced by the room number after the room number is assigned.


## Waveform Window

A Waveform Window is an abbreviated Virtual Monitor.

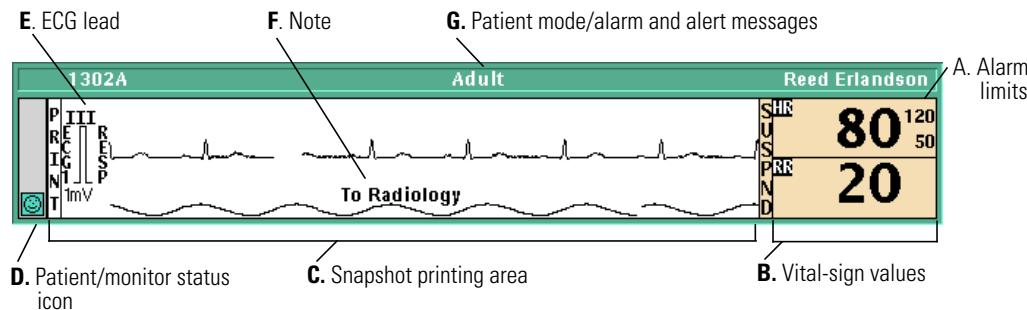

A. Alarm limits	Alarm limit settings
B. Vital-sign values	Vital signs in alarm are shown by numbers in a red field. Click in this area to suspend or resume an audible alarm tone. An NIBP numeric reduces in size after 16 minutes.
C. Snapshot printing area	Click in the waveform area to print a snapshot print at the central printer.
D. Patient/monitor status icon	Click the Patient/ Equipment status icon to open the Virtual Monitor. For details about all status icons, see <a href="#">"Status icons" on page 137</a> .
E. ECG lead	The adjacent waveform is derived from this ECG lead.
F. Note	From the Patient ID Setup window, you can type a temporary note to appear here. For details, see <a href="#">"Add or remove a note in a patient's Waveform Window" on page 81</a> .
G. Patient mode/alarm and alert messages	Alarm and alert messages replace the patient mode indicator. Color indicates status: red, alarm; yellow, alert; green, patient vital signs within limits and normal equipment operation; and blue, intentional disconnection.

### To open a patient's Waveform Window

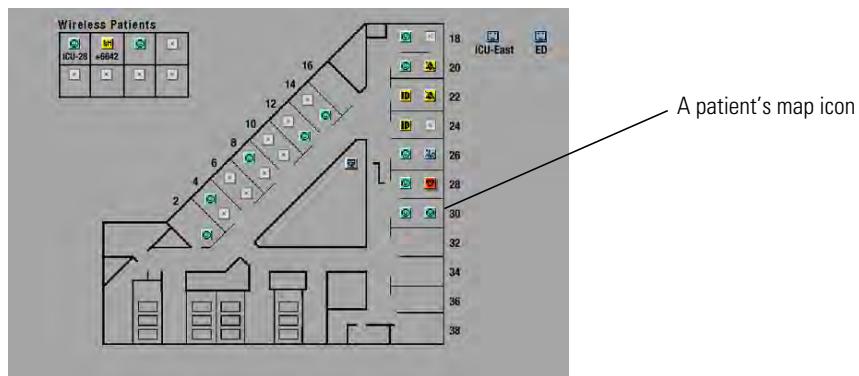


- On the Acuity Central Station screen map, click the patient's map icon.

**Note** If you are viewing from a Patient List Review (PLR) station, see ["To open a Waveform Window on a PLR station screen" on page 12](#).

## Virtual Monitor

An Acuity System Virtual Monitor represents a patient monitor and the information obtained from the monitor. The appearance and button sequences can differ from the actual patient monitor.

Options or monitor functions that are not available are shown in faint gray type.

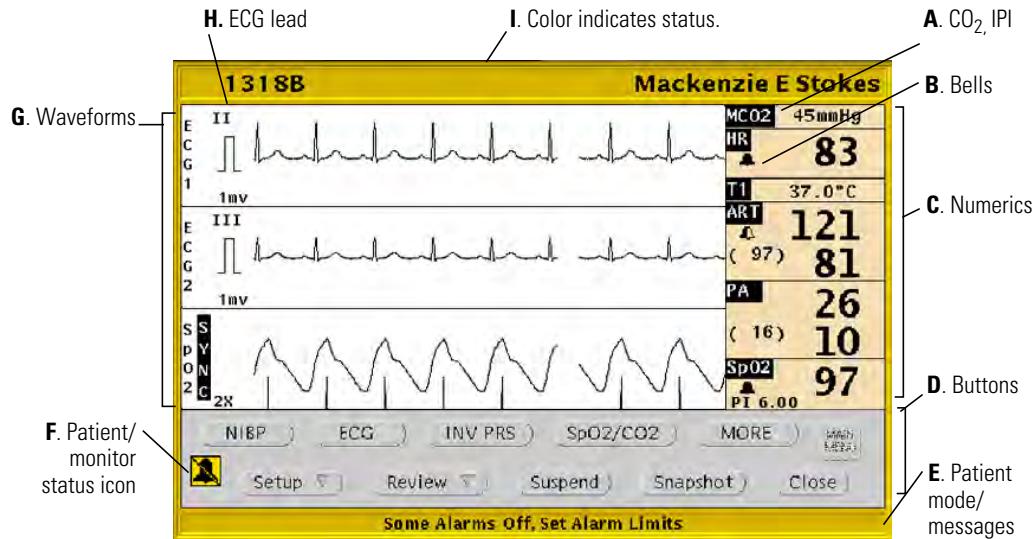

**A. CO<sub>2</sub>, IPI**

MCO<sub>2</sub> indicates mainstream CO<sub>2</sub>. SCO<sub>2</sub> indicates sidestream CO<sub>2</sub>. IPI indicates Integrated Pulmonary Index and displays when the IPI feature is enabled on the Welch Allyn 1500 Patient Monitor.

**B. Bells**

Bells appear in larger numeric zones.

- Solid bell indicates that all of this vital sign's alarm limits are set.
- Half-shaded bell indicates that some of this vital sign's alarm limits are set.
- Bell missing from larger numeric zone indicates that none of this vital sign's alarm limits are set.

**C. Numerics**

Up to eight labeled numeric displays

**D. Buttons**

Buttons are visible when the pointer is within the window. Options or monitor functions that are not available or active are shown in faint gray type.

- Setup: Opens setup windows for Patient ID, Alarms, Printouts, Waveform Window, Arrhythmia Alarms, and ST Analysis.
- Review: Opens review windows for Graphical Trends, Tabular Trends/Events, Waveforms, Arrhythmia Events, and OxyCRG.
- Suspend: Suspends an audible alarm tone for 90 seconds.
- Snapshot: Prints a snapshot at the Acuity Central Station printer.

**E. Patient mode/messages**

Alarm and alert messages replace patient mode indicator.

**F. Patient/monitor status icon**

Patient/monitor status icon. For details about all status icons, see ["Status icons" on page 137](#).

**G. Waveforms**

Up to three waveform display areas

For patient monitors that include Masimo SpO<sub>2</sub> measurement capabilities, indicator beneath SpO<sub>2</sub> wave is Signal IQ™. For more information, refer to Masimo Corporation literature.

## H. ECG lead


The adjacent waveform is derived from this ECG lead. If you want to review waveforms from *all* leads, click **Review, Waveforms** to open the Waveforms Review window.

## I. Color indicates status.


Red, patient alarm; Yellow, equipment or patient alert; Green, patient vital signs within limits and normal equipment operation; Blue, intentional disconnection

**To open a patient's Virtual Monitor**

Take one of these steps at the Acuity Central Station screen:

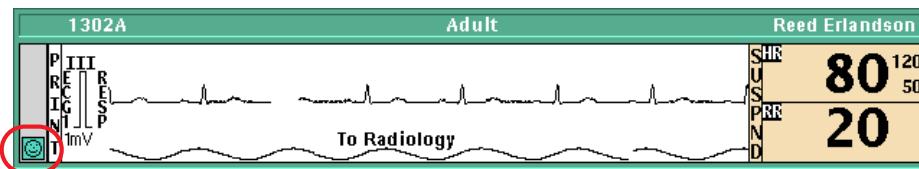

- Click the status icon in the patient's Waveform Window.

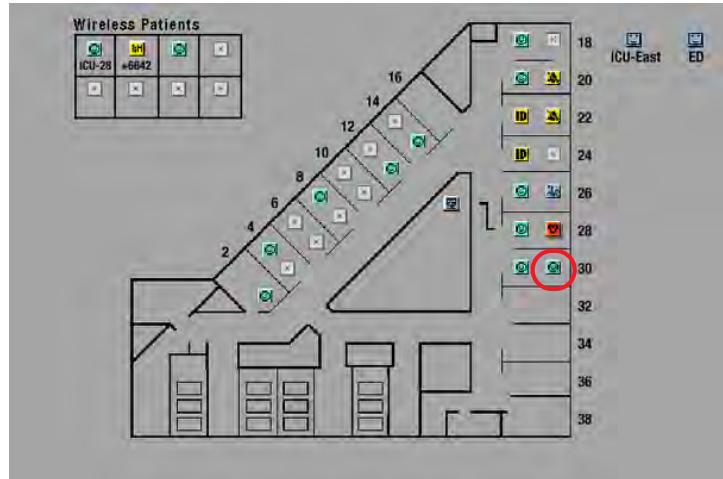

- Click the patient's map icon.

# 3

## Admit and begin monitoring

### Preadmit a patient to Acuity System monitoring

If you know a patient's ID number before the patient is admitted, you can save time that would be spent later by preadmitting the patient at the Acuity Central Station.

When a preadmitted patient arrives:

- If the patient is connected to a wireless monitor, at the patient monitor you can simply confirm the patient ID and add a room number.
- If the patient is connected to a hardwired monitor, you can go to the Acuity Central Station and confirm the patient by entering only the ID number.

If a patient is already monitored by a networked Acuity System, a duplicate entry is not allowed, because patient information could be lost.

#### To preadmit a patient to Acuity System monitoring

1. In the lower left corner of the Acuity Central Station screen, click .

The Patient List window appears.

2. Click **Admit**.

The Admit Patient window appears

3. Specify a location.

- If you know the patient's room number, click the number.

- If you do not know the patient's room number, click **UNASSIGNED**.

You can enter the room number later via the Patient List or the Virtual Monitor.

4. Type or scan other patient information.

5. *Carefully review your entries for accuracy.*

6. Click **Confirm**.

The information is stored.

**To assign a room number for a preadmitted patient, via the Patient List**

1. In the lower left corner of the Acuity Central Station screen, click .

The Patient List window appears.

2. Select the patient's name.

3. Click **Transfer**.

The Transfer Patient window appears.

4. Click a unit name in the list.

5. Click a room.

6. Click **Confirm**.

The information is stored.

# Readmit a discharged patient

You can readmit a patient to the Acuity System if the patient's name still remains in the Patient List.

If a patient has been discharged from the Acuity System, but the system still holds the patient's data, the patient remains in the list. The Acuity System stores patient data for 24 to 96 hours after monitoring stops.

## To readmit a discharged patient

1. In the lower left corner of the Acuity Central Station screen, click .

The Patient List window appears.

2. Select the patient's name.

If the patient's name does not appear in the patient list, see ["Preadmit a patient to Acuity System monitoring" on page 25](#) to admit the patient.

3. Click **Readmit**.

The location becomes UNASSIGNED. If you do not know the patient's room number, you can enter it later via the Patient List or Virtual Monitor.

4. If you know the patient's room number, take these steps:

- a. Click **Transfer**.

The Transfer Patient window opens.

- b. Click a unit name in the list.
  - c. Click a room.

5. Click **Confirm**.

The information is stored.

# Begin patient monitor communication with the system

For information about patient monitors that are part of your Acuity System but are not shown in this chapter, consult the patient monitor manufacturer's literature.

## Connect a hardwired monitor to the system

### To connect the monitor to the system

1. Connect the Acuity System network cable.
  - a. Connect the cable to the Acuity System network connector on the bedside monitor.
  - b. Connect the other end of the cable to the bedside network connector.

For Propaq CS and Propaq Encore monitors, connect the network cable to the bedside connector labeled with this symbol: .



Propaq CS monitor  
Propaq Encore monitor



Welch Allyn 1500  
Patient Monitor

For a Welch Allyn 1500 Patient Monitor, connect the network cable to the bedside connector labeled with this symbol: .

The cable clicks into place when it is properly attached. Ensure that the cable is neither damaged nor broken.



**WARNING** Ensure that you connect the proper monitor network cable to the proper wall jack. Using the wrong network cable or the wrong wall jack connector could damage the monitor, or not send data to the Acuity System. Ensure that the monitor is properly connected to the network before you start monitoring the patient.

2. If the monitor is on, take one of these steps:
  - If it was not monitoring this patient, turn it off and on again to clear prior trends and alarm limits.
  - If it was monitoring this patient and you want to save this patient's trends and alarm limits, keep it turned on.
3. If the monitor is off, turn on the monitor.



**Caution** Make sure you acknowledge the "Confirm Patient?" prompt on your monitor before switching the monitor from a wireless connection to a hardwired connection (or vice versa). Failure to confirm the patient can result in a licensing error.

### To connect the patient to the monitor

1. Attach the lead wires to the electrodes.
2. Apply the electrodes to the patient.

3. Attach the cables to the monitor last, to optimize waveform interpretation during the initial Acuity System learning phase.

### To respond to the CONFIRM PATIENT? prompt


1. If you see the CONFIRM PATIENT? prompt, respond as follows:



**WARNING** Carefully verify the patient's ID and name before you respond to the CONFIRM PATIENT? prompt. If you assign another patient's ID number, the Acuity System could combine patients' Full Disclosure review information.

- If the indicated patient is the correct patient, press **YES**.  
The patient is confirmed at the Acuity Central Station.  
The Acuity System sends unit default alarm limits and unit settings to the patient monitor.
- If the indicated patient is incorrect, press **NO**.  
The MONITOR SETTINGS? prompt appears.

2. If you see the MONITOR SETTINGS? prompt, click one of these buttons:

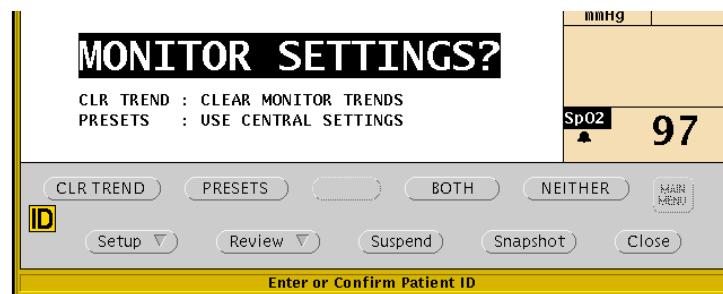

**CLR TREND**

- Clears current trend values.
- Keeps current alarm limits and displays.

**PRESETS**

- Keeps current trend values.
- Uses Acuity System Presets-- default alarm limits and displays.

**BOTH**

- Clears current trend values.
- Uses Acuity System Presets-- default alarm limits and displays.

**NEITHER**

- Keeps current trend values.
- Keeps current alarm limits and displays.

At the central station, the patient map icon remains in the yellow ID or RM unconfirmed state until the ID and room are confirmed.

### To enter patient information

1. Verify that the patient mode matches the monitored patient's age (Adult, Pediatric or Neonate).
  - For a Propaq CS monitor: If the mode shown at the top of the screen is incorrect, touch **SETUP, MORE, CHANGE**, and then touch the appropriate mode.
  - For a Propaq Encore monitor: Press **SETUP, MORE**, and check the patient mode. If the mode is incorrect, press **NEXT** to highlight the mode, and then press **CHANGE** until the correct mode is shown.
  - For a Welch Allyn 1500 Patient Monitor: If the mode shown in the Information field is incorrect, press the **Menu** key, use the trim knob to scroll to **Patient Mode**, press the trim knob to enter the menu, and select the appropriate mode.
2. If the patient is not confirmed, write down the patient's name, ID and room number, and ensure that the information is delivered to the Acuity Central Station for patient confirmation.

At the central station, the patient map icon remains in the yellow ID or RM unconfirmed state until the ID and room are confirmed.
3. (Optional) Customize alarm limits using patient monitor keys or the Alarms Setup window at the Acuity Central Station. See "[Adjust a patient's alarm limits](#)" on page 46.



**WARNING** When a patient is connected to a monitor, ensure that the default alarm limits are appropriate for the patient. The system uses Acuity System Presets values for Arrhythmia Analysis and ST Analysis limits and monitor default values for all other limits (if the monitor can save default values).

Before you set customized alarm limits for a patient, confirm the patient's ID and room number. Otherwise, customized limits might be lost.

## Start communication between a wireless monitor and the system

For information about patient monitors that are part of your Acuity System but are not shown in this chapter, consult the patient monitor manufacturer's literature.

**Note** If a wireless patient monitor operates outside of its wireless communication area, the monitor aggressively searches for connection with the central station and depletes its battery life at a faster rate. If it searches for an extended period of time (typically more than four hours), it can display a system fault error that necessitates turning the monitor off and on again.

Micropaq monitor



**WARNING** Do not attempt to monitor neonatal patients' ECGs using a Micropaq monitor. Micropaq monitors are intended for use with adult and pediatric patients only.

### To start Micropaq monitor communication with the Acuity System and connect the patient to the monitor

Perform steps in the following order to ensure that both the monitor and the Acuity Central Station display the default ECG leads.

1. Use a Micropaq monitor that is designated for use within the Acuity System network in which the patient will be monitored.
2. Install a newly charged battery in the battery compartment at the back of the Micropaq monitor, using a bottom-to-top approach.
3. Immediately determine the patient mode, which appears *briefly* on the first Micropaq monitor screen.  
If the patient mode does not match the patient age, change the mode at the Acuity Central Station. See "Change the Patient Mode" in [Table 2](#) on page 43.
4. Attach the lead wires to the electrodes.
5. Apply the electrodes to the patient.
6. Attach the cables to the monitor last, to optimize waveform interpretation during the initial Acuity System learning phase.

**To enter patient information**

1. If prompted, press  to highlight the unit in which the patient will be monitored, and then press  to select it.  
If the keys are locked, simultaneously hold down  and  to release the menus.
2. Scroll the patient list, and take one of these steps:
  - If you see the patient's ID/name, select it, and then select the patient's room number. The patient is confirmed at the Acuity Central Station.  
If you do not know the patient's room number, choose **Select room at Central**.
  - If you do not see the patient's ID/name, choose **Select patient at Central**.
3. If you did not enter a patient ID/name and room number, take these steps:
  - a. Write down the patient name, ID, room number and the four-digit serial number that is in the upper right corner of the Micropaq monitor screen.
  - b. Ensure that the information is delivered to the Acuity Central Station for patient confirmation.
4. (Optional) Customize alarm limits using patient monitor keys or the Alarms Setup window at the Acuity Central Station. See "["Adjust a patient's alarm limits"](#)" on page 46.



**WARNING** When a patient is connected to a monitor, ensure that the default alarm limits are appropriate for the patient. The system uses Acuity System Presets values for Arrhythmia Analysis and ST Analysis limits and monitor default values for all other limits (if the monitor can save default values).

Before you set customized alarm limits for a patient, confirm the patient's ID and room number. Otherwise, customized limits might be lost.

## Propaq LT monitor

**To start Propaq LT monitor communication with the Acuity System and connect the patient to the monitor**

1. Use a Propaq LT monitor that is designated for use within the Acuity System network in which the patient will be monitored.
2. Turn on the monitor.
3. In the top right area of the Propaq LT monitor screen, verify that the battery icon is green, which indicates that the battery is fully charged.  
If it is not green, monitor the patient with another (fully charged) monitor.
4. Attach the lead wires to the electrodes.
5. Apply the electrodes to the patient.
6. Attach the cables to the monitor last, to optimize waveform interpretation during the initial Acuity System learning phase.
7. Look for a steady green light at the top of the monitor to confirm that the monitor is communicating with the Acuity System.  
If the monitor is not communicating with the Acuity System, use another monitor.

### To enter patient information

1. Specify whether existing patient data will be saved.
  - If the patient matches the name on the Propaq LT monitor screen, press an arrow key to highlight **Continue Patient**, and then press  to select it. The patient's data is saved and a unit list appears.
  - If the patient does not match the name on the Propaq LT monitor screen, press an arrow key to highlight **Start New Patient**, and then press  to select it. Patient data is cleared and a unit list appears.

If the keypad, display or backlight is locked, simultaneously press ,  and .

2. Select the unit in which your patient will be monitored.

A patient list appears.

3. Scroll the patient list, and take one of these steps:

- If you see the patient's ID/name, take these steps:

- a. Select the ID/name.

A room list appears.

- b. Select the patient's room.

The patient is confirmed at the Acuity Central Station.

- If you do not see the patient's ID/name, take these steps:

- a. Write down the patient's name, ID, room number and the last four-digits of the serial number that is on the back of the Propaq LT monitor.

- b. Ensure that the information is delivered to the Acuity Central Station for patient confirmation.

At the central station, the patient map icon remains in the yellow ID or RM unconfirmed state until the ID and room are confirmed.

4. Along the top of the Propaq LT monitor screen, verify that the patient mode matches the monitored patient's age (Adult, Pediatric or Neonate).

If it does not match, take these steps:

- a. Select the current patient mode.

- b. Select the appropriate patient mode, and then follow the prompts.

5. (Optional) Customize alarm limits using patient monitor keys or the Alarms Setup window at the Acuity Central Station. See ["Adjust a patient's alarm limits"](#) on page 46.



**WARNING** When a patient is connected to a monitor, ensure that the default alarm limits are appropriate for the patient. The system uses Acuity System Presets values for Arrhythmia Analysis and ST Analysis limits and monitor default values for all other limits (if the monitor can save default values).

Before you set customized alarm limits for a patient, confirm the patient's ID and room number. Otherwise, customized limits might be lost.

## Wireless Propaq CS monitor



### To start wireless Propaq CS monitor communication with the system

1. Use a Propaq CS monitor that is designated for use within the Acuity System network in which the patient will be monitored.
2. Verify that the Acuity System network cable is *not* plugged into the Acuity System network connector on the monitor.
3. If the monitor is on, take one of these steps:
  - If it was not monitoring this patient, turn it off and on again to clear prior trends and alarm limits.
  - If it was monitoring this patient and you want to save this patient's trends and alarm limits, keep it turned on.
4. If the monitor is off, turn on the monitor.
5. If you see a low battery indicator on the top of the Propaq CS monitor screen, connect the monitor to AC power to charge it, or use another monitor.
6. Verify that ON NETWORK flashes in the upper left corner of the Propaq CS monitor screen.

This could take a few minutes. If ON NETWORK does not appear, use another monitor and contact qualified service personnel.

### To connect the patient

1. Attach the lead wires to the electrodes.
2. Apply the electrodes to the patient.
3. Attach the cables to the monitor last, to optimize waveform interpretation during the initial Acuity System learning phase.

**To enter patient information**

1. If you see the CONFIRM PATIENT? prompt, follow the prompts.  
For instructions, see “[To respond to the CONFIRM PATIENT? prompt](#)” on page 29
2. If the monitor displays a choice of units, scroll to highlight the unit in which the patient will be monitored, and then touch **Select**.  
A patient list appears.
3. Scroll the patient list, and take one of these steps:
  - If you see the patient’s ID/name in the patient list, take these steps:
    - a. Highlight the patient, and then touch **Select**.  
A room list appears.
    - b. If you know the patient’s room number, highlight the number, and then touch **Select**. The patient is confirmed at the Acuity Central Station.  
If you do not know the patient’s room number, highlight **Select room at Central**, and then touch **Select**.
  - If you do not see the patient’s ID/name in the patient list, highlight **Select patient at Central**, and then touch **Select**.
4. Along the top of the Propaq CS monitor screen, verify that the patient mode matches the patient’s age (Adult, Pediatric or Neonate).  
If the patient mode does not match, touch **SETUP, MORE, CHANGE**, and then touch the appropriate mode.
5. If you did not enter a patient ID/name and room number, take these steps:
  - a. Write down the patient’s name, ID, room number and the last four-digits of the serial number that is under the handle of the Propaq CS monitor.
  - b. Ensure that the information is delivered to the Acuity Central Station for patient confirmation.  
At the central station, the patient map icon remains in the yellow ID or RM unconfirmed state until the ID and room are confirmed.
6. (Optional) Customize alarm limits using patient monitor keys or the Alarms Setup window at the Acuity Central Station. See “[Adjust a patient’s alarm limits](#)” on page 46.



**WARNING** When a patient is connected to a monitor, ensure that the default alarm limits are appropriate for the patient. The system uses Acuity System Presets values for Arrhythmia Analysis and ST Analysis limits and monitor default values for all other limits (if the monitor can save default values).

Before you set customized alarm limits for a patient, confirm the patient’s ID and room number. Otherwise, customized limits might be lost.

## Important considerations: connecting a monitor to the Acuity System

Related to specific patient populations



**WARNING** Always check patient mode in the border of the Waveform Window or Virtual Monitor. Incorrect patient mode can result in unsuitable alarm settings, inaccurate heart rate readings and inappropriate arrhythmia and ST-segment analyses.

Related to wireless monitoring



**WARNING** Use wireless monitors only on patients who can tolerate intermittent monitoring interruptions. All wireless systems are prone to intermittent signal dropout. During signal dropout periods, arrhythmia and ST-segment analyses cannot be performed, and the Acuity System does not show alarms or alerts.



**WARNING** Check for a light above the monitor screen or a wireless icon (Ψ) on the screen to ensure that communication is established between the monitor and the Acuity System.  means communication is not established. If you cannot establish communication, use another monitor, and contact qualified service personnel.



**WARNING** Auto-reboots occur and wireless connection is occasionally disrupted. During this period, the bedside monitors continue to provide their primary alarming functions. Auto-reboots occur infrequently, due to poor environmental conditions. Failure to perform preventative maintenance can increase the frequency of occurrence.

Related to hardwired monitoring



**WARNING** Ensure that you connect the proper monitor network cable to the proper wall jack. Using the wrong network cable or the wrong wall jack connector could damage the monitor, or not send data to the Acuity System. Ensure that the monitor is properly connected to the network before you start monitoring the patient.

Related to trends and alarm limits



**WARNING** Before you use a monitor on a new patient, always turn off the monitor for a few seconds, and then turn it on again. This clears the prior patient's trends and alarm limits.



**WARNING** Always check alarm limits when a monitor reestablishes communication with the Acuity System. If you change limits at a monitor while it is not communicating with the Acuity System (for example, during transport or signal dropout), when you reestablish communication with the system, the limits might change to Acuity System Presets values.

Related to leads, cables and the ECG display



**WARNING** Ensure that the Acuity System network cable is neither damaged nor broken. An Acuity System cable is the sole link between a hardwired monitor and an Acuity System.



**WARNING** Always replace disconnected lead wires immediately. If a lead wire becomes disconnected and a second lead is not available, the Virtual Monitor might show the same lead for ECG1 and ECG2.



**WARNING** Carefully monitor lead-wire connections of patients prone to arrhythmia events. If a lead wire disconnects during an event, the Acuity System's ability to accurately detect the event can be compromised.



**WARNING** If your system includes arrhythmia analysis, and if you connect, change or move an electrode, ensure that a RELEARN alert occurs at the patient monitor and the virtual monitor.

Moving or changing an electrode can change the beat morphology. If the system does not learn the new morphology, it might not alarm or it might cause false alarms. The relearn process establishes the new morphology as the normal ECG rhythm for arrhythmia and ST-segment analyses.

- If a RELEARN alert occurs after changing or moving an electrode, carefully evaluate the new ECG rhythm and the current ST segment for all active leads to make sure that the Acuity System has learned an appropriate rhythm. For evaluation instructions, see ["Respond to a RELEARN alert" on page 91](#).
- If a RELEARN alert does not occur after changing or moving an electrode, initiate a relearn event. For instructions, see ["To initiate relearn of a patient's ECG rhythm for arrhythmia and ST-segment analyses" on page 65](#).



**WARNING** Minimize patient movement during a RELEARN, as movement creates noise during the reading. If the system learns an abnormal rhythm or learns a rhythm during noise, it designates the learned rhythm as normal. Thereafter, rhythms of this type might not trigger an alarm. Ensure that the patient remains still for 5 minutes after the RELEARN before allowing them to move.



**WARNING** Ensure these things to minimize false HR, Arrhythmia Analysis and ST Analysis alarms, and to achieve optimal event detection and analysis:

- ECG cable, lead wires and electrodes are undamaged.
- Patient's skin is properly prepared.
- Electrodes are placed using standard good practices.
- 5-wire ECG cable is used. A 3-wire cable limits arrhythmia and ST-segment analyses to a single lead, and ST analysis is disabled when a lead failure occurs.
- LL electrode is connected. Otherwise, only one ECG lead is available and arrhythmia and ST-segment analyses are effected.
- Patient monitor and Virtual Monitor display these things:
  - HR numeric and ECG waveform
  - Non-noisy signal. If signal is noisy, reduce patient movement and increase distance from other electrical devices.
  - Correct patient mode for the patient
- Virtual Monitor ECG 1 and 2 display these things:
  - ECG waveform
  - Waveform amplitude at least 160  $\mu$ V, peak-to-peak
  - QRS complex amplitude at least twice the P or T wave amplitude

# Enter and confirm a patient's ID or room at the central station

A patient's Acuity System window borders and icons are in a yellow (alert) state if the patient's ID and room number have not been confirmed.

You can scan or type missing patient information and confirm the information at the central station in the Patient ID Setup window.

Once the information is confirmed, the patient's window borders and icons change to the green, "patient monitoring OK" state. If the borders and icons do not turn green, another alert or patient alarm is occurring.


## To enter patient information

At the Acuity Central Station screen, hardwired monitors are identified by room number, and wireless monitors are identified by their serial numbers.

**Note** The Acuity System does not accept these scanned items: Double quotation marks, middle names (one middle initial is accepted) and spaces and periods.

1. Click the patient's **RM** or **ID** icon in the patient's Waveform Window or on the map.

The Patient ID Setup windows appear.

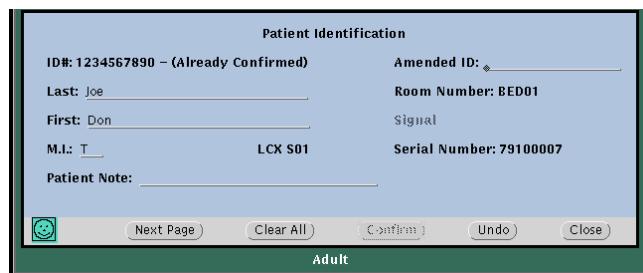

Patient ID window 1

2. Scan or type the patient's ID number in the ID# field.
3. Press the Tab or Enter key on your keyboard to advance a line.


If you are prompted, this patient ID was pre-entered via the hospital central information system, the Acuity Patient List window, a wireless monitor, or a mobile device running AcuityLink Clinician Notifier software.

If the prompt information is correct, click **Accept** and other information fills in.

4. If necessary, scan or type the patient's name, and press Tab or Enter to advance.
5. If necessary, scan or type the room number.  
Up to five characters, including numbers, letters and dashes, are accepted.
6. Check the listed patient monitor model and serial number to ensure that they indicate your patient's monitor.

7. Click **Next Page** to enter additional patient demographics such as date of birth, gender, height, weight, ethnicity, and medications.

The second page of the Patient ID setup window appears.

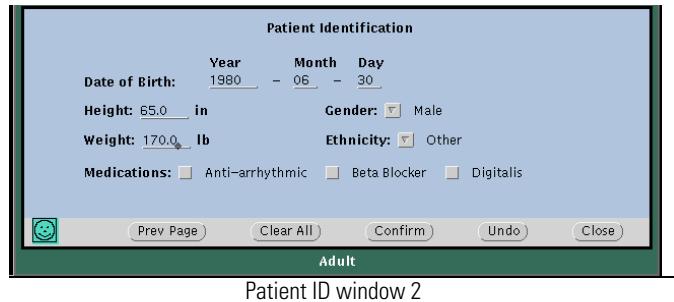

### To confirm the patient

1. Carefully review your entries for accuracy.
2. Click **Confirm**.

If a prompt appears telling you that the same ID number has been previously used, carefully review the ID number, and then take one of these steps:

- Click **Do Anyway** to confirm the ID with the name that you have entered. Review data is combined.
- Click **Go Back** to return to the Patient ID Setup window, revise the ID or name, and then click **Confirm** again.

You have completed the patient ID confirmation process. The Acuity System sends unit default alarm limits and settings to the patient monitor.

3. (Optional) Customize alarm limits. For details, see “Adjust a patient’s alarm limits” on page 46.



## 4

# Adjust monitoring settings and patient information

## Set up typical monitoring at the Virtual Monitor

This table presents typical monitoring functions that you can set up at the Acuity Central Station using the Virtual Monitor.

**Note** When a patient is intentionally disconnected from the central station, or a patient connected to the Welch Allyn 1500 Patient Monitor is in Standby mode, the patient's waveform display resets to the default view when reconnected to the central station.

**Table 2. Typical monitoring functions at the Virtual Monitor**

### NIBP and SpO<sub>2</sub> spot checks

Task	Clicks at Virtual Monitor	Notes
Start an NIBP measurement (except for a Micropaq monitor).	1. NIBP, 2. START	Can be started also at the patient monitor.
(Propaq LT monitor) Start an SpO <sub>2</sub> spot check measurement.	1. SpO <sub>2</sub> , 2. START	SpO <sub>2</sub> Spot Mode must be turned on at the monitor.

### Patient mode and alarms

(Micropaq monitor) Change the patient mode.	1. MAIN MENU 2. MORE 3. MORE 4. NEXT 5. CHANGE	You can change a Micropaq monitor's patient mode only at the Acuity Central Station. For all other patient monitors, you can change patient mode only at the patient monitor.   <b>WARNING</b> Always check patient mode in the border of the Waveform Window or Virtual Monitor. Incorrect patient mode can result in unsuitable alarm settings, inaccurate heart rate readings and inappropriate arrhythmia and ST-segment analyses.
Temporarily suppress the potential for audible alarm tones.	1. SUSPEND 2. When ready to return to normal monitoring: RESUME	Although any alerts for this patient are displayed, SUSPEND suppresses alert <i>tones</i> for 90 seconds.

**Table 2. Typical monitoring functions at the Virtual Monitor****Response time: SpO<sub>2</sub> and CO<sub>2</sub>**

Task	Clicks at Virtual Monitor	Notes
(Propaq Encore and CS monitors) Set SpO <sub>2</sub> response time.	1. SpO <sub>2</sub> or SpO <sub>2</sub> /CO <sub>2</sub> 2. SpO <sub>2</sub> 3. MORE 4. RESPONSE	Can be changed also at the patient monitor.
(Propaq Encore and CS monitors) Set CO <sub>2</sub> response time.	1. SpO <sub>2</sub> /CO <sub>2</sub> 2. CO <sub>2</sub> 3. MORE 4. RESPONSE	Can be changed also at the patient monitor.

**Waveforms and pacer display**

Adjust sweep speed of all waveforms except CO <sub>2</sub> and RESP.	1. MAIN MENU 2. MORE 3. MORE 4. NEXT 5. CHANGE	Waveform sweep speed changes in the Virtual Monitor and Waveform Window.  You can adjust RESP sweep speed separately in this window, and CO <sub>2</sub> sweep speed changes with it.
Optimize all waveform scales (except CO <sub>2</sub> ).	1. MAIN MENU 2. MORE 3. STATSCALE	Waveforms are adjusted for best display in the Virtual Monitor and Waveform Window.
Turn on or turn off the pacer display.	<p>No Arrhythmia Analysis option: 1. ECG or ECG/RESP 2. MORE, (MORE), (MORE) 3. NEXT 4. CHANGE</p> <p>Arrhythmia Analysis option: 1. Setup 2. Arrhythmia Alarms 3. Pacer Display</p> <p>Also set Analyze Pacer for arrhythmia monitoring. For instructions, please see <a href="#">page 62</a>.</p>	 <p>The pacer display is shown as a dashed line in the waveform areas of the Virtual Monitor, Waveform Window and Waveforms Review window.</p> <p><b>WARNING</b> Keep <i>all</i> pacemaker patients under close observation. Rate meters might continue to count the pacemaker rate during occurrences of cardiac arrest or some arrhythmias. Do not rely solely upon rate meter alarms.</p> <p><b>WARNING</b> Always turn on Analyze Pacers for paced patients, and always turn off Analyze Pacers for non-paced patients. The Acuity System analyzes arrhythmias based on whether the Analyze Pacers setting is on or off. The Analyze Pacers setting is Off by default.</p>

**Table 2. Typical monitoring functions at the Virtual Monitor**

<b>Lead selection: ECG and respiration</b>		
<b>Task</b>	<b>Clicks at Virtual Monitor</b>	<b>Notes</b>
Change the RESP lead.	1. ECG/RESP 2. MORE 3. RESP LEAD	Lead indicators are shown in the respiration waveform areas of the Virtual Monitor and Waveform Window.

Select or change ECG lead for display.  Note: If a Virtual Monitor represents a Propaq Encore, Propaq CS or Welch Allyn 1500 Patient Monitor, the leads that you select for ECG 1 and ECG 2 are used also for arrhythmia analysis.  For details regarding leads used for arrhythmia and ST-segment analyses, for all types of patient monitors, see <a href="#">Table 35</a> on page 191 and <a href="#">Table 36</a> on page 193.	1. ECG or ECG/RESP 2. ECG1 LEAD 3. ECG2 LEAD	<p><b>Available leads:</b> Monitors using 5-lead ECG cables: Leads I, II, III, aVR, aVL, aVF and V</p> <p><b>Lead indicators:</b> Indicators are shown in ECG waveform areas of each patient's Virtual Monitor and Waveform Window, and in the Wave Select status window.</p> <p>If you want to review waveforms from all leads, view the patient's Waveforms Review window. For instructions, see <a href="#">page 104</a>.</p> <p><b>Propaq Encore, and Propaq CS monitors--changing leads when they are using two lead vectors:</b> If you change the ECG1 Lead from a V lead to a limb lead, the ECG2 Lead changes to a V lead.</p> <p>If you change the ECG1 Lead from a limb lead to a V Lead, the ECG2 Lead changes to Lead II.</p> <p><b>Welch Allyn 1500 Patient Monitor, Propaq LT monitor--leads shown at Acuity System and patient monitor:</b> Select the same leads at both places to view ECG information from the same leads in both places.</p> <p>A lead failure for Propaq LT monitor patients can result in lead selections that are different at the Acuity Central Station.</p>
--	--	---



**WARNING** Ensure these things to minimize false HR, Arrhythmia Analysis and ST Analysis alarms, and to achieve optimal event detection and analysis:

- ECG cable, lead wires and electrodes are undamaged.
- Patient's skin is properly prepared.
- Electrodes are placed using standard good practices.
- 5-wire ECG cable is used. A 3-wire cable limits arrhythmia and ST-segment analyses to a single lead, and ST analysis is disabled when a lead failure occurs.
- LL electrode is connected. Otherwise, only one ECG lead is available and arrhythmia and ST-segment analyses are effected.
- Patient monitor and Virtual Monitor display these things:
  - HR numeric and ECG waveform
  - Non-noisy signal. If signal is noisy, reduce patient movement and increase distance from other electrical devices.
  - Correct patient mode for the patient
- Virtual Monitor ECG 1 and ECG 2 display these things:
  - ECG waveform
  - Waveform amplitude at least 160  $\mu$ V, peak-to-peak
  - QRS complex amplitude at least twice the P or T wave amplitude



**WARNING** Minimize patient movement during a RELEARN, as movement creates noise during the reading. If the system learns an abnormal rhythm or learns a rhythm during noise, it designates the learned rhythm as normal. Thereafter, rhythms of this type might not trigger an alarm. Ensure that the patient remains still for 5 minutes after the RELEARN before allowing them to move.

# Adjust a patient's alarm limits

In the Alarms Setup window, you can adjust a patient's alarm limits individually or as a group.




**WARNING** Before you set customized alarm limits for a patient, confirm the patient's ID and room number. Otherwise, customized limits might be lost.

## To adjust a patient's alarm limits

1. In the patient's Virtual Monitor, click **Setup, Alarms**.

The Alarms Setup window appears.

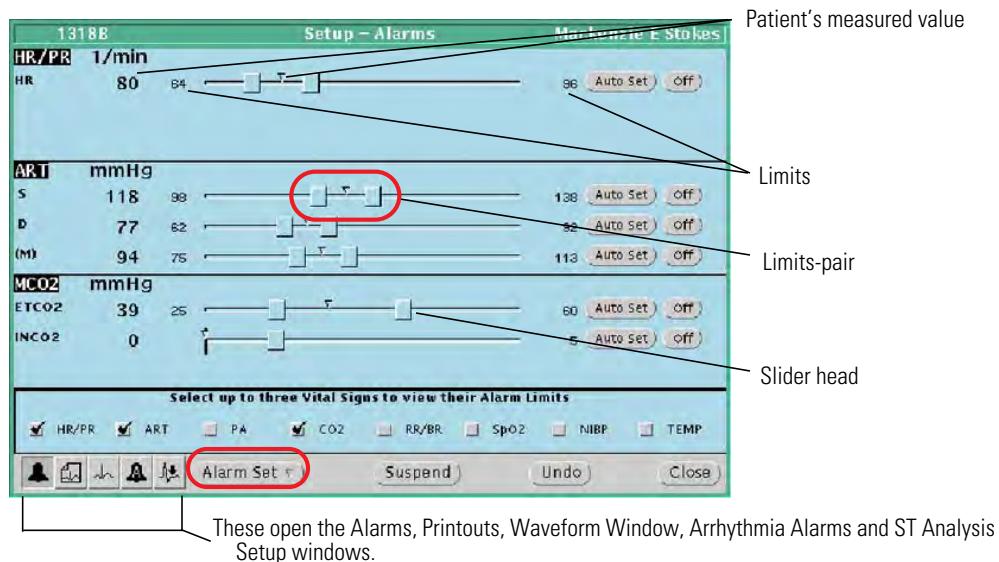

2. Check vital-sign boxes along the bottom of the screen to view corresponding alarm limits.
3. Adjust alarm limits in one of these ways:

- Adjust limits for one vital sign at a time.

Click **On** or **Off** next to the limits-pair to adjust the pair. Click **On** to turn the alarm limits on, and click **Off** to turn the alarm limits off.

Click and move a slider head to set or turn off a lower or upper limit.

Click **Auto Set** to set a limits-pair close to the patient's current vital-sign values.

- Reset limits for all vital signs at once.

Click **Alarm Set**, and then click one of these options:

**Stat Set** sets all limits based on the patient's current vital-sign values.

**Presets** sets all limits to preset values. For details, see [Table 34](#) on page 190.

**All Alarms On** turns on any limits that are off, with the values that they last held.

## Important considerations: adjusting alarm limits



**WARNING** Patients for whom alarming has been turned off must be kept under close physical surveillance. Turning off alarming disables both audio and visual alarm indicators.



**WARNING** Do not use Stat Set or Auto Set for a patient in an alarm state! Use these buttons only when your patient's vital sign values are in an acceptable range. The buttons adjust alarm limits based on the patient's current vital-sign values.



**WARNING** Always check alarm limits when a monitor reestablishes communication with the Acuity System. If you change limits at a monitor while it is not communicating with the Acuity System (for example, during transport or signal dropout), when you reestablish communication with the system, the limits might change to Acuity System Presets values.



**WARNING** Minimize patient movement during a RELEARN, as movement creates noise during the reading. If the system learns an abnormal rhythm or learns a rhythm during noise, it designates the learned rhythm as normal. Thereafter, rhythms of this type might not trigger an alarm. Ensure that the patient remains still for 5 minutes after the RELEARN before allowing them to move.



**WARNING** False alarms may occur in some situations. You must understand and address the cause of the false alarms whenever possible to eliminate the possibility of repeated false alarms and alarm fatigue, which might result in a failure to respond to an actual alarm situation.



**WARNING** Central station alarms and other events can go unnoticed if clinical personnel are not present at the central station or if interruptions occur in power or system operations.



**WARNING** The leading cause of patient death or serious injury reported with the use of patient monitoring equipment is failure to respond to alarms notifying the user of an adverse change in patient condition. If you are relying on visual alarm notifications, maintain a clear line of sight and remain within 4 meters of the central station. If you are relying on audio alarm notifications, make sure that you can hear audio alarms from where you are. Set the volume as needed considering the environment and ambient noise levels. Verify that the alarm is audible to a clinician working at the maximum distance from the central station.

## Adjust general printing settings

This section presents information about these tasks:

- Setting preferences for a patient's Acuity Central Station vital-signs printouts.
- Coordinating printers and print jobs for the *entire* Acuity System.

If you want to set these preferences instead, see these pages:

- For arrhythmia event alarm printing, see "[Adjust preferences for a patient's arrhythmia alarming](#)" on page 61.
- For ST-segment deviation alarm printing, see "[Set alarm preferences for ST Analysis](#)" on page 74.


## Adjust preferences for a patient's central station printouts

This section presents the Printouts Setup window, in which you can specify details regarding automatic central station printouts.

### To adjust preferences for a patient's printouts

1. In the patient's Virtual Monitor, click **Setup, Printouts**.

The Printouts Setup window appears.

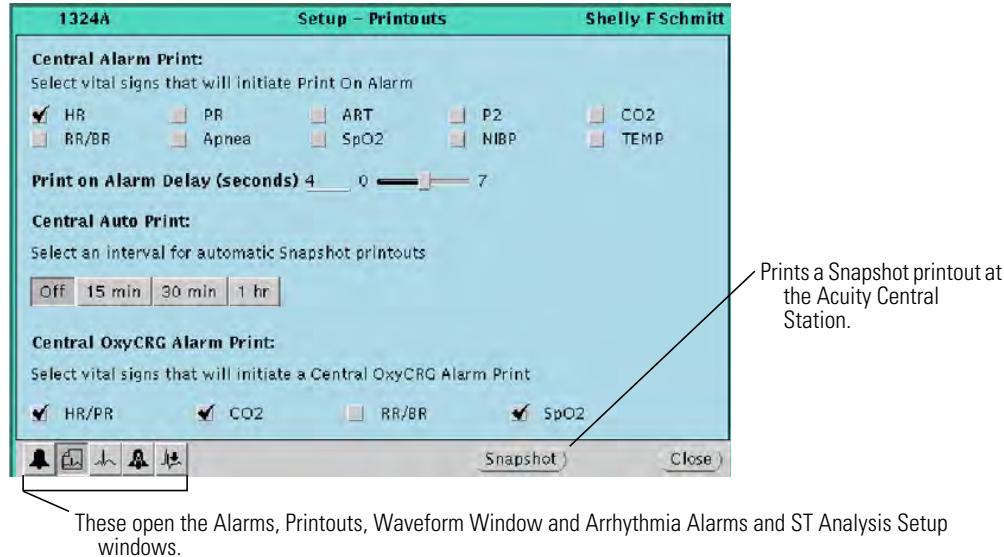

2. Set preferences in these areas of the window:

- Central Alarm Print: Check a vital-sign box to set automatic printing of an alarm print if an alarm occurs for that vital-sign.
- Print on Alarm Delay: Move the slider to set the time delay (in seconds) between an alarm and the onset of an alarm printout.

If the duration of an alarm is shorter than this delay period, no alarm print is generated.

- Central Auto Print: Click an interval for automatic snapshot printouts (Auto Prints) to occur.
- Central OxyCRG Alarm Print: Check a vital-sign box to set automatic printing of an OxyCRG print if an alarm occurs for that vital sign.

OxyCRG printouts combine HR/PR, CO<sub>2</sub>, RR/BR and SpO<sub>2</sub> vital signs, if active.

**Note** On some monitors, RR/BR is labeled RRECG/RRCO<sub>2</sub>. RR and RRECG are respiration rates derived from ECG, while BR and RR<sub>CO</sub> are respiration rates derived from CO<sub>2</sub>.


## Coordinate system print jobs and central station printers

This section presents the Acuity Central Station Printer window, from which you can coordinate printers and pending print jobs for the entire Acuity System.

### To coordinate print jobs

1. On the Acuity Central Station map where the Acuity Central Station icon is located, click .

The Print Jobs view of the Central Station Printer window appears.

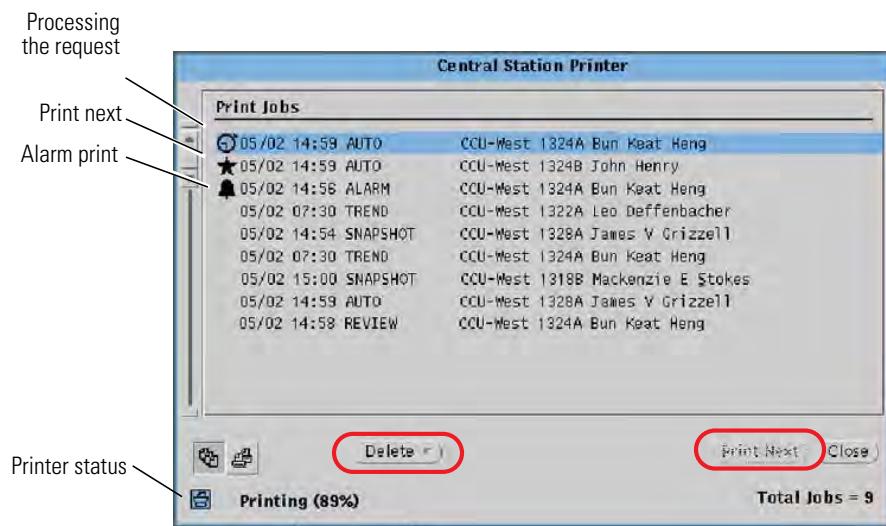

2. Click a print job to highlight it.
3. Click any of these buttons:
  - Click **Print Next** to print the job next.
  - Click **Delete**, and then **Delete Selection** to delete the print job.

**Note** If  appears beside a print job, see [Table 18](#) on page 163 for troubleshooting information.

### To coordinate printers

1. Click .

The Printers View appears.

2. Do any of these things:
  - Read messages to check printer status.
  - Click a printer to highlight it, and then click **Disable** to disable the printer or **Enable** to enable the printer.

# Adjust a patient's waveform displays

You can select waveforms for display in a patient's Virtual Monitor and Waveform Window.

**Note** Only three waveforms can be displayed at a time in the Virtual Monitor. These waveforms are displayed based on their priority. Make sure you turn off all waveforms you do not want displayed. For a list of waveform priorities, see "Virtual Monitor" on page 189 or "Waveform Window" on page 190.

## To adjust waveform displays for a patient's Virtual Monitor


You can select or deselect up to three vital-sign waveforms for viewing.

1. In the patient's Virtual Monitor, click **MAIN MENU, MORE, WAVE SEL.**
2. Click **NEXT** to highlight a waveform.
3. Click **ON/OFF**.

## To adjust waveform displays for a patient's Waveform Window

1. In the patient's Virtual Monitor, click **Setup, Waveform Window**.

The Waveform Window Setup window appears.

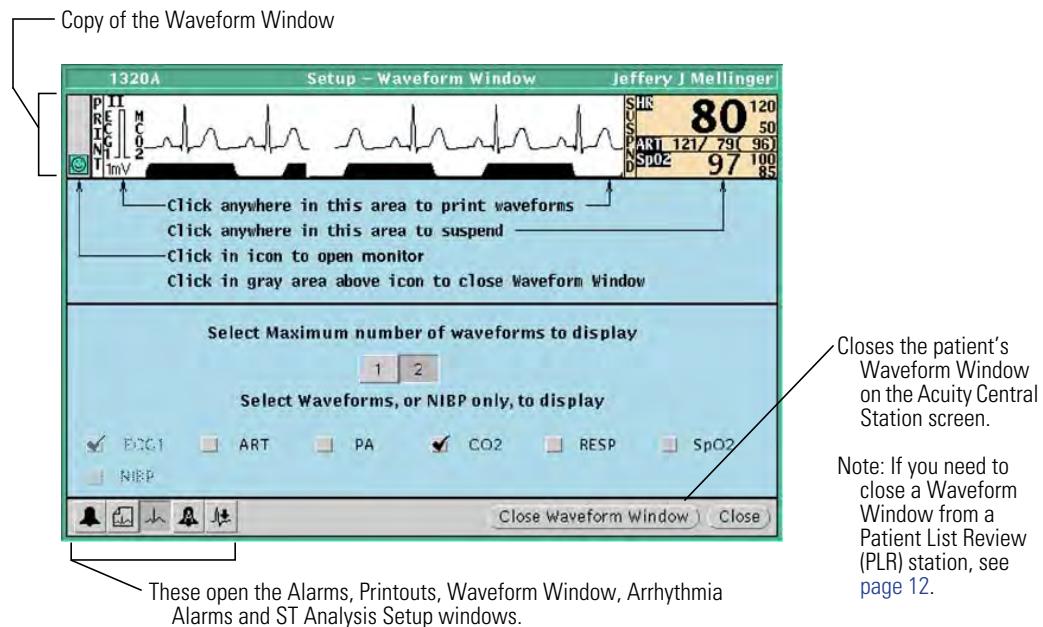

2. Click **1** or **2** to select the number of waveforms to display in the Waveform Window.
3. Check a vital-sign box to display a waveform.

If ECG is monitored, ECG1 is always displayed and cannot be deselected.

NIBP is selected for display if it is the only vital sign monitored.

# Arrhythmia Analysis option

The Acuity System Arrhythmia Analysis module analyzes patient ECG data to detect specific changes in cardiac rhythms. The system uses up to three ECG leads to detect normal beats, ventricular beats and to analyze arrhythmias.

The Arrhythmia Analysis options are not intended for use on neonatal patients, and arrhythmia analysis is disabled in the Neonate mode.

## Arrhythmia Analysis terms

These terms are used throughout this section:

**alarm level.** A setting that indicates an individual arrhythmia type's priority and associated audible alarm tone. Alarm level designations can be lethal, high, medium, low, or off.

**arrhythmia alarm limit.** An appropriate numeric threshold for an arrhythmia type.

**arrhythmia type.** A specific arrhythmia category.

**artifact.** A disturbance or movement of the patient or sensors that adds errors to measured parameters. Caused by muscle movement or shivering, electrical interference, or vibration.

**event.** The occurrence of an arrhythmia event, arrhythmia or ST-segment relearn event, learning done event or snapshot printout event.

**event marker.** A notation that indicates the time when an event occurred. Event markers appear in most review windows and in some printouts. Event notations are ❤ for arrhythmia alarms, ❤ for arrhythmia events, and ▼ for relearn and snapshot events.

**lethal arrhythmia.** The Acuity System defines VFib (ventricular fibrillation), asystole, and VTach (ventricular tachycardia) as lethal arrhythmias. In the Arrhythmia Alarms Setup window, the alarm level for these arrhythmia types is permanently set to LETHAL, and alarming cannot be turned off.

**PVC.** Premature ventricular contraction.

**relearn.** An Arrhythmia Analysis function that causes the Acuity system to relearn a patient's normal ECG rhythm. The Acuity System uses the relearned rhythm as a guideline to identify arrhythmia events (arrhythmia relearn) and to analyze deviation of the ECG ST-segment offset (ST relearn).

### When relearn occurs for a patient

Both arrhythmia and ST relearn events occur after these things:

- ST/Arr Relearn is clicked in the Arrhythmia Alarms Setup window.
- Single ECG is clicked in the Arrhythmia Alarms Setup window
- Patient connection, some lead changes or lead failures, system restart

Only an arrhythmia relearn event occurs after these things:

- RELEARN is clicked in the Arrhythmia Alarms Setup window. A RELEARN button (instead of an ST/Arr Relearn button) indicates that the system does not include the ST Analysis option.
- Analyze Pacers is clicked in the Arrhythmia Alarms Setup window. ST Analysis is disabled when Analyze Pacers is enabled.

Only an ST relearn event occurs after this:

- ST RELEARN is clicked in the ST Analysis Setup window.



**WARNING** Minimize patient movement during a RELEARN, as movement creates noise during the reading. If the system learns an abnormal rhythm or learns a rhythm during noise, it designates the learned rhythm as normal. Thereafter, rhythms of this type might not trigger an alarm. Ensure that the patient remains still for 5 minutes after the RELEARN before allowing them to move.

### What occurs in a patient's windows during and after a relearn event

- Virtual Monitor and Waveform Window: In all instances except clicking ST RELEARN, a visual RELEARN alert occurs. HR is taken from the patient monitor instead of from the arrhythmia software, and real-time waveforms display as usual.
- ST Analysis Setup window: The waveform slice displays NO VALID BEATS, and the Acuity System can take up to 30 seconds to update the waveform.
- Most review windows and some printouts: Relearn and Learning Done event markers (▼) appear.

## Arrhythmia event definitions

The Acuity System Arrhythmia Analysis module is not an atrial arrhythmia analysis package.

Depending upon which arrhythmia analysis option that your Acuity System includes, your system detects one of these groups of arrhythmia types:

- Lethal Arrhythmia Analysis option: The system detects only lethal arrhythmias (VFib, asystole and VTach).
- Full Arrhythmia Analysis option: The system detects lethal arrhythmias (VFib, asystole and VTach) and all of the arrhythmia types shown in [Table 5](#) on page 56.

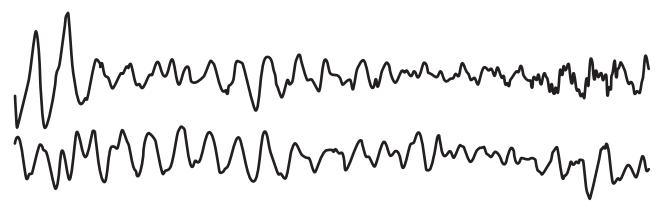
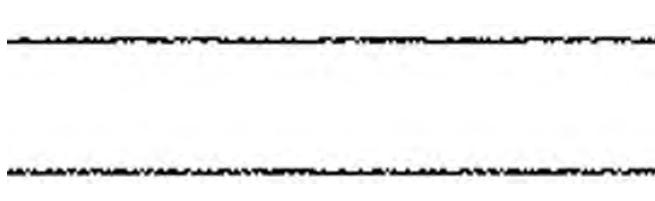
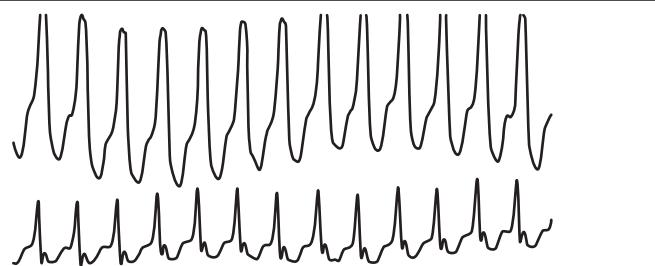
Normal sinus rhythm

**Table 3. Normal sinus rhythm**

QRS	Normal sinus rhythm example

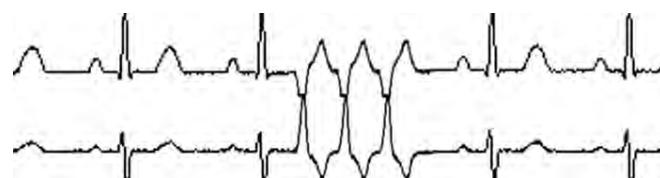
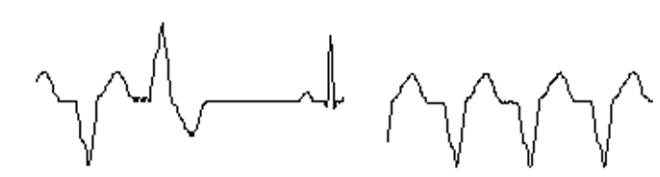
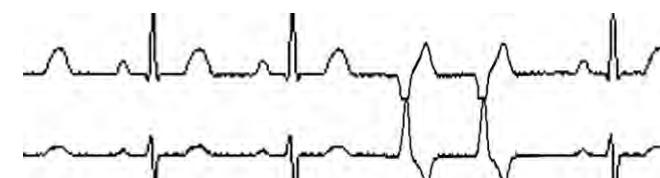
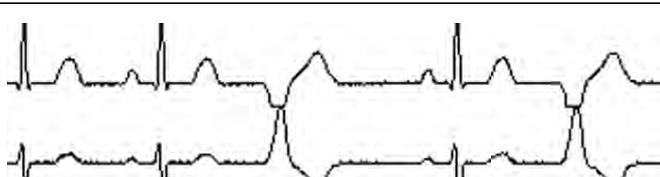
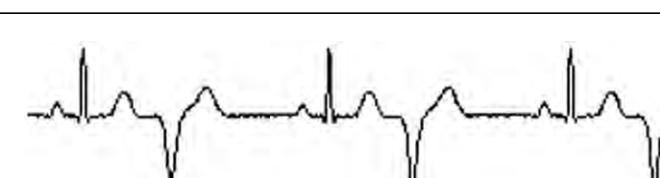
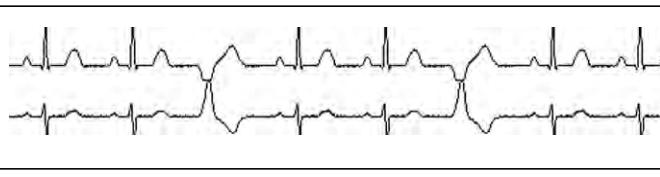
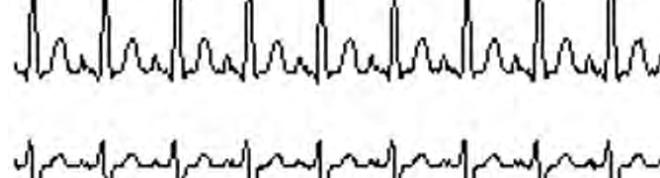
Lethal Arrhythmia Analysis option: events detected

**Table 4. Definitions of lethal arrhythmia events<sup>a</sup>**





Arrhythmia event and definition	Waveform example
<b>VFib<sup>b</sup> (ventricular fibrillation)</b> Chaotic quivering of the ventricles accompanied by rapid irregular waves but no formed QRS complexes.	
<b>Asystole</b> Absence of any detected beat for 4 or more seconds.	
<b>VTach (ventricular tachycardia)</b> A run of premature ventricular beats that exceeds the PVC run alarm limit and that meets or exceeds the patient's VTach alarm limit.  <b>Note:</b> The American Heart Association describes sustained and nonsustained ventricular tachycardia as follows: Ventricular tachycardia can be referred to as sustained or nonsustained. Sustained refers to an episode that lasts at least 30 seconds and generally requires termination by antiarrhythmia drugs, antitachycardia pacing techniques or electrical cardioversion. Nonsustained ventricular tachycardia suggests that the episodes are short (three beats or longer) and terminate spontaneously.	
a. Alarming for lethal arrhythmias cannot be turned off. b. VFib is detected within 6 seconds if the waveform fulfills these conditions: Absence of fast slew-rate activity (QRS-like activity) Wave rate higher than 130 bpm Average peak-to-peak wave amplitude higher than 200 $\mu$ V Wave period variance higher than a specific threshold	

Full Arrhythmia Analysis option: additional events detected

**Table 5. Full Arrhythmia Analysis option: events detected in addition to lethal events**

Arrhythmia event and definition	Waveform example
<b>PVC run (ventricular run)</b>	<p>A run of three to six consecutive, premature ventricular beats that meets or exceeds the patient's VTach alarm limit.</p> 
<b>VRhythm (ventricular rhythm)</b>	<p>A run of successive ventricular beats that is less than the V Tach alarm limit, and the number of successive ventricular beats is greater than or equal to three.</p> 
<b>Couplet</b>	<p>Two consecutive ventricular beats that are preceded and followed by a normal beat.</p> 
<b>PVC/min</b>	<p>Premature ventricular beats that are greater or equal to the patient's PVC/min alarm limit.</p> 
<b>Bigeminy</b>	<p>Three or more successive cycles consisting of a normal beat followed by a premature ventricular beat. Bigeminy is independent of the average heart rate.</p> 
<b>Trigeminy</b>	<p>Three or more successive cycles of two normal beats followed by a premature ventricular beat. Trigeminy is independent of the average heart rate.</p> 
<b>Tachycardia</b>	<p>A HR greater than or equal to the patient's tachycardia alarm limit. If the tachycardia limit is decreased past the HR high limit, the HR high limit will decrease to a value equal to the tachycardia limit.</p> 

**Table 5. Full Arrhythmia Analysis option: events detected in addition to lethal events**

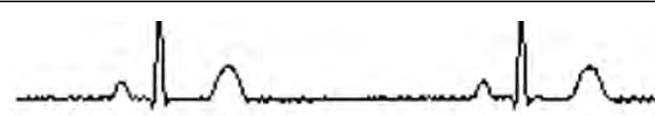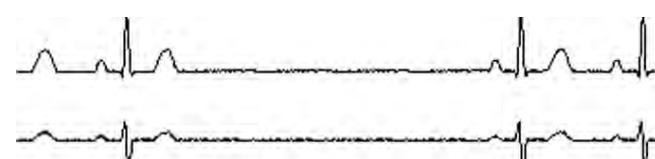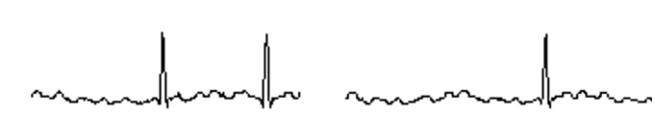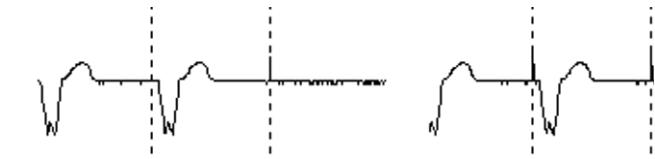Arrhythmia event and definition	Waveform example
<b>Bradycardia</b>	
<b>Pause</b>	
<b>Irregular (irregular rhythm)</b>	
<b>NonCapture (pacemaker noncapture)</b>	

## Open an Arrhythmia Alarms Setup window

In the Arrhythmia Alarms Setup window, you can adjust some or all these preferences for a patient, depending on your Arrhythmia Analysis option:

- Turn off alarming for all arrhythmia types except the lethal arrhythmias (VFib, asystole and VTach).
- Adjust alarm limits for one arrhythmia type at a time or set all arrhythmia limits to Presets values.
- Adjust alarming preferences (alarming level priority, minimum duration that an irregular rhythm arrhythmia must occur for alarming, and Print on Alarm).
- Set special preferences for patients with pacemakers.
- Initiate relearn of a patient's ECG rhythm for arrhythmia and ST-segment analyses.




**WARNING** Before you set customized alarm limits for a patient, confirm the patient's ID and room number. Otherwise, customized limits might be lost.

### To open an Arrhythmia Alarms Setup window

- In the patient's Virtual Monitor, click **Setup, Arrhythmia Alarms**.

The Arrhythmia Alarms Setup window appears.

If your window appears abbreviated, your system includes the Lethal Arrhythmia Analysis option (lethal arrhythmia detection, only).

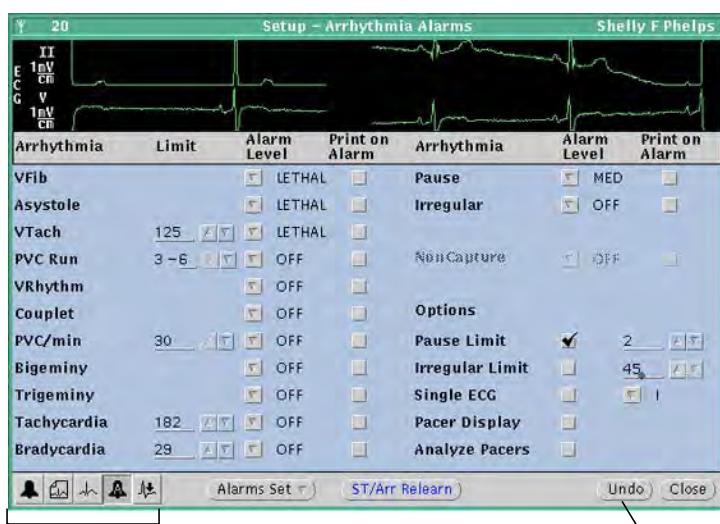

These open the Alarms, Printouts, Waveform Window, Arrhythmia Alarms and ST Analysis Setup windows.

Undoes what has been done since the window was opened, except relearn.

## Turn off alarming for all arrhythmia types except lethal arrhythmias




**WARNING** Turning off alarming for arrhythmia types and ST Analysis disables both audio and visual alarm indicators. Although alarming for lethal arrhythmias cannot be turned off, patients susceptible to arrhythmias must be kept under close physical surveillance if their alarming has been turned off for any arrhythmia types.

### To turn off alarming for all arrhythmia types except lethal arrhythmias (VFib, asystole and VTach)

1. In the patient's Virtual Monitor, click **Setup, Arrhythmia Alarms**.

If your window appears abbreviated, your system detects lethal arrhythmias only. Alarming for lethal arrhythmia types cannot be turned off.

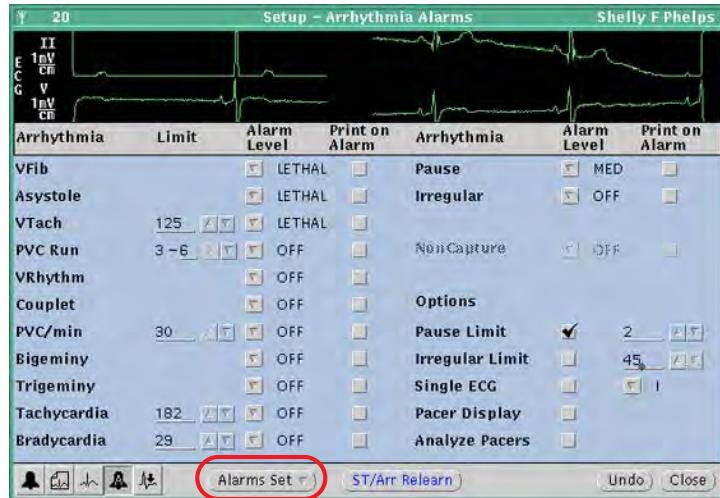

2. Click **Alarms Set, Arrhythmia Off**.

In the patient's review windows, arrhythmia event markers appear as . However, lethal arrhythmia events still appear as .

## Adjust a patient's arrhythmia alarm limits




**WARNING** If you set the bradycardia alarm limit higher than the HR lower limit, the Acuity System adjusts the HR lower limit to the new bradycardia limit. If you set the tachycardia limit lower than the HR upper limit, the Acuity System sets the HR upper limit to the new tachycardia limit. In either case, a message appears in the upper border of the Arrhythmia Alarms Setup window telling you HR alarm limits have changed.



**WARNING** Minimize patient movement during a RELEARN, as movement creates noise during the reading. If the system learns an abnormal rhythm or learns a rhythm during noise, it designates the learned rhythm as normal. Thereafter, rhythms of this type might not trigger an alarm. Ensure that the patient remains still for 5 minutes after the RELEARN before allowing them to move.

### To adjust a patient's arrhythmia alarm limits

1. In the patient's Virtual Monitor, click **Setup, Arrhythmia Alarms**.

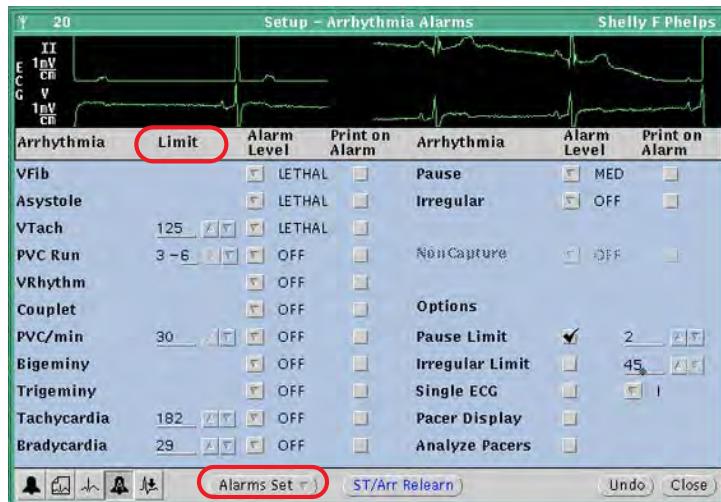


2. Set alarm limits in one of these ways:
  - In the Limit column, click the arrows next to the arrhythmia type to set alarm limits for one arrhythmia type at a time.
  - Click **Alarms Set, Presets** to set all arrhythmia limits to preset values.
 For Presets values, see [Table 35](#) on page 191.
3. If the patient has a pacemaker, see ["To set additional arrhythmia analysis preferences for a pacemaker patient"](#) on page 62.

## Adjust preferences for a patient's arrhythmia alarming

### To adjust preferences for a patient's arrhythmia alarming

1. In the patient's Virtual Monitor, click **Setup, Arrhythmia Alarms**.

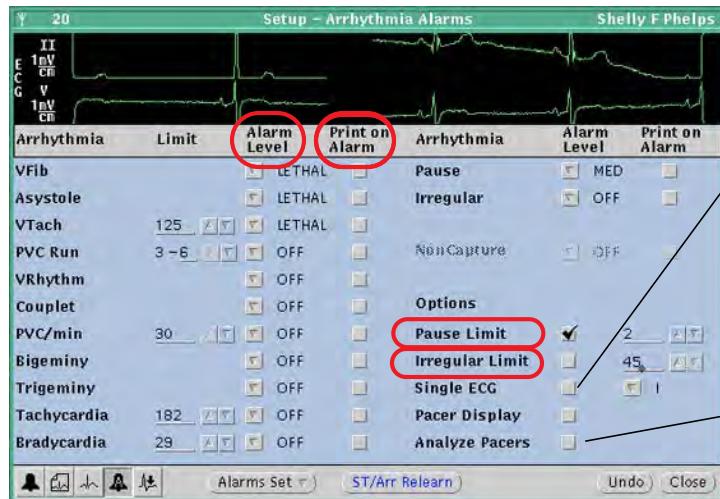

2. Adjust preferences for alarming.

- Alarm Level: To specify the alarming priority for an arrhythmia type, click the arrow next to the arrhythmia, and then select an alarm level. If an alarm level is set to off and an event of that type occurs,  appears in the patient's review windows.

For a description of alarm levels, see [Table 6](#) on page 95.



**WARNING** Turning off alarming for arrhythmia types and ST Analysis disables both audio and visual alarm indicators. Although alarming for lethal arrhythmias cannot be turned off, patients susceptible to arrhythmias must be kept under close physical surveillance if their alarming has been turned off for any arrhythmia types.



**WARNING** Minimize patient movement during a RELEARN, as movement creates noise during the reading. If the system learns an abnormal rhythm or learns a rhythm during noise, it designates the learned rhythm as normal. Thereafter, rhythms of this type might not trigger an alarm. Ensure that the patient remains still for 5 minutes after the RELEARN before allowing them to move.

- Pause Limit (under Options): To adjust the number of seconds that a Pause event must occur before the Acuity System alarms, click an arrow to specify seconds, and then check the Pause Limit box. The default when Pause Limit is not checked is the R-to-R interval that is greater than or equal to two times the average R-to-R.
- Irregular limit (under Options): To adjust the minimum duration that an irregular rhythm arrhythmia must occur before the Acuity System alarms, click an arrow to specify seconds, and then check the Irregular Limit box.

- Print on Alarm: To specify that central station alarm printouts occur for a specific arrhythmia type alarm, check the Print on Alarm box next to the arrhythmia type.

3. If the patient has a pacemaker, see ["To set additional arrhythmia analysis preferences for a pacemaker patient" on page 62](#).


## Set additional arrhythmia analysis preferences for a pacemaker patient



**WARNING** Always turn on Analyze Pacers for paced patients, and always turn off Analyze Pacers for non-paced patients. The Acuity System analyzes arrhythmias based on whether the Analyze Pacers setting is on or off. The Analyze Pacers setting is Off by default.

### To set additional arrhythmia analysis preferences for a pacemaker patient

1. In the patient's Virtual Monitor, click **Setup, Arrhythmia Alarms**.

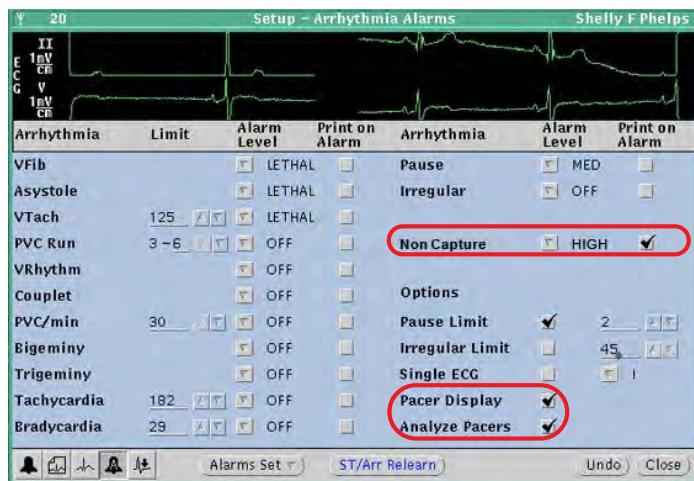

2. Carefully evaluate the patient's current rhythm to ensure that you want the Acuity System to relearn it as the patient's normal ECG rhythm.  
A relearn occurs in the next step.
3. Check the **Analyze Pacers** box to enable specialized arrhythmia analysis.  
Pacer Display is turned on also. If you prefer not to view the pacer display, clear the Pacer Display box.  
A RELEARN alert occurs at the patient's Virtual Monitor and Waveform Window. The alert remains until relearn is finished.
4. Carefully evaluate the new ECG rhythm to ensure that the Acuity System has learned an appropriate rhythm. For evaluation instructions, see ["Respond to a RELEARN alert" on page 91](#).
5. If Noncapture is listed in the arrhythmia list, set an Alarm Level and Print on Alarm for pacemaker noncapture.



**WARNING** Keep *all* pacemaker patients under close observation. Rate meters might continue to count the pacemaker rate during occurrences of cardiac arrest or some arrhythmias. Do not rely solely upon rate meter alarms.

## Initiate relearn of a patient's ECG rhythm

### Description of the relearn function

Relearn is an Arrhythmia Analysis function that causes the Acuity system to relearn a patient's normal ECG rhythm. The Acuity System uses the relearned rhythm as a guideline to identify arrhythmia events (arrhythmia relearn) and to analyze deviation of the ECG ST-segment offset (ST relearn).

### When relearn occurs for a patient

Both arrhythmia and ST relearn events occur after these things:

- ST/Arr Relearn is clicked in the Arrhythmia Alarms Setup window.
- Single ECG is clicked in the Arrhythmia Alarms Setup window
- Patient connection, some lead changes or lead failures, system restart

Only an arrhythmia relearn event occurs after these things:

- RELEARN is clicked in the Arrhythmia Alarms Setup window. A RELEARN button (instead of an ST/Arr Relearn button) indicates that the system does not include the ST Analysis option.
- Analyze Pacers is clicked in the Arrhythmia Alarms Setup window. ST Analysis is disabled when Analyze Pacers is enabled.

### What occurs in a patient's windows during and after a relearn event

- Virtual Monitor and Waveform Window: A visual RELEARN alert occurs, HR is taken from the patient monitor instead of from the arrhythmia software, and real-time waveforms display as usual.
- ST Analysis Setup window: The waveform slice displays NO VALID BEATS, and the Acuity System can take up to 30 seconds to update the waveform.
- Most review windows and some printouts: Relearn and Learning Done event markers (▼) appear.



**WARNING** Minimize patient movement during a RELEARN, as movement creates noise during the reading. If the system learns an abnormal rhythm or learns a rhythm during noise, it designates the learned rhythm as normal. Thereafter, rhythms of this type might not trigger an alarm. Ensure that the patient remains still for 5 minutes after the RELEARN before allowing them to move.



**WARNING** In Acuity Systems that include an Arrhythmia option, a relearn function causes the system to learn a patient's normal ECG rhythm. If the system learns an abnormal rhythm or learns a rhythm during noise, it designates the learned rhythm as a normal. Thereafter, rhythms of this type might not trigger an alarm.

A relearn event can be initiated by a user or by the system. System relearns are in response to these circumstances:

- Patient connection
- Lead change or failure
- System restart

During an arrhythmia relearn event, the system posts a RELEARN alert in the patient's Virtual Monitor and Waveform Window. Carefully observe a patient during an Acuity System learning period. During learning, the system detects only VFib and asystole arrhythmias.

After a relearn event, "Relearn" and "Learning Done" event markers (▼) appear in most of the patient's review windows and some printouts. After relearn, carefully evaluate the new ECG rhythm and the current ST segment for all active leads to ensure that the system learned an appropriate rhythm. For evaluation instructions, see ["To respond to a RELEARN alert" on page 92](#).


**To initiate relearn of a patient's ECG rhythm for arrhythmia and ST-segment analyses**

*The relearn operation cannot be undone.*

1. In the patient's Virtual Monitor, click **Setup, Arrhythmia Alarms**.

The Arrhythmia Alarms Setup window appears.

If your window appears abbreviated, your system includes the Lethal Arrhythmia Analysis option (lethal arrhythmia detection, only).

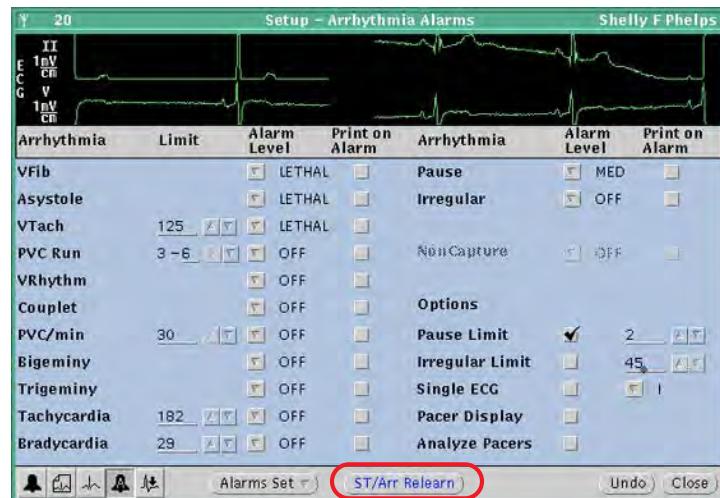

2. Carefully evaluate the patient's current rhythm to ensure that you want the Acuity System to establish it as the patient's normal ECG rhythm.

3. Click **ST/Arr Relearn** or **RELEARN**.

A RELEARN alert occurs at the patient's Virtual Monitor and Waveform Window. The alert remains until relearn is finished.

4. Carefully evaluate the new ECG rhythm and ST segment to ensure that the Acuity System has learned an appropriate rhythm. For instructions, see ["Respond to a RELEARN alert" on page 91](#).

## Important considerations: Arrhythmia Analysis

Related to Arrhythmia Analysis options, patient populations and patient surveillance



**WARNING** The Acuity System Arrhythmia Analysis options are *not* atrial arrhythmia analysis packages: they are ventricular analysis packages. An Acuity System with the Full Arrhythmia Analysis option detects these arrhythmia types: ventricular fibrillation, asystole, ventricular tachycardia, PVC run (ventricular run), VRhythm (ventricular rhythm), couplet, PVC per minute (ventricular beats per minute), bigeminy, trigeminy, tachycardia, bradycardia, irregular (irregular rhythm), pause, and noncapture (pacemaker noncapture).



**WARNING** In some clinical environments and due to some physiologic differences among patients, the Acuity System might not alarm for occurrences of ventricular tachycardia, ventricular fibrillation, or asystole. For instance, asystole is defined as an absence of any detected beat for four or more seconds. Patient pathologies where indications of electrical activity continue to exist without adequate cardiac function might not be recognized as asystole.



**WARNING** Do not use the Arrhythmia Analysis or ST Analysis feature on neonates. The Arrhythmia Analysis and ST Analysis options are not intended for use with neonatal patients.



**WARNING** It is important that clinicians understand and communicate to all staff using the Acuity Central Station that any arrhythmia analysis software program is an effective tool to assist in patient care, but arrhythmia analysis packages are unable to achieve 100 percent accuracy for all morphologies and occurrences of QRS and PVC detection. Thus, close physical surveillance and clinical interpretation of cardiac data must still be an integral part of every patient's care. Clinicians must review all data obtained from the Acuity System before implementing therapy based on the data.



**WARNING** The Welch Allyn 1500 Patient Monitor provides primary alarming, including LTAs. The central station provides a secondary alarm, and is only as reliable as its network. When connection to the central station is lost, the Welch Allyn 1500 Patient Monitor acts as a standalone monitor and provides the primary alarm. When connected to the central station, the monitor provides the primary alarm based on a signal from the central station.



**WARNING** Do not use Arrhythmia Analysis or ST Analysis on networks with heavy Class 1 services such as voice over IP (VOIP).

## Related to patient monitor heart rate indications



**WARNING** All heart rate alarms are valid, even if the HR value at the central station differs from that at the monitor.

If your system includes an Arrhythmia Analysis option, the Acuity System heart rates for adult and pediatric patients are a result of system software analysis.

The HR/PR numeric changes to “—” in the Virtual Monitor, Waveform Window, review windows, and system printouts when the system detects ventricular fibrillation or asystole. However, an apparently valid heart rate numeric might show in the patient monitor.

## Related to electrodes, leads and ECG display



**WARNING** If your system includes arrhythmia analysis, and if you connect, change or move an electrode, ensure that a RELEARN alert occurs at the patient monitor and the virtual monitor.

Moving or changing an electrode can change the beat morphology. If the system does not learn the new morphology, it might not alarm or it might cause false alarms. The relearn process establishes the new morphology as the normal ECG rhythm for arrhythmia and ST-segment analyses.

- If a RELEARN alert occurs after changing or moving an electrode, carefully evaluate the new ECG rhythm and the current ST segment for all active leads to make sure that the Acuity System has learned an appropriate rhythm. For evaluation instructions, see [“Respond to a RELEARN alert” on page 91](#).
- If a RELEARN alert does not occur after changing or moving an electrode, initiate a relearn event. For instructions, see [“To initiate relearn of a patient’s ECG rhythm for arrhythmia and ST-segment analyses” on page 65](#).



**WARNING** Ensure these things to minimize false HR, Arrhythmia Analysis and ST Analysis alarms, and to achieve optimal event detection and analysis:

- ECG cable, lead wires and electrodes are undamaged.
- Patient’s skin is properly prepared.
- Electrodes are placed using standard good practices.
- 5-wire ECG cable is used. A 3-wire cable limits arrhythmia and ST-segment analyses to a single lead, and ST analysis is disabled when a lead failure occurs.
- LL electrode is connected. Otherwise, only one ECG lead is available and arrhythmia and ST-segment analyses are effected.
- Patient monitor and Virtual Monitor display these things:
  - HR numeric and ECG waveform
  - Non-noisy signal. If signal is noisy, reduce patient movement and increase distance from other electrical devices.
  - Correct patient mode for the patient
- Virtual Monitor ECG 1 and ECG 2 display these things:
  - ECG waveform
  - Waveform amplitude at least 160  $\mu$ V, peak-to-peak
  - QRS complex amplitude at least twice the P or T wave amplitude.



**WARNING** Carefully monitor lead-wire connections of patients prone to arrhythmia events. If a lead wire disconnects during an event, the Acuity System's ability to accurately detect the event can be compromised.



**WARNING** Minimize patient movement during a RELEARN, as movement creates noise during the reading. If the system learns an abnormal rhythm or learns a rhythm during noise, it designates the learned rhythm as normal. Thereafter, rhythms of this type might not trigger an alarm. Ensure that the patient remains still for 5 minutes after the RELEARN before allowing them to move.

## ST Analysis option

The Acuity System ST Analysis option analyzes the ST segment of current ECG beats relative to the ST segment of a reference beat. Specifically, the system reports mm or mV of deviation between the current beat's ST-segment offset and the reference beat's ST-segment offset.

The system learns the reference beats when a learning or relearn function occurs. For a listing of when learning or relearn functions occur, see ["When ST relearn occurs for a patient"](#) on page 75.

In the ST Analysis Setup window, you can do the following things:

- Specify analysis preferences.
- Set alarm limits.
- Set ST alarming priority level.
- Set Print on Alarm.
- View current beats and reference beats.
- View current deviation values, including alarm values.
- Initiate relearn of a patient's reference beats for ST analysis only.

ST analysis is not performed in these circumstances:

- If Analyze Pacers is set on in the patient's Arrhythmia Alarms Setup window.
- If the patient monitor is set in neonate mode.
- During the occurrence of arrhythmia events.


## Examine the ST Analysis Setup window

The ST Analysis Setup windows in this section are shown in alarm.

### To open an ST Analysis Setup window

- In the patient's Virtual Monitor, click **Setup, ST Analysis**.

The ST Analysis Setup window appears.

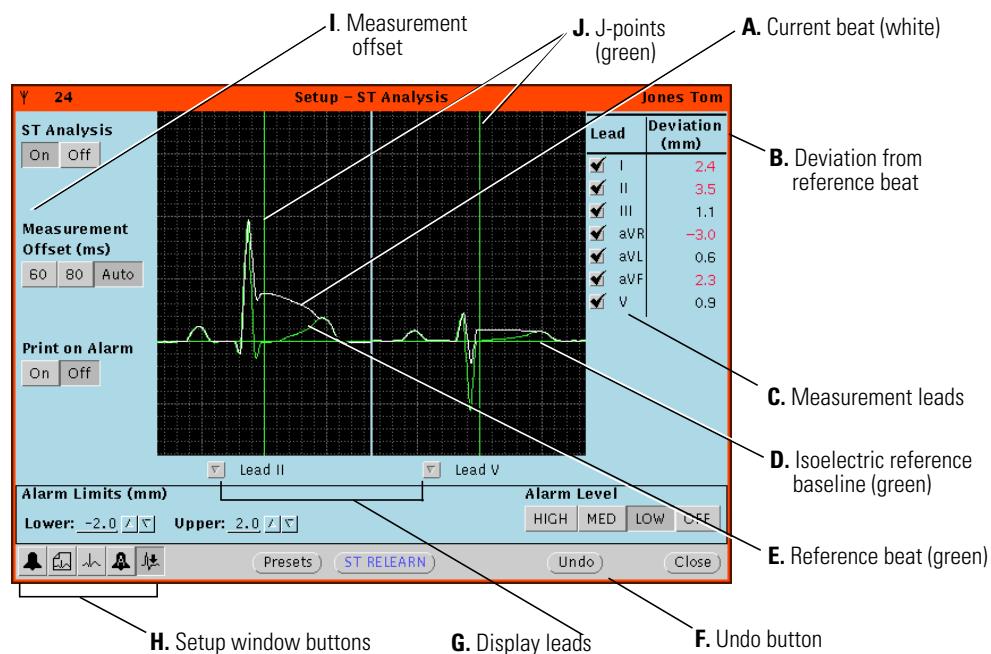

### To examine the ST Analysis Setup window

A. Current beat (white)	The current beat is shown for one or two leads.
B. Deviation from reference beat	Deviation (mm or mV) of the current ST-segment offset from the reference ST-segment offset, for each lead.
C. Measurement leads	Red numbers indicate alarm values.
D. Isoelectric reference baseline (green)	Analysis is performed on the selected leads.
E. Reference beat (green)	Horizontal line marks the isoelectric reference baseline for the ECG waveform.
F. Undo button	The reference beat is learned when the Acuity System learning or relearn function occurs.
G. Display leads	Undoes what has been done since the window was opened, except ST RELEARN and measurement Lead choices.
H. Setup window buttons	One or two active leads can be displayed.

## I. Measurement offset

The point at which the ST-segment analysis is performed, as determined by the number of ms or mV after the J-point.

## J. J-points (green)

Vertical green reference line intersects each beat at the J-point, the end of QRS and the start of the ST segment.

## Turn on or off ST analysis




**WARNING** If a patient's ST analysis is turned off, the patient's ECG is not analyzed for ST-segment deviations. ST alerts or alarms are not generated, and ST information is not stored as graphical trends. The Acuity System can be configured to set ST analysis to Off as a default setting. For further information, see your system administrator.

### To turn on or off ST analysis

1. In the patient's Virtual Monitor, click **Setup, ST Analysis**.

The ST Analysis Setup window appears.

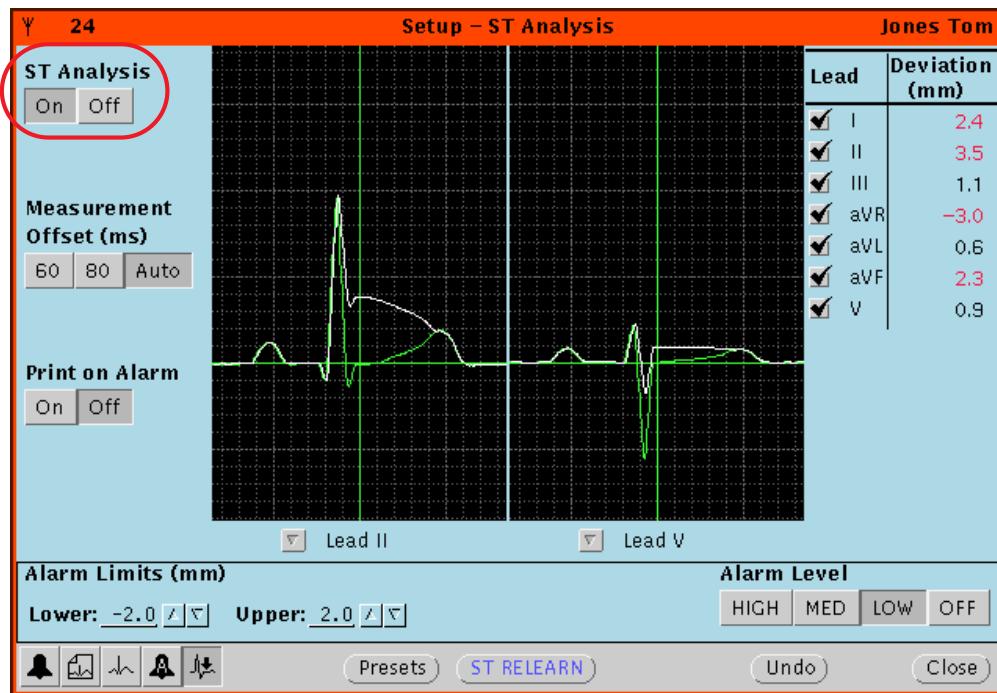


2. Click **On** or **Off** in the ST Analysis area.

## View current beats and ST-segment deviation values

### To view current beats and ST-segment deviation values

1. In the patient's Virtual Monitor, click **Setup, ST Analysis**.

The ST Analysis Setup window appears.

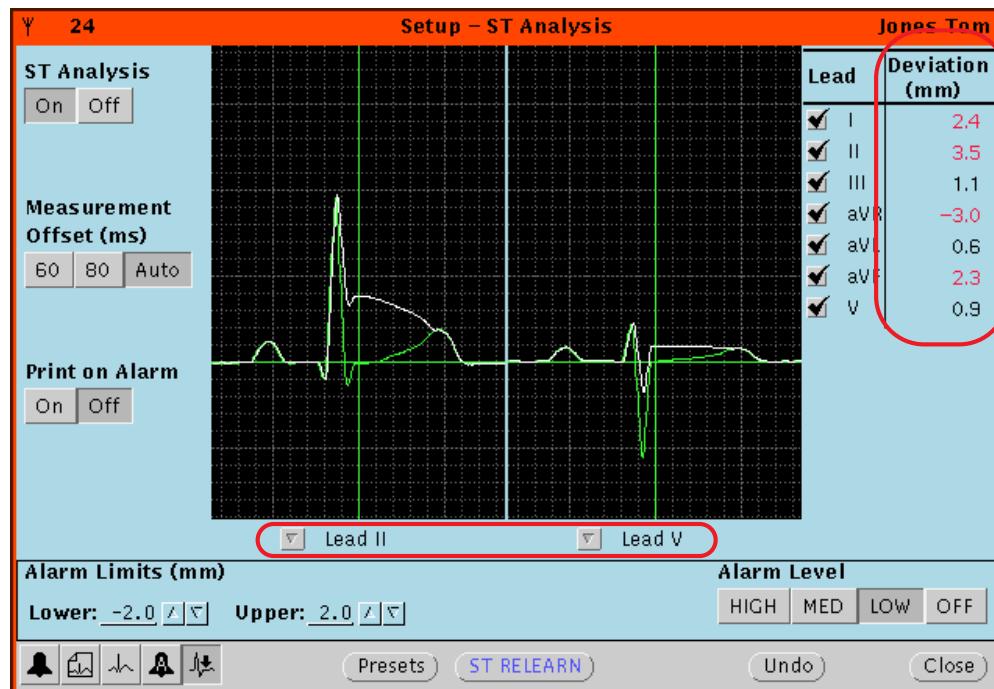

2. Beneath the waveforms, click the arrows to select the leads used for one or both lead displays.
3. View current ST-segment deviation values in the Deviation column.

Alarm values are red.


Graphical trend values are shown in the Graphical Trends Review window. For instructions on how to view ST trends, see ["Review graphical trends"](#) on page 99).

## Set analysis preferences for a patient's ST analysis

### To set analysis preferences for ST analysis

1. In the patient's Virtual Monitor, click **Setup, ST Analysis**.

The ST Analysis Setup window appears.

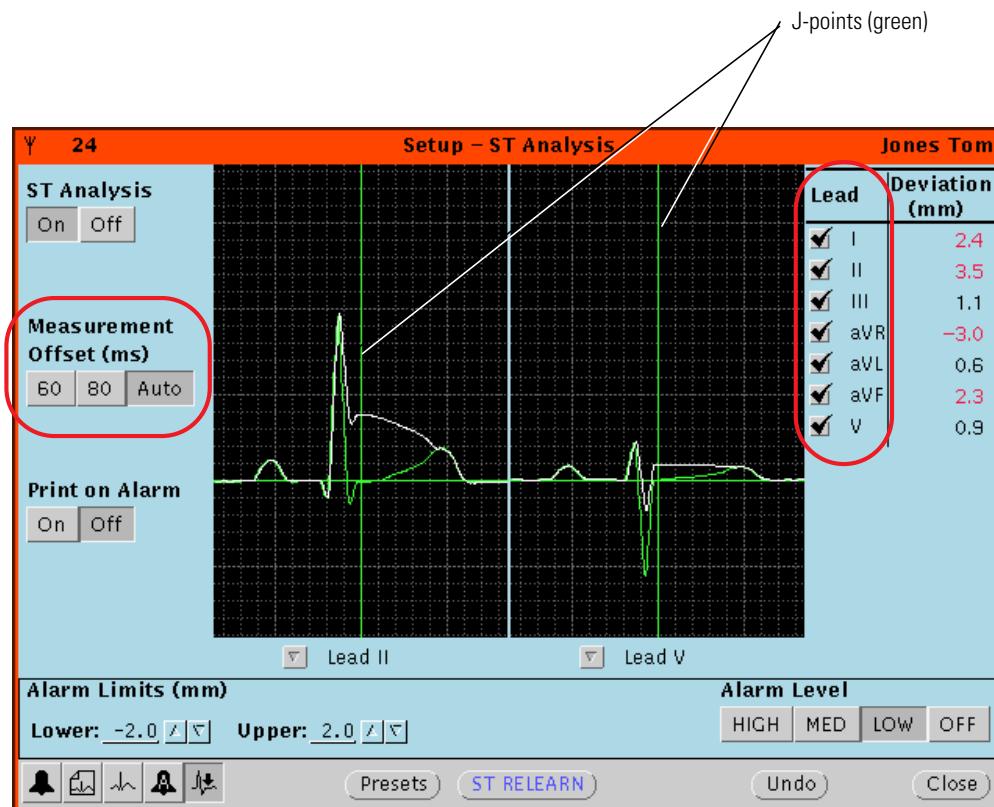

2. Leads: In the Lead column, check leads to be used for ST Analysis.  
Depending on the patient monitor, some of these choices cannot be deselected.
3. Measurement Offset: Click to set the offset from the J-point. This is the point at which the ST measurement is made.  
If you click Auto, the Acuity System selects the offset based on the patient's heart rate.

## Set alarm preferences for ST Analysis




**WARNING** Turning off alarming for arrhythmia types and ST Analysis disables both audio and visual alarm indicators. Although alarming for lethal arrhythmias cannot be turned off, patients susceptible to arrhythmias must be kept under close physical surveillance if their alarming has been turned off for any arrhythmia types.

### To set ST analysis alarm preferences

1. In the patient's Virtual Monitor, click **Setup, ST Analysis**.

The ST Analysis Setup window appears.

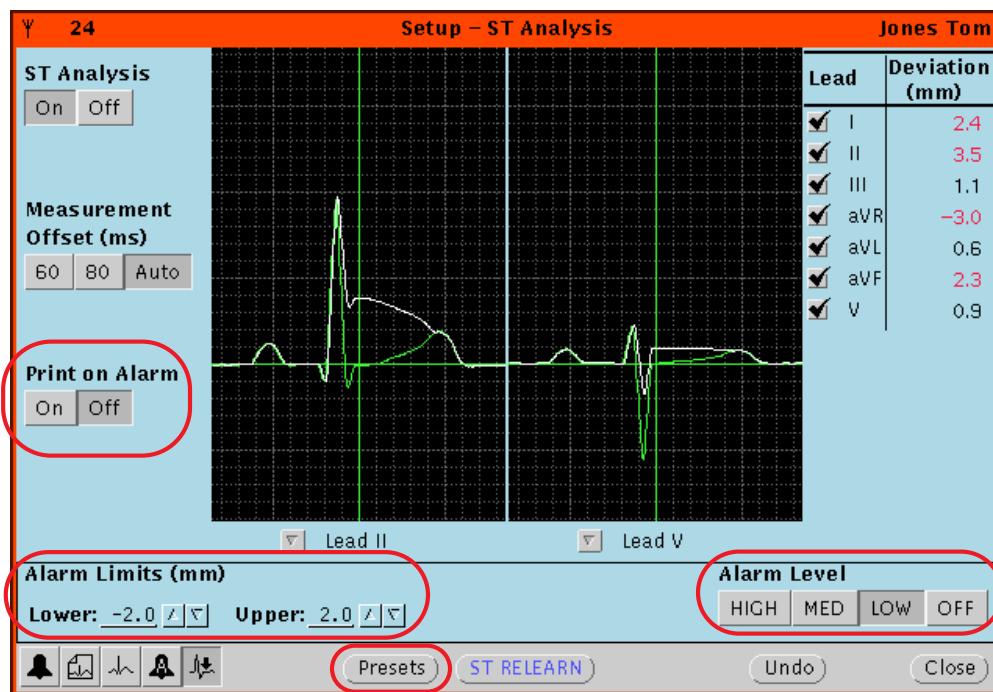

2. Set alarm limits in one of these ways:

- In the Alarm Limits area, click the arrows to set the lower and upper limits for deviation from the reference beat.
- Click **Presets** to select preset ST Analysis settings.

Clicking Presets resets alarm limits, alarm level, measurement offset and Print on Alarm. (For ST Analysis Presets values, see [Table 36](#) on page 193.)

3. Set alarming indications.

- Print on Alarm: Click **On** or **Off** to specify whether central station alarm printouts occur for ST Analysis alarms.
- Alarm Level: Click to set the alarming level priority for ST alarms.

For a description of alarm levels, see [Table 6](#) on page 95.

If you set Alarm Level to OFF, the system continues ST Analysis for checked leads, but it generates no ST alarms.

## Initiate a relearn of a patient's reference beats for ST analysis

### Description of the Relearn function

Arrhythmia and ST relearn is an Arrhythmia Analysis function that causes the Acuity system to relearn a patient's normal ECG rhythm. The Acuity System uses the relearned rhythm as a guideline to identify arrhythmia events (arrhythmia relearn) and to analyze deviation of the ECG ST-segment offset (ST relearn).

If you want to establish a new ST reference beat without changing the normal ECG rhythm used for arrhythmia analysis, initiate relearn in the ST Analysis Setup window.

### When ST relearn occurs for a patient

- Only ST reference beat learning occurs when ST RELEARN is clicked in the ST Analysis Setup window.
- ST relearn also occurs along with Arrhythmia relearn when certain buttons are clicked in the Arrhythmia Alarms Setup window. For details, see ["Initiate relearn of a patient's ECG rhythm"](#) on page 63.

### What occurs in a patient's windows during and after ST RELEARN is clicked


- ST Analysis Setup window: The waveform slice displays NO VALID BEATS, and the Acuity System can take up to 30 seconds to update the waveform.
- Most review windows and some printouts: Relearn and Learning Done event markers (▼) appear.

**To initiate a relearn of a patient's reference beats for ST-segment analysis**

*The relearn operation cannot be undone.*

1. In the patient's Virtual Monitor, click **Setup, ST Analysis**.

The ST Analysis Setup window appears.

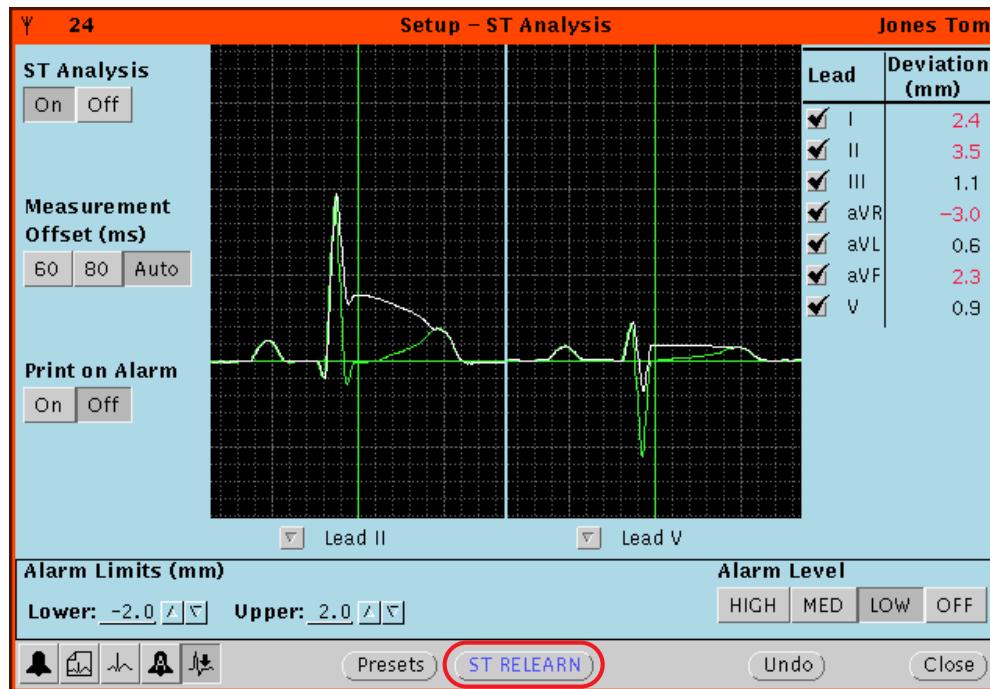

2. Carefully evaluate the patient's current ST segment for all active leads to ensure that you want the Acuity System to establish the beat as the patient's reference beat for ST Analysis.
3. Click **ST RELEARN**.

The waveform area displays NO VALID BEATS for up to 30 seconds.

The current beat for each ECG lead becomes the reference beat, and the deviation value for each current beat becomes zero.

4. Closely examine the current ST segment for all active leads to ensure that the Acuity System has defined an appropriate ST analysis reference beat.

## Important considerations: ST Analysis



**WARNING** Before you set customized alarm limits for a patient, confirm the patient's ID and room number. Otherwise, customized limits might be lost.



**WARNING** Do not use the Arrhythmia Analysis or ST Analysis feature on neonates. The Arrhythmia Analysis and ST Analysis options are not intended for use with neonatal patients.



**WARNING** The ST algorithm has been tested for accuracy of segment data. As with all computerized ST analysis systems, the Acuity System cannot replace skilled care and proper surveillance by a clinician. A clinician must review all data obtained from the Acuity System, including the significance of ST-segment changes, before implementing therapy based on this data.



**WARNING** Ensure these things to minimize false HR, Arrhythmia Analysis and ST Analysis alarms, and to achieve optimal event detection and analysis:

- ECG cable, lead wires and electrodes are undamaged.
- Patient's skin is properly prepared.
- Electrodes are placed using standard good practices.
- 5-wire ECG cable is used. A 3-wire cable limits arrhythmia and ST-segment analyses to a single lead, and ST analysis is disabled when a lead failure occurs.
- LL electrode is connected. Otherwise, only one ECG lead is available and arrhythmia and ST-segment analyses are effected.
- Patient monitor and Virtual Monitor display these things:
  - HR numeric and ECG waveform
  - Non-noisy signal. If signal is noisy, reduce patient movement and increase distance from other electrical devices.
  - Correct patient mode for the patient
- Virtual Monitor ECG 1 and ECG 2 display these things:
  - ECG waveform
  - Waveform amplitude at least 160  $\mu$ V, peak-to-peak
  - QRS complex amplitude at least twice the P or T wave amplitude



**WARNING** In Acuity Systems that include an Arrhythmia option, a relearn function causes the system to learn a patient's normal ECG rhythm. If the system learns an abnormal rhythm or learns a rhythm during noise, it designates the learned rhythm as a normal. Thereafter, rhythms of this type might not trigger an alarm.

A relearn event can be initiated by a user or by the system. System relearns are in response to these circumstances:

- Patient connection
- Lead change or failure
- System restart

During an arrhythmia relearn event, the system posts a RELEARN alert in the patient's Virtual Monitor and Waveform Window. Carefully observe a patient during an Acuity System learning period. During learning, the system detects only VFib and asystole arrhythmias.

After a relearn event, "Relearn" and "Learning Done" event markers (▼) appear in most of the patient's review windows and some printouts. After relearn, carefully evaluate the new ECG rhythm and the current ST segment for all active leads to ensure that the system learned an appropriate rhythm. For evaluation instructions, see ["To respond to a RELEARN alert" on page 92](#).



**WARNING** Minimize patient movement during a RELEARN, as movement creates noise during the reading. If the system learns an abnormal rhythm or learns a rhythm during noise, it designates the learned rhythm as normal. Thereafter, rhythms of this type might not trigger an alarm. Ensure that the patient remains still for 5 minutes after the RELEARN before allowing them to move.

# Edit patient information

You can revise information within the Acuity System as follows:

- Edit a patient name
- Edit clinical information
- Edit a patient ID (Add an amended patient ID)
- Add a note to a patient's Waveform Window

If you want to change a patient's room number, see ["Arrange a patient move from the patient monitor" on page 129](#).

## Edit any patient information *except* a patient ID

Sometimes it is necessary to change or correct patient information. You might wish to correct the spelling of the name or change clinical information.

If you are monitoring a patient with a Propaq LT monitor, you can edit this information at the monitor instead, if you like.


### To edit any patient information *except* a patient ID

1. At the Acuity Central Station, click .

The Patient List window appears.

2. Click the patient's name to highlight it, and then click **Edit**.

The Edit Patient Information window appears.

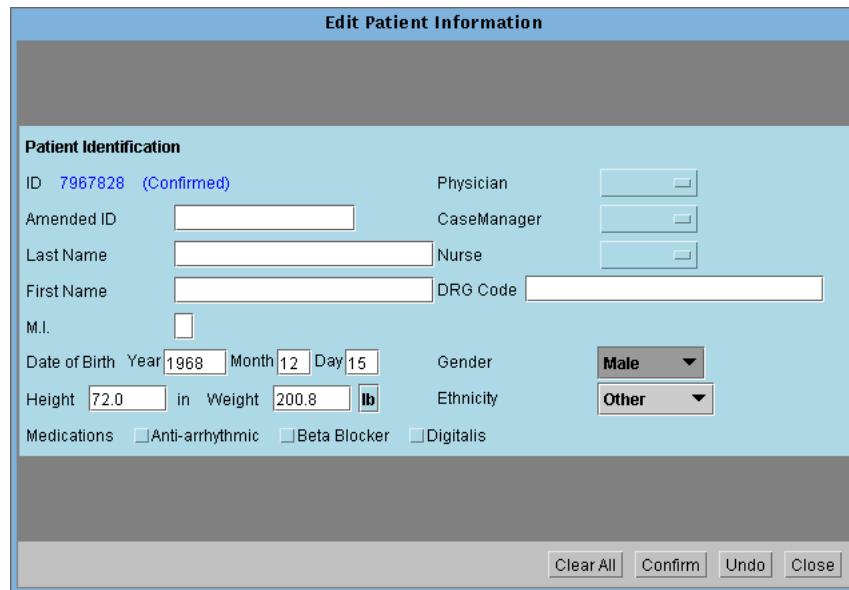

3. Position the cursor after the information that you want to change, and press the Backspace key until the incorrect information is gone. Type the new information.

4. Click **Confirm**.

The information is stored.

## Edit a patient ID number: add an amended (revised) patient ID

Once a patient ID number is confirmed, it cannot be changed. However, if your Acuity System includes the amended ID feature, you can revise an original patient ID number by adding an amended ID. If necessary, you can change this amended ID again later.


If you're monitoring a patient with a Propaq LT monitor, you can edit this information at the monitor instead.

Both IDs appear on printouts.

### To add an amended (revised) patient ID

1. In a patient's Virtual Monitor, click **Setup, Patient ID**.

The Patient ID Setup window appears.

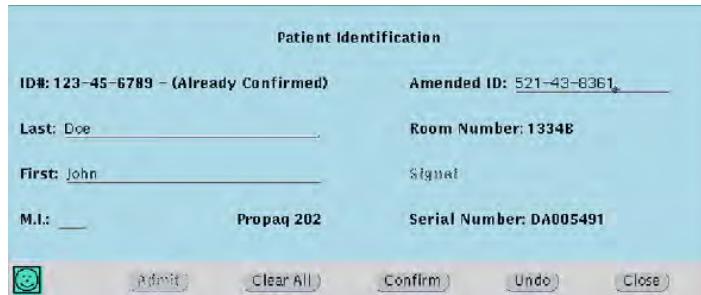

2. Type or scan the number on the Amended ID line.
3. *Carefully review your entries for accuracy.*
4. Click **Confirm**.

The information is stored.

## Add or remove a note in a patient's Waveform Window

If you would like to attach a note or reminder to a patient's Waveform Window, such as when the patient temporarily moves to another location, you can enter the information in the Patient ID Setup window.

The note remains in the Waveform Window until you remove it, even during wireless dropout.

Always remove a patient note when it is no longer relevant, to ensure that proper patient care is delivered.


### To add or remove a note in a patient's Waveform Window

1. Click the patient's map icon or Waveform Window icon.

The patient's Virtual Monitor appears.

2. Click **Setup, Patient ID**.

The Patient ID Setup window appears.

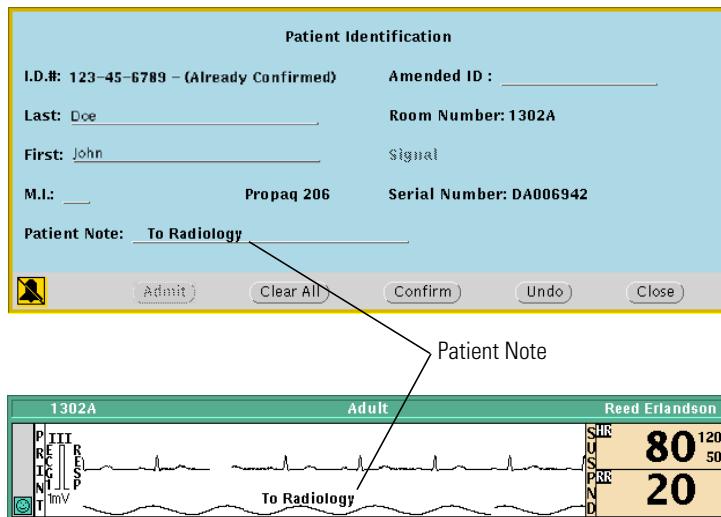

3. Add or remove a note.

- To add a note, scan or type up to 20 characters on the Patient Note line.

Carefully check your note.

**Note** Patient notes that are entered when the monitor is not connected to the network will not be displayed on secondary or remote Virtual Monitors. Only the most recent patient note will be displayed when the monitor reconnects to the network.

- To remove a note, use the Backspace key on your keyboard.

4. Click **Confirm**.

The information is stored.

5. Click **Close**.



## 5


## Respond to alarms and alerts

## Overview of central station alarm and alert indications

- Alarms indicate patient vital-sign violations by showing red window borders, icons and vital-sign highlights. All alarms are associated with audible tones.
- Alerts indicate equipment problems or low-level patient information alerts by showing yellow window borders and icons. Some alerts are associated with audible tones.

When conditions are corrected, the green, "patient monitoring OK" state is restored.

**Figure 1. Acuity Central Station screen showing a patient in alarm**

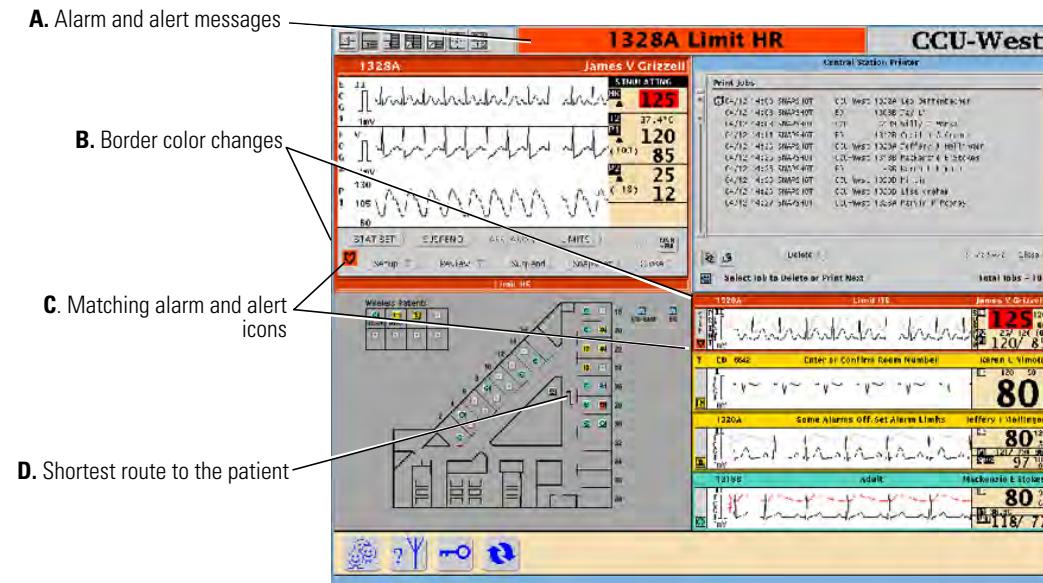

A. Alarm and alert messages

Alarm and alert messages are displayed in the message window.

B. Border color changes

Borders of Virtual Monitors and Waveform Windows in alarm change color and display specific messages.

C. Matching alarm and alert icons

Matching alarm or alert icons appear.

D. Shortest route to the patient

Shortest route from the Acuity Central Station to the patient's bedside.


## Suspend an audible alarm or alert tone for 90 seconds

All patient alarms and some alerts are associated with tones (for details, see [Table 6](#) on page 95).

You can silence tones temporarily from these places:

- Acuity Central Station
- Patient monitor
- (Optional) Mobile device running AcuityLink Clinician Notifier software


### To suspend an audible alarm or alert tone from a Waveform Window

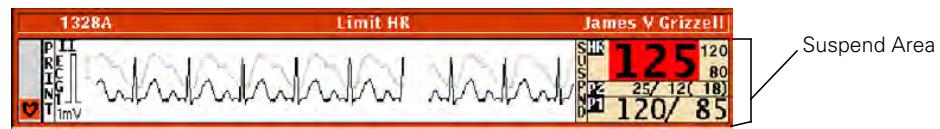

1. Bring your pointer into the Waveform Window.
2. Click in the numerics area to the right of the word SUSPND.

Tones are suspended for 90 seconds.

### To suspend an audible alarm or alert tone from a Virtual Monitor

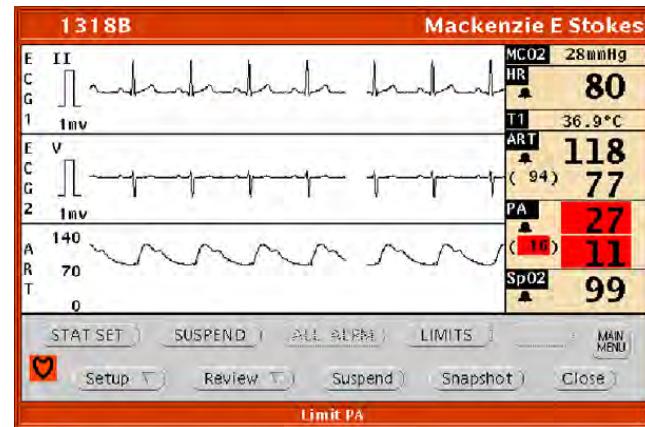

1. Bring your pointer into the Virtual Monitor.
2. Click **Suspend**.

Tones are suspended for 90 seconds.

## Important considerations: suspending an audible alarm or alert tone

Related to indications



**WARNING** During an alarm or alert suspension period, be aware of new visual alarm indications that might occur on the patient monitor or Virtual Monitor. During a suspension period, these things occur at the Virtual Monitor and patient monitor:

- Audible tones are suspended for 90 seconds unless RESUME is clicked at the central station or the alarm tone is reset at the patient monitor.
- Alarms for lethal events—apnea, asystole, ventricular tachycardia, and ventricular fibrillation—override the suspend state.
- All other new alarms for the same patient are indicated only visually, by additional red numeric highlights and arrhythmia or ST status messages.
- New equipment alerts are indicated only after the first alarm and alert conditions are corrected.



**WARNING** If an Acuity Central Station display is intentionally or inadvertently muted, alarm and alert tones do not occur at the display. If your central station display includes audible tones, remain aware of whether they are occurring. If they appear to have stopped, ensure that tones are restored.



**WARNING** False alarms may occur in some situations. You must understand and address the cause of the false alarms whenever possible to eliminate the possibility of repeated false alarms and alarm fatigue, which might result in a failure to respond to an actual alarm situation.



**WARNING** Central station alarms, alerts, and other events can go unnoticed if clinical personnel are not present at the central station or if interruptions occur in power or system operations.



**WARNING** The leading cause of patient death or serious injury reported with the use of patient monitoring equipment is failure to respond to alarms notifying the user of an adverse change in patient condition. If you are relying on visual alarm notifications, maintain a clear line of sight and remain within 4 meters of the central station. If you are relying on audio alarm notifications, make sure that you can hear audio alarms from where you are. Set the volume as needed considering the environment and ambient noise levels. Verify that the alarm is audible to a clinician working at the maximum distance from the central station.

## Related to heart rate (HR) and arrhythmia alarms



**WARNING** All heart rate alarms are valid, even if the HR value at the central station differs from that at the monitor.

If your system includes an Arrhythmia Analysis option, the Acuity System heart rates for adult and pediatric patients are a result of system software analysis.

The HR/PR numeric changes to “--” in the Virtual Monitor, Waveform Window, review windows, and system printouts when the system detects ventricular fibrillation or asystole. However, an apparently valid heart rate numeric might show in the patient monitor.

## Related to NIBP alarms



**WARNING** Always identify the source of an alarm before you suspend or silence it. When an NIBP alarm is suspended, the window borders and icon colors at the central station are the pre-alarm color instead of the typical red “Alarm Suspended” status.




**WARNING** If a noninvasive blood pressure reading is suspect, repeat the measurement, watching a manometer (if the monitor has one) to verify the reading. If you are still uncertain about the reading, use another method.

## Remove a latched arrhythmia alarm

If your Acuity System is configured to allow latched alarms, indications for certain arrhythmia alarms remain (or latch) in the Waveform Window, even after the alarm condition has ceased.

- Depending on configuration, lethal, high-level and possibly medium-level arrhythmia alarms visually latch in Waveform Windows. (For details about arrhythmia alarm levels, see “[To adjust preferences for a patient’s arrhythmia alarming](#)” on page 61.)
- After the alarm condition becomes inactive, latching indications remain until you clear the latched alarm or until the alarm is replaced by another latched alarm of equal or higher priority.
- If you attempt to remove a latch for an alarm condition that is still active, the visual latch remains.

### To remove a latched arrhythmia alarm

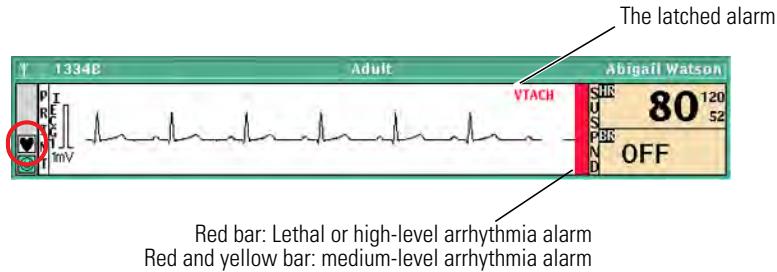

Take one of these steps:

- Click the colored bar to remove the latching indication(s).
- Click  to remove the latching indication(s) and review the event.

The Arrhythmia Events Review window appears.

The cursor clears the text and bar as it sweeps across the window.

# Respond to specific alarms and alerts

This section describes a few of the Acuity System alarms and alerts and how to respond to them.

## Respond to a DROPOUT alert

When there is a loss of bi-directional communication between a wireless monitor and the Acuity System, an audible DROPOUT equipment alert occurs at the monitor and at the Acuity Central Station.

The monitor continues to provide local alarms and alerts, but alarms generated by the Acuity System, such as arrhythmia or ST analysis alarms, are not indicated, and you cannot access any Acuity System windows related to the patient.

### To respond to a DROPOUT alert



Take one of these steps:

- Click **SUSPEND**.

The audible tone is suspended for 90 seconds.,

- Click **RESET**.

Alert indications stop and the Virtual Monitor is in the blue, "patient intentionally disconnected" state.

If the monitor resumes communication with the Acuity System, the Virtual Monitor, Waveform Window and patient icon return to the green, "patient monitoring OK" state.



**WARNING** Auto-reboots occur and wireless connection is occasionally disrupted. During this period, the bedside monitors continue to provide their primary alarming functions. Auto-reboots occur infrequently, due to poor environmental conditions. Failure to perform preventative maintenance can increase the frequency of occurrence.

## Dismiss a CHECK PATIENT HR/PR alert

A patient monitor uses a single lead to calculate heart rate, and an Acuity System with an Arrhythmia Analysis option uses more sophisticated arrhythmia analysis algorithms.

Thus the patient monitor and Acuity Central Station heart rate readings for the same patient can differ. Differences mostly occur in response to these conditions:

- Rare ECG morphologies, such as “tall ‘T’ waves”
- Certain paced rhythms
- Noise or artifact


If the patient monitor displays a higher heart rate, it can present a heart rate alarm that the Acuity Central Station does not present.

If this condition occurs for a defined period, the patient’s Acuity System Virtual Monitor might display a silent equipment alert (as defined by your system administrator) to inform you of the monitor alarm.

If the heart rate alarm stops at the patient monitor, the Acuity System dismisses this message.

**Note** You can attempt to reduce erroneous or nuisance heart rate alarms if the patient monitor is a Propaq LT, CS or Encore. For instructions, see [Table 14](#) on page 156.

### To dismiss a CHECK PATIENT HR/PR alert

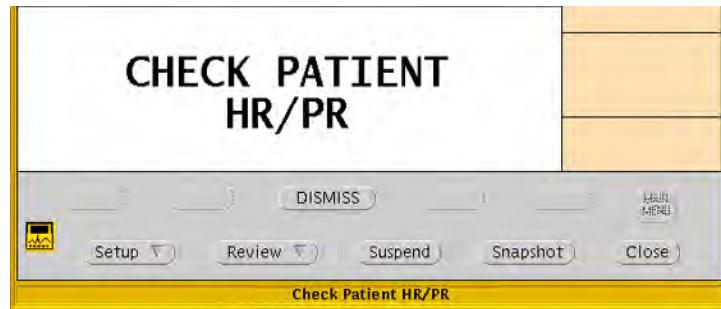

- Click **DISMISS**.

The patient’s Virtual Monitor and Waveform Window return to the green, “patient monitoring OK” state.

## Dismiss an arrhythmia or ST alarm message

When you suspend an arrhythmia or ST alarm, the audible alarm tone is suspended for 90 seconds as usual. However, the Acuity System Virtual Monitor displays a visual message to call attention to the alarm.

### To dismiss an arrhythmia or ST alarm message



- Click **DISMISS**.

The border remains red, but the message is dismissed and you can see the waveforms.

## Respond to a RELEARN alert



**WARNING** In Acuity Systems that include an Arrhythmia option, a relearn function causes the system to relearn a patient's normal ECG rhythm. If the system learns an abnormal rhythm or learns a rhythm during noise, it designates the learned rhythm as normal. Thereafter, rhythms of this type might not trigger an alarm.

A relearn event can be initiated by a user or by the system. System relearns are in response to these circumstances:

- Patient connection
- Lead change or failure
- System restart

During an arrhythmia relearn event, the system posts a RELEARN alert in the patient's Virtual Monitor and Waveform Window. Carefully observe a patient during an Acuity System learning period. During learning, the system detects only VFib and asystole arrhythmias.

After a relearn event, "Relearn" and "Learning Done" event markers (▼) appear in most of the patient's review windows and some printouts. After relearn, carefully evaluate the new ECG rhythm and the current ST segment for all active leads to ensure that the system learned an appropriate rhythm.



**WARNING** Minimize patient movement during a RELEARN, as movement creates noise during the reading. If the system learns an abnormal rhythm or learns a rhythm during noise, it designates the learned rhythm as normal. Thereafter, rhythms of this type might not trigger an alarm. Ensure that the patient remains still for 5 minutes after the RELEARN before allowing them to move.

**To respond to a RELEARN alert**

1. In the patient's Virtual Monitor, carefully evaluate the new ECG rhythm to ensure that the Acuity System has learned an appropriate rhythm.
2. Check the relearned ECG rhythm in the Waveforms Review window:
  - a. Click **Review, Waveforms**.  
The Waveforms Review window appears.
  - b. Click the Arrhythmia Relearn event marker (▼) shown at the time of the Relearn event.
  - c. Examine the rhythm that the system learned to ensure that it appropriate.
3. If your Acuity System includes the ST Analysis option, examine the ST segment:
  - a. Click **Setup, ST Analysis**.  
The ST Analysis Setup window appears.
  - b. Examine the current ST segment for all active leads to ensure that the Acuity System defined an appropriate ST analysis reference beat.
4. If the new ECG rhythm or ST segment is not appropriate, wait until the patient's ECG rhythm is suitable to be learned as a normal ECG rhythm, and then initiate a relearn.  
For instructions, see "[To initiate relearn of a patient's ECG rhythm for arrhythmia and ST-segment analyses](#)" on page 65.

## Respond to a CHECK LEADS alert

The visual CHECK LEADS alert appears when the number of PVCs exceeds the normal ranges of PVC activity. The alert remains for a brief period.

### To respond to a CHECK LEADS alert



1. Verify that the patient's lead wires and electrodes are in good condition.
2. Verify that the electrodes were placed using standard good practices.
3. Click **Review, Waveforms**.  
The Waveforms Review window appears.
4. Review the patient's waveforms for accurate beat labeling.  
A normal beat is indicated by a dot.
5. If it is necessary to initiate Relearn to establish the patient's normal ECG rhythm, see "["To initiate relearn of a patient's ECG rhythm for arrhythmia and ST-segment analyses" on page 65](#).


## Respond to an arrhythmia NOISE alert

The visual NOISE alert occurs when the Acuity System can't analyze arrhythmia because of excessive electrical noise.

The Acuity System invalidates individual noisy leads and then re-validates them when noise is no longer detected.

At the Acuity Central Station, there is no heart rate reading during this alert, but the patient monitor might present a heart rate.

### To respond to an arrhythmia NOISE alert

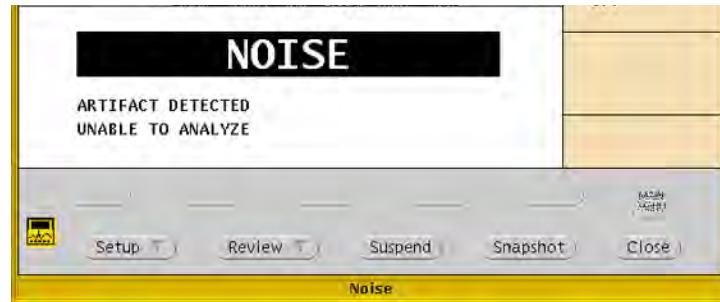

1. Verify that the patient's lead wires and electrodes are in good condition.
2. Verify that the electrodes were placed using standard good practices.

# Summary of Acuity System alarm and alert levels

Alarm and alert levels determine which alarms or alerts are indicated if multiple alarms or alerts occur for a patient. This table shows a summary of alarm and alert levels. For a complete list of icons, see “[Status icons](#)” on page 137.

**Table 6. Summary of alarm and alert levels at the Acuity System**

Alarms (red)	Monitor equipment alerts (yellow)	System equipment alerts (yellow)	Patient information alerts (yellow)
<p><b>Lethal arrhythmia alarms</b> Ventricular fibrillation, asystole and ventricular tachycardia</p> <p>Lethal-level alarm tone: BEEP BEEP BEEP BEEP..... (Four loud beeps followed by a pause)</p> <p><b>High-level alarms:</b> Arrhythmias with alarm levels set to high<sup>a</sup> ST-segment offset if alarm level set to high<sup>b</sup> Apnea alarms</p> <p>High-level alarm tone: BEEP BEEP BEEP..... (Three loud beeps followed by a pause)</p> <p><b>Medium-level alarms:</b> Arrhythmias with alarm levels set to medium ST-segment offset if alarm level set to medium Patient vital-sign alarms</p> <p>Medium-level alarm tone: BEEP beep... (One loud and one softer beep, followed by a brief pause)</p> <p><b>Low-level alarms:</b> No Continuous Heart/ Pulse Rate alarms Arrhythmias with alarm levels set to low ST Analysis with alarm level set to low</p> <p>Low-level alarm tone: beep...beep...beep..... (Three spaced, soft beeps, followed by a pause)</p>	<p><b>Alerts:</b></p>  Monitor Cannot Communicate  Too Many Monitors  Monitor Communication Lost  Monitor Problem <p>Alert Tone: beep..... beep (A soft beep followed by a long pause)</p> <p>Note: Some Monitor Problem alerts are not associated with audible tones.</p>	<p><b>Low-level alerts:</b></p>  Hallway Message Panel Problem  Unrecognized Networked Acuity System  Central Printer Problem  Swap Space Low  Network Problem  Connectivity Server Unavailable  Some Connectivity Services Unavailable  Devices Running Clinician Notifier are Not Reachable <p>These alerts are not associated with audible tones.</p>	 Alarm(s) Off  Unconfirmed Patient ID  Unconfirmed Room Number <p>These alerts are not associated with audible tones.</p>

a. Arrhythmia alarm levels are set in the Arrhythmia Alarms Setup window. Arrhythmia alarms are further prioritized by list order in this window.

b. ST alarm levels are set in the ST Analysis Setup window.



# 6

# Review or print patient data

---

## Review patient data

If your Acuity System includes the Full Disclosure option, waveforms and trend information for all patients are stored for a configurable period, up to 96 hours.

## Locate patient data

This section describes how to locate data for a patient in any unit within your Acuity System or networked Acuity System.

### To locate a patient

1. In the lower left corner of the Acuity Central Station screen, click .  
The Patient List window appears.
2. Scroll the patient list.
  - If the patient is listed, proceed to Step 4.
  - If the patient is not listed, click **Other Patients** to view networked Acuity System units.  
The Other Patients Lists window appears.
3. List patients by one of these criteria:
  - Click **Unit**, and then select the unit name from the list in the box on the right (networked Acuity System).
  - Click **Last Name** or **First Name**, and then click the first letter of the name.
4. Click a column heading to sort the list by name, location or ID.  
Actively monitored patients are listed at the top.
5. Locate the patient name in the list.

**To view the patient's data**

1. In the Patient List window or Other Patients Lists window, click a patient's name in the list.
2. Click one of these buttons:
  - Click **Summary** to view a summary of the patient's monitoring history.  
Summary is not available in the Other Patient List screen.
  - Click  to view the patient's Graphical Trends Review window.
  - Click  to view the patient's Tabular Trends/Events Review window.
  - Click  to view the patient's Waveforms Review window.
  - Click  to view the patient's OxyCRG Review window.
  - Click  to view the patient's Arrhythmia Events Review window.
  - Click  to view a current patient's Virtual Monitor.

If the review icons for a patient are grayed out, the patient's review information is no longer stored by the Acuity System.

## Review graphical trends

In the Graphical Trends Review window, you can review and print data in these ways:

- Scroll graphical trend data for up to five vital signs at once.
- Locate red alarm periods along the trend graphs.
- View event markers above the top graph.
- Click graphs to see numeric values and event identifiers.
- Jump to the next or previous alarm.


### Open a Graphical Trends Review window

#### To open a Graphical Trends Review window

1. (Optional) In the upper left corner of the Acuity Central Station screen, click  or  to change the screen view to see a larger review window.
2. Open the window for one of these types of patients:
  - Current patient in local unit:  
In the patient's Virtual Monitor, click **Review, Graphical Trends**.
  - Non-monitored patient or patient in a networked Acuity System unit:
    - a. In the Acuity Central Station screen's lower left corner, click .
    - b. For a patient in the listed unit: Click the patient's name, and then click .

For a patient in another unit: Click **Other Patients**, the patient's name, and .


The Graphical Trends Review window appears.

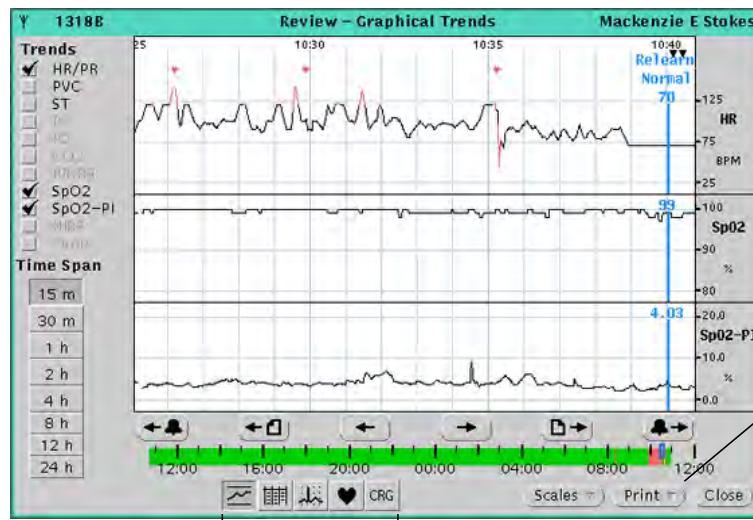

These open the Graphical Trends, Tabular Trends/Events, Waveforms, Arrhythmia Events and OxyCRG Review Windows.

Prints a Review Print that covers the time span shown in the window.

Adjust the graphical trends display and locate events

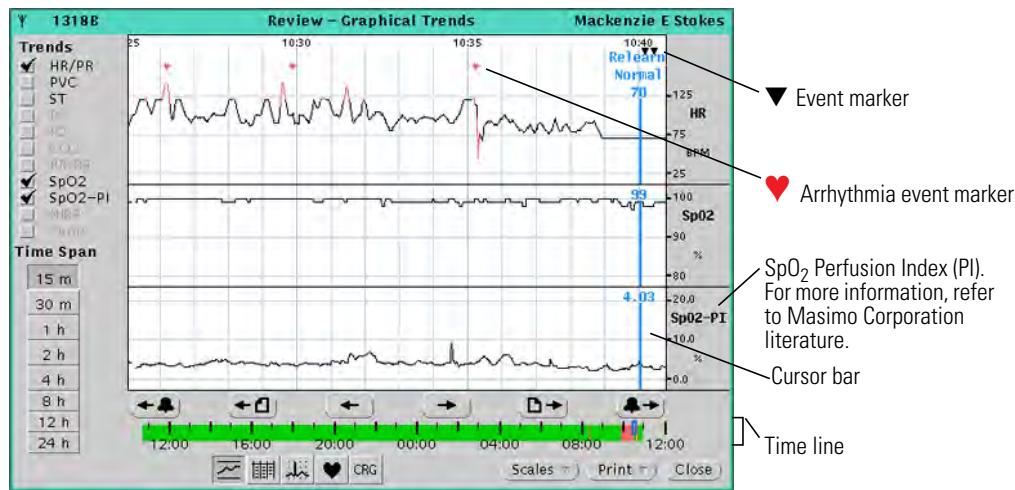

### To adjust the time period shown in the graphs area of the window

- Under Time Span, click a button.  
Time markers show along the top of the graphs area.
- Click on the time line to display data from a different time period.  
Along the time line, patient alarms are red.
- Click or to scroll the display forward or backward.  
Click or to page the display forward or backward.

### To select and adjust the trend graphs

- Under Trends, check boxes to display associated trend graphs.
- Click **Scales**, and then make a selection.

### To locate and display alarm and event information

- Click any of these things for details:
  - Click a red (alarm) area along a trend graph.
  - Along the top of the window, click an event marker.
    - ▼ indicates Relearn, Learning Done or Snapshot Print events.
    - ♥ indicates that an arrhythmia alarm was recorded.
    - indicates that an arrhythmia event was detected, but no alarm occurred because alarming for this arrhythmia type was turned off in the Arrhythmia Alarms Setup window.

The blue cursor bar identifies event types and shows numeric values along each trend graph.

- Click or to jump to the next or previous alarm.

## Review tabular trends and events

In the Tabular Trends and Events Review window, you can review and print trends in these ways:

- View vital-sign values and alarm events in a tabular format, at various intervals.
- Click events in the list to view (up to two) corresponding waveforms.
- (Arrhythmia option) View normal and ventricular ECG beat labels along the waves.
- In the waveforms, jump to the next or previous alarm.


Open a Tabular Trends/Events window

### To open a Tabular Trends/Events Review window

1. Open the window for one of these types of patients:
  - Current patient in local unit:  
In the patient's Virtual Monitor, click **Review, Tabular Trends/Events**.
  - Non-monitored patient or patient in a networked Acuity System unit:
    - a. In the Acuity Central Station screen's lower left corner, click .
    - b. For a patient in the listed unit, click the patient's name and .

For a patient in another unit, click **Other Patients**, the patient's name and .


The Tabular Trends/Events Review window appears.

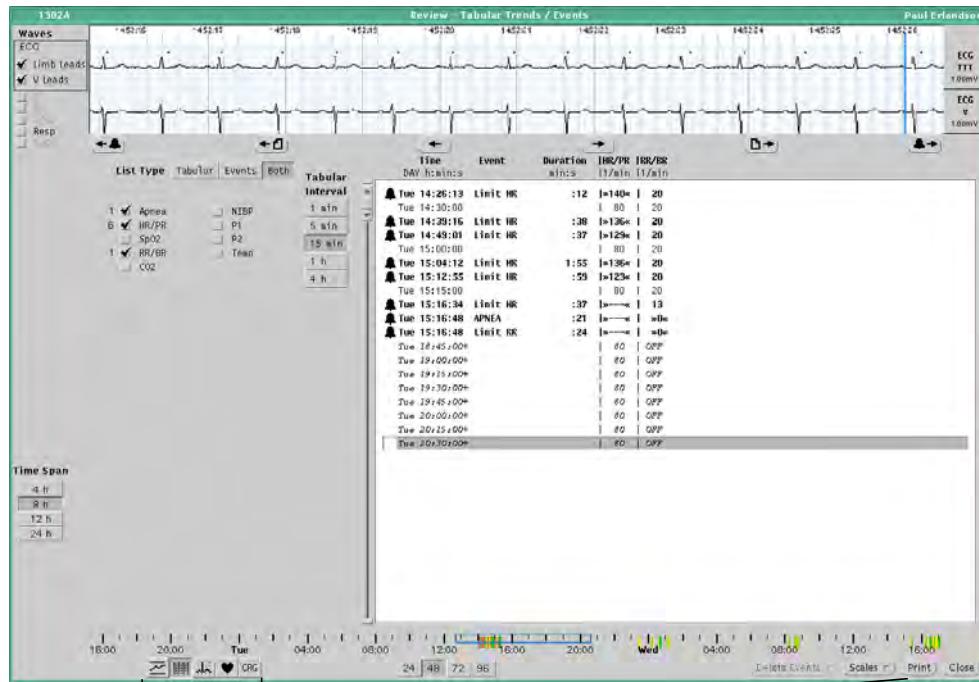

These open the Graphical Trends, Tabular Trends/Events, Waveforms, Arrhythmia Events and OxyCRG Review Windows.

Prints a Review Print that covers the time span shown in the window.

Adjust the content of the tabular list

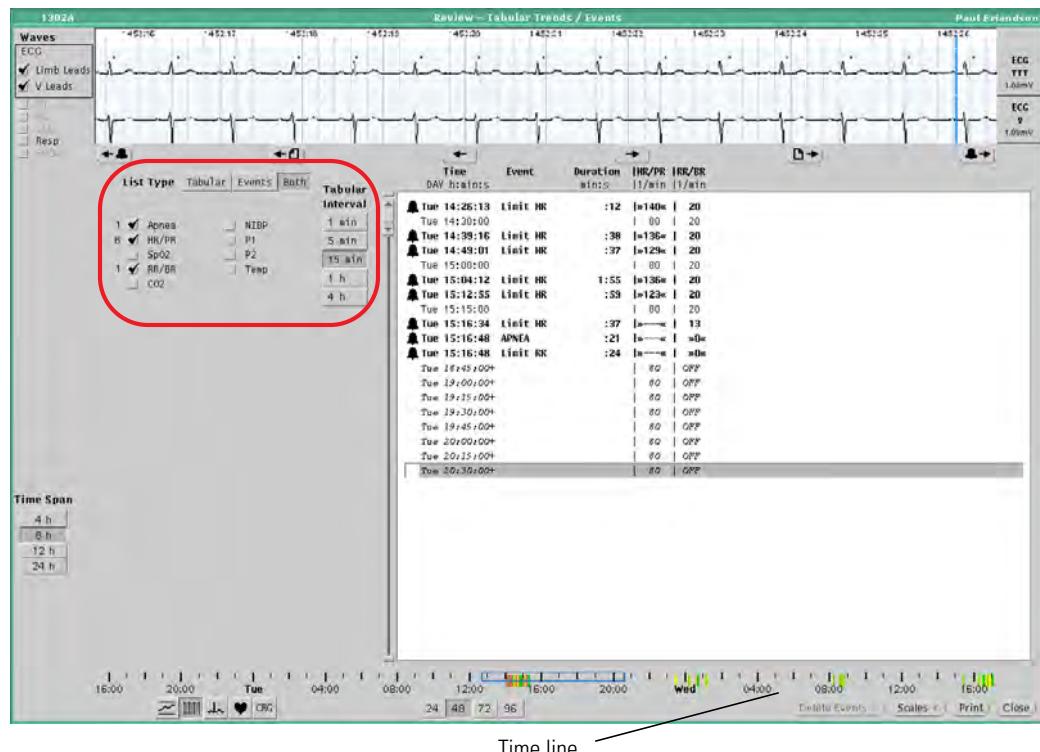

### To adjust the time period covered in the tabular list


1. Click a number under the time line to adjust the line's scope, in hours.
2. On the time line, click an area in which you are interested (events are red).  
The blue box moves. The box indicates the time span covered in the list.
3. Under Time Span, click to specify the number of hours spanned in the list.  
The listings change.

### To specify the format of the tabular list

1. Next to List Type, click one of these buttons:
  - Click **Tabular** to list tabular data only.
  - Click **Events** to list events only.
  - Click **Both** to list tabular data and events.
2. Check vital-sign boxes to list corresponding data and events.  
The number of events that occurred in the time span appears beside each box.
3. Under Tabular Interval, click to specify the frequency interval at which data are listed.  
For example, *15 min* means that readings are listed four times during each hour (e.g. 12:00, 12:15, 12:45 and 1:00). However, all events in the time-span are listed, in bold.

## Adjust the waveform display

Beat labels: Normal (●) and ventricular (V)

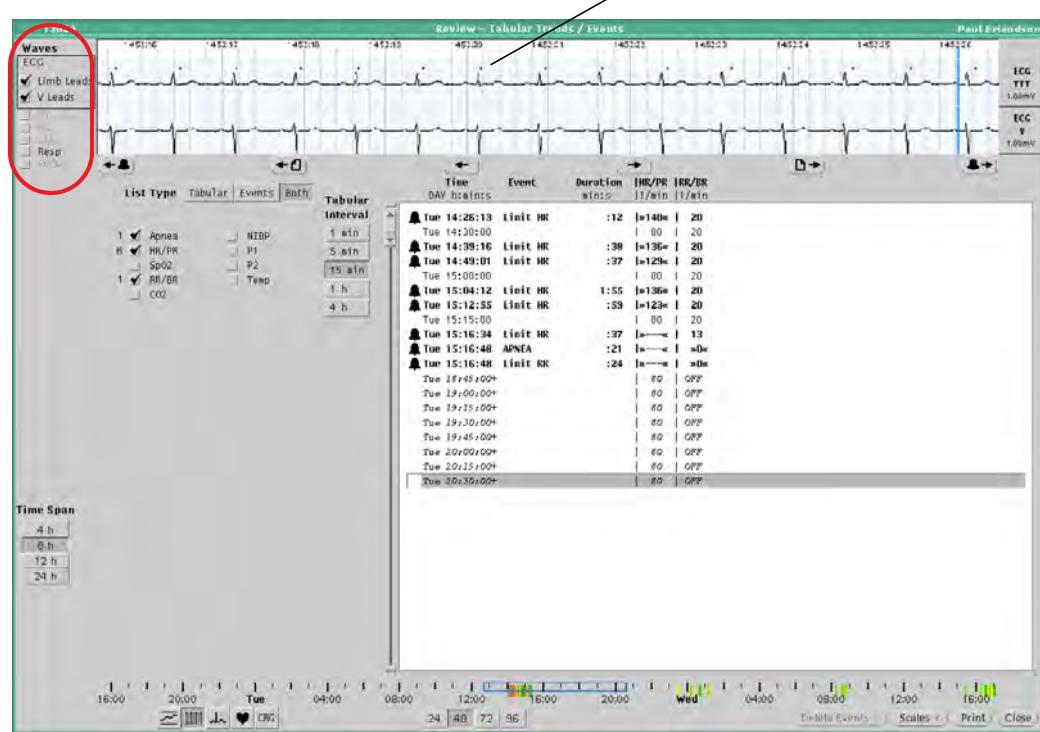**To display waveform(s) that correspond to a trend or event in the tabular list**

1. In the list, locate a trend or event in which you are interested.
2. Click the trend or event.

The corresponding waveform(s) appear in the waveform pane.

3. Scroll the waveform.  
Click or to scroll forward or backward.  
Click or to page forward or backward.
4. Click or to jump to the next or previous alarm.

The associated event is highlighted in the list.

**To select and adjust the waveform(s)**

1. Check one or two boxes under Waves to view waveforms for corresponding vital signs or ECG lead sources.

If you see only one waveform and you prefer two, click in the upper left corner of the Acuity System screen to change to the full-screen view.

2. Click **Scales**, and then make a selection.

## Review waveforms

(Full Disclosure option)

In the Waveforms Review window, you can review and print the waveforms in these ways:

- Scroll up to five vital-sign waveforms at once.
- (Arrhythmia option) View normal and ventricular ECG beat labels along the waves.
- Click graphs to identify event markers above the waveforms.
- Jump to the next or previous alarm or arrhythmia event (or next/previous alarm or event of the same type as the one currently shown).

Open a Waveforms Review window

### To open a Waveforms Review window

1. (Optional) In the upper left corner of the Acuity Central Station screen, click  or  to change the screen view to see a larger review window.
2. Open the window for one of these types of patients:
  - Current patient in local unit:  
In the patient's Virtual Monitor, click **Review, Waveforms**.
  - Non-monitored patient or patient in a networked Acuity System unit:
    - a. In the Acuity Central Station screen's lower left corner, click .
    - b. For a patient in the listed unit, click the patient's name and .
 For a patient in another unit: Click **Other Patients**, the patient's name, and .


The Waveforms Review window appears.



These open the Graphical Trends, Tabular Trends/Events, Waveforms, Arrhythmia Events and OxyCRG Review Windows.

Prints a Review Print that covers the time span shown in the window.

## Display waveforms and events

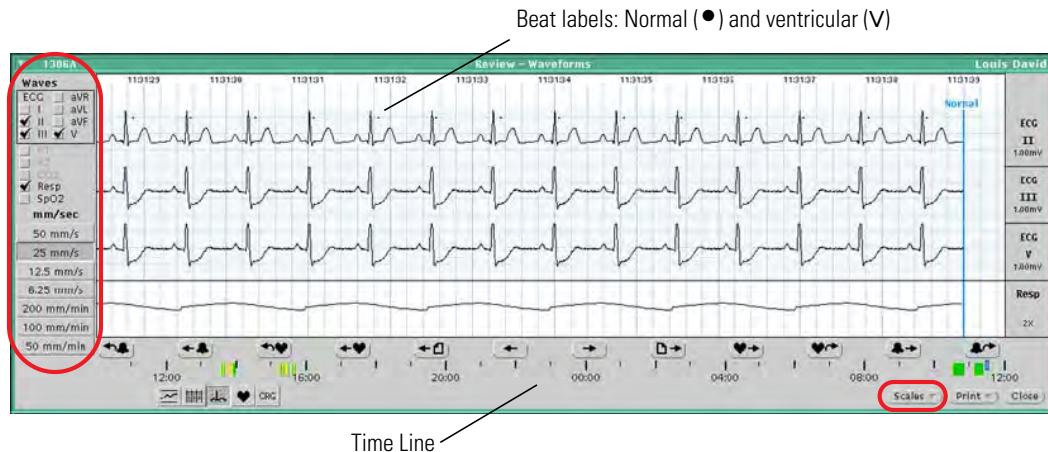
**To select and adjust waveforms**

1. Check up to five boxes to display waveforms for corresponding vital-signs and ECG lead sources.  
If the patient monitor includes SpO<sub>2</sub> Signal IQ detection and you check SpO<sub>2</sub>, SIQ occupies a waveform slot in the display.
2. Click **Scales**, and then make a selection.
3. Click under mm/sec to adjust sweep speeds.

**To adjust the period shown in the window**

1. Click on the time line to display waveforms from a different time period.  
Along the time line, patient alarms are red.
2. Scroll the waveforms.  
Click or to scroll forward or backward.  
Click or to page forward or backward.

### To locate and display alarm and event information

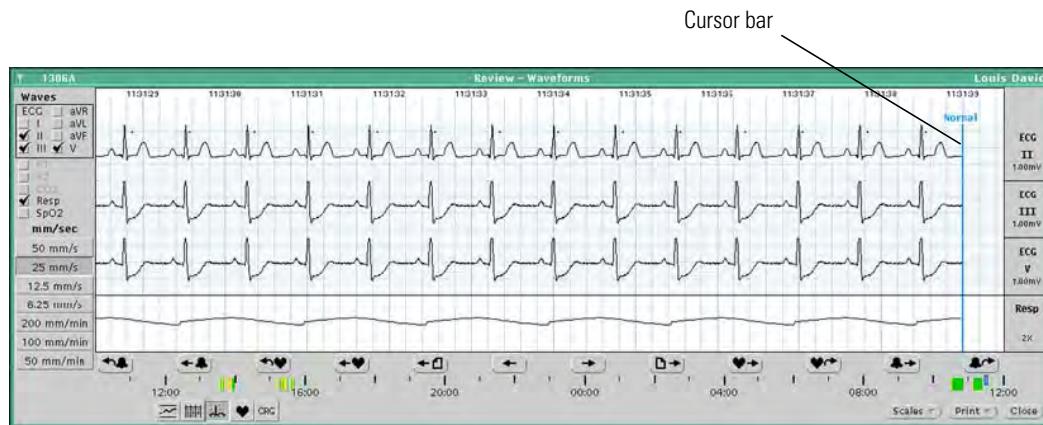

1. Along the top of the waveforms, click an event marker.
  - event markers show Relearn, Learning Done or Snapshot Print events.
  - event markers show that an arrhythmia alarm was recorded.
  - event markers show that an arrhythmia event was detected, but no alarm occurred because alarming for this arrhythmia type was turned off in the Arrhythmia Alarms Setup window.

The blue cursor bar identifies event types along each waveform.

2. Jump to the next or previous alarm or arrhythmia event.
  - Click or to jump to the next or previous alarm.
  - Click or to jump to the next or previous arrhythmia event.
3. Jump to the next or previous event of the same type that is currently displayed.
  - Click or to jump to the next or previous alarm of the same type.
  - Click or to jump to the next or previous arrhythmia event of the same type.

The blue cursor bar identifies the event.

If you do not see some of these buttons in the window, click or in the upper left corner of the Acuity System screen to change the screen view.

## Review arrhythmia events

(Arrhythmia Analysis option)

In the Arrhythmia Events Review window, you can review and print arrhythmia events in these ways:

- List arrhythmia events and event counts, by type.
- Review ECG waveforms associated with arrhythmia events.
- View normal and ventricular ECG beat labels.
- Jump to the next or previous alarm or arrhythmia event.
- Jump to the next or previous alarm or arrhythmia event of the same type as the one currently shown.
- (Advanced Arrhythmia Analysis option) Delete or undelete an arrhythmia event marker from review windows and printouts.

If your window appears abbreviated, your system includes the Lethal Arrhythmia Analysis option (lethal arrhythmia detection, only).

Open an Arrhythmia Events Review window

### To open an Arrhythmia Events Review window

1. Open the window for one of these types of patients:
  - Current patient in local unit:



In the patient's Waveform Window, click .

- Non-monitored patient or patient in a networked Acuity System unit:
  - a. In the Acuity Central Station screen's lower left corner, click .
  - b. For a patient in the listed unit, click the patient's name and .

For a patient in another unit: Click **Other Patients**, the patient's name, and .


The Arrhythmia Events Review window appears.



These open the Graphical Trends, Tabular Trends/Events, Waveforms, Arrhythmia Events and OxyCRG Review Windows.

Prints a Review Print that covers the time span shown in the window.

Adjust the content of both list sections

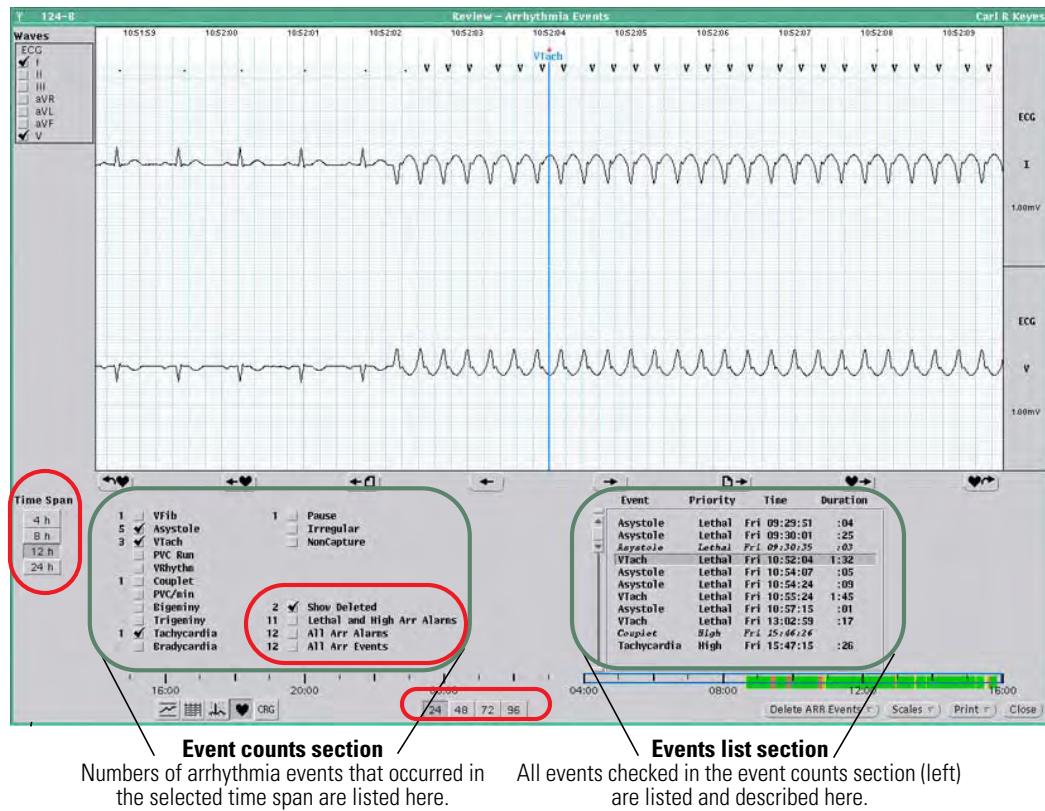

### To adjust the time period covered in both list sections

1. Click a number under the time line to adjust the line's scope, in hours.
2. On the time line, click an area in which you are interested. Events are red.

The blue box moves. The box indicates the time span covered in both sections.

3. Under Time Span, click to specify the number of hours spanned in both list sections.


In the event counts section, the number of events beside each box is updated to reflect the current time span.

In the events list section, the listings change.

### To specify the content of the events list

1. In the event counts section, check any of these things to list them in the events list section:
  - a. Check arrhythmia-types.
  - b. Check these boxes to further refine the listings:
    - Lethal and High Arr Alarms: List only lethal events and events that were set to high priority in the Arrhythmia Alarms Setup window.
    - All Arr Alarms: List all events that alarmed.
    - All Arr Events: List all events that occurred, whether or not they were set to alarm.

Adjust the waveform display

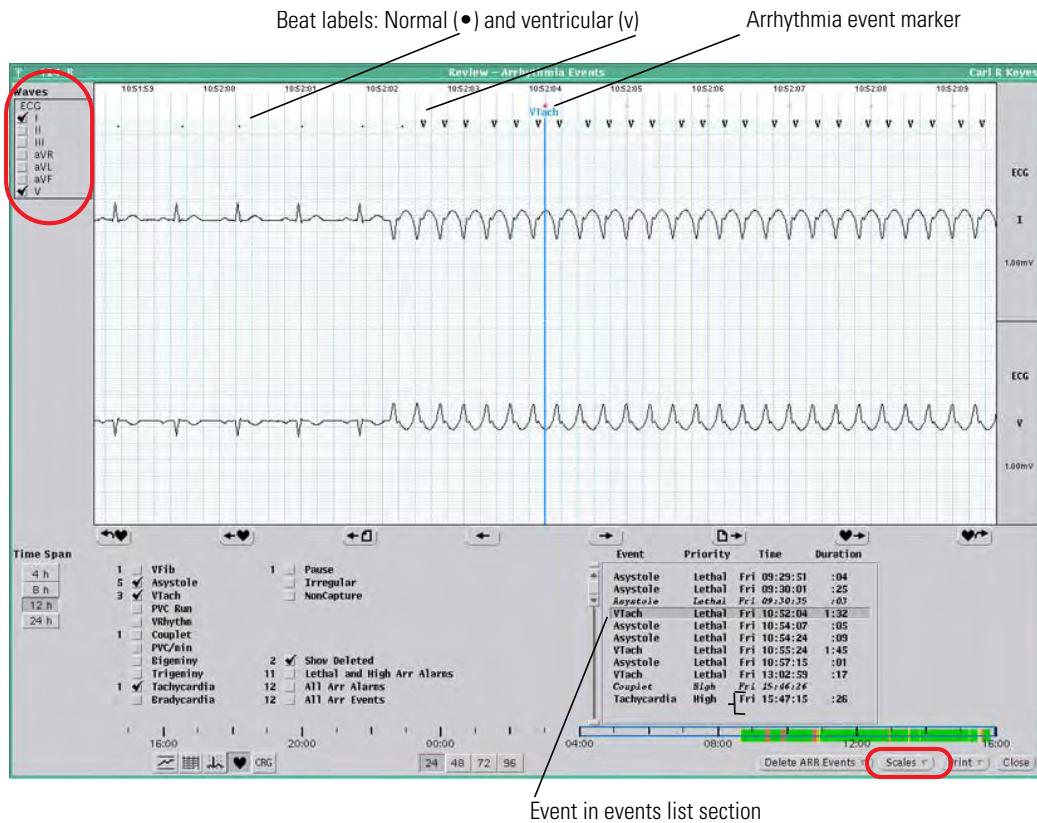

**To display waveform(s) that correspond to an event**

1. In the events list section, click an event.

The corresponding waveform(s) appear in the waveform pane, and the blue cursor bar indicates the event.

2. Scroll the waveform.

Click  or  to scroll forward or backward.

Click  or  to page forward or backward.

3. Click  or 

Click  or  to jump to the next or previous arrhythmia event of the same type that is currently indicated by the cursor bar.

## To select and adjust the waveform(s)


1. Check boxes under Waves to display waveforms from different ECG lead sources.

Up to seven waveforms can fit in the window.

2. If you see less than seven waveforms, and you prefer more, click  in the upper left corner of the Acuity System screen to change to the full-screen view.

3 Click **Scales** and then make a selection

Delete or undelete an arrhythmia event marker from review windows and printouts  
(Advanced Arrhythmia Analysis option)

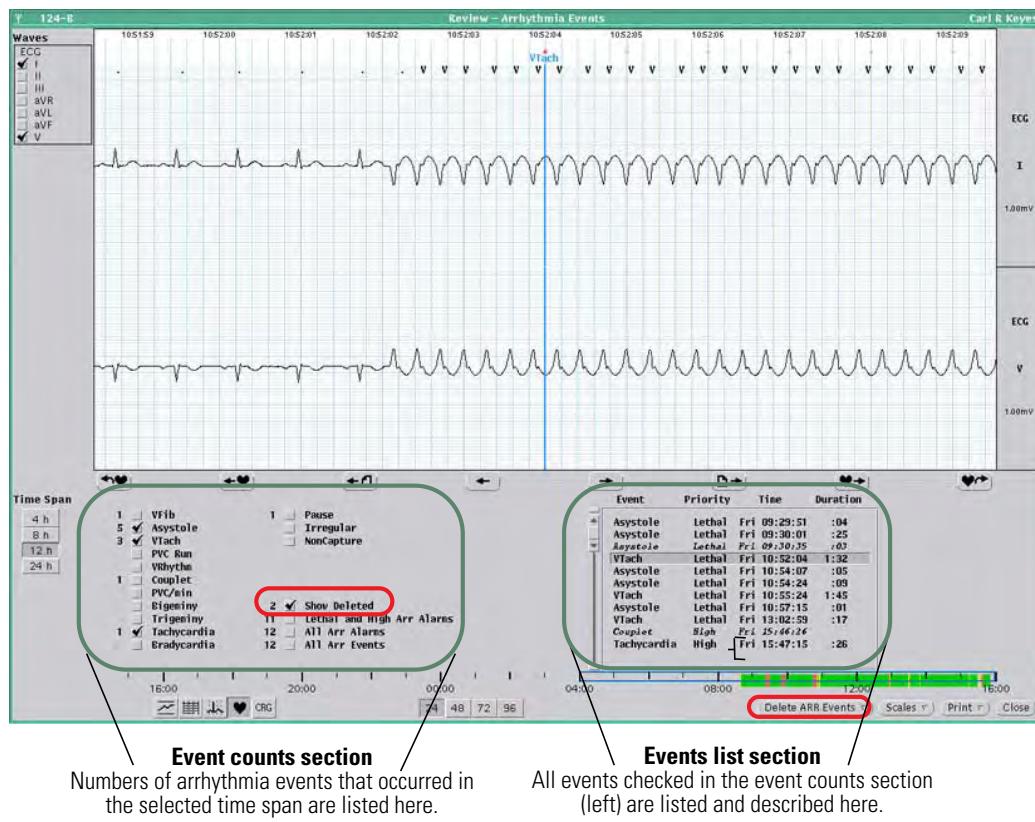

### To delete an event from review windows and printouts

1. In the event counts section, check boxes next to event-types that you would like to delete.
2. In the events list section, click the arrhythmia that you would like to delete.
3. Click **Delete ARR Events**, and then click **Delete Selected**.

The event is deleted.

### To undelete an event fro review windows and printouts

1. In the event counts section, check the **Show Deleted** box to show italicized (deleted) events in the events list section.

The number of deleted events in the displayed time span appears to the left of the box

2. In the events list section, click the italicized event that you would like to undelete.
3. Click **Delete ARR Events**, and then click **Undelete Selected**.

The event is restored.

## Review ST analysis information

This section explains how to review ST analysis review information. In the ST Analysis Setup window, you can do these things:


- View current beats for specific leads
- View current ST-segment deviation values, including alarm values

If you are would like information about setting up ST-segment analysis, see “[ST Analysis option](#)” on page 69.

### To view current beats and ST-segment deviation values

1. In the patient’s Virtual Monitor, click **Setup, ST Analysis**.

The ST Analysis Setup window appears.

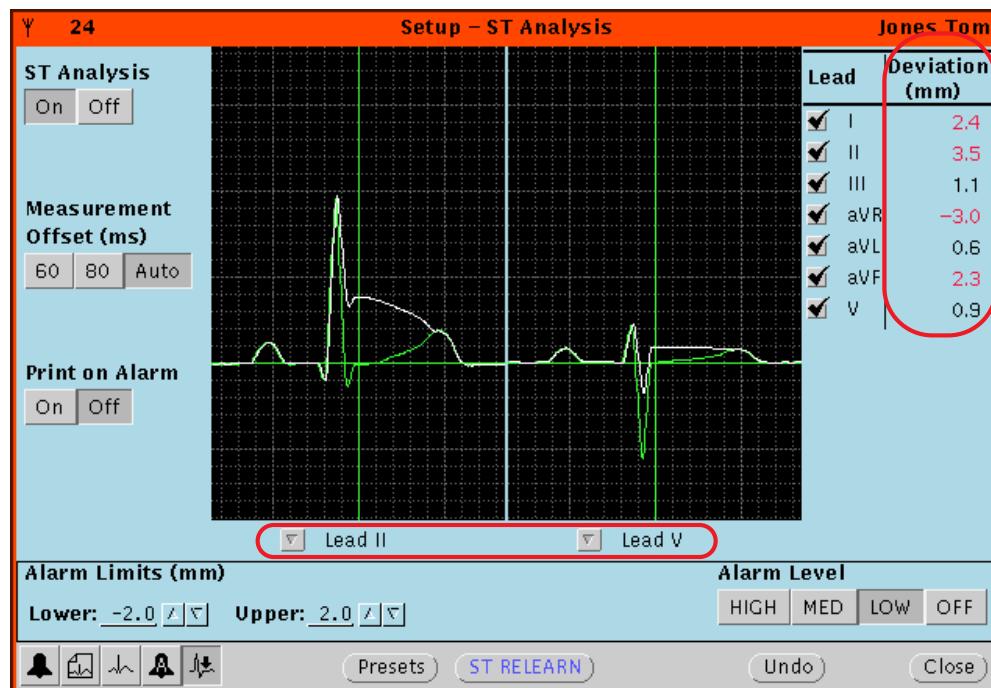

2. Beneath the waveforms, click the arrows to select the leads used for one or both lead displays.
3. View current ST-segment deviation values in the Deviation column.

Alarm values are red.

Graphical trend values are shown in the Graphical Trends Review window. For instructions on how to view ST trends, see “[Review graphical trends](#)” on page 99.

## Review OxyCRG information

(Full Disclosure option)

In the OxyCRG review window, you can review and print oxygen cardiorespirogram information in these ways:


- Scroll respiration and CO<sub>2</sub> waveforms and graphical trend data for HR/PR and SpO<sub>2</sub>.
- Locate red alarm periods along the trend graphs.
- Click graphs to see vital-sign values.
- Jump to the next or previous alarm.

Open an OxyCRG Review window


### To open an OxyCRG Review window

1. (Optional) In the upper left corner of the Acuity Central Station screen, click  to change the screen view to see a larger review window.
2. Open the window for one of these types of patients:
  - Current patient in local unit:  
In the patient's Virtual Monitor, click **Review, OxyCRG**.
  - Non-monitored patient or patient in a networked Acuity System unit:
    - a. In the Acuity Central Station screen's lower left corner, click .
    - b. For a patient in the listed unit: Click the patient's name, and then click .
    - For a patient in another unit: Click **Other Patients**, the patient's name, and .

The OxyCRG Review window appears.

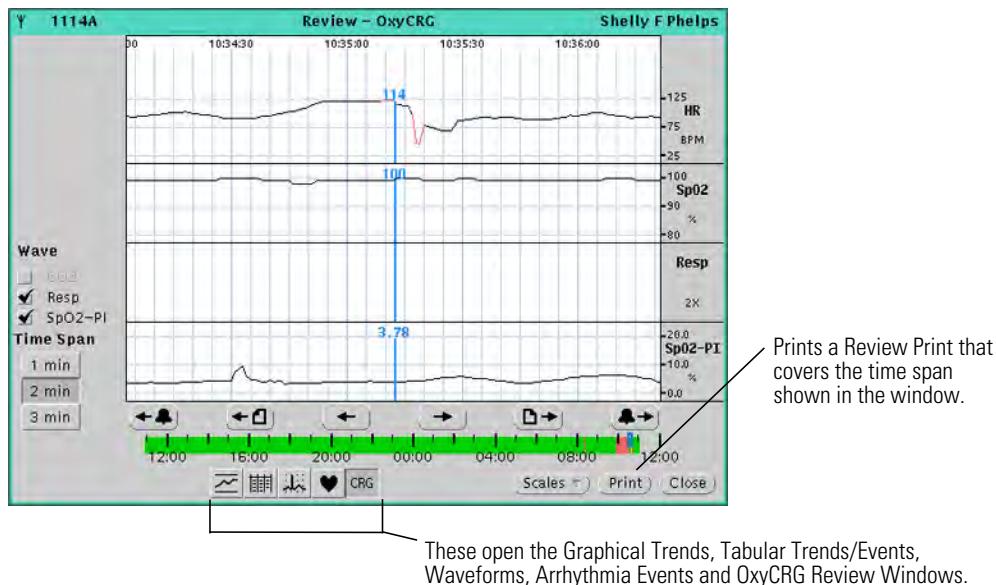

## Adjust the OxyCRG display and locate alarms

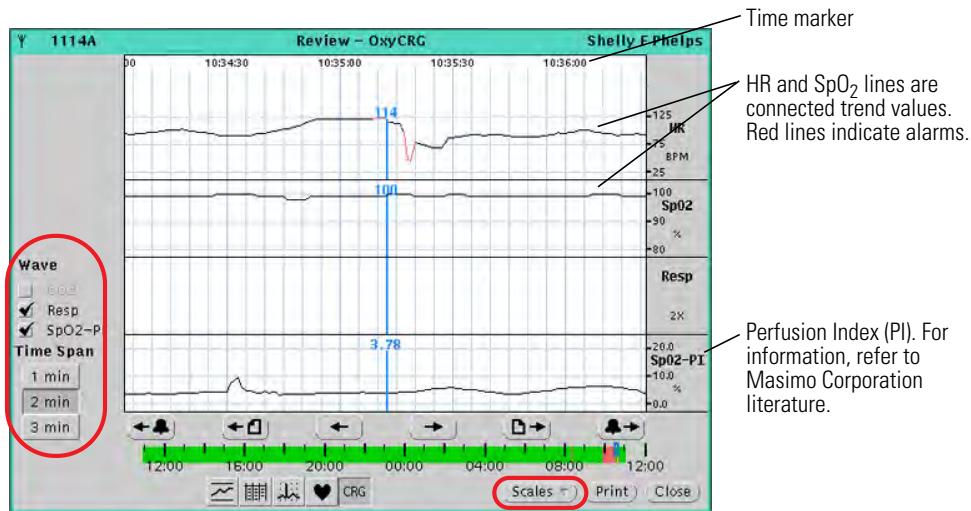

### To adjust the time period shown in the display area of the window

- Under Time Span, click a button.  
Time markers show along the top of the graphs area.
- Click on the time line to display data from a different time period.  
Along the time line, patient alarms are red.
- Scroll the display.  
Click or to scroll the display forward or backward.  
Click or to page the display forward or backward.

### To select and adjust the CO<sub>2</sub> waveform and the trend graphs

- Under Wave, check up to three boxes to display the corresponding wave or trend graphs.
- Click **Scales**, and then make a selection.

### To locate and display alarm information

- Click a red (alarm) area along a trend graph or wave.  
The blue cursor bar shows vital-sign values along each trend graph or wave.
- Click or to jump to the next or previous alarm.

## Print and review printouts

The Acuity System includes six types of printouts:

- Snapshot printouts
- Review printouts
- Alarm printouts
- Patient List printouts
- 12-Lead printouts
- Hemodynamic Report printouts

### Snapshot printouts

Snapshot printouts provide an instant snapshot of a currently monitored patient's data and waveforms.

#### Information in a Snapshot printout

- Data from fourteen seconds before and seven seconds after the Snapshot button is clicked
- The same waveforms that are selected for display in the Virtual Monitor

#### Snapshot printouts

Snapshot printouts are printed from these places:

- A Waveform Window or Virtual Monitor
- Some patient monitors


For more information, see the directions for use of the monitors in question.

Automatic snapshot printouts:

- If you are interested in setting automatic intervals for snapshot printouts to occur, see ["Adjust preferences for a patient's central station printouts" on page 49](#).


Print a Snapshot printout on demand

### To print a snapshot from a Waveform Window

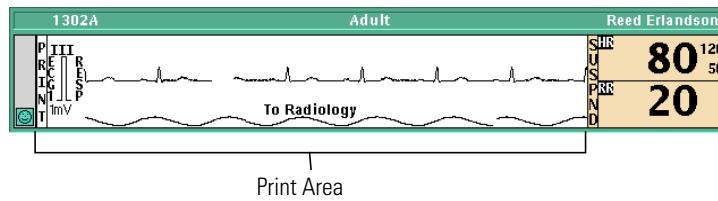

- Bring your pointer into the window and click **PRINT**, or click anywhere in the Waveform Area.  
A printout occurs at the Acuity System printer.

### To print a snapshot from a Virtual Monitor

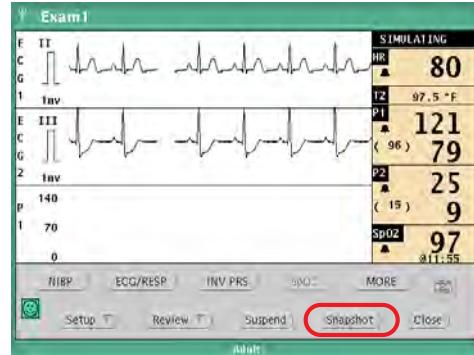

- Click **Snapshot**.  
A printout occurs at the Acuity System printer.

## Review printouts

Review printouts capture information shown in a current or non-monitored patient's review window.

### Information in a review printout

- The information displayed in a review window
- Information formatted uniquely for each type of review window

### Availability of review printouts for different types of patients

- Current patients
- Discharged or non-monitored patients: Patients who have been monitored by the Acuity System in the last 24 to 96 hours (depending upon your system configuration)

### Print a review printout

#### To print a review printout

1. Open a review window for one of these types of patients:
  - Current patient in local unit:  
In the patient's Virtual Monitor, click **Review**, and then select a review window.
  - Non-monitored patient or patient in a networked Acuity System unit:
    - a. In the Acuity Central Station screen's lower left corner, click .
    - b. For a patient in the listed unit: Click the patient's name, and then click one of these review window buttons.
- For a patient in another unit: Click **Other Patients**, the patient's name, and then click one of these review window buttons.



Graphical Trends



Tabular Trends/  
Events



Waveforms



CRG



Arrhythmia  
Events

2. In the review window, click **Print**, and then click one of these printout types:

Review window	Review printout choices
Graphical Trends	Graph Table Summary
Tabular Trends/Events	Tabular Trends/Events (no selection is offered; Tabular Trends/Events is printed)
Waveforms	Waveforms Custom All leads
Arrhythmia Events	Waveforms Event List
OxyCRG	Graph (no selection is offered; Graph is printed)

Read a review printout

### To read a review printout

**A. Type of printout**

**B. Number of deleted events**

**C. Deleted event**

**D. Included events**

Thursday 13-October-2005 04:00:00

Medical Center

Katarina Watson 2002  ZONE-1 1334B

Patient ID # Amended ID Location

04:00 12 Hour Arrhythmia Event Review Adult 16:00

Selected Events for Review

Event	Leads	Priority	Time	Duration	Comments
PVC Run	II V II	Off	Thu 12:23:11		
VFib	II V II	Lethal	Thu 12:23:12	:40	
Bigeminy	II V II	Off	Thu 12:23:52	:32	
Couplet	II V II	Off	Thu 12:24:51		
Couplet	II V II	Off	Thu 12:25:03		
Asystole	II V II	Lethal	Thu 12:25:24	:22	
Trigeminy	II V II	Med	Thu 12:25:49	:11	
Pause	II V II	Med	Thu 12:26:26		
Irregular	II V II	Med	Thu 12:26:29	:27	
Bradycardia	II V II	High	Thu 12:26:56	:59	
Irregular	II V II	Med	Thu 12:27:55	:24	
VTach	I V I	Lethal	Thu 12:39:57	:15	
VTach	I V I	Lethal	Thu 12:45:30	:03	
VFib	I V I	Lethal	Thu 12:45:33	:40	
Asystole	I V I	Lethal	Thu 12:46:30	:28	
Bigeminy	I V I	High	Thu 12:47:09	:24	
Trigeminy	I V I	Med	Thu 12:47:38	:26	
Bigeminy	I V I	High	Thu 12:48:04	:17	

A. Type of printout

The title of the review printout

B. Number of deleted events

Number of arrhythmia events that were deleted in the Arrhythmia Events Review window during the printed time span.

C. Deleted event

This event was deleted in the Arrhythmia Events Review window.

D. Included events

All events checked in the Arrhythmia Events Review window (and checked above) are listed in this printout.

## Alarm printouts

If Print on Alarm is set for a patient's parameter and the parameter alarms, an alarm print occurs at the central station.

### Information in an alarm printout

- Fourteen seconds before an alarm and seven seconds after an alarm
- The same waveforms that are selected for display in the Virtual Monitor

### Types of alarm printouts


- Vital sign
- OxyCRG
- Arrhythmia event
- ST-segment deviation

### Set printing on alarm

To learn how to set Print on Alarm for various parameters and events, see these pages:

- For vital sign and OxyCRG alarm printing, see ["Adjust preferences for a patient's central station printouts"](#) on page 49.
- For arrhythmia event alarm printing, see ["Adjust preferences for a patient's arrhythmia alarming"](#) on page 61.
- For ST-segment deviation alarm printing, see ["Set alarm preferences for ST Analysis"](#) on page 74.

## Review an alarm printout

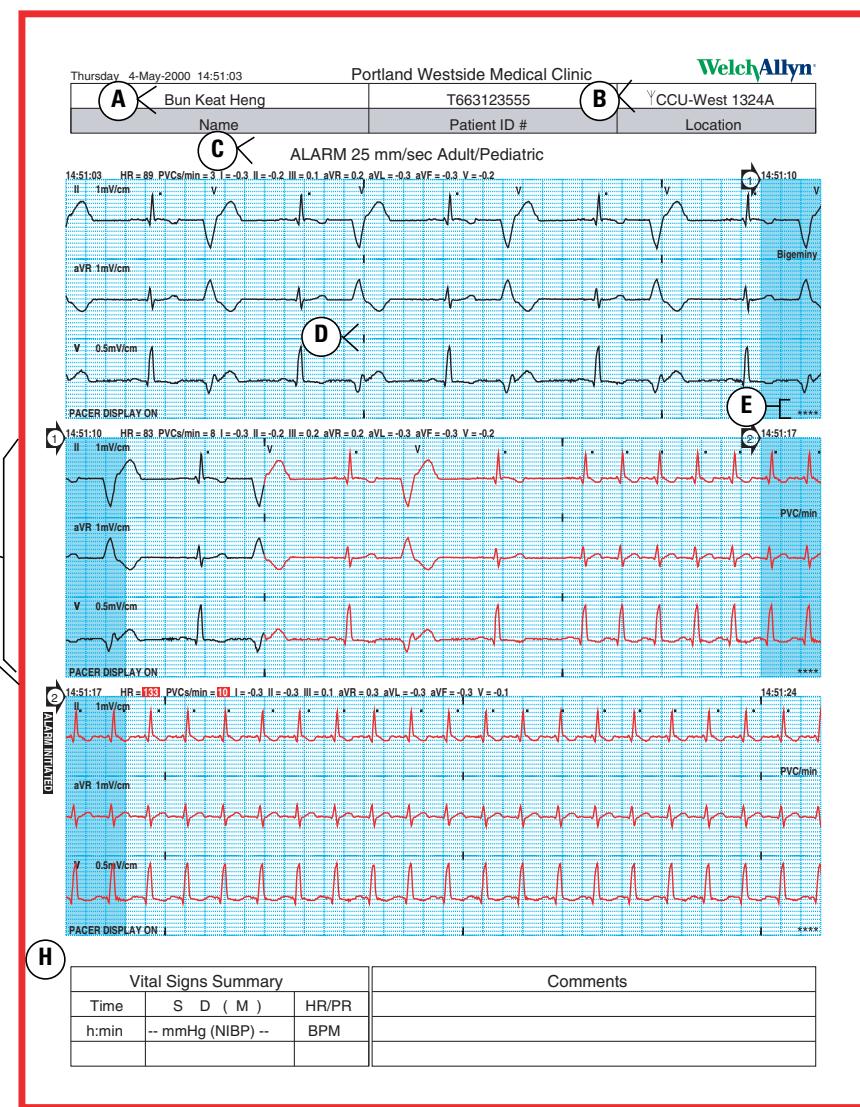

- A. Patient name appears if patient is confirmed in the Acuity System.
- B.  indicates that this patient is monitored by a wireless monitor.
- C. The type of printout
- D. A three-second interval mark
- E. An arrhythmia event marker was deleted for this waveform, in the Arrhythmia Events Review window.
- F. Waveforms shown in a left shaded area are shown also in the preceding band's right shaded area.
- G. The printout was initiated at this time.
- H. The vital signs summary appears when three or less waveforms per strip are chosen for printouts.  
The box remains empty when no NIBP measurements have been taken within the last eight hours.

## Patient List printouts

You can print lists of patients in your unit. If your system is part of an Acuity System network, you can print lists of patients in any units within the network.

### Types of Patient List printouts

- Preadmitted patients: Patients pre-admitted to the Acuity System within the last 24 to 96 hours
- Current patients
- Discharged or non-monitored patients: Patients who have been monitored by the Acuity System in the last 24 to 96 hours (depending upon your system configuration)

### Patients listed in Patient List printouts

#### **To print a Patient List printout**

1. In the lower left corner of the Acuity Central Station screen, click  .  
The patients shown in the Patient List window are those assigned to your Acuity System unit.
2. Take one of these steps:
  - To print the current list, proceed to Step 4.
  - To list patients in another (networked) Acuity System unit, click **Other Patients**.  
The Other Patients List appears.
3. Click **Unit**, and then select the unit name from the box on the right.  
Patients are listed by unit.
4. Click a column heading to sort the list by name, location or ID.  
Actively monitored patients are listed at the top.
5. Click **Print List**.  
A printout occurs at the Acuity System printer.

## 12-lead printouts

You can perform 12-lead ECG interpretation and create printouts through the Welch Allyn 1500 Patient Monitor.

**Note** The 12-lead ECG interpretation measurements are not saved on the monitor and are printed out at the Acuity System printer. However, Acuity will support re-printing of the 12-lead reports. Files are saved for 96 hours.

### Types of 12-lead printouts

- Average beats, 3x4 plus rhythm strip
- Average beats, 6x2 plus snippets for V1 through V6
- Automatic (sequential) 3x4 plus rhythm strip
- Automatic (sequential) 6x2
- Automatic (simultaneous) 3x4 plus rhythm strip
- Automatic (simultaneous) 6x2

**Note** The 12-Lead printouts in the 6x2 formats can print both Standard lead sequences and Cabrera lead sequences. The 3x4 format always prints a Standard lead sequence.

### Print a 12-lead ECG printout


#### To print a 12-lead printout

1. Run a 12-lead analysis using the Welch Allyn 1500 Patient Monitor.  
Once the analysis is completed, the 12-lead report automatically prints at the Acuity System printer.
2. If a re-print of the last 12-lead analysis is needed, place the cursor under printer icon at the Waveform Review Window or the Graphical Trends Review Window.

Click **Print** and select **Print Report**.

A printout occurs at the Acuity System printer.

## Review a 12-lead report

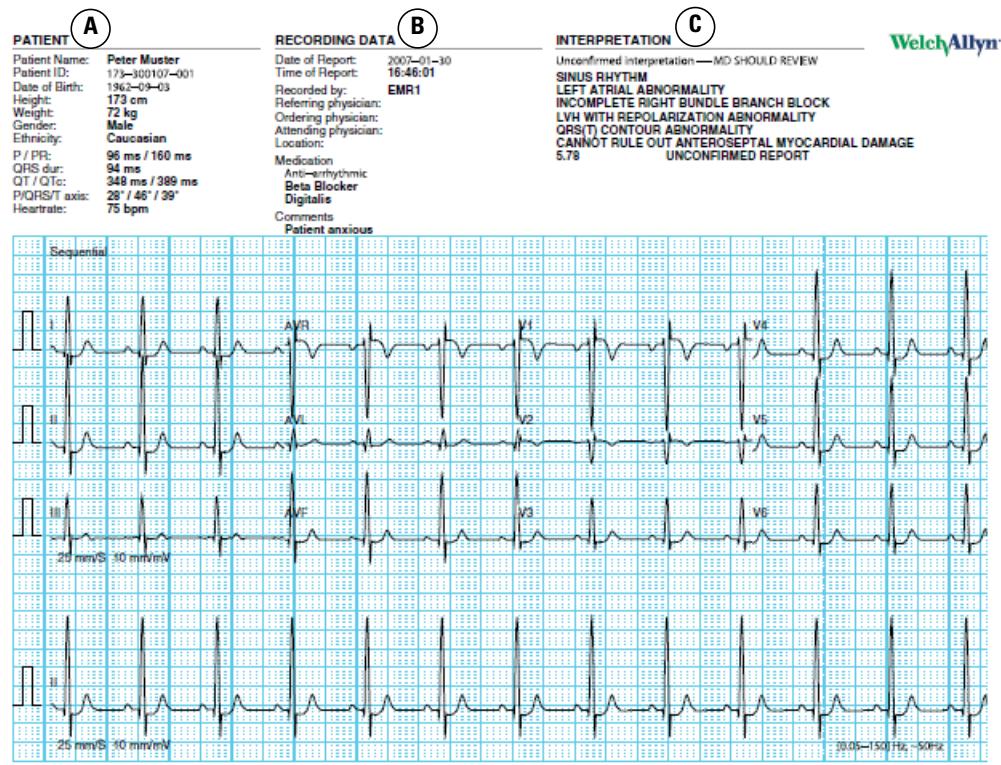

- A. Patient information appears if patient is confirmed in the Acuity System. This data includes extended demographics such as date of birth, height, weight, gender, ethnicity, and other measurements.
- B. Print information. This data includes when the report was printed, clinician and physician information, and a list of medications the patient may be taking. A comment field is also available.
- C. Interpretation information. This field displays the information generated by the Welch Allyn 1500 Patient Monitor regarding the analysis of the 12-lead report.

## Hemodynamic Report printouts

Hemodynamic Reports are a collection of calculations derived from the cardiac output feature of the Welch Allyn 1500 Patient Monitor.

### Print a Hemodynamic Report

#### To print a Hemodynamic Report

1. Run a cardiac output measurement at the Welch Allyn 1500 Patient Monitor.
2. Select **Hemodynamic Calculations** at the monitor.
3. Select **Transfer Data**.

The monitor sends the Hemodynamic Report to the central station printer.

4. If a re-print of the Hemodynamic Report is needed, place the cursor under printer icon at the Waveform Review Window or the Graphical Trends Review Window.

Click **Print** and select **Print Report**.

A printout occurs at the Acuity System printer.

### Review a Hemodynamic Report

**Wednesday 7-September-2011 16:01:21** 

<b>A</b>	John Doe	123-45-6789		TestUnit 1302A
	Name	Patient ID #	Amended ID	Location
<b>Hemodynamic Calculations</b>				
Acquired from WA 1500 PM v 1.3.0.517 SN KA340E5C				
HR	80 bpm	CO	8.00 l/min	CI 4.44 l/min/m <sup>2</sup>
ARTs	86 mmHg	SV	100.0 ml	SVI 55.6 ml/m <sup>2</sup>
ARTd	54 mmHg	SVR	510 DS/cm <sup>5</sup>	SVRI 918 DS m <sup>2</sup> /cm <sup>5</sup>
ARTm	65 mmHg	PVR	80 DS/cm <sup>5</sup>	PVRI 144 DS m <sup>2</sup> /cm <sup>5</sup>
<b>B</b>	PA <sub>s</sub>	LCW	4.7 kg-m	LCWI 2.6 kg-m/m <sup>2</sup>
	PA <sub>d</sub>	LVSW	58.5 g-m	LVSWI 0.97 g-m/m <sup>2</sup>
PAm	30 mmHg	RCW	1.74 kg-m	RCWI 12.09 kg-m/m <sup>2</sup>
CVPm	14 mmHg	RVSW	21.76 g-m	RVSWI 21.76 g-m/m <sup>2</sup>
PAWP	22 mmHg			
Height	75 in			
Weight	125.0 lb			
BSA	1.80 m <sup>2</sup>			

- Patient information appears if the patient is confirmed in the Acuity System.
- Hemodynamic calculations. This area displays the information generated by the Welch Allyn 1500 Patient Monitor regarding the hemodynamic calculations.

## 7

## Move a monitored patient

---

You can move a monitored patient in these ways:

- Move a patient and monitor to a new room within the unit or transfer to a new unit within the same Acuity System network.
- Move a patient to a different monitor anywhere within the same Acuity System network.

If the patient's original Acuity System review information is still available within the Acuity System network (24 to 96 hours after disconnect), it is available in the new location after the move.

Patient data collected on the patient monitor during the move might transfer to the Acuity System, depending upon the monitor.

For information about patient monitors that are part of your Acuity System but are not shown in this chapter, consult the patient monitor manufacturer's literature.

### Move the patient and monitor to a new location

You can arrange to move a patient and monitor to a new location in these ways:

- From the Acuity Central Station
- From a hardwired or wireless monitor.

If you would like to add a note to a patient's Waveform Window regarding a move, you can do so in the Patient ID Setup window. For instructions, see ["Add or remove a note in a patient's Waveform Window"](#) on page 81.



**WARNING** Always check alarm limits when a monitor reestablishes communication with the Acuity System. If you change limits at a monitor while it is not communicating with the Acuity System (for example, during transport or signal dropout), when you reestablish communication with the system, the limits might change to Acuity System Presets values.

## Arrange a patient move from the Acuity Central Station

If you want to arrange a patient transfer to another unit, you must do so in the unit from which the patient is transferring.

### To arrange a patient move from the Acuity Central Station

1. In the lower left corner of the Acuity Central Station screen, click .

The Patient List window opens.

2. Click the patient name.
3. Click **Transfer**.

The Transfer Patient window appears.

4. Click the unit name in the list, even if the patient will stay in the same unit.
5. Take one of these steps:

- If you know the room number, click the new room.
- If you do not know the room number, click **UNASSIGNED**.

You can enter the room number later via the Patient List or the Virtual Monitor.

6. Click **Confirm**.

If the patient is currently connected to a hardwired patient monitor, the information is stored at the Acuity Central Station and the patient map icon remains in the original position and state until the move takes place.

If the patient is connected to a wireless patient monitor and transferred to a new unit, the patient map icon appears at the new central station. If you did not enter the room number, the icon remains in the yellow RM unconfirmed state until the room is confirmed.

## Move patients and their hardwired monitors



Propaq CS monitor



Propaq Encore monitor



Welch Allyn 1500 Patient Monitor

### **To disconnect, move and reconnect a hardwired monitor to a new network connector**

Throughout this procedure and the move, leave the monitor turned on.

1. On a Propaq CS monitor: Press **NET OFF** in the top left corner of the screen.

On a Propaq Encore monitor: Press **NET OFF** on the top right corner of the casing.

On a Welch Allyn 1500 Patient Monitor: Press the **Standby** key and select **Discontinue Monitoring**.

2. Within 15 seconds, remove the Acuity System network cable from the monitor.

The monitor should disconnect from the Acuity System. If it does not, begin again at Step 1.

3. In the new location, connect the Acuity System network cable to the Acuity System network connector on the bedside monitor.

The CONFIRM PATIENT? prompt appears.

4. Take one of these steps:

- If the information in the CONFIRM PATIENT? prompt is correct, click **YES**.

At the central station, the patient is confirmed with the new location.

- If the information in the CONFIRM PATIENT? prompt is incorrect, click **NO** and see "[To respond to the CONFIRM PATIENT? prompt](#)" on page 29.

**To switch a hardwired Propaq CS monitor to a wireless connection**

**WARNING** When a hardwired Propaq CS monitor is disconnected from an Acuity System, if the monitor has wireless capability, it attempts to connect wirelessly to an Acuity System.

After connection, go to the Acuity Central Station where you want the monitor to have connected. Ensure that the patient monitor's icon appears on the central station map.

If it does not, contact your Biomedical Engineering department. If you are a biomedical engineer, see "[Identify or change a monitor's network name \(ESSID\)](#)" on page 165.

Throughout this procedure, leave the monitor turned on.

1. In the upper left corner of the Propaq CS monitor display, touch **NET OFF**.
2. Within 15 seconds, remove the Acuity System network cable from the Propaq monitor.



The CONFIRM PATIENT? prompt appears when the monitor connects with an Acuity System.

3. Take one of these steps:
  - If the information in the CONFIRM PATIENT? prompt is correct, click **YES**.  
At the central station, the patient remains confirmed.  
If the patient is moving, see "[To arrange a patient move from a wireless Propaq CS monitor](#)" on page 130.
  - If the information in the CONFIRM PATIENT? prompt is incorrect, click **NO** and see "[To respond to the CONFIRM PATIENT? prompt](#)" on page 29.

## Move patients and their wireless monitors



Arrange a patient move from the patient monitor

### To arrange a patient move from a Micropaq monitor

1. Press to highlight **ACUITY**, and then press to select it.
2. Take one of these steps:
  - Select **NEW ROOM** to move the patient to a new room within the unit, and then select a new room.  
The patient is confirmed with the new room.
  - Select **TRANSFER** to transfer the patient to a different unit, select the new unit, and then select the new room.  
The patient is confirmed and the patient's map icon appears at the new central station.



### To arrange a patient move from a Propaq LT monitor

1. Press the arrow keys to underline at the top of the screen, and then press to select it.
2. Select **Acuity menu**.
3. Take one of these steps:
  - Select **NEW ROOM** to move the patient to a new room within the unit, and then select the new room.  
The patient is confirmed with the new room.
  - Select **TRANSFER** to transfer the patient to a different unit, select the new unit, and then select the new room.  
The patient is confirmed and the patient's map icon appears at the new central station.



**To arrange a patient move from a wireless Propaq CS monitor**

1. From the main menu, touch **SETUP, ACUITY, PATIENT**.
2. Take one of these steps:
  - Select **NEW ROOM** to move the patient to a new room within the unit, and then select the new room.  
The patient is confirmed with the new room.
  - Select **TRANSFER** to transfer the patient to a different unit, select the new unit, and then select the new room.  
The patient is confirmed and the patient's map icon appears at the new central station.
3. (Optional) Switch a wireless Propaq CS monitor to a hardwired connection:
  - a. Connect the Acuity System network cable to the Acuity System network connector on the bedside monitor.
  - b. Connect the other end of the cable to the bedside network connector.

The patient is confirmed and the patient's map icon appears in the new location.



## Move the patient to a different monitor

You can move patients who are connected to hardwired or wireless monitors to different monitors within the same Acuity System network.

### Move a patient from a hardwired monitor to a different monitor

1. On a Propaq CS monitor: Press **NET OFF** in the top left corner of the screen  
On a Propaq Encore monitor: Press **NET OFF** on the top right corner of the casing.
2. Turn off the monitor.  
The trend information for this patient is erased from the monitor.
3. On a Welch Allyn 1500 Patient Monitor:
  - a. Press the **Standby** key and select **Discontinue Monitoring**.
  - b. Turn off the monitor.  
or
  - c. At Acuity, select **END TELE**.



**Note** Turning off the monitor is optional and not required when selecting END TELE.

In either case, the trend information for this patient is erased from the monitor.

4. Connect the patient to a new monitor, and connect the monitor to the Acuity System.  
At the central station, the patient's yellow icon appears in an unconfirmed state on the map in the new location.
5. Enter or confirm the patient information.  
For instructions, see "Enter and confirm a patient's ID or room at the central station" on page 40.

### Move a patient from a wireless monitor to a different monitor

#### To move a patient from a Micropaq monitor to a different monitor

1. On the Micropaq monitor, press to highlight **ACUITY**, and then press to select it.
2. Select **END TELE**.  
The monitor disconnects from the Acuity System.
3. Remove the battery from the Micropaq monitor.
4. Connect the patient to a new monitor, and connect the monitor to the Acuity System.  
At the central station, the patient's yellow icon appears in an unconfirmed state on the map.



5. Enter or confirm the patient information.

For instructions, see “Enter and confirm a patient’s ID or room at the central station” on page 40.

#### To move a patient from a Propaq LT monitor to a different monitor

1. On the Propaq LT monitor, press the arrow keys to underline **Y** at the top of the screen, and then press **●** to select it.



2. Select **Acuity menu**.

3. Select **END TELE**.

The monitor disconnects from the Acuity System.

4. Turn off the monitor.

5. Select **Delete & Shut Down**.

The trend information for this patient is erased from the monitor.

6. Connect the patient to a new monitor, and connect the monitor to the Acuity System.

At the central station, the patient’s yellow icon appears in an unconfirmed state on the map.

7. Enter or confirm the patient information.

For instructions, see “Enter and confirm a patient’s ID or room at the central station” on page 40.

#### To move a patient from a wireless Propaq CS monitor to a different monitor

1. On the Propaq CS monitor, touch **NET OFF**.



2. Turn off the monitor.

The trend information for this patient is erased from the monitor.

3. Connect the patient to a new monitor and connect the monitor to the Acuity System.

At the central station, the patient’s yellow icon appears in an unconfirmed state on the map.

4. Enter or confirm the patient information.

For instructions, see “Enter and confirm a patient’s ID or room at the central station” on page 40.

## 8

# Discontinue Acuity System monitoring

---

## Stop monitoring a patient

You can either temporarily interrupt or permanently stop patient monitoring.

For information about patient monitors that are part of your Acuity System but are not shown in this chapter, consult the patient monitor manufacturer's literature.

### Temporarily interrupt monitoring

#### **To temporarily interrupt monitoring a patient**

1. Disconnect sensor cables from the monitor.  
Leave the monitor turned on. Equipment alert(s) appear.
2. Acknowledge (Disable) all equipment alerts.  
At the central station, the patient's map icon and windows are in the blue, "patient intentionally disconnected" state.
3. (Optional) Disconnect lead wires from patient electrodes, and disconnect electrodes from the patient.
4. When ready to resume normal monitoring, reconnect sensor cables to the monitor.
5. If necessary, apply lead wires to electrodes, and apply electrodes to the patient.  
The CONFIRM PATIENT? prompt appears.
6. Take one of these steps:
  - If the information in the CONFIRM PATIENT? prompt is correct, click **YES**.  
At the central station, the patient's windows return to the state that they were in before the disconnect.
  - If the information in the CONFIRM PATIENT? prompt is not correct, click **NO** and see "[To respond to the CONFIRM PATIENT? prompt](#)" on page 29.



**WARNING** If your system includes arrhythmia analysis, and if you connect, change or move an electrode, ensure that a RELEARN alert occurs at the patient monitor and the virtual monitor.

Moving or changing an electrode can change the beat morphology. If the system does not learn the new morphology, it might not alarm or it might cause false alarms. The relearn process establishes the new morphology as the normal ECG rhythm for arrhythmia and ST-segment analyses.

- If a RELEARN alert occurs after changing or moving an electrode, carefully evaluate the new ECG rhythm and the current ST segment for all active leads to make sure that the Acuity System has learned an appropriate rhythm. For evaluation instructions, see ["Respond to a RELEARN alert" on page 91](#).
- If a RELEARN alert does not occur after changing or moving an electrode, initiate a relearn event. For instructions, see ["To initiate relearn of a patient's ECG rhythm for arrhythmia and ST-segment analyses" on page 65](#).



**WARNING** Minimize patient movement during a RELEARN, as movement creates noise during the reading. If the system learns an abnormal rhythm or learns a rhythm during noise, it designates the learned rhythm as normal. Thereafter, rhythms of this type might not trigger an alarm. Ensure that the patient remains still for 5 minutes after the RELEARN before allowing them to move.

## Permanently stop monitoring

### To permanently stop monitoring a patient

1. From the monitor's Main Menu, take these steps.

For Propaq CS and Encore monitors:

- a. In the top left or right corner of the monitor, press **NET OFF**.

The monitor disconnects from the Acuity System.

- b. Turn off the monitor.

The trend information for this patient is erased from the monitor.



For a Micropaq monitor:

- a. Press **▼** to highlight **ACUITY**, and then press **↙** to select it.
- b. Select **END TELE**.

The monitor disconnects from the Acuity System.

- c. Remove the battery from the Micropaq monitor.



For a Propaq LT monitor:

- a. Press the arrow keys to underline **Y** at the top of the screen, and then press **○** to select it.
- b. Select **Acuity menu**.
- c. Select **END TELE**.

The monitor disconnects from the Acuity System.

- d. Turn off the monitor.

- e. Select **Delete & Shut Down**.

The trend information for this patient is erased from the monitor.



For a Welch Allyn 1500 Patient Monitor:

- a. Press the **Standby** key and select **Discontinue Monitoring**.

The patient is discharged from the Acuity System and the monitor enters standby mode.



- b. Turn off the monitor.

or

- c. At Acuity, select **END TELE**.

**Note** Turning off the monitor is optional and not required when selecting END TELE.

In either case, the trend information for this patient is erased from the monitor.

2. Discharge the patient from Acuity System monitoring.

For instructions, see “Discharge a patient from Acuity System monitoring” on page 136.

## Discharge a patient from Acuity System monitoring

A patient’s waveform and trend information is available for review and printing for 24 to 96 hours after Acuity System monitoring has stopped for the patient.

After the information is no longer available, the patient’s name remains in the Patient List window until the patient is discharged from the Acuity System.

Discharge patients when the need for monitoring has passed. If a discharged patient’s waveform and trend information remain in the system, it is still available for review and printing.

You cannot discharge a patient who is currently monitored by the Acuity System.

**Note** On a Welch Allyn 1500 Patient Monitor, selecting Discharge Patient from the Standby menu discharges the patient at the Acuity System.

### To discharge a patient from Acuity System monitoring

1. At the Acuity Central Station from which the patient was monitored, in the lower left corner of the Acuity Central Station screen, click .
2. Click the patient’s name.
3. Click **Discharge**.

The Discharge Patient window appears.

4. Verify that this patient is to be discharged.
5. Click **Discharge**.

The patient is removed from the Patient List when the patient’s waveform and trend information no longer remain in the Acuity System.

# 9

# Status icons

---

## Status icon colors

The color of a status icon conveys the status of the patient, patient monitor or Central Station component that the icon represents.

**Table 7. Colors of Acuity System status icons**

Icon color	Meaning of icon color
Gray	Acuity System is not receiving patient information from this site because no communication is established.
Blue	When the icon represents Acuity System components, the components are operating successfully. When the icon represents an individual monitor, Acuity System is not receiving continuous heart rate or pulse rate information from it.
Green	This patient is successfully monitored. The patient and monitor are not in an alarm or alert state.
Yellow	Alert: When the icon represents an Acuity System component, the component is in an alert state. When the icon represents an individual patient/monitor, there is a monitor problem, or there is a setup problem with Patient ID, room number or alarm limits.
Red	Alarm: Surveillance is lost for this patient, or an alarm limit is violated.


# Patient/monitor status icons

Patient/Monitor status icons show status and act as buttons to open patient Virtual Monitors and Waveform Windows.

## Locations of patient/monitor status icons

Patient/monitor status icons appear on the Acuity Central Station screen in these locations:

- On the map at patient locations
- In the corresponding Waveform Window
- In the corresponding Virtual Monitor

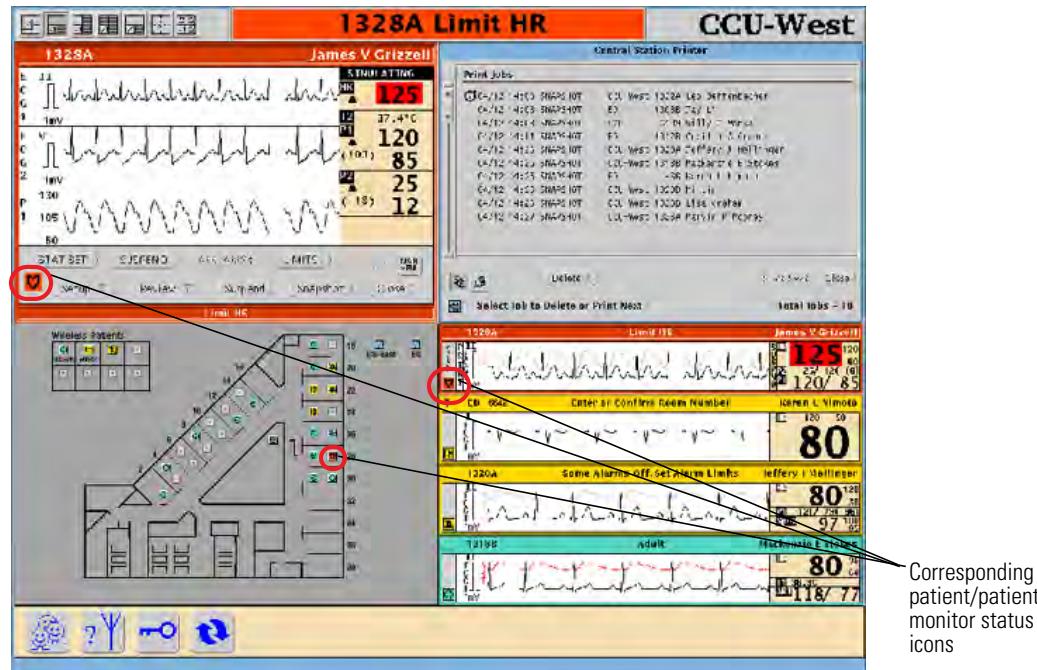

## Opening patient windows by clicking patient/monitor status icons

You can open a patient's Waveform Window or Virtual Monitor by clicking patient/monitor status icons.

### To open a patient's Waveform Window and Virtual Monitor

1. Click a patient's map icon to open the patient's Waveform Window.
2. Click one of these icons to open the patient's Virtual Monitor:
  - The patient/monitor status icon in the patient's Waveform Window
  - The patient's map icon

**Note** If you are viewing from a Patient List Review (PLR) station, see "To open a Waveform Window on a PLR station screen" on page 12 for instructions.

## Patient/monitor status icons and recommended action

This table illustrates these things about patient/monitor status icons:

- Display priority
- Location on the central station map
- Messages at the top of the Acuity Central Station screen
- Messages in message panels (when present)
- Recommended action

**Table 8. Icons and messages that represent patient and monitor status**

Patient/monitor status icon	Icon display priority	Icon location on map	Messages in hallway message panels and at top of Acuity Central Station screen	Recommended action
		Locations representing unused ports available for monitoring Acuity System patients.	None	When you are ready, begin monitoring from this location.
		Locations representing monitors establishing communication with Acuity System.	None	Wait until communication is established before you open the Virtual Monitor or Waveform Window.
		Locations representing monitors disconnecting from Acuity System.	None	If you have pressed the NET OFF key, unplug monitor from Acuity System within 15 seconds or Acuity System reconnects.
		Locations representing monitors from which patients have been intentionally disconnected.	None	If communication between the patient and Acuity System is reestablished, the CONFIRM PATIENT? prompt appears.
		This icon also appears during Manual NIBP-Only monitoring and spot SpO2 monitoring, but does not affect alarming at Acuity.		Click <b>YES</b> to reconnect the original patient to Acuity System.
	Beneath alerts and alarms	Locations representing patients/monitors that are not in an alarm or alert state.	None	
	Beneath alerts and alarms	Locations representing monitors that are only monitoring NIBP, automatically.	None	

**Table 8. Icons and messages that represent patient and monitor status**

Patient/monitor status icon	Icon display priority	Icon location on map	Messages in hallway message panels and at top of Acuity Central Station screen	Recommended action
	Beneath alerts and alarms	Locations representing monitors with audible alarm tones suspended when no alarm or alert violation has occurred.	None	At the patient monitor, press the <b>Silence/Reset</b> key when ready.  Or  At the central station, click <b>Resume</b> in the patient's Virtual Monitor when ready.
color reflects current status of monitor		When the View Wireless button is pressed in the lower left corner of the Acuity Central Station screen, this icon appears in map locations where wireless monitors are actively communicating with Acuity System.	None	
	Low-level alert	Locations representing monitors with unconfirmed patient IDs.	None	In the patient's Virtual Monitor, click <b>Setup, Patient ID</b> .  Confirm or enter ID information
	Low-level alert	Wireless monitor map areas, representing patients with unassigned or unconfirmed room numbers.	None	In the patient's Virtual Monitor, click <b>Setup, Patient ID</b> .  Confirm or enter a room number.
	Low-level alert	Locations representing monitors with alarming for some vital signs set to off.	None	In the patient's Virtual Monitor, click <b>Setup, Alarms</b> .  Set at least one upper and lower "limits-pair" per active vital sign.

**Table 8. Icons and messages that represent patient and monitor status**

Patient/monitor status icon	Icon display priority	Icon location on map	Messages in hallway message panels and at top of Acuity Central Station screen	Recommended action
 Too Many Hardwired Monitors	Takes priority over low-level alerts.	Location representing the extra monitor.	[room #] Equipment	Audible alert tone continues until you disconnect a monitor.  Disconnect a monitor not in use, or wait until another port becomes available to connect the extra monitor.
 Monitor Cannot Communicate	Take priority over low-level alerts	Locations representing monitors that cannot communicate with Acuity System.	[room #] Equipment	Close the alert window and turn off or disconnect the monitor.  Contact qualified service personnel.
 Monitor Problem	Take priority over low-level alerts.	Locations representing problem monitors.	[room #] Equipment or more specific message	<b>At Acuity Central Station</b> 1. Check yellow Virtual Monitor for specific alert message. 2. If there is an audible tone, click <b>Suspend</b> . 3. If present, press one of these buttons: <ul style="list-style-type: none"><li>• <b>DISMISS</b> or <b>CONFIRM</b> to dismiss the alert message</li><li>• <b>RESET</b> to reset the monitor</li></ul> 4. Correct the problem. If the problem persists, contact qualified service personnel.  <b>At patient monitor</b> 1. Check for specific alert message. 2. If present, press one of these buttons: <ul style="list-style-type: none"><li>• <b>Acknowledge</b> to acknowledge the alert</li><li>• <b>RESET</b> to reset the monitor</li><li>• <b>DISABLE</b> to disable the alert</li></ul> 3. Correct the problem.

**Table 8. Icons and messages that represent patient and monitor status**

Patient/monitor status icon	Icon display priority	Icon location on map	Messages in hallway message panels and at top of Acuity Central Station screen	Recommended action
 Monitor Communication Lost	Take priority over low-level alerts.	Locations representing problem monitors.	[room #] Loss of Comms	If the disconnect is intentional, click <b>Confirm</b> , and then close the alert window. Otherwise, reestablish communications between the patient monitor and the Acuity System.
 Alert Tone Suspended	During suspension period, newly occurring alerts are indicated only after original alert is corrected. Acuity System only visually indicates newly occurring alarms by changing the Alert Tone Suspended icon from yellow to red.	Locations representing monitors with suspended audible alert tones.	[room #] Equipment or more specific message	Attend to problem. Then click the <b>Silence/Reset</b> key at the patient monitor or <b>Resume</b> at the central station Virtual Monitor.

**Table 8. Icons and messages that represent patient and monitor status**

Patient/monitor status icon	Icon display priority	Icon location on map	Messages in hallway message panels and at top of Acuity Central Station screen	Recommended action
	Take priority over alerts.	Locations representing monitors that are audibly alarming in response to one of these conditions: <ul style="list-style-type: none"> <li>• Patient vital sign limit violations</li> <li>• Patient monitor is not communicating with the Acuity System.</li> </ul>	[room #] VT ASYS VF APNEA Limit <i>vital sign</i> or [room #] Dropout	<b>Patient Alarm</b> Attend to the patient and suspend or silence the alarm tone. You can turn off or reset alarm limits also at the central station. Then click the <b>Silence/Reset</b> key at the patient monitor, or <b>Resume</b> at the central station Virtual Monitor.
	Take priority over alerts.	Locations representing monitors that no longer receive continuous heart/pulse rate signals. If monitoring began without an HR/PR source, the icon remains blue.	[room #] Source HR/PR	<b>Telemetry Dropout</b> During this state, Arrhythmia and ST alarms are not indicated. 1. Click one of these buttons: <ul style="list-style-type: none"> <li>• <b>SUSPEND</b> to suspend the alarm tone for 90 seconds</li> <li>• <b>RESET</b> to stop the alert and put the monitor in the blue, "patient intentionally disconnected" state,</li> </ul> 2. Bring the wireless monitor within range of a wireless access point. 3. If the problem persists, contact qualified service personnel.
	Take priority over alerts.	Locations representing monitors that no longer receive continuous heart/pulse rate signals. If monitoring began without an HR/PR source, the icon remains blue.	[room #] Source HR/PR	Reconnect the HR/PR source at the patient monitor.  Silence or suspend the audible alarm tone.

**Table 8. Icons and messages that represent patient and monitor status**

Patient/monitor status icon	Icon display priority	Icon location on map	Messages in hallway message panels and at top of Acuity Central Station screen	Recommended action
	Only lethal events interrupt the suspension period. All other newly occurring alarms are indicated only visually, and the icon image remains the same. Newly occurring alerts are not indicated.	Locations representing monitors for which audible patient alarm tones have been suspended and the alarm state is still active.	[room #] VT ASYS VF APNEA Limit vital sign	Attend to the problem, and then click the <b>Silence/Reset</b> key at the patient monitor, or <b>Resume</b> at the central station.

# System component status icons


Acuity System component icons do these things:

- Show component status
- Open Central Station windows (some icons)

## Locations of system component icons

These icons appear in two places on the Acuity System map:

- At the Acuity Central Station area
- If your Acuity System is part of a network, at the Acuity System network area

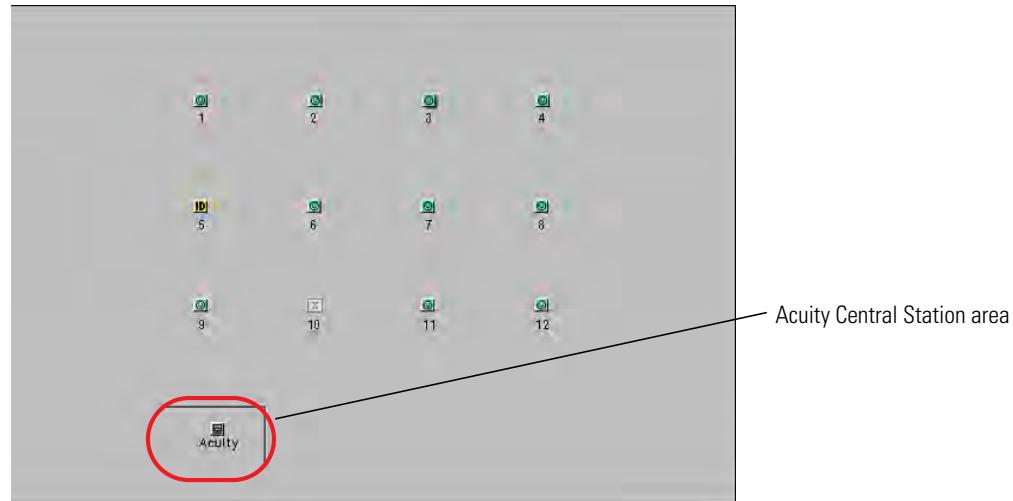

## Opening windows associated with system components

If you click some Central Station component icons on the map, the Central Station Printers window opens.

## System component status icons and recommended action

This table illustrates these things about system component status icons:

- Display priority
- Location on the central station map
- Messages at the top of the Acuity Central Station screen
- Corresponding messages in message panels (when present)
- Recommended action

**Table 9. Icons and messages that represent the status of Acuity System components**

Acuity System component icon	Icon display priority	Icon location on map	Messages at top of Acuity Central Station screen	Recommended action
	Beneath alerts and alarms	Acuity Central Station area	None	Click this icon to open the Central Station Printers window.
Acuity Central Station Components OK				
	Beneath alerts and alarms	Acuity System network area if your system is part of an Acuity network	None	
Networked Acuity System OK				
	Beneath alerts and alarms	Optionally at Acuity Central Station area if your system includes a Welch Allyn connectivity server (WACS)	None	
Connectivity Server (WACS) OK				
	Low-level alert	Acuity Central Station area	Equipment	Contact qualified service personnel.
Central Component(s) Problem			Also various messages in hallway message panels	
	Low-level alert	Acuity Central Station area	Check Panel	Contact qualified service personnel.
Hallway Message Panel Problem				
	Low-level alert	Acuity Central Station area	Swap Space Low	The system will reboot. Contact qualified service personnel.
Swap Space Low				
	Low-level alert, but in certain circumstances no other alarms or alerts can occur during this alert.	Acuity Central Station area	Check Network	Contact qualified service personnel.
Acuity System Network Problem				

**Table 9. Icons and messages that represent the status of Acuity System components**

<b>Acuity System component icon</b>	<b>Icon display priority</b>	<b>Icon location on map</b>	<b>Messages at top of Acuity Central Station screen</b>	<b>Recommended action</b>
	Low-level alert	Yellow icon: appears at Acuity Central Station area and in the Central Station Printer window if printer has a problem.	Yellow icon: Check Laser Printer or Printing Disabled	Click the yellow icon to open the Central Station Printer window, and click  to open the Printers View. Determine the problem.
		Blue icon: appears only in the Central Station Printer window. Indicates that the printer is normal.		Check all printers.
				If necessary, contact qualified service personnel regarding printer status or to redirect print jobs to an alternate printer.
	Low-level alert	Acuity System network area or Acuity Central Station area	Check Network	There is a problem with a networked Acuity System, or the Welch Allyn connectivity server (WACS) is unavailable.
	or			Contact qualified service personnel.
		Connectivity Server Unavailable		
	Low-level alert	Acuity System network area	None	Represents a networked Acuity System that is unknown to your Acuity System.
Unrecognized Networked Acuity System				Software versions do not match.
				Contact qualified service personnel.
	Low-level alert	Acuity Central Station area	Call Service	Some services associated with the Welch Allyn connectivity server (WACS) are unavailable.
Some Connectivity Services Unavailable				Contact qualified service personnel.
	Low-level alert	Acuity Central Station area	Too Many Monitors	Disconnect a wireless monitor.
Too Many Wireless Monitors			Also shown in hallway message panels.	

**Table 9. Icons and messages that represent the status of Acuity System components**

<b>Acuity System component icon</b>	<b>Icon display priority</b>	<b>Icon location on map</b>	<b>Messages at top of Acuity Central Station screen</b>	<b>Recommended action</b>
	Low-level alert	Acuity Central Station area	Notifier Fault	System includes a Welch Allyn connectivity server (WACS) with the AcuityLink option.  Mobile devices that are running Clinician Notifier software are not reachable. All devices are logged off, turned off or out of range, or the AcuityLink network is unavailable.  Contact a clinical administrator and qualified service personnel.

# 10

## Troubleshooting and maintenance

---

### Contact information

If you are unable to find the answer to a question, or if you encounter a problem that cannot be corrected by ordinary operating procedures described in this manual, please contact Welch Allyn Technical Services:

Phone (within the U.S.A.):	1 800 289 2501
Phone (worldwide):	+1 503 530 7500, ask for Technical Service
Fax:	+1 503 526 4970
e-mail:	<a href="mailto:solutions@welchallyn.com">solutions@welchallyn.com</a>
Internet	<a href="http://www.welchallyn.com/support/default.htm">http://www.welchallyn.com/support/default.htm</a>

**Note** Welch Allyn provides a 3-year support program for the Acuity Central Station. After 3 years, Welch Allyn will only provide phone support for the central station, unless you purchase a service contract or purchase an upgrade.

# Contents

## Troubleshooting

Central station displays .....	151
Connection, patient room and patient ID .....	152
Equipment alerts .....	154
Alarm limits .....	155
Patient alarm indications .....	156
Heart rate and ECG displays .....	159
CO <sub>2</sub> , SpO <sub>2</sub> , IPI, and NIBP displays .....	160
Arrhythmia Analysis and ST Analysis .....	161
Printing .....	163

## Maintenance

Adjust Acuity System time .....	164
Identify or change a monitor's network name (ESSID) .....	165
Mobile Acuity LT Systems: Adjust localization parameters .....	169
Power outages .....	170
Periodically check equipment for safety .....	172
Equipment disposal .....	173

# Troubleshooting



**WARNING** Replace central station hardware within the the lesser of 3 years or the original equipment manufacturer's specification. Failure to perform preventative maintenance can impact system performance and availability.

## Central station displays

**Table 10. Troubleshooting the central station display**

Problem	Explanation
One or more of the Acuity Central Station screens are blank or frozen, or some Virtual Monitors have changed color or disappeared	<p>As a preventative measure, the Acuity Central Station monitors its central processing unit (CPU) software performance levels. If it detects that the software is not performing at desired levels, it restarts (auto-reboots) in a controlled sequence, to return the software to normal operation.</p> <p>Paired Acuity Systems include a second, high-availability (HA) CPU for back-up monitoring in the case of monitoring interruption. If one CPU of an HA pair ceases operation, the other CPU assumes control of the Acuity Central Station display(s). A yellow indicator on a display shows that an HA CPU "switchover" has occurred, and the display is receiving input from the HA CPU (for details, see page 13).</p> <p>In both cases, on the Acuity Central Station display(s), typically some virtual patient monitors re-appear quickly and the rest appear one-by-one over the next one to three minutes. Some Virtual Monitors may take approximately five minutes to re-appear.</p> <p><b>To respond to an HA CPU switchover</b></p> <ol style="list-style-type: none"><li>1. If a Virtual Monitor appears in a new yellow alert state, take these steps to return it to the green state:<ol style="list-style-type: none"><li>(a) Read the message to confirm the patient identity.</li><li>(b) Click the appropriate button.</li></ol></li></ol> <p><b>WARNING.</b> If normal central processing unit (CPU) operation is interrupted (for example, during CPU maintenance, scheduled and unscheduled reboots, power loss or a high-availability (HA) CPU switchover period), central station monitoring and analysis temporarily stop.</p> <p>The Acuity System cannot collect patient review data during the interruption period. That data becomes permanently unavailable.</p> <p>Auto-reboots and HA CPU switchovers occur infrequently, but poor environmental conditions and failure to perform preventative maintenance can increase frequency of occurrence.</p> <p>Whenever an interruption in Acuity System CPU operation occurs, please contact Welch Allyn Technical Service soon to ensure that your entire system has returned to normal operating condition and that it does not require further service.</p>

**Table 10. Troubleshooting the central station display**

Problem	Explanation
No audible alarm or alert tones are coming from the central station display.	<p>Look for a mute button on the display, and push it to restore sound.</p> <p>Contact your Biomedical Engineering department if tones are not restored.</p> <p> <b>WARNING</b> If an Acuity Central Station display is intentionally or inadvertently muted, alarm and alert tones do not occur at the display. If your central station display includes audible tones, remain aware of whether they are occurring. If they appear to have stopped, ensure that tones are restored.</p> <p> <b>WARNING</b> Ensure that nothing is connected into the headphone jack of the central station computer. A connection in this jack will mute any audible tones from the display or the computer.</p>
A menu that I do not recognize appears on the Acuity Central Station screen.	<p>Acuity System Engineering menus are large, gray menus with only a password entry line enabled: they appear along the left side of the Acuity System screen.</p> <p>These menus are meant for use only by trained, authorized Welch Allyn service personnel. Unauthorized use of these menus can result in unsafe alteration of the Acuity System, including shut-down of the system.</p> <p>If you inadvertently open a menu that you do not understand and that is not explained in this manual, please disregard the menu and clear it from the screen by pointing anywhere outside the menu and clicking on the left mouse or trackball key.</p>

## Connection, patient room and patient ID

**Table 11. Troubleshooting connection, patient room and patient ID**

Problem	Explanation
When I connected a wireless monitor to the Acuity System, its map icon went into the room that I had assigned it. But now it isn't in the room anymore, and it's a RM icon, meaning the patient hasn't been assigned a room. What happened?	<p>After your patient's icon was successfully assigned to a room, a patient connected to a hardwired monitor was assigned the same room, so your patient was "kicked out."</p> <p>Assign another room to your patient.</p>
When I connect a monitor to the Acuity System,  does not appear on the Acuity Central Station screen.	<p>Ensure that you make a proper connection with the bedside network connector.</p> <p>If it takes more than a few seconds for the Monitor Connecting icon to appear, disconnect the Acuity System network cable from the Acuity System network connector on the Propaq monitor, and then reconnect.</p> <p>If the icon still does not appear, call Welch Allyn Technical Services department.</p>
When I reconnect a wireless monitor patient to the Acuity System, the patient's map icon disappears for a few seconds before the  icon appears.	This is normal in this circumstance. Simply wait the 20 seconds or so until the Unconfirmed Patient ID icon appears.

**Table 11. Troubleshooting connection, patient room and patient ID**

Problem	Explanation
Sometimes patients are assigned an ID number that I didn't give them.	If you do not enter a patient ID number, after (up to) five minutes the Acuity System might generate an automatic patient ID number for you.  The number is created from the room number (or for wireless monitors, part of the serial number of the monitor), and the time.  If you want to change the ID number, see " <a href="#">Edit a patient ID number: add an amended (revised) patient ID</a> " on page 80.
A patient is being monitored with a wireless monitor, and I can't find the patient's data on the central monitor.  Alarms are occurring for the patient at the patient monitor, but not at my unit's Acuity Central Station.	A network name is specified for all wireless patient monitors. If the network name does not match the network name of your Acuity System network, the alarms could be occurring at another Acuity System.  Contact your Biomedical Engineering department. If you are a biomedical engineer, see " <a href="#">Identify or change a monitor's network name (ESSID)</a> " on page 165.

## Equipment alerts

**Table 12. Troubleshooting equipment alerts**

Problem	Explanation
When I connect a monitor to the Acuity System, a Communication Alert message occurs.	<p>Only monitors with Acuity System network connectors on their sides, with Acuity System authorization and with software versions indicated in <b>Table 19</b> on page 175 can communicate with the Acuity System. For compatibility with other monitors, contact your Welch Allyn representative.</p> <p>Confirm the monitor's software version by reading the start-up screen when the monitor is turned on. There is no visual indication that the monitor has Acuity System authorization.</p> <p>If this problem continues, contact qualified service personnel.</p>
The patient monitor displays a "Network Fault" message after I press NET OFF and disconnect from the Acuity System.	<p>Acknowledge (or <b>Disable</b>) the alert.</p> <p>If you wait a few seconds after selecting NET OFF, and then remove the Acuity System cable from the patient monitor, you can prevent this alert.</p>
At the Acuity Central Station, a patient's Virtual Monitor is in the yellow alert state or red alarm state, and it shows a CHECK WIRELESS or TELEMETRY DROPOUT message.	<ol style="list-style-type: none"> <li>1. If there is an audible tone, click <b>Suspend</b> to suspend the alarm tone.</li> <li>2. Click whichever of these buttons is present:           <ul style="list-style-type: none"> <li>• <b>CONFIRM</b> to dismiss the alert message for a number of hours</li> <li>• <b>RESET</b> to dismiss the alert and put the monitor in the blue, "patient intentionally disconnected" state</li> </ul> </li> <li>3. Bring the wireless monitor within range of a wireless access point.</li> <li>4. If the problem persists, contact qualified service personnel.</li> </ol>
While an alert is occurring at the Acuity Central Station, one or more hallway message panels are displaying a different message.	<p>Each message panel might be programmed differently, or a panel has lost network communication, and it is displaying a message that was displayed at the time of the loss.</p> <p>Contact qualified service personnel.</p>
When I change the Acuity System screen view after it has not been changed for several hours, a Monitor Communication Lost alert occurs briefly for one or more monitors, and then Unconfirmed Patient ID status follows.	<p>After the monitors reconnect, click <b>YES</b> in the CONFIRM PATIENT? prompt to confirm the patient's identification.</p>
An NIBP equipment alert is suspended, and then an NIBP measurement is taken. The audible alert tone recurs after 90 seconds.	<p>Go to the patient to investigate the cause of any NIBP equipment alert. Acknowledge the alert, and then correct the problem.</p>
An equipment problem occurred during a patient alarm, but I was not notified.	<p> <b>WARNING</b> During an alarm or alert suspension period, be aware of new visual alarm indications that might occur on the patient monitor or Virtual Monitor. During a suspension period, these things occur at the Virtual Monitor and patient monitor:           <ul style="list-style-type: none"> <li>• Audible tones are suspended for 90 seconds unless RESUME is clicked at the central station or the alarm tone is reset at the patient monitor.</li> <li>• Alarms for lethal events—apnea, asystole, ventricular tachycardia, and ventricular fibrillation—override the suspend state.</li> <li>• All other new alarms for the same patient are indicated only visually, by additional red numeric highlights and arrhythmia or ST status messages.</li> <li>• New equipment alerts are indicated only after the first alarm and alert conditions are corrected.</li> </ul> </p>

**Table 12. Troubleshooting equipment alerts**

Problem	Explanation
A Cuff Not Detected or a No Pulses Detected equipment alert is occurring at both the patient monitor and Virtual Monitor, but NIBP is not being monitored.	<p>This condition usually occurs for one of these reasons:</p> <ul style="list-style-type: none"> <li>• The monitor wasn't turned off and on again to clear settings (including Auto NIBP) before the new patient was connected to it.</li> <li>• The monitor was turned off, but CURRENT SETTINGS (including Auto NIBP) were saved via the monitor's SYSTEM Menu.</li> </ul> <p>When a patient monitor is set in the auto NIBP mode, the monitor initiates measurements at the selected auto interval, even when the cuff is not on the patient.</p> <ol style="list-style-type: none"> <li>1. At the patient monitor, Acknowledge the alert.</li> <li>2. Press <b>NIBP, MANUAL</b> to change the NIBP setting to Manual.</li> <li>3. Save the current settings to ensure that the problem doesn't persist after you turn off the monitor. For instructions, refer to the monitor directions for use.</li> </ol>

## Alarm limits

**Table 13. Troubleshooting alarm limits**

Problem	Explanation
I set specialized alarm limits before the patient ID was confirmed, and the limits changed after confirmation.	 <b>WARNING</b> Before you set customized alarm limits for a patient, confirm the patient's ID and room number. Otherwise, customized limits might be lost.
After I disconnected a patient for transport, I changed the patient's alarm limits at the patient monitor. When I reconnected the monitor to the Acuity System, the alarm limits changed from what I had set.	 <b>WARNING</b> Always check alarm limits when a monitor reestablishes communication with the Acuity System. If you change limits at a monitor while it is not communicating with the Acuity System (for example, during transport or signal dropout), when you reestablish communication with the system, the limits might change to Acuity System Presets values.
When I adjust arrhythmia alarm limits, sometimes heart rate limits change, too.	 <b>WARNING</b> If you set the bradycardia alarm limit higher than the HR lower limit, the Acuity System adjusts the HR lower limit to the new bradycardia limit. If you set the tachycardia limit lower than the HR upper limit, the Acuity System sets the HR upper limit to the new tachycardia limit. In either case, a message appears in the upper border of the Arrhythmia Alarms Setup window telling you HR alarm limits have changed.

## Patient alarm indications

**Table 14. Troubleshooting patient alarm indications**

Problem	Explanation
<p>False arrhythmia alarms are occurring because of a patient's abnormal beat morphology.</p>	<p>The Acuity System analyzes patient ECG data to detect specific changes in cardiac rhythms. The system uses up to three ECG leads to detect normal beats, ventricular beats and to analyze arrhythmias.</p> <p>If false arrhythmia alarms are occurring due to a patient's unique beat morphology, and if you are using a 5-wire ECG cable, you can direct the Acuity System to analyze arrhythmias using one reliable lead.</p> <ol style="list-style-type: none"> <li>1. In the patient's Virtual Monitor, click <b>Review, Waveforms</b>. The Waveforms Review window appears.</li> <li>2. Check all of the lead boxes to view waveforms shown from each lead.</li> <li>3. Note the lead that is most reliable for arrhythmia analysis.</li> <li>4. Click <b>Setup, Arrhythmia Alarms</b>. The Arrhythmia Alarms Setup window appears.</li> <li>5. Under Options, locate the Single ECG box.</li> <li>6. Next to the Single ECG box, click the arrow and select the most reliable lead for arrhythmia analysis. A relearn occurs in the next step.</li> <li>7. Check the <b>Single ECG</b> box. A RELEARN alert occurs at the patient's Virtual Monitor and Waveform Window. The alert remains until relearn is finished.</li> <li>8. Carefully evaluate the new ECG rhythm to ensure that the Acuity System has learned an appropriate rhythm. For evaluation instructions, see "Respond to a RELEARN alert" on page 91.</li> </ol> <p> <b>WARNING</b> If you turn on Single ECG in response to false lethal arrhythmia alarming (for example, due to bundle branch block or irregular rate), arrhythmia analysis is limited to one lead. Typically, 3 lead analysis (via a 5-wire cable) is optimal.</p>
<p>HR alarms are occurring at an unusually high level at the patient monitor, sometimes erroneously, and the Acuity Central Station doesn't show some or all of the HR alarms.</p> <p>The system includes Arrhythmia Analysis.</p>	<p>Acuity Systems that include an Arrhythmia Analysis option measure HR using arrhythmia algorithms, whereas the monitor uses a single lead. Thus the patient monitor can display a higher heart rate, perhaps due to noise or artifact, which can result in more frequent HR alarms than the Acuity Central Station displays.</p> <p>If the patient monitor is a Propaq LT, CS or Encore, and if the patient has a high-quality pulse oximetry waveform, you can attempt to reduce HR alarming by changing the HR source to SpO<sub>2</sub>.</p> <p>For example, from the Propaq monitor's main menu, press <b>SETUP, MORE, NEXT</b> to highlight the selected source, and then <b>CHANGE</b> to highlight SpO<sub>2</sub>.</p> <p> <b>WARNING</b> All heart rate alarms are valid, even if the HR value at the central station differs from that at the monitor.</p> <p>If your system includes an Arrhythmia Analysis option, the Acuity System heart rates for adult and pediatric patients are a result of system software analysis.</p> <p>The HR/PR numeric changes to "—" in the Virtual Monitor, Waveform Window, review windows, and system printouts when the system detects ventricular fibrillation or asystole. However, an apparently valid heart rate numeric might show in the patient monitor.</p>

**Table 14. Troubleshooting patient alarm indications**

Problem	Explanation
A false alarm occurred for Heart rate, ECG, ST analysis or arrhythmia analysis.	<p> <b>WARNING</b> Ensure these things to minimize false HR, Arrhythmia Analysis and ST Analysis alarms, and to achieve optimal event detection and analysis:</p> <ul style="list-style-type: none"> <li>• ECG cable, lead wires and electrodes are undamaged.</li> <li>• Patient's skin is properly prepared.</li> <li>• Electrodes are placed using standard good practices.</li> <li>• 5-wire ECG cable is used. A 3-wire cable limits arrhythmia and ST-segment analyses to a single lead, and ST analysis is disabled when a lead failure occurs.</li> <li>• LL electrode is connected. Otherwise, only one ECG lead is available and arrhythmia and ST-segment analyses are effected.</li> <li>• Patient monitor and Virtual Monitor display these things: <ul style="list-style-type: none"> <li>-HR numeric and ECG waveform</li> <li>-Non-noisy signal. If signal is noisy, reduce patient movement and increase distance from other electrical devices.</li> <li>-Correct patient mode for the patient</li> </ul> </li> <li>• Virtual Monitor ECG 1 and ECG 2 display these things: <ul style="list-style-type: none"> <li>-ECG waveform</li> <li>-Waveform amplitude at least 160 <math>\mu</math>V, peak-to-peak</li> <li>-QRS complex amplitude at least twice the P or T wave amplitude</li> </ul> </li> </ul>
	<p> <b>WARNING</b> If your system includes arrhythmia analysis, and if you connect, change or move an electrode, ensure that a RELEARN alert occurs at the patient monitor and the virtual monitor.</p> <p>Moving or changing an electrode can change the beat morphology. If the system does not learn the new morphology, it might not alarm or it might cause false alarms. The relearn process establishes the new morphology as the normal ECG rhythm for arrhythmia and ST-segment analyses.</p> <ul style="list-style-type: none"> <li>• If a RELEARN alert occurs after changing or moving an electrode, carefully evaluate the new ECG rhythm and the current ST segment for all active leads to make sure that the Acuity System has learned an appropriate rhythm. For evaluation instructions, see "Respond to a RELEARN alert" on page 91.</li> <li>• If a RELEARN alert does not occur after changing or moving an electrode, initiate a relearn event. For instructions, see "To initiate relearn of a patient's ECG rhythm for arrhythmia and ST-segment analyses" on page 65.</li> </ul> <p> <b>WARNING</b> Minimize patient movement during a RELEARN, as movement creates noise during the reading. If the system learns an abnormal rhythm or learns a rhythm during noise, it designates the learned rhythm as normal. Thereafter, rhythms of this type might not trigger an alarm. Ensure that the patient remains still for 5 minutes after the RELEARN before allowing them to move.</p>
Alarms are not occurring for some alarm limit violations.	<p>Check the Alarms Setup window to see if some limits have been turned off.</p> <p> <b>WARNING</b> Patients for whom alarming has been turned off must be kept under close physical surveillance. Turning off alarming disables both audio and visual alarm indicators.</p> <p> <b>WARNING</b> Do not use Stat Set or Auto Set for a patient in an alarm state! Use these buttons only when your patient's vital sign values are in an acceptable range. The buttons adjust alarm limits based on the patient's current vital-sign values.</p>

**Table 14. Troubleshooting patient alarm indications**

Problem	Explanation
<p>Audible alarm or alert tones are delayed at the patient monitor.</p> <p>However, visual indications at the patient monitor and Acuity Central Station occur at the same time.</p>	<p>To minimize disturbance to patients, a 10-second delay occurs before an alarm or alert tone sounds at most patient monitors connected to the Acuity System network.</p> <p> <b>WARNING</b> Audio tones at a patient monitor in pediatric or adult mode might be suppressed by the Acuity System for up to four minutes and 15 seconds, depending on choices made during Acuity System installation. For further information, see the monitor directions for use. Visual indications at the patient monitor are not suppressed.</p>
<p>After an audible alarm tone is suspended and another vital sign alarm occurs for the same patient, a new tone does not occur until the original 90 seconds has lapsed.</p>	<p> <b>WARNING</b> During an alarm or alert suspension period, be aware of new visual alarm indications that might occur on the patient monitor or Virtual Monitor. During a suspension period, these things occur at the Virtual Monitor and patient monitor:</p> <ul style="list-style-type: none"> <li>• Audible tones are suspended for 90 seconds unless RESUME is clicked at the central station or the alarm tone is reset at the patient monitor.</li> <li>• Alarms for lethal events—apnea, asystole, ventricular tachycardia, and ventricular fibrillation—override the suspend state.</li> <li>• All other new alarms for the same patient are indicated only visually, by additional red numeric highlights and arrhythmia or ST status messages.</li> <li>• New equipment alerts are indicated only after the first alarm and alert conditions are corrected.</li> </ul> <p>Additionally, these indications occur:</p> <ul style="list-style-type: none"> <li>• On hallway message panels and in the message window at the top of the Acuity System screen, if a new alarm is higher priority than one already shown on the panels, it replaces the first alarm.</li> <li>• At the patient monitor, a short “blip” tone can occur if a new arrhythmia alarm is a higher level than a suspended alarm.</li> </ul>
<p>Patient status icon does not change to  when a patient alarm is suspended.</p>	<p> <b>WARNING</b> Always identify the source of an alarm before you suspend it. When an NIBP alarm is suspended or silenced, the window borders and icon colors at the central station are the pre-alarm color instead of the typical red “Alarm Suspended” status.</p> <p>The patient alarm might have been an NIBP alarm. When an NIBP alarm is suspended,  changes color to reflect the patient status before the alarm.</p>
<p>When I click the bar in a Waveform Window to remove a latched alarm, the alarm remains.</p>	<p>If you attempt to remove a latch for an alarm condition that is still active, the visual latch remains.</p>
<p>SpO<sub>2</sub> false alarms are occurring.</p>	<p>Poor sensor placement, a patient’s poor circulation, frequent arrhythmias, or excessive patient movement can increase the frequency of false alarms.</p> <p>If the problem persists after you have corrected sensor placement, try changing the SpO<sub>2</sub> RESPONSE time to <b>SLOW</b> and C-LOCK® to <b>OFF</b>.</p>

## Heart rate and ECG displays

**Table 15. Troubleshooting heart rate and ECG displays**

Problem	Explanation
Heart rate values on the patient monitor differ from HR values at the Acuity Central Station. or --- appears instead of the HR/PR numeric reading.	 <b>WARNING</b> All heart rate alarms are valid, even if the HR value at the central station differs from that at the monitor.  If your system includes an Arrhythmia Analysis option, the Acuity System heart rates for adult and pediatric patients are a result of system software analysis.  The HR/PR numeric changes to “---” in the Virtual Monitor, Waveform Window, review windows, and system printouts when the system detects ventricular fibrillation or asystole. However, an apparently valid heart rate numeric might show in the patient monitor.
ECG signal interruption is occurring.	Unsupported or stressed ECG cables or electrodes can result in movement artifact.  In addition, if the patient is monitored by a wireless monitor, various environmental variables can interfere with wireless signal transmission.   <b>WARNING</b> Use wireless monitors only on patients who can tolerate intermittent monitoring interruptions. All wireless systems are prone to intermittent signal dropout. During signal dropout periods, arrhythmia and ST-segment analyses cannot be performed, and the Acuity System does not show alarms or alerts.
The Virtual Monitor shows the same lead for ECG1 and ECG2.	 <b>WARNING</b> Always replace disconnected lead wires immediately. If a lead wire becomes disconnected and a second lead is not available, the Virtual Monitor might show the same lead for ECG1 and ECG2.
A patient's HR numerics and ECG waveform are not displayed at the Acuity Central Station.	Verify that the patient's ECG leads are effectively applied.

## CO<sub>2</sub>, SpO<sub>2</sub>, IPI, and NIBP displays

**Table 16. Troubleshooting CO<sub>2</sub>, SpO<sub>2</sub>, IPI, and NIBP displays**

Problem	Explanation
When I try to change CO <sub>2</sub> units at the patient monitor, a message says I must use the Acuity System units.	CO <sub>2</sub> units are an Acuity System installation choice set by your system administrator. Acuity System requires a single CO <sub>2</sub> unit to ensure that the CO <sub>2</sub> units are displayed correctly.
When I select SpO <sub>2</sub> as the pulse rate source, ECG remains the source.	When ECG is monitored and C-LOCK is on, ECG is chosen as the heart rate source.
SpO <sub>2</sub> or NIBP are not displayed in the Virtual Monitor when I try to turn on either for display.	<p>You can select up to three waveforms for display. If you select more than three, the three highest priority waveforms are displayed.</p> <p>ECG is always displayed when it is monitored, and P1, P2, P3, P4, and CO<sub>2</sub> take priority over other selections. If you want to display SpO<sub>2</sub> or NIBP, turn off P1, P2, P3, P4, and CO<sub>2</sub>.</p> <p>In addition, NIBP numerics display for only one hour after an NIBP measurement is taken.</p>
A connected monitor equipped with IPI does not display an IPI value in the Virtual Monitor.	<p>This occurs under these circumstances:</p> <ul style="list-style-type: none"> <li>• The monitor's Patent Mode is set to neonate. Make sure that the monitor is set to adult or pediatric mode.</li> <li>• Not all parameters used to calculate IPI are active. Make sure that etCO<sub>2</sub>, Respiration Rate, SpO<sub>2</sub>, and Pulse Rate are being monitored.</li> </ul>
An NIBP reading seems inaccurate.	 <p><b>WARNING</b> If a noninvasive blood pressure reading is suspect, repeat the measurement, watching a manometer (if the monitor has one) to verify the reading. If you are still uncertain about the reading, use another method.</p>
“???:???:???” is shown to indicate the time of an NIBP measurement.	<p>This occurs under either of these circumstances:</p> <ul style="list-style-type: none"> <li>• The monitor was connected to the Acuity System during NIBP measurement, and the monitor was then disconnected from and reconnected to the Acuity System.</li> <li>• The monitor was not connected to the Acuity System during NIBP measurement, and then the monitor was connected to the Acuity System.</li> </ul> <p>Open the NIBP status window at the patient monitor to read the time of the NIBP value.</p>
When NIBP measurements are taken while a monitor is temporarily disconnected from an Acuity System, the NIBP values are not transferred to the Acuity System review windows.	<p>If an NIBP measurement is taken within two minutes before connection to an Acuity System or two minutes following disconnection from an Acuity System, the reading might not transfer to the Acuity System.</p> <p>Take NIBP measurements after the monitor is connected to the Acuity System, to ensure NIBP trending.</p>

## Arrhythmia Analysis and ST Analysis

**Table 17. Troubleshooting arrhythmia and ST-segment analyses**

Problem	Explanation
Arrhythmia analysis or ST analysis does not seem to be optimal.	<p> <b>WARNING</b> Ensure these things to minimize false HR, Arrhythmia Analysis and ST Analysis alarms, and to achieve optimal event detection and analysis:</p> <ul style="list-style-type: none"> <li>• ECG cable, lead wires and electrodes are undamaged.</li> <li>• Patient's skin is properly prepared.</li> <li>• Electrodes are placed using standard good practices.</li> <li>• 5-wire ECG cable is used. A 3-wire cable limits arrhythmia and ST-segment analyses to a single lead, and ST analysis is disabled when a lead failure occurs.</li> <li>• LL electrode is connected. Otherwise, only one ECG lead is available and arrhythmia and ST-segment analyses are effected.</li> <li>• Patient monitor and Virtual Monitor display these things: <ul style="list-style-type: none"> <li>-HR numeric and ECG waveform</li> <li>-Non-noisy signal. If signal is noisy, reduce patient movement and increase distance from other electrical devices.</li> <li>-Correct patient mode for the patient</li> </ul> </li> <li>• Virtual Monitor ECG 1 and ECG 2 display these things: <ul style="list-style-type: none"> <li>-ECG waveform</li> <li>-Waveform amplitude at least 160 <math>\mu</math>V, peak-to-peak</li> <li>-QRS complex amplitude at least twice the P or T wave amplitude</li> </ul> </li> </ul> <p> <b>WARNING</b> If your system includes arrhythmia analysis, and if you connect, change or move an electrode, ensure that a RELEARN alert occurs at the patient monitor and the virtual monitor.</p> <p>Moving or changing an electrode can change the beat morphology. If the system does not learn the new morphology, it might not alarm or it might cause false alarms. The relearn process establishes the new morphology as the normal ECG rhythm for arrhythmia and ST-segment analyses.</p> <ul style="list-style-type: none"> <li>• If a RELEARN alert occurs after changing or moving an electrode, carefully evaluate the new ECG rhythm and the current ST segment for all active leads to make sure that the Acuity System has learned an appropriate rhythm. For evaluation instructions, see <a href="#">"Respond to a RELEARN alert" on page 91</a>.</li> <li>• If a RELEARN alert does not occur after changing or moving an electrode, initiate a relearn event. For instructions, see <a href="#">"To initiate relearn of a patient's ECG rhythm for arrhythmia and ST-segment analyses" on page 65</a>.</li> </ul> <p> <b>WARNING</b> If you turn on Single ECG in response to false lethal arrhythmia alarming (for example, due to bundle branch block or irregular rate), arrhythmia analysis is limited to one lead. Typically, 3-lead analysis (via a 5-wire cable) is optimal.</p> <p> <b>WARNING</b> In some clinical environments and due to some physiologic differences among patients, the Acuity System might not alarm for occurrences of ventricular tachycardia, ventricular fibrillation, or asystole. For instance, asystole is defined as an absence of any detected beat for four or more seconds. Patient pathologies where indications of electrical activity continue to exist without adequate cardiac function might not be recognized as asystole.</p> <p> <b>WARNING</b> Turning off alarming for arrhythmia types and ST Analysis disables both audio and visual alarm indicators. Although alarming for lethal arrhythmias cannot be turned off, patients susceptible to arrhythmias must be kept under close physical surveillance if their alarming has been turned off for any arrhythmia types.</p> <p> <b>WARNING</b> If a patient's ST analysis is turned off, the patient's ECG is not analyzed for ST-segment deviations. ST alerts or alarms are not generated, and ST information is not stored as graphical trends. The Acuity System can be configured to set ST analysis to Off as a default setting. For further information, see your system administrator.</p>

Problem	Explanation
	<p> <b>WARNING</b> In Acuity Systems that include an Arrhythmia option, a relearn function causes the system to learn a patient's normal ECG rhythm. If the system learns an abnormal rhythm or learns a rhythm during noise, it designates the learned rhythm as normal. Thereafter, rhythms of this type might not trigger an alarm.</p> <p>A relearn event can be initiated by a user, or by the system. System relearns are in response to these circumstances:</p> <ul style="list-style-type: none"><li>•Patient connection</li><li>•Lead change or failure</li><li>•System restart</li></ul> <p>During an arrhythmia relearn event, the system posts a RELEARN alert in the patient's Virtual Monitor and Waveform Window. Carefully observe a patient during an Acuity System learning period. During learning, the system detects only VFib and asystole arrhythmias.</p> <p>After a relearn event, "Relearn" and "Learning Done" event markers (▼) appear in most of the patient's review windows and some printouts. After relearn, carefully evaluate the new reference ECG rhythm and the current ST segment for all active leads to ensure that the system learned an appropriate rhythm. For evaluation instructions, see "To respond to a RELEARN alert" on page 92.</p> <p> <b>WARNING</b> Minimize patient movement during a RELEARN, as movement creates noise during the reading. If the system learns an abnormal rhythm or learns a rhythm during noise, it designates the learned rhythm as normal. Thereafter, rhythms of this type might not trigger an alarm. Ensure that the patient remains still for 5 minutes after the RELEARN before allowing them to move.</p>
When I'm monitoring a neonate, any buttons related to Arrhythmia Analysis and ST Analysis are grayed out.	The Arrhythmia Analysis and ST Analysis options are not intended for neonatal patients. When patient mode is set to Neonate, Arrhythmia Analysis and ST Analysis buttons are disabled.
A large number of irregular rhythm alarms are occurring.	You can adjust the minimum duration that an irregular rhythm must occur before the Acuity System alarms for a patient. In the Arrhythmia Alarms Setup window, under Options, click an arrow to specify up to 120 seconds, and then check the Irregular Limit box.

## Printing

**Table 18. Troubleshooting printing**

Problem	Explanation
There is a delay in the Virtual Monitor or Waveform Window data display when a printout takes place. Is any data lost?	No data is lost.
In snapshots or alarm prints, sometimes four or five waveforms are printed, and sometimes three waveforms are printed.	Although a Virtual Monitor can show up to three waveforms at once, if additional waveforms are turned on for display, all are printed.
An alarm print or snapshot doesn't include a vital signs summary, even though an NIBP measurement was taken within the last eight hours.	When over three waveforms are printed on an alarm print or snapshot, there is no room left on the printout for a vital signs summary.  If you prefer to receive a vital signs summary, turn off additional waveforms in the Virtual Monitor by clicking <b>MAIN MENU, MORE, WAVE SEL, NEXT</b> (if necessary), <b>CHANGE</b> .
<p>I expected a printout to occur at the central station, but it did not occur.</p> <p>Or</p> <p> appears on the map at the central station area.</p>	<p><b>Check for various causes</b></p> <ol style="list-style-type: none"> <li data-bbox="806 846 1428 903">1. Ensure that the printer is turned on and supplied with paper and toner.</li> <li data-bbox="806 931 1428 967">2. Ensure that the printer's On Line light is illuminated.</li> <li data-bbox="806 994 1428 1072">3. Click  or  on the map at the central station location to open the Central Station Printers window.</li> <li data-bbox="806 1100 1428 1220">4. If any print job has  beside it, the job is corrupted due to a system configuration problem. (a) Click the job. (b) Click <b>Delete</b>, and then click <b>Delete Selection</b>. (c) Contact Welch Allyn Technical Services, if necessary.</li> <li data-bbox="806 1248 1428 1410">5. If  appears in the lower left corner of the window, click  to open the Printers View.</li> <li data-bbox="806 1438 1428 1516">6. Check for a printer with a problem message, and fix the problem. Printers with a stop-sign icon have been disabled.</li> <li data-bbox="806 1543 1428 1600">7. If the printer was disabled, click the printer name, and then click <b>Enable</b>.</li> </ol>
An alarm is suspended and an alarm print occurs. Then another vital sign alarm occurs for the patient, but no an alarm print occurs.	If an alarm is suspended and the Acuity System generates an alarm print, and then a new alarm occurs for the patient during the suspension period, a new alarm print does not occur.

# Maintenance

## Adjust Acuity System time

If your facility had an internet server available at the time of Acuity System installation, Welch Allyn encouraged you to synchronize the Acuity System clock to a network time protocol (NTP) server.

Welch Allyn recommends that you synchronize the Acuity System to an NTP server after Acuity System installation, in these circumstances:

- If an internet connection is lost
- If internet service becomes available

If your facility does not have an available internet server, manually adjust Acuity System time. Make adjustments periodically, according to your facility's policy, to maintain time accuracy.

You can adjust time forward or backwards, up to 20 minutes. Adjustments are made gradually to all Acuity Systems on a network and all patient monitors connected to the network.

### To adjust Acuity System time

1. In the lower left corner of the Acuity screen, click .


2. Type your system administrator password.

The Administration window appears.

3. Click **Adjust Time**.

The Adjust Time window appears.

If the window informs you that your server is synchronized to an NTP server, close the window. You do not need to manually adjust system time.

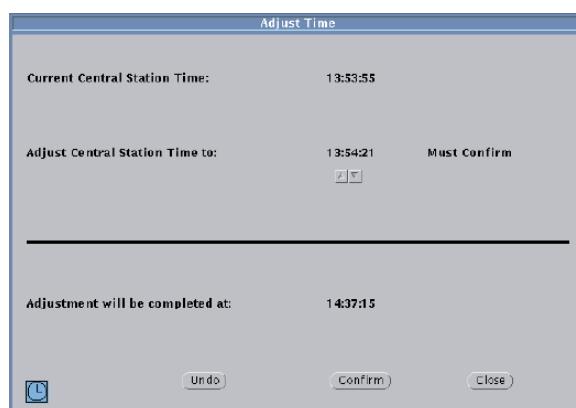

4. Click the up or down arrow button until you see the desired time.

5. Click **Confirm**.

The system time adjustment is made gradually.

6. Click **Close**.

## Identify or change a monitor's network name (ESSID)

This section describes how to identify or change the extended service set identifier (ESSID) for each type of wireless patient monitor that can connect to an Acuity System wireless local area network (WLAN).

This information is useful if you want to do these things:

- Set up a Mobile Acuity LT System network.
- Move a patient monitor from one Acuity System network to another.
- Add a patient monitor to an Acuity System network.
- Especially among networked Acuity Systems, verify a monitor's ESSID.

An Acuity System's network name appears on a label in these places:

- For a Mobile Acuity LT System: on the system case
- For an Acuity System: on the CPU

**Note** Changing a monitor's network name causes the monitor to restart, erase all patient data and restore the monitor settings to default settings.



**WARNING** Do not attempt to change a monitor's network name unless you are a qualified biomedical service engineer or technician.

Confirm that the network name that you select matches the network name of the appropriate Acuity System. When you select a new ESSID, the patient monitor seeks a connection with any nearby Acuity System network with that same ESSID.

If you select a wrong network name, patient alarms and data for any patient connected to the monitor would occur at an unexpected Acuity Central Station.

Identify or change a Micropaq monitor network name



### To identify a Micropaq monitor network name

1. Press to highlight **SYSTEM INFORMATION**, and then press . The System Information menu appears.
2. Press to highlight **NETWORK STATUS**, and then press . The Network Status screen appears.
3. Locate the Network Name in the list.
4. Press to exit.

### To change a Micropaq monitor network name

1. Press repeatedly until **SERVICE MENU** is highlighted, and then press . The Service menu appears.
2. In this sequence and not too rapidly, press and hold these keys: , and . An ARE YOU SURE? prompt appears.
3. Press to highlight **YES**, and then press . A Network Name menu appears.
4. Press or to highlight the desired network name.
5. *Carefully* confirm that the highlighted name matches the appropriate Acuity System network name.
6. Press .

The Micropaq monitor turns off and on again, and then it attempts to connect to the Acuity System network.

Identify or change a Propaq LT monitor network name



### To identify a Propaq LT monitor network name and prepare to change it (if desired)

1. Highlight **SpO<sub>2</sub>**, and then press **○**.
2. Highlight **Setup**, and then press **○**.

The Setup menu appears.

3. Highlight **Service**, and then press **○**.
4. The Service menu appears.

4. Highlight **Radio**, and then press **○**.

The Radio menu appears, and Show Info is highlighted

5. Take one of these steps:

- If you want to change the network name: Continue below to “To proceed to change a Propaq LT monitor network name”.
- If you do not want to change the network name:
  - a. Press **○**.  
The current network name is shown.
  - b. Highlight **Exit**, and then press **○**.

You have completed the network name identification process.

### To proceed to change a Propaq LT monitor network name

1. Highlight **NetName** and press **○**.
2. Highlight the new network name.
3. *Carefully* confirm that the highlighted name matches the appropriate Acuity System network name.
4. Simultaneously press **◀** and **▶**, and hold for one second.

The Propaq LT monitor turns off and on again, and then it attempts to connect to the Acuity System network.

Identify or change a Wireless Propaq CS network name



**To identify a wireless Propaq CS monitor network name and prepare to change it (if desired)**

1. Touch  **SETUP, MORE, MORE, SERVICE, YES, MORE, MORE, RADIO**.  
The Network Status screen opens, and the NET NAME is listed.
2. Take one of these steps:
  - If you want to change the network name, continue below to “To proceed to change a wireless Propaq CS monitor network name”.
  - If you do not want to change the network name, touch  to return to the main menu.

**To proceed to change a wireless Propaq CS monitor network name**

1. Touch **CHANGE NET NAME**.  
The Change Net Name screen appears.
2. Touch **NEXT** repeatedly until the new network name is highlighted.
3. *Carefully* confirm that the highlighted name matches the appropriate Acuity System network name.
4. Touch **SELECT**.  
An ARE YOU SURE? confirmation screen appears.
5. Respond to the confirmation prompt.  
If you touch **YES**, the Propaq CS monitor turns off and on again, and then it attempts to connect to the Acuity System network.

## Mobile Acuity LT Systems: Adjust localization parameters

If your Acuity System is a mobile (laptop computer) system, you can adjust these system parameters.

- Time zone
- Acuity System language
- Amended ID
- Micropaq monitor language
- Printout paper size
- EN1060 compliance
- Temperature units
- Enable or disable the optional parallel printer
- Set facility name (appears on printouts)
- Set unit name (appears in upper right corner of Acuity system display)
- Set printer ISO encoding
- Set barcode variables
- Set ECG filter

### To adjust Mobile Acuity LT localization parameters



1. Hold down the key on your keyboard, move the cursor to the upper right corner of the screen, and press the right mouse button.
2. Click **Quit Application**, and then click **Confirm**.
3. Wait for the login screen to appear.  
The screen appears within one to two minutes.
4. Type “iupdate”, and then press **Enter**.
5. Follow the prompts to make the desired changes.
6. Press **q** to quit.
7. Take one of these steps:
  - If the system prompts you to reboot, take these steps:
    - a. Choose **2** to quit.
    - b. Reboot the system.

The system reboots and starts the Acuity application.

- If the system prompts you to quit, take these steps:
  - a. Choose **1** to quit.

Wait for the login prompt.

- b. Type “acuity”, and then press **Enter**.

You are logged in to the Acuity application.

## Power outages

### To turn off the Acuity System

1. Notify staff members so that procedural changes in patient care can be put into place.  
It is not necessary to disconnect monitors from bedside network connectors.
2. On the Acuity System screen, move the pointer into the gray area of the upper right corner.
3. Open the System menu:
  - For an Acuity System: Hold down the ♦ key on your keyboard, and press the right trackball or mouse key.
  - For a Mobile Acuity LT System: Hold down the  key on your laptop computer keyboard, and press the right mouse key.

The System menu appears in the upper right corner of the screen.

4. Click **Shutdown Workstation**.

A confirmation prompt appears.

5. Click **Confirm**.

6. Wait a few minutes for the computer to turn off.

7. Turn off power to these system components:

Central Station display(s)  
Acuity System laser printer(s)  
Terminal servers



**Caution** Do not simply turn off power to the Acuity Central Station. An orderly shutdown allows proper storage of patient information.



**WARNING** If normal central processing unit (CPU) operation is interrupted (for example, during CPU maintenance, scheduled and unscheduled reboots, power loss or a high-availability (HA) CPU switchover period), central station monitoring and analysis temporarily stop.

The Acuity System cannot collect patient review data during the interruption period. That data becomes permanently unavailable.

Auto-reboots and HA CPU switchovers occur infrequently, but poor environmental conditions and failure to perform preventative maintenance can increase frequency of occurrence.

Whenever an interruption in Acuity System CPU operation occurs, please contact Welch Allyn Technical Service soon to ensure that your entire system has returned to normal operating condition and that it does not require further service.

### To turn on the Acuity System

1. Turn on the power to these components, in this sequence:

- a. Acuity System laser printer(s)
- b. Terminal server (located in the equipment room)
- c. Acuity Central Station display(s)
- d. Acuity Central Station computer

The computer power-up process takes several minutes, and several system messages appear on the screen. The Acuity System logs in and starts up the Acuity System screen. The map appears and all connected monitors' map icons show Unconfirmed Patient ID status or Alarm(s) Off status.

2. For each patient, take these steps:

- a. Verify patient information, and then click **YES**.
- b. Check patient alarm limits.



**WARNING** In Acuity Systems that include an Arrhythmia option, a relearn function causes the system to learn a patient's normal ECG rhythm. If the system learns an abnormal rhythm or learns a rhythm during noise, it designates the learned rhythm as a normal. Thereafter, rhythms of this type might not trigger an alarm.

A relearn event can be initiated by a user or by the system. System relearns are in response to these circumstances:

- Patient connection
- Lead change or failure
- System restart

During an arrhythmia relearn event, the system posts a RELEARN alert in the patient's Virtual Monitor and Waveform Window. Carefully observe a patient during an Acuity System learning period. During learning, the system detects only VFib and asystole arrhythmias.

After a relearn event, "Relearn" and "Learning Done" event markers (▼) appear in most of the patient's review windows and some printouts. After relearn, carefully evaluate the new ECG rhythm and the current ST segment for all active leads to ensure that the system learned an appropriate rhythm. For evaluation instructions, see ["To respond to a RELEARN alert" on page 92](#).



**WARNING** Minimize patient movement during a RELEARN, as movement creates noise during the reading. If the system learns an abnormal rhythm or learns a rhythm during noise, it designates the learned rhythm as normal. Thereafter, rhythms of this type might not trigger an alarm. Ensure that the patient remains still for 5 minutes after the RELEARN before allowing them to move.

## Periodically check equipment for safety

### The Acuity System network cable

Regularly inspect network cables, and replace them once every 12 months. Discard all cables that have been in use for a year or longer.

#### **To inspect Acuity System network cables**

- Inspect for damaged connectors and intact connector securing clips.
- If a cable's connector does not "click" into place when you connect it to a patient monitor and to the bedside network connector, replace the cable with a new one.

### System components

Perform these inspections and tests at least every 24 months.

#### **To inspect and test Acuity System components**

- Verify that acoustic and visual alarms and alerts are functioning properly.
- Ensure that the redundant protective earth connections (green wires) are in place for Acuity System components.
- Inspect fuses located near the AC input on the back of Acuity Central Station components—verify compliance with the current specifications indicated on labels near the fuses.
- Inspect all Acuity System equipment for mechanical and functional damage.
- Vacuum the intake vent and behind the computer; inspect equipment for dust accumulation.

## Equipment disposal

### Acuity Central Monitoring System



Do not dispose of this product as unsorted municipal waste. Prepare this product for reuse or separate collection as specified by Directive 2002/96/EC of the European Parliament and the Council of the European Union on Waste Electronic and Electrical Equipment (WEEE). If this product is contaminated, this directive does not apply.

For more specific disposal information, see [www.welchallyn.com/weee](http://www.welchallyn.com/weee), or contact Welch Allyn Customer Service at +44 207 365 6780.



# 11 Specifications

## Monitor/Acuity System compatibility

**Table 19. Patient monitor/Acuity System compatibility**

Patient monitor	Acuity System
Micropaq monitor, 1.3 software or higher	Acuity System software version 8.2x
Propaq CS monitor, 3.0 software or higher	
Propaq LT monitor 1.00.01 software or higher	
Propaq Encore monitor, 1.2 software or higher	
Welch Allyn 1500 Patient Monitor, 1.1x or 1.4 software	

## General system monitoring capabilities

**Table 20. General Acuity System monitoring capabilities**

Feature	Specification
Maximum number of patients for which data is displayed simultaneously	First Acuity System screen and Mobile Acuity LT Systems: 12 Acuity Systems with multiple screens: 16 each additional screen, maximum of three additional screens.

**Table 21. Networked Acuity System capabilities**

Function	Primary Acuity System	Auto-Open Secondary (AOS) Acuity Central Station	Patient List Review (PLR) Acuity Central Station
	Direct connection between patient's monitor and Acuity System	Duplicate Acuity Central Station that derives information from the primary Acuity System.	Duplicate Acuity Central Station that derives information from the primary Acuity System.
			Ability to select, from the Patient List, which patients are viewed.
View Waveform Windows and Virtual Monitors.	Y	Y	Y
View real-time vital signs.	Y	Y	Y
Print records and specify auto-printing for a patient.	Y	Y	Y
Review graphical trends, tabular trends/ events, waveforms, OxyCRG information, arrhythmia events and ST analysis information.	Y	Y	Y
Coordinate central station printers and print jobs.	Y	Y	Y
Print a patient summary from the patient list.	Y	Y	Y
Open a Waveform Window by clicking a map icon	Y	Y	Y
Admit and readmit patients.	Y	Y	N
Transfer patients.	Y	Y	N
Discharge patients.	Y	Y	N
Enter and change patient information and add a patient note.	Y	Y	N
Change alarm limits and settings.	Y	Y	N
Set up Arrhythmia Analysis and ST Analysis.	Y	Y	N
Waveform Windows and Virtual Monitors auto-open on alarm.	Y	Y	N
Suspend alarms or alerts.	Y	Y	N
High Availability (HA) Paired Systems supported (For details, see <a href="#">"Flexible patient access (FPA) using virtual network computing (VNC)"</a> on page 13).	Y	N	N

# Acuity System heart rate

**Table 22. Acuity System heart rate calculation**

Acuity System configuration	Method of HR calculation
Acuity System with Arrhythmia Analysis module	<p>Acuity Central Station display is determined by Acuity System Arrhythmia Analysis software, and patient monitor display is determined by patient monitor. Patient monitor HR can be different from Central HR.</p> <p>If a patient monitor alarms for HR and Central does not alarm, Acuity Central Stations with software versions 6.31+ can receive a Check HR/PR equipment alert. The time delay for this alert is configurable by the system administrator.</p> <p>Acuity System Arrhythmia Analysis software calculation: The beat-to-beat heart rate (HR) value is calculated as follows: <math>HR = 60000 / \text{actual RR (bpm)}</math>.</p> <p>Actual RR = time between last detected QRS complex and previously detected QRS complex (ms).</p> <p>The average heart rate is calculated on the basis of the mean RR interval of the last 16 beats, unless the heart rate calculated using the last four beats is less than or equal to 48, then this rate is used.</p>
Acuity System without Arrhythmia Analysis option	<p>Acuity Central Station and patient monitor displays are determined by the patient monitor.</p> <p>Time delay between patient monitor HR alarm and Acuity Central Station display of alarm: 10 s default, configurable</p> <p>Propaq LT and Micropaq monitors calculation: determined by monitor</p> <p>Propaq CS and Encore monitors calculation: Heart rate = 60 / latest average interval in seconds</p> <p>For higher heart rates, latest average interval = 7/8 of previous average interval + 1/8 of latest interval</p> <p>For lower heart rates, latest average interval = 3/4 (previous average interval) + 1/4 latest interval. Transition rates for choice of formula include hysteresis and are 70 and 80 beats per minute.</p>

**Table 23. Acuity System heart rate trending**

Heart rate trends	Heart rate information is available in the trend data, which can be viewed on the display or printed. The operator can inspect the trend data to see the lowest, highest, and median (averaged) heart rates. Trend data also includes the total beats per range of time.
-------------------	--

# Acuity System pacemaker detection

**Table 24. Pacemaker detection with the Acuity System Arrhythmia Analysis module**

Monitor	Characteristic	Specification
Micropaq	Acuity System Virtual Monitor	Pacer indicator shown on screen if PACER display turned ON; pacer spike always shown if of sufficient amplitude.
	Pacer Pulse Detection/Rejection	Pacer detection range (i.e., shows the dashed vertical marker) for $\pm 3$ mV to $\pm 700$ mV @ 0.1 ms width, $\pm 2$ mV to $\pm 700$ mV @ 0.2 to 2 ms pulse width in electrically quiet environment. Thresholds adjust to reject repetitive ambient noise. Pacer detector influences QRS picking even while pacer indication is disabled.
Propaq CS Propaq Encore	Acuity System Virtual Monitor	Does not count as heartbeats approximately 95% of pacemaker pulses within pacer detection range <sup>a</sup> , with or without AAMI (EC13-1992) tails of 4, 25, 50, 75 or 100 ms decay time constant, whose tail amplitudes are up to 25%, 2 mV maximum, whether ventricular only, or A-V sequential pulses (150 and 250 ms separation), all per AAMI 1992 tests 3.1.4.1 and 3.1.4.2.
	Pacer Pulse Detection/Rejection	Pacer detection range (i.e., shows the dashed vertical marker) for 0.1 ms pulses is $\pm 3$ mV to $\pm 700$ mV, and drops linearly to $\pm 2$ mV to $\pm 700$ mV for 0.2 to 2 ms pulses. Pacer detector influences QRS picking even while pacer indication is disabled.
Propaq LT	Acuity System Virtual Monitor	Does not count as heartbeats approximately 95% of pacemaker pulses that are within pacer detection range <sup>a</sup> with or without AAMI (EC13 1992) tails of 4, 25, or 50, 75 or 100 ms decay time constant, whose tail amplitudes are 2.5% or 25%, 2 mV maximum, whether ventricular only, or A-V sequential pulses, all per AAMI 1992 tests 3.1.4.1 and 3.1.4.2
	Pacer Pulse Detection/Rejection	Pacer detection range= $\pm 3.2$ mV to $\pm 700$ mV @ 0.1 ms width, $\pm 2$ mV to $\pm 700$ mV @ 0.2 to 2 ms pulse width, all with or without overshoot, in electrically quiet environment. Thresholds adjust to reject repetitive ambient noise. Pacer detector influences QRS picking even while pacer display indication is disabled.
		Does not count as heartbeats approximately 95% of pacemaker pulses within pacer pulse detection range <sup>a</sup> , with or without AAMI (EC13 2002) tails of 4, 8, 15, 25, 50, 75, or 100 ms decay time constant, whose tail amplitudes meet either EC13's method A or method B specifications, whether ventricular only, or A-V sequential pulses (150 and 250 ms separation), all per AAMI tests 4.1.4.1 and 4.1.4.2

a. Rejects method B overshoots for [pulse width] x [pulse amplitude] <  $3 \times 10^{-4}$  V-sec.

# Acuity System alarm and alert indications

**Table 25. General Acuity System alarm and alert indications**

Feature	Specification
Numeric update time after Acuity System receives alarm indication from a patient's monitor	Within 1 s
Acuity Central Station tone volume	Installation choice (hourly settings)
Audible alarm or alert tone delay time to patient's monitor	10 s (configurable up to four minutes, 15 seconds)
Audible alarm or alert tone suspension time and activation	90 s, activated individually for each patient
Note, frequency range and pause length for different types of tones	<p>Monitor equipment alerts: 1 A<sub>4</sub> @ 440.0 Hz, pause 2.45 s</p> <p>Low-level alarms: 3 E<sub>5</sub> @ 660.0 Hz (1 s apart), pause 1.25 s</p> <p>Medium-level alarms: 1 A<sub>5</sub> @ 880.0 Hz coupled with 1 C#<sub>5</sub> @ 554.0 Hz, pause 0.5 s</p> <p>High-level alarms: 3 A<sub>5</sub> @ 880.0 Hz, pause 5/6 s</p> <p>Lethal alarms: 4 A<sub>5</sub> @ 880.0 Hz with harmonics, pause 0.8 s</p>
Latched alarms	<p>Visual latching: When feature enabled, the most recent, highest-priority arrhythmia alarm latches in the Waveform Window, even after alarm condition ceases. Can be configured to apply to lethal/high-level or lethal/high-level/medium-level arrhythmia alarms.</p> <p>Audible latching: Lethal arrhythmia events can be configured to also latch audibly. Audio tone latching default is off.</p>

**Table 26. Alarm and alert indications at the Acuity Central Station**

	Alarms (red)	Monitor equipment alerts (yellow)	System-wide equipment alerts (yellow)	Patient information alerts (yellow)
<b>Duration</b>	Indications remain until condition is cleared or alarm is turned off.  If latched alarm capability is enabled, lethal and high-level arrhythmia alarms (and medium-level arrhythmia alarms if so configured) persist in Waveform Windows until cleared at Central.	Indications remain until the condition is cleared or the alert is acknowledged (disabled) at the patient monitor (some alerts do not allow acknowledgement).  Certain wireless alerts can be <b>RESET</b> at the Acuity Central Station.	Indications remain until condition is cleared except Disk Failure equipment alert is displayed for two minutes, four times an hour.	

**Table 26. Alarm and alert indications at the Acuity Central Station (continued)**

	Alarms (red)	Monitor equipment alerts (yellow)	System-wide equipment alerts (yellow)	Patient information alerts (yellow)
<b>Message window</b> (At top of Acuity Central Station screen)	✓	✓	✓	
Specific message matches hallway message panel message—(panels are optional)				
<b>Map icon at patient location</b> (matches Virtual Monitor and Waveform Window icon)	✓	✓		✓
<b>Map icon at Acuity Central Station location</b>			✓	
<b>Orange Line on map</b> When you bring your pointer into a Virtual Monitor or Waveform Window, an orange line in the map shows the shortest route to your patient's bedside from the Acuity Central Station (except for patients with map icons in the wireless areas of the map).	✓	✓		✓
<b>Virtual Monitor</b> (icon border color change, border message)	✓	✓		✓
<b>Waveform Window</b> (icon, border color change, border message: these match the Virtual Monitor)	✓	✓		✓
<b>Utility windows</b> (Associated with Virtual Monitors) Border color change <sup>a</sup> (matches corresponding Virtual Monitor and Waveform Window)	✓	✓		✓

a. Any review windows opened via the Patient List window have a blue border. If an alarm or alert occurs for that patient, the border remains blue, but the patient's Virtual Monitor and Waveform Window borders turn yellow or red, as usual.

**Table 27. Alarm and alert indications at the Acuity System Virtual Monitor**

	<b>Alarms (red)</b>	<b>Monitor equipment alerts (yellow)</b>	<b>System-wide equipment alerts (yellow)</b>	<b>Patient information alerts (yellow)</b>
Display Priority	Virtual Monitors in alarm “bump” those not in alarm, when necessary.	Virtual Monitors in alert state <i>are not</i> automatically displayed.	No displays in Virtual Monitor.	Virtual Monitors in alert state <i>are not</i> automatically displayed.
Indications	<p>Violating vital sign’s numeric is highlighted. +++ means measured values fall above the monitor’s range, --- means they fall below, and ??? means they could not be measured.</p> <p>Specific message appears in border.</p> <p>Status icon.</p>	<p>Equipment Alert status window appears in Virtual Monitor.</p> <p>For most, a specific message appears in border.</p> <p>Status icon.</p>	<p>No indications in Virtual Monitor.</p>	<p>Specific message in border.</p> <p>Status icon.</p>
Message Priority	Displays highest level message for each patient.	If more than one monitor equipment alert occurs for one monitor at once, a “Multiple” message appears in border.	No messages in Virtual Monitor.	Alarms and monitor equipment alerts take priority over low-level alerts.

**Table 28. Alarm and alert indications at the Waveform Window**

	<b>Alarms (red)</b>	<b>Monitor equipment alerts (yellow)</b>	<b>System-wide equipment alerts (yellow)</b>	<b>Patient information alerts (yellow)</b>
Display Priority	Acuity System automatically displays Waveform Windows in alarm state in all views containing Waveform Windows.  Waveform Windows in alarm “bump” those <i>not</i> in alarm, when necessary.	Waveform Windows in alert state <i>are not</i> automatically displayed.	No displays in Waveform Window.	Waveform Windows in alert state <i>are not</i> automatically displayed.
Indications	Violating vital sign’s numeric is highlighted. +++ means measured values fall above the monitor’s range, --- means they fall below, and ??? means they could not be measured.  Specific message appears in border.  Status icon.  If visual latched alarm capability is enabled, lethal and high-level arrhythmia alarms (and medium-level arrhythmia alarms if so configured) persist in Waveform Windows until cleared at Central.	For most, specific message appears in border.  Status icon.	No messages in Waveform Window.	Specific message appears in border.  Status icon.
Message Priority	Displays highest priority message for each patient.	If more than one monitor equipment alert occurs for one monitor at once, a “Multiple” message appears in border.	No messages in Waveform Window.	Alarms and monitor equipment alerts take priority over low-level alerts.

**Table 29. Alarm and alert indications at (optional) hallway message panels and in message window at the top of the Acuity Central Station screen**

	<b>Alarms (red)</b>	<b>Monitor equipment alerts (yellow)</b>	<b>System-wide equipment alerts (yellow)</b>	<b>Patient information alerts (yellow)</b>
Message	"RM number" followed by alarm-type and violating vital sign.	Specific messages for specific alerts.		No messages
Priority	Only highest priority message for each patient/monitor is displayed. Lethal alarms take priority over all other alarms.  If more than one patient has an alarm or alert at one time, the messages rotate in and out.  New alarms appear before new alerts.		Messages appear only when no alarms or monitor equipment alerts are occurring.	
Duration		Messages appear for at least five seconds, and then other active messages reappear, one-by-one. The Disk Failure equipment alert is displayed for two minutes four times an hour.		

# Electromagnetic standards compliance

The Acuity Central Monitoring System complies with all applicable and required standards for electromagnetic interference.

- It does not normally affect nearby equipment and devices.
- It is not normally affected by nearby equipment and devices.
- It is safe to operate the Acuity System in the presence of high-frequency surgical equipment.
- However, it is good practice to avoid using the Acuity System in extremely close proximity to other equipment.

---

## Guidance and Manufacturer's Declaration—Electromagnetic Emissions

---

The Acuity System is intended for use in the electromagnetic environment specified below. The customer or the user of the Acuity System should assure that it is used in such an environment.

Emissions test	Compliance	Electromagnetic Environment—Guidance
RF emissions CISPR 11	Group 1	The Acuity System uses RF energy only for its internal function. Therefore, its RF emissions are very low and are not likely to cause any interference in nearby electronic equipment.
RF emissions CISPR 11	Class A	The Acuity System is suitable for use in all establishments, other than domestic establishments and those directly connected to the public low-voltage power supply network that supplies buildings used for domestic purposes.
Harmonic emissions IEC 61000-3-2	Class A	
Voltage fluctuations/flicker emissions IEC 61000-3-3	Complies	

---

**Guidance and Manufacturer's Declaration—Electromagnetic Immunity**

The Acuity System is intended for use in the electromagnetic environment specified below. The customer or the user of the Acuity System should assure that it is used in such an environment.

<b>Immunity Test</b>	<b>IEC 60601 Test Level</b>	<b>Compliance Level</b>	<b>Electromagnetic Environment—Guidance</b>
Electrostatic discharge (ESD) IEC 61000-4-2	±6 kV contact ±8 kV air	±6 kV contact ±8 kV air	Floors should be wood, concrete, or ceramic tile. If floors are covered with synthetic material, the relative humidity should be at least 30%.
Electrical fast transient/burst IEC 61000-4-4	±2 kV for power supply lines ±1 kV for input/output lines	±2 kV for power supply lines ±1 kV for input/output lines	Mains power quality should be that of a typical commercial or hospital environment.
Surge IEC 61000-4-5	±1 kV differential mode ±2 kV common mode	±1 kV differential mode ±2 kV common mode	Mains power quality should be that of a typical commercial or hospital environment.
Voltage dips, short interruptions, and voltage variations on power-supply input lines IEC 61000-4-11	<5% $U_t$ (>95% dip in $U_t$ ) for 0.5 cycle 40% $U_t$ (60% dip in $U_t$ ) for 5 cycles 70% $U_t$ (30% dip in $U_t$ ) for 25 cycles <5% $U_t$ (>95% dip in $U_t$ ) for 5 sec	<5% $U_t$ (>95% dip in $U_t$ ) for 0.5 cycle 40% $U_t$ (60% dip in $U_t$ ) for 5 cycles 70% $U_t$ (30% dip in $U_t$ ) for 25 cycles <5% $U_t$ (>95% dip in $U_t$ ) for 5 sec	Mains power quality should be that of a typical commercial or hospital environment. If the user of the Acuity System requires continued operation during power mains interruption, it is recommended that the monitor be powered with reliable AC power.
Power frequency (50/60 Hz) magnetic field IEC 61000-4-8	3 A/m	3 A/m	Power frequency magnetic fields should be at levels characteristic of a typical location in a typical commercial or hospital environment.
Note		$U_t$ is the AC mains voltage prior to application of the test level.	

**Guidance and Manufacturer's Declaration—Electromagnetic Immunity**

The Acuity System is intended for use in the electromagnetic environment specified below. The customer or the user of the Acuity System should assure that it is used in such an environment.

Immunity Test	IEC 60601 Test Level	Compliance Level	Electromagnetic Environment—Guidance
Portable and mobile RF communications equipment should be used no closer to any part of the Acuity System, including cables, than the recommended separation distance calculated from the equation applicable to the frequency of the transmitter.			
<b>Recommended Separation Distance</b>			
Conducted RF IEC 61000-4-6	3 V <sub>rms</sub> 150 kHz to 80 MHz	3 V <sub>rms</sub>	$d = 1.2 \sqrt{P}$
Radiated RF IEC 61000-4-3	3 V/m 80 MHz to 2.5 GHz	3 V/m	$d = 1.2 \sqrt{P}$ 80 MHz to 800 MHz $d = 2.3 \sqrt{P}$ 800 MHz to 2.5 GHz
<p>where <b>P</b> is the maximum output power rating of the transmitter in watts according to the transmitter manufacturer and <b>d</b> is the recommended separation distance in meters.</p> <p>Field strengths from fixed RF transmitters, as determined by an electromagnetic site survey<sup>a</sup>, should be less than the compliance level in each frequency range<sup>b</sup>.</p>			
<p>Interference might occur in the vicinity of equipment marked with this symbol:</p> 			
Note 1	At 80 MHz and 800 MHz, the higher frequency range applies.		
Note 2	These guidelines might not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.		
a	Field strengths from fixed transmitters, such as base stations for radio (cellular/cordless) telephones and land mobile radios, amateur radio, AM and FM radio broadcast and TV broadcast cannot be predicted theoretically with accuracy. To assess the electromagnetic environment due to fixed RF transmitters, an electromagnetic site survey should be considered. If the measured field strength in the location in which the Acuity System is used exceeds the applicable RF compliance level above, the Acuity System should be observed to verify normal operation. If abnormal performance is observed, additional measures might be necessary, such as reorienting or relocating the Acuity System.		
b	Over the frequency range 150 kHz to 80 MHz, field strengths should be less than 3 V/m.		

---

**Recommended Separation Distances Between Portable and Mobile RF Communications Equipment and the Acuity System**

---

The Acuity System is intended for use in an electromagnetic environment in which radiated RF disturbances are controlled. The customer or the user of the Acuity System can help prevent electromagnetic interference by maintaining a minimum distance between portable and mobile RF communications equipment (transmitters) and the Acuity System as recommended below, according to the maximum output power of the communications equipment.

---

<b>Rated Maximum Output Power of Transmitter W</b>	<b>Separation Distance According to Frequency of Transmitter m</b>		
	<b>150 kHz to 80 MHz</b> $d = 1.2 \sqrt{P}$	<b>80 MHz to 800 MHz</b> $d = 1.2 \sqrt{P}$	<b>800 MHz to 2.5 GHz</b> $d = 2.3 \sqrt{P}$
0.01	0.12	0.12	0.23
0.1	0.38	0.38	0.73
1	1.2	1.2	2.3
10	3.8	3.8	7.3
100	12	12	23

---

For transmitters rated at a maximum output power not listed above, the recommended separation distance  $d$  in meters (m) can be estimated using the equation applicable to the frequency of the transmitter, where  $P$  is the maximum output power rating of the transmitter in watts (w) according to the transmitter manufacturer.

---

Note 1 At 80 MHz and 800 MHz, the separation distance for the higher frequency range applies.

---

Note 2 These guidelines might not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.

---

# Acuity System customizable defaults and factory defaults

Acuity System default settings appear in Acuity System windows upon patient monitor connection, when a patient's window is first opened.

There are two types of Acuity System default settings:

- Customizable default settings: Settings that can be customized to match your clinical workflow model, at the point of installation.
- Factory default settings: Settings that are shipped from the factory. These settings cannot be changed.

Hardware specifications for Acuity System components are listed in the manufacturers' manuals.

Specifications published in this manual are subject to change.

## Central Station windows

**Table 30. Acuity Central Station Printer window**

Features	Customizable default	Factory default
Printing order of print requests		<ol style="list-style-type: none"> <li>1. Print Next</li> <li>2. Alarm Prints</li> <li>3. All other printout requests, in the order received</li> </ol>
Maximum allowable number of print requests in a print queue	40	
Printout deletion order		<p>When the number of print requests in the queue exceeds the default, the deletion order from the queue is:</p> <p><b>1st deletes</b> the oldest print requests (other than alarm or Print Next) in a group of printout requests for a patient</p> <p><b>Then deletes</b> the oldest alarm prints in a group of printing requests for a patient</p> <p><b>Then deletes</b> the oldest "Print Next" requests in a group of printing requests for a patient</p>

**Table 31. Patient List window**

Features	Factory default
Sort order	ID, currently monitored patients at top
Length of time review information remains accessible	24 to 96 hours after patient discharge from Acuity System monitoring, depending on Full Disclosure option

## Virtual Monitor and Waveform Window

**Table 32. Virtual Monitor**

Features	Customizable default	Factory default												
Virtual Monitor auto open		In map view and full screen review view: <ul style="list-style-type: none"> <li>Upon patient's monitor connection to Acuity System if empty window</li> <li>Upon alarm if open space is available OR replaces a non-alarming Virtual Monitor</li> </ul>												
Patient mode (listed in patient monitor Setup status window)	Micropaq monitor: adult	Propaq LT, CS and Encore monitors: Adult, pediatric or neonate mode, depending upon setting at patient monitor												
Display settings		Acuity System utilizes monitor factory default settings. For further information, see the monitor directions for use.												
Lead selections	Micropaq and Propaq LT monitors: 5-wire cable: ECG1 LEAD is Lead II ECG2 LEAD is Lead V RESP LEAD is Lead III 3-wire cable: ECG1 LEAD is Lead II  Propaq CS and Propaq Encore monitors: 5-wire cable: ECG1 LEAD is Lead II ECG2 LEAD is Lead V 3-wire cable: ECG1 LEAD is Lead II  Welch Allyn 1500 Patient Monitor: 10-wire cable: ECG1 LEAD is Lead II ECG2 LEAD is Lead V 5-wire cable: ECG1 LEAD is Lead II ECG2 LEAD is Lead V 3-wire cable: ECG1 LEAD is Lead II													
Number of waveforms displayed simultaneously		Up to three												
Display priority of waveforms		All waveforms on (ECG always displayed if monitored): <table> <tr> <td>1. ECG 1</td> <td>5. P2</td> <td>9. RESP</td> </tr> <tr> <td>2. ECG 2</td> <td>6. P3</td> <td>10. SpO<sub>2</sub></td> </tr> <tr> <td>3. ECG 3</td> <td>7. P4</td> <td>11. NIBP</td> </tr> <tr> <td>4. P1</td> <td>8. CO<sub>2</sub></td> <td></td> </tr> </table>	1. ECG 1	5. P2	9. RESP	2. ECG 2	6. P3	10. SpO <sub>2</sub>	3. ECG 3	7. P4	11. NIBP	4. P1	8. CO <sub>2</sub>	
1. ECG 1	5. P2	9. RESP												
2. ECG 2	6. P3	10. SpO <sub>2</sub>												
3. ECG 3	7. P4	11. NIBP												
4. P1	8. CO <sub>2</sub>													
Number of vital sign numerics displayed simultaneously		Eight (if six or more are monitored at once, Temperature and NIBP values alternate in the same space)  If CO <sub>2</sub> is active and turned on at the patient monitor, BR numerics are shown; second choice is RR numerics, when impedance pneumography is active												

**Table 32. Virtual Monitor**

Features	Customizable default	Factory default
Heart rate (HR)		For patients being monitored for arrhythmias, the HR value is derived from the arrhythmia library instead of from the patient monitor.

**Table 33. Waveform Window**

Features	Factory default
Waveform Window auto open	In waveforms views: 1. Upon monitor connection to Acuity System if empty window 2. Upon alarm if open space is available OR replaces a non-alarming Waveform Window
Number of waveforms displayed simultaneously	Up to two
Display priority of waveforms	1. ECG      3. P2      5. P4      7. RESP      9. NIBP 2. P1      4. P3      6. CO <sub>2</sub> 8. SpO <sub>2</sub>
Number of vital sign numerics displayed	Up to four. If four or more monitored at once, the third and fourth alternate in the same zone; others appear if they alarm
Display priority of numerics	1. HR/PR      4. P2      7. CO <sub>2</sub> 10. NIBP 2. SpO <sub>2</sub> 5. P3      8. RR/BR      11. Temperature 3. P1      6. P4      9. IPI
Heart rate (HR)	For patients being monitored for arrhythmias, the HR value is derived from the arrhythmia library instead of from the patient monitor.

## Setup windows

**Table 34. Setup window—Alarms**

Features	Customizable default	Factory default
Display priority of vital signs		Up to three vital signs, in this order of priority: 1. Vital signs in alarm 2. Active vital signs (in the order listed in window)
Alarm limits		Presets values
Presets values	Micropaq monitor: HR: 50 to 120 bpm SpO <sub>2</sub> : 90% to 100%	For all monitors except the Micropaq monitor: Presets are the factory default alarm limits of the patient monitor, based on patient mode. For further information, see monitor directions for use.
Stat Set values		Acuity Systems execute the Propaq Encore monitor STAT SET function. For further information, see <i>Propaq Encore directions for use</i> .
Auto Set values		Acuity Systems execute the Propaq Encore monitor STAT SET function. For further information, see <i>Propaq Encore directions for use</i> .

**Table 35. Setup window—Arrhythmia Alarms**

Features	Customizable default	Factory default
Alarm level	Medium for Pause, off for all other arrhythmia types except VFib, asystole and V-Tach	Lethal for VFib, asystole, V-Tach
Arrhythmia alarm limits		Presets values
Presets values	V-Tach, 125; PVC run, 6; PVC/min, 30; Tachycardia, 180; Bradycardia, 45; Irregular Limit, 45	
Print on alarm	Off for all	
Options: Irregular Limit Single ECG (active with 5-wire cable only) Pacer Display Analyze Pacers	Off Off	Off Off
PaceMaker NonCapture		Disabled
Leads used for arrhythmia analysis		<p>Welch Allyn 1500 Patient Monitor, Micropaq, and Propaq LT monitor 5-wire cables:</p> <ul style="list-style-type: none"> <li>• Arrhythmia channel 0 uses lead II.</li> <li>• Arrhythmia channel 1 uses lead V.</li> <li>• Arrhythmia channel 2 uses lead III.</li> </ul> <p>Propaq Encore, Propaq CS: The leads that the user selects for ECG1 and ECG2 are used for arrhythmia analysis.</p>
Arrhythmia alarms for paced patients		Arrhythmia alarms depend on Acuity System pacemaker detection vs. monitor pacemaker detection.

**Table 35. Setup window—Arrhythmia Alarms**

Features	Customizable default	Factory default
<p>Clicking Arr/ST Relearn or RELEARN</p> <p>Clicking Analyze Pacers</p> <p>Clicking Single ECG</p> <p>Note: A RELEARN button instead of an Arr/ST Relearn button indicates that the system does not include ST Analysis or the ST Analysis Setup window.</p>		<p>System relearns the patient's normal ECG rhythm and uses the relearned rhythm as a guideline to identify arrhythmia events (arrhythmia relearn) and to analyze deviation of the ECG ST-segment offset (ST relearn).</p> <p>In Virtual Monitor and Waveform Window: A visual RELEARN alert occurs, HR is taken from the patient monitor instead of from the arrhythmia software, and real-time waveforms display as usual.</p> <p>In ST Analysis Setup window: The waveform slice displays NO VALID BEATS, and the Acuity System can take up to 30 seconds to update the waveform.</p> <p>Relearn and Learning Done event markers (▼) appear in most review windows and some printouts.</p>

**Table 36. Setup window—ST Analysis**

Features	Customizable default	Factory default
ST Analysis	On	
ST analysis is disabled for these monitors		<ul style="list-style-type: none"> <li>Patient monitors in the Neonate mode</li> <li>Virtual Monitors with Analyze Pacers on in the Arrhythmia Alarms Setup window.</li> </ul>
Type of beats for which analysis is performed		Non-ventricular beats
Offset to measurement (ms or mV)	Auto, ms The Auto setting allows the Acuity System to select the offset based on the heart rate: If the sustained heart rate is greater than 120 beats per minute, Acuity System chooses 60 ms; at 120 beats per minute or less, Acuity System chooses 80 ms	
Print on alarm	Off	
Alarm limits	±1.0 mm	
Alarm level	Low	ST alarms have a priority below arrhythmia alarms set to the same level. Arrhythmia alarms are displayed before ST alarms.
Selected leads for ST analysis		Micropaq and Propaq LT monitors: <ul style="list-style-type: none"> <li>5-wire ECG cable: all seven leads.</li> <li>3-wire ECG cable: The lead selected for ECG1 displays in the Virtual Monitor. Maximum of one active lead at one time.</li> </ul> Propaq Encore and Propaq CS monitors: <ul style="list-style-type: none"> <li>5-wire ECG cable: The leads selected for ECG1 and ECG2 display in the Virtual Monitor</li> <li>3-wire ECG cable: The lead selected for ECG1 displays in the Virtual Monitor</li> </ul> Welch Allyn 1500 Patient Monitor <ul style="list-style-type: none"> <li>10-wire ECG cable: The leads selected for ECG1 and ECG2 display in the Virtual Monitor</li> <li>5-wire ECG cable: The leads selected for ECG1 and ECG2 display in the Virtual Monitor</li> <li>3-wire ECG cable: The lead selected for ECG1 displays in the Virtual Monitor</li> </ul> Depending upon the monitor, some of these leads cannot be deselected.
Trending		ST-segment shifts are recorded in continuous trend data every second. The user can inspect trend data (in Graphical Trends Review window and trend printouts) to see the duration and elevation or depression for each episode for any period recorded.  The operator also can inspect a summary of ST-segment shift data within tabular trend prints.

**Table 36. Setup window—ST Analysis**

Features	Customizable default	Factory default
Presets values	Alarm limits: $\pm 1.0$ mm Alarm level: Low Measurement Offset: Auto Print on Alarm: Off	
Clicking the ST RELEARN button		<p>System relearns a patient's normal ECG rhythm and uses the relearned rhythm as a guideline to analyze deviation of the ECG ST-segment offset.</p> <p>Establishes a new ST reference beat without changing the normal ECG rhythm used for arrhythmia analysis.</p> <p>In ST Analysis Setup window: The waveform slice displays NO VALID BEATS, and the Acuity System can take up to 30 seconds to update the waveform.</p> <p>Relearn and Learning Done event markers (▼) appear in most review windows and some printouts.</p>

**Table 37. Setup window—Printouts**

Features	Customizable default	Factory default
Vital signs that initiate central alarm print	HR	
Central auto print time interval	Off	
Vital signs that initiate Central OxyCRG alarm print	Off	
Priority of vital signs alarming simultaneously for alarm prints		Order listed in window

**Table 38. Setup window—Waveform-Window**

Features	Customizable default	Factory default
Number of vital signs checked at once	Up to two, but only one ECG at once	
Priority order of displayed vital sign boxes		1. ECG 1    4. P3    7. RESP 2. P1        5. P4    8. SpO <sub>2</sub> 3. P2        6. CO <sub>2</sub> 9. NIBP

## Review windows

**Table 39. Review window—Graphical Trends**

Features	Customizable default	Factory default
Frequency of trend data sampling and storage by Acuity System		Sampled and stored once per second
Frequency of patient monitor data storage and transfer to Acuity System		Data is stored at the monitor every two minutes (one minute for Propaq LT) and then transferred to Acuity System
Time delay from Virtual Monitor display to Graphical Trends Review window display		Less than one minute, updated continuously
Display priority of trends		Up to five vital signs (ten in the full-screen review view) that have been active within last 24 hours, in following order of priority: 1. HR/PR 2. PVC 3. ST 4. P1 5. P2 6. P3 7. P4 8. CO <sub>2</sub> 9. RR/BR 10. IPI 11. SpO <sub>2</sub> 12. SpO <sub>2</sub> - PI 13. NIBP 14. Temp
Time span	Eight hours	
Cursor bar position		The most recent time monitored appears at the right edge of the window, or if another review window was viewed first, the period is centered around the cursor bar position in the first-viewed window
HR/PR, RR/BR, P1/P2, P3/P4, and CO <sub>2</sub> labels to the right of the Graphical Trend Display		Reflect labels selected at the monitor during the current time position of the cursor bar.
Presets values		P1 is 30 mmHg to 180 mmHg; P2, P3, and P4 are 0 mmHg to 50 mmHg; all others similar to monitor factory "Trend Graphs" values. For further information, see the monitor directions for use.
Blue cursor bar shows		Vital sign numerics and event types. Event markers are arrhythmia types, Arrhythmia and ST Relearn or Learning Done and snapshot print.
24-hour (or up to 96-hour) time line indicates patient and equipment state		Time line color matches icon color at all points in time
Printouts		Graph, Table, Summary

**Table 40. Review window—Tabular Trends/Events**

Features	Factory default
Frequency of trend data sampling and storage by Acuity System	Sampled and stored once per second
List type	Both
Tabular interval	15 minutes
Vital-sign boxes that are checked	None
Acuity System screen views that support this window	Full-screen and half-screen views
Number of waveforms viewed simultaneously	Half-screen view: 1 Full-screen view: 2
24-hour (or up to 96-hour) time line indicates patient and equipment state	Time line color matches icon color at all points in time
Printouts	Tabular Trends/Events
Data	Median value over the last minute  Trends downloaded from the patient monitor are italicized  Trends corresponding to events are bold with bell icon
ECG beat labels	Normal (●) and ventricular (V)  If Acuity System includes Arrhythmia Analysis option, beat labels appear.

**Table 41. Review window—Waveforms**

Features	Factory default
Display priority of waveforms	Up to five (ten in the full-screen review view) monitored within the last 24 hours in following order of priority: 1. ECG 2. P1 3. P2 4. P3 5. P4 6. CO <sub>2</sub> 7. RESP 8. SpO <sub>2</sub>
Period displayed	25 mm/s; period depends on sweep speed  The most recent seconds monitored appear at the right side of the window, or if another review window was viewed first, the period is centered around the cursor bar position in the first-viewed review window.
ECG lead, RESP lead and CO <sub>2</sub> labels to the right of the waveform display	Reflect labels selected at the monitor during the current time position of the cursor bar.  Propaq LT monitor lead selections are independent from Acuity System lead selections.
Presets values	ECG scale, 1 mV Sweep speed 25 mm/s P1 range 30 mmHg to 180 mmHg P2 range 0 mmHg to 50 mmHg P3 range 0 mmHg to 50 mmHg P4 range 0 mmHg to 50 mmHg CO <sub>2</sub> range 0 mmHg to 60 mmHg SpO <sub>2</sub> scale 1x RESP scale 2x
Blue cursor bar shows	Event types. Event markers are arrhythmia types, Arrhythmia and ST Relearn or Learning Done and snapshot print.
ECG beat labels	Normal (●) and ventricular (V)  If Acuity System includes Arrhythmia Analysis option, beat labels appear for waveforms displayed at sweep speeds between 6.25 mm/s and 50 mm/s
24-hour (or up to 96-hour) time line indicates patient or equipment state	Time line color matches icon color at all points in time
Printouts	Waveforms Custom All Leads

**Table 42. Review window—Arrhythmia Events**

Features	Factory default
Waveform display	1. Arrhythmia 2. ECG waveforms used at the time of arrhythmia analysis (one visible in Half Screen view, more visible in Full Screen view depending on space and monitor type).
Period displayed	25 mm/s; period depends on sweep speed  The most recent seconds monitored appear at the right side of the window, or if another review window was viewed first, the period is centered around the cursor bar position in the first-viewed review window.
Presets values	ECG scale 1 mV Sweep speed 25 mm/s
Blue cursor bar shows	Event types. Event markers are arrhythmia types, Arrhythmia Relearn and ST Relearn or Learning Done and snapshot print.
ECG beat labels	Normal (●) and ventricular (V)
24-hour (or up to 96-hour) time line indicates patient and equipment state	Time line color matches icon color at all points in time
Number of deleted arrhythmias allowed before the Delete Selected button becomes disabled	1000 per patient
Acuity System screen views that support this window	Full-screen and half-screen views
Printouts	Waveforms Events

**Table 43. Review window—OxyCRG**

<b>Features</b>	<b>Factory default</b>
HR/PR and SpO <sub>2</sub> trend data	Graphed as lines connecting each successive data point; PR from NIBP source graphed as single values
Trend data transferred from the patient's monitor	Graphed as very small squares
CO <sub>2</sub> and respiration data	Displays as waveforms
Time span	Two minutes
CO <sub>2</sub> or RESP selected	If CO <sub>2</sub> readings were taken in last 24 hours, CO <sub>2</sub> is selected; if no CO <sub>2</sub> readings taken but RESP readings were taken, RESP is selected
Cursor bar position	At right edge of most recent period monitored, or if another review window was viewed first, the period is centered around the cursor bar position in the first-viewed review window.
HR/PR and CO <sub>2</sub> labels to the right of the Graphical Trend display	Reflects label selected at the monitor during the current time position of the cursor bar
Presets values	Trend scales similar to monitor factory "Trend Graphs" values. For further information, see the monitor directions for use.  CO <sub>2</sub> range      0 mmHg to 60 mmHg RESP scale      2x
Blue cursor bar shows	Vital sign numerics
24-hour (or up to 96-hour) time line indicates patient and equipment state	Time line color matches icon color at all points in time
Printouts	Graph



# Warranty

---

## LIMITED WARRANTY: ACUITY CENTRAL MONITORING SYSTEM AND ACCESSORIES

This product is sold by Welch Allyn under the warranties set forth in the following paragraphs. These warranties are extended only to the end user with respect to the purchase of this product directly from Welch Allyn or Welch Allyn's authorized distributors as new merchandise.

For a period of 12 months (1 year) from the date of original delivery to the buyer, the Acuity Central Monitoring System is warranted to be free from functional defects in materials and workmanship and to conform in all material respects to the description of the product contained in the directions for use and accompanying labels and/or inserts. For a period of 90 days this same warranty is made for accessories provided by Welch Allyn. Warranty of accessories purchased separately from listed suppliers will be the responsibility of the listed suppliers.

This warranty is valid only if (a) the Acuity Central Station processing unit and monitor and the terminal servers are used with a continuous power source; (b) all network equipment and cabling are approved for use with the Acuity System by Welch Allyn; (c) the product is properly operated under conditions of normal use in accordance with applicable safety and regulatory requirements; (d) replacements and repairs are made in accordance with the instructions provided by Welch Allyn; (e) only the Acuity System or other software authorized by Welch Allyn is used on the workstation; (f) the product has not been configured, modified, adjusted or repaired other than by Welch Allyn or by persons expressly authorized by Welch Allyn, or in accordance with written instructions provided by Welch Allyn; (g) the product has not been subject to misuse, negligence or accident.

Welch Allyn's sole and exclusive obligation, and buyer's sole and exclusive remedy under the above warranties, is limited to repairing or replacing, free of charge, a product that is reported to Welch Allyn at one of the telephone numbers listed below not later than seven days after the expiration of the warranty:

Welch Allyn  
8500 S.W. Creekside Place  
Beaverton, Oregon 97008-7107 USA  
Telephone: (503) 530-7500 or (800) 289-2500  
Facsimile: (503) 526-4200

WELCH ALYN SHALL NOT BE OTHERWISE LIABLE FOR ANY DAMAGES INCLUDING, BUT NOT LIMITED TO, INCIDENTAL, CONSEQUENTIAL, OR SPECIAL DAMAGES.

THERE ARE NO EXPRESS OR IMPLIED WARRANTIES THAT EXTEND BEYOND THE WARRANTIES IN THIS DOCUMENT. WELCH ALYN MAKES NO WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.



# Index

---

## A

Access point, ethernet 10

Acuity System

adjust time 164

Central Station 10

Central Station screen 16

compatibility with monitors 175

components 10

components, don't change 3

components, inspect 172

discontinue monitoring 133

documents 8

general information 1

heart rate calculation 177

if inoperable 4

Intended Use 1

networked or remote 11, 19, 20, 97, 121, 145, 176

opening Central Station windows 145

overview 9

secondary recommended 3

set language 165

specifications 175

status icons 20

troubleshooting 151

turn off 170

turn on 171

AcuityLink option 10, 148

Admit button 25

Admit patient 25

readmit 27

Alarm limits

Auto Set 46

changing during transport 37, 47, 125, 155

clear for new patient 28, 35

off for ST 71

set patient 46

Stat Set 46

Alarm printouts 119

Alarm Set button 46, 60

Alarms and alerts

Acuity Central Station indications 179

Arrhythmia or ST 90

Arrhythmia Setup window 58

can go unnoticed 3

CHECK HR/PR 89

CHECK LEADS 93

color and icons 24

disabling 47, 157

DROPOUT 88

false arrhythmia 156

indications 22

latched 87

levels 95

new during SUSPEND 85, 154, 158

NOISE 94

printouts 119

priority 95

RELEARN 91

respond to 83

resume tones 22, 23, 43

specifications 179

suspend temporarily 43

suspend tones 22, 23, 84

tones defined for levels 95

tones won't stop 87

troubleshooting 156

window borders 22, 24

Alarms Setup window 46

Alarms Setup window, specifications 190

All Alarms On button 46

Amended ID 80

Analyze Pacers button 62

Arrhythmia

alarm during Relearn 91

alarming preferences, set 60, 61

alarming, turn off 59

Alarms Off button 65, 73, 74, 76

Alarms Setup window 58

Alarms Setup window, specifications 191

alarms, false 156

Analysis options, two types 54

asystole not detected 161

atrial not detected 54, 66

delete event marker 111

dismiss alarm 90

event definitions 54

Events Review window 107

Events Review window, specifications 198

false alarms 159  
Full or Lethal Only options 54  
learning period during 64, 78, 91, 162, 171  
lethal, definition of 52, 95  
pacemaker patients and 62  
physiologic differences 66  
Print On Alarm 62, 74  
remove a latched alarm 87  
terms 52  
troubleshooting 161  
types detected 66  
Artifact, definition of 52  
Asystole  
    definition 55  
    not detected 161  
Auto prints, setting up 49  
Auto Set button 46

**B**

Barcode scanner 40  
Bigeminy definition 56  
Border, Virtual Monitor color 83  
Buttons  
    system 19

**C**

Cable  
    check network 172  
    network 38  
Cabling, altered causes system restarts 3  
Central Station  
    Acuity System 10  
    Printer window 50  
    screen overview 16  
    windows 145  
CHECK HR/PR alert 89  
CHECK LEADS alert 93  
Clinician Notifier 10, 148  
CO2  
    indicator 23  
    OxyCRG print setup 49  
    response time 44  
    trouble changing units 160  
Colors  
    status icons 137  
    window border 22, 24  
Communication Alert message 154  
Compatibility, Acuity System and monitors 175  
Compliance  
    with safety standards 184  
Compliance, with safety standards 7  
Components, Acuity System  
    don't change 3

inspect 172  
overview of 10  
Confirm patient ID or room 40  
Connecting  
    hardwired monitors to Acuity System 28  
    troubleshooting 151  
    wireless monitors to Acuity System 31  
Connectivity server 1  
Couplet definition 56

**D**

Data  
    review or print patient 97  
Defaults, factory 188  
Delete ARR Events button 111  
Delete arrhythmia event marker 111  
Delete Selected button 111  
Delete Selection button 50  
Discharge a patient 136  
Disconnecting, troubleshooting 151  
DISMISS button 89, 90  
Display  
    appearance differences 23  
    bell symbol in 23  
    message window 83  
    select waveforms 51  
    set unit name for 169  
    SpO2 or NIBP not showing 160  
Disposal, of equipment 173  
Documents, Acuity System 8  
Dropout  
    alert 88, 154  
    be cautious 5, 159

**E**

ECG  
    electrodes and ST Analysis 77  
    false alarms 159  
    label leads 45  
    lead display 22  
    leads displayed 38, 159  
    leads, select, change and view 45  
    numerics not showing 159  
    pacer, turn on/off display 44  
    set filter 169  
    signal interruption 159  
    troubleshooting 159  
Edit  
    a patient ID 80  
    patient information except ID 79  
Electromagnetic compliance (EMC) specifications 184  
EN1060 compliance, set 165  
Equipment

check periodically 172  
 ESSID, identifying or changing a 165  
 Ethernet, access point 10  
 Event definitions, Arrhythmia 54  
 Event marker  
   definition of 52  
   delete arrhythmia 111  
   list and counts 109, 111  
 Event, definition of 52  
 Events/tabular trends, review 101

## F

Factory defaults and specifications 188  
 False alarms  
   ECG and arrhythmia 159  
   SpO<sub>2</sub> 158  
 FlexNet 9

## G

General information 1  
 Glossary of arrhythmia terms 52  
 Graphical Trends Review window 99, 113, 117  
   specifications 195

## H

Hallway message panel 10  
   recommended for safety 3  
 Heart rate  
   --- indication 67, 86, 156, 159  
   Check HR/PR alert 89  
   differing values at monitor 86, 158  
   numerics not showing 159  
   OxyCRG print setup 49  
   reduce alarming 156  
   system calculation 177  
   values differ at monitor 67, 86, 156, 159  
 Hospital information system 10

## I

Icons  
   Central Station component status 145  
   color indicates status 137  
   different priorities of 95  
   kicked out of room 152  
   map and status 20  
   map icons and networked Acuity Systems 20, 145, 146, 147  
   map, disappear 152  
   opening Central Station 145  
   patient/monitor status 138

table of Central Station component status 146  
 table of patient/monitor status 139  
 ID  
   amended 80  
   edit 80  
   enter or confirm patient 40  
 Information system, hospital 10  
 Intended Use 1  
 Interconnection standards 3  
 Irregular Limit box 61, 162  
 Irregular rhythm definition 57  
 Irregular rhythm duration setting 61, 162

## L

Language, set system 165  
 Latched alarm  
   definition 87  
   remove indication 87  
 Leads  
   automatic switch if disconnected 38, 159  
   changing 45  
   Check Leads alert 93  
   default 189, 191, 193  
   for ST Analysis 73  
   indicators shown 45  
   label ECG V 45  
   RESP 45  
   select or change ECG, RESP 45  
   view waveforms from all 24  
 Learning period  
   arrhythmias during 64, 78, 91, 162, 171  
 Lethal arrhythmia  
   alarm level 85, 154, 158  
   definition of 52

## M

Mainstream CO<sub>2</sub> indicator 23  
 Maintenance 164  
 Map  
   Acuity Central Station screen 16  
   expand 18  
   icons 20  
 Masimo PI and SpO<sub>2</sub> indicators 17, 23, 100, 105, 114  
 Message panel, hallway 10  
   indications defined 137  
 Message window  
   Acuity Central Station screen 17  
 Message window, Acuity Central Station screen 83  
 Micropaq monitor 10  
   connection to Acuity System 31  
   set language 165  
 Mobile device, running Clinician Notifier 10  
 Mode, patient 22, 23

incorrect 37

**Monitor**

- clearing trends and alarm limits 28, 35
- compatibility with Acuity System 175
- connection to Acuity System 28, 35
- model and serial number 40
- not connecting 152
- saving trends and alarm limits 28, 35

Monitor status icons 138

**Monitoring**

- begin 25
- networked patients 9, 19, 176
- set up typical 43
- starting hardwired 28
- stop 133

**Move**

- patient and hardwired monitor 127
- patient from wireless monitor 129
- patient to different monitor 131

## N

Neonatal patients

- do not use arrhythmia feature with 5

NET OFF fault 154

Network cable, check 172

Network Fault message 154

Network name, identifying or changing a 165

**Networked Acuity System**

- Close and open Waveform Windows for 12
- map icons for 145
- open review windows for 97

Patient List Review 11

- search for patients in 12, 97

specifications 176

within FlexNet 9

**Networked Acuity Systems**

- print a patient list for 121

**NIBP**

- no alarm suspended status 86, 158
- numeric reduces in size 22
- suspect readings 86
- troubleshooting 160

NO VALID BEATS message 53, 63, 75, 192, 194

NOISE alert 94

NonCapture definition 57

Note, patient 22, 81

Numeric display 23

- 181, 182
- indication for HR 67, 86, 156, 159
- ??? 181, 182
- +++ 181, 182

NIBP reduces size 22

not showing 159

## O

Other Patients button 12, 97, 121

**Overview, Acuity System** 9

**OxyCRG**

- printouts 49
- Review window 113
- Review window, specifications 199

## P

**Pacemaker** 44

- arrhythmia settings for patients with 62
- NonCapture definition 57
- set Analyze Pacers for patients 44, 62
- system detection of 178
- turn on or off display 44

**Pacer Display box** 62

**Patient**

- admit, duplicate not allowed 25
- data, review or print 97
- discharge 136
- in networked Acuity Systems 12, 97, 121
- move from wireless monitor 129
- move to different monitor 131
- move with hardwired monitor 127
- new, clear trends and alarm limits 37
- pacemaker 44
- readmit after discharge 27
- review data 97
- search for 97
- start hardwired monitoring 28
- start wireless monitoring 31
- status icon 22, 137
- stop monitoring 133

**Patient ID**

- edit 80
- enter or confirm 40
- number, unique 29
- scanning 40
- Setup window 40

**Patient List**

- button 12, 19, 97, 121
- printouts 121
- search 97
- specifications 188
- summary information 98

**Patient List Review (PLR) system** 11, 176

**Patient mode, incorrect** 37

**Patient note** 22, 81

**Pause definition** 57

**PI indicator** 17, 23, 100, 105, 114

**PLR (Patient List Review) system** 11, 176

**Power**

- Acuity System, up or down 170

- outages 170
- supply, uninterruptible 3
- Preadmit patient 25
- Presets button 46, 60, 74
- Print Next button 50
- Print On Alarm
  - arrhythmia 62, 74
  - printout 119
- Printer
  - enable or disable parallel 165
  - optional laser 10
  - paper size, set system 165
  - set ISO encoding 169
  - view status of 50
- Printing
  - Alarm printouts 62, 74, 119
  - coordinate jobs 50
  - delete selection 50
  - Patient List 121
  - print next 50
  - print on alarm setup 49
  - Review printouts 117
  - review prints 104
  - Setup window 49
  - Setup window specifications 194
  - Snapshot 22
  - specifications 188
  - Vital Signs Summary 120
- Propaq monitor
  - CS 10
  - CS, connection to Acuity System 35
  - Encore 10
  - LT 10
  - LT leads independent 45
  - LT, connection to Acuity System 33
- PVC run definition 56
- PVC, definition of 52
- PVC/min definition 56
  
- R**
- Readmit a discharged patient 27
- Recycling, of equipment 173
- Reference beat, ST Analysis 70
- Relearn
  - after change Analyze Pacers 44, 62
  - Alarm during Relearn 91
  - alert, respond to 91
  - definition of 53
  - initiate Arr/ST 63
  - ST Analysis 76
- Remote Acuity System
  - Patient List Review 11
- Remote Acuity System (PLR) 176
- Remote monitoring
  
- close and open Waveform Windows 12
- not a substitute for primary monitoring 4
- remote Patient List Review system 11
- specifications 176
- within FlexNet 9
- RESET button 88
- RESP leads (see Leads)
- Response time
  - CO2 44
  - SpO2 44
- Restarts caused by altered cabling 3
- Review printouts 117
- Review windows
  - Arrhythmia Events 107
  - Graphical Trends 99, 113, 117
  - open for networked or remote patients 97
  - open from Patient List 97
  - opening 23
  - OxyCRG 112
  - specifications 195
  - Tabular Trends/Events 101
  - Waveforms 104
- Room number
  - enter from a Virtual Monitor 40
  
- S**
- Safety
  - check equipment 172
  - standards 3, 7
- Scanning patient ID information 40
- Screen view 17
  - change 18
- Screen view buttons 17
- Search for patient, by unit 12, 97, 121
- Secondary Acuity System
  - recommended for safety 3
- Setup window
  - Alarms 46
  - Arrhythmia Alarms 58
  - Central Station Printer 50
  - opening 23
  - Printouts 49
  - specifications 190
  - Waveform Window 51
- Show Deleted button 111
- Sidestream CO2 indicator 23
- Signal
  - interruption, CO2 159
- SIQ indicator 17, 23, 100, 105, 114
- Snapshot printout
  - from Waveform Window 22
- Software, monitor compatibility with Acuity System 175
- Sort Windows button 19
- Source, troubleshooting 160

Specifications 175  
alarm and alert 179  
EMC 184  
factory defaults 188  
general monitoring 175  
heart rate calculation 177  
pacemaker 178  
Patient List 188  
printing 188  
Setup windows 190  
system compatibility 175  
Virtual Monitor 189

SpO<sub>2</sub> 114  
false alarms 158  
Masimo PI and SIQ indicators 17, 23, 100, 105, 114  
OxyCRG print setup 49  
response time 44  
troubleshooting 159

ST Analysis  
alarms off 71  
check leads for 73  
detection and ECG electrodes 77  
disabled when 69  
dismiss alarm 90  
reference beat 70  
set preferences for 73  
Setup window, specifications 193

ST RELEARN button 76

ST/Arr Relearn button 65

Standards, interconnection 3

Stat Set button 46

STATSCALE button 44

Status icons 20, 24

Summary button 98

Summary information, from Patient List 98

SUSPEND  
alarm and alert tones temporarily 43  
Alarm or alert 84  
new alarms during 85, 154, 158

Symbol  
--, Numeric display 181, 182  
++, Numeric display 181, 182  
???, Numeric display 181, 182

System Administration button 16, 19

System buttons 19

**T**

Tabular Trends/Events Review window 101  
specifications 196

Technical Service, Welch Allyn 149

Temperature units, set system 165

Time  
adjust Acuity System 164  
zone, set system 165

Tones  
alarm and alert 95, 179

Transfer patient, wireless 129

Transport, changing alarm limits during 37, 47, 125, 155

Trends  
clear for new patient 37  
clearing or saving 28, 35  
of patients on networked Acuity Systems 121  
OxyCRG (SpO<sub>2</sub>) 112  
review graphical 99  
tabular, and events, review 101

Trigeminy definition 56

Troubleshooting  
Acuity System 151  
alarms and alerts 156  
and Maintenance 149  
Arrhythmia Analysis 161  
connecting and disconnecting 151  
NIBP 160

**U**

Undelete Selected button 111

Unit  
name, set for display 169  
search for patient by 12, 97, 121

Unit button 12, 97, 121

Utility window, Acuity Central Station screen 16

**V**

Ventricular fibrillation definition 55  
Ventricular rhythm definition 56  
Ventricular run definition 56  
Ventricular tachycardia definition 55  
VFib definition 55  
View Wireless  
button 19  
patients 19

View, change screen 18

Virtual Monitor  
Acuity Central Station screen 16  
alarms and alerts 24  
border color 83  
monitor status icon 23  
numeric display 181  
open from map 21  
opening 12, 24, 98  
patient status icon 23  
select waveforms display 51  
specifications 189

VRhythm definition 55

VTach definition 55

## W

- WACS 1, 10
- Warnings and cautions
  - arrhythmia analysis 66
  - connecting monitor to Acuity System 37
  - ST Analysis 69
  - suspending alarm, alert tones 85
- Waveform Window
  - Acuity Central Station screen 16
  - add patient note in 81
  - border colors 22
  - close on Acuity System screen 51
  - close on PLR Acuity System screen 12
  - numeric display 182
  - open from a PLR station 12
  - open from map 21
  - open from the map 22
  - patient note in 22
  - print a Snapshot 22
  - resume alarm tones from 22
  - Setup window 51
  - Setup window specifications 194
  - STATSCALE button 44
  - suspend alarm tones from 22
- Waveforms
  - optimize display 44
  - Review window 104
  - Review window, specifications 197
  - select for display 51
  - set sweep speed 44
  - view from all leads 24
- Welch Allyn
  - Connectivity Server 1, 10
  - Technical Service 149
- Window border
  - Virtual Monitor 24
  - Waveform Window 22
- Wireless
  - be sure communicating 37
  - intermittent signal dropout 5, 159
  - map icons 21
  - monitoring devices 21
  - patients 19
  - reconnect, icon disappears 152
  - starting monitoring 31
  - view all wireless patients 19

