



# ZXSDR R8882

## Macro Remote Radio Unit

### Product Description

---

Hardware Version: HV2.0

ZTE CORPORATION  
NO. 55, Hi-tech Road South, ShenZhen, P.R.China  
Postcode: 518057  
Tel: +86-755-26771900  
Fax: +86-755-26770801  
URL: <http://ensupport.zte.com.cn>  
E-mail: [support@zte.com.cn](mailto:support@zte.com.cn)

## **LEGAL INFORMATION**

Copyright © 2011 ZTE CORPORATION.

The contents of this document are protected by copyright laws and international treaties. Any reproduction or distribution of this document or any portion of this document, in any form by any means, without the prior written consent of ZTE CORPORATION is prohibited. Additionally, the contents of this document are protected by contractual confidentiality obligations.

All company, brand and product names are trade or service marks, or registered trade or service marks, of ZTE CORPORATION or of their respective owners.

This document is provided “as is”, and all express, implied, or statutory warranties, representations or conditions are disclaimed, including without limitation any implied warranty of merchantability, fitness for a particular purpose, title or non-infringement. ZTE CORPORATION and its licensors shall not be liable for damages resulting from the use of or reliance on the information contained herein.

ZTE CORPORATION or its licensors may have current or pending intellectual property rights or applications covering the subject matter of this document. Except as expressly provided in any written license between ZTE CORPORATION and its licensee, the user of this document shall not acquire any license to the subject matter herein.

ZTE CORPORATION reserves the right to upgrade or make technical change to this product without further notice. Users may visit ZTE technical support website <http://ensupport.zte.com.cn> to inquire related information.

The ultimate right to interpret this product resides in ZTE CORPORATION.

## **Revision History**

<b>Serial No.</b>	<b>Publishing Date</b>	<b>Publishing Reason</b>
R1.1	2011-12-30	Modified the following sections: <ul style="list-style-type: none"><li>● 1.3 Services and Functions</li><li>● 1.4 Product Specifications</li><li>● 2.1.1 Hardware Architecture</li></ul>
R1.0	2011-10-30	First Edition

Serial Number: SJ-20111021104623-002

Publishing Date: 2011-12-30 (R1.1)

# Contents

---

<b>About This Manual .....</b>	<b>I</b>
<b>Chapter 1 Product Overview .....</b>	<b>1-1</b>
1.1 Position of the ZXSDR R8882 in the Radio Network .....	1-1
1.2 Product Features.....	1-1
1.3 Services and Functions .....	1-3
1.4 Product Specifications .....	1-5
1.5 Installation Scenarios .....	1-6
<b>Chapter 2 System Structure .....</b>	<b>2-1</b>
2.1 Hardware Subsystem .....	2-1
2.2 Software Subsystem.....	2-2
<b>Chapter 3 Operation and Maintenance.....</b>	<b>3-1</b>
3.1 Operation and Maintenance Modes .....	3-1
3.2 Operation and Maintenance Functions.....	3-2
<b>Chapter 4 Networking .....</b>	<b>4-1</b>
4.1 Networking Description.....	4-1
4.2 Star Networking .....	4-1
4.3 Cascade Networking .....	4-2
4.4 Ring Networking.....	4-2
<b>Chapter 5 Technical Specifications .....</b>	<b>5-1</b>
5.1 Physical Specifications .....	5-1
5.2 Radio Performance .....	5-3
5.3 Interfaces .....	5-3
<b>Chapter 6 FCC &amp; IC STATEMENT .....</b>	<b>6-1</b>
<b>Figures.....</b>	<b>I</b>
<b>Tables .....</b>	<b>III</b>
<b>Glossary .....</b>	<b>V</b>



# About This Manual

---

## Purpose

The ZXSDR R8882 is a multi-mode remote [RF](#) unit that supports 2T4R [FDD](#). It supports [GSM](#), [UMTS](#), [CDMA](#), and [LTE](#) communications systems and features compact structure, large capacity, and easy installation.

The ZXSDR R8882 works with a [BBU](#) to constitute the distributed [SDR BTS](#), that is, ZXSDR of ZTE.

This manual provides a general description of the ZXSDR R8882, covering the product features, services and functions, system architecture, operation and maintenance, networking, and technical specifications.

## Intended Audience

This manual is intended for

- Engineering personnel and technicians
- Installation engineers
- Maintenance engineers

## What is in This Manual




This manual contains the following chapters:

Chapter	Summary
Chapter 1, Product Overview	Describes the position of the ZXSDR R8882 in the radio network, product features, services and functions, and installation scenarios.
Chapter 2, System Structure	Describes the hardware and software structures of the ZXSDR R8882 and the functions.
Chapter 3, Operation and Maintenance	Describes the operation and maintenance modes of the ZXSDR R8882.
Chapter 4, Networking	Describes the networking modes supported by the ZXSDR R8882.
Chapter 5, Technical Specifications	Describes the technical specifications of the ZXSDR R8882.

## Conventions

ZTE documents employ the following typographical conventions.

Typeface	Meaning
Italics	References to other Manuals and documents.
“Quotes”	Links on screens.

Typeface	Meaning
Bold	Menus, menu options, function names, input fields, radio button names, check boxes, drop-down lists, dialog box names, window names.
CAPS	Keys on the keyboard and buttons on screens and company name.
	Note: Provides additional information about a certain topic.
	Checkpoint: Indicates that a particular step needs to be checked before proceeding further.
	Tip: Indicates a suggestion or hint to make things easier or more productive for the reader.

# Chapter 1

## Product Overview

### Table of Contents


Position of the ZXSDR R8882 in the Radio Network.....	1-1
Product Features.....	1-1
Services and Functions.....	1-3
Product Specifications.....	1-5
Installation Scenarios.....	1-6

## 1.1 Position of the ZXSDR R8882 in the Radio Network

The ZXSDR R8882 is the outdoor remote Radio Frequency (RF) unit of the ZTE Base Transceiver Station (BTS). The ZXSDR R8882 and a Base Band Unit (BBU) form a complete BTS/NodeB/eNodeB, implementing radio transmission in the covered area, controlling radio channels and realizing the communication with the Base Station Controller (BSC)/Radio Network Controller (RNC)/Long Term Evolution (LTE).

Figure 1-1 shows the position of the ZXSDR R8882 (RRU) in the radio network.

Figure 1-1 Position of the ZXSDR R8882 in the Radio Network

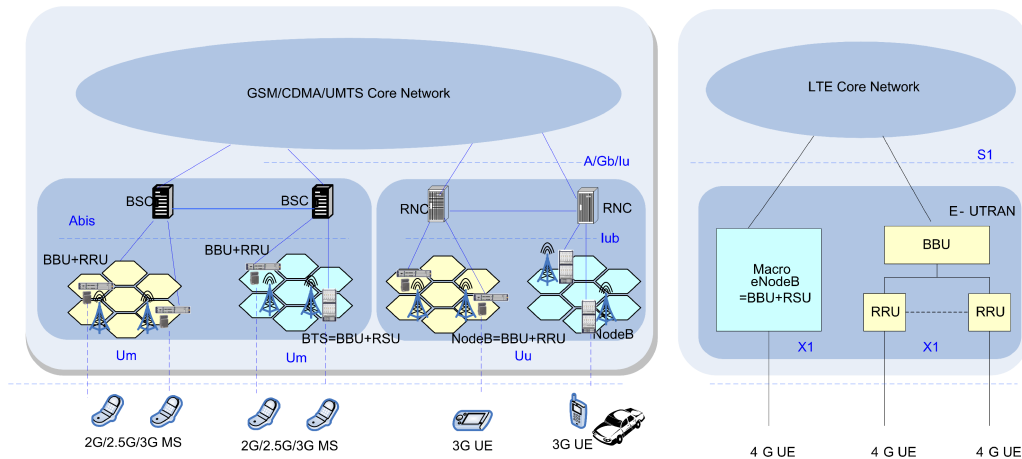

## 1.2 Product Features

The ZXSDR R8882 is an outdoor Remote Radio Unit (RRU) with dual transmitters. The ZXSDR R8882 works with a Baseband Unit (BBU) to provide all logical functions of a BTS.

Based on the digital intermediate frequency and multi-carrier technologies, the ZXSDR R8882 is capable of transmitting dual channels of radio signals and receiving four channels of radio signals. The ZXSDR R8882 can act as an independent remote RF unit for Global

System for Mobile Communication (GSM)/Universal Mobile Telecommunication System (UMTS)/Code Division Multiple Access (CDMA), and it supports evolution to LTE.

The features of the ZXSDR R8882 are as follows:

- Multiple radio access modes

The ZXSDR R8882 supports single mode, dual mode, or hybrid mode, including GSM, UMTS, CDMA, and LTE.

- Distributed architecture

BBUs and RRUs constitute distributed BTS systems, providing flexible office deployment.

- Smooth evolution

Through software upgrade, the ZXSDR R8882 can be smoothly evolved to HSPA or LTE, saving the investment of the telecom operator to the maximum.

- Flexible configuration and networking

- Because the dual-density multi-carrier technologies are used, when the ZXSDR R8882 works in GSM mode, it supports 2 x 6 carriers through software configuration. (A single channel supports 6 carriers.)

- When the ZXSDR R8882 works in UMTS mode, it supports up to 2 x 4 carriers. (A single channel supports 4 carriers.)

- When the ZXSDR R8882 works in CDMA mode, it supports up to 2 x 8 carriers. (A single channel supports 8 carriers.)

- When the ZXSDR R8882 works in GSM/UMTS dual mode, the ZXSDR R8882 supports 4 GSM carriers + 1 UMTS carrier or 2 GSM carriers + 2 UMTS carriers, and it supports up to 8 GSM carriers + 2 UMTS carriers.

- When the ZXSDR R8882 works in GSM/LTE dual mode, the ZXSDR R8882 supports 4 GSM carriers + 1 LTE carrier(10 M) or 2 GSM carriers + 1 LTE carriers.(20 M)

- When the ZXSDR R8882 works in LTE mode, the ZXSDR R8882 supports one carrier.

- The baseband-RF interface of ZXSDR R8882 supports star and chain networking.

- Advanced internal structure

Between internal boards and modules, blind interconnection and hard link interconnection are used.

- Energy saving and environment-friendly design

Energy-saving and environment-friendly due to multi-carrier power amplifiers, and advanced Doherty and Digital Pre-Distortion (DPD) linear power amplification technologies.

- Easy installation and maintenance



---

Easy installation and maintenance due to compact size and light weight.

## 1.3 Services and Functions

### Services

The ZXSDR R8882 works with BBUs to provide the following services:

- GSM
  - Full Rate (FR) voice service
  - Enhanced Full Rate (EFR) voice service
  - Half Rate (HR) voice service
  - Adaptive Multiple Rate (AMR) voice service
  - 9.6 Kbps Circuit Switched (CS) domain data service
  - General Packet Radio Service (GPRS)
- UMTS
  - R99 services
  - HSDPA services
  - HSUPA services
  - HSPA+ services
- CDMA
  - 1X service
  - DO service
  - PTT service
- LTE
  - Improved capacity and data transmission speed of mobile network and shortened service latency, with 100 Mbps peak downlink data transmission rate and 50 Mbps peak uplink data transmission rate.
  - Optimized data transmission based on IP architecture. As a whole-IP network, LTE supports both IPV4 and IPV6 and can transmit VoIP services.
  - Scalable bandwidth and flexible spectrum analysis.
- Positioning services
  - Cell ID, Cell ID + Round Trip Time (RTT), and Assisted Global Positioning System (AGPS) positioning
- Multimedia Broadcast/Multicast Service (MBMS) services:
  - Supports broadcast and multicast functions, and supports the Point-To-Point (PTP) and Point-To-Multipoint (PTM) multicast modes.

- Supports mobility management.
- Supports the streaming and background MBMS services.

## Basic Functions

- Common functions

The ZXSDR R8882 works with BBUs to constitute the distributed BTS system. The ZXSDR R8882 forwards signals that are received or to be transmitted to the BBU for further processing. By connecting to the BBU, the ZXSDR R8882 provides the following functions:

- Through the antenna, the ZXSDR R8882 provides access to terminals and provides RF link transmission functions, including RF receiving/transmitting duplex, low noise amplification of received RF signals, amplification of sent RF signals, modulation/demodulation, measurement and report, power control, calibration, and synchronization.
- Supports mixed-mode networking structure.
- The ZXSDR R8882 is connected to the BBU through the optical interface. The optical interface implements the following functions: clock synchronization, propagation delay measurement and compensation, IQ data transmission, operation maintenance and configuration.
- Provides power amplifier control and protection functions, including over-power-amplification alarms, over-temperature alarms, and Standing Wave Ratio (SWR) alarms. Supports protection against reverse power connection. Supports alarm query for operation and maintenance.
- Through the operation and maintenance interface, provides system management functions, including configuration management, alarm management, status check and monitoring.
- Locally/remotely supports software and hardware versions inquiry, software upgrade, board resetting, power inquiry, automatic calibration, and RET antenna adjustment.

- GSM mode

When working in GSM mode, the ZXSDR R8882 provides the following functions:

- Supports GSM frequency bands.
- Supports GSM Phase I/Phase II/Phase II +.
- Supports GPRS CS1 to CS4 encoding modes.
- Supports space diversity, frequency diversity, time diversity, and polarization diversity.
- The receive end supports the Viterbi decoding algorithm, improving the system receive sensibility and channel decoding capability.
- Supports frequency hopping and Discontinuous Transmission (DTX).

- Supports Timing Advance (TA) calculation and super-distance coverage. The maximum coverage distance is 120 km.
- Supports the Co-BCCH technology.
- UMTS mode
 

When working in UMTS mode, the ZXSDR R8882 provides the following functions:

  - Supports UMTS frequency bands.
  - Supports UMTS R99, R4, R5, R6, R7, and R8.
- CDMA mode
 

When working in CDMA mode, the ZXSDR R8882 provides the following functions:

  - Supports CDMA frequency bands.
  - The air interface complies with the IS-2000 Release A series standards and IS-856-A standard.
  - Provides Received Signal Strength Indicator (RSSI) query.
  - Provides reverse spectrum query.
- LTE mode
 

When working in LTE mode, the ZXSDR R8882 provides the following functions:

  - Supports LTE frequency bands.
  - The air interface complies with related 3GPP standards.
  - Supports QPSK, 16-QAM, and 64-QAM on uplink and downlink.
  - Supports Multiple-Input Multiple-Output (MIMO).
- Mixed mode
 

When working in mixed mode, the ZXSDR R8882 provides the following functions:

  - The air interface complies with the related 3GPP and 3GPP2 standards.
  - Supports the mixed-mode configuration, such as GU, GL, and CL, for corresponding frequency bands.

## 1.4 Product Specifications

Table 1-1 shows the specifications of the ZXSDR R8882.

**Table 1-1 Product Specifications**

Product Specifications	Description
ZXSDR R8882 S9000(C)	Three optical ports; a maximum of 6 Gbps; GSM single mode; 900 MHz frequency band; 2 x 60 W
ZXSDR R8882 S1800(C)	Three optical ports; a maximum of 6 Gbps; GSM single mode, 1800 MHz frequency band; 2 x 60 W

Product Specifications	Description
ZXSDR R8882 S9000	Two optical ports; a maximum of 3 Gbps; GSM single mode, UMTS single mode, or GSM/UMTS dual mode; 900 MHz frequency band; 2 x 60 W
ZXSDR R8882 S8500	Two optical ports; a maximum of 3 Gbps; CDMA/GSM single mode, GSM/UMTS dual mode, or CDMA/LTE dual mode; 850 MHz frequency band; 2 x 60 W
ZXSDR R8882 S8000	Two optical ports; a maximum of 3 Gbps; LTE single mode ; DD frequency band; 2 x 40 W
ZXSDR R8882 S2600	Two optical ports; a maximum of 3 Gbps; LTE single mode ; 2.6 Gbps frequency band; 2 x 30 W
ZXSDR R8882 S2100	Two optical ports; a maximum of 3 Gbps; UMTS single mode; 2T4R; 2100 MHz frequency band; 2 x 60 W
ZXSDR R8882 S1900	Two optical ports; a maximum of 3 Gbps; CDMA/GSM single mode, GSM/UMTS dual mode, or CDMA/LTE dual mode; 1900 MHz frequency band; 2 x 50 W
ZXSDR R8882 S1800	Two optical ports; a maximum of 3 Gbps; GSM single mode, or GSM/LTE dual mode; 1800 MHz frequency band; 2 x 60 W
ZXSDR R8882 S1700	Two optical ports; a maximum of 3 Gbps; LTE single mode; AWS frequency band; 2 x 40 W

## 1.5 Installation Scenarios

The ZXSDR R8882 supports the following installation modes: wall-mounting, pole-mounting, and L-shape gantry-mounting.

- Wall-mounting

The ZXSDR R8882 can be wall-mounted indoor or outdoor.

- Pole-mounting

In pole-mounting installation, you can install one, two, three, or four ZXSDR R8882 devices on one pole.

- L-shape gantry mounting

# Chapter 2

## System Structure


**Table of Contents**

Hardware Subsystem .....2-1  
 Software Subsystem .....2-2

### 2.1 Hardware Subsystem

Figure 2-1 takes the ZXSDR R8882 with three optical ports for example to show the general hardware architecture.

**Figure 2-1 ZXSDR R8882 Hardware Subsystem**

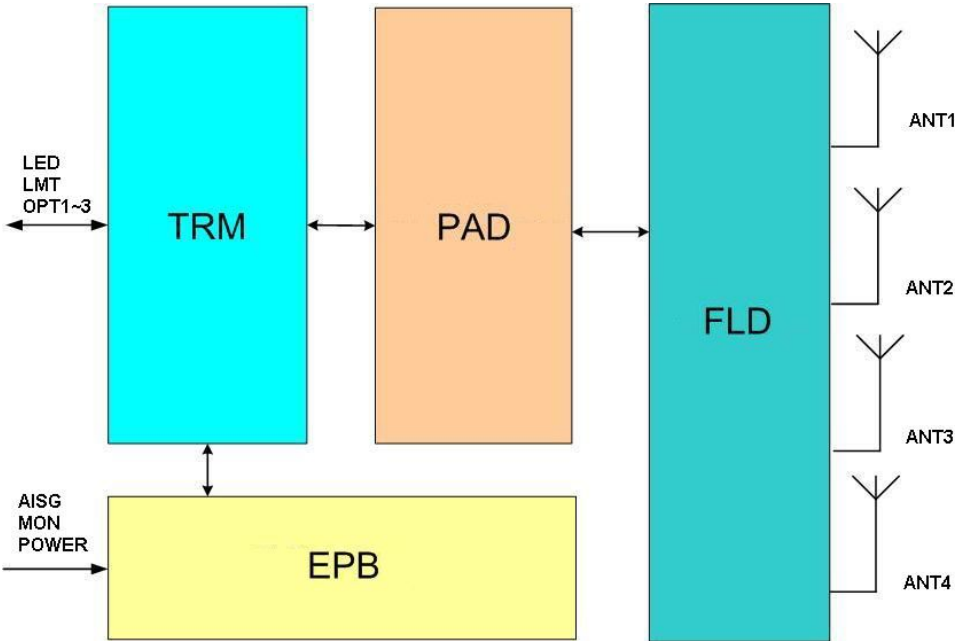

**NOTE**

The OPT3 interface is not available for a ZXSDR R8882 with two optical interfaces.

The ZXSDR R8882 is composed of Multi-mode TRX module (TRM), Power amplification module (PAD), Duplexer and filter (FLD), and EMC protection module (EPB). The functions of each module are as follows:

### TRM

- Processes uplink and downlink RF signals.
- Processes optical interface signals.
- Processes clock signals.
- Provides LED indication.
- Provides external monitoring interfaces.
- Supports local or remote monitoring.

### PAD

- Amplifies downlink radio signals received from the TRM, and outputs the amplified signals to the FLD.
- Amplifies four signals received from the FLD through the LNA, and then sends the amplified signals to the TRM.
- Provides a pre-distortion feedback interface for the TRM.
- Provides an interface to the TRM for Voltage Standing Wave Ratio (VSWR) detection (forward power detection).
- Supports separate switch-off.
- Supports inner-module temperature detection.

### FLD

- Transmits and receives uplink and downlink signals in duplex mode.
- Suppresses spurious emission on the downlink to get acceptable out-band Tx spurious emission required by the system and related protocol.
- Suppresses interference signals on the uplink to achieve a satisfied noise coefficient.


### EPB

- Provides lightning protection for -48 V power supply.
- Provides -48 V power filter.
- Protects AISG signals (AISG power, half-duplex 485 signal).
- Performs dry contact protection.
- Protects the RS485 monitoring signals.
- Provides adaptation for external MON interface, AISG interface, and power interface.

## 2.2 Software Subsystem

Figure 2-2 shows the software subsystem of the ZXSDR R8882.

Figure 2-2 Software Architecture

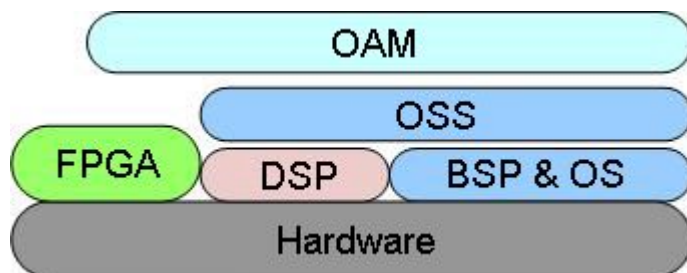

The lower-layer software modules of boards include BSP, DSP, and FPGA.

- BSP&OS module: initializes the system hardware, and provides driver interface functions and operating system.
- DSP module: exchanges information with the CPU, exchanges control signals and data with the FPGA module, implements maintenance and measurement functions such as extracting and updating pre-distortion parameters, and detecting errors and alarms.
- FPGA module: exchanges control signals and data with the BSP and DSP modules.

The Operation Support Sub-system (OSS) is a support layer for the entire software. It provides a hardware irrelevant platform on which the system software runs to provide basic software functions, such as scheduling, timing, memory management, inter-module communication, queuing controlling, monitoring, alarm management, and log management.

The OAM provides the functions of version management, fault management, diagnosis test, configuration management, tool management, performance management, system management, dynamic data management, and communication management.

This page intentionally left blank.



# Chapter 3

## Operation and Maintenance

---

### Table of Contents


Operation and Maintenance Modes.....	3-1
Operation and Maintenance Functions .....	3-2

## 3.1 Operation and Maintenance Modes

### Remote Maintenance Mode

In remote maintenance, the NetNumen™ M3 OMC of ZTE is connected to the BSC/RNC/BBU, and then connected to the ZXSDR R8882 through the Abis/Iub/CPRI interface. In this way, you can operate and maintain the ZXSDR R8882 through the OMC. Figure 3-1 shows the networking.

Figure 3-1 Remote Maintenance Mode (Taking CDMA and GSM for Example)

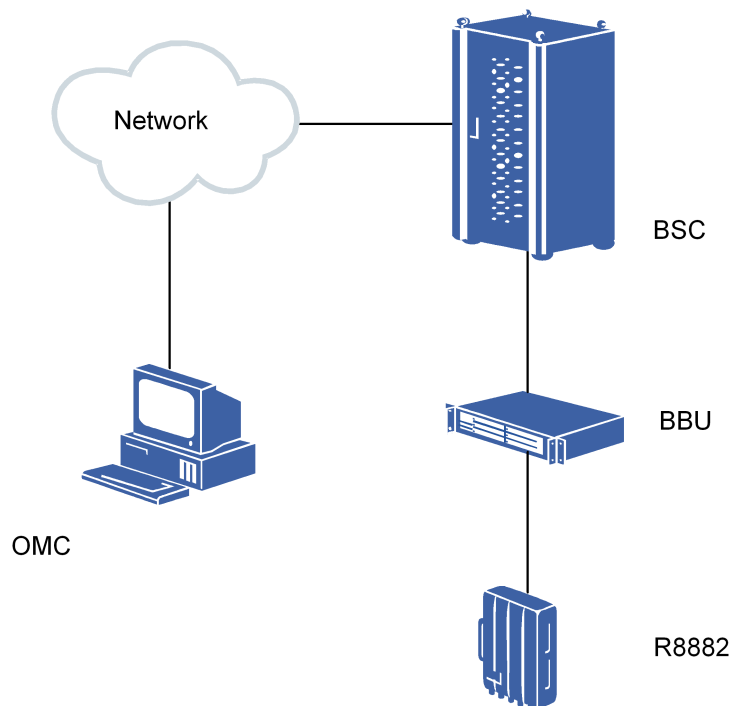


In remote maintenance mode, the OMC and NEs are connected through the TCP/IP protocol. One OMC can maintain multiple BTSs.

## Local Maintenance Mode

In local maintenance mode, the Local Maintenance Terminal (LMT), usually a PC, is connected to the ZXSDR R8882 through an Ethernet cable. Figure 3-2 shows the networking.

Figure 3-2 Local Maintenance Mode

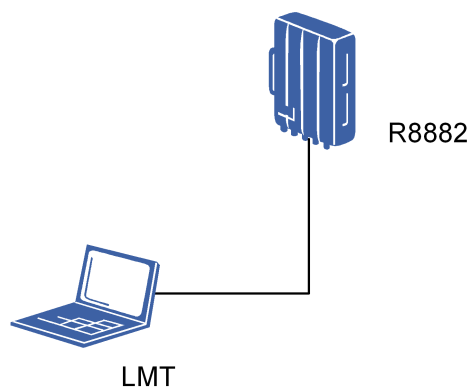

Through the LMT, you can query the power, increase or decrease the power, and perform calibration on the ZXSDR R8882. Through the LMT, you can maintain the entire BTS.

## 3.2 Operation and Maintenance Functions

The NetNumen™ M3 OMC provides a topological view on the GUI interface. Through the GUI interface, users can view the information about all the NEs in the entire network. The users can select a required NE and view its detailed performance data, alarm information, and configuration data. They can also operate and maintain one type of NEs through the topological view. The OMC provides the following functions:

- Configuration management  
Adds, queries, deletes, modifies physical and radio resource data of BTSs. Performs data consistency check; and supports dynamic and static data configuration modes.
- Security management  
Ensures that only authorized users can perform the specified groups of commands.
- Performance management  
Supports performance analysis, invocation tracing, and signaling tracing.
- Version management  
Through the OMC, users can query the software and hardware versions that are in use. The OMC provides the software download mechanism, supporting software upgrade of NEs.
- Fault management  
Supports alarm management and diagnosis test. Monitors the BTS operating status in a centralized manner; Collects abnormal information of boards and links in real time,

which helps the operation and maintenance personnel to determine the equipment faults and maintain the equipment.

This page intentionally left blank.

# Chapter 4

## Networking

### Table of Contents

Networking Description.....	4-1
Star Networking.....	4-1
Cascade Networking .....	4-2
Ring Networking.....	4-2

## 4.1 Networking Description

Table 4-1 shows the networking description of the ZXSDR R8882.


**Table 4-1 Networking Description**

	GSM	UMTS	CDMA	LTE
<b>Star Networking</b>	support	support	support	support
<b>Cascade Networking</b>	support(6 grades)	support(4 grades)	support(6 grades)	not support
<b>Ring Networking</b>	not support	not support	not support	not support

## 4.2 Star Networking

Figure 4-1 shows the star networking of a BBU and multiple RRUs (ZXSDR R8882).


**Figure 4-1 Star Networking**

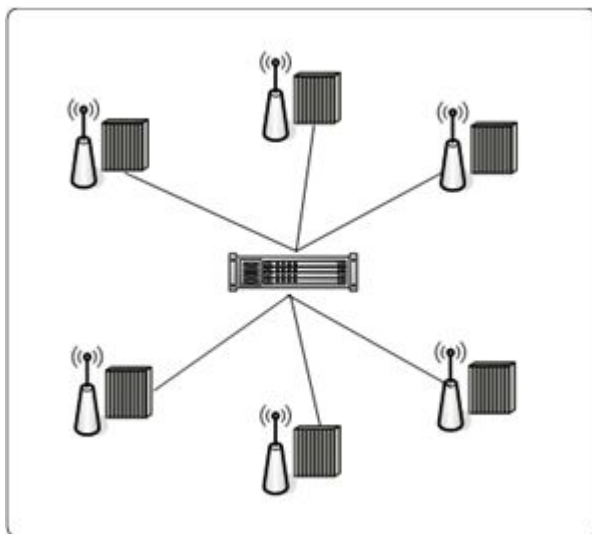

## 4.3 Cascade Networking

Figure 4-2 shows the cascade networking of a BBU and multiple RRUs (ZXSDR R8882).


Figure 4-2 Cascade Networking

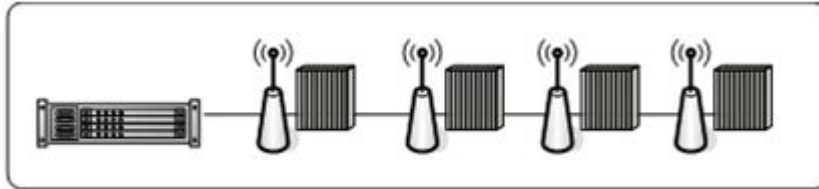

## 4.4 Ring Networking


Figure 4-3 shows the ring networking of a BBU and multiple RRUs (ZXSDR R8882).

Figure 4-3 Ring Networking

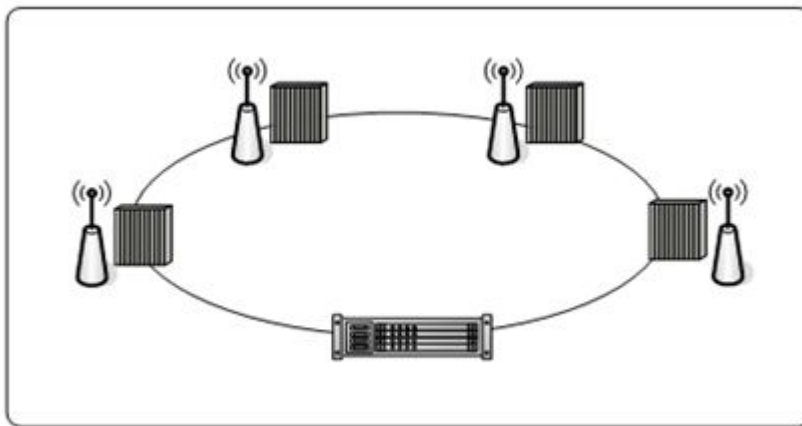

When ZXSDR R8882 provides three optical ports, chain (cascading) networking can be added to the ring networking, as shown in Figure 4-4.

Figure 4-4 Ring and Chain Networking (with Three Optical Ports)

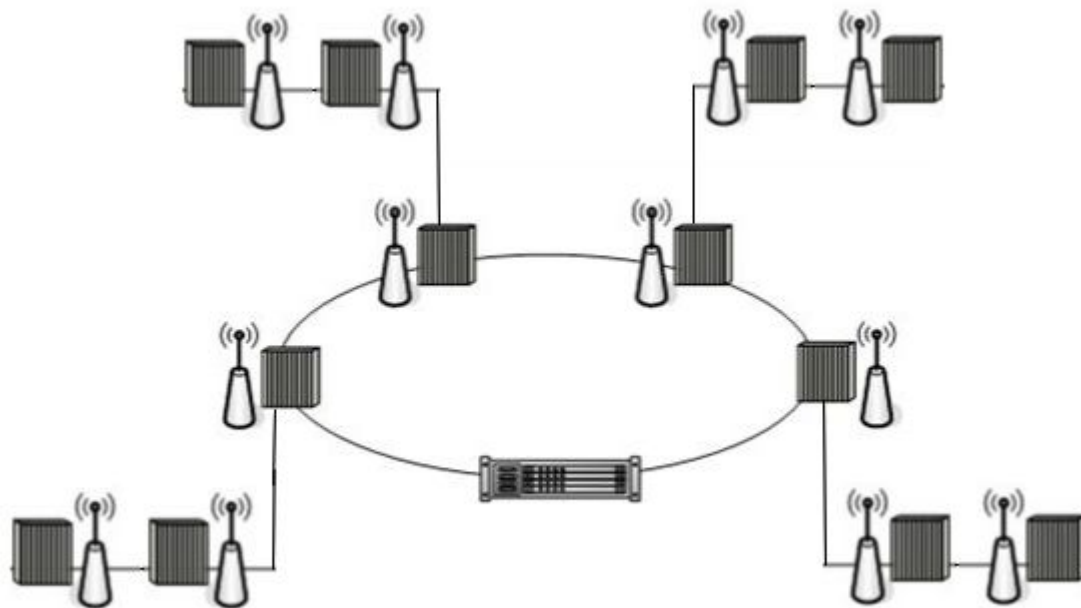

This page intentionally left blank.



# Chapter 5

## Technical Specifications

---

### Table of Contents

Physical Specifications .....	5-1
Radio Performance .....	5-3
Interfaces .....	5-3

## 5.1 Physical Specifications

### Appearance

Item	Specifications
Dimensions	480 mm × 320 mm × 150 mm (Height × Width × Depth)
Weight	< 23 kg
Color	White

### Power Supply Requirements and Power Consumption

Item	Specifications
Average power consumption in GSM single mode	S44: 310 W(900 MHz) / 320 W(1800 MHz) S66: 295 W(900 MHz) / 305 W(1800 MHz)
Average power consumption in UMTS single mode(900 MHz)	S1: 140 W S2: 165 W S3: 185 W S11: 210 W S22: 265 W S33: 310 W S1 MIMO: 210 W S2 MIMO: 265 W S3 MIMO: 315 W

Item	Specifications
Average power consumption in UMTS single mode(2100 MHz)	S1: 115 W S2: 135 W S3: 160 W S11: 170 W S22: 215 W S33: 255 W S1 MIMO: 170 W S2 MIMO: 215 W S3 MIMO: 255 W
Average power consumption in CDMA single mode	310 W 850 MHz / 320 W 1900 MHz
Average power consumption in LTE single mode	330 W 1800 MHz
Rated input voltage	-48 V DC-57 V DC~-37 V DC

### Environmental Requirements

Item	Specifications
Operation	Ambient temperature: -40 °C to +55 °C Relative humidity: 10 % to 100%
Storage	Ambient temperature: -40 °C to +70 °C Relative humidity: 10 % to 100 %
Transportation condition	In condition of 4K2, 4Z5, 4Z7, 4B1, 4C2, 4S3, or 4M3, the transportation must be completed within 180 days

### Reliability

Item	Specifications
Availability	99.999689%
Mean Time Between Critical Failures (MTBF)	≥322000 hours
Mean Time To Recovery (MTTR)	0.5 hour
System service interruption time	The service interruption time of the entire system is less than 1.632 minutes per year.

### Wind Load

Wind Speed	Front	Side	Rear
150 km/h	422 N	197 N	422 N
240 km/h	1092 N	510 N	1092 N

## 5.2 Radio Performance

### Capacity Specifications

Item	Specifications
GSM single mode	Maximum: 2 x 6 carriers
UMTS single mode	Maximum: 2 x 4 carriers
CDMA single mode	Maximum: 2 x 8 carriers
LTE single mode	1 carrier
GSM/UMTS dual mode	2 x 4 GSM carriers + 2 x 1 UMTS carriers, or 2 x 2 GSM carriers + 2 x 2 UMTS carriers
GSM/LTE dual mode	2 x 4 GSM carriers + 2 x 1 LTE carriers
CDMA/LTE dual mode	2 x 4 CDMA carriers + 2 x 1 LTE carriers

### RF Specifications

Item	Specifications
Working frequency band	<ul style="list-style-type: none"> <li>● GSM 850 MHz/900 MHz/1800 MHz/1900 MHz</li> <li>● UMTS 850 MHz/900 MHz/1900 MHz/2100 MHz</li> <li>● CDMA 850 MHz/1900 MHz</li> <li>● LTE 800 MHz/1800 MHz/2600 MHz/AWS</li> </ul>
Transmit power	<ul style="list-style-type: none"> <li>● GSM(850 MHz/900 MHz/1800 MHz) 2×60 W(GMSK)/2×40 W(8PSK)</li> <li>● GSM(1900 MHz) 2×50 W(GMSK)/2×32 W(8PSK)</li> <li>● UMTS 2×60 W 900 MHz/2100 MHz/850 MHz) 2×50 W 1900 MHz)</li> <li>● LTE 2×60 W(S1700)/2×60 W(S1800)/2×40 W(S8000)/2×30 W(S2600)</li> </ul>
Static receiver sensibility	<ul style="list-style-type: none"> <li>● GSM: -113 dBm 850 MHz/900 MHz/1800 MHz/-111.5 dBm 1900 MHz</li> <li>● UMTS single antenna: -125.8 dBm</li> <li>● UMTS dual antennas: -128.5 dBm</li> <li>● CDMA: -115 dBm</li> <li>● LTE: -104.5 dBm</li> </ul>

## 5.3 Interfaces

The ZXSDR R8882 provides the following interfaces:

Item	Specifications
Baseband-RF interface (optical port)	<p>ZXSDR R8882 S9000(C) Provides three optical ports:</p> <ul style="list-style-type: none"> <li>● OPT1: the interface through which the ZXSDR R8882 is cascaded to a BBU</li> <li>● OPT2: the interface through which the ZXSDR R8882 is cascaded to an RRU</li> <li>● OPT3: the interface through which the ZXSDR R8882 is cascaded to a branch RRU</li> </ul> <p>ZXSDR R8882 S1800(C) Provides three optical ports:</p> <ul style="list-style-type: none"> <li>● OPT1: the interface through which the ZXSDR R8882 is cascaded to a BBU</li> <li>● OPT2: the interface through which the ZXSDR R8882 is cascaded to an RRU</li> <li>● OPT3: the interface through which the ZXSDR R8882 is cascaded to a branch RRU</li> </ul> <p>ZXSDR R8882 S9000(B) Provides two optical ports:</p> <ul style="list-style-type: none"> <li>● OPT1: the interface through which the ZXSDR R8882 is cascaded to a BBU</li> <li>● OPT2: the interface through which the ZXSDR R8882 is cascaded to an RRU</li> </ul> <p>ZXSDR R8882 S8500(B) Provides two optical ports:</p> <ul style="list-style-type: none"> <li>● OPT1: the interface through which the ZXSDR R8882 is cascaded to a BBU</li> <li>● OPT2: the interface through which the ZXSDR R8882 is cascaded to an RRU</li> </ul> <p>ZXSDR R8882 S8000(B) Provides two optical ports:</p> <ul style="list-style-type: none"> <li>● OPT1: the interface through which the ZXSDR R8882 is cascaded to a BBU</li> <li>● OPT2: the interface through which the ZXSDR R8882 is cascaded to an RRU</li> </ul> <p>ZXSDR R8882 S2600(B) Provides two optical ports:</p> <ul style="list-style-type: none"> <li>● OPT1: the interface through which the ZXSDR R8882 is cascaded to a BBU</li> <li>● OPT2: the interface through which the ZXSDR R8882 is cascaded to an RRU</li> </ul> <p>ZXSDR R8882 S2100(B) Provides two optical ports:</p>

Item	Specifications
	<ul style="list-style-type: none"> <li>● OPT1: the interface through which the ZXSDR R8882 is cascaded to a BBU</li> <li>● OPT2: the interface through which the ZXSDR R8882 is cascaded to an RRU</li> </ul> ZXSDR R8882 S1900(B) Provides two optical ports: <ul style="list-style-type: none"> <li>● OPT1: the interface through which the ZXSDR R8882 is cascaded to a BBU</li> <li>● OPT2: the interface through which the ZXSDR R8882 is cascaded to an RRU</li> </ul> ZXSDR R8882 S1800(B) Provides two optical ports: <ul style="list-style-type: none"> <li>● OPT1: the interface through which the ZXSDR R8882 is cascaded to a BBU</li> <li>● OPT2: the interface through which the ZXSDR R8882 is cascaded to an RRU</li> </ul> ZXSDR R8882 S1700(B) Provides two optical ports: <ul style="list-style-type: none"> <li>● OPT1: the interface through which the ZXSDR R8882 is cascaded to a BBU</li> <li>● OPT2: the interface through which the ZXSDR R8882 is cascaded to an RRU</li> </ul>
MON interface	One MON interface, through which the external monitoring devices are connected, providing input of RS485 signals and two pairs of dry contacts.
Ethernet interface	One Ethernet interface, which is used for local maintenance.
Antenna and feeder interface	Four antenna and feeder interfaces through which antennas and feeders are connected.
AISG interface	One AISG interface, which is used for the electrical tilt tunable antenna.
Power interface	One power interface, which provides external power input.
Protective Earth (PE) interface	One PE interface, through which the ZXSDR R8882 is connected to the PE.

This page intentionally left blank.

# Chapter 6

## FCC & IC STATEMENT

---

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. This device may not cause harmful interference.
2. This device must accept any interference received, including interference that may cause undesired operation.



**Note:**

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications.

---

Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

This page intentionally left blank.



# Figures

---

Figure 1-1	Position of the ZXSDR R8882 in the Radio Network .....	1-1
Figure 2-1	ZXSDR R8882 Hardware Subsystem .....	2-1
Figure 2-2	Software Architecture.....	2-3
Figure 3-1	Remote Maintenance Mode (Taking CDMA and GSM for Example).....	3-1
Figure 3-2	Local Maintenance Mode .....	3-2
Figure 4-1	Star Networking .....	4-1
Figure 4-2	Cascade Networking.....	4-2
Figure 4-3	Ring Networking .....	4-2
Figure 4-4	Ring and Chain Networking (with Three Optical Ports).....	4-3

This page intentionally left blank.

# Tables

---

Table 1-1	Product Specifications .....	1-5
Table 4-1	Networking Description.....	4-1

This page intentionally left blank.

# Glossary

---

**AGPS**

- Assisted Global Positioning System

**AMR**

- Adaptive Multiple Rate

**BBU**

- BaseBand Unit

**BSC**

- Base Station Controller

**BTS**

- Base Transceiver Station

**CDMA**

- Code Division Multiple Access

**CS**

- Circuit Switched

**DPD**

- Digital Pre-Distortion

**DTX**

- Discontinuous Transmission

**EFR**

- Enhanced Full Rate

**FDD**

- Frequency Division Duplex

**FR**

- Full Rate

**GPRS**

- General Packet Radio Service

**GSM**

- Global System for Mobile Communication

**HR**

- Half Rate

**HSPA**

- High Speed Packet Access

**LMT**

- Local Maintenance Terminal

**LTE**

- Long Term Evolution

**MBMS**

- Multimedia Broadcast/Multicast Service

**MIMO**

- Multiple-Input Multiple-Output

**MTBF**

- Mean Time Between Failures

**MTTR**

- Mean Time To Recovery

**PE**

- Protective Earth

**PTM**

- Point To Multipoint

**PTP**

- Point-To-Point

**RF**

- Radio Frequency

**RNC**

- Radio Network Controller

**RRU**

- Remote Radio Unit

**RSSI**

- Received Signal Strength Indicator

**RTT**

- Round Trip Time

**SDR**

- Software Defined Radio

**SWR**

- Standing Wave Ratio

**TA**

- Timing Advance

**UMTS**

- Universal Mobile Telecommunication System

**VSWR**

- Voltage Standing Wave Ratio