

**THUNDERBIRD 500**

**ROYAL  
ENFIELD  
OWNER'S  
MANUAL**



---

## FOREWORD

We congratulate you on your choice of the legendary Royal Enfield motorcycle and welcome you to the exciting world of motorcycling. The Thunderbird 500, the ultimate highway cruiser now comes with a solid 500cc engine, a bigger 20 litre tank, ergonomic seating and a powerful projector headlamp. This manual will help you to operate your motorcycle the right way and guide you to maintain it meticulously. We have also provided tips on safe riding and on minor adjustments for the care of your motorcycle. Please avail the four free & three paid services at the nearest Authorised Service Center, at the appropriate time to maintain your motorcycle in top riding condition. Log on to the exciting world of Royal Enfield on [www.royalenfield.com](http://www.royalenfield.com) to get to know more about the company, its products and exciting news from time to time. We request you to carefully read the terms and conditions of warranty and other useful information given in this manual before starting to use your Thunderbird 500.

---

---

## NOTICE

---

All information in this manual is based on the latest product information available at the time of publication. Due to continuous improvements, there may be discrepancies between the information in this manual and your motorcycle. Royal Enfield reserves the right to make production changes at any time without prior notice and without incurring any obligation to make the same or similar changes to motorcycles previously built or sold.

All images shown are for reference to explain and need not to be exactly the same on the model you own. Technical specifications are subject to change without prior notice.

© Copyright 2016 Royal Enfield (A unit of Eicher Motors Ltd.). All Rights Reserved. No part of this manual shall be copied, distributed or otherwise dealt without the express permission in writing of Royal Enfield".

**NOTE: BS III  
This motorcycle meets Emission Norms -  
Bharat (Trem) Stage - III**

**Contact Us:**

Royal Enfield Support : 1800-2100-007  
Email : support@royalenfield.com  
Twitter : @RoyalEnfieldSupport  
Web : www.royalenfield.com

Applicable for Stone Black Colour / Matt Paint Finish

**Disclaimer**

Following precautions are to be taken, to ensure longer paint life of your motorcycle.

1. Do not polish your motorcycle as it increases gloss.
2. Wash only with plain water.
3. Scratches or marks cannot be removed or touched up.

NOTE: Warranty is not applicable for Stone Black Colour / Matt paint finish due to uniqueness of the paint.

Part No. 594069/B / Qty. 500 / Nov. '16

---

## CONTENTS

---

Personal and Motorcycle Information	4	Long Trip Precautions	43
Technical Specifications	5	Washing Procedure	44
Recommended Lubricants	8	Storage Precautions	45
Safety Definitions	9	Trouble Shooting	46
Motorcycle Identification Numbers	10	Warranty Terms & Conditions	47
Location of Key Parts	11	Emission Warranty	49
Operation of Controls	14	Service Coupons	52
Pre-Operational Checks	21	Paid Service & Maintenance Record	67
Safe & Happy Riding	22	Regional & Area Offices	69
Running in Period	23	Authorised Dealer Address	70
Starting	24	Notes	88
Gear Shifting, Riding & Stopping	25	<b>Annexures</b>	
Parking	26	Motorcycle Installation Form	
Periodical Maintenance Chart	27	Pre-Delivery Inspection Report	
Tools & First Aid kit	30	Motorcycle Installation Confirmation By Customer	
Minor Maintenance Tips	31	Form 22	

## PERSONAL & MOTORCYCLE INFORMATION

Name															
Door No./Street															
Locality															
City		State					Pin								
Contact Nos.		Res:			Off:			Mobile :				Email :			
Engine No.												Battery No.			
Frame No.												Battery make			
Reg. No.												Licence No.			
Date of Sale												Valid till dt.			
Model												Key No. :			
Tyre make												Colour			
Sold by												Dealer Code			
Motorcycle Installation Form (MIF) No.															

---

## TECHNICAL SPECIFICATIONS

---

### ENGINE

Engine Type .....	Single Cylinder 4 Stroke, Air cooled
Bore .....	84mm
Stroke .....	90mm
Swept volume .....	499cc
Compression ratio .	8.5:1
Max Power BHP @ RPM	27.2@5250
Max Torque in NM@ RPM	41.3@4000
Idle RPM .....	1050±200
Starting .....	Kick Start E-Start
Air filter element ....	Paper element
Lubrication .....	Wet sump, Forced lubrication
Engine oil capacity	2.75 litres (First Fill only) 2.30 to 2.50 litres (subsequent refills)
Engine oil grade ....	Royal Enfield 15W50 API SL (JASOMA)
Cooling .....	Natural air flow

### IGNITION SYSTEM

Ignition system .....	Electronic Ignition ECU / Variable
Spark plug Electrode gap	0.70 to 0.80 mm
Spark plug .....	WR8DP M14 (Bosch) & UR6DC M10 (Bosch)

### TRANSMISSION

Clutch .....	Wet multiplate (7 plates)
Primary drive .....	Duplex chain
Primary ratio .....	2.15 : 1
Gear box .....	Constant Mesh, 5 Speed
Gear Ratio .....	1 <sup>st</sup> 3.06:1 2 <sup>nd</sup> 2.01:1 3 <sup>rd</sup> 1.52:1 4 <sup>th</sup> 1.21:1 5 <sup>th</sup> 1:1
Final drive .....	18 Teeth (F.D. Sprocket)
Final Ratio .....	2.11:1
Drive Chain links ....	102 links

---

## TECHNICAL SPECIFICATIONS

---

### CHASSIS

---

Frame .....	Single Down Tube, Using engine as stressed member.
Suspension	
Front .....	Inline Telescopic Fork (dia 41mm) hydraulic damping stroke 130mm
Rear .....	Rigid oval section swing arm with gas filled shockabsorbers stroke 80mm (5 steps adjustable)
Brakes	
Front Disc .....	280mm ventilated disc, Double piston caliper
Rear Disc .....	240mm ventilated disc, Single piston caliper
Tyre size	
Front .....	90 / 90 - 19" - 52 P
Rear .....	120 / 80 - 18" - 62 P
Tyre Pressure	
Solo	

Front .....	20 psi/1.41 kg/cm <sup>2</sup>
Rear .....	30 psi/2.11 kg/cm <sup>2</sup>
With Pillion	
Front .....	22 psi/1.55 kg/cm <sup>2</sup>
Rear .....	32 psi/2.25 kg/cm <sup>2</sup>
Steering lock .....	In built
Fuel tank capacity ..	19 litres approx. *
Low fuel warning ...	Last bar blink system 5.5±0.50 litres approx.
Dead stock of Petrol (unusable fuel)	0.5 litre approx.

* The above values are approximate and the actual fuel filling capacity will vary from the values mentioned.
--

### ELECTRICALS

---

Generation .....	Alternator
System : E-Start .....	12V - DC
Battery : E-Start .....	12V - 14 AH MF

## TECHNICAL SPECIFICATIONS

Head lamp .....	Projection type, H7 bulb 55/55W with LED light guide ring
Position indicator ....	LED, 12V X 1 No.
Brake/Tail lamp .....	LED lamp with position light guides
Hi beam indicator .....	LED, 12V X 1 No.
Neutral indicator .....	12V-1.4W X 1 No.
Turn signal indicator .....	LED, 12V X 2 Nos.
Turn signal / .....	12V, 10W X 4 Nos.
hazard warning	
Horn .....	12V, 2.5 Amp (Max.) X 2 Nos.
Starter Motor .....	12V, 900 Watts
Instrument Cluster ..	Digital cluster with LCD panel
Hazard indicator ...	LED, 12V X 1 No.
Side stand indicator ..	12V-1.4W X 1 No.
Malfunction .....	LED, 12V X 1 No.
Indicator Lamp (MIL)	



### WARNING

Using bulbs / other electrical gadgets other than specified rating may lead to over loading / erratic behaviour / premature failure of electrical system.

Modifications on the motorcycle which are not approved by Royal Enfield may not only disqualify for warranty, but also affects performance of the motorcycle.

### DIMENSIONS

Length .....	2060 mm
Width .....	790 mm
Height .....	1205 mm
Wheel base .....	1350 mm
Ground clearance.....	135 mm
Saddle Height .....	775 mm


### WEIGHTS

Kerb weight (90% fuel&oil)	195 Kgs.
Max. Pay load .....	170 Kgs.

- Values / Dimensions given above are for your guidance only.
- In view of continuous improvements being done on our products, the specifications are likely to change without prior notice.



## RECOMMENDED LUBRICANTS

Engine Oil	
Grade	Royal Enfield 15 W 50 API SL Engine Oil (JASO MA) 
Capacity	2.75 Ltrs. (First Fill only) 2.30 to 2.50 Ltrs. (during oil & filter element replacement in periodical maintenance)

Front Fork Oil	
Grade	Royal Enfield Front Fork Oil (or Gabriel Fork Oil 2w 35)
Capacity	430±3 ml/leg

Brake Fluid	
Grade	DOT 3 or DOT 4
Capacity	Fr. 60 ml Rr. 100 ml

DO NOT Mix DOT 3 & DOT 4 brake fluid together.

### CAUTION

Use of Wrong grade oil will reduce the life of the moving parts and seriously affect performance

### NOTE

Recommendation subject to change without notice.

### ISO 14001 Operation Control Process

As per the guidelines in the ISO 14001 Environmental Management System, customers are advised to carry out timely replacement of Engine, Front Fork and Brake oils, ONLY through a Royal Enfield Authorised Dealer / Service Center for the safe disposal of the used oils to prevent Environmental pollution.

In case the oils are replaced privately, it is advised to ensure the old/ removed oils are collected carefully and reached to a certified disposal agency, nearest to you to safely disposing the oils.

Similarly, hazardous wastes such as old/discarded Batteries, Tyres, Tubes, Cables, Gaskets, Oil filters etc. should also be disposed off carefully and properly only through a certified disposal agency.

---

## SAFETY DEFINITIONS

---

The information given under the titles : Warning, Caution and Note are for your safety and for the care and safety to your motorcycle and others. Please read these carefully and if disregarded may result in injury to yourself or others and damages to the motorcycle.



---

### **WARNING**

---

Indicates a potentially hazardous situation. Disregarding this message may result in injury to rider or other persons.

---

### **CAUTION**

---

This message if disregarded may result in damage to the motorcycle.

---

### **NOTE**

---

Indicates important and useful messages for clearer understanding.

All Images shown in subsequent pages are for reference to explain and need not to be exactly the same on the model you own.

---

## MOTORCYCLE IDENTIFICATION NUMBERS

---

---

### FRAME NUMBER

---

Punched on steering head tube right side.



---

### ENGINE NUMBER

---


Punched on crankcase left top side.



---

## LOCATION OF KEY PARTS - TOP VIEW

---

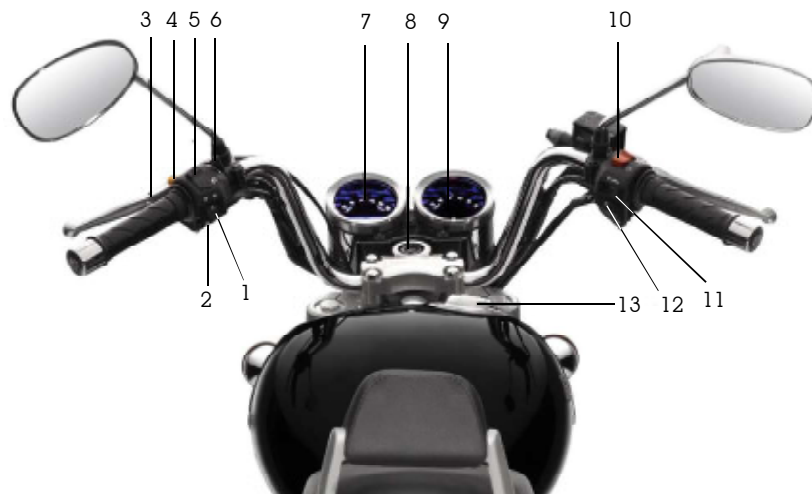

1. Turn Signal Switch
2. Horn Button
3. Clutch Lever
4. Day Flash Switch
5. Head Lamp Dip Switch
6. Manual Bistarter / Choke
7. Speedometer
8. Ignition Switch
9. Malfunction / Low Fuel Indicator
10. Engine Kill Switch
11. Pilot Head Light Switch
12. E-Start Switch
13. Fuel Tank Cap

---

## LOCATION OF KEY PARTS - RIGHT SIDE VIEW

---



1. Right Trafficator Rear
2. Right Trafficator Front
3. Brake Pedal
4. Starter Motor
5. Air Filter Box (Side Panel)
6. Utility Box (Tool Kit)

---

## LOCATION OF KEY PARTS - LEFT SIDE VIEW

---



1. Left Trafficator Front
2. Utility Box (Fuse Carrier)
3. Left Trafficator Rear
4. Center Stand
5. Side Stand
6. Battery Cover
7. Spark Plug
8. Gear Change Pedal
9. Horn

---

## OPERATION OF CONTROLS

---

### STEERING LOCK

- Turn the handle bar to extreme left or right position.
- Push the key inside in "OFF" position, press and further turn to anticlockwise direction to lock the steering system.
- Push the key in steering lock Position, and turn clockwise direction to unlock the steering.



### FUEL TANK CAP

- Turn key clockwise to open.
- Press cap to lock with key in position.





### SIDE PANEL LEFT / BATTERY COVER

- Turn anti clockwise to open
- Pull the side panel outside for opening the same.

### SIDE PANEL RIGHT

- Unscrew the indicated screw and then pull the side panel for opening the same.

### IGNITION SWITCH


 OFF     ON

#### NOTE

- Key is common for ignition, petrol tank cap, steering lock, battery cover and tool boxes.
- Key can be removed only in locked position from fuel tank, Filter box, Electrical boxes locks in "OFF" position from Ignition switch.
- Turn handle bar to extreme left, before attempting to lock steering.




### ENGINE STOP SWITCH

 Engine OFF     Engine ON



### E-START SWITCH

 Depress & hold till engine starts



---

## OPERATION OF CONTROLS

---

---

### HORN

---


 Press





---

### HEAD LIGHT SWITCH

---

 Head Lamp ON

 Pilot ON

 OFF



---

### DIMMER SWITCH

---

 High beam  Low beam



---

### DAY FLASH

---


Press for Head Light Flash





---

### TURN SIGNAL SWITCH

---

 Left turn signal ON

 OFF (Push to off)

 Right turn signal ON



---

### MANUAL BI STARTER (CHOKE)

---

Apply choke in cold start condition while starting the Motorcycle



---

### CAUTION

---

- Choke should be used only to start engine in cold climates (less than 20°C) or first time in the morning. Riding with the Choke "ON" will result in Engine Misfiring, Erratic behaviour, High fuel consumption, and increased Emission values.



## OPERATION OF CONTROLS

### SIDE DECOR

- Removing Left or Right side decor  
4 mm allen key is used.



- The allen key is located in the battery carrier rubber strap (as shown in fig.).



### RIDER & PILLION SEAT CABLE LOCK

- There are 2 cable hooks, Black & Yellow on right side of the battery (below the hook, index mark "R" - Rider & "P"-Pillion)



### DIGITAL INSTRUMENT CLUSTER




1. Speedometer	◀ Turn Signal Indicator Left
2. RPM (Tacho) Meter	▶ Turn Signal Indicator Right
3. Alpha-Numeric Display Unit	Ⓛ High Beam Indicator
4. Select Button	Ⓝ Neutral Indicator
5. Set Button	⚠ Hazard Warning Indicator
6. Hazard Button	Ⓜ Malfunction Indicator Lamp
	Ⓟ Parking Lamp Indicator
	Ⓢ Side stand Indicator

---

## OPERATION OF CONTROLS

---

### INSTRUMENT CLUSTER DISPLAY PATTERN

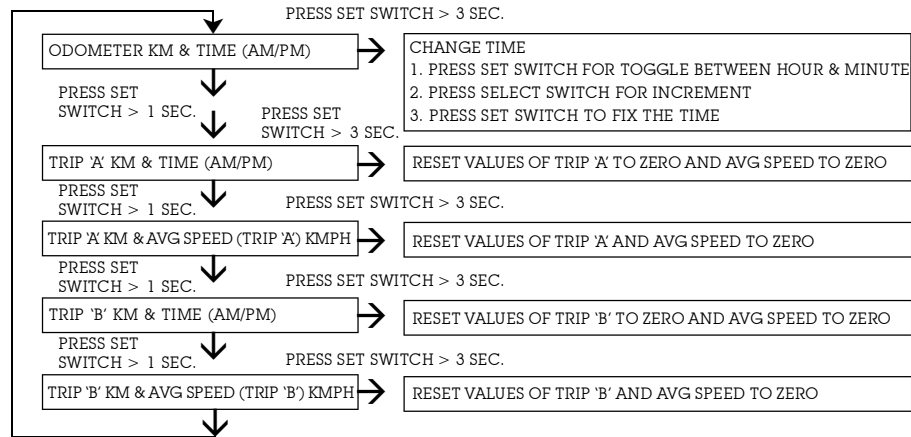


## OPERATION OF CONTROLS

### ALPHA-NUMERIC DISPLAY UNIT

This unit in the speedometer consists of

1. Odometer
2. Trip A /AVG speed of Trip A
3. Trip B /AVG speed of Trip B
4. Clock
5. Fuel level indicator
6. Battery low voltage indicator
7. Service Reminder

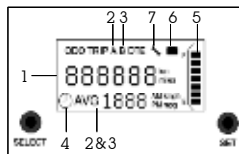

### ODOMETER MODE

Odometer mode is a initial mode. It displays odometer and time.



### NOTE

Once you turn "ON" the ignition key, whatever the last selection mode will be displayed. If the current display

mode is "TRIP A", you just turn off the ignition key.

Once you turn the ignition key the display mode remaining same.

### TRIP METER MODE

A brief push (less than one second) on the "SELECT" button switches the display from odometer to Trip meter (TRIP A)



### TRIP METER AVG SPEED MODE

Again press the "SELECT" button switches the display from "TRIP A" to "TRIP A AVG".



Again press the "SELECT" button switches the display from "TRIP A AVG" to "TRIP B".



Again press the "SELECT" button switches the display from "TRIP B" to "TRIP B AVG".

---

## OPERATION OF CONTROLS

---

### NOTE

After running of One kilometer only AVG TRIP A/B Speed will be displayed.

### RESET TRIP METER

1. Change TRIP A/B as a current mode.
2. Press the "SET" button (more than 3 Seconds).
3. Automatically the display will be zero

### CLOCK

The clock indicates the Hours/Minutes and AM/PM.



### RESET CLOCK

1. Change Odometer/as a current mode.
2. Press the "SET" button (more than 3 Seconds).
3. The Hours will be blinking, and press the "SELECT" button to change the Hours.

4. Again press the "SET" button (more than 3 seconds)
5. The Minutes will be blinking, then press the "SELECT" button to change the Minutes

### NOTE


Once you press the "SELECT" button the Hours/Minutes will increase in ascending order only, it not decrease. The Hour/Minutes blinks less than 1 minute, within the time limit you have to reset the clock otherwise it will come out from the reset mode.

### FUEL LEVEL INDICATOR

The fuel level indicator indicates the level of fuel in the fuel tank.

The display bars of the fuel meter disappears towards the Empty (E) if the fuel level decreases.

When last bar will start blinks, (Fuel capacity is less than 5.5 Ltrs.) refuel as soon as possible.

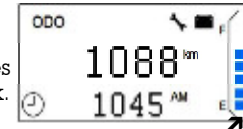


## OPERATION OF CONTROLS

### NOTE

If the last bar of the fuel meter is blinking continuously after fueling, visit the Royal Enfield authorised dealer check the electrical system.

### BATTERY LOW VOLTAGE INDICATOR

Once switch "ON" the ignition key, after 7 seconds only battery indicator will indicates. If the battery voltage is less than 12 volts, it will start blinking.

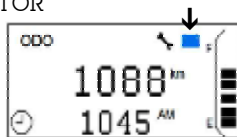

In running condition the battery voltage is below 12 Volts in 3 seconds continuously, the indicator will start blinking.

### SERVICE REMINDER

The service reminder indicates that if your motorcycle is due for service.



The service reminder symbol will start blinking Kilometers ranges as shown below:

Service Due	Kilometer
1	450
2	2900
3	5900
4	8900

### ⚠ WARNING

Do not change the setting while riding, It may cause loss of control leading to an accident.

### NOTE

During this Service Reminder Blink you are advice to visit a Royal Enfield Authorised Dealer / Service Center for availing respective Free/Paid services.

---

## PRE OPERATIONAL CHECKS

---

A careful check of the following must be carried out every time before riding and specially after long periods of storage to determine if any additional maintenance is necessary.

1. Adequate fuel in the tank.
2. Tyres for correct pressure, abrasions or cuts.
3. Rear chain for proper tension and sufficient lubrication.
4. Brakes, steering and throttle for proper responsiveness.
5. Cable for fraying or crimping and free operation.
6. Engine oil level.

7. Wheel spokes for proper tightness and no breakage.
8. Headlamp, tail lamp, brake lamp and indicator lamps for proper functioning.



### **WARNING**

---

For your personal welfare and safety, all the points mentioned above should be performed periodically. Failure to do so may affect safe operation, damage your motorcycle and could result in an accident causing serious injury.

---

## SAFE & HAPPY RIDING

---

---

### RIDING DRESS

---

- A proper riding apparel
- Proper Riding Boots
- Soft Leather Gloves
- Goggles or spectacles
- An ISI Certified helmet. (Affix light reflecting strips of stickers on the front and rear of the helmet for good visibility at night).

---

### NOTE

---

A light coloured shirt enables greater visibility to other road users especially during nights.

---

### CAUTION

---

Loose clothing may get caught on moving parts of the motorcycle.

---

### SITTING POSTURE

---

Correct sitting posture is a must for stable and safe riding

- Sit Straight with your shoulders completely relaxed.
- Keep your elbows close to your body.
- Hold the handle grip close to its inner end.
- Slightly grip the fuel tank with the knees.
- Keep your toes in "straight ahead" direction.
- Before turning, look extensively in the rear view mirror, without turning your head.

---

### BRAKING

---

- Use both front and rear brakes simultaneously for maximum braking efficiency.
- While riding on wet or bad road conditions use brakes cautiously.



### WARNING

---

Applying any one of the brakes suddenly may cause the motorcycle to skid.

---

## RUNNING IN PERIOD

---

The Royal Enfield Motorcycle as you would be experiencing, is capable of consistent high speeds. However as with any new motorcycle, a "RUNNING-IN" procedure is essential to help in proper "Bedding-In" of the various moving parts in your motorcycle and to achieve optimum performance subsequently.

1. During the first 2000 Kms of run, do not exceed the speed limits as shown in the table below.
2. Do not exceed maximum specified pay load.

3. Warm up the engine for a few minutes at idling speed to allow engine oil to lubricate all the moving parts in the engine before riding the motorcycle.
4. Avoid full throttle operation and do not ride at constant throttle continuously. Vary the speed by 10% while riding.
5. Avoid sudden accelerations and racing starts.

Gear \ Motorcycle Speed	First 500 kms	501 - 2000 kms
1	15 KMPH	20 KMPH
2	25 KMPH	30 KMPH
3	30 KMPH	40 KMPH
4	45 KMPH	55 KMPH
5	60 KMPH	70 KMPH



---

## STARTING

---

- Ensure Gear is in Neutral position and the Neutral lamp is glowing in the speedometer. To shift into neutral, move the motorcycle back and forth gently, while simultaneously shifting the gear.



---

### CAUTION

Do not attempt to shift gears without moving the motorcycle back and forth as it will damage the gears mechanism.

- Use choke (Manual Bi Starter) if required in cold climatic conditions (below 20°C)
- Switch ON Ignition and the Stop Switch to "RUN" Position.



---

### USING THE KICK START LEVER

---

- Slowly Crank Engine with the Kickstarter lever till a resistance is felt in the lever. Slightly crank slowly and further till the compression eases over.
- Release Kickstarter lever to enable it to come to its top resting position.
- Apply a powerful swinging Kick on the lever to start the engine. (It may be necessary to open the throttle, very slightly, when starting on choke/first time in the morning.
- Release Choke if applied and allow Engine to run at idling speed for a few minutes.

---

### USING ELECTRIC START

---

- Depress and Hold the Clutch Lever.



---

## GEAR SHIFTING, RIDING & STOPPING

---

- Press Starter Button and hold till Engine starts. **Do not release the button before Engine starts.**



- Warm up engine for 2 minutes - till idling is consistent/stable

GEAR SHIFT PATTERN  
1—N—2—3—4—5



- Press clutch lever towards the hand grip.
- Press gear pedal with toe towards down to engage 1st gear.
- Gently open throttle and release clutch simultaneously. If clutch is released suddenly, the engine may stall and cause a jerky start.


---

### CAUTION

---

The clutch must be fully disengaged before attempting a gear shift. Failure to fully disengage the clutch may cause a jerky start OR stalling the engine besides causing damage to transmission parts.

- Press the gear pedal upwards with toe to engage 2nd and gear.
- Follow the same procedure for 3rd, 4th and 5th gear.

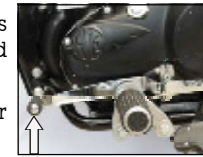

---

### NOTE

---

Always start motorcycle with gear in neutral position.  
Always move the motorcycle in first gear position only.  
When engine speed decreases or while climbing a gradient or running at a reduced speed, shift to the appropriate lower gear to prevent the engine from stalling or straining to pull.

---

## PARKING

---

---

### PARKING MOTORCYCLE ON CENTER STAND

---

- Select a firm, flat surface.
- Hold handle bar straight.
- Lower center stand, such that, both the legs of the stand are resting on firm ground.
- Apply pressure on the fulcrum lever on the center stand and pull motorcycle backward.




---

### PARKING MOTORCYCLE ON SIDE STAND

---

- Select a firm, flat surface.
- Extend side stand. Tilt the motorcycle to the left, till it is supported firmly.

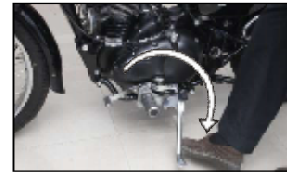

---

### **WARNING**

---

Ensure both the stands are retracted fully before riding the motorcycle.

Please exercise extreme care while parking and ensure it is parked firmly to avoid the motorcycle from falling over and causing injury to you or to others and damage to the motorcycle parts.

## PERIODICAL MAINTENANCE

The maintenance schedule detailed here will help you maintain your Thunderbird 500 Motorcycle meticulously and to get a long trouble free service. The schedule provided herein is based upon average riding conditions and indicates the KMS at which regular inspections, adjustments, replacements and lubrications are to be carried out. The frequency of the maintenance must be shortened depending upon the severity of the driving condition or if the motorcycle is used in a very dusty environment. Contact the nearest Royal Enfield Authorised Dealer / Service Center for expert advice and to carry out the required maintenance.

Sl. No.	DESCRIPTION	FREE SERVICE				PAID SERVICE						
		whichever is earlier				12	15	18	21	24	27	30
	Kms (x 1000)	0.5	3	6	9	12	15	18	21	24	27	30
	Months	1.5	3	6	9	12	15	18	21	24	27	30
1	Engine Oil	R	I	R	I	R	I	R	I	R	I	R
		Check level at every 1000 Kms or earlier as required										
2	Engine oil filter paper element	R		R		R		R		R		R
3	Engine sump filter (oil strainer), Magnetic drain plug under gear box and secondary drain plug under crankshaft in crankcase right	C		C		C		C		C		C
4	Spark plugs (2 nos.)	C&A	C&A	C&A	C&A	C&A	R	C&A	C&A	C&A	C&A	R
5	HT leads for crack	I	I	I	I	I	I	I	I	I	I	I
6	Fuel hose & clip/Injector 'O' Ring/Seal Ring	I	I	I	I	R	I	I	I	R	I	I
7	Throttle body / Injector	*Carbo Cleaner / Carb Click or Fuel Line Cleaner Spray Every 6000 Kms or 6 Months whichever earlier										

## PERIODICAL MAINTENANCE

Sl. No.	DESCRIPTION	FREE SERVICE				PAID SERVICE										
		whichever is earlier														
	Kms (x 1000)	0.5	3	6	9	12	15	18	21	24	27	30				
	Months	1.5	3	6	9	12	15	18	21	24	27	30				
8	Fuel Pump (under tank)	Check for mounting screw tightness in all services														
9	Accelerator & Throttle pulley cables free play	A	A	A	A	A	A	A	A	A	A	A				
10	Rubber hose, Air filter to Throttle body	I	I	I	I	R	I	I	I	R	I	I				
11	Rubber hose, Inlet manifold / Adaptor	I	I	I	I	R	I	I	I	R	I	I				
12	Air filter paper element	C	C	C	C	R	C	C	C	R	C	C				
13	Inlet / Exhaust valve seating (compression / vaccum test)						I					I				
14	Cylinder head (Combustion chamber)											D				
15	Clutch lever / cable free play	Adjust every 1000 Kms or earlier as required														
16	PAV pipes & hose clip	I	I	I	I	I	I	I	I	R	I	I				
17	Battery terminals (apply petroleum jelly)	C	C	C	C	C	C	C	C	C	C	C				
18	Battery Electrolyte level	I	I	I	I	I	I	I	I	I	I	I				
19	Earth wire eyelet contact (below fuel pump relay/ECU mtg)					I						I				
20	Rear Wheel Drive Chain	Lubricate & Adjust every 1000 Kms /Clean, Lubricate & Adjust every 3000 Kms or earlier as required														
21	Rear brake pedal free play adjustment	I	I	I	I&A	I	I	I	I&A	I	I	I				
22	Rear wheel cush rubbers					I&R				I&R						

## PERIODICAL MAINTENANCE

Sl. No.	DESCRIPTION	FREE SERVICE				PAID SERVICE							
		whichever is earlier				12	15	18	21	24	27	30	
	Kms (x 1000)	0.5	3	6	9								
	Months	1.5	3	6	9	12	15	18	21	24	27	30	
23	Front Fork oil	I	I	I	R	I	I	R	I	I	R	I	
24	Steering ball races play	I	A	L	A	L	A	L	A	R	A	L	
25	Spokes tightness / Wheel rim run out front & rear	I		I		I		I		I		I	
26	Swing Arm pivot bush & spacer			L		L		L		R		L	
27	Tyre wear pattern (Front & Rear)	I	I	I	I	I	I	I	I	I	I	I	
28	Hand levers & kick starter lever pivot	Lubricate every 1000 Kms or earlier as required											
29	Handle bar Damper Rubbers								C&R				
30	Front & Rear brake hose & Banjo Bolt	I	I	I	I	I	I	I	I	I	I	I	R
31	Brake Fluid level check / Replacement Front & Rear disc	I	I	I	I	I	R	I	I	I	I	R	
32	Fuel filter (pump)	C					R						R

A : Adjust      C : Clean      D : De-carbonise      I : Inspect      L : Lubricate      R : Replace

**NOTE**

For Maintenance after 30,000 Kms, Please repeat the same frequency specified above, in consultation with a Royal Enfield Authorised Dealer / Service Center.

\*Carbo cleaner / Carbclick or Fuel Line Cleaner Spray. (Make - Wurth or ITW Chemin)


## TOOLS & FIRST AID KIT

The tool kit is located in the left side Electrical box of the motorcycle.



S.No.	Description	Qty.
1.	Tool bag	1
2.	Screw driver O6 X 160	1
3.	Tommy bar	1
4.	Box spanner 21 X 24	1
5.	Tool-Spark plug	1
6.	Double end spanner 14 X 15	1
7.	Double end spanner 10 X 12	1
8.	Allen Key 4 mm	1

A first aid kit is provided with the motorcycle for any emergency requirements.

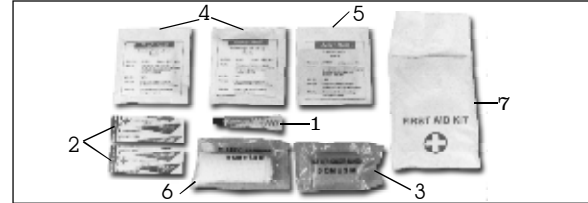

S.No.	Description	Qty.
1.	Antiseptic cream 5 gms	1
2.	Wash proof plaster 1.9 cm x 7.2 cm	2
3.	Gauze bandage 5 cm x 2 cm	1
4.	Sterilized Gauze Swab 5 cm x 5 cm	2
5.	Sterilized elastic plaster 7 cm x 6 cm	1
6.	Elastic Gauze bandage 8 cm x 1 mtr.	1
7.	First aid kit pouch	1

\* Please familiarise yourself with the minor maintenance of the motorcycle before attempting to carry out the same.

---

## MINOR MAINTENANCE TIPS

---

The following simple maintenance activities will help in maintaining your motorcycle. However for an elaborate maintenance, we recommend you to get in touch with a Royal Enfield Authorised Dealer / Service Center.

### CONTROL CABLES

---

Lubricate after water washing motorcycle or if used during rainy conditions.

### HAND LEVER PIVOTS

---

Wipe the area free of dirt / grease.

Apply a few drops of oil on the pivots.



### CENTER/ SIDE STAND PIVOTS

---

Apply a few drops of oil on the pivots after cleaning the area of dirt.



### DRIVE CHAIN


---

Clean the drive chain carefully. Apply chain lubricant while simultaneously rotating the rear wheel. Wipe off the excess lubricant.

### OIL LEVEL INSPECTION

---

- Place motorcycle on its center stand on a firm surface.
- Warm up engine for a few minutes & switch off before checking oil level.
- The level is correct if the oil level is in the middle of the oil level window.
- Top up only with recommended Engine oil

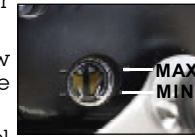

### CAUTION

---

Use of wrong grade or spurious oil can seriously affect motorcycle performance & damage to moving parts.



---

## MINOR MAINTENANCE TIPS

---

---

### SPARK PLUG


---

---

#### CLEANING AND ADJUSTING PLUG GAP

---

- Remove spark plug using the plug spanner and tommy bar.
- Clean the insulator tip and electrodes of the plug carefully.
- Check and set the electrode gap between 0.80 to 0.90 mm.

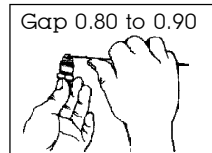

- Refit the spark plug on the cylinder head.

---

### BRAKE FLUID

---



FRONT BRAKE

REAR BRAKE

Check if oil is below 'MIN' level. To top Up, remove cover and diaphragm, then top up with DOT 3 or DOT 4 as specified.

---

#### CAUTION

---

Brake fluid is highly corrosive and can cause damage to painted parts. Please ensure that brake fluid does not spill on any part of the motorcycle. In the event of a spill, please clean the area immediately with a soft cloth (preferably a wet cloth) to avoid damage.

Don't mix DOT 3 & DOT 4 Brake fluid together.

## MINOR MAINTENANCE TIPS

### INSPECTION OF TYRES AND WHEELS

- Inspect the tyres periodically for tread wear, cracks and cuts.

Minimum tread depth :	
Front tyre : 1 mm	Rear tyre : 2 mm

- Check and remove stone, splinters, nails or other particles embedded in the tyre treads.
- Periodically inspect wheels for spokes breakage and wheel rim run out.
- Check proper seating of the tyre beading on the rim whenever the tyre is reassembled.
- Use only recommended tyres & tubes, inflated to correct air pressure.

	Front	Rear
Solo	1.41 kg/cm <sup>2</sup> (20 PSI)	2.11 kg/cm <sup>2</sup> (30 PSI)
With Pillion	1.55 kg/cm <sup>2</sup> (22 PSI)	2.25 kg/cm <sup>2</sup> (32 PSI)

### FRONT WHEEL REMOVAL

- Support front end of engine suitably such that the front wheel is free off the ground
- Loosen pinch bolt on right fork end with 6 mm Allen key.
- Hold spindle on right side and remove spindle nut and washer from left side.
- Support wheel and pull out spindle from right side.
- Remove wheel along with wheel speed sensor and spacer.
- Remove speedo sensor.



---

## MINOR MAINTENANCE TIPS

---

### CAUTION

Do not press the front brake lever when wheel is removed as this will result in the brake pads coming too far out of the brake caliper.

- Place a 4 mm thick wooden piece or cardboard sheet between the brake pads to avoid pads activation in the event the front brake lever is accidentally pressed.

---


### FRONT WHEEL REASSEMBLY

---

- Remove the wooden / card-board spacer placed between the brake pads
- Locate wheel speed sensor lugs on the hub slot carefully.



- Position wheel along with wheel speed sensor and spacer on left side between the front fork legs, ensuring the brake disc is located between the brake pads.
- Insert wheel spindle from right fork end.
- Position wheel speed sensor such that it is parallel to ground.
- Hold spindle on right side, locate washer and nut on spindle on left side and tighten firmly.
- Tighten pinch bolt on right fork end.
- Rotate wheel and check for smooth rotation and proper working of speedometer.
- Press brake lever and check front brake for efficiency.

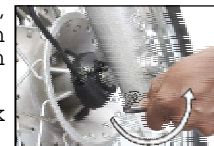



---

## MINOR MAINTENANCE TIPS

---


### REAR WHEEL REMOVAL

- Place the motorcycle on center stand on a firm and flat surface.
- Note the alignment index marks in the both side of swing arm.
- Remove wheel spindle from left side as shown.
- Remove the brake hose pipe from the swing arm clips.
- Remove the caliper assembly with bracket by pulling out from the swing arm slot.
- Place the wooden piece/card board sheet in between the brake pads.
- Remove the left side spacer from rear wheel hub.
- Tilt motorcycle to right side and slide out rear wheel.



### REAR WHEEL REASSEMBLY

- Ensure the four Cush rubbers are in position inside the rear wheel hub.
- Tilt motorcycle to right side and insert the wheel assembly between the swing arms.
- Position the rear wheel with cush rubber on the rear chain sprocket.
- Fix the left side spacer in rear wheel hub.
- Remove the wooden piece / card board sheet in between the brake pads.
- Insert the caliper assembly with bracket by matching the slots given in the caliper and swing arm.



---

## MINOR MAINTENANCE TIPS

---

### NOTE

Ensure the brake disc is located in between the brake pads.

- Align the caliper bracket, wheel and swing arm holes all are in one line.
- Insert and tap the rear wheel axle gently from left side.



### CAUTION

Do not force the spindle into the wheel as the threads may get damaged. Tap it through the wheel gently.

- Note the alignment index marks in the both side of swing arm.



- Fix the brake hose pipe in swing arm clips properly.



### CAUTION

Please check the brake hose pipe routing from Reservoir to Master cylinder, Master cylinder to Rear wheel caliper.

There should not be any twist or pinch in routing which may affect braking performance.

### ⚠ WARNING

Ensure the motorcycle does not come off center stand while assembling / disassembling the wheel assembly. Failure to adhere could result in damage or serious injury.

---


## MINOR MAINTENANCE TIPS

---

### ADJUSTMENTS - CLUTCH LEVER FREE PLAY

Clutch Lever (free play 2 - 3 mm)

- Loosen the cable outer lock nut (A).
- Turn the Nut (B) Clockwise to reduce the play or Anticlockwise to increase the free play.
- Check free play 2 to 3 mm at Clutch lever pivot on handle bar end.
- Tighten lock nut (A) after adjustment is done.

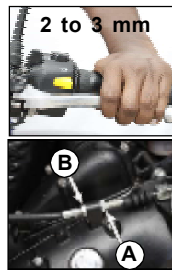

### REAR BRAKE LIGHT SWITCH ADJUSTMENTS

- The brake light glows once you press the brake pedal. If brake light is not glowing, check the brake light switch wire connection, bent/broken switch spring and connection with brake pedal.

If above are o.k., then do the adjustments as mentioned below:

- Tighten / loosen the adjusting nut on the brake light switch such that the brake lamp comes on when the pedal is depressed by 25 mm.




### DRIVE CHAIN TENSION (Free Play 25-30mm)

- Place motorcycle on its center stand on a firm & flat surface.
- Measure the drive chain free play on the top run of the chain.
- The recommended free play is 25 to 30 mm.

---

## MINOR MAINTENANCE TIPS

---

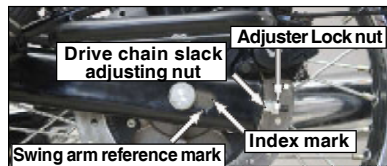

To adjust the free play:

- Loosen rear wheel spindle nut.
- Loosen rear sprocket stub axle nut.
- Loosen lock nuts of the chain adjuster on both ends of the swing arm.
- Tighten / loosen the adjuster nut on right swing arm end, to reduce / increase free play.
- Rotate wheel slowly and check chain free play at the top run to be between 25 - 30 mm.
- Note the matching index marks on right swing arm and chain adjuster and tighten / loosen adjuster nut on left swing arm side, to ensure the marks on both sides are at the same position.



- Tighten the lock nuts against the adjuster nuts, taking care not to disturb the adjuster nut settings.
- Tighten rear sprocket stub axle nut and wheel spindle nut to a torque of 7 Kg m.

---

### WARNING

---

Chain slackness beyond 30mm will lead to chain slippage.

Maintain drive chain slackness within the specified limits at every 1000 kms interval.

Please Check the front and rear wheels are correctly aligned, after the chain adjustment.

---

### BATTERY & MAINTENANCE

---

- The Motorcycle is provided with 12V - 14 AH battery.
- The battery must be periodically checked for
  - Cleanliness and corrosion free terminals.
  - Electrolyte level.



---

## MINOR MAINTENANCE TIPS

---

- If electrolyte level is low, top up with distilled water only.

---

### NOTE

The poor contact or loose fitment of Battery terminals may cause ECU failure.

---

### REMOVAL OF BATTERY FROM THE MOTORCYCLE

- Unlock (turn the key clockwise) and remove the Left side panel.
- Disconnect both the terminal wires (negative first and positive next respectively)
- Remove the battery carrier bracket by loosening the two screws
- Take out the battery.



---

### **WARNING**

Always disconnect the Black negative (-) battery cable first and then the Red positive (+) cable while removing the battery connections.

---

### NOTE

For checking the battery voltage and electrolyte specific gravity, contact authorised Royal Enfield Dealer / service point or battery service center.

---

### **CAUTION**

- Do not use battery with low electrolyte level as the battery internal cells will get damaged.
- Do not overfill the battery electrolyte level as it will spill out through the overflow pipe and cause corrosion to motorcycle parts.
- Use only distilled water meant for use in batteries to avoid damage to battery.



---

## MINOR MAINTENANCE TIPS

---

### REASSEMBLY OF BATTERY ON MOTORCYCLE

- Position the battery in the battery carrier such that negative terminal of the battery is towards the fuel pump side.
- Ensure ignition switch is in "OFF" condition.
- Connect the positive terminal (Red wire) first
- Connect the negative terminal (Black wire) next.
- Smear the terminals with petroleum jelly. (Do not use grease in the battery terminals).
- Place the terminal boot / cap properly.
- Refit the carrier bracket.
- Refit left side panel & lock it.



### NOTE

Clean the wire terminals free of corrosion and keep the terminals coated with petroleum jelly.

### CAUTION

Keep the +ve and -ve cables firmly connected to the respective battery terminals. Failure to do so may result in damage to the motorcycle electrical system.

### CHANGING ELECTRICAL COMPONENTS

#### HEADLAMP BULB REPLACEMENT

- Motorcycle is provided with high and low beam
- Remove the head lamp holding 2 nos. side screws.
- Detach the bottom lug from the head lamp housing body.
- Remove the rubber grommet (upper for High beam/another for Low beam) from the reflector assembly.
- Disconnect High beam wire connector (Blue and Black wires)
- Gently press the bulb holding U clip from the both the sides downward and release it from reflector slot as shown.



---

## MINOR MAINTENANCE TIPS

---

- Pull out the fused bulb.



---

### NOTE

Never touch the bulb with your fingers. Finger prints will etch the glass and decrease bulb life.

Always hold the bulb with paper or clean dry cloth during handling.

Don't disturb the vent cap provided in the inner body mould.



---

### TAIL LAMP BULB

This model is equipped with LED tail lamp. If tail lamp is not working, you may replace sealed tail light unit.

Contact Royal Enfield Authorised Service center / ASC to replace it.



---

### TRAFFICATOR BULB REPLACEMENT

---

- Remove the screw from the trafficator housing back side.
- Remove outer lens.
- Remove the fused bulb by pushing and turning in anticlockwise direction.
- Position the new bulb inside the holder, ensuring that the pins in the bulb, match with slots in the holder
- Push the bulb and turn clockwise direction to lock the bulb in the holder.
- Refit the trafficator cover with reflector and tighten the screw.



---

### NOTE

Do not over tighten the screw, otherwise the lens may break.


---

## MINOR MAINTENANCE TIPS

---

### FUSE & CARRIER

---

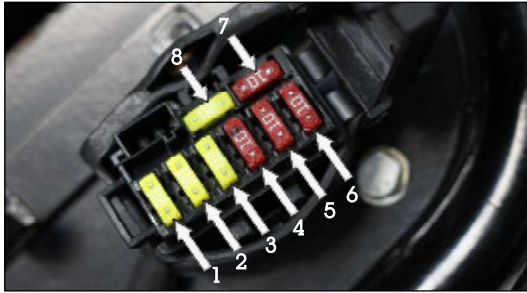

**⚠ WARNING**

Electronic Control Unit (ECU) may fail due to loose electrical connections, loose battery terminals etc. Hence, it is very important to keep all the Electrical connections intact.

### MINI BLADE FUSE USAGE LIST

Fuse No.	Colour	Remarks
1	Blue	RR unit-battery charging circuit (15A)
2	Blue	Main wiring (15A)
3	Blue	EFI System (15A)
4	Red	General illumination / Tail / Trafficator Lamps (10A)
5	Red	Head Lamp Fuse (10A)
6	Red	Instrument Cluster / Horn (10A)
7	Red	Spare Fuse (10A)
8	Blue	Spare Fuse (15A)

**⚠ WARNING**

Please get the electrical system of your Motorcycle checked thoroughly and get the faults corrected immediately after experiencing any fuse failure. Not doing this can result in to repeated fuse failures.

Usage of fuses other than specified rating will damage the complete electrical system.

---

## LONG TRIP PRECAUTIONS

---

---

### Checks prior to the commencement of long journey

---

- Service the motorcycle at a Royal Enfield Dealer / Authorised Service Center.
- Ensure sufficient quantity of petrol in the fuel tank for the journey planned.
- Check and correct tyre pressure if necessary.

---

### Checks after every 1500 kms of run

---

- Any loose fasteners.
- Condition of the tyres.
- Electrolyte level in the battery..
- Correct oil level in engine.
- Working of all lights and horn.
- Proper drive chain tension.

---

### Items to be carried

---

- Tool kit
- First aid kit.
- Bulbs for Headlight, Trafficator light and mini Blade Fuses (10 & 15 Amps).
- Accelerator and Clutch cable.
- Rear chain master link lock assembly.
- Insulation tape.
- Spark plug, Spark plug cap, Fuel hose.
- Spare tubes

---

## WASHING PROCEDURE

---

### PRECAUTIONS

---

- Wash motorcycle when the engine is cold.
- Cover the silencer, tail pipe, horn and control switches with suitable plastic bags and tie it firmly to prevent water entry.
- Remove ignition key and seal key hole using adhesive tape.
- Do not remove right side cover (panel) while washing to avoid water entry into air filter box Assy.
- Brush engine area with a solvent to remove dirt or grease.
- Use low pressure jet of water to clean.
- Never spray water with great force on head lamp, Meter/cluster unit, flasher lights, front and rear wheel hubs, electrical connections and wires, control cables, EFI components, spark plug, battery air filter cover etc.
- Do not apply any corrosive solvent on painted surfaces or rubber parts.

- Use luke warm water and mild detergent on the painted components to remove dirt, etc.
- Rinse motorcycle thoroughly with plain water to remove the detergent.
- If possible, use compressed air and blow off water particles from the obscure areas of the motorcycle, electrical connections etc.

### AFTER WASHING

---

- Ensure, the motorcycle is thoroughly dry by wiping with a clean soft absorbent cloth or chamois leather.
- Remove all plastic bags and adhesive tapes.
- Lubricate control cables, pivots for footrest, side stand, center stand, brake and gear shifter linkages, rear chain etc. with lube oil.
- Polish the painted (**except Stone Black Colour / Matt paint finish**) and plated surfaces using polishing wax.
- Start engine and allow to run at idling speed for a few minutes to warm up engine.
- Drive the motorcycle slowly, applying both brakes intermittently to dry up the water in the brake pads.

---

## STORAGE PRECAUTIONS

---

Incase your Motorcycle is not going to be used for a month or more, the following precautions should be taken.

- Get the motorcycle service through a Royal Enfield Authorised Dealer / Service Center.
- Drain fuel tank and fuel line.
- Keep the fuel tap in closed position and spray engine oil inside the fuel tank to prevent rusting.
- Remove spark plug. Pour in about 25ml of clean engine oil through spark plug hole. Close the hole and crank engine several times and refit spark plug.
- Clean rear chain thoroughly and apply a thin film of lub oil.
- Remove battery from the motorcycle. Clean the terminals free of corrosion and apply petroleum jelly to terminals.
- Maintain electrolyte level between "max" or "min" mark, by adding distilled water and wipe the battery dry.
- Store the battery in a cool, dry and well ventilated place.
- Cover the silencer with plastic bags to prevent moisture entry. Set the motorcycle on its center stand.
- Apply anti rust solutions on all plated parts. Take care not to apply this solution on rubber or painted parts.
- Store motorcycle in a clean covered area free - of moisture and dust.
- For re use after storage, it is preferable to get the motorcycle prepared through a Royal Enfield Authorised Dealer / Service Center to ensure the motorcycle is restored to its peak operating conditions.

## TROUBLE SHOOTING

We have listed below a few basic checks in case your motorcycle is not functioning. If in case the problem is not rectified after these checks, it is necessary to get the motorcycle checked by a Royal Enfield Authorised Dealer / Service Center to rectify the problem and to ensure trouble

Symptom	Observations	Check for / Remedy
<b>Engine Does not start</b>	1. Ignition/Engine stop switch is in OFF position	Switch ON Ignition / Engine stop switch
	2. Very low / No fuel in the fuel tank.	Check Fuel level / fuel meter and fill fuel
	3. Lights / horn very dim	Weak/Discharged battery. Replace Battery
	4. Electricals not working	1. Battery completely dead. Replace battery 2. Fuse Blown. Replace appropriate fuse. Note: If fuse blows again, contact Authorised Service Center.
	5. Engine Cranking but not starting	Spark plug Cap/wire disconnected. Reconnect.
	6. MIL glowing continuously	Contact Authorised Service Center
<b>Engine Starts BUT shuts off immediatley</b>	Engine shuts off as soon as throttle is closed.	Idling RPM set too low / setting disturbed. Contact Authorised Service Center for resetting the Idling RPM.
<b>Engine Misfires &amp; Runs Erratically / Stops</b>	Motorcycle driven in Low gear / High RPM / Crowded places for long time.	Excessive Engine temperature. Switch OFF Engine and allow to cool down.
<b>Poor Pickup</b>	Engine RPM raises improportinately to motorcycle speed	Clutch is Slipping. Check for sticky clutch/ clutch not having any free play.
	Rear Chain excessively loose causing chain to slip on Sprocket.	Adjust Rear chain to correct tension.

---

## WARRANTY TERMS & CONDITIONS

---

Royal Enfield Motorcycles are manufactured by following best Quality practices in respect of the material and workmanship.

Royal Enfield (RE) warrants its motorcycle to be free from manufacturing and material defect under normal use subject to following conditions.

1. RE will replace or repair defective part(s) at their Dealerships and Authorised Service Center, free of charge within a period of 24 months or 20,000 kms from the date of sale, whichever is earlier.
2. The warranty is applicable to the first registered owner only.
3. The warranty shall be applicable only if all the 4 free services & 3 paid services are availed in the respective period/kilometer ranges as per the schedule in the owner's manual from RE Authorised Dealer / Service Center.
4. During the warranty period, RE's obligations shall be limited to repairing/replacing part(s) of the motorcycle for free, only if the part(s), on examination is deemed to have a manufacturing defect. Defective part(s) which have been replaced will become the sole property of RE.
5. Cost of oil, oil filter and fuel are chargeable to the customer.
6. Claims on proprietary items like tyres, tubes, spark plug, battery etc. should be taken up with the respective manufacturer or their authorised agents in the area directly by the customer. RE shall not be liable in any manner to replace them through their dealers. RE will, however, provide assistance in preferring such claims on the respective manufacturer.
7. Warranty shall not apply to:
  - (a) Normal ageing, deterioration or rusting of plated parts, paints coat, rubber parts, soft items, glass items, plastic parts etc.



---

## WARRANTY TERMS & CONDITIONS

---

- (b) Components like fuel filter, oil filter, Air filter paper element, control cables, brake shoes / brake pads, clutch plates, drive chain & sprocket kit, Steering ball races, Electrical equipment, wiring harness etc., which are subjected to normal wear and tear.
  - (c) Failures occurred due to use of non recommended grade lubricants, fuel or improper level.
  - (d) Damages due to use of non-genuine parts, lack of proper maintenance, incorrect riding habits.
  - (e) Parts damaged due to accidents, collision, abuse etc.
  - (f) Irregularities not recognised as affecting the quality or function of the motorcycle such as slight vibration, oil leakage, blue discoloration of exhaust bent pipe/silencer/soft or hard shockabsorber etc.
  - (g) Defects arising from fitment of unauthorised or additional electrical loads.
  - (h) Motorcycle serviced or repaired at unauthorised service centers.
  - (i) Motorcycle used for competitions / racing / Stage Rallying etc.
  - (j) Electrical component like bulbs, fuses etc. and electronic components failure due to repairs by arc welding.
  - (k) Normal maintenance operations like adjustment of brakes, cleaning fuel system, engine tune-up and other such adjustments.
  - (l) Oxidization of buffed/painted/powder coated items etc.
8. RE reserves the right to finally decide on all warranty claims.
9. RE reserves the right to make changes in design of the motorcycle without any obligation to install these changes on previously supplied motorcycles.

---

## EMISSION WARRANTY

---

In compliance with the provisions of Rule 115(2) of the Central Motor Vehicles Rules, 1989, Royal Enfield certifies that the following warranty is applicable to those components liable to affect the emission of the gaseous pollutants in its range of motorcycles, in normal use to which it may be subjected to.

This emission warranty comes into force from 01st July 2001 and is valid for a period of 30,000 Kms. or 36 months, whichever occurs earlier, from the date of sale to the first customer and is in addition to and parallel to the warranty policy, conditions and obligations laid down in the Owner's Manual.

Royal Enfield further warrants that if on examination by its Authorised Dealer / Service Center, the motorcycle fails to meet the specified emission standards, then the Authorised Dealer / Service Center shall take necessary corrective measures and shall at its sole discretion, repair or replace free of charge such components of the emission control system to meet the required emission standards.

The method/s of examination to determine the warranty conditions of the emission warranty related components will be at the sole discretion of Royal Enfield and / or our Authorised Dealer / Service Center and results of such examination will be final and binding. If on examination the warranty conditions of the part/s is/are not established, Royal Enfield will have the right to charge all, or part of the cost of such examination to the customer in addition to the cost of the components.

In case of acceptance of the component/s under Emission warranty, Royal Enfield will replace free of charge, the component/s as required. However, the consumables like fuel, lubricants, solvents, etc shall be chargeable to the customer as per actuals.

In case any of the components covered under emission warranty or the associated parts, are not independently replaceable, Royal Enfield will have the sole discretion to replace either the entire assembly or parts of the assembly, through suitable repairs.

Royal Enfield reserves the right to carry out necessary consequential repairs to the motorcycle or replace any part, in addition to the repair or replacement of the components covered under emission warranty, to establish compliance to in-use emission standards. Such repairs / replacements will be chargeable to the customer.

All parts removed for replacement under warranty will become the property of Royal Enfield.

Royal Enfield will not be responsible for the cost of transportation of the motorcycle to the nearest Authorised Dealer / Service Center OR for any loss due to non availability of the motorcycle during the period of examination and repairs by Royal Enfield and / or their Authorised Dealer / Service Center.

---

## EMISSION WARRANTY

---

Royal Enfield will not be responsible for any penalties that may be charged by statutory authorities on account of failure to comply with the in-use emission standards.

That cost/s incurred to check emission of the motorcycle will have to be borne by the customer.

Emission warranty will be applicable irrespective of the change of ownership of the motorcycle provided all the conditions as laid down in this document are met from the date of original sale of the motorcycle.

---

### THE WARRANTY SHALL APPLY IF THE CUSTOMER

---

- Observes all the important instructions and any other precautions listed in the owner's manual.
- Under all circumstances uses lubricants and fuel as recommended by Royal Enfield.
- Regularly obtains and carries out maintenance in accordance with Royal Enfield guidelines and enters the details in the Log book.
- Immediately approaches the nearest Authorised Dealer / Service Center upon discovery of failure to comply with the IN-USE emission standard inspite of having maintained and used the motorcycle in accordance with the instructions in the owner's manual and having carried out such repairs and adjustments as may be required with a view to establish such compliance.
- Produces the 'Pollution Under Control' certificate valid for the period immediately preceding the test during which the failure is discovered, the test having been carried out either for obtaining a new certificate or pursuant upon being directed by an officer as referred to in sub rule (2) of rule 116 of the Central Motor Motorcycles Rules (CMVR).
- Produces the owner's manual and Log book for verification details.
- Produces receipts covering maintenance of the motorcycle as specified in the owner's manual from the date of original purchase of the motorcycle.
- Produces valid certificate of Insurance and R T O Registration Certificate (R.C. Book).

---

### THE EMISSION WARRANTY SHALL NOT APPLY IF

---

- A valid "Pollution under control" certificate is not produced.
- The motorcycle is not serviced by Authorised Dealer/ Service Center as per the service schedule described in the maintenance chart.
- The motorcycle has been subjected to abnormal use, abuse, neglect and improper maintenance or has met with an accident.

---

## EMISSION WARRANTY

---

- Replacement parts not specified and approved by Royal Enfield have been used.
- The motorcycle, or parts thereof, has been altered, tampered with or modified or replaced in an unauthorised manner.
- The odometer is not functioning or the odometer and / or its reading has been changed / tampered with, so that the actual distance covered cannot be readily determined.
- The motorcycle has been used for competitions, races, and rallies or for the purpose of establishing records.
- On examination by Royal Enfield or its Authorised Dealer / Service Center, if the motorcycle shows that any of the conditions stipulated in the Owner's manual with regard to use and maintenance have been violated.
- The motorcycle has been run on adulterated / leaded fuel or lubricant other than those specified by Royal Enfield in the Owner's manual or any other document given to the customer at the time of sale of the motorcycle.
- The emission related components are tampered with.
- All service and parts related bills and vouchers incurred during the tenure of the emission warranty is not produced.
- All maintenance activities carried out on the motorcycle during the tenure of the emission warranty is not entered in the log book.

---

### TIPS TO BE ON THE RIGHT SIDE OF LAW

---

- Always get your motorcycle checked to meet the emission regulations through an authorised emission checking center.
- Always carry a valid 'Pollution Under Control' certificate with you at all times during the validity of the emission warranty (30,000 Kms / 3 years from the date of first sale)

---

### TIPS TO REDUCE POLLUTION

---

- Ensure that the periodical maintenance is carried out as stipulated in the owner's manual through a Royal Enfield Authorised Dealer / Service Center.
- Use only Unleaded petrol (> 87 octane) from reputed fuel pumps.
- Ensure the fuel used is not adulterated.
- Use correct spark plug as recommended in the owner's manual.
- Use lubricants as per recommendations given on grade / brand in the owner's manual.

---

## SERVICE COUPONS

---

It is our endeavour to provide excellent service to your Royal Enfield Motorcycle at all times. Towards this we provide initial 4 free services & 3 paid services at specific intervals.

Please avail these services at the specified time, in any of the Royal Enfield Authorised Dealer / Service Center nearest to you and as a token of satisfactory service, kindly return the service coupons duly filled in and signed, to the service outlet.

Availing all the services in the specified time is a prerequisite to warranty consideration.

The cost of fuel, oil, oil filter element, grease and consumables used during services is chargeable to the customer.

Please ensure the details of the periodic service is filled in the manual for future reference.

## 1ST FREE SERVICE

### 1st Free Service

500 Kms  
or  
45±8 days  
whichever is  
earlier from the  
date of sale

Enter the Details in  
Free Service  
Record

(Cost of oil,  
oil filter element  
and other  
consumables  
used are  
chargeable to  
the customer)

### 500 KMS or 45±8 DAYS WHICHEVER IS EARLIER FROM DATE OF SALE

Customer Name :

Dealer Code :

Address :

Frame No:

Regn. No:

Engine No:

Sale Date:

Motorcycle Installation Form No.

Serviced Date:

ODO Reading :

Serviced by (Dealer's/ASC Name &  
Address)

Sold by (Dealer's Name & Address)

Received the above motorcycle after the service having been done to my entire satisfaction.

Customer's Signature : .....

Date :

Contact Phone / Mobile No.:

## 1ST FREE SERVICE ACTIVITIES

1	Water wash the motorcycle and dry it with a clean cloth	
2	Battery Electrolyte	Check level & top-up, if necessary
3	Battery terminals	Clean and apply petroleum jelly
4	Rear Drive chain free play	Check, clean, lubricate & adjust
5	Rear brake pedal pivot & free play	Lubricate, Adjust if necessary
6	Front & Rear brake	Check & top up brake fluid level
7	Wheel rim front & rear	Check spokes tightness / run out
8	Front fork	Inspect for oil leakage
9	Air filter element	Clean
10	Spark plugs (2 Nos)	Check, clean & adjust gap
11	H.T. Leads	Inspect for cracks
12	Fuel pump (under tank) mounting	Check mounting screws/Leak
13	Fuel hose	Inspect for cracks
14	Fuel filter element in fuel pump	Clean
15	Rubber hose, Air filter to throttle body	Inspect for cracks
16	Rubber hose, Inlet manifold / Adaptor	Inspect for cracks
17	PAV pipes & hose clip	Inspect
18	Accelerator & Throttle pulley cables free play	Check & Adjust play
19	Clutch cable/ Lever free play	Adjust play
20	Engine oil sump strainer, magnetic drain plug	Clean
21	Engine oil	Replace
22	Engine oil filter paper element	Replace
23	Hand levers & kick starter pivot	Lubricate
24	Pivot-Side stand, Center stand, Pillion Foot Rest	Lubricate
25	Steering free play	Inspect
26	Tyres front & rear	Check wear pattern

### CUSTOMER COPY

Job Card No:

--	--	--	--	--	--	--	--

Date :

--	--	--	--	--	--	--	--

Odo Reading :

--	--	--	--	--	--	--	--

Name of Dealer/  
ASC with Code:

.....

.....

ASC / Dealer's  
Stamp & Signature

## 2ND FREE SERVICE

### 2nd Free Service

3000 Kms  
or  
90+15 days  
whichever is  
earlier from the  
date of sale

Enter the Details in  
Free Service  
Record

(Cost of oil,  
oil filter element  
and other  
consumables  
used are  
chargeable to  
the customer)

### 3000 KMS or 90±15 DAYS WHICHEVER IS EARLIER FROM DATE OF SALE

Customer Name :

Dealer Code :

Address :

Frame No:

Regn. No:

Engine No:

Sale Date:

Motorcycle Installation Form No.

Serviced Date:

ODO Reading :

Serviced by (Dealer's/ASC Name &  
Address)

Sold by (Dealer's Name & Address)

Received the above motorcycle after the service having been done to my entire satisfaction.

Customer's Signature : .....

Date :

Contact Phone / Mobile No.:



## 2ND FREE SERVICE ACTIVITIES

1	Water wash the motorcycle and dry it with a clean cloth	
2	Battery Electrolyte	Check level & top-up, if necessary
3	Battery terminals	Clean and apply petroleum jelly
4	Rear Drive chain free play	Check, clean, lubricate & adjust
5	Rear brake pedal pivot & free play	Lubricate, Adjust if necessary
6	Front & Rear brake	Check & top up brake fluid level
7	Tyres front & rear	Check wear pattern
8	Front fork	Inspect for oil leakage
9	Air filter element	Clean
10	Spark plugs (2 Nos)	Check, clean & adjust gap
11	H.T. Leads	Inspect for cracks
12	Fuel pump (under tank) mounting	Check mounting screws/Leak
13	Fuel hose	Inspect for cracks
14	Rubber hose, Air filter to throttle body	Inspect for cracks
15	Rubber hose, Inlet manifold / Adaptor	Inspect for cracks
16	PAV pipes & hose clip	Inspect
17	Accelerator & Throttle pulley cables free play	Check & adjust play
18	Clutch cable/ Lever free play	Adjust play
19	Steering free play	Check & Adjust
20	Engine oil	Check level & top-up
21	Hand levers & kick starter pivot	Lubricate
22	Tyres front & rear	Check wear pattern
23	Pivot-Side stand, Center stand, Pillion Foot Rest	Lubricate
24	Front & Rear brake hose & Banjo Bolt	Inspect

### CUSTOMER COPY

Job Card No:

--	--	--	--	--	--	--	--

Date :

--	--	--	--	--	--	--	--

Odo Reading :

--	--	--	--	--	--	--	--

Name of Dealer/  
ASC with Code:

.....

.....

ASC / Dealer's  
Stamp & Signature

## 3RD FREE SERVICE

### 3rd Free Service

6000 Kms  
or  
180±15 days  
whichever is  
earlier from the  
date of sale

Enter the Details in  
Free Service  
Record

(Cost of oil,  
oil filter element  
and other  
consumables  
used are  
chargeable to  
the customer)

### 6000 KMS or 180±15 DAYS WHICHEVER IS EARLIER FROM DATE OF SALE

Customer Name :

Dealer Code :

Address :

Frame No:

Regn. No:

Engine No:

Sale Date:

Motorcycle Installation Form No.

Serviced Date:

ODO Reading :

Serviced by (Dealer's/ASC Name &  
Address)

Sold by (Dealer's Name & Address)

Received the above motorcycle after the service having been done to my entire satisfaction.

Customer's Signature : .....

Date :

Contact Phone / Mobile No.:

## 3RD FREE SERVICE ACTIVITIES

1	Water wash the motorcycle and dry it with a clean cloth	
2	Battery Electrolyte	Check level & top-up, if necessary
3	Battery terminals	Clean and apply petroleum jelly
4	Rear Drive chain free play	Check, clean, lubricate & adjust
5	Rear brake pedal pivot & free play	Lubricate, Adjust if necessary
6	Front & Rear brake	Check & top up brake fluid level
7	Wheel rim front & rear	Check spokes tightness / run out
8	Tyres front & rear	Check wear pattern
9	Air filter element	Clean
10	Spark plugs (2 Nos)	Check, clean & adjust gap
11	Throttle body / Injector - Cleaning Spary *	Clean by carbo spray*
12	H.T. Leads	Inspect for cracks
13	Fuel pump (under tank) mounting	Check mounting screws/Leak
14	Fuel hose	Inspect for cracks
15	Rubber hose, Air filter to throttle body	Inspect for cracks
16	Rubber hose, Inlet manifold / Adaptor	Inspect for cracks
17	Accelerator & Throttle pulley cables free play	Check & adjust play
18	Clutch cable/ Lever free play	Adjust play
19	Engine oil sump strainer, magnetic drain plug	Clean
20	Engine oil & oil filter paper element	Replace
21	Hand levers & kick starter pivot	Lubricate
22	PAV pipes & hose clip	Inspect
23	Steering System	Check, Lub. steering balls & adj. play
24	Swing arm spacer & pivot bush	Lubricate
25	Front fork	Inspect for oil leakage
26	Pivot-Side stand, Center stand, Pillion Foot Rest	Lubricate

\*Recommended - Carb Cleaner / Carblick or Fuel line Cleaner Spary (Wurth or ITW Chemin)

### CUSTOMER COPY

Job Card No:

--	--	--	--	--	--	--	--

Date :

--	--	--	--	--	--	--	--

Odo Reading :

--	--	--	--	--	--	--	--

Name of Dealer/  
ASC with Code:

.....

.....

ASC / Dealer's  
Stamp & Signature

## 4TH FREE SERVICE

### 4th Free Service

9000 Kms  
or  
270±15 days  
whichever is  
earlier from the  
date of sale

Enter the Details in  
Free Service  
Record

(Cost of oil,  
oil filter element  
and other  
consumables  
used are  
chargeable to  
the customer)

### 9000 KMS or 270±15 DAYS WHICHEVER IS EARLIER FROM DATE OF SALE

Customer Name :

Dealer Code :

Address :

Frame No:

Regn. No:

Engine No:

Sale Date:

Motorcycle Installation Form No.

Serviced Date:

ODO Reading :

Serviced by (Dealer's/ASC Name &  
Address)

Sold by (Dealer's Name & Address)

Received the above motorcycle after the service having been done to my entire satisfaction.

Customer's Signature : .....

Date :

Contact Phone / Mobile No.:

## 4TH FREE SERVICE ACTIVITIES

1	Water wash the motorcycle and dry it with a clean cloth	
2	Battery Electrolyte	Check level & top-up, if necessary
3	Battery terminals	Clean and apply petroleum jelly
4	Rear Drive chain free play	Check, clean, lubricate & adjust
5	Rear brake pedal pivot & free play	Lubricate, Adjust if necessary
6	Front & Rear brake	Check & top up brake fluid level
7	Front fork	Replace fork oil
8	Tyres front & rear	Check wear pattern
9	Air filter element	Clean
10	Spark plugs (2 Nos)	Check, clean & adjust gap
11	H.T. Leads	Inspect for cracks
12	Fuel pump (under tank) mounting	Check mounting screws/Leak
13	Fuel hose	Inspect for cracks
14	Rubber hose, Air filter to throttle body	Inspect for cracks
15	Rubber hose, Inlet manifold / Adaptor	Inspect for cracks
16	PAV pipes & hose clip	Inspect
17	Accelerator & Throttle pulley cables free play	Check & adjust play
18	Clutch cable/ Lever free play	Adjust play
19	Engine oil	Check & top-up
20	Hand levers & kick starter pivot	Lubricate
21	Steering system	Check & adjust play
23	Pivot-Side stand, Center stand, Pillion Foot Rest	Lubricate
24	Front & Rear brake hose & Banjo Bolt	Inspect

### CUSTOMER COPY

Job Card No:

--	--	--	--	--	--	--	--

Date :

--	--	--	--	--	--	--	--

Odo Reading :

--	--	--	--	--	--	--	--

Name of Dealer/  
ASC with Code:

.....

.....

ASC / Dealer's  
Stamp & Signature

**5TH PAID SERVICE**

**5th  
Paid  
Service**

12,000 Kms  
or  
360±15 days  
whichever is  
earlier from the  
date of sale

Enter the Details in  
Paid Service  
Record

(Cost of oil,  
oil filter element  
and other  
consumables  
used are  
chargeable to  
the customer)

**12,000 KMS or 360±15 DAYS WHICHEVER IS EARLIER FROM DATE OF SALE**

Customer Name :

Dealer Code :

Address :

Frame No:

Regn. No:

Engine No:

Sale Date:

Motorcycle Installation Form No.

Serviced Date:

ODO Reading :

Sold by (Dealer's Name & Address)

Serviced by (Dealer's/ASC Name & Address)

Received the above motorcycle after the service having been done to my entire satisfaction.

Customer's Signature : .....

Date :

Contact Phone / Mobile No.:

## 5TH PAID SERVICE ACTIVITIES

1	Water wash the motorcycle and dry it with a clean cloth	
2	Battery Electrolyte	Check level & top-up, if necessary
3	Battery terminals	Clean and apply petroleum jelly
4	Rear Drive chain free play	Check, clean, lubricate & adjust
5	Rear brake pedal pivot & free play	Lubricate, Adjust if necessary
6	Front & Rear brake	Check & top up brake fluid level
7	Wheel rim front & rear	Check spokes tightness / run out
8	Tyres front & rear	Check wear pattern
9	Front fork	Inspect for oil leakage
10	Air filter element	Check & Replace paper element
11	Spark plugs (2 Nos)	Check, clean & adjust gap
12	Throttle body / Injector - Cleaning Spary*	Clean by carbo spray*
13	H.T. Leads	Inspect for cracks
14	Fuel pump (under tank) mounting	Check mounting screws/Leak
15	Fuel hose	Check & Replace
16	Accelerator & Throttle pulley cables free play	Check & adjust play
17	Rubber hose, Air filter to throttle body	Check & Replace
18	Rubber hose, Inlet manifold / Adaptor	Check & Replace
19	Clutch cable/ Lever free play	Adjust play
20	PAV pipes & hose clip	Inspect
21	Engine oil sump strainer, magnetic drain plug	Clean
22	Engine oil & oil filter paper element	Replace
23	Hand levers & kick starter pivot	Lubricate
24	Steering System	Check, Lub. steering balls & adj. play
25	Swing arm spacer & pivot bush	Lubricate
26	Pivot-Side stand, Center stand, Pillion Foot Rest	Lubricate
27	Earth wire eyelet Contact (Below fuel pump relay / ECU mounting)	Inspect
28	Rear wheel cush drive rubbers	Inspect & replace

\*Recommended - Carb Cleaner / Carblick or Fuel line Cleaner Spary (Wurth or ITW Chemin)

### CUSTOMER COPY

Job Card No:

--	--	--	--	--	--	--	--

Date :

--	--	--	--	--	--	--	--

Odo Reading :

--	--	--	--	--	--	--	--

Name of Dealer/  
ASC with Code:

.....

.....

ASC / Dealer's  
Stamp & Signature

**6TH PAID SERVICE**

**6th  
Paid  
Service**

15,000 Kms  
or  
450±15 days  
whichever is  
earlier from the  
date of sale

Enter the Details in  
Paid Service  
Record

(Cost of oil,  
oil filter element  
and other  
consumables  
used are  
chargeable to  
the customer)

**15,000 KMS or 450±15 DAYS WHICHEVER IS EARLIER FROM DATE OF SALE**

Customer Name :

Dealer Code :

Address :

Frame No:

Regn. No:

Engine No:

Sale Date:

Motorcycle Installation Form No.

Serviced Date:

ODO Reading :

Sold by (Dealer's Name & Address)

Serviced by (Dealer's/ASC Name & Address)

Received the above motorcycle after the service having been done to my entire satisfaction.

Customer's Signature : .....

Date :

Contact Phone / Mobile No.:



## 6TH PAID SERVICE ACTIVITIES

1	Water wash the motorcycle and dry it with a clean cloth	
2	Battery Electrolyte	Check level & top-up, if necessary
3	Battery terminals	Clean and apply petroleum jelly
4	Rear Drive chain free play	Check, clean, lubricate & adjust
5	Rear brake pedal pivot & free play	Lubricate, Adjust if necessary
6	Front & Rear brake	Check & Replace brake fluid
7	Front fork	Inspect for oil leakage
8	Tyres front & rear	Check wear pattern
9	Air filter element	Clean
10	Spark plugs (2 Nos)	Check & Replace
11	H.T. Leads	Inspect for cracks
12	Fuel pump (under tank) mounting	Check mounting screws/Leak
13	Fuel hose	Inspect for cracks
14	Fuel filter element in fuel pump	Replace
15	Rubber hose, Air filter to throttle body	Inspect for cracks
16	Rubber hose, Inlet manifold / Adaptor	Inspect for cracks
17	PAV pipes & hose clip	Inspect
18	Accelerator & Throttle pulley cables free play	Check & adjust play
19	Clutch cable/ Lever free play	Adjust play
20	Engine oil	Check & top-up
21	Hand levers & kick starter pivot	Lubricate
22	Steering system	Check & adjust play
23	Pivot-Side stand, Center stand, Pillion Foot Rest	Lubricate
24	Front & Rear brake hose & Banjo Bolt	Inspect
25	Inlet/ Exhaust valve seating	Check by compression / Vaccum test

### CUSTOMER COPY

Job Card No:

--	--	--	--	--	--	--	--

Date :

--	--	--	--	--	--	--	--

Odo Reading :

--	--	--	--	--	--	--	--

Name of Dealer/  
ASC with Code:

.....

.....

ASC / Dealer's  
Stamp & Signature

## 7TH PAID SERVICE

### 7th Paid Service

18,000 Kms  
or  
540±15 days  
whichever is  
earlier from the  
date of sale

Enter the Details in  
Paid Service  
Record

(Cost of oil,  
oil filter element  
and other  
consumables  
used are  
chargeable to  
the customer)

### 18,000 KMS or 540±15 DAYS WHICHEVER IS EARLIER FROM DATE OF SALE

Customer Name :

Dealer Code :

Address :

Frame No:

Regn. No:

Engine No:

Sale Date:

Motorcycle Installation Form No.

Serviced Date:

ODO Reading :

Sold by (Dealer's Name & Address)

Serviced by (Dealer's/ASC Name &  
Address)

Received the above motorcycle after the service having been done to my entire satisfaction.

Customer's Signature : .....

Date :

Contact Phone / Mobile No.:

## 7TH PAID SERVICE ACTIVITIES

1	Water wash the motorcycle and dry it with a clean cloth	
2	Battery Electrolyte	Check level & top-up, if necessary
3	Battery terminals	Clean and apply petroleum jelly
4	Rear Drive chain free play	Check, clean, lubricate & adjust
5	Rear brake pedal pivot & free play	Lubricate, Adjust if necessary
6	Front & Rear brake	Check & top up brake fluid level
7	Wheel rim front & rear	Check spokes tightness / run out
8	Tyres front & rear	Check wear pattern
9	Front fork	Replace fork oil
10	Air filter element	Clean
11	Spark plugs (2 Nos)	Check, clean & adjust gap
12	H.T. Leads	Inspect for cracks
13	Throttle body / Injector - Cleaning Spray*	Clean by carbo spray*
14	Fuel pump (under tank) mounting	Check mounting screws/Leak
15	Fuel hose	Inspect for cracks
16	Accelerator & Throttle pulley cables free play	Check & adjust play
17	Rubber hose, Air filter to throttle body	Inspect for cracks
18	Rubber hose, Inlet manifold / Adaptor	Inspect for cracks
19	Clutch cable/ Lever free play	Adjust play
20	PAV pipes & hose clip	Inspect
21	Engine oil sump strainer, magnetic drain plug	Clean
22	Engine oil & oil filter paper element	Replace
23	Hand levers & kick starter pivot	Lubricate
24	Steering System	Check, Lub. steering balls & adj. play
25	Swing arm spacer & pivot bush	Lubricate
26	Pivot-Side stand, Center stand, Pillion Foot Rest	Lubricate

\*Recommended - Carb Cleaner / Carblick or Fuel line Cleaner Spray (Wurth or ITW Chemin)

### CUSTOMER COPY

Job Card No:

--	--	--	--	--	--	--	--

Date :

--	--	--	--	--	--	--	--

Odo Reading :

--	--	--	--	--	--	--	--

Name of Dealer/  
ASC with Code:

.....

.....

ASC / Dealer's  
Stamp & Signature

---

PAID SERVICE / MAINTENANCE RECORD

---

S.No.	Date	Type of Service	KMS	Brief details of service	Royal Enfield Authorised Dealer / Service Center
1.					
2.					
3.					
4.					
5.					
6.					
7.					
8.					

---

**PAID SERVICE / MAINTENANCE RECORD**

---

S.No.	Date	Type of Service	KMS	Brief details of service	Royal Enfield Authorised Dealer / Service Center
9.					
10.					
11.					
12.					
13.					
14.					
15.					
16.					

## REGIONAL & AREA OFFICES

<b>R1 : Chandigarh, H.P, J&amp;K, Punjab</b> Royal Enfield SCO, No. 5, 1st Floor, Sector-11 , PANCHKULA (Haryana) Pin Code - 134 112. Tel: 0172-5011255, 5011251	<b>R3 : Uttarkhand &amp; Uttar Pradesh</b> Royal Enfield UGF 15-19, Landmark Arcade, 2 Badshah Nagar Crossing, Faizabad Road, LUCKNOW – 226 006. Tel: 0522-6566675 Fax: 4005973	<b>R6 : Orissa &amp; West Bengal</b> Royal Enfield Shrachi Tower, 3rd Floor, 686 Anandapur, KOLKATA - 700 707. Tel: 033-40060206 / 0209	<b>R8 : Goa &amp; Maharashtra</b> Royal Enfield Plot No.16, Sector -1, Sion Panvel Highway, Nerul, NAVI MUMBAI - 400 706. Tel: 022-27700395, 27700501	<b>R10 : Karnataka</b> Royal Enfield Door No. 2067/1, 2068/2, East End “A” Main 9th Block, Jayanagar, BANGALORE - 560 069. Tel: 080-22440588, 41753277, 41536488
<b>R2 : Delhi, Haryana, NCR &amp; Rajasthan</b> Royal Enfield C/o EICHER ENGG.COMPONENTS Plot No. 7, HSIDC Industrial Area, Sector 18, Palam Gurgaon Road, GURGAON (Haryana) - 122 015. Tel: 0124-4278138, 4278139 Fax: 4382148	<b>R4 : Gujarat &amp; Madhya Pradesh</b> Royal Enfield 103, Safal Prelude, Opp. Parsavanath Esquire Cross Road, Corporate Road, Prahlad Nagar, Off. S.G. Highway, AHMEDABAD - 380 015. Tel: 098-25113168 Fax: 079-40024461	Royal Enfield A Unit of Eicher Motors Ltd. 407, 4th Floor, Nirmala Plaza, Forest Park, BHUBANESWAR - 751 009. Tel: 0674–6540206	Royal Enfield 203, 204 Sneha Ganga, Near Vega Centre, Shankar Seth Road, Swargate, PUNE - 411 037. Tel: 020-40028090 Fax: 24447174	<b>R11 : Tamilnadu &amp; Andaman</b> Royal Enfield Plot No. 350 to 354, 2nd Floor, 4th Link Street, Nehru Nagar Industrial Area, Kottivakkam, (OMR-IT Highway), CHENNAI - 600 096. Tel:044-42070661, 24540828
Royal Enfield G-5, 6, 7, Gitanjali Towers, Ajmer Road, JAIPUR - 302 006. Tel: 0141-4106747, 4034748 Fax: 0141-4106748	<b>R5 : Bihar, Chattisgarh &amp; Jharkhand</b> Royal Enfield 3rd Floor, Maple Plaza, Gate No. 2 , Ashok Nagar, RANCHI (Jharkhand) - 834 002. Mob: +91 7091497557	<b>R7 : Arunachal Pradesh, Assam Manipur, Meghalaya, Mizoram, Nagaland &amp; Tirupura</b> Royal Enfield Astha Plaza, 4th Floor (M4-2), G S Road, Opposite Deorah College, Ulubari, GUWAHATI - 781 00 . Mob: +91 8135846461	<b>R9 : A.P. &amp; Telangana</b> Royal Enfield (A Unit of Eicher Motors Ltd) No: 8-3-166/B to F, Erragadda Main Road, Beside Gokul Theatre, Erragadda, HYDERABAD - 500 018. Tel: 7093190003, 7416783025	<b>R12 : Kerala &amp; Lakshadweep</b> Royal Enfield 25/85A, Opp. to IOC Pump, Koonamthai, Edappally Post, KOCHI - 682 024. Tel: 0484-6494990, 6494991 Fax: 2543616

## AUTHORISED DEALERS

<b>ANDHRA PRADESH</b> <b>Amlapuram</b> Shri Jayalakshmi Automobiles +91 9618349555	<b>ANDHRA PRADESH</b> <b>Eluru</b> Classic Automotive +91 9652238585 08812-234582	<b>ANDHRA PRADESH</b> <b>Kurnool</b> Sandhya Automotives +91 9394253377 08518-253377	<b>ANDHRA PRADESH</b> <b>Ongole</b> Lekhana Automotives +91 8885002112 8885002113	<b>ANDHRA PRADESH</b> <b>Vijayawada- Kannur</b> Pravallika Motors +91 7842559555 0866-2586858
<b>Anantapur</b> Renati Automotives Pvt. Ltd. +91 9000841133 7036903879	<b>Guntur-Auto Nagar</b> Jubilant Avenues Pvt.Ltd +91 8143008506; 8507	<b>Nandyal</b> Dheeru Motors +91 9133065553 +91 9133065554	<b>Rajahmundry</b> Sriram Automobiles +91 9246665513 0883-2422117	<b>Vijayawada- M G Road</b> Mahalakshmi Motors +91 8886322559 +91 8886422559
<b>Bhimavaram</b> Varma Automotives +91 7095812666 +91 7095816888	<b>Guntur-Chandramauli Nagar</b> Jubilant Avenues Pvt.Ltd +91 8143008508	<b>Narasaraopet</b> Anu Auto Agencies +91 7893301444 086472-21787	<b>Srikakulam</b> Lakshmi Automobiles +91 9032929235 8121929235	<b>Vijayawada- Ring Road</b> Pravallika Motors +91 7842559555 0866-2586858
<b>Chirala</b> Lekhana Automotives +91 8885002114	<b>Kadappa</b> Anjana Bikes +91 9247041555 9010389998	<b>Nellore</b> Rishi Motors +91 8977713377 +91 8977714477	<b>Tenali</b> Shakthi Motors +91 8886744494	<b>Vishakhapatnam - Gajuwaka</b> Cidanta Motors 0891-6562008 0891-6502008
<b>Chittoor</b> Sri Sai Motors +91 9490094908 08572-245057	<b>Kakinada</b> Shri Jayalakshmi Automobiles +91 8332912719 0884-6443555	<b>Nellore-Inside City</b> Rishi Motors +91 8977713377, 8977714477 +91 9866162859	<b>Tirupathi</b> Sri Sai Motors +91 9295091444 8572245057	<b>Vishakhapatnam - Nad Junction</b> Saran Motors +91 8885947222 +91 8885847222

## AUTHORISED DEALERS

<b>ANDHRA PRADESH</b>	<b>ASSAM</b>	<b>ASSAM</b>	<b>BIHAR</b>	<b>BIHAR</b>
<b>Vishakhapatnam - Seethammadhara</b> Royal Enfield Company Stores +91 8897353382 0891-2768887; 2768886	<b>Guwahati- G S road</b> Shahila Expositions Pvt Ltd +91 9435549786 0361-2335025	<b>Tinsukia</b> SD Royal +91 9957714273	<b>Biharsharif</b> PNN Automobiles +91 9334038042	<b>Gopalganj</b> Riders cafe +91 9199547786
<b>ARUNACHAL PRADESH</b>	<b>Jorhat</b> Achharsingh Royal +91 9859736100 9207041076	<b>BIHAR</b>	<b>Champa</b> Neeraj Royal +91 7047511730 +91 8871704777	<b>Hajipur</b> Ambika Bhawani Automobiles +91 9835641123 06224-295280
<b>Naharlagun - Itanagar</b> Bucho Royal Enfield +91 9436219089 0360-2350103	<b>Nagaon</b> Bajrang Motors +91 9435160785	<b>Araah</b> Om Wheels +91 9471444405 06182-233338	<b>Chapra</b> Supriyam Automobiles +91 9534677444 06152-242999	<b>Katihar</b> Jaiguru Motors Pvt Ltd +91 9430909966 06452-290172
<b>ASSAM</b>	<b>North Lakhimpur</b> Rishi Riders +91 9854100000	<b>Aurangabad</b> Yodha Automobiles Pvt. Ltd +91 9934012273	<b>Darbhanga</b> SYV Motors +91 8227887777 06272-242777	<b>Madhubani</b> Shagun Auto Sales +91 8986396011 06276-228014
<b>Barpeta</b> G.S. Auto +91 8472987341	<b>Silchar</b> Bina Automobiles Pvt Ltd +91 9954008888 03842-225016	<b>Begusarai</b> Mayamanu Motors Pvt. Ltd +91 7260851555	<b>Gaya</b> Kusum Motors +91 8271020543 0631-2210105	<b>Motihari</b> Raj Motors +91 9472582848 06252-230373
<b>Dibrugarh</b> Rider's +91 8472913182 0373-2370018; 2370014	<b>Tezpur</b> G.M Associate +91 9707026331 03712-237777	<b>Bettiah</b> Mishra Automobiles +91 8877985073 06254-246273		
<b>Guwahati- Maligaon</b> Chirag Enfield +91 9435400437				



## AUTHORISED DEALERS

<b>BIHAR</b> <b>Muzaffarpur- Maripur</b> Gautam Motors +91 7631996130 0621-2220056	<b>BIHAR</b> <b>Purnea</b> Link Motors +91 7766917026	<b>BIHAR</b> <b>Sitamarhi</b> Nili Automobiles +91 9102999131	<b>CHATTISGARH</b> <b>Bilaspur</b> Blue Sapphire Motors +91 8982407770 07752-407770	<b>CHATTISGARH</b> <b>Raipur- Gaurav Path - Panchsheel Nagar</b> Aadityaraj Automobiles +91 7697208337 0771-4030550
<b>Muzaffarpur-Sitamahari Road</b> Kumar Automobiles +91 9771123233 7283000384	<b>Saharsa</b> 7 Hills Automobiles +91 8877080661 06478-227007	<b>CHANDIGARH</b> <b>Chandigarh-Sector 27 C</b> Manmohan Auto Stores +91 9216227366 0172-5071351	<b>Dhamtari</b> Shri Ram Automobiles +91 9179995522	<b>Raipur-Lodhi Para Chowk</b> Indian Motors +91 7714221500 0771-4221500; 4221400
<b>Patna-Boring Road</b> Ambey Motors +91 9102999131	<b>Samastipur</b> Aditya Motors +91 8406803303 5452264047	<b>Chandigarh-Sector 32 D</b> Garg Autos +91 9915596388 0172 2665246	<b>Jagdalpur</b> Kambo Motors +91 9993333939 +91 9407642827	<b>Raipur- Tatibandh 6th Gear</b> +91 8109309666 0771-4070666
<b>Patna-Saguna More</b> Siddhi Vinayak Automobiles +91 8092981877 0612-212948	<b>Sasaram</b> Vintage Auto Corp +91 8540948771 +91 9304503020	<b>CHATTISGARH</b> <b>Ambikapur</b> Dev Automobiles +91 9753117804 07774-222804	<b>Korba</b> Kailash Auto Agency +91 9826109907 07759-245482	<b>Rajnandgaon</b> Shubh Auto +91 9424102224 07744-401491
<b>Patna-Zero Mile</b> Sukhmani Motors Pvt. Ltd. +91 9709761441 0612-3297056	<b>Siwan</b> Sri R.L. Automobile Pvt. Ltd. +91 9576449444 06154-247686	<b>Bhilai</b> AAN Automotive +91 7886996000 0788-4040512	<b>Raigarh</b> Priyanka motors +91 7389910800 07762-233550	

## AUTHORISED DEALERS

<b>GOA</b>	<b>GUJARAT</b>	<b>GUJARAT</b>	<b>GUJARAT</b>	<b>GUJARAT</b>
<b>Goa - Margoa</b> Saini Motors +91 7767006138; 6139; 6140 0832-2740343; 2740345	<b>Ahmedabad-Navrangpura</b> Karnavati Bikes Pvt. Ltd. +91 9099031290 079-27490068	<b>Bhavnagar</b> Gujarat Auto Centre +91 8734936206 0278-2512648	<b>HimmatNagar</b> Rajvee Auto +91 8238411177	<b>Navsari</b> PSG Motors +91 9924755521 02637-265559
<b>Goa - Panaji</b> Auto Guides +91 9326102087 0832-2225865	<b>Ahmedabad- Nehru Nagar Ambawadi</b> Sarabhai Motors +91 7926303535 079-65243010; 26303535	<b>Bhuj</b> PM Autolink +91 9825900279; 9925635279, 02832-231279	<b>Jam Nagar</b> New Chandra Motor Cycle Agency +91 7226065999 0288-2552888; 2678024; 2550863	<b>Rajkot - Gondal Road</b> Aditya Moto Gujarat Pvt. Ltd. +91 9099092594, 9099092595 0281 2371070
<b>GUJARAT</b>	<b>Anand</b> Royal Ridentity Pvt Ltd. +91 9898484500 02692-644352	<b>Gandhidham</b> N.P. Auto Agencies +91 9426140290; 9723540290 02836-295927	<b>Junagadh</b> Shree Aashapura Enterprise +91 7046008488 0285 2660111	<b>Rajkot - Mota Mava Kalawad Road</b> Dev Motors +91 8401799993 0281-6458888; 9157877331
<b>Ahmedabad-Sarkhej Gandhinagar Road</b> Kaveri Motors +91 9824039464 079-65416116; 27663674; 27663048	<b>Bardoli</b> PSG Motors +91 9924755549	<b>Gandhinagar</b> Aanal Auto Agency +91 9099049555; 8980001123 02712-23262020	<b>Mehsana</b> Parklane Auto +91 9925014803 9925004538	<b>Surat-Adajan Hajira Main - Adajan</b> JSN Motors +91 8401600411 0261-2840023
<b>Ahmedabad-Mani nagar</b> Sarabhai Automotive +91 9825708033 079-25812530; 2531	<b>Bharuch</b> Vraj Auto +91 9824125050 02642-225757	<b>Godhra</b> Concord Auto +91 9879074373 02672-265522	<b>Morbi</b> Dev auto +91 9054265550; 65551; 65552 +91 9054265553; 65554	<b>Surat - Sarthana Varacha</b> Purav Automobiles +91 9979841546, 9979841547

## AUTHORISED DEALERS

GUJARAT	HARYANA	HARYANA	HARYANA	HARYANA
<b>Surendranagar</b> Old Soul Motorcycles +91 9909008000 02752-242777	<b>Ambala - Ambala Chandigarh Highway</b> Royal Motors +91 9315100442 0171-2545795; 2544795	<b>Jind</b> Gill Automobiles +91 9416476459	<b>Palwal</b> Kartike Motors +91 9813131455 01275-240454	<b>Sonipat</b> Heydaan Motors +91 9034444433 0130-2233004
<b>Vadodara- Harni road</b> Amba Motors +91 7820010060 0265-2463232	<b>Ambala cantt- Rai Market</b> Royal Motors +91 9315100442 0171-2630795; 2631495	<b>Kaithal</b> Raghav Automobiles +91 8199946000 +91 9254312500; 8199947001	<b>Panipat</b> Monga Automobiles +91 9354140005; 40006;40007 01274-251000	<b>Yamuna Nagar</b> Falcon Automobiles +91 9315431300 0173-2346433
<b>Vadodara - Old Padra Road</b> RSA Automotives +91 9574257999; 9574256999 2652355040	<b>Bhiwani</b> Sheoran Auto +91 8950291600 01664-252216	<b>Karnal</b> Monga Motors +91 9354140008 184-2261810; 2272729	<b>Rewari</b> Premium Automation Pvt Ltd +91 8607482200 01274-251000	<b>HIMACHAL PRADESH</b>
<b>Vapi</b> Royal Thumpers +91 9726818181; 9879565274	<b>Fatehabad</b> SDB Automobiles +91 9728942226 01667-221786	<b>Kurukshetra</b> VPS Motors +91 9254022290 01744-231151	<b>Rohtak</b> Badhwar & Co. +91 8059880031 01262-242034; 241173	<b>Baddi</b> Simran Automobiles +91 9816167884
	<b>Hissar</b> Malik Automobiles +91 8572888890 01662-276103	<b>Narnaul</b> Royal Jindal Auto Pvt Ltd +91 9813150222	<b>Sirsa</b> Gulzar Motor Agencies +91 9996147200 01666-221367; 230459	<b>Chamba</b> Champavati Autos +91 9736678651 01899-226747
				<b>Dharamshala</b> Him Enfield +91 9418083838 8894389090

## AUTHORISED DEALERS

<b>HIMACHAL PRADESH</b>	<b>HIMACHAL PRADESH</b>	<b>JAMMU &amp; KASHMIR</b>	<b>JHARKHAND</b>	<b>JHARKHAND</b>
<b>Hamirpur (ASP)</b> Parkash Royal Enfield +91 9816058483 01972-258483	<b>Solan</b> Tapan Industries +91 7807400172 01860-1800072	<b>Leh(ASP)</b> Venture Third Pole +91 9419177466	<b>Bokaro</b> G.R.Motors +91 9934109008 6542265452	<b>Jamshedpur-Adityapur</b> Aruna Motors +91 8863996222 0657-6574010; 6574011
<b>Manali</b> Heaven On Earth Automobiles +91 9459300881 01902-205032; 251151 08350854002 (Kullu)	<b>UNA</b> Sharma Automobiles +91 9318536733 09218-446755	<b>Kathua</b> Lovish Automobiles +91 9419166881, 9070855555 01922-235010	<b>Daltonganj</b> Arjun Automobiles +91 9006082822 +91 8235121935	<b>Jamshedpur - Bajrang Nagar NH 33</b> Cruiser India +91 9204004142
<b>Mandi</b> Shivam Automobiles +91 9805473700 01905-243077 8628876301	<b>JAMMU &amp; KASHMIR</b>	<b>Srinagar</b> PCS Automobiles +91 9797122244 0194-2472781	<b>Deoghar</b> Roy Brothers +91 9934344889 06432-240371	<b>Ramgarh</b> Anjaney Automobiles Pvt. Ltd. +91 9431146297 +91 9031000430
<b>Paonta Sahib -Sirmour</b> R.S. Enterprises +91 9418117089 01704-223687	<b>Baramula</b> ZMR Automobiles +91 9906727248	<b>Digiana camp (ASP)</b> Sumeet Motors +91 9419236396 0191-2431058	<b>Dhanbad</b> Arti Automobiles +91 9470133444 +91 9031084005	<b>Ranchi - Harmu Road</b> Raghuram Autocare +91 9905110006 0651-6571607
<b>Shimla</b> Tapan Industries +91 7807500272 01860-1800072	<b>Jammu - Janipur road</b> Reliance Motors +91 9419191241 0191-2536084; 0191-2530213	<b>Udhampur</b> R A Enfield +91 9419996901 01992-250008	<b>Dumka</b> Majestic Autobikes Pvt Ltd. +91 9798777007	<b>Ranchi - Kokar</b> Sri Nivas Automobiles +91 9771420322 0651-2542789
	<b>Jammu</b> Xtream Motors +91 9070699909; 9070699900; 9070172999 +91 9797568876		<b>Hazaribag</b> Riders Point +91 9234343422 +91 9031005518	

## AUTHORISED DEALERS

<b>KARNATAKA</b> <b>Bagalkot</b> Bagalkot Motors +91 8884128877; 9916361134	<b>KARNATAKA</b> <b>Bangalore - BTM 2nd stage</b> Royal Enfield Company Store +91 9902180044 080-40905108; 26689975	<b>KARNATAKA</b> <b>Bangalore - Nelamangala</b> Sri sai Sadguru Motors +91 9071766021; 9071766025	<b>KARNATAKA</b> <b>Bangalore-Sudhamanagar</b> H S R Services +91 9343735655 080-22133119	<b>KARNATAKA</b> <b>Bhatkal</b> Brahmi Motors +91 9743637456 08385-226836
<b>Bangalore-Kpura road</b> H.S.R. Services +91 7829000350; 9980762849 080-22133119	<b>Bangalore-Electronic City</b> Electronic City Motors +91 7026613071 to 79 & 80 8494942929	<b>Bangalore- Peenya</b> Sri Sadguru Sai Motors +91 9066699094 080-28393666	<b>Bangalore - B Narayanpur</b> Sai Ram Autocraft +91 7022288662 080-64909090	<b>Belgaum</b> Shri Munishwar Motors Pvt. Ltd. +91 7204606064 0831-4213059
<b>Bangalore-Banaswadi</b> CVS Motors +91 9886500045	<b>Bangalore-Indira Nagar</b> Teknik Motors +91 8904004004; 8904005004 080-25284788, 40910005	<b>Bangalore - Raja Rajeshwari Nagar</b> Accelerate Motors +91 7259534650 080-28606969; 28608989	<b>Bangalore - Yelahanka</b> Acclaim Motors Pvt Ltd +91 9632881188; 9632881133 9663550055	<b>Bellary</b> Sanjeevini Automobiles +91 7353777768 08392-261027
<b>Bangalore-Bannerghatta</b> Royal Enfield Company Store +91 9945592345 088-22440588	<b>Bangalore - Kengeri</b> Accelerate Motors +91 7022049627	<b>Bangalore-Magdi road</b> H.S.R. Enterprises +91 9844067555 080-23156617	<b>Bangalore (ASP)</b> Mehboob Garage +91 9945785022; 9845326062 080-23436682	<b>Bidar</b> Bhavani Motors +91 9379799992
<b>Bangalore-Bellary Road</b> CVS Motors +91 9886500042 080-23469600; 23469601	<b>Bangalore-Nagarbhavi</b> S.R. Motors +91 9902065933; 9071340000 +91 8032323333	<b>Bangalore-Sarjapur</b> Teknik Motorcycles +91 8904004004; 8904000300- 8904000700 080-40910003; 0004; 005	<b>Bangalore (ASP)</b> Sri Manjunatha Bullet Garage +91 9341220151 080-25427066	<b>Bijapur</b> Rohan Motors +91 9986168363
				<b>Coorg</b> Abhyuday motors +91 9590000910

## AUTHORISED DEALERS

<b>KARNATAKA</b>	<b>KARNATAKA</b>	<b>KARNATAKA</b>	<b>KARNATAKA</b>	<b>KARNATAKA</b>
<b>Chikkamangalore</b> Chikkamangalore Motors +91 9742289955	<b>Hassan</b> Shree Subrahmanya Motors +91 9980751155, 9742217172	<b>Mandya</b> Ruby Maratt Motorcycles +91 9591503399	<b>Mysore (ASP) Kuvempu Nagar</b> Abhyudhay Motor Services Pvt. Ltd. +91 9743721955; 9538841412 0821-2462066/2462067	<b>Tumkur</b> Bhagavati Motors +91 9976384499
<b>Chitradurga</b> Jilu Bikes +91 9845127397 +91 8494900552	<b>Hubli - Airport Road</b> Salimath Engineers Services +91 7259037590 0836-3241160	<b>Mangalore</b> Frontline Automobiles +91 8861006478 0824-4267573	<b>Puttur</b> Frontline Automobiles +91 9686137888	<b>Udupi</b> Brahmi Motors +91 9164889161; 9164209161 0820-2527590
<b>Davangere</b> Royal Automobiles +91 9844053511 08192-256239	<b>Hubli - Kusugal Road - Keshwapur</b> Klasik Motors +91 8904800948 0836-2288223	<b>Mudhol</b> Mudhol Motors +91 8197567124	<b>Raichur</b> Chukki Motors +91 8792113336	<b>KERALA</b>
<b>Gadag</b> Gadag Motors +91 8147776496	<b>Hunsur</b> Aadith motors 08222-252395; 96	<b>Mysore-Vijayanagar 1st Stage</b> Aadith Motors +91 7899912362; 7899912363 8214244467	<b>Shimoga</b> Apollo Enterprises +91 9008138662; 9739696768, +91 41187404	<b>Adoor</b> Yamuna Agencies +91 9747410243 0473-4229222
<b>Gulbarga</b> Mukunda Wheels Pvt. Ltd. +91 9945249302; 49300; 49305, 08472-225302	<b>Kolar</b> Jagadamba Automobiles +91 9972522111; 8152226619	<b>Mysore (ASP) Kempananj. Agrahara</b> Sri Venkateshwara Automobiles 0821-2427533	<b>Sirsi</b> Sri Maruthi Auto Motors +91 9108484665 08384-226777	<b>Alleppey</b> Rider's Motors +91 9447265955
				<b>Calicut-Francis Road</b> Blue Mountain Autos +91 9895201667 0495-2302530

## AUTHORISED DEALERS

<b>KERALA</b> <b>Calicut - Mankavu</b> Luha Automotives +91 7025105333 0495-2333533	<b>KERALA</b> <b>Cochin - Vyttila</b> Kaizen Motors +91 7559800072 0484-2307072; 4047072	<b>KERALA</b> <b>Kollam - Madanada</b> Unnoony Motors +91 9567395208 0474-2764566; 2764567	<b>KERALA</b> <b>Pathanamthitta</b> Marikar Motors Ltd. +91 8111871222; 9388077007 0468-2223412	<b>KERALA</b> <b>Thrissur-Puzhakal Padam</b> Pinnacle Motor Works Pvt. Ltd. +91 7025600600; 8111994007 0487- 2385255
<b>Calicut - Puthiyagandi</b> SS Motors +91 9567863979 0495-2392200; 2390770	<b>Kannur</b> SS Motors +91 9567862458; 9567863980 0497-2731312	<b>Kodungallur</b> Pinnacle Motor Works Pvt Ltd +91 9072575721	<b>Pattambi-Palakkad</b> Intrepid Works +91 9744072921 0466-2970666	<b>Thiruvalla</b> St. Mary's Motors +91 9526260400; 9747972081 0469-2733243
<b>Cochin - Angamali, Areeckal Junction</b> Sanjo Motors +91 9809709999 0484-6888889	<b>Kannur</b> Vibrant Automobiles +91 8111990066 0497-2776660	<b>Kottarakara</b> Unnoony Motors +91 9567966444	<b>Perinthalmanna</b> ABC Motors +91 9447158400 04933-226677	<b>Thodupuzha</b> Veliyathu Motors 91 8943200090 4862227899
<b>Cochin - Chittoor Road</b> St. Mary's Motors +91 8891000691; 9895118951 0484-4022819	<b>Kayamkulam</b> Roverz Motors +91 9072546555	<b>Kottayam</b> Javeens +91 9446397300 0481-2563455; 2567070	<b>Perumbavoor</b> Sanjo Motors +91 8592009991 0484-6888885	<b>Tirur</b> ABC Motors +91 9605827000 0494-2422277
<b>Cochin - Edapally</b> Royal Enfield Company Store +91 7025233912 0484 - 6494991; 6494992	<b>Kollam - Bishop Jerome Nagar</b> Marikar (Motors) Ltd. +91 9947031120; 9947031121 0474-2732474	<b>Palakkad</b> Intrepid Works +91 8606933008 0491-2572331	<b>Thrissur-Karunanakaran Nambiar road</b> Marikar (Motors) Ltd +91 9388077010; 8606863336 0487-2339307	<b>Trivandrum-Attingal</b> Concept Bikes +91 9048990256

## AUTHORISED DEALERS

KERALA	MADHYA PRADESH	MADHYA PRADESH	MADHYA PRADESH	MAHARASHTRA
<b>Trivandrum - Kaimanam Junction</b> Sivaji Motors +91 7736207777; 7736066716 0471-6506777	<b>Bhopal - Hamidia Road</b> Choudhari Tractor Agency +91 9425023609 0755-5240614; 2735762	<b>Gwalior</b> Rimik Motors Pvt. Ltd +91 9827935616; 9926435616 0751-4035616	<b>Khandwa</b> Binwani Motors +91 9425909302 7332244222	<b>Ahmednagar</b> Newaskar Automobiles +91 8087500900 0241-2470125
<b>Trivandrum - M G road</b> Marikar (Motors) Ltd +91 8606068466 0471-2334621	<b>Bhopal-Padmanabh Nagar</b> Ananya Auto +91 7389930806 0755-4076937	<b>Indore - Nehru Market</b> Krishna Motor Agency +91 9826034012 0731-2703172	<b>Satna</b> Manish Motors +91 9827250199 07672-251608	<b>Akola</b> Agrawal Motors +91 8408089944 0724-2258259
<b>Trivandrum - Vetturoad - Kazha kuttam</b> Concept Bikes +91 9048400200; 9048990546	<b>Chhindwara</b> Rahul Royal Motors +91 8889999602 07162-245255	<b>Indore - Sayaji Club Road</b> RR Automotive +91 8878660100 0731-4222822	<b>Shahdol</b> Gupta Automotive +91 8718811703 0765-2231967	<b>Alibagh</b> SK Autoriders +91 9970041579 02141-223030
<b>Vadakara</b> Grace Motors +91 7034775555	<b>Dewas</b> R R Motorcycles +91 8109103622 8269270709	<b>Jabalpur</b> Royal Thumpers +91 8962010072 0761-4042424; 4042423	<b>Ujjain</b> Avis Auto +91 9300005025 0734-2520007	<b>Amravati</b> Bhans Automotive +91 7620177060 0721-2510636
<b>Valluvambaram- Malappuram</b> ABC Motors +91 7034166300 0483-2770700	<b>Guna</b> Standard Motors +91 9754222241 +91 9425131250	<b>Katni</b> Royal Thumpers A Division of Superior Automobiles Pvt Ltd. +91 8962010075 07622-226474	<b>Vidisha</b> Adventure Bike +91 9425148606 0759-2408222	<b>Aurangabad - Bansilal Nagar</b> S.K.Y.S Automobile +91 9028059252 0240-2350652



## AUTHORISED DEALERS

<b>MAHARASHTRA</b> <b>Aurangabad-CIDCO-Cannaught</b> Cherry Corporation +91 9850889408 0240-6601613	<b>MAHARASHTRA</b> <b>Chandrapur</b> Dinesh Motors +91 9028111383 07172-260555	<b>MAHARASHTRA</b> <b>Jalgaon</b> Usha Motors +91 7768009996 0257-6999000	<b>MAHARASHTRA</b> <b>Mumbai - Bhandup</b> Soniya Motors Pvt. Ltd +91 9322314555 022-65650153; 7208005209	<b>MAHARASHTRA</b> <b>Mumbai-Thane (Dombivali)</b> Pooja Motors +91 8425840752 0251-2470611
<b>Baramati</b> Jay Motors +91 9960247655; 9890090381 02112-221055	<b>Dhule</b> Surbhi Motors +91 9371057573 02562-239933	<b>Karad</b> Nand Enterprises +91 9923981211 02164-242772	<b>Mumbai - Goregaon</b> Ishna Wheels +91 8879330226; 8879330227 022-28711242; 28711243	<b>Mumbai - Thane (Godbunder)</b> Soniya Motors Pvt. Ltd +91 9322315111 022-25893202; 7208005207; 7208005208
<b>Beed</b> Aaryan Motors +91 9421184118 02442-223780	<b>Gadginglaj</b> Yashashri Motors +91 9657009444 9527094848	<b>Kolhapur</b> Motor India +91 9822871729 0231-2531177	<b>Mumbai - Kandivali</b> Voyage Motors +91 9146871013; 7498567890 022-28087882	<b>Mumbai - Thane (Mira road)</b> Unison Automobiles +91 9029234040 022-28456620
<b>Buldhana</b> Samyak Automotive +91 9422181159 072-62241273	<b>Ichalkaranji</b> Motor India +91 9822551777	<b>Latur</b> Prisha Motors +91 9049607711 02382-200711	<b>Mumbai-Panvel</b> Pratik Motors +91 9029422942 022-27480040	<b>Mumbai - Thane (Vasai)</b> SP Wheels +91 8446011105 0250-6511107; 6511108
<b>Borivali</b> Unison Automobiles +91 7506555039 22265614014	<b>Indapur</b> Sahyadri Auto +91 7387111109 02111-224111	<b>Malegaon</b> Shaurya Motors +91 8380038153; 156; 9527002881 02554-231171	<b>Mumbai - Sakinaka</b> Synergy Auto Inc +91 8286046565 022-28590085; 28590086	

## AUTHORISED DEALERS

<b>MAHARASHTRA</b> <b>Mumbai - Thane (Ulhas Nagar)</b> S R Motors (A Unit of Riya Motors Pvt. Ltd) +91 7738622211; 7506044995 0251-2700043	<b>MAHARASHTRA</b> <b>Nagpur - Wardhaman Nagar</b> Shri Krishna Automobiles +91 9372121346 0712-3191202	<b>MAHARASHTRA</b> <b>Nasik - Ganjamal</b> Ostwal Autos +91 9595301414 0253-2500291	<b>MAHARASHTRA</b> <b>Phaltan</b> Adved Motors +91 7040829609 02166-225272; 225472	<b>MAHARASHTRA</b> <b>Pune - Fathima Nagar</b> Platiinum Auto +91 7755932578; 2579 +91 9881171717
<b>Mumbai (ASP) Nerul</b> Ram Motorcycles +91 9323025335 022-27700394; 022-27700396	<b>Nanded</b> Jairam Motors +91 9552446688 02462-297788	<b>Nasik - Satpur</b> Moharir Auto Pvt. Ltd. +91 8446646555; 8378998295 0253-6630000	<b>Pimgalgaon</b> Shaurya Motors Shaurya Motors +91 9130068287 02550-660604	<b>Pune - Hadapsar</b> Platiinum Auto +91 7030911278; 7030911284
<b>Nagpur - Kamptee Road</b> Ved Motors +91 9326916819 0712-2652222; 2654444	<b>Nandurbar</b> Dinesh Wheels +91 9673298999 +91 9764567877	<b>Osmanabad</b> Hatlai Auto +91 9822838888 02472-228588	<b>Pune - Adarsh Nagar</b> Dhone Automobiles +91 7028922644 020-24273335	<b>Pune - Kasarwadi</b> Dhone Automobiles +91 7028045684
<b>Nagpur - Sitaburdi</b> Paragon Traders +91 9595622261 0712-2523456	<b>Narayangaon</b> Kings Royal Riders +91 9075009831 0213-2245542	<b>Parbhani</b> Chandrallama Automotive +91 9665516193 2452-242299	<b>Pune - Baner</b> Kings Auto Riders +91 7875756100 020-27200256	<b>Pune - Khed Shivpur</b> Siddh Auto +91 9673152266
	<b>Nasik - Dwarka</b> Ostwal Autos +91 9422255773 0253-2592717	<b>Parli</b> Shiva Motors +91 9765924477 02446-227477	<b>Pune - Chinchwad</b> Hridaan Motors +91 9850888899 2069100202	<b>Pune - Kothrud</b> Siddh Auto +91 9168376611 020-25280050; 25280051
				<b>Pune - Yerwada</b> Dhone Automobiles +91 7028978074 020-60121812

## AUTHORISED DEALERS

<b>MAHARASHTRA</b>	<b>MAHARASHTRA</b>	<b>MAHARASHTRA</b>	<b>MIZORAM</b>	<b>NEW DELHI &amp; NCR</b>
<b>Pune - Wakad (Talegaon)</b> Kings Auto Riders 020-65107545	<b>Satara</b> Nand Enterprises +91 9923981211 02164-242772	<b>Wardha</b> Sri Krishna Automobiles +91 9769169180 +91 7410061121	<b>Aizawal</b> Lawma Enfield +91 8575517879 0389-2334731	<b>Delhi - Jhandewalan Ext.</b> Ess Aar Motors +91 9810797099 011-65461901; 23524426
<b>Pune - Wakhewade</b> Brahma Motors +91 7276629900 7276027722	<b>Shrirampur</b> Karachiwala Automobiles +91 9028537570 02422- 227570	<b>Yavatmal</b> Aaditya Riders Pvt Ltd +91 8055958119 9158632833	<b>NAGALAND</b>	<b>Delhi - Kailash colony, Okhla Indust. Area</b> South Delhi Motorcycles +91 9716145509, 9716002728 011-26811013
<b>Pune (ASP)</b> Sadguru Service Station +91 8308048854; 9011078854, 020-24350727	<b>Solapur - Bale chowk, Pune Highway</b> Chavan Motors +91 7720069040 0217-2352323/2352424	<b>MANIPUR</b>	<b>Dimapur</b> Uniglobe Enterprises +91 9774057770 3862225903	<b>Delhi - Mahipalpur</b> Kay Tee Automobiles +91 9910884777 011-64612777
<b>Ratnagiri</b> Advait Motors +91 9970551171 02352-228930	<b>Solapur - Budhwarpath</b> Mondhe Motors +91 8237466447; 6446; 6442 0217-2315923; 2735081	<b>Imphal</b> Sanamahhi Motors +91 8259061598 0385-2449111	<b>NEW DELHI &amp; NCR</b>	<b>Delhi - Mangolpuri</b> Soni Automobiles +91 9873069001 011-27921311; 65180349
<b>Sangli</b> Abhay Auto +91 7768073003; 9011964040, 0233-2623040	<b>Waluj - Pandharpur</b> Godavari Agro Services Pvt. Ltd +91 9146189551 0240-2553770	<b>MEGHALAYA</b>	<b>Delhi - Dhwarka</b> Cruiser Motors +91 9136310966 +91 8459223833	<b>Delhi - Najafgarh</b> Outer Delhi Motorcycles +91 9540941601 011 68888252 / 53
		<b>Shillong</b> Merin's Royal Enfield +91 8258811320 0364-2590048	<b>Delhi - Gujrawala</b> Kay's Autos +91 9810433555 011-28877008; 28877009	

## AUTHORISED DEALERS

NEW DELHI & NCR	NEW DELHI & NCR	NEW DELHI & NCR	NEW DELHI & NCR	ORISSA
<b>Delhi - Padapadganj</b> Asco Motors +91 9582184488 011-2214888	<b>New Delhi (ASP)</b> Balaji Motors +91 9350102768 +91 8826574278	<b>Ghaziabad (ASP)</b> Jai Shiv enterprises +91 9927064206	<b>NCR-Noida - Sector 10</b> Shree Mahadev Agency +91 9811404319 0120-4310052/4324662	<b>Bargarh</b> Shree Shyamji Bike Point +91 9437053233 +91 7381053244; 255
<b>Delhi - Rama Road</b> Lamba Enterprises Pvt Ltd. +91 9711611591 011-45151159	<b>Delhi (ASP)</b> M.G. Auto Sales +91 9810237417 011-27837439	<b>Ghaziabad (ASP)</b> Royal Taj Agency +91 9810413387 +91 9818728177	<b>NCR-Noida - Sector 63</b> Solitaire Automotive +91 9810703922 0120-4547929	<b>Baripada</b> Legend Automotive +91 9178024417; 9040078001
<b>Delhi - Saraswati Vihar</b> North Delhi Motorcycles +91 9810558625 011-27054737	<b>NCR - Faridabad - Mathura Road</b> Heighten Automotive Pvt Ltd +91 9911223811 +91 9717475811	<b>NCR Gurgaon - Old Delhi Road</b> Aman Automobiles +91 9810535659 1244084648	<b>NCR-Sahibabad</b> Sangam Autos +91 9311051177; 9990624290, 0120-4198890	<b>Berhampur</b> Vaishnavi Automobiles +91 9937308525; 7682833574; 6802248820
<b>Delhi - Shahadra</b> Amar Autos +91 8802583948 011-43595322	<b>NCR - NIT Faridabad</b> Sohan Auto World +91 9811551530 0129-2429352	<b>NCR Gurgaon - Sheetala Mata road</b> Brawn Automobiles +91 9212315090 1244251481	<b>ORISSA</b>	<b>Bhubaneshwar - Buddha Nagar</b> Royal Automobiles +91 7752017606 8192256239
<b>Delhi - Tilaknagar</b> Lamba Enterprises Pvt Ltd. +91 9999389189; 9250919994 011-45614855; 42138246	<b>NCR - Ghaziabad - Nehru Nagar</b> Rawal Automobiles Pvt Ltd +91 9350315311 0120-4104659; 9211921227	<b>NCR Gurgaon - Sohna Road</b> Manzil Motors Pvt. Ltd. +91 9650311988 1244231683	<b>Angul</b> Green Treet Automotive (P) Ltd +91 9937066505 +91 7852936512	<b>Bhubaneshwar - KIIT Road, Sishu Vihar</b> Gugnani Automobiles +91 9776160313; 9178143270
			<b>Balasore</b> Favour Ride +91 7894775144; 90400557156	

## AUTHORISED DEALERS

<b>ORISSA</b>	<b>ORISSA</b>	<b>PUNJAB</b>	<b>PUNJAB</b>	<b>PUNJAB</b>
<b>Bhubaneshwar - NH 5 - Patrapada</b> Trupti Autoworld +91 9861824216; 7873024206 0674-2470148	<b>Keonjhar</b> Sai Automobile +91 9437054807 +91 9437004711	<b>Abohar</b> Aman Auto Zone +91 9814767900 +91 9914767900	<b>Bhatinda-Goniana Road</b> Ajay Autos +91 9988678145 0164-2235608; 5000376	<b>Gurdaspur</b> Ajit Motors +91 9855152204 01874-501644
<b>Bhawanipatana</b> Shyamkrishna Mart pvt ltd +91 9040350293 8763130236	<b>Rourkela</b> The Agents & Distributors +91 9937007971; 9238111010; 0661-2511223	<b>Amritsar</b> Jaycee Motors Corporation +91 9780038349 +91 9780038078	<b>Bhatinda - Mansa Road</b> Krishna Automobiles +91 8725086888 0164-2212802	<b>Hamirpur</b> Parkash Royal Automobiles +91 9418458483 01972-258483
<b>Cuttack</b> Shree Hanuman Automobiles +91 8342039286; 9438429957 0671-2586630; 9853265588	<b>Sambhalpur</b> Sreyasri Motors +91 9040015355; 9437030055; 9040015359 0663-2115355	<b>Barnala</b> Megan Autos +91 9878120088 +91 9878120033	<b>Faridkot</b> Baba Farid Automobiles +91 9780247048; 9872409626 01639-251343	<b>Hoshiarpur</b> Lagwal Automobiles +91 9256514321 01882-238586
<b>Jajpur Road</b> Birendra Motors +91 9078886306	<b>PONDICHERRY</b>	<b>Batala</b> Moon Autos +91 9988355955 01871-222278	<b>Fazilka</b> Aman Auto Zone +91 9988700765; 9814667900	<b>Jalandhar - GT Road</b> Fateh Autos +91 9417231123 0181-2632880
<b>Jeypore</b> Golden Motors +91 9439355473; 9437024187	<b>Pondy</b> Rooster Automobiles +91 8940422422 0413-2355336	<b>Begowal</b> S.S.Motors +91 9814399532	<b>Ferozepur</b> Royal Hut +91 8437312364 01632-242567	<b>Jalandar - SatlujMarket</b> Navyug Motors +91 9915630535; 9878785796 0181-4627998

## AUTHORISED DEALERS

<b>PUNJAB</b> <b>Jalandar - G.T.Road</b> Navyug Motors +91 9878785796 0181-4627998	<b>PUNJAB</b> <b>Ludhiana - Jodhewal</b> Shree Dadu Dayal Automotive +91 8728092401 0161-5040405	<b>PUNJAB</b> <b>Mohali</b> Manmohan Motors +91 9216267888; 9988317366 0172-6527366; 6527367	<b>PUNJAB</b> <b>Nakodar (ASP)</b> Bhagwati Automobiles +91 9357242788 +91 9041522970	<b>PUNJAB</b> <b>Patiala - Sirhind Road</b> Gurukirpa Motors +91 9779222225
<b>Kapurthala</b> Innovative Automobiles +91 9357254736 01822-233011	<b>Mahilpur (ASP)</b> Mahilpur Motors +91 9417354423	<b>Morinda</b> Morinda Motorcycle Centre +91 8427242324 0160-2630357; 2630072	<b>Nangal</b> Nangal Motors +91 8283829760; 9878667432; 01887-229160	<b>Phagwara</b> Khalsa Automobiles +91 9463138303 01824-270081
<b>Khanna</b> Kishori Automobiles +91 9872030903; 8591525575; 01628-503868	<b>Malerkotla</b> Om Automobiles +91 9814404513; 8054944713 01675-262113	<b>Mukherian</b> Lagwal Motors +91 8699982680	<b>Nawanshahar</b> HS Enterprises +91 9417654888; 8146091105; 01823-221194	<b>Ropar</b> Garcha Automobiles +91 9464752267 01881-228137
<b>Ludhiana - Dholewal - GT Road</b> Sant Motors +91 8968296020 0161-5012647	<b>Mansa</b> Ganpati Motors +91 9779850001 01652-236899	<b>Muktsar</b> Deep Autos +91 8566926850 0163-3510390	<b>Pathankot</b> Cashmir Sales Corporation +91 9417412884 0186-2220148; 2224672	<b>Sangrur</b> Verma Automobiles +91 9888836998 01672-223273
<b>Ludhiana - Gurudev Nagar - ferozpur Road</b> Barnala Automobiles(Jagroan) +91 9780014995 0161-2424114; 2426209	<b>Moga</b> Bikram Sales Corporation +91 9855914072 01636-227777	<b>Nabha</b> Partap Automobiles +91 9815001739; 9815001740 9872605400	<b>Patiala - Rajpura Road</b> Sukhdev Automobiles +91 9876103017 0175-2305721	<b>Sultanpur Lodhi</b> Dalbir Motors +91 9814679432 01828-223634

## AUTHORISED DEALERS

<b>PUNJAB</b>	<b>RAJASTHAN</b>	<b>RAJASTHAN</b>	<b>RAJASTHAN</b>	<b>RAJASTHAN</b>
<b>Tanda</b> Sandeep Automobiles +91 9914554304 01886-502398	<b>Banswara</b> Veer Autolinks +91 9001406681 02962-254135	<b>Chittorgarh</b> Manglam Motocorp +91 7737094370 01472-297018	<b>Jaipur (ASP)-Sudershan Pura</b> JMS & Co +91 9460345047; 9785415498 0141-4059277	<b>Nagaur</b> D.D.Autotech +91 9828943737 01582-243006
<b>Taran Taran</b> Chhabra Auto Agencies +91 9815213148 +91 8528180632	<b>Barmer</b> Devrath Motors Pvt. Ltd +91 8107381111; 9549657080 02982-224381	<b>Churu</b> Churu Balaji Motors Pvt Ltd +91 9649777777 01562-253777	<b>Jhunjhunu</b> Balaji Motors +91 7733022411 01592-231061	<b>Pali</b> RMD Motors +91 9829285357 0293-2227151
<b>Zirakhpur</b> Garg Auto zone +91 8427656388	<b>Bharatpur</b> Khusali Motors +91 9414944972	<b>Hanumangarh</b> Udai Motors +91 9772780001 01552-226266	<b>Jodhpur</b> Shree Rajpurohit Automobiles +91 9001744442 0291-2980473	<b>Sikar</b> Apoorva Motors +91 9314237183 01572-245830
<b>RAJASTHAN</b>	<b>Bhilwara</b> Soni Automobile +91 8233416700 011 27921311; 65902249	<b>Jaipur - Govind Marg</b> Rajesh Motors (Raj.) Pvt Ltd. +91 9521125125; 9414064864	<b>Kota</b> Mundra Motors Pvt. Ltd. +91 9352602347 0744-2361264	<b>Sriganganagar</b> National Motors +91 9414211956 0154-2444200
<b>Ajmer</b> Jogbala Motors Pvt Ltd. +91 9829072298 0145-2787666	<b>Bikaner</b> Bikaner Bikes Pvt Ltd +91 9529269924 0151-2251345	<b>Jaipur - Tonk Road</b> Aditi Motors +91 9829822722 0141-2700224	<b>Kotputli</b> Shree Motors +91 9468768300; 9116011113; 2912980473	<b>Udaipur</b> Voyage Motors +91 9799144460 0294-2460104

## AUTHORISED DEALERS

<b>TAMILNADU</b> <b>Arani</b> Akan Agency +91 9751502221 +91 7845330209	<b>TAMILNADU</b> <b>Chennai - Broadway</b> Balaji Motors +91 9962997975	<b>TAMILNADU</b> <b>Chennai - Kelambakkam</b> Vardhan Motors +91 9092604446 +91 9092604447	<b>TAMILNADU</b> <b>Chennai - Pallikaranai</b> Sri Venkateswara Bike Zone +91 8681863330 044-65655222	<b>TAMILNADU</b> <b>Cuddalore</b> Rooster Automobiles +91 9791322822 04142-227788
<b>Chengalpattu-GST Road</b> Shiv Sholai motors +91 9500008699 +91 9786177477	<b>Chennai - Chrompet</b> The Legend Motors +91 7299042018 044-49595867; 22410272	<b>Chennai - OMR, Perungudi</b> Royal Enfield Company store +91 8939958655 044 - 42607777; 42607555	<b>Coimbatore - Hope College, Peelamedu</b> Royal Enfield Company Store +91 9655999844 0422-6067006; 6067007	<b>Dharmapuri</b> S.M.Motors +91 7373778259, 9994852482; 04342-288123
<b>Chennai - Ambattur</b> Classic Motorcycles +91 9940063306 044-42180206 - 45080207	<b>Chennai - Greams Road</b> Sri Velavan Motors +91 8754553411; 8754553404 044-42076898	<b>Chennai - Purasaiwalkam</b> I Speed Motors +91 9094633712 044 45588047	<b>Coimbatore - Sai Baba colony</b> Sheriff Motors +91 9597310101 0422-4210101	<b>Dindigul</b> Rajendra Automobiles +91 965933433, 8508678333 0451-2431850
<b>Chennai - Anna Nagar</b> Southern Motors +91 9841277990 044-26264686	<b>Chennai - Jafferkhanpet</b> Sreehita Auto Zone +91 7338819603; 04; 05 044-65906590; 591	<b>Chennai - Red Hills</b> AKG Motors +91 9597082578 044-26322063	<b>Coimbatore - Trichy Road, Kothari Layout</b> BullMenn Motors +91 9514555510; 7092900000; 7092900000	<b>Erode</b> Senthil Murugan Auto Agencies +91 8220048567 +91 9790030003
<b>Chennai - Alapakkam</b> Sri Velavan Motors +91 7299405000; 7299705000;7299709999 044-24761902	<b>Chennai - Kattuppakkam</b> Aravinduja Motors Private Limited +91 8939804335 044-45554888	<b>Chennai - Tondiarpet</b> Balaji Motors +91 9087521116 044-25910104; 25910105		<b>Hosur</b> Sri Saravana Motors +91 9543813032; 8220013432 04344-244030/ 244031



## AUTHORISED DEALERS

<b>TAMILNADU</b> <b>Hosur (ASP) - Seetharam Nager</b> Sri Manjunatha Bullet Garage +91 9894955499; 9940909908 0434-4314114	<b>TAMILNADU</b> <b>Kumbakonam</b> A.V. Motors +91 7598707783; 7598707785 0435-2415286	<b>TAMILNADU</b> <b>Namakkal</b> Royal Annanmar +91 8883114777 04286-277557	<b>TAMILNADU</b> <b>Thanjavur</b> JAF Associates +91 7867019836; 7867019831	<b>TAMILNADU</b> <b>Tirupur</b> Bikerz +91 7502387000 +91 9842187000
<b>Kanchipuram</b> Jet Blaze Motors +91 9629032223; 9894538176	<b>Madurai - KK Nagar</b> Madras Motors +91 9976755111 0452-2585686	<b>Pollachi</b> Bharat Motors +91 9715222600 +91 9843345461	<b>Theni</b> Coral Moto Hub +91 9500739686 9698933000	<b>Trichy - Annamalai Nagar Karur road</b> Oxina Motors +91 8056455577 7402718502; 7402718514
<b>Karaikkudi</b> Neha Motors +91 7373097717	<b>Madurai - Kazhavasal, Theni main road</b> Classic Motors +91 9629023344 0452-2667875	<b>Salem - Four Roads</b> Chamundi Enfield +91 8098611999; 8098559999 0427-2414100	<b>Thiruvannamalai</b> AKAN Agency +91 9843033861 04175-233377	<b>Vellore</b> Sri Kalikambal Autos +91 8508536771 0416-2245505
<b>Karur</b> Murugan Motors +91 9500955950; 9543255950; 0432-4329950	<b>Madurai - Simmakal, Workshop Road</b> G.G. Motors +91 8012688444 0452-2342007	<b>Sivakasi</b> Sri Scorpion Racers (P) Ltd +91 7373059701 0456-2231303	<b>Thoothkudi</b> Charles Motors +91 9944723062 0461-2321636	<b>Karaikal</b> Rooster Automobiles +91 7639001047 0436-8228800
<b>Krishnagiri</b> Sree Maruthi Motor & Auto Service +91 9159566613 , 9159566615; 0434-3232512	<b>Nagercoil</b> Chandra Motors +91 8973886699 04652-236477	<b>Thiruvallur</b> Gap Motors +91 8939983660 +91 8939983662	<b>Tirunelveli</b> DG Motors +91 9486729010 0462-2970031	<b>Villupuram</b> Rooster Automobiles +91 8489144744 04146-222279

## AUTHORISED DEALERS

<p><b>TELANGANA</b></p> <p><b>HYDERABAD &amp; SECUNDARABAD</b> Hyderabad- Banjara Hills VVC Automobiles +91 7842883883</p>	<p><b>TELANGANA</b></p> <p>Hyderabad-PJR Nagar, Gachibowli road Go Green Motors India Pvt. Ltd 040-64646303 040-64626265</p>	<p><b>TELANGANA</b></p> <p>Hyderabad-Zafferguda, Mehidipatnam Venkataramana Automobiles Pvt Ltd +91 7660008132; 9100087519, 040-23514551</p>	<p><b>TELANGANA</b></p> <p>Karimnagar-CVNR Road Quality Motors +91 9030775252</p>	<p><b>TELANGANA</b></p> <p>Miryalguda Sri Lakshmi Pavan Automotives +91 9666660606</p>
<p>Hyderabad-Bowenpally, Suchitra SVR Motors and Engineering +91 8885023360; 8885023350 040-40116336</p>	<p>Hyderabad-Prasanth Nagar,vanasthalipuram Taurus Motors +91 8125828787 040-29804755</p>	<p>Secundarabad-Begumpet Kayjee Engineers +91 9246113133 040-27907444</p>	<p>Khammam Royal Automotives +91 9963886789 +91 8297536789</p>	<p>Nalgonda Vijayalakshmi Automotives +91 8885966627 8885966687</p>
<p>Hyderabad-Erragada Royal Enfield Company Store +91 9989055856; 7093190003; 7416783025 040-23701235; 23702255</p>	<p>Hyderabad- Ramachandrapuram, BHEL Go Green Motors India Pvt. Ltd +91 8712126622 040-69996644; 69996622</p>	<p>Secundrabad- Neredmet Orange International +91 8121091210 040-64449494; 3434</p>	<p>Kothagudam Royal Motors +91 8297616789 +91 8297626789</p>	<p>Nizamabad KY Motors +91 8885198222 08462-236882</p>
<p>Hyderabad-Himmayat Nagar Jayasree Automotives +91 9010183555 +91 9010752555 040-65169666</p>	<p>Hyderabad-Saraswathi Nagar, Uppal Royal Engineers +91 9885051755 040-64241755</p>	<p>Secundarabad-Opp-KIMS Hospital, Ranigunj Kayjee Engineers 040 - 64533839</p>	<p>Mahabub Nagar Harshithh Automotives +91 7660022336; 7660022334</p>	<p>Warrangal-Hanamkonda Quality Automobiles +91 9030775252 +91 9030775164</p>
		<p>Karimnagar-Bye pass Road Quality Motors +91 9966173000 0878-6509993</p>	<p>Mancherial J V Aryan Motors +91 8179356458 +91 8297388775</p>	

## AUTHORISED DEALERS

<b>TRIPURA</b> <b>Agartala</b> XED Motorcycles +91 8415951975 0381-2341098	<b>UTTARKHAND</b> <b>Haridwar</b> Prem Auto Enterprises +91 9927994477 01334-250242; 253242	<b>UTTARKHAND</b> <b>Rudrapur</b> Brar Motors +91 9219445699 05944-2473127	<b>UTTAR PRADESH</b> <b>Allahabad - Bai Ka Bagh</b> Vrindavan Automotive +91 7860352786; 7860383786 0532-2417021	<b>UTTAR PRADESH</b> <b>Bareilly</b> Suri Sales (P) Limited +91 9359108047 7351007963 0581-2543334
<b>UTTARKHAND</b> <b>Dehradun - Karanpur Road</b> Ahuja Enterprises +91 9927532535 0135-2659082	<b>Kashipur</b> Batra Enterprises +91 9837336026 05947-277207	<b>UTTAR PRADESH</b> <b>Agra - Baluganj</b> Shambhavi Automotive Engineers +91 8057400022 0562-2260444	<b>Allahabad-Kamla Nehru Hospital</b> Jay Pee Motors +91 7705907327; 7328; 7329 0532-6061002;1003	<b>Basti</b> New India Merchant +91 9532211786 554 2281483
<b>Dehradun - Saharanpur Road - Niranjanpur</b> Allied Auto Agencies +91 9690777771 0135-2623487	<b>Pithoragarh (ASP)</b> Sai Automobiles +91 9412981042 05964-225786	<b>AGRA-Guru Ka Tal-NH 2</b> Agra Royals +91 9837004872; 9997023456 0562-6888846	<b>Azamgarh</b> Amit Motors +91 9415795792 +91 9415103787	<b>Bijnor</b> Chaudhary Motors +91 8958994499 01342-264455
<b>Haldwani</b> Suri Sales (P) Limited +91 7351007972 05946-210768	<b>Rishikesh (ASP)</b> Ranjeet Motorcycles +91 9897548171; 9897113728, 0135-2434171	<b>Aligarh</b> Maindola Royal Enfield +91 9319144044 0571-3292464	<b>Badaun</b> Omkar Motors +91 9412427289 9520330305	<b>Bulandshahar</b> Santhosh Enterprises +91 9760415515 05732-231326
	<b>Roorkee</b> Goswami Automobiles +91 9897238608 01332-277477		<b>Barabanki</b> G.R & Company +91 7706911346; 7706911342	<b>Deoria</b> Suprem Motors +91 9628755557 05568-229624

## AUTHORISED DEALERS

<b>UTTAR PRADESH</b> <b>Etawah</b> V P Motors +91 9719530742 +91 9568013104	<b>UTTAR PRADESH</b> <b>Ghazipur</b> Shri Sai Chandra Automobiles +91 9415881073	<b>UTTAR PRADESH</b> <b>Kanpur</b> Sareen Motors +91 9389629521 0512-2540484	<b>UTTAR PRADESH</b> <b>Lucknow - Alambagh</b> Shreya Auto World Pvt. Ltd. +91 8400400842; 850 0522-4037677; 4041033	<b>UTTAR PRADESH</b> <b>Meerut - Jagriti Vihar</b> Moto Riders +91 8476900096 0121-4000511
<b>Faizabad</b> Chawla Riders +91 9628140004-07 0527-8265077/78	<b>Gonda</b> Style N Passion +91 9125411110	<b>Kanpur-Khalasa Line</b> Sareen Motors +91 7705905138; 8799414243 8303220224	<b>Lucknow - Jankipuram</b> Royal Motor works +91 7607777396 522 4078111	<b>Meerut - West rithani</b> Nutech motors +91 7088714714 0121-440111
<b>Farrukhabad</b> Ankur Auto Agencies +91 9415124921 +91 7678874000	<b>Gorakhpur</b> Shiv Motors (A Unit of Pardeshi Zigwheels Pvt. Ltd.) +91 9559005759 0551-2230014	<b>Kanpur</b> S.S Automobiles +91 7705006411	<b>Maharajganj</b> RK Motors +91 9161274582	<b>Moradabad</b> Akanksha Autozone Pvt Ltd. +91 7060007905 0591-6055999
<b>Fatehpur</b> K S Auto Sales +91 9616519248 05180-221223	<b>Jaunpur</b> Aditya Motors +91 9196128730; 9839216882 0545-2264047	<b>Lakhimpur Kheri</b> Shree Vinayak Motors +91 9554155999 0587 2277734	<b>Mathura</b> Aryaman Enterprises +91 9675303059 +91 8392916221	<b>Muzaffar Nagar</b> Harivansh Auto Agency +91 9219440446; 8979298645 0131-2646477
<b>Firozabad</b> Emerald Automobiles +91 9219439555 +91 9219439444	<b>Jhansi</b> Triveni Enterprises +91 9415059809 0510-2481007; 2380007	<b>Lucknow (ASP)</b> Amafh Bullet Centre +91 9415018786 0522-4074200	<b>MAU</b> Chandra Motors +91 9450189107 0547-2860555	<b>Nazibabads</b> Agarwal Tractor & Parts +91 9927030546; 9837072868 01341-220252

## AUTHORISED DEALERS

<b>UTTAR PRADESH</b> <b>Padrauna</b> Cantech Automobiles +91 9838719444; 7705803777; 05564245959	<b>UTTAR PRADESH</b> <b>Unnao</b> Raj Auto World +91 7080903700 0515-2831098	<b>WEST BENGAL</b> <b>Barasat-24 Parganas</b> The Country Motors +91 9051506523 033-654 04510	<b>WEST BENGAL</b> <b>Durgapur</b> R.H. Automobiles Pvt.Ltd. +91 9748402629	<b>WEST BENGAL</b> <b>Kolkata - Behala</b> Chunnilal Jhanwarlal Motors Pvt. Ltd. +91 9339366660 033-24983119
<b>Pratapgarh</b> Shaurya Enterprises +91 9554433888; 9918601126; 1127	<b>Varanasi - Maldahiya</b> Khurana Automobiles +91 8934965655 0542-2207532; 2207618	<b>Baruipur-24 Parganas</b> Austin Distributors Pvt. Ltd 033-65556611	<b>Howrah</b> Apollo Coaches (P) Ltd +91 9903800400 033-32971712; 32902346	<b>Kolkata - Chowrangee chowk</b> Austin Distributors Pvt. Ltd +91 8420046876 033-65552077; 40721010; 60505574
<b>Raebareli</b> Sushma Motors +91 9455502987	<b>Varanasi - Maqbool Anand road</b> One Place Automobiles Pvt. Ltd. +91 7753888536; 7753888522, 0542-2508385	<b>Berhampore</b> Maxwheel Motors +91 9233330208 03482-224227	<b>Howrah</b> Apollon Motors LLP +91 9804321122	<b>Kolkata - Nowa para</b> Kolkata Bike Zone 91 9674029373 033-40082380
<b>Saharanpur</b> Sachdeva Enterprises +91 8445577933 0132-2680680	<b>WEST BENGAL</b>	<b>Burdwan</b> Sri Ram Automobiles + 91 9800365544; 9002450705	<b>Kharagpur</b> Jain Motors +91 9476481717 +91 9434692778	<b>Kolkata - Sarat Bose road</b> Shah Distributors (Auto Division) +91 9830477788 033-22814242
<b>Sultanpur</b> Asia Royal Motors +91 9935185230 05362-227777	<b>Asansol</b> SG Automobiles +91 8170030003; 8170030004	<b>Dankuni-Hooghly</b> Universal Traders +91 9883069797	<b>Kolkata - Anandapur</b> Royal Enfield Company store +91 9874852522 033-40060206 / 0209	

## AUTHORISED DEALERS

WEST BENGAL		WEST BENGAL				
<b>Kolkata - Shakespeare Sarani</b> East India Agro Indus. Pvt. Ltd +91 9874977006 033-22824400; 22823300; 22903370	<b>Siliguri - Matigara</b> Riders Corner +91 9002223222					
<b>Krishna Nagar</b> Royal Automobile +91 8629961089	<b>Siliguri - 2nd Mile Sevoke Road</b> Siliguri Distributors +91 9775633225 0353-2778873; 2547457					
<b>Malda</b> Speed Wheels +91 9735586333	<b>Titagarh</b> Bishnu Oil Company +919874839911; 9051365511 033-25833353					
<b>Midnapore</b> Sri Sai Auto mart +91 9434043691 03222-275999						
<b>Raiganj</b> Kalyani Solvex Pvt. Ltd. +91 9775517444 03523-253016						

## PARTS STOCKIST DISTRIBUTOR

<b>Andhra Pradesh</b> <b>Vijayawada</b> Cyber Automobiles Pvt. Ltd +91 9959615806	<b>Gopalganj</b> Shri Harishankar Motors +91 9771880938 06156-223956	<b>Margoa</b> Saini Motors +91 8308808290 0832-2740343; 2740345	<b>JAMMU &amp; KASHMIR</b> <b>Jammu</b> Yahoo Technocra +91 9419191241	<b>Bangalore</b> Fixwheel Motors +91 9845949127
<b>Assam</b> <b>Guwahati</b> Chirag Enfield +91 8136051810 0361 2670293	<b>Patna</b> Moto Spares Pvt.Ltd +91 9097577727	<b>GUJARAT</b> <b>Ahmedabad</b> Shreeji Auto Traders +91 9173170931; 9724722282	<b>JHARKHAND</b> <b>Hazaribagh</b> Riders Point +91 9234343422	<b>Kolar</b> Jagadamba Automobiles +91 9972522111 +91 9066983741
<b>Guwahati</b> Pawan Automobiles +91 9864045473	<b>CHANDIGARH</b> <b>Chandigarh</b> Manchanda Autos +91 9915047010; 9988994000 0172-2630263	<b>JamNagar</b> New Chandra Motor Cycle House +91 9824211699	<b>Jamshedpur</b> Royal Auto Syndicate 72502-22283	<b>KERALA</b> <b>Aluva</b> Marikar Motors Ltd +81 9894744880
<b>Jorhat</b> Achharsingh Royal +91 9707522666	<b>CHATTISGARH</b> <b>Raipur</b> Nagorao Auto Engg Works Pvt. Ltd. +91 9165878692	<b>HARYANA</b> <b>Ambala</b> Royal Motors 0171-2545795	<b>Ranchi</b> Sri Nivas Automobiles +91 7763801824	<b>Calicut</b> Luha Automotives +91 7025106888 0495-2333533
<b>BIHAR</b> <b>Biharshariff</b> PNN Automobile +91 9135620008	<b>GOA</b> <b>Mapusa</b> Shauna Auto Agencies +91 8326520712	<b>Bhiwani</b> Sheoran Automobiles +91 7056732216 01664-252216	<b>Zittau</b> Arjun Automobiles +91 7282820788 +91 8935849216	<b>Ernakulam</b> JR & Sons +91 9447063679
<b>Chapra</b> Supriyam Automobiles +91 9128739999 06152-242999			<b>KARNATAKA</b> <b>Bangalore</b> Cyber Automobiles Pvt. Ltd +91 9448473078	<b>Kochi</b> Bhavani Auto Distributors +91 8086078173

## PARTS STOCKIST DISTRIBUTOR

<b>Trivandrum</b> Subha Auto Wares +91 9446562640	<b>Nagpur</b> Siddarth Spares +91 9373195554	<b>PUNJAB</b>	<b>Erode</b> Senthilmurugan Auto Parts +91 9894756567	<b>Lucknow-Transport Nagar</b> Moped House Pvt.Ltd +91 9696202669; 8795444497
<b>MADHYA PRADESH</b>	<b>Pune</b> Planet Spares +91 9371005335	<b>Amritsar</b> Gee Ess Enterprise +91 9878930900	<b>Madurai</b> Senthilmurugan Auto Parts +91 9500786567	<b>Lucknow</b> Varma Auto Sales +91 9335207393
<b>Indore</b> Royal Ventures +91 9589541950	<b>Pune</b> Shree Spares +91 9822377709	<b>Ludhiana</b> Amrik Singh & Co. +91 9915069033	<b>TELANGANA</b>	<b>UTTARAKHAND</b>
<b>Jabalpur</b> Bhawani Automobiles 094243-05880	<b>New Delhi</b> Kinematics Mktg (P) Ltd. +91 9654787802 011-41545025	<b>RAJASTHAN</b>	<b>Hyderabad</b> Cyber Automobiles Pvt. Ltd +91 7702143186	<b>Dehradun</b> Anamika Enterprises +91 9897615836
<b>MAHARASHTRA</b>	<b>ORRISA</b>	<b>Jaipur-Indra Bazar</b> Shubham Agencies +91 9680465973	<b>UTTAR PRADESH</b>	<b>WEST BENGAL</b>
<b>Aurangabad</b> Vinod Agency +91 9823336611	<b>Bhubaneshwar</b> Orissa Marketing Services +91 9437033935	<b>Jaipur-Transport Nagar</b> Shubham Agencies +91 9414067766	<b>Ghaziabad</b> Indian Automobiles +91 9999916346; 9899288337	<b>Kolkata</b> Auto Marketing Agencies +91 9830325490 033-22360642; 22360643
<b>Mumbai</b> Rajkamal Auto & Scooter Spares +91 9833985931	<b>Cuttack</b> Bullet Plus +91 9437037590	<b>TAMILNADU</b>	<b>Kanpur</b> Sareen Motors +91 9389629505	<b>Siliguri</b> Goyal Royal Spares +91 9434063334
<b>Mumbai</b> Ram Motor Cycle Co. +91 9920748891 022-27700394		<b>Chennai</b> Cyber Auto Parts +91 7358768669	<b>Lucknow-Kaiserbagh</b> Moped House Pvt.Ltd +91 7408555502 0522-4108704	
		<b>Chennai</b> Popular Motors Cycle Company +91 9698444568 044-43435365; 43435364		



---

## NOTES

---



# MOTORCYCLE INSTALLATION FORM

Dealer's Name											Date										
Place of Dealership											Dealer Code										
Engine No.											Coupon No.										
Chassis No.											Installation Date.										
Customer's Name											Taluk										
Door No. & Street											State										
Village / Town											STD Code										
District											Telephone Residence										
Pin Code											Motorcycle Regn. No.										
Telephone Office											Invoice No.										
E-mail address : if any											Delivery Note / Advice No.										

Age in Years				Monthly Household Income				Expected Average KMs Per Day				Mode of Purchase			
18-20 Yrs	AG 01			Below Rs. 10,000	ME 01			Lesser than 10 KMs	KM01			Cash	MP 01		
21-25 Yrs	AG 02			Rs. 10,000-20,000	ME 02			11 - 30 KMs	KM02			Bank Finance	MP 02		
26-30 Yrs	AG 03			Rs. 20,000-50,000	ME 03			13 - 15 KMs	KM03			Organised Company Finance	MP 03		
31-35 Yrs	AG 04			Above Rs. 50,000	ME 04			Above 50 KMs	KM04			Local Finance	MP 04		
												Loan from friends	MP 05		

Educational Qualification				Profession							
10th - 12th	CQ 01			BE	CQ 05			Private Company Employee	CP 01		
Diploma	CQ 02			MBBS	CQ 06			Government Employee	CP 02		
Graduate	CQ 03			CA	CQ 07			Sales Representative	CP 03		
Post - Graduate	CQ 04			MBA	CQ 08			Bank / Insurance Employee	CP 04		
								Software Engineer or IT / ITes Empls	CP 05		
								Public Sector Employee	CP 06		
								Farmer / Agriculturist	CP 07		
								Student	CP 08		
								Contractor	CP 09		
								Small Trader / Shopkeeper	CP 10		
								Businessman	CP 11		
								Doctor	CP 12		
								Lawyer	CP 13		
								Engineer	CP 14		
								Chartered Accountant	CP 15		
								Others (Please mention) :	CP 16		

Purpose of use			
Family Motorcycle	P 26	To Commute Res-College	P 31
Personal Motorcycle	P 27	To carry load business	P 32
To move around / as part of work / Business	P 28	To go around with friends	P 33
		No Specific Purpose / Received as Gift	P 34
Commute Between Residence and Office	P 29	For long distance/ leisure rides only	P 35
To run Family Errands	P 30	Any other	P 36

Usage Road Type			
Hilly Road		RT 01	
Plain Road		RT 02	
Kutcha Road		RT 03	
Highways Road		RT 04	
City Road Congested		RT 05	
City Road Non - Congested		RT 06	
Mixed type of Road		RT 07	

What was the major reason in deciding to purchase Royal Enfield's Motorcycle?			
Riding Comfort	SP 01		
Stability	SP 02		
Safety	SP 03		
Loading carrying Capacity	SP 04		
Image / Status	SP 05		
Fuel Consumption	SP 06		
Suggested by Friends	SP 07		
Suggested by Local Mechanics	SP 08		
To Cover Long Distance	SP 09		

Have you visited Royal Enfield website? Yes  No

For Office use- only

Motorcycle Installation Form (MIF) No.

What Motorcycle do you own now?

**Motorcycle**

First Time Two - Wheeler Buyer	FB 01	<b>HERO HONDA / HERO</b>		Yamaha SS 125	EY 13	Bajaj Pulsar 200 / 220	BA 15
<b>ROYAL ENFIELD</b>		HH CD 100 / CD 100 SS	HH 01	Yamaha SZX	EY 14	Ninja 250R	BA 16
Royal Enfield Bullet 350 (CI)	RE 01	HH Sleek	HH 02	Yamaha SZR	EY 15	Ninja 650R	BA 17
Royal Enfield Bullet DLX	RE 02	HH Splendor	HH 03	Yamaha FZ16	EY 16	KTM Duke	BA 18
Royal Enfield Bullet Campus	RE 03	HH Street / DLX	HH 04	Yamaha FZS	EY 17	<b>TVS - SUZUKI / TVS</b>	
Royal Enfield Machismo	RE 04	HH CBZ Drum / Disc / ES	HH 05	Yamaha Fazer	EY 18	TVS - Suzuki Max 100	TS 01
Royal Enfield Machismo A350	RE 05	HH Passion	HH 06	Yamaha YZF - R15	EY 19	TVS - Suzuki Max 100 R	TS 02
Royal Enfield Lightning	RE 06	HH Ambition 125 / 135	HH 07	Yamaha Enticer	EY 20	TVS - Suzuki Samurai	TS 03
Royal Enfield Lightning 535	RE 07	HH Super splendor	HH 08	Yamaha Above 500 cc	EY 21	TVS - Suzuki Shogun	TS 04
Royal Enfield Electra 4S	RE 08	HH Splendor Plus / NXG	HH 09	<b>KINETIC</b>		TVS - Suzuki Shaolin	TS 05
Royal Enfield Electra 5S	RE 09	HH Hunk / Extreme	HH 10	Kinetic KA 80	KE 01	TVS - Suzuki Fiero / ES	TS 06
Royal Enfield Thunderbird (LB)	RE 10	Hero Ignitor	HH 11	Kinetic K4 100	KE 02	TVS Sport	TS 07
Royal Enfield Bullet 350 UCE	RE 11	Hero Impulse	HH 12	Kinetic Challenger	KE 03	TVS Star City / DLX	TS 08
Royal Enfield Electra UCE	RE 12	Hero CD Dawn / DLX	HH 13	Kinetic GF Laser / 125 / 150	KE 04	TVS Max 4R	TS 09
RE Thunderbird Twin Spark	RE 13	Hero Splendor Pro	HH 14	Kinetic Aquila	KE 05	TVS Jive	TS 10
Royal Enfield Classis 350	RE 14	Hero Passion Pro	HH 15	Kinetic Stryker	KE 06	TVS Flame SR / DS	TS 11
Royal Enfield Classis 500	RE 15	Hero Glamour	HH 16	Kinetic Boss	KE 07	TVS Apache / RTR	TS 12
<b>SUZUKI MOTORCYCLE</b>		Hero Achiever	HH 17	Kinetic Velocity	KE 08	TVS Victor / GLX / GS	TS 13
Suzuki GW 250	SM 01	Hero CBZ Xtreme	HH 18	Kinetic Comet	KE 09	<b>LML</b>	
Suzuki Slingshot	SM 02	Hero Karizma / ZMR	HH 19	<b>BAJAJ</b>		LML Energy / FX	LM 01
Suzuki GS 150R	SM 03			Bajaj M80 / Major	BA 01	LML Adreno / FX	LM 02
Suzuki Heat	SM 04	<b>ESCORT YAMAHA / YM</b>		Bajaj KB 100 / RTZ	BA 02	LML Freedom DX / Prima / Topper	LM 03
Suzuki Zeus	SM 05	Escort Rajdoot	EY 01	Bajaj 4S Champion	BA 03	LML Graptor / Beamer	LM 04
Suzuki Above 500 cc	SM 06	Escort Ace	EY 02	Bajaj KB 125	BA 04		
<b>HONDA MOTORCYCLE</b>		Escort Yamaha RX 100	EY 03	Bajaj Boxer AT & CT	BA 05	<b>MAHINDRA</b>	
Honda Dream Yuga	HM 01	Escort Yamaha RX 135	EY 04	Bajaj Caliber / SM	BA 06	Mahindra Stallio	MA 01
Honda CB Twister	HM 02	Escort Yamaha RXZ	EY 05	Bajaj Acer 100	BA 07	Mahindra Macho	MA 02
Honda CB Shine	HM 03	Yamaha RX135(S5)	EY 06	Bajaj Pulsar 150 / 180	BA 08		
Honda CBF Stunner	HM 04	Yamaha YBX	EY 07	Bajaj Eliminator	BA 09		
Honda CB Unicorn	HM 05	Yamaha YD 125	EY 08	Bajaj Cageva CRX 3	BA 10		
Honda CB Unicorn Dazzler	HM 06	Yamaha Crux	EY 09	Bajaj Avenger	BA 11		
Honda CBR 150R	HM 07	Yamaha Libero	EY 10	Bajaj Platina 110/ 125	BA 12		
Honda CBR 250R	HM 08	Yamaha Gladiator	EY 11	Bajaj Discover 100 / 125 / 150	BA 13		
Honda Above 500 cc	HM 09	Yamaha YBR 110 / 125	EY 12	Bajaj Pulsar 135	BA 14		

**Scooters**

LML	SC 01	Bajaj	SC 02	Kinetic	SC 03	Piaggio	SC 04	Hero	SC 05	
TVS	SC 06	Suzuki	SC 07	Honda	SC 08	Yamaha	SC 09			

**Mopeds**

Bajaj	MD 01	TVS	MD 02	Escorts	MD 03	Hero Puch	MD 04			
Kinetic	MD 05	Hero Majestic	MD 06	Avanti	MD 07					

Car (Below 1000 cc)	CR 01	Car (1000 to 2000 cc)	CR 02	Car (Above 2000cc)	CR 03	Others	OT 01		
---------------------	-------	-----------------------	-------	--------------------	-------	--------	-------	--	--

The reason I have booked and willing to wait for a Royal Enfield is

I would rate my experience in this counter as-

TICK THE OPTION MOST SUITABLE	Definitely Agree	Agree	Maybe	Disagree	Definitely Disagree	TICK THE OPTION MOST SUITABLE	Excellent	Good	Could be better	Not good	Extremely Bad
Because it is my dream Motorcycle since childhood.						Attitude and Capability of people.					
There is no other 350cc Motorcycle.						Test ride.					
This kind of styling is not available on any other Motorcycle						Communication during waiting period.					
Because this is a Royal Enfield am willing to wait.						Ease of booking and other formalities.					
Other Reasons.						Motorcycle delivery and information given					

Customer's Signature & Date

Dealer's Signature & Rubber Stamp Seal

Format No. F/144/CS/03, Sep 2012 DLR/CS Copy

# ROYAL ENFIELD PRE-DELIVERY INSPECTION - THUNDERBIRD 500/350CC

Model :				Chassis No. :		
Dealer's Name :				Engine No. :		
Location:				Battery Number :		
Colour :				Key Number :		Date of PDI :
Battery Make :				Tyre Number :	Front :	Rear :
Aggregate	Area	Defect Code	Measure	Defect	Remarks	
Ch. No. / Engine No.	1 Engine / Motorcycle Number Details	DF	Same			
Connect Battery / Check Voltage	2 Battery Charging	D / NC /L	12.6 V BATTERY(Static)			
	3 5 mm Allen key notification in the battery top cover carrier & negative side.	NA				
Engine Oil	4 Replace oil & oil filter / Check Oil level (Loose three Drain Bolts)	EO-(Drained Oil Level)	2.5 Litres (Capacity is 2.75 Litres) -Loose three Drain Bolts to Drain Oil			
	5 Clean Oil Strainer	-	Clean			
Lock Operation	6 Ignition Cum steering/Side cover Lock/Fuel Tank Lock	H / LF / NW	Same			
Petrol	7 Fill Petrol	-	2.5 Litres			
Front Wheel	8 Caliper Mtg BOLT	LF(Hand Loose)	2.7 to 3.3 Kgm			
	9 Front Disc Brake	SG /RB				
	10 Front Wheel Rotation	T/ N	Check One Complete Tyre Rotation, Spokes Looseness & Runout			
	11 Front Mudguard Alignment	M / RB/SC	5 mm-Refer SOP			
	12 Front Wheel Nut	LF(Hand Loose )	6.3 0 to 7.7 Kgm			
	13 Front Tyre Condition (Check Tyre Line Seating)	WF	Good			
	14 Front Tyre Pressure	Less	22PSI			
	15 Front Brake Light LED	NW / F				
Clutch	16 Speedo sensor cable coupler connection & function	NW				
	17 Clutch Operation	H /J/SY	Smooth			
Handle Bar Controls & Electrical Switch Operations	18 Clutch Lever Free Play	EP / Less	2 - 3 mm			
	19 Accelerator Operation	SY/EP/LESS	Smooth			
	20 Lever Brackets Saddle Position	LF/R	Tight			
	21 Steering Movement	T /N	Free			
	22 Handle Bar Positioning	WF/LF/M	W.r.to Dot Punch			
	23 Lock Nut T- Stem	LF/ PO/R	4.5 to 5.5 Kgm			
	24 Electrical Switch Operation	NW / LF	No Defects			
Head Light inspection	25 Neutral Lamp	NW / F	No Defects			
	26 a) Low & High beam light	NW / F	No Defects			
Digital Instrument Cluster check up	27 b) FPL - L.E.D guide beam check up	NW / F	No Defects			
	28 Hazard Indication	NW	No Defects			
	29 Trip 'A' & Trip 'B' Check up	NW	No Defects			
	30 Clock timing check up	NW	No Defects			
	31 Service Reminder	NW	No Defects			
	32 Cluster illumination check up	NW	No Defects			
	33 Cluster - Tell Tale Functions	NW	No Defects			
	34 Low Fuel Indication	NW	No Defects			
	35 Battery indication	NW	No Defects			
	36 Side Stand Indication	NW	No Defects			

Aggregate	Area	Defect Code	Measure	Defect	Remarks
Fuel Tank	37 Fuel Tap Operation	H	Smooth / Main / Res		
	38 Fuel Leak	L	No Leak (Tank, TAP, Carb)		
	39 Fuel Tank Alignment vs Seat Alignment	M			
Seat	40 Rider Seat Lock Cable	H, NW			
	41 Pillion Seat Lock Cable	H, NW			
	42 Seat Cover Pasting	Po			
Rear Wheel	43 Rear Disc Brake Pedal Free Play	Less / EP	7 -10 mm		
	44 Tail light LED	NW /F			
	45 Brake Fluid maximum level check up in the rear Master Cylinder	LESS /EO			
	46 Routings of brake hose, twist or pinching of hose.	WF			
	47 Chain Tension	T / EP	20 -30 mm		
	48 Rear Wheel Rotation	T/ N	Check One Complete Tyre Rotation, Spokes Looseness & Runout		
	49 Rear Sprocket Mounting Screws	LF (Hand Loose )	2.5 to 3.3 kgm		
	50 Rear Mudguard Alignment	M, RB	8 mm -Refer SOP		
	51 Rear Tyre Pressure	Less	32PSI		
	52 Rear Tyre Condition (Check Tyre Line Seating)	WF	Good		
	53 Rear Shockabsorber Operation / Adjustment	H / SG	Smooth		
Swing Arm / Foot Rest	54 Rear Shocker Mounting Top & Bottom	LF(Hand Loose )	2.5 to 3.3 kgm		
	55 Swing arm mounting bolt	LF(Hand Loose )	6.5 to 7.5 kgm		
Aesthetics	56 Four Foot Rest Foldable Function	H			
	57 Mudguards - Paint Related	SC / PD / R / DN/DU/PO	No Defects		
	58 Fuel Tank - Paint Related	SC / PD / R / DN/DU/PO	No Defects		
	59 Side panel - Paint Related	SC / PD / R / DN/DU/PO	No Defects		
	60 Powder Coated Parts (Scratch/ Rust / Chipped OFF)	SC/R/PO/DU	No Defects		
	61 Plated Parts (Scratch/ Rusty)	SC / R / PO	No Defects		
Others	62 Indicators Alignment	M	No Defect		
	63 Nuts, bolts, fasteners (Torque)	LF	Tight (Right, Left Cover / Engine Foundation / Accessories/ Wheel Nut)		
	64 Owner's Manual & Tool Kit Content	-	-		
Test Ride	65 Spare fuse in fuse carrier	NA	-		
	66 Starting (Kick Start / Self Start)	ST / N	Easy Start		
	67 Pulling	P	Straight		
	68 Motorcycle Vibration	V	Smooth		
	69 Front Wheel Wobbling	W	Rim Run Out & Face Out Value - 0.8 mm		
	70 Rear Wheel Wobbling	W	Rim Run Out & Face Out Value - 0.8 mm		
	71 Center Stand & Side Stand Operation	H/ N	Smooth		
	72 Fork Noise	N	No Defects		
	73 Engine Performance / Gear Shifting	N /V/ ST / H/SK/L / NW	Smooth		
	74 Any Rattling / Squeaking Noise	N/ V/ LF	Nil (Silencer/Accessories / Body Parts / Suspension)		
	75 Cam Noise / Top End Noise	N	Smooth		
<b>Note **</b>	<b>Any Abnormal / Crtical Issues / Noise / Engine Open cases during PDI Inform to Plant</b>				<b>Format No :F/14A/CS/02</b>

### INSTRUCTIONS

- |   |   |
|---|---|
| <ol style="list-style-type: none"> <li>1. Check the motorcycle thoroughly for any transit damages or shortage of parts.</li> <li>2. Carry out all jobs listed under Pre-Delivery Inspection Schedule.</li> <li>3. Thoroughly road - test the motorcycle for performance.</li> </ol> | <ol style="list-style-type: none"> <li>4. Please ensure delivery of the motorcycle in brand new condition.</li> <li>5. Claim transit loss and damage through 'TRANSIT' insurance only.</li> <li>6. Claim Parts replaced for Manufacturing defects only under warranty.</li> </ol> |
|---|---|

Misalignment	Noise	Vibration	Leak	Starting Trouble/Missing	Less	Wobbling	Loose Fitment	Discharging	Tight	Fused	Scratch	Pulling	Dent	Wrong Filment	Hard	Jerking
M	N	V	L	M	LESS	W	LF	D	T	F	SC	P	DN	WF	H	J
Excess Play	Different	Spongy	Sticky	Not Available	Smoke	Adjustment	Not Working	Paint Defect	Rust	Peel Off	Dull	Dent	Excessive Oil	Rubbing	Not Charging	
EP	DF	SG	SY	NA	SK	AD	NW	PD	R	PO	DU	DN	EO	RB	NC	

## ROYAL ENFIELD

### MOTORCYCLE INSTALLATION CONFIRMATION BY CUSTOMER

We congratulate you on becoming a proud owner of Royal Enfield motorcycle. We request you to give this feedback after completion of the delivery process.

		YES	NO
1	Motorcycle Documents explained (Invoice, Insurance, RC / Road Tax Receipt)		
2	Owner's Manual received		
3	Recommended Lubricants explained		
4	Maintenance Schedule sheet in Owner's Manual shown and explained		
5	Next Free Service due explained		
6	All Free / Paid Services explained		
7	Warranty Guidelines explained		
8	"Running in Period" details shown in the manual explained		
9	Service Center Address given and Location explained		
10	Service Incharge Name & Mobile No given		
11	Motorcycle delivered in neat and clean condition		
12	Tools & First Aid Kit received and explained		

		YES	NO
13	Control Switches & Disc Brake System usage explained		
14	Fuse Box location shown and explained		
15	Recommended Tyre Pressure explained		
16	Motorcycle starting & Gear shifting procedure explained		
17	Quantity of Fuel in Fuel Tank informed		
18	Motorcycle orientation & short distance drive provided		
19	Date and Time of Installation		
20	Name of Person who did Installation		
Suggestions If Any:		CUSTOMER SIGNATURE	
Model:		Registration No.:	
Chassis No.:			
<b><i>We thank you and request you to return this filled up form to the person who did the motorcycle installation for you</i></b>			
<b><i>KEEP RIDING</i></b>			

**FORM 22**

*[See Rules 47(g), 115, 124 (2), 126A and 127 (1), 127 (2)]*


**INITIAL CERTIFICATE OF COMPLIANCE WITH POLLUTION STANDARDS,  
SAFETY STANDARDS OF COMPONENTS AND ROAD WORTHINESS**

Certified that the following vehicle complies with the provisions of the Motor Vehicles Act, 1988, and the rules made there under, including the following mass emission norms:

Brand name of the vehicle : Thunderbird 500  
Chassis number :  
Engine number/motor number :  
(in case of battery operated vehicles)  
Sub-rule No. of rule : 115(2)(i), 115(14)(F)  
Emission norms : **Bharat Stage III**  
[Bharat Stage-I/II/III/Bharat (Trem) Stage-III etc.]

Date :

For **ROYAL ENFIELD**




Quality Assurance





**THUNDERBIRD 500 ENTHUSIAST  
MOTORCYCLE OF THE YEAR  
250CC TO 500CC**

**ET ZIGWHEELS  
AWARDS 2012**



**THUNDERBIRD 500  
MOTORCYCLE OF THE YEAR  
ABOVE 250CC**

**CAR INDIA & BIKE INDIA  
AWARDS 2013**



**ROYAL ENFIELD**

Part No. 594069/B

[ROYALENFIELD.COM](http://ROYALENFIELD.COM)