# 

For Bullet 350 / Bullet 350 ES

# FOREWORD

More Power, Love and Respect. The all-new Bullet 350 / Bullet 350-ES features a modern Unit Construction engine with 5 gears on the left. Easier to ride, more torque and no maintenance trouble.

This manual is designed to give you complete control over your motorcycle. It contains important information on efficient operation and maintenance. We've also included tips on riding safely, as well as suggestions to enhance your motorcycling experience.

Your safety is of prime concern to us and we urge you to be a responsible rider. Please select your riding gear carefully in accordance with your terrain, style and weather conditions. And ensure the same for your pillion rider as well. Respect the law of the land and ride safe.

Finally, we welcome you to the Royal Enfield community. You can locate your nearest club or sign up for the next big ride at www.royalenfield.com

The legend rides on.

# NOTICE

All information in this manual is based on the latest product information available at the time of publication. Due to continuous improvements, there may be discrepancies between the information in this manual and your motorcycle. Royal Enfield reserves the right to make production changes at any time without prior notice and without incurring any obligation to make the same or similar changes to motorcycles previously built or sold.

All images shown are for reference to explain and need not to be exactly the same on the model you own. Technical specifications are subject to change without prior notice.

# NOTE: BS III This motorcycle meets Emission Norms - Bharat (Trem) Stage - III

"© Copyright 2016 Royal Enfield (A unit of Eicher Motors Ltd.). All Rights Reserved. No part of this manual shall be copied, distributed or otherwise dealt without the express permission in writing of Royal Enfield".

### Contact Us:

Royal Enfield Support : 1800-2100-007 Email : support@royalenfield.com Twitter : @RoyalEnfieldSupport Web : www.royalenfield.com

Part No. 590882/A / Qty. 9000 / Nov. '16

# CONTENTS

| Personal and Motorcycle Information | 4  | Long Trip |
|-------------------------------------|----|-----------|
| Technical Specifications            | 5  | Washing   |
| Recommended Lubricants              | 8  | Storage F |
| Safety Definitions                  | 9  | Trouble S |
| Motorcycle Identification Numbers   | 10 | Warranty  |
| Location of Key Parts               | 11 | Emission  |
| Operation of Controls               | 14 | Service C |
| Pre-Operational Checks              | 16 | Paid Serv |
| Safe & Happy Riding                 | 17 | Regional  |
| Running in Period                   | 18 | Authorise |
| Starting                            | 19 | Notes     |
| Gear Shifting, Riding & Stopping    | 20 | Annexu    |
| Parking                             | 21 | Motorcy   |
| Periodical Maintenance Chart        | 22 | Pre-Deli  |
| Tools & First Aid kit               | 25 | Motorcy   |
| Minor Maintenance Tips              | 26 | Form 2    |
|                                     |    | 3         |
|                                     |    |           |

| 1 | Long Trip Precautions                          | 35  |
|---|--|-----|
| 5 | Washing Procedure                              | 36  |
| 3 | Storage Precautions                            | 37  |
| > | Trouble Shooting                               | 38  |
| ) | Warranty Terms & Conditions                    | 39  |
|   | Emission Warranty                              | 41  |
| 1 | Service Coupons                                | 44  |
| ò | Paid Service & Maintenance Record              | 59  |
| 7 | Regional & Area Offices                        | 61  |
| 3 | Authorised Dealer Address                      | 62  |
| > | Notes  | 80  |
| ) | Annexures                                      |     |
|   | Motorcycle Installation Form                   |     |
| 2 | Pre-Delivery Inspection Report                 |     |
| 5 | Motorcycle Installation Confirmation By Custor | ner |
| 5 | Form 22  |     |

# PERSONAL & MOTORCYCLE INFORMATION

| Name            |  |     |  |  |  |  |             |    |  |  |    |      |     |   |  |                |     |     |   |  |  |  |  |  |  |  |
|-----------------|--|-----|--|--|--|--|-------------|----|--|--|----|------|-----|---|--|----------------|-----|-----|---|--|--|--|--|--|--|--|
| Door No./Street |  |     |  |  |  |  |             |    |  |  |    |      |     |   |  |                |     |     |   |  |  |  |  |  |  |  |
| Locality        |  |     |  |  |  |  |             |    |  |  |    |      |     |   |  |                |     |     |   |  |  |  |  |  |  |  |
| City            |  |     |  |  |  |  |             |    |  |  | St | ate  |     |   |  |                |     | Pir | l |  |  |  |  |  |  |  |
| Contact Nos.    | R                                      | es: |  |  |  |  | Of          | f: |  |  | M  | lobi | ile | : |  |                | Emo | ail | : |  |  |  |  |  |  |  |
| Engine No.      |  |     |  |  |  |  |             |    |  |  |    |      |     |   |  | Battery No     | ).  |     |   |  |  |  |  |  |  |  |
| Frame No.       |  |     |  |  |  |  |             |    |  |  |    |      |     |   |  | Battery make   |     |     |   |  |  |  |  |  |  |  |
| Reg. No.        |  |     |  |  |  |  |             |    |  |  |    |      |     |   |  | Licence No     | ).  |     |   |  |  |  |  |  |  |  |
| Date of Sale    |  |     |  |  |  |  |             |    |  |  |    |      |     |   |  | Valid till dt. |     |     |   |  |  |  |  |  |  |  |
| Model           |  |     |  |  |  |  |             |    |  |  |    |      |     |   |  | Key No. :      |     |     |   |  |  |  |  |  |  |  |
| Tyre make       |  |     |  |  |  |  |             |    |  |  |    |      |     |   |  | Colour         |     |     |   |  |  |  |  |  |  |  |
| Sold by         |  |     |  |  |  |  | Dealer Code |    |  |  |    |      |     |   |  |                |     |     |   |  |  |  |  |  |  |  |
| Motorcycle Inst | Motorcycle Installation Form (MIF) No. |     |  |  |  |  |             |    |  |  |    |      |     |   |  |                |     |     |   |  |  |  |  |  |  |  |

# TECHNICAL SPECIFICATIONS

# ENGINE

| Engine Type           | Single Cylinder 4 Stroke, Air cooled               |
|-----------------------|--|
|                       | 0 1  |
| Bore                  | 70mm   |
| Stroke                | 90mm   |
| Swept volume          | 346cc  |
| Compression ratio.    | 8.5:1  |
| Max. Power BHP@RPM    | 19.8@5250  |
| Max. Torque in NM@RPM | 1 28@4000  |
| Idle RPM              | 1050 <u>+</u> 200                                  |
| Starting              | Kick Start (Bullet 350)<br>E-Start (Bullet 350-ES) |
| Air filter element    | Paper element                                      |
| Lubrication           | Wet sump, Forced lubrication                       |
| Engine oil capacity   | 2.75 litres (First Fill only)                      |
|                       | 2.30 to 2.50 litres (subsequent refills)           |
| Engine oil grade      | Royal Enfield 15W50 API SL (JASOMA)                |
| Cooling               | Natural air flow                                   |

|   | IGNITION SYSTEM  |  |
|---|--|--|
|   | Ignition system  | Digital Dual Spark Ignition,<br>TCI System   |
|   | Spark plug Electrode gap   | 0.70 to 0.80 mm  |
|   | Spark plug   | W5DC M14 (Bosch) &   |
|   |  | UR5DC M10 (Bosch)  |
|   | TRANSMISSION   |  |
|   | Clutch<br>Primary drive<br>Primary ratio<br>Gear box<br>Gear Ratio | Wet multiplate (6 plates)<br>Duplex chain<br>2.15 : 1<br>Constant Mesh, 5 Speed<br>1 <sup>st</sup> 3.06:1<br>2 <sup>nd</sup> 2.01:1<br>3 <sup>rd</sup> 1.52:1<br>4 <sup>th</sup> 1.21:1<br>5 <sup>th</sup> 1:1 |
| _ | Final drive<br>Final Ratio<br>Drive Chain links                    | 15 Teeth (Sprocket)<br>2.533:1<br>100 links  |

# TECHNICAL SPECIFICATIONS

# CHASSIS

| Frame<br>Suspension | Tubular  |
|---------------------|--|
| Front               | Telescopic, hydraulic damping,<br>Stroke 130 mm                  |
| Rear                | Swing arm with<br>shockabsorbers, Stroke 80mm                    |
| Brakes              |  |
| Front Drum          | 7" mech. drum brake, Twinlead<br>internal expanding (Bullet 350) |
| Front Disc          | Hydraulic 280mm ventilated<br>disc. (Bullet 350-ES)              |
| Rear                | Foot operated 153 mm single<br>lead, internal expanding          |
| Tyre size           |  |
| Front               | 3.25×19 4/6 PR   |
| Rear                | 3.25×19 4/6 PR   |
| Tyre Pressure       |  |
| 2010                | $20 \text{ mai/} 1 \text{ l} \text{ lrg/m}^2$                    |
| Front               | 20 $psi/1.41 kg/cm^2$  |
| Rear                | 30 psi/2.21 kg/cm <sup>2</sup>                                   |

# With Pillion

| 22 psi/1.55 kg/cm <sup>2</sup>   |  |  |  |  |  |  |  |  |  |
|--|--|--|--|--|--|--|--|--|--|
| 32 psi/2.20 kg/cm <sup>2</sup>   |  |  |  |  |  |  |  |  |  |
| In built   |  |  |  |  |  |  |  |  |  |
| 13.5 litres approx. *  |  |  |  |  |  |  |  |  |  |
| 3.8 <u>+</u> 0.3 litres approx. *  |  |  |  |  |  |  |  |  |  |
| * The above values are approximate and the actual fuel filling capacity will vary from the values mentioned. |  |  |  |  |  |  |  |  |  |
|  |  |  |  |  |  |  |  |  |  |
|  |  |  |  |  |  |  |  |  |  |
| Alternator   |  |  |  |  |  |  |  |  |  |
| Alternator<br>12V - DC (III Phase)<br>12V - AC / DC (I Phase)  |  |  |  |  |  |  |  |  |  |
| 12V - DC (III Phase)   |  |  |  |  |  |  |  |  |  |
| 12V - DC (III Phase)<br>12V - AC / DC (I Phase)<br>12V - 8 Ah MF   |  |  |  |  |  |  |  |  |  |
| 12V - DC (III Phase)<br>12V - AC / DC (I Phase)<br>12V - 8 Ah MF<br>12V - 5 Ah (I Phase)                     |  |  |  |  |  |  |  |  |  |
|  |  |  |  |  |  |  |  |  |  |

# TECHNICAL SPECIFICATIONS

| Speedometer lamp       | 12V, 3.4W                    |
|------------------------|------------------------------|
| Hi beam indicator .    | 12V, 2W                      |
| Neutral lamp tell tale | 12V, 2W                      |
| Turn signal tell tale  | 12V, 2W                      |
| Turn signal            | 12V, 10W                     |
| Horn                   | 12V, 2.5 Amp (Max.)          |
| Starter Motor          | 12V, 0.70 KW (Bullet 350-ES) |

# WARNING

WARNING Using bulbs / other electrical gadgets other than specified rating may lead to over loading/erratic behaviour/premature failure of electrical system.

Modifications on the motorcycle which are not approved by Royal Enfield may not only disqualify for warranty, but also affects performance of the motorcycle.

| DIMENSIONS           |                          |
|----------------------|--------------------------|
| Length               | 2140 mm (Bullet 350)     |
|                      | 2160 mm (Bullet 350-ES)  |
| Width                | 800 mm (Bullet 350)      |
|                      | 810 mm (Bullet 350-ES)   |
| Height               | 1120                     |
| Wheel base           | 1370 mm                  |
| Ground clearance.    | 135 mm                   |
| Saddle Height        | 800 mm                   |
| WEIGHTS              |                          |
| Kerb weight (90% fue | el&oil)                  |
| E-Start              | 187 Kgs. (Bullet 350-ES) |
| Kick Start .         | 180 Kgs. (Bullet 350)    |
| Max. Pay load        | 170 Kgs. (Bullet 350)    |
|                      | 163 Kgs. (Bullet 350-ES) |

- Values / Dimensions given above are for your guidance only.
- In view of continuous improvements being done on our products, the specifications are likely to change without prior notice.

# **RECOMMENDED LUBRICANTS**

|          | Engine Oil   |             |                   | CAUT                          |
|----------|--|-------------|-------------------|-------------------------------|
| Grade    | Royal Enfield 15 W<br>Engine Oil<br>(JASO MA)              | 7 50 API SL |                   | Use of<br>parts c             |
|          | (JASO IVIA)  |             | AURE S            | NOTE                          |
|          |  |             |                   | Recom                         |
| Capacity | 2.75 Ltrs. (First Fill                                     | only)       |                   |                               |
|          | 2.30 to 2.50 Ltrs. (d                                      | 0           | Asper             |                               |
|          | element replacem   | nent in per | iodical           | System                        |
|          | maintenance)   |             |                   | Engine                        |
| Fre      | ont Fork Oil   | Brake       | Fluid             | used of                       |
| Grade    | Royal Enfield Front<br>Fork Oil (or 1F<br>Grade Endurance) | Grade       | DOT 3 or<br>DOT 4 | In case<br>old/rer<br>dispose |
| Capacity | 195 ml/leg   | Capacity    | 60ml              | Similar<br>Tubes,             |

DO NOT Mix DOT 3 & DOT 4 brake fluid together.

### ION

Wrong grade oil will reduce the life of the moving and seriously affect performance

nmendation subject to change without notice.

### ISO 14001 Operation Control Process

the guidelines in the ISO 14001 Environmental Management m, customers are advised to carry out timely replacement of e, Front Fork and Brake oils, ONLY through a Royal Enfield prised Dealer / Service Center for the safe disposal of the oils to prevent Environmental pollution.

se the oils are replaced privately, it is advised to ensure the emoved oils are collected carefully and reached to a certified sal agency, nearest to you to safely disposing the oils.

arly, hazardous wastes such as old/discarded Batteries, Tyres, , Cables, Gaskets, Oil filters etc. should also be disposed off carefully and properly only through a certified disposal agency.

# SAFETY DEFINITIONS

The information given under the titles : Warning, Caution and Note are for your safety and for the care and safety to your motorcycle and others. Please read these carefully and if disregarded may result in injury to yourself or others and damages to the motorcycle.

# **WARNING**

Indicates a potentially hazardous situation. Disregarding this message may result in injury to rider or other persons.

# CAUTION

This message if disregarded may result in damage to the motorcycle.

### NOTE

Indicates important and useful messages for clearer understanding.

All Images shown in subsequent pages are for reference to explain and need not to be exactly the same on the model you own. 9

# MOTORCYCLE IDENTIFICATION NUMBERS

FRAME NUMBER

Punched on steering head tube right side.




ENGINE NUMBER

Punched on crankcase left top side.




# LOCATION OF KEY PARTS - TOP VIEW

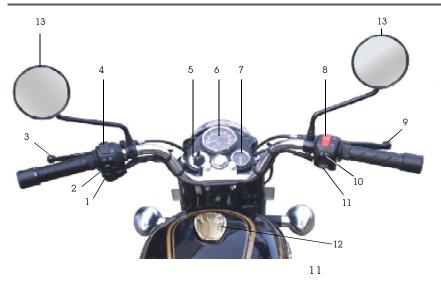


- 1. Horn Button
- 2. Turn Signal Switch
- 3. Clutch Lever Left
- 4. Head Lamp Dip Switch
- 5. Ignition Switch
- 6. Speedo Meter
- 7. Ammeter
- 8. Engine Kill Switch
- 9. Brake Lever Front
- 10. Pilot & Head Lamp Switch
- 11. E-Start Switch (only for Bullet 350-ES)
- 12. Fuel Tank Cap
- 13. Rear View Mirrors

# LOCATION OF KEY PARTS - RIGHT SIDE VIEW

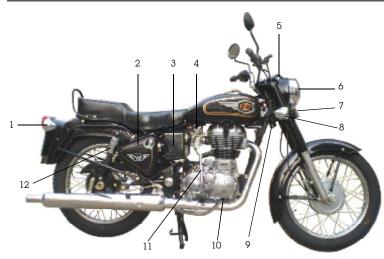

- 1. Right Trafficator Rear
- 2. Air filter Box Right
- 3. Resonator Box
- 4. Carburetor
- 5. Pilot Lamp Right
- 6. Head Light
- 7. Number Plate Front
- 8. Right Trafficator Front
- 9. Steering lock
- 10. Brake Pedal
- 11. Kick Start Lever
- 12. Shockabsorber Rear

# LOCATION OF KEY PARTS - LEFT SIDE VIEW

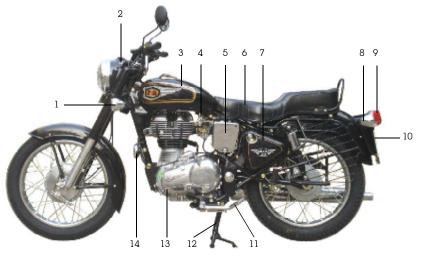

13

# 1. Left Trafficator Front

- 2. Pilot Lamp Left
- 3. Fuel Tank
- 4. Fuel Tap
- 5. Battery Box Cover
- 6. Seat
- 7. Left Electricals & Tool Box
- 8. Left Trafficator Rear
- 9. Tail Lamp
- 10. Number Plate Rear
- 11. Side Stand
- 12. Center Stand
- 13. Gear Shift Lever
- 14. Horn

# **OPERATION OF CONTROLS**

# STEERING LOCK

- Turn Clockwise to lock
- Turn Anticlockwise to Unlock

# FUEL TANK CAP

# OPEN

- Turn Key Clockwise & lift the lid CLOSE
- Gently press lid till it "click" into lock position.

### FILTER / ELECTRICAL / BOXES


Turn anti clockwise to open

### BATTERY BOX

■ Turn anti clockwise to open

# IGNITION SWITCH

NOTE





- Key is common for ignition, petrol tank cap, steering lock, battery cover and tool boxes.
- Key can be removed only in locked position from fuel tank, Filter box, Electrical boxes locks in "OFF" position from Ignition switch.
- Turn handle bar to extreme left, before attempting to lock steering.

ENGINE STOP SWITCH



E-START SWITCH (BULLET 350-ES)

() Depress & hold till engine starts





# OPERATION OF CONTROLS

### HORN

# Press

# HEAD LIGHT SWITCH

 $\rightarrow O$  Head Lamp ON

P Pilot ON



DIMMER SWITCH

High beam Low beam

# DAY FLASH

Press for Head Light Flash



# TURN SIGNAL SWITCH

📛 Left turn signal ON

☐ OFF (Push to off) ⇒ Right turn signal ON

# CHOKE

ON OFF

# CAUTION



Choke should be used only to start engine in cold climates (less than 20°C) or first time in the morning. Riding with the Choke "ON" will result in Engine Misfiring, Erratic behaviour, High fuel consumption, and increased Emission values.

# FUEL TAP

- CFF OFF
- 🕕 Main ON
- Î Reserve ON





# PRE OPERATIONAL CHECKS

# CHECK FOR

- 1. Petrol level in the tank and leakage if any.
- 2. Smooth operation and free play in Front and Rear Brake levers.

Front Brake

### Rear Brake



- 3. Free play and smoothness of all operating controls.
- 4. Free movement of steering
- 5. Any cuts, cracks in the tyre and correct tyre pressure.

- 6. Operation of all electrical equipments.
- Brake Fluid level is above the "MIN" mark in the master cylinder (Disc Brake models)
- 8. Engine Oil Level is between "MAX & MIN" Level.





### NOTE

Start engine, run for 2 minutes before checking Engine Oil Level

# SAFE & HAPPY RIDING

### RIDING DRESS

- A proper riding apparel
- Proper Riding Boots
- Soft Leather Gloves
- Goggles or spectacles
- An ISI Certified helmet. (Affix light reflecting strips of stickers on the front and rear of the helmet for good visibility at night).

### NOTE

A light coloured shirt enables greater visibility to other road users especially during nights.

# CAUTION

Loose clothing may get caught on moving parts of the motorcycle.

### SITTING POSTURE

Correct sitting posture is a must for stable and safe riding

- Sit Straight with your shoulders completely relaxed.
- Keep your elbows close to your body.
- Hold the handle grip close to its inner end.
- Slightly grip the fuel tank with the knees.
- Keep your toes in "straight ahead" direction.
- Before turning, look extensively in the rear view mirror, without turning your head.

### BRAKING

- Use both front and rear brakes simultaneously for maximum braking efficiency.
- While riding on wet or bad road conditions use brakes cautiously.

# **WARNING**

Applying any one of the brakes suddenly may cause the motorcycle to skid.

# RUNNING IN PERIOD

The Royal Enfield Motorcycle as you would be experiencing, is capable of consistent high speeds. However as with any new motorcycle, a "RUNNING-IN" procedure is essential to help in proper "Bedding-In" of the various moving parts in your motorcycle and to ahieve optimum performance subsequently.

- 1. During the first 2000 Kms of run, do not exceed the speed limits as shown in the table below.
- 2. Do not exceed maximum specified pay load.
- 3. Warm up the engine for a few minutes at idling speed to allow engine oil to lubricate all the moving parts in the engine before riding the motorcycle.
- 4. Avoid full throttle operation and do not ride at constant throttle continuously. Vary the speed by 10% while riding.
- 5. Avoid sudden accelerations and racing starts.

| Motorcycle<br>Gear Speed | First 500 kms. | 501 - 2000 kms. |  |  |  |  |  |
|--------------------------|----------------|-----------------|--|--|--|--|--|
| 1                        | 15 KMPH        | 20 KMPH         |  |  |  |  |  |
| 2                        | 25 KMPH        | 30 KMPH         |  |  |  |  |  |
| 3                        | 30 KMPH        | 40 KMPH         |  |  |  |  |  |
| 4                        | 45 KMPH        | 55 KMPH         |  |  |  |  |  |
| 5                        | 60 KMPH        | 70 KMPH         |  |  |  |  |  |

# STARTING

Ensure Gear is in Neutral position and the Neutral lamp is glowing in the speedometer. To shift into neutral, move the motorcycle back and forth gently, while simultaneously shifting the gear.

# CAUTION

Do not attempt to shift gears without moving the motorcycle back and forth as it will damage the gears mechanism.

 Turn fuel tap to 'ON' "RESERVE" Position.



- Use choke if required in cold climatic conditions (below 20°C)
- Switch ON Ignition and the Stop Switch to "RUN" Position.

# USING THE KICK START LEVER

- Slowly Crank Engine with the Kickstarter lever till a resistance is felt in the lever. Slightly crank slowly and further till the compression eases over.
- Release Kickstarter lever to enable it to come to its top resting position.
- Apply a powerful swinging Kick on the lever to start the engine. It may be necessary to open the throttle, very slightly, when starting on choke/first time in the morning.
- Release Choke if applied and allow Engine to run at idling speed for a few minutes.

### USING ELECTRIC START (BULLET 350-ES)

- Depress and Hold the Clutch Lever.
- Press Starter Button and hold till Engine starts. Do not release the button before Engine starts.





# GEAR SHIFTING, RIDING & STOPPING

### NOTE

- Release the Starter button as soon as the Engine starts.
- If Engine does not start, wait for 30 seconds before pressing the starter switch.
- A Clutch switch is provided in the system for the safety of the rider. When the motorcycle is in gear, the motorcycle cannot be started. To start in gear depress the clutch lever and press Starter button to start engine.
- Warm up engine for 2 minutes.
- Depress clutch lever.
- Press gear pedal with toe to engage 1<sup>st</sup> gear.
- Gently open throttle and release clutch lever simultaneously. If clutch is released suddenly, the engine may stall and cause the motorcycle to move with a jerk.
- To shift to 2<sup>nd</sup> and higher gears close throttle, depress clutch lever and press the gear pedal with heel.



To stop the motorcycle, close throttle, apply front and rear brakes. Simultaneously, shift gears into neutral just before the motorcycle comes to a complete stop.

- Turn the ignition switch to 'OFF' position.
- Turn fuel tap 'OFF'







# PARKING

# PARKING MOTORCYCLE ON CENTER STAND

- Select a firm, flat surface.
- Hold handle bar straight.
- Lower center stand, such that, both the legs of the stand are resting on firm ground.
- Apply pressure on the fulcrum lever on the center stand and pull motorcycle backward.



### PARKING MOTORCYCLE ON SIDE STAND

- Select a firm, flat surface.
- Extend side stand. Tilt the motorcycle to the left, till it is supported firmly.



# **WARNING**

Ensure both the stands are retracted fully before riding the motorcycle.

Please exercise extreme care while parking and ensure it is parked firmly to avoid the motorcycle from falling over and causing injury to you or to others and damage to the motorcycle parts.



# PERIODICAL MAINTENANCE

The maintenance schedule detailed here will help you maintain your Bullet 350 / Bullet 350-ES Motorcycle meticulously and to get a long trouble free service. The schedule provided herein is based upon average riding conditions and indicates the Kms at which regular inspections, adjustments, replacements and lubrications are to be carried out. The frequency of the maintenance must be shortened depending upon the severity of the driving condition or if the motorcycle is used in a very dusty environment. Contact the nearest Royal Enfield Authorised Dealer / Service Center for expert advice and to carry out the required maintenance.

| S1.<br>No. | DESCRIPTION   |  | EE S<br>hevei |   | I <b>CE</b><br>arlier | PAID SERVICE |    |    |    |    |    |    |  |
|------------|---|--|---------------|---|-----------------------|--------------|----|----|----|----|----|----|--|
|            | Kms (x 1000)  | 0.5  | 3             | 6 | 9                     | 12           | 15 | 18 | 21 | 24 | 27 | 30 |  |
|            | Months  | 1.5  | 3             | 6 | 9                     | 12           | 15 | 18 | 21 | 24 | 27 | 30 |  |
| 1          | Engine Oil  | R  | Ι             | R | Ι                     | R            | Ι  | R  | Ι  | R  | Ι  | R  |  |
| 1          | Engine Oil  | Check level at every 1000 Kms or earlier as required |               |   |                       |              |    |    |    |    |    |    |  |
| 2          | Engine oil filter element   | R  |               | R |                       | R            |    | R  |    | R  |    | R  |  |
| 3          | Engine sump filter (oil strainer)   | С  |               | С |                       | С            |    | С  |    | С  |    | С  |  |
| 4          | Magnetic drain plug under gear box and secondary drain plug under crankshaft in crankcase right | С  |               | С |                       | С            |    | С  |    | С  |    | С  |  |
| 5          | Spark plug - 2nos.  | А  | А             | Α | Α                     | А            | R  | А  | А  | А  | А  | R  |  |
| 6          | HT leads for crack  |  | Ι             | Ι | Ι                     | Ι            | Ι  | Ι  | Ι  | Ι  | Ι  | Ι  |  |
| 7          | Air filter paper element  | С  | С             | C | С                     | R            | С  | С  | С  | R  | С  | С  |  |

# PERIODICAL MAINTENANCE

| S1.<br>No. | DESCRIPTION   |  | FREE SERVICE<br>whichever is earlier |   |   | PAID SERVICE |    |    |    |    |    |    |
|------------|---|--|--------------------------------------|---|---|--------------|----|----|----|----|----|----|
|            | Kms (x 1000)  | 0.5  | 3                                    | 6 | 9 | 12           | 15 | 18 | 21 | 24 | 27 | 30 |
|            | Months  | 1.5  | 3                                    | 6 | 9 | 12           | 15 | 18 | 21 | 24 | 27 | 30 |
| 8          | Carburetor*   |  | *Clean, Inspect and Tune             |   |   |              |    |    |    |    |    |    |
| 9          | Fuel Filter in Fuel Tap                                 | С  |                                      | С |   | С            |    | С  |    | С  |    | С  |
| 10         | Fuel hose / pipe  | Ι  | Ι                                    | Ι | R | Ι            | Ι  | R  | Ι  | Ι  | R  | Ι  |
| 11         | Accelerator, TPS & carburetor cable play Adjustment     | А  | А                                    | Α | А | А            | Α  | А  | R  | А  | Α  | А  |
| 12         | Rubber hose, Air filter to Carburetor                   | Ι  | Ι                                    | Ι | Ι | R            | Ι  | Ι  | Ι  | R  | Ι  | Ι  |
| 13         | Rubber hose, Inlet manifold                             | Ι  | Ι                                    | Ι | Ι | R            | Ι  | Ι  | Ι  | R  | Ι  | Ι  |
| 14         | Inlet / Exhaust valve seating (compression test)        |  |                                      |   |   | Ι            |    |    |    |    | Ι  |    |
| 15         | Cylinder head (Combustion chamber)                      |  |                                      |   |   |              |    |    |    |    |    | D  |
| 16         | Clutch cable / Lever free play                          | Adjust every 1000 Kms or earlier as required   |                                      |   | 1 |              |    |    |    |    |    |    |
| 17         | Rear brake pedal pivot                                  | L  | L                                    | L | L | L            | L  | L  | L  | L  | L  | L  |
| 18         | Battery terminals (apply petroleum jelly)               | С  | С                                    | С | С | C            | C  | C  | С  | C  | С  | С  |
| 19         | Battery Electrolyte level (only for 12V 5 Ah batteries) | Ι  | Ι                                    | Ι | Ι | Ι            | Ι  | Ι  | Ι  | Ι  | Ι  | Ι  |
| 20         | Earth wire eyelet contact                               |  |                                      |   |   | I            |    |    |    |    |    | Ι  |
| 21         | Rear Wheel Drive Chain                                  | Lubricate & Adjust every 1000 Kms \ Clean, Lubricate<br>& Adjust every 3000 Kms or earlier as required |                                      |   |   |              |    |    |    |    |    |    |

\* Refer Service Manual for proper maintenance of the carburetor & its tuning procedure.


# PERIODICAL MAINTENANCE

| S1.<br>No. | DESCRIPTION                                       |     |   | <b>ERVI</b><br>r is e |       |      | F         | PAID  | SER   | VICE  | :     |    |
|------------|---|-----|---|-----------------------|-------|------|-----------|-------|-------|-------|-------|----|
|            | Kms (x 1000)                                      | 0.5 | 3   | 6                     | 9     | 12   | 15        | 18    | 21    | 24    | 27    | 30 |
|            | Months  | 1.5 | 3   | 6                     | 9     | 12   | 15        | 18    | 21    | 24    | 27    | 30 |
| 22         | Front Fork oil / leak                             | Ι   | Ι   | Ι                     | R     | Ι    | Ι         | R     | Ι     | Ι     | R     | Ι  |
| 23         | Hand levers & kick starter pivot                  |     | Lubricate every 1000 Kms or earlier as required |                       |       |      |           |       |       |       |       |    |
| 24         | Front / Rear brake play                           | Ac  | ljust   | every                 | 7 100 | 0 Km | s or      | earli | er as | s req | uirec | l  |
| 25         | Rear brake cam                                    |     |   | L                     |       | L    |           | L     |       | L     |       | L  |
| 26         | Steering ball races play                          | Ι   | Α   | L                     | Α     | L    | Α         | L     | Α     | R     | Α     | L  |
| 27         | Spokes tightness & Wheel rim run out front / rear |     |   | Ι                     |       | Ι    |           | Ι     |       | Ι     |       | Ι  |
| 28         | Rear Wheel cush rubbers                           |     |   |                       |       | I&R  |           |       |       | I&R   |       |    |
| 29         | Swing Arm spacer & pivot bush                     |     |   | L                     |       | L    |           | L     |       | R     |       | L  |
| 30         | Tyre wear pattern Front / Rear                    | Ι   | Ι   | Ι                     | Ι     | Ι    | Ι         | Ι     | Ι     | Ι     | Ι     | Ι  |
| 31         | Disc Brake Oil Level Check                        |     | Ι   | Ι                     | Ι     | Ι    | R         | Ι     | Ι     | Ι     | Ι     | R  |
| 32         | Pivot-Side stand, Center stand, Pillion Foot Rest |     | L   | L                     | L     | L    | L         | L     | L     | L     | L     | L  |
| 33         | 33 Front brake hose & Banjo Bolt                  |     | Ι   | Ι                     | Ι     | Ι    | Ι         | I     | Ι     | Ι     | Ι     | R  |
| A : 4      | A : Adjust C : Clean D : De-carbonise             |     | I : Inspect L : Lubricate                       |                       |       | R :  | : Replace |       |       |       |       |    |
| NOT        | NOTE  |     |   |                       |       |      |           |       |       |       |       |    |

For Maintenance after 30,000 Kms, Please repeat the same frequency specified above, in consultation with a Royal Enfield Authorised Dealer / Service Center.

# TOOLS & FIRST AID KIT

The tool kit is located in the left side Electrical box of the motorcycle.

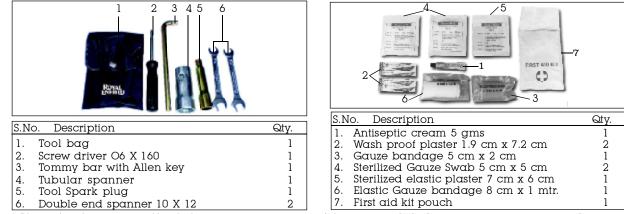

A first aid kit is provided with the motorcyle for any

emergency requirements.

\* Please familiarise yourself with the minor maintenance of the motorcycle before attempting to carry out the same.

The following simple maintenance activities will help in maintaining your motorcycle. However for an elaborate maintenance, we recommend you to get in touch with a Royal Enfield Authorised Dealer/Service Center.

### CONTROL CABLES

Lubricate after water washing motorcycle or if used during rainy conditions.

### HAND LEVER PIVOTS

Wipe the area free of dirt / grease.

Apply a few drops of oil on the pivots.

### CENTER / SIDE STAND PIVOTS

Apply a few drops of oil on the pivots after cleaning the area of dirt.

### DRIVE CHAIN

Clean the drive chain carefully. Apply chain lubricant while simultaneously rotating the rear wheel. Wipe off the excess lubricant.

### OIL LEVEL INSPECTION

- Place motorcycle on its center stand on a firm surface.
- Warm up engine for a few minutes & switch off before checking oil level.



- The level is correct if the oil level is in the middle of the oil level window.
- Top up only with recommended Engine oil

# CAUTION

Use of wrong grade or spurious oil can seriously affect motorcycle performance & damage to moving parts.



### SPARK PLUG

CLEANING AND ADJUSTING PLUG GAP

- Two spark plugs are provided in your motorcycle.
- Remove spark plug using the plug spanner and tommy bar.
- Clean the insulator tip and electrodes of the plug carefully.
- Check and set the electrode gap between 0.70 to 0.80 mm.



Refit the spark plug on the cylinder head.

### INSPECTION OF TYRES AND WHEELS

 Inspect the tyres periodically for tread wear, cracks and cuts.

| Minimum tr       | ead depth :      |
|------------------|------------------|
| Front tyre : 1mm | Rear tyre : 2 mm |

- Check and remove stone, splinters, nails or other particles embedded in the tyre treads.
- Periodically inspect wheels for spokes breakage and wheel rim run out.
- Check proper seating of the tyre beading on the rim whenever the tyre is reassembled.
- Use only recommended tyres & tubes, inflated to correct air pressure.

|              | Front                | Rear                             |
|--------------|----------------------|----------------------------------|
| Solo         | 1.41 kg/cm² (20 PSI) | 2.21 kg/cm <sup>2</sup> (30 PSI) |
| With Pillion | 1.55 kg/cm² (22 PSI) | 2.20kg/cm <sup>2</sup> (32 PSI)  |

### FRONT WHEEL REMOVAL (BULLET 350)

- Place motorcycle on center stand, on a firm flat surface. Place a wooden block below the front end of the engine to support the motorcycle so that the front wheel is off the ground.
- Disconnect speedo cable and front brake cable on the right and left sides of the wheel respectively.
- Loosen the 4 lug cap nuts and remove along with washers. Gently tap the lug caps and remove from the fork ends.



Tilt the motorcycle to right side and take out the wheel.

FRONT WHEEL REASSEMBLY (BULLET 350)

Position the front wheel in the two fork legs such that the brake assembly is to the left side of the motorcycle and speedo drive is to the right side of the motorcycle.

- Ensure the locator on the left fork leg, slides into the brake cover plate slot speedo hub properly. Place the fork lug caps in position such that the machined faces are inside and tighten with washer and nuts evenly.
- Reconnect speedo cable and front brake cable.
   Ensure wheel rotates freely and adjust front brake cable.
- Check speedometer working by rotating wheel.

### FRONT WHEEL REMOVAL (BULLET 350-ES)

- Disconnect speedo cable.
- Loosen the pinch bolt on the right fork guide.
- Remove the axle nut along with washer.



- Tap and remove the front wheel spindle from the right side.
- Tilt the motorcycle to right side and take out the wheel along with speedo drive and right side spacer.
- Take out Speedo drive and bush on the right side.
- Place a 4 mm thick wooden piece or cardboard sheet between the brake pads to avoid brake pads getting locked.

# CAUTION

Do not press the front brake lever when wheel is removed as this will result in brake pads getting locked.

FRONT WHEEL REASSEMBLY (BULLET 350-ES)

- Remove the wooden piece / card board sheet placed between the brake pads.
- Place the speedo drive bush in position and place speedo drive over it.

- Insert the wheel along with speedo drive and right spacer between the front fork ends ensuring that the brake disc is located between the brake pads.
- Insert and tap the front wheel axle gently inside.
- Refit the washer and tighten the nut firmly.

### NOTE

29

Ensure that the speedo drive is correctly located such that the cable can be connected without difficulty.

- Tighten the pinch bolt on the right fork guide.
- Rotate the wheel and check for smooth rotation.
- Connect the speedo cable to speedo drive and check for proper working of speedo meter.





### REAR WHEEL REMOVAL

- Place motorcycle on center stand on a firm and flat surface.
- Mark the position of the chain adjuster butting with the stopper on the Left side of the swing arm fork.



- Hold the axle firmly and remove the nut on the right side
- Pull out the axle from the left side along with the chain adjuster, taking care not to drop the wheel collar and the spacers on the left side.



 Tilt the motorcycle slightly to the right and pull out the rear wheel from the sprocket lugs.

### REAR WHEEL REASSEMBLY

• Ensure the 4 cush rubbers are seated properly in the rear wheel hub in their locations.

Slide the wheel in position between the swing arms and locate the cush rubber in the sprocket lugs correctly such that the wheel is positioned straight



- Hold the wheel collar and spacer in place between the wheel hub and the left side swing arm fork and slide the wheel axle with the chain adjuster fully and firmly through the collar, spacer and rear wheel.
- Locate the chain adjuster in the marked position against the stopper in the swing arm.
- Hold the axle firmly from the left and tighten the nut fully on the axle on the right.

### CAUTION

Never hammer the wheel axle thro the spacer and rear wheel to prevent damage to its threads. Guide it into the wheel gently.




### REAR BRAKE PEDAL HEIGHT

- Loosen the lock nut
- Turn in or out the pedal stop pin till the brake pedal and front foot rest are in the same height as shown in fig.
- Tighten the lock nut
- Check for free rotation of rear wheel.

### REAR BRAKE

- Turn in or out the adjuster nut at the brake rod end.
- The recommended brake pedal travel is 20 to 30 mm.
- Check that the brake is not binding and the rear wheel rotates freely.



- Loosen axle nut, spindle nut, anchor nut and brake rod nut.
- Turn the adjuster cams on both sides, till 25 to 30 mm slackness is achieved.



- Check and ensure that the number of notches from the punch mark on the cam to the notch resting on the pin are equal on both sides.
- Apply brake and tighten all nuts.



# BATTERY & MAINTENANCE

- The motorcycle is provided with 12V - 8 Ah MF (for Bullet 350-ES) and 12V - 5 Ah (for Bullet 350)
- Periodically check the Battery for
  - Cleanliness and corrosion free terminals.



For 12V 5Ah Batteries: Periodically check Electrolyte level in each cell and top up with distilled water if required

### REMOVAL OF BATTERY FROM THE MOTORCYCLE

- Insert the key into the battery cover lock, turn anticlock wise and hold.
- Remove the battery cover outwards while releasing the cover from the lock peg on top.



- Disconnect both the terminal wires. (positive and negative)
- Remove the rubber straps and take out the Battery



- Locate the battery in the carrier.
- Secure the battery to the carrier with the rubber strap.
- Connect the -VE and +VE terminals to the respective cables and smear petroleum Jelly on the terminals.
- Position the battery cover over the lugs on top and close the cover.
- Turn the key anticlockwise and push the lock into the locator and turn the key clockwise such that the cover is locked in position.
- Release Key and remove from the lock.

# CAUTION

- Do not use battery with low charge as the battery internals will get damaged.
- 32

### For 12V 5Ah Batteries:

- Do not overfill the battery electrolyte as it will spill out through the over flow pipe and cause corrosion to motorcycle parts.
- Clean the wire terminals free of corrosion and keep the terminals coated with petroleum jelly.

CHANGING ELECTRICAL COMPONENTS

### HEADLAMP BULB REPLACEMENT

• Loosen the rim holding screw on top and take out the head light reflector.



- Disconnect the wiring coupler over the bulb.
- Remove the rubber grommet from the bulb.
- Press the clip by thumb to release the free end from bulb holder.
- Pull out the bulb.

# ASSEMBLING THE HEAD LAMP BULB

- 1. Refix the new halogen bulb into reflector unit of the headlamp.
- 2. Gently press the bulb holding clip and lock the free end in its slot.
- 3. Fit the rubber grommet.
- Connect the electrical connections carefully & assemble the headlamp in the reverse order of dismantling.

# CAUTION

Never touch the bulb with your fingers, Finger prints will etch the glass and decrease bulb life. Always hold the bulb with paper or clean dry cloth during handling.






### TAIL LAMP BULB

- Remove the tail lamp cover screws and cover.
- Press bulb gently and turn anticlockwise to pull out the bulb.
- Replace bulb and assemble in the reverse order.

# TRAFFICATOR BULB

- Remove the screws & take out trafficator glass cover.
- Press bulb gently & Turn anti-clockwise to take out the bulb.



- holder, ensuring that the pins in the bulb, match with the slots in the holder.
- Gently press the bulb and turn clockwise to lock the bulb in the holder.
- Refit the trafficator glass and screws, ensuring the lens slot / cut mark is at the bottom.


### FUSE & CARRIER BULLET 350/BULLET 350-ES

- Open the left side Electrical box.
- The tail light fuse carrier is located on the main wiring harness (10 amps glass tubular fuse).



BULLET 350 & BULLET 350-ES

The blade fuses are located in the carrier and differently coloured for identification.



# BLADE FUSE USAGE LIST

| Fuse No. | Color | Remarks             |
|----------|-------|---------------------|
| 1        | Blue  | Main Fuse (15A)     |
| 2        | Red   | Ignition Fuse (10A) |
| 3        | Blue  | Spare Fuse (15A)    |
| 4        | Red   | Spare Fuse (10A)    |



# LONG TRIP PRECAUTIONS

Checks prior to the commencement of long journey

- Service the motorcycle at a Royal Enfield Authorised Dealer / Service Center.
- Ensure sufficient quantity of petrol in the fuel tank for the journey planned.
- Check and correct tyre pressure if necessary.

# Checks after every 1500 kms of run

- Any loose fasteners.
- Condition of the tyres.
- Electrolyte level in the battery (Only for 12V 5Ah batteries).
- Correct oil level in engine.
- Working of all lights and horn.
- Proper drive chain tension.

### Items to be carried

- Tool kit
- First aid kit.
- Bulbs for Headlight, Trafficator light, Rear Tail Lamp and Fuse.
- Accelerator, Clutch and Front brake cables. (Incase of Drum brake models)
- Rear chain master link lock assembly.
- Insulation tape.
- Spark plug, Spark plug cap, Fuel hose.
- 35

#### WASHING PROCEDURE

#### PRECAUTIONS

- Wash motorcycle when the engine is cold.
- Cover the silencer, tail pipe, carburetor, horn and control switches with suitable plastic bags and tie it firmly to prevent water entry.
- Remove ignition key and seal key hole using adhesive tape.
- Brush engine area with a solvent to remove dirt or grease.
- Use low pressure jet of water to clean.
- Never spray water with great force on head lamp, speedometer, flasher lights, front and rear wheel hubs, electrical connections and wires, control cables, carburetor, spark plug, battery etc.
- Do not apply any corrosive solvent on painted surfaces or rubber parts.
- Use luke warm water and mild detergent on the painted components to remove dirt, etc.

- Rinse motorcycle thoroughly with plain water to remove the detergent.
- If possible, use compressed air and blow off water particles from the obscure areas of the motorcycle, electrical connections etc.

#### AFTER WASHING

- Ensure, the motorcycle is thoroughly dry by wiping with a clean soft absorbent cloth or chamois leather.
- Remove all plastic bags and adhesive tapes.
- Lubricate control cables, pivot and rear chain with lube oil
- Polish the painted and plated surfaces using polishing wax.
- Start engine and allow to run at idling speed for a few minutes to warm up engine.
- Drive the motorcycle slowly, applying both brakes intermittently to dry up the water in the brake shoes.
- 36

#### STORAGE PRECAUTIONS

Incase your Motorcycle is not going to be used for a month or more, the following precautions should be taken.

- Get the motorcycle service through a Royal Enfield Authorised Dealer / Service Center.
- Drain fuel tank, fuel line and carburetor.
- Keep the fuel tap in closed position and spray engine oil inside the fuel tank to prevent rusting.
- Remove spark plug. Pour in about 25ml of clean engine oil through spark plug hole. Close the hole and crank engine several times and refit spark plug.
- Clean rear chain thoroughly and apply a thin film of lub oil.
- Remove battery from the motorcycle. Clean the terminals free of corrosion and apply petroleum jelly to terminals.

- Maintain electrolyte level between "max" or "min" mark, by adding distilled water and wipe the battery dry (Only for 12V 5Ah batteries).
- Store the battery in a cool, dry and well ventilated place.
- Cover the silencer with plastic bags to prevent moisture entry. Set the motorcycle on its center stand.
- Apply anti rust solutions on all plated parts. Take care not to apply this solution on rubber or painted parts.
- Store motorcycle in a clean covered area free of moisture and dust.
- For re use after storage, it is preferable to get the motorcycle prepared through a Royal Enfield Authorised Dealer / Service Center to ensure the motorcycle is restored to its peak operating conditions.

#### TROUBLE SHOOTING

We have listed below a few basic checks in case your motorcycle is not functioning. If in case the problem is not rectified after these checks, it is necessary to get the motorcycle checked by a Royal Enfield Authorised Dealer/Service Center to rectify the problem and to ensure trouble free performance.

| Symptom         | Observations   | Check for / Remedy  |
|-----------------|--|---|
|                 | 1. Ignition/Engine stop switch is in OFF position      | Switch ON Ignition / Engine stop switch                               |
|                 | 2. Very low / No fuel in the fuel tank.                | Turn fuel tap to reserve position / Fill Fuel                         |
| Engine Does     | 3. Lights / horn very dim                              | Weak/Discharged battery. Replace Battery                              |
| not start       |  | <ol> <li>Battery completely dead. Replace battery</li> </ol>          |
|                 | <ol> <li>Electricals not working</li> </ol>            | 2. Fuse Blown. Replace appropriate fuse.                              |
|                 |  | Note: If fuse blows again, contact Authorised Service Center.         |
|                 | 5. Engine Cranking but not starting                    | Spark plug Cap/wire disconnected. Reconnect.                          |
| Engine Starts   |  | Idling RPM setting in Carburetor is disturbed. Reset the              |
| BUT shuts off   | Engine shuts off as soon as throttle is closed.        | Idling RPM screw in Carburetor.                                       |
| immediatley     |  | Carburetor Flooded. Shut off fuel tap, gently tap                     |
| -               |  | Carburetor bottom and reopen fuel tap. Check if flooding has stopped. |
| Engine          | 1. Typically happens after a Refill / Adulterated /    | Drain out entire fuel and Refill with fresh fuel from a reputed       |
| Misfires & Runs |  | filling station.  |
| Erratically/    | 2. Motorcycle driven in Low gear / High RPM /          | Excessive Engine temperature. Switch OFF Engine and allow             |
| Stops           | Crowded places for long time.                          | to cool down.   |
|                 | Engine RPM raises improportinately to motorcycle speed | Clutch is Slipping. Check for sticky clutch/ clutch not having        |
| Poor Pickup     | Rear Chain excessively loose causing chain to slip     | any free play.  |
|                 | on Sprocket.   | Adjust Rear chain to correct tension.                                 |

#### WARRANTY TERMS & CONDITIONS

Royal Enfield Motorcycles are manufactured by following best Quality practices in respect of the material and workmanship.

Royal Enfield (RE) warrants its motorcycle to be free from manufacturing and material defect under normal use subject to following conditions.

- 1. RE will replace or repair defective part(s) at their Dealerships and Authorised Service Center, free of charge within a period of 24 months or 20,000 kms from the date of sale, whichever is earlier.
- 2. The warranty is applicable to the first registered owner only.
- 3. The warranty shall be applicable only if all the 4 free services & 3 paid services are availed in the respective period/kilometer ranges as per the schedule in the owner's manual from RE Authorised Dealer / Service Center.
- 4. During the warranty period, RE's obligations shall be limited to repairing/replacing part(s) of the motorcycle for free, only if the part(s), on examination is deemed to have a manufacturing defect. Defective part(s) which have been replaced will become the sole property of RE.
- 5. Cost of oil, oil filter and fuel are chargeable to the customer.
- 6. Claims on proprietary items like tyres, tubes, spark plug, battery etc. should be taken up with the respective manufacturer or their authorised agents in the area directly by the customer. RE shall not be liable in any manner to replace them through their dealers. RE will, however, provide assistance in preferring such claims on the respective manufacturer.
- 7. Warranty shall not apply to:
  - (a) Normal ageing, deterioration or rusting of plated parts, paints coat, rubber parts, soft items, glass items, plastic parts etc.

#### WARRANTY TERMS & CONDITIONS

- (b) Components like fuel filter, oil filter, Air filter paper element, control cables, brake shoes / brake pads, clutch plates, drive chain & sprocket kit, Steering ball races, Electrical equipment, wiring harness etc., which are subjected to normal wear and tear.
- (c) Failures occurred due to use of non recommended grade lubricants, fuel or improper level.
- (d) Damages due to use of non-genuine parts, lack of proper maintenance, incorrect riding habits.
- (e) Parts damaged due to accidents, collision, abuse etc.
- (f) Irregularities not recognised as affecting the quality or function of the motorcycle such as slight vibration, oil leakage, blue discoloration of exhaust bent pipe/silencer/soft or hard shockabsorber etc.
- (g) Defects arising from fitment of unauthorised or additional electrical loads.
- (h) Motorcycle serviced or repaired at unauthorised service centers.
- (i) Motorcycle used for competitions / racing / Stage Rallying etc.
- (j) Electrical component like bulbs, fuses etc. and electronic components failure due to repairs by arc welding.
- (k) Normal maintenance operations like adjustment of brakes, cleaning fuel system, engine tune-up and other such adjustments.
- (l) Oxidization of buffed/painted/powder coated items etc.
- 8. RE reserves the right to finally decide on all warranty claims.
- 9. RE reserves the right to make changes in design of the motorcycle without any obligation to install these changes on previously supplied motorcycles.
  - 40

#### **EMISSION WARRANTY**

In compliance with the provisions of Rule 115(2) of the Central Motor Motorcycle Rules, 1989, Royal Enfield certifies that the following warranty is applicable to those components liable to affect the emission of the gaseous pollutants in its range of motorcycles, in normal use to which it may be subjected to.

This emission warranty comes into force from 01st July 2001 and is valid for a period of 30,000 Kms. or 36 months, whichever occurs earlier, from the date of sale to the first customer and is in addition to and parallel to the warranty policy, conditions and obligations laid down in the Owner's Manual.

Royal Enfield further warranty that if on examination by its Authorised Dealer / Service Center, the motorcycle fail to meet the specified emission standards, then the Authorised Dealer / Service Center shall take necessary corrective measures and shall at its sole discretion, repair or replace free of charge such components of the emission control system to meet the required emission standards.

The method/s of examination to determine the warranty conditions of the emission warranty related components will be at the sole discretion of Royal Enfield and / or our Authorised Dealer / Service Center and results of such examination will be final and binding. If on examination the warranty conditions of the part/s is/are not established, Royal Enfield will have the right to charge all, or part of the cost of such examination to the customer in addition to the cost of the components.

In case of acceptance of the component/s under Emission warranty, Royal Enfield will replace free of charge, the component/s as required. However, the consumables like fuel, lubricants, solvents, etc shall be chargeable to the customer as per actuals.

In case any of the components covered under emission warranty or the associated parts, are not independently replaceable. Royal Enfield will have the sole discretion to replace either the entire assembly or parts of the assembly, through suitable repairs. Royal Enfield reserves the right to carry out necessary consequential repairs to the motorcycle or replace any part, in addition to the repair or replacement of the components covered under emission warranty, to establish compliance to in-use emission standards. Such repairs / replacements will be chargeable to the customer.

All parts removed for replacement under warranty will become the property of Royal Enfield.

Royal Enfield will not be responsible for the cost of transportation of the motorcycle to the nearest Authorised Dealer / Service Center OR for any loss due to non availability of the motorcycle during the period of examination and repairs by Royal Enfield and / or their Authorised Dealer / Service Center.

#### **EMISSION WARRANTY**

Royal Enfield will not be responsible for any penalties that may be charged by statuatory authorities on account of failure to comply with the in-use emission standards.

That cost/s incurred to check emission of the motorcycle will have to be borne by the customer.

Emission warranty will be applicable irrespective of the change of ownership of the motorcycle provided all the conditions as laid down in this document are met from the date of original sale of the motorcycle.

THE WARRANTY SHALL APPLY IF THE CUSTOMER

- Observes all the important instructions and any other precautions listed in the owner's manual.
- Under all circumstances uses lubricants and fuel as recommended by Royal Enfield.
- Regularly obtains and carries out maintenance in accordance with Royal Enfield guidelines and enters the details in the Log book.
- Immediately approaches the nearest RE Authorised Dealer / Service Center upon discovery of failure to comply with the IN-USE emission standard inspite of having maintained and used the motorcycle in accordance with the instructions in the owner's manual and having carried out such repairs and adjustments as may be required with a view to establish such compliance.
- Produces the 'Pollution Under Control' certificate valid for the period immediately preceding the test during which the failure is discovered, the test having been carried out either for obtaining a new certificate or pursuant upon being directed by an officer as referred to in sub rule (2) of rule 116 of the Central Motor Vehicles Rules (CMVR).
- Produces the owner's manual and Log book for verification details.
- Produces receipts covering maintenance of the motorcycle is specified in the owner's manual from the date of original
  purchase of the motorcycle.
- Produces valid certificate of Insurance and R T O Registration Certificate (R.C. Book).

THE EMISSION WARRANTY SHALL NOT APPLY IF

- The motorcycle is not serviced by RE Authorised Dealer/Service Center as per the service schedule described in the maintenance chart.
- The motorcycle has been subjected to abnormal use, abuse, neglect and improper maintenance or has met with an accident.

<sup>•</sup> A valid "Pollution under control" certificate is not produced.

#### **EMISSION WARRANTY**

- Replacement parts not specified and approved by Royal Enfield have been used.
- The motorcycle, or parts thereof, has been altered, tampered with or modified or replaced in an unauthorised manner.
- The odometer is not functioning or the odometer and / or its reading has been changed / tampered with, so that the actual distance covered cannot be readily determined.
- The motorcycle has been used for competitions, races, and rallies or for the purpose of establishing records.
- On examination by Royal Enfield or its Authorised Dealer / Service Center, if the motorcycle shows that any of the conditions stipulated in the Owner's manual with regard to use and maintenance have been violated.
- The motorcycle has been run on adulterated / leaded fuel or lubricant other than those specified by Royal Enfield in the Owner's manual or any other document given to the customer at the time of sale of the motorcycle.
- The emission related components are tampered with.
- All service and parts related bills and vouchers incurred during the tenure of the emission warranty is not produced.
- All maintenance activities carried out on the motorcycle during the tenure of the emission warranty is not entered in the log book.

TIPS TO BE ON THE RIGHT SIDE OF LAW

- Always get your motorcycle checked to meet the emission regulations through and authorised emission checking center.
- Always carry a valid 'Pollution Under Control' certificate with you at all times during the validity of the emission warranty (30,000 Kms / 3 years from the date of first sale)

#### TIPS TO REDUCE POLLUTION

- Ensure that the periodical maintenance is carried out as stipulated in the owner's manual through a Royal Enfield Authorised Dealer / Service Center.
- Use only Unleaded petrol (> 87 octane) from reputed fuel pumps.
- Ensure the fuel used is not adulterated.
- Use correct spark plug as recommended in the owner's manual.
- Use lubricants as per recommendations given on grade / brand in the owner's manual.

#### SERVICE COUPONS

It is our endeavour to provide excellent service to your Royal Enfield Motorcycle at all times. Towards this we provide initial 4 free services & 3 paid services at specific intervals.

Please avail these services at the specified time, in any of the Royal Enfield Authorised Dealer / Service Center nearest to you and as a token of satisfactory service, kindly return the service coupons duly filled in and signed, to the service outlet.

Availing all the services in the specified time is a prerequisite to warranty consideration.

The cost of fuel, oil, oil filter element, grease and consumables used during services is chargeable to the customer.

Please ensure the details of the periodic service is filled in the manual for future reference.

## 1ST FREE SERVICE

| lst  | 500 KMS or 45+8 DAYS WHICHEVER IS EARLIER FROM DATE OF SALE                                |
|--|--|
| Free   | Customer Name : Dealer Code :  |
| Service  | Address :  |
| 500 Kms  | Frame No:  |
| or<br>45 <u>+</u> 8 days                       | Engine No:   |
| <u>whichever is</u><br>earlier from the        | Motorcycle Installation Form No.   |
| date of sale                                   | ODO Reading : Serviced by (Dealer's/ASC Name &   |
| Enter the Details in<br>Free Service<br>Record | Address)   |
| (Cost of oil,                                  |  |
| oil filter element<br>and other                | Received the above motorcycle after the service having been done to my entire satisfaction |
| consumables<br>used are                        | Customer's Signature : Date :  |
| chargeable to the customer)                    | Contact Phone / Mobile No.:  |

### 1ST FREE SERVICE ACTIVITIES

| -         |   |                                    |                   |
|-----------|---|------------------------------------|-------------------|
| $\Lambda$ | Water wash the motorcycle and dry it with a clean cloth |                                    |                   |
| 2         | Battery Electrolyte                                     | Check level & top-up, if necessary | (CUSTOMER COPY)   |
| 3         | Battery terminals                                       | Clean and apply petroleum jelly    | Job Card No:      |
| 4         | Rear Drive chain free play                              | Check, clean, lubricate & adjust   |                   |
| 5         | Rear brake pedal pivot                                  | Lubricate                          |                   |
| 6         | Front & Rear brakes (Drum)                              | Check & Adjust play                |                   |
| 7         | Wheel rims front & rear                                 | Check spokes tightness / run out   | Date :            |
| 8         | Front fork  | Inspect for oil leakage            |                   |
| 9         | Airfilterelement  | Clean                              |                   |
| 10        | Spark plugs (2 Nos.)                                    | Check, clean & adjust gap          |                   |
| 11        | H.T. Leads  | Inspect for cracks                 | Odo Reading :     |
| 12        | Carburetor  | Clean, Inspect & tune              |                   |
| 13        | Fuel filter in Fuel tap                                 | Clean                              |                   |
| 14        | Fuel pipe   | Inspect for cracks                 |                   |
| 15        | Rubber hose, Air filter to carburetor                   | Inspect for cracks                 | Name of Dealer/   |
| 16        | Rubber hose, inlet manifold                             | Inspect for cracks                 | ASC with Code:    |
| 17        | Accelerator, Carburetor / TPS cable                     | Check & Adjust play                | The will bodd.    |
| 18        | Clutch cable / Lever free play                          | Adjust play                        |                   |
| 19        | Engine oil sump strainer, magnetic drain plug           | Clean                              |                   |
| 20        | Engine oil  | Replace                            |                   |
| 21        | Engine oil filter element                               | Replace                            |                   |
| 22        | Hand levers & kick starter pivot                        | Lubricate                          | ASC / Dealer's    |
| 23        | Pivot-Side stand, Center stand, Pillion Foot Rest       | Lubricate                          |                   |
| 24        | Front Disc Brake (Bullet 350-ES)                        | Check & top up brake fluid level   | Stamp & Signature |



### 2ND FREE SERVICE

| ( 2nd )  | 3000 KMS or $90\pm15$ DAYS WHICHEVER IS EARLIER FROM DATE OF SALE                          |
|--|--|
| Free   | Customer Name : Dealer Code :  |
| Service  | Address :  |
| 3000 Kms                                       | Frame No:  |
| or<br>90 <u>+</u> 15 days                      | Engine No:   |
| whichever is<br>earlier from the               | Motorcycle Installation Form No.   |
| date of sale                                   | ODO Reading : Serviced by (Dealer's/ASC Name &   |
| Enter the Details in<br>Free Service<br>Record | Address)   |
| (Cost of oil,<br>oil filter element            |  |
| and other                                      | Received the above motorcycle after the service having been done to my entire satisfaction |
| consumables<br>used are                        | Customer's Signature : Date :  |
| chargeable to the customer)                    | Contact Phone / Mobile No.:  |

### 2ND FREE SERVICE ACTIVITIES

| $\begin{pmatrix} 1 \end{pmatrix}$ | Water wash the motorcycle and dry it with a clean cloth |                                   | CUSTOMER COPY     |
|-----------------------------------|---|-----------------------------------|-------------------|
| 2                                 | Batery Electrolyte                                      | Check level & top-up if necessary |                   |
| 3                                 | Battery terminals                                       | Clean and apply petroleum jelly   | Job Card No:      |
| 4                                 | Rear Drive chain free play                              | Check, clean, lubricate & adjust  |                   |
| 5                                 | Rear brake pedal pivot                                  | Lubricate                         |                   |
| 6                                 | Front & Rear brakes (Drum)                              | Check & Adjust play               | Date :            |
| 7                                 | Tyre front & rear                                       | Check wear pattern                | Dale .            |
| 8                                 | Front fork  | Inspect for oil leakage           |                   |
| 9                                 | Air filter element                                      | Clean                             |                   |
| 10                                | Spark plugs (2 Nos.)                                    | Check, clean & adjust gap         | Odo Reading :     |
| 11                                | H.T. Leads  | Inspect for cracks                |                   |
| 12                                | Carburetor  | Clean, Inspect & tune             |                   |
| 13                                | Fuel pipe   | Inspect for cracks                |                   |
| 14                                | Rubber hose, Air filter to carburetor                   | Inspect for cracks                | Name of Dealer/   |
| 15                                | Rubber hose, inlet manifold                             | Inspect for cracks                | ASC with Code:    |
| 16                                | Accelerator, Carburetor / TPS cable                     | Check & adjust play               |                   |
| 17                                | Clutch cable / Lever free play                          | Adjust play                       |                   |
| 18                                | Steering free play                                      | Check & Adjust                    |                   |
| 19                                | Engine oil  | Check level & top-up              |                   |
| 20                                | Hand levers & kick starter pivot                        | Lubricate                         |                   |
| 21                                | Pivot-Side stand, Center stand, Pillion Foot Rest       | Lubricate                         | ASC / Dealer's    |
| 22                                | Front Disc Brake (Bullet 350-ES)                        | Check & top up brake fluid level  | Stamp & Signature |



### 3RD FREE SERVICE

|  | 1000 WMG an 100 115 DAVG WHIGHEVED IG FADLED FROM DATE OF GALE                             |
|--|--|
| ( 3rd )  | $6000$ KMS or $180 \pm 15$ DAYS WHICHEVER IS EARLIER FROM DATE OF SALE                     |
| Free   | Customer Name : Dealer Code :  |
| Service  | Address :  |
| 6000 Kms                                       | Frame No:  |
| or<br>180 <u>+</u> 15 days                     | Engine No:   |
| whichever is<br>earlier from the               | Motorcycle Installation Form No.   |
| <u>date of sale</u>                            | ODO Reading : Serviced by (Dealer's/ASC Name &   |
| Enter the Details in<br>Free Service<br>Record | Sold by (Dealer's Name & Address)  |
| (Cost of oil,<br>oil filter element            |  |
| and other                                      | Received the above motorcycle after the service having been done to my entire satisfaction |
| consumables<br>used are                        | Customer's Signature : Date :  |
| chargeable to the customer)                    | Contact Phone / Mobile No.:  |

### **3RD FREE SERVICE ACTIVITIES**

| _  |   |  |                      |
|----|---|--|----------------------|
| 1  | Water wash the motorcycle and dry it with a clean cloth |  | CUSTOMER COPY        |
| 2  | Batery Electrolyte                                      | Check level & top-up if necessary      | CUSIOMER COPY        |
| 3  | Battery terminals                                       | Clean and apply petroleum jelly        | Job Card No:         |
| 4  | Rear Drive chain free play                              | Check, clean, lubricate & adjust       |                      |
| 5  | Rear brake pedal pivot                                  | Lubricate                              |                      |
| 6  | Rear brake cam  | Cam clean, lubricate & Adjust play     |                      |
| 7  | Front & Rear brakes (Drum)                              | Check & Adjust play                    |                      |
| 8  | Wheel rims front & rear                                 | Check spokes tightness / run out       | Date :               |
| 9  | Tyres front & rear                                      | Check wear pattern                     |                      |
| 10 | Air filter element                                      | Clean                                  |                      |
| 11 | Spark plugs (2 Nos.)                                    | Check, clean & adjust gap              |                      |
| 12 | H.T. Leads  | Inspect for cracks                     |                      |
| 13 | Carburetor  | Clean, Inspect & tune                  | Odo Reading :        |
| 14 | Fuel filter in Fuel tap                                 | Clean                                  |                      |
| 15 | Fuel pipe   | Inspect for cracks                     |                      |
| 16 | Rubber hose, Air filter to carburetor                   | Inspect for cracks                     |                      |
| 17 | Rubber hose, inlet manifold                             | Inspect for cracks                     | Name of Dealer/      |
| 18 | Accelerator, Carburetor / TPS cable                     | Check & Adjust play                    | ,                    |
| 19 | Clutch cable / Lever free play                          | Adjust play                            | ASC with Code:       |
| 20 | Engine oil sump strainer, magnetic drain plug           | Clean                                  |                      |
| 21 | Engine oil  | Replace                                |                      |
| 22 | Engine oil filter element                               | Replace                                |                      |
| 23 | Hand levers & kick starter pivot                        | Lubricate                              |                      |
| 24 | Front fork  | Inspect for oil leakage                |                      |
| 25 | Swing arm spacer & pivot bush                           | Lubricate                              |                      |
| 26 | Steering system   | Check, Lub. Steering balls & Adj. Play | ASC / Dealer's       |
| 27 | Pivot-Side stand, Center stand, Pillion Foot Rest       | Lubricate                              |                      |
| 28 | Front Disc Brake (Bullet 350-ES)                        | Check & top up brake fluid level       | \Stamp & Signature / |



#### 4TH FREE SERVICE

| 4th  | 9000 KMS or $270\pm15$ DAYS WHICHEVER IS EARLIER FROM DATE OF SALE                         |
|--|--|
| Free   | Customer Name : Dealer Code :  |
| Service  | Address :  |
| 9000 Kms<br>or                                 | Frame No:  |
| 270 <u>+</u> 15 days                           | Engine No:   |
| <u>whichever is</u><br>earlier from the        | Motorcycle Installation Form No.   |
| date of sale                                   | ODO Reading : Serviced by (Dealer's/ASC Name &   |
| Enter the Details in<br>Free Service<br>Record | Address)   |
| (Cost of oil,<br>oil filter element            |  |
| and other                                      | Received the above motorcycle after the service having been done to my entire satisfaction |
| consumables<br>used are                        | Customer's Signature : Date :  |
| chargeable to the customer)                    | Contact Phone / Mobile No.:  |

### 4TH FREE SERVICE ACTIVITIES

| $\begin{pmatrix} 1\\ 2 \end{pmatrix}$ | Water wash the motorcycle and dry it with a clean cloth<br>Batery Electrolyte | Check level & top-up if necessary  | CUSTOMER COPY       |
|---------------------------------------|---|------------------------------------|---------------------|
|                                       | * *   |                                    | Job Card No:        |
| 3                                     | Battery terminals   | Clean and apply petroleum jelly    | JOD CUIU NO.        |
| 4                                     | Rear Drive chain free play  | Check, clean, lubricate & adjust   |                     |
| 5                                     | Rear brake pedal pivot  | Lubricate                          |                     |
| 6                                     | Front & Rear brakes (Drum)  | Check & Adjust play                | Date :              |
| 7                                     | Front fork oil  | Replace fork oil                   |                     |
| 8                                     | Airfilterelement  | Clean                              |                     |
| 9                                     | Spark plugs (2 Nos.)  | Check, clean & adjust gap          |                     |
| 10                                    | H.T. Leads  | Inspect for cracks                 | Odo Reading :       |
| 11                                    | Carburetor  | Clean, Inspect & tune              |                     |
| 12                                    | Fuel pipe   | Replace                            |                     |
| 13                                    | Rubber hose, Air filter to carburetor   | Inspect for cracks                 |                     |
| 14                                    | Rubber hose, inlet manifold   | Inspect for cracks                 | Name of Dealer/     |
| 15                                    | Accelerator, Carburetor / TPS cable   | Check & adjust play                | ASC with Code:      |
| 16                                    | Clutch cable / Lever free play  | Adjust play                        |                     |
| 17                                    | Engine oil  | Check level & top-up               |                     |
| 18                                    | Hand levers & kick starter pivot  | Lubricate                          |                     |
| 19                                    | Steering free play  | Check & Adjust                     |                     |
| 20                                    | Tyres front & rear  | Check wear pattern                 |                     |
| 21                                    | Pivot-Side stand, Center stand, Pillion Foot Rest                             | Lubricate                          | ASC / Dealer's      |
| 22                                    | Front Disc Brake (Bullet 350-ES)  | Check & top up brake fluid level 🖌 | \Stamp & Signature/ |
| ~                                     |   |                                    |                     |



### 5TH PAID SERVICE

| 5th  | 12,000 KMS or $360\pm15$ DAYS WHICHEVER IS EARLIER FROM DATE OF SALE                       |
|--|--|
| Paid   | Customer Name : Dealer Code :  |
| Service  | Address :  |
| 12,000 Kms<br>or                               | Frame No:  |
| 360 <u>+</u> 15 days                           | Engine No:   |
| <u>whichever is</u><br>earlier from the        | Motorcycle Installation Form No.   |
| date of sale                                   | ODO Reading : Serviced by (Dealer's/ASC Name &   |
| Enter the Details in<br>Paid Service<br>Record | Sold by (Dealer's Name & Address)  |
| (Cost of oil,<br>oil filter element            |  |
| and other                                      | Received the above motorcycle after the service having been done to my entire satisfaction |
| consumables<br>used are                        | Customer's Signature : Date :  |
| chargeable to the customer)                    | Contact Phone / Mobile No.:  |

### 5TH PAID SERVICE ACTIVITIES

| $\overline{1}$ | Water wash the motorcycle and dry it with a clean cloth       |  |                     |
|----------------|---|--|---------------------|
| 12             | Batery Electrolyte  | Check level & top-up, if necessary           | (CUSTOMER COPY)     |
| 3              | Battery terminals   | Clean and apply petroleum jelly              |                     |
| 4              | Rear Drive chain free play                                    | Check, clean, lubricate & adjust             | Job Card No:        |
| 5              | Rear brake pedal pivot  | Lubricate                                    |                     |
| 6              | Rearbrake cam   | Cam clean, lubricate & Adjust play           |                     |
| 7              | Rear wheel cush drive rubbers                                 | Inspect & replace                            |                     |
| 8              | Front & Rear brakes (Drum)                                    | Check & Adjust play                          |                     |
| 9              | Tyres front & rear  | Check wear pattern                           | Date :              |
| 10             | Air filter element  | Replace                                      |                     |
| 11             | Spark plugs (2 Nos.)  | Check, clean & adjust gap                    | '                   |
| 12             | H.T. Leads  | Inspect for cracks                           |                     |
| 13             | Carburetor  | Clean, Inspect & tune                        | 11 1                |
| 14             | Fuel filter in Fuel tap                                       | Clean  | Odo Reading :       |
| 15             | Fuelpipe  | Inspect for crack                            |                     |
| 16             | Rubber Hose-Air filter to carburetor                          | Check and Replace                            |                     |
| 17             | Rubber Hose-Inlet manifold                                    | Check and Replace                            |                     |
| 18             | Accelerator, Carburetor / TPS cable                           | Check & Adjust play                          |                     |
| 19             | Clutch cable/Lever free play                                  | Check & Adjust play                          | Name of Dealer/     |
| 20<br>21       | Engine oil sump strainer, magnetic drain plug                 | Clean  | ASC with Code:      |
| 21             | Engine oil  | Replace                                      | ASC WITH CODE:      |
| 22             | Engine oil filter element<br>Hand levers & kick starter pivot | Replace<br>Lubricate                         | ·                   |
| 23             | Front Fork  | Inspect for oil leakage                      | 1                   |
| 24             | Swing arm spacer & pivot bush                                 | Lubricate                                    |                     |
| 26             | Steering Ball Races & Balls system                            | Check, Lub.Steering races, balls & Adj. Play | il                  |
| 27             | Inlet/Exhaust valve seating                                   | Check by compression test                    |                     |
| 28             | Earth wire eyelet contact                                     | Inspect                                      |                     |
| 29             | Pivot-Side stand, Center stand, Pillion Foot Rest             | Lubricate                                    | ASC / Dealer's      |
| 30             | Wheel rims front & rear                                       | Check spokes tightness / run out             | ·   · ·             |
| 31             | Front Disc Brake (Bullet 350-ES)                              | Check & top up brake fluid level             | \Stamp & Signature/ |
| ~ ··           | TIGHT DEG DIGKG (Dullet 666 Eb)                               |  |                     |



### 6TH PAID SERVICE

| 6th  | 15,000 KMS or $450 \pm 15$ DAYS WHICHEVER IS EARLIER FROM DATE OF SALE                  |
|--|---|
| Paid   | Customer Name : Dealer Code :   |
| Service  | Address :   |
| 15,000 Kms                                     | Frame No:   |
| or<br>450 <u>+</u> 15 days                     | Engine No:  |
| <u>whichever is</u><br>earlier from the        | Motorcycle Installation Form No.  |
| date of sale                                   | ODO Reading : Serviced by (Dealer's/ASC Name &  |
| Enter the Details in<br>Paid Service<br>Record | Address)  |
| (Cost of oil,<br>oil filter element            |   |
| and other                                      | Received the above motorcycle after the service having been done to my entire satisfact |
| consumables<br>used are                        | Customer's Signature : Date :   |
| chargeable to the customer)                    | Contact Phone / Mobile No.:   |

### 6TH PAID SERVICE ACTIVITIES

| $\sqrt{1}$ | Water wash the motorcycle and dry it with a clea  | n cloth                           |                   |
|------------|---|-----------------------------------|-------------------|
| ( 2        | Batery Electrolyte                                | Check level & top-up if necessary | CUSTOMER COPY     |
| 3          | Battery terminals                                 | Clean and apply petroleum jelly   | Job Card No:      |
| 4          | Rear Drive chain free play                        | Check, clean, lubricate & adjust  |                   |
| 5          | Rear brake pedal pivot                            | Lubricate                         |                   |
| 6          | Front & Rear brakes (Drum)                        | Check & Adjust play               | Detai             |
| 7          | Tyres front & rear                                | Check wear pattern                | Date :            |
| 8          | Airfilterelement                                  | Clean                             |                   |
| 9          | Spark plugs (2 Nos.)                              | Check & Replace                   |                   |
| 10         | H.T. Leads  | Inspect for cracks                | Odo Reading :     |
| 11         | Carburetor  | Clean, Inspect & tune             |                   |
| 12         | Fuel pipe   | Inspect for cracks                |                   |
| 13         | Rubber hose, Air filter to carburetor             | Inspect for cracks                |                   |
| 14         | Rubber hose, inlet manifold                       | Inspect for cracks                | Name of Dealer/   |
| 15         | Accelerator, Carburetor / TPS cable               | Check & adjust play               | ASC with Code:    |
| 16         | Clutch cable / Lever free play                    | Adjust play                       |                   |
| 17         | Engine oil  | Check level & top-up              |                   |
| 18         | Hand levers & kick starter pivot                  | Lubricate                         |                   |
| 19         | Front fork  | Inspect for oil leakage           |                   |
| 20         | Steering free play                                | Check & Adjust                    | ACC / Decler's    |
| 21         | Pivot-Side stand, Center stand, Pillion Foot Rest | Lubricate                         | ASC / Dealer's    |
| 22         | Front Disc Brake (Bullet 350-ES)                  | Replace brake fluid               | Stamp & Signature |



### 7TH PAID SERVICE

| 7th   | 18,000 KMS or 540+15 DAYS WHICHEVER IS I   | EARLIER FROM DATE OF SALE                        |
|---|--|--|
| Paid  | Customer Name :  | Dealer Code :                                    |
| Service<br>18,000 Kms<br>or   | Address :  | Regn. No:  |
| 540 <u>+</u> 15 days<br>whichever is<br>earlier from the<br>date of sale                                      | Engine No:     Motorcycle Installation Form No.     ODO Reading :                | Sale Date:                                       |
| Enter the Details in<br>Paid Service<br>Record  | Sold by (Dealer's Name & Address)  | Address)   |
| (Cost of oil,<br>oil filter element<br>and other<br>consumables<br>used are<br>chargeable to<br>the customer) | Received the above motorcycle after the service having<br>Customer's Signature : | g been done to my entire satisfaction.<br>Date : |

### 7TH PAID SERVICE ACTIVITIES

| $\overline{(1)}$                     | Water wash the motorcycle and dry it with a clea  | in cloth  |                                       |
|--------------------------------------|---|---|---------------------------------------|
| $\begin{pmatrix} 1\\2 \end{pmatrix}$ | Batery Electrolyte  | Check level & top-up if necessary                   | (CUSTOMER COPY)                       |
| 3                                    | Battery terminals   | Clean and apply petroleum jelly                     |                                       |
| 4                                    | Rear Drive chain free play  | Check, clean, lubricate & adjust                    | Job Card No:                          |
| 5                                    | Rear brake pedal pivot  | Lubricate   |                                       |
| 6                                    | Rear brake cam  | Cam clean, lubricate & Adjust play                  |                                       |
| 7                                    | Front & Rear brakes (Drum)  | Check & Adjust play                                 |                                       |
| 8                                    | Tyres front & rear  | Check wear pattern                                  | Date :                                |
| 9                                    | Airfilterelement  | Clean   | Duic .                                |
| lio                                  | Spark plugs (2 Nos.)  | Check, clean & adjust gap                           |                                       |
| 11                                   | H.T. Leads  | Inspect for cracks                                  |                                       |
| 12                                   | Carburetor  | Clean, Inspect & tune                               |                                       |
| 13                                   | Fuel filter in Fuel tap   | Clean   | Odo Reading :                         |
| 14                                   | Fuel pipe   | Check & Replace                                     |                                       |
| 15                                   | Rubber hose, Air filter to carburetor   | Inspect for cracks                                  |                                       |
| 16                                   | Rubber hose, inlet manifold   | Inspect for cracks                                  |                                       |
| 17                                   | Accelerator, Carburetor / TPS cable   | Check & adjust play                                 | Name of Dealer/                       |
| 18                                   | Clutch cable / Lever free play  | Adjust play   |                                       |
| 19                                   | Engine oil sumpstrainer, magnetic drain plug  | Clean   | ASC with Code:                        |
| 20                                   | Engine oil  | Replace   |                                       |
| 21                                   | Engine oil filter element   | Replace   |                                       |
| 22                                   | Hand levers & kick starter pivot  | Lubricate   |                                       |
| 23<br>24                             | Front fork  | Check & replace fork oil<br>Lubricate               | · · · · · · · · · · · · · · · · · · · |
|                                      | Swing arm spacer & pivot bush   |   |                                       |
| 25<br>26                             | Steering Ball Races & Balls system<br>Pivot-Side stand, Center stand, Pillion Foot Rest | Check, Lub. Steering balls & Adj. Play<br>Lubricate | i i i                                 |
| 20                                   | Wheel rims front & rear   | Check spokes tightness / run out                    | ASC / Dealer's                        |
|                                      | Front Disc Brake (Bullet 350-ES)  | Check & top up brake fluid level                    | / Stamp & Signature/                  |
| \_20                                 | TIOTIT DISC DIGKE (DUTIEL 300-ES)   | CHECK & JOP UP DIGKE HUID IEVEL                     |                                       |

## PAID SERVICE / MAINTENANCE RECORD

| S.No. | Date | Type of<br>Service | KMS | Brief details of service | Royal Enfield Authorised<br>Dealer / Service Center |
|-------|------|--------------------|-----|--------------------------|---|
| 1.    |      |                    |     |                          |   |
| 2.    |      |                    |     |                          |   |
| 3.    |      |                    |     |                          |   |
| 4.    |      |                    |     |                          |   |
| 5.    |      |                    |     |                          |   |
| 6.    |      |                    |     |                          |   |
| 7.    |      |                    |     |                          |   |
| 8.    |      |                    |     |                          |   |

### PAID SERVICE / MAINTENANCE RECORD

| S.No. | Date | Type of<br>Service | KMS | Brief details of service | Royal Enfield Authorised<br>Dealer / Service Center |
|-------|------|--------------------|-----|--------------------------|---|
| 9.    |      |                    |     |                          |   |
| 10.   |      |                    |     |                          |   |
| 11.   |      |                    |     |                          |   |
| 12.   |      |                    |     |                          |   |
| 13.   |      |                    |     |                          |   |
| 14.   |      |                    |     |                          |   |
| 15.   |      |                    |     |                          |   |
| 16.   |      |                    |     |                          |   |

# **REGIONAL & AREA OFFICES**

| R1 : Chandigarh, H.P, J&K, Punjab  | R3 : Uttarkhand & Uttar Pradesh                      | R6 : Orissa & West Bengal  | R8 : Goa & Maharashtra              | R10 : Karnataka                              |
|------------------------------------|--|--|-------------------------------------|--|
| Royal Enfield                      | Royal Enfield  | Royal Enfield  | Royal Enfield                       | Royal Enfield                                |
| SCO, No. 5,                        | UGF 15-19, Landmark Arcade,                          | Shrachi Tower,   | Plot No.16, Sector -1,              | Door No. 2067/1, 2068/2,                     |
| 1st Floor, Sector-11 ,             | 2 Badshah Nagar Crossing,                            | 3rd Floor,   | Sion Panvel Highway,                | East End "A" Main                            |
| PANCHKULA (Haryana)                | Faizabad Road,                                       | 686 Anandapur,   | Nerul,                              | 9th Block, Jayanagar,                        |
| Pin Code - 134 112.                | LUCKNOW – 226 006.                                   | KOLKATA - 700 707.   | NAVI MUMBAI - 400 706.              | BANGALORE - 560 069.                         |
| Tel: 0172-5011255, 5011251         | Tel: 0522-6566675                                    | Tel: 033-40060206 / 0209   | Tel: 022-27700395, 27700501         | Tel: 080-22440588, 41753277,                 |
| R2 : Delhi, Haryana, NCR &         | Fax: 4005973   | Royal Enfield  | Royal Enfield                       | 41536488                                     |
| Rajasthan                          | R4 : Gujarat & Madhya Pradesh                        | A Unit of Eicher Motors Ltd.                                     | 203, 204 Sneha Ganga,               | R11 : Tamilnadu & Andaman                    |
| Royal Enfield                      | Royal Enfield  | 407, 4th Floor,  | Near Vega Centre,                   | Royal Enfield                                |
| C/o EICHER ENGG.COMPONENTS         | 103, Safal Prelude, Opp.                             | Nirmala Plaza,   | Shankar Seth Road,                  | Plot No. 350 to 354,                         |
| Plot No. 7, HSIDC Industrial Area, | Parsavanath Esquire Cross Road,                      | Forest Park.   | Swargate,                           | 2nd Floor, 4th Link Street,                  |
| Sector 18,                         | Corporate Road, Prahlad Nagar,                       | BHUBANESWAR - 751 009.   | PUNE - 411 037.                     | Nehru Nagar Industrial Area,<br>Kottivakkam, |
| Palam Gurgaon Road,                | Off. S.G. Highway,                                   | Tel: 0674–6540206  | Tel: 020-40028090<br>Fax: 24447174  | (OMR-IT Highway),                            |
| GURGAON (Haryana) - 122 015.       | AHMEDABAD - 380 015.                                 | R7 : Arunachal Pradesh, Assam                                    |                                     | CHENNAI - 600 096.                           |
| Tel: 0124-4278138, 4278139         | Tel: 098-25113168<br>Fax: 079-40024461               | Manipur, Meghalaya, Mizoram,                                     | R9 : A.P. & Telangana               | Tel:044-42070661, 24540828                   |
| Fax: 4382148                       |  | Nagaland & Tirupura  | Royal Enfield                       | R12 : Kerala & Lakshadweep                   |
| Royal Enfield                      | R5 : Bihar, Chattisgarh &                            | · ·  | (A Unit of Eicher Motors Ltd)       |  |
| G-5, 6, 7, Gitanjali Towers,       | Jharkhand  | Royal Enfield  | No: 8-3-166/B to F,                 | Royal Enfield<br>25/85A, Opp. to IOC Pump,   |
| Ajmer Road,                        | Royal Enfield  | Astha Plaza,<br>4th Electr (M4, 2), G.S. Bood                    | Erragadda Main Road,                | Koonamthai, Edappally Post,                  |
| JAIPUR - 302 006.                  | 3rd Floor, Maple Plaza,<br>Gate No. 2 , Ashok Nagar, | 4th Floor (M4-2), G S Road,<br>Opposite Deorah College, Ulubari, | Beside Gokul Theatre,<br>Erragadda, | KOCHI - 682 024.                             |
| Tel: 0141-4106747, 4034748         | RANCHI (Jharkhand) - 834 002.                        | GUWAHATI - 781 00 .  | HYDERABAD - 500 018.                | Tel: 0484-6494990, 6494991                   |
| Fax: 0141-4106748                  | Mob: +91 7091497557                                  | Mob: +91 8135846461  | Tel: 7093190003, 7416783025         | Fax: 2543616                                 |
| 100000                             | 1000.1317031437337                                   | 1000. 791 0100040401   | 101.7033130003,7410703023           |  |

| ANDHRA PRADESH  | ANDHRA PRADESH  | ANDHRA PRADESH   | ANDHRA PRADESH   | ANDHRA PRADESH   |
|---|---|--|--|--|
| Amlapuram<br>Shri Jayalakshmi Automobiles<br>+91 9618349555               | Eluru<br>Classic Automotive<br>+91 9652238585   | Kurnool<br>Sandhya Automotives<br>+91 9394253377<br>08518-253377                       | Ongole<br>Lekhana Automotives<br>+91 8885002112  | Vijayawada- Kannur<br>Pravallika Motors<br>+91 7842559555<br>0866-2586858            |
| Anantapur<br>Renati Automotives Pvt. Ltd.<br>+91 9000841133<br>7036903879 | 08812-234582<br>Guntur-Auto Nagar<br>Jubilant Avenues Pvt.Ltd<br>+91 8143008506; 8507 | Nandyal<br>Dheeru Motors<br>+91 9133065553<br>+91 9133065554                           | 8885002113           Rajahmundry           Sriram Automobiles           +91 9246665513   | Vijayawada- M G Road<br>Mahalakshmi Motors<br>+91 8886322559<br>+91 8886422559       |
| <b>Bhimavaram</b><br>Varma Automotives<br>+91 7095812666                  | Guntur-Chandramauli<br>Nagar<br>Jubilant Avenues Pvt.Ltd<br>+91 8143008508            | Narasaraopet<br>Anu Auto Agencies<br>+91 7893301444<br>086472-21787                    | 0883-2422117<br>Srikakulam<br>Lakshmi Automobiles<br>+91 9032929235                      | Vijayawada- Ring Road<br>Pravallika Motors<br>+91 7842559555<br>0866-2586858         |
| +91 7095816888<br>Chirala<br>Lekhana Automotives<br>+91 8885002114        | <b>Kadappa</b><br>Anjana Bikes<br>+91 9247041555<br>9010389998                        | Nellore<br>Rishi Motors<br>+91 8977713377<br>+91 8977714477                            | 8121929235<br><b>Tenali</b><br>Shakthi Motors<br>+91 8886744494                          | Vishakhapatnam -<br>Gajuwaka<br>Cidanta Motors<br>0891-6562008<br>0891-6502008       |
| <b>Chittoor</b><br>Sri Sai Motors<br>+91 9490094908<br>08572-245057       | Kakinada<br>Shri Jayalakshmi Automobiles<br>+91 8332912719<br>0884-6443555            | Nellore-Inside City<br>Rishi Motors<br>+91 8977713377,<br>8977714477<br>+91 9866162859 | Tirupathi           Sri Sai Motors           +91         9295091444           8572245057 | Vishakhapatnam -<br>Nad Junction<br>Saran Motors<br>+91 8885947222<br>+91 8885847222 |

| ANDHRA PRADESH   | ASSAM   | ASSAM   | BIHAR  | BIHAR   |
|--|---|---|--|---|
| Vishakhapatnam -<br>Seethammadhara<br>Royal Enfield Company Stores<br>+91 8897353382       | Guwahati- G S road<br>Shahila Expositions Pvt Ltd<br>+91 9435549786<br>0361-2335025     | <b>Tinsukia</b><br>SD Royal<br>+91 9957714273                               | <b>Biharsharif</b><br>PNN Automobiles<br>+91 9334038042          | Gopalganj<br>Riders cafe<br>+91 9199547786                              |
| 0891-2768887; 2768886<br>ARUNACHAL PRADESH<br>Naharlagun - Itanagar<br>Bucho Royal Enfield | <b>Jorhat</b><br>Achharsingh Royal<br>+91 9859736100<br>9207041076                      | BIHAR<br>Araah<br>Om Wheels   | Champa<br>Neeraj Royal<br>+91 7047511730<br>+91 8871704777       | Hajipur<br>Ambika Bhawani Automobiles<br>+91 9835641123<br>06224-295280 |
| +91 9436219089<br>0360-2350103<br>ASSAM<br>Barpeta   | Nagaon<br>Bajrang Motors<br>+91 9435160785<br>North Lakhimpur                           | +91 9471444405<br>06182-233338<br>Aurangabad<br>Yodha Automobiles Pvt. Ltd  | Chapra<br>Supriyam Automobiles<br>+91 9534677444<br>06152-242999 | Katihar<br>Jaiguru Motors Pvt Ltd<br>+91 9430909966<br>06452-290172     |
| G.S. Auto<br>+91 8472987341<br>Dibrugarh<br>Rider's<br>+91 8472913182                      | Rishi Riders<br>+91 9854100000<br>Silchar<br>Bina Automobiles Pvt Ltd<br>+91 9954008888 | +91 9934012273<br>- Begusarai<br>Mayamanu Motors Pvt. Ltd<br>+91 7260851555 | Darbhanga<br>SYV Motors<br>+91 8227887777<br>06272-242777        | Madhubani<br>Shagun Auto Sales<br>+91 8986396011<br>06276-228014        |
| O373-2370018; 2370014<br>Guwahati- Maligaon<br>Chirag Enfield<br>+91 9435400437            | 03842-225016<br><b>Tezpur</b><br>G.M Associate<br>+91 9707026331<br>03712-237777        | Bettiah<br>Mishra Automobiles<br>+91 8877985073<br>06254-246273             | <b>Gaya</b><br>Kusum Motors<br>+91 8271020543<br>0631-2210105    | <b>Motihari</b><br>Raj Motors<br>+91 9472582848<br>06252-230373         |

| BIHAR   | BIHAR   | BIHAR   | CHATTISGARH   | CHATTISGARH   |
|---|---|---|---|---|
| <b>Muzaffarpur- Maripur</b><br>Gautam Motors<br>+91 7631996130<br>0621-2220056        | Purnea<br>Link Motors<br>+91 7766917026<br>Saharsa                              | Sitamarhi<br>Nili Automobiles<br>+91 9102999131<br>CHANDIGARH   | <b>Bilaspur</b><br>Blue Sapphire Motors<br>+91 8982407770<br>07752-407770 | Raipur- Gaurav Path -<br>Panchsheel Nagar<br>Aadityaraj Automobiles<br>+91 7697208337 |
| Muzaffarpur-Sitamahari<br>Road<br>Kumar Automobiles<br>+91 9771123233                 | 7 Hills Automobiles<br>+91 8877080661<br>06478-227007                           | Chandigarh-Sector         27         C           Manmohan         Auto Stores         +91         9216227366         0172-5071351 | <b>Dhamtari</b><br>Shri Ram Automobiles<br>+91 9179995522                 | 0771-4030550<br>Raipur-Lodhi Para<br>Chowk  |
| 7283000384<br>Patna-Boring Road<br>Ambey Motors<br>+91 9102999131                     | Samastipur<br>Aditya Motors<br>+91 8406803303<br>5452264047                     | Chandigarh-Sector 32 D<br>Garg Autos<br>+91 9915596388<br>0172 2665246  | Jagdalpur<br>Kambo Motors<br>+91 9993333939<br>+91 9407642827             | Indian Motors<br>+91 7714221500<br>0771-4221500; 4221400                              |
| Patna-Saguna More<br>Siddhi Vinayak Automobiles<br>+91 8092981877<br>0612-212948      | <b>Sasaram</b><br>Vintage Auto Corp<br>+91 8540948771<br>+91 9304503020         | CHATTISGARH<br>Ambikapur<br>Dev Automobiles<br>+91 9753117804<br>07774-222804   | <b>Korba</b><br>Kailash Auto Agency<br>+91 9826109907<br>07759-245482     | Raipur- Tatibandh<br>6th Gear<br>+91 8109309666<br>0771-4070666                       |
| <b>Patna-Zero Mile</b><br>Sukhmani Motors Pvt. Ltd.<br>+91 9709761441<br>0612-3297056 | <b>Siwan</b><br>Sri R.L. Automobile Pvt. Ltd.<br>+91 9576449444<br>06154-247686 | Bhilai<br>AAN Automotive<br>+91 7886996000<br>0788-4040512  | Raigarh<br>Priyanka motors<br>+91 7389910800<br>07762-233550              | Rajnandgaon<br>Shubh Auto<br>+91 9424102224<br>07744-401491                           |

| GOA   | GUJARAT  | GUJARAT   | GUJARAT  | GUJARAT   |
|---|--|---|--|---|
| Goa - Margoa<br>Saini Motors<br>+91 7767006138; 6139; 6140<br>0832-2740343; 2740345<br>Goa - Panaji   | Ahmedabad-<br>Navrangpura<br>Karnavati Bikes Pvt. Ltd.<br>+91 9099031290<br>079-27490068 | Bhavnagar<br>Gujarat Auto Centre<br>+91 8734936206<br>0278-2512648<br>Bhuj          | HimmatNagar<br>Rajvee Auto<br>+91 8238411177<br>Jam Nagar<br>New Chandra Motor Cycle | Navsari<br>PSG Motors<br>+91 9924755521<br>02637-265559   |
| Auto Guides<br>+91 9326102087<br>0832-2225865   | Ahmedabad- Nehru<br>Nagar Ambawadi<br>Sarabhai Motors                                    | PM Autolink<br>+91 9825900279;<br>9925635279, 02832-231279                          | Agency<br>+91 7226065999<br>0288-2552888; 2678024;                                   | Rajkot - Gondal Road<br>Aditya Moto Gujarat Pvt. Ltd.<br>+91 9099092594, 9099092595<br>0281 2371070 |
| GUJARAT<br>Ahmedabad-Sarkhej<br>Gandhinagar Road<br>Kaveri Motors<br>+91 9824039464                   | +91 7926303535<br>079-65243010; 26303535<br><b>Anand</b><br>Royal Ridentity Pvt Ltd.     | Gandhidham<br>N.P. Auto Agencies<br>+91 9426140290;<br>9723540290<br>02836-295927   | 2550863<br>Junagadh<br>Shree Aashapura Enterprise<br>+91 7046008488<br>0285 2660111  | Rajkot - Mota Mava<br>Kalawad Road<br>Dev Motors<br>+91 8401799993                                  |
| 079-65416116; 27663674;<br>27663048<br>Ahmedabad-Mani nagar<br>Sarabhai Automotive<br>+91 9825708033  | +91 9898484500<br>02692-644352<br>Bardoli<br>PSG Motors<br>+91 9924755549                | Gandhinagar<br>Aanal Auto Agency<br>+91 9099049555;<br>8980001123<br>02712-23262020 | Mehsana<br>Parklane Auto<br>+91 9925014803<br>9925004538<br>Morbi                    | 0281-6458888; 9157877331<br>Surat-Adajan Hajira Main -<br>Adajan<br>JSN Motors<br>+91 8401600411    |
| 079-25812530; 2531<br>Ahmedabad- Naroda<br>Krishna Wheels<br>+91 9925333445<br>079-29704155; 29703055 | Bharuch<br>Vraj Auto<br>+91 9824125050<br>02642-225757                                   | Godhra<br>Concord Auto<br>+91 9879074373<br>02672-265522                            | Dev auto<br>+91 9054265550;<br>65551; 65552<br>+91 9054265553; 65554                 | 0261-2840023<br>Surat - Sarthana Varacha<br>Purav Automobiles<br>+91 9979841546, 9979841547         |

| GUJARAT   | HARYANA   | HARYANA   | HARYANA   | HARYANA  |
|---|---|---|---|--|
| Surendranagar<br>Old Soul Motorcycles<br>+91 9909008000               | Ambala - Ambala<br>Chandigarh Highway<br>Royal Motors<br>+91 9315100442                   | Jind<br>Gill Automobiles<br>+91 9416476459<br>Kaithal                 | Palwal<br>Kartike Motors<br>+91 9813131455<br>01275-240454  | <b>Sonipat</b><br>Heydaan Motors<br>+91 9034444433<br>0130-2233004   |
| 02752-242777<br>Vadodara- Harni road<br>Amba Motors<br>+91 7820010060 | 0171-2545795; 2544795<br>Ambala cantt- Rai<br>Market<br>Royal Motors<br>+91 9315100442    | Raghav Automobiles<br>+91 8199946000<br>+91 9254312500;<br>8199947001 | Panipat<br>Monga Automobiles<br>+91 9354140005;<br>40006;40007<br>01274-251000                      | Yamuna Nagar<br>Falcon Automobiles<br>+91 9315431300<br>0173-2346433 |
| 0265-2463232<br>Vadodara - Old Padra<br>Road<br>RSA Automotives       | 0171-2630795; 2631495<br><b>Bhiwani</b><br>Sheoran Auto<br>+91 8950291600<br>01664-252216 | Karnal<br>Monga Motors<br>+91 9354140008<br>184-2261810; 2272729      | Rewari           Premium Automation Pvt Ltd           +91         8607482200           01274-251000 | HIMACHAL PRADESH<br>Baddi<br>Simran Automobiles<br>+91 9816167884    |
| +91 9574257999;<br>9574256999<br>2652355040<br>Vapi                   | <b>Fatehabad</b><br>SDB Automobiles<br>+91 9728942226<br>01667-221786                     | Kurukshetra<br>VPS Motors<br>+91 9254022290<br>01744-231151           | Rohtak<br>Badhwar&Co.<br>+91 8059880031<br>01262-242034; 241173                                     | <b>Chamba</b><br>Champavati Autos<br>+91 9736678651<br>01899-226747  |
| Royal Thumpers<br>+91 9726818181;<br>9879565274                       | Hissar<br>Malik Automobiles<br>+91 8572888890<br>01662-276103                             | Narnaul<br>Royal Jindal Auto Pvt Ltd<br>+91 9813150222                | <b>Sirsa</b><br>Gulzar Motor Agencies<br>+91 9996147200<br>01666-221367; 230459                     | Dharamshala<br>Him Enfield<br>+91 9418083838<br>8894389090           |

| HIMACHAL PRADESH  | HIMACHAL PRADESH   | JAMMU & KASHMIR  | JHARKHAND   | JHARKHAND   |
|---|--|--|---|---|
| Hamirpur (ASP)<br>Parkash Royal Enfield<br>+91 9816058483<br>01972-258483                 | <b>Solan</b><br>Tapan Industries<br>+91 7807400172<br>01860-1800072                      | Leh(ASP)<br>Venture Third Pole<br>+91 9419177466<br>Kathua                                 | Bokaro<br>G.R.Motors<br>+91 9934109008<br>6542265452  | Jamshedpur-Adityapur<br>Aruna Motors<br>+91 8863996222<br>0657-6574010; 6574011 |
| Manali<br>Heaven On Earth Automobiles<br>+91 9459300881<br>01902-205032; 251151           | <b>UNA</b><br>Sharma Automobiles<br>+91 9318536733<br>09218-446755                       | Lovish Automobiles<br>+91 9419166881,<br>9070855555<br>01922-235010                        | Daltonganj<br>Arjun Automobiles<br>+91 9006082822<br>+91 8235121935                                 | Jamshedpur - Bajrang<br>Nagar NH 33<br>Cruiser India<br>+91 9204004142          |
| 08350854002 (Kullu)<br>Mandi<br>Shivam Automobiles<br>+91 9805473700<br>01905-243077      | JAMMU & KASHMIR<br>Baramula<br>ZMR Automobiles<br>+91 9906727248<br>Jammu - Janipur road | Srinagar           PCS Automobiles           +91         9797122244           0194-2472781 | Deoghar<br>Roy Brothers<br>+91 9934344889<br>06432-240371<br>Dhanbad                                | Ramgarh<br>Anjaney Automobiles Pvt. Ltd.<br>+91 9431146297<br>+91 9031000430    |
| 8628876301<br>Paonta Sahib -Sirmour<br>R.S. Enterprises<br>+91 9418117089<br>01704 222507 | Reliance Motors<br>+91 9419191241<br>0191-2536084;<br>0191-2530213                       | Digiana camp (ASP)<br>Sumeet Motors<br>+91 9419236396<br>0191-2431058                      | Arti Automobiles<br>+91 9470133444<br>+91 9031084005<br><b>Dumka</b><br>Majestic Autobikes Pvt Ltd. | Ranchi - Harmu Road<br>Raghuram Autocare<br>+91 9905110006<br>0651-6571607      |
| 01704-223687<br><b>Shimla</b><br>Tapan Industries<br>+91 7807500272<br>01860-1800072      | Jammu<br>Xtream Motors<br>+91 9070699909;<br>9070699900; 9070172999<br>+91 9797568876    | Udhampur<br>R A Enfield<br>+91 9419996901<br>01992-250008                                  | +91 9798777007<br>Hazaribag<br>Riders Point<br>+91 9234343422<br>+91 9031005518                     | Ranchi - Kokar<br>Sri Nivas Automobiles<br>+91 9771420322<br>0651-2542789       |

| KARNATAKA  | KARNATAKA  | KARNATAKA   | KARNATAKA   | KARNATAKA  |
|--|--|---|---|--|
| Bagalkot   | Bangalore - BTM 2nd  | Bangalore - Nelamangala   | Bangalore-Sudhamanagar  | Bhatkal  |
| Bagalkot Motors  | stage  | Sri sai Sadguru Motors  | H S R Services  | Brahmi Motors  |
| +91 8884128877;  | Royal Enfield Company Store  | +91 9071766021;   | +91 9343735655  | +91 9743637456   |
| 9916361134   | +91 9902180044   | 9071766025  | 080-22133119  | 08385-226836   |
| Bangalore-Kpura road<br>H.S.R. Services<br>+91 7829000350;<br>9980762849<br>080-22133119 | 080-40905108; 26689975<br>Bangalore-Electronic City<br>Electronic City Motors<br>+91 7026613071 to 79 & 80<br>8494942929 | Bangalore- Peenya<br>Sri Sadguru Sai Motors<br>+91 9066699094<br>080-28393666<br>Bangalore - Raja<br>Rajeshwari Nagar | Bangalore - B<br>Narayanpur<br>Sai Ram Autocraft<br>+91 7022288662<br>080-64909090<br>Bangalore - Yelahanka | Belgaum<br>Shri Munishwar Motors Pvt. Ltd.<br>+91 7204606064<br>0831-4213059<br>Bellary    |
| Bangalore-Banaswadi<br>CVS Motors<br>+91 9886500045<br>Bangalore-Bannerghatta            | Bangalore-Indira Nagar<br>Teknik Motors<br>+91 8904004004; 8904005004<br>080-25284788, 40910005                          | Accelerate Motors<br>+91 7259534650<br>080-28606969; 28608989<br>Bangalore-Magdi road<br>H.S.R. Enterprises           | Acclaim Motors Pvt Ltd<br>+91 9632881188;<br>9632881133<br>9663550055<br>Bangalore (ASP)                    | Sanjeevini Automobiles<br>+91 7353777768<br>08392-261027<br><b>Bidar</b><br>Bhavani Motors |
| Royal Enfield Company Store  | Bangalore - Kengeri  | +91 9844067555  | Mehboob Garage  | +91 9379799992   |
| +91 9945592345   | Accelerate Motors  | 080-23156617  | +91 9945785022; 9845326062  | Bijapur  |
| 088-22440588   | +91 7022049627   | Bangalore-Sarjapur  | 080-23436682  | Rohan Motors   |
| Bangalore-Bellary Road   | Bangalore-Nagarbhavi   | Teknik Motorcycles  | Bangalore (ASP)   | +91 9986168363   |
| CVS Motors   | S.R. Motors  | +91 8904004004;   | Sri Manjunatha Bullet Garage  | <b>Coorg</b>   |
| +91 9886500042   | +91 9902065933; 9071340000   | 8904000300- 8904000700  | +91 9341220151  | Abhyuday motors  |
| 080-23469600; 23469601   | +91 8032323333   | 080-40910003; 0004; 005   | 080-25427066  | +91 9590000910   |

| KARNATAKA  | KARNATAKA   | KARNATAKA  | KARNATAKA   | KARNATAKA   |
|--|---|--|---|---|
| <b>Chikkamangalore</b><br>Chikkamangalore Motors<br>+91 9742289955                           | Hassan<br>Shree Subrahmanya Motors<br>+91 9980751155,   | Mandya<br>Ruby Maratt Motorcycles<br>+91 9591503399                                  | Mysore (ASP) Kuvempu<br>Nagar<br>Abhyudhay Motor Services                           | <b>Tumkur</b><br>Bhagavati Motors<br>+91 9976384499                           |
| <b>Chitradurga</b><br>Jilu Bikes<br>+91 9845127397<br>+91 8494900552                         | 9742217172<br>Hubli - Airport Road<br>Salimath Engineers Services<br>+91 7259037590<br>0836-3241160 | Mangalore<br>Frontline Automobiles<br>+91 8861006478<br>0824-4267573                 | Pvt. Ltd.<br>+91 9743721955;<br>9538841412<br>0821-2462066/2462067<br>Puttur        | <b>Udupi</b><br>Brahmi Motors<br>+91 9164889161; 9164209161<br>0820-2527590   |
| Davangere<br>Royal Automobiles<br>+91 9844053511   | Hubli - Kusugal Road -<br>Keshwapur   | Mudhol<br>Mudhol Motors<br>+91 8197567124  | Frontline Automobiles<br>+91 9686137888<br>Raichur                                  | KERALA<br>Adoor<br>Yamuna Agencies  |
| 08192-256239   | Klasik Motors<br>+91 8904800948<br>0836-2288223   | Mysore-Vijayanagar 1st<br>Stage  | Chukki Motors<br>+91 8792113336   | +91 9747410243<br>0473-4229222  |
| Gadag<br>Gadag Motors<br>+91 8147776496  | Hunsur<br>Aadith motors<br>08222-252395; 96   | Aadith Motors<br>+91 7899912362; 7899912363<br>8214244467                            | <b>Shimoga</b><br>Apollo Enterprises<br>+91 9008138662;<br>9739696768, +91 41187404 | Alleppey<br>Rider's Motors<br>+91 9447265955                                  |
| <b>Gulbarga</b><br>Mukunda Wheels Pvt. Ltd.<br>+91 9945249302; 49300;<br>49305, 08472-225302 | <b>Kolar</b><br>Jagadamba Automobiles<br>+91 9972522111;<br>8152226619                              | Mysore (ASP)<br>Kempananj. Agrahara<br>Sri Venkateshwara Automobiles<br>0821-2427533 | Sirsi<br>Sri Maruthi Auto Motors  | Calicut-Francis Road<br>Blue Mountain Autos<br>+91 9895201667<br>0495-2302530 |

| KERALA   | KERALA   | KERALA  | KERALA  | KERALA   |
|--|--|---|---|--|
| <b>Calicut - Mankavu</b><br>Luha Automotives<br>+91 7025105333<br>0495-2333533   | Cochin - Vyttila<br>Kaizen Motors<br>+91 7559800072<br>0484-2307072; 4047072 | Kollam - Madanada<br>Unnoonny Motors<br>+91 9567395208<br>0474-2764566; 2764567 | Pathanamthitta<br>Marikar Motors Ltd.<br>+91 8111871222; 9388077007<br>0468-2223412 | Thrissur-Puzhakal Padam<br>Pinnacle Motor Works Pvt. Ltd.<br>+91 7025600600;<br>8111994007 |
| <b>Calicut - Puthiyagandi</b><br>SS Motors<br>+91 9567863979<br>0495-2392200; 2390770  | <b>Kannur</b><br>SS Motors<br>+91 9567862458;<br>9567863980                  | Kodungallur<br>Pinnacle Motor Works Pvt Ltd<br>+91 9072575721                   | <b>Pattambi-Palakkad</b><br>Intrepid Works<br>+91 9744072921<br>0466-2970666        | 0487- 2385255<br><b>Thiruvalla</b><br>St. Mary's Motors<br>+91 9526260400;                 |
| Cochin - Angamali,<br>Areeckal Junction  | 0497-2731312<br>Kannur   | Kottarakara   | <b>Perinthalmanna</b><br>ABC Motors   | 9747972081<br>0469-2733243   |
| Sanjo Motors<br>+91 9809709999<br>0484-6888889   | Vibrant Automobiles<br>+91 8111990066  | Unnoonny Motors<br>+91 9567966444   | +91 9447158400<br>04933-226677  | <b>Thodupuzha</b><br>Veliyathu Motors  |
| Cochin - Chittoor Road   | 0497-2776660<br>Kayamkulam   | Kottayam<br>Javeens   | <b>Perumbavoor</b><br>Sanjo Motors  | 91 8943200090<br>4862227899  |
| St. Mary's Motors<br>+91 8891000691;<br>9895118951   | Roverz Motors<br>+91 9072546555  | +91 9446397300<br>0481-2563455; 2567070   | +91 8592009991<br>0484-6888885  | <b>Tirur</b><br>ABC Motors   |
| 0484-4022819   | Kollam - Bishop Jerome<br>Nagar  | Palakkad  | Thrissur-Karunanakaran<br>Nambiar road  | +91 9605827000<br>0494-2422277   |
| Nagar           Royal Enfield Company Store         Marikar (Motors) Ltd.           +91 7025233912         +91 9947031120; 9947031121           0484 - 6494991; 6494992         0474-2732474 | Intrepid Works<br>+91 8606933008<br>0491-2572331                             | Marikar (Motors) Ltd<br>+91 9388077010; 8606863336<br>0487-2339307              | Trivandrum-Attingal<br>Concept Bikes<br>+91 9048990256                              |  |

| KERALA<br>Trivandrum - Kaimanam<br>Junction<br>Sivaji Motors<br>+91 7736207777; 7736066716 | MADHYA PRADESH<br>Bhopal - Hamidia Road<br>Choudhari Tractor Agency<br>+91 9425023609<br>0755-5240614; 2735762 | MADHYA PRADESH<br>Gwalior<br>Rimik Motors Pvt. Ltd<br>+91 9827935616;<br>9926435616                      | MADHYA PRADESH<br>Khandwa<br>Binwani Motors<br>+91 9425909302<br>7332244222 | MAHARASHTRA<br>Ahmednagar<br>Newaskar Automobiles<br>+91 8087500900<br>0241-2470125    |
|--|--|--|---|--|
| 0471-6506777<br><b>Trivandrum - M G road</b><br>Marikar (Motors) Ltd<br>+91 8606068466     | Bhopal-Padmanabh Nagar<br>Ananya Auto<br>+91 7389930806<br>0755-4076937  | 0751-4035616<br>Indore - Nehru Market<br>Krishna Motor Agency<br>+91 9826034012<br>0731-2703172          | Satna<br>Manish Motors<br>+91 9827250199<br>07672-251608                    | <b>Akola</b><br>Agrawal Motors<br>+91 8408089944<br>0724-2258259                       |
| 0471-2334621<br>Trivandrum - Vetturoad -<br>Kazha kuttam<br>Concept Bikes                  | <b>Chhindwara</b><br>Rahul Royal Motors<br>+91 8889999602<br>07162-245255                                      | Indore - Sayaji Club<br>Road<br>RR Automotive<br>+91 8878660100<br>0731-4222822                          | Shahdol<br>Gupta Automotive<br>+91 8718811703<br>0765-2231967               | Alibagh<br>SK Autoriders<br>+91 9970041579<br>02141-223030                             |
| +91 9048400200; 9048990546<br>Vadakara<br>Grace Motors<br>+91 7034775555                   | Dewas<br>R R Motorcycles<br>+91 8109103622<br>8269270709   | Jabalpur<br>RoyalThumpers<br>+91 8962010072<br>0761-4042424; 4042423                                     | <b>Ujjain</b><br>Avis Auto<br>+91 9300005025<br>0734-2520007                | Amravati<br>Bhans Automotive<br>+91 7620177060<br>0721-2510636                         |
| <b>Valluvambaram-</b><br><b>Malappuram</b><br>ABC Motors<br>+91 7034166300<br>0483-2770700 | Guna<br>Standard Motors<br>+91 9754222241<br>+91 9425131250  | Katni<br>Royal Thumpers A Division of<br>Superior Automobiles Pvt Ltd.<br>+91 8962010075<br>07622-226474 | <b>Vidisha</b><br>Adventure Bike<br>+91 9425148606<br>0759-2408222          | Aurangabad - Bansilal<br>Nagar<br>S.K.Y.S Automobile<br>+91 9028059252<br>0240-2350652 |

| MAHARASHTRA  | MAHARASHTRA   | MAHARASHTRA   | MAHARASHTRA   | MAHARASHTRA  |
|--|---|---|---|--|
| Aurangabad-CIDCO-<br>Cannaught<br>Cherry Corporation<br>+91 9850889408<br>0240-6601613 | Chandrapur<br>Dinesh Motors<br>+91 9028111383<br>07172-260555                           | Jalgaon<br>Usha Motors<br>+91 7768009996<br>0257-6999000                | Mumbai - Bhandup<br>Soniya Motors Pvt. Ltd<br>+91 9322314555<br>022-65650153; 7208005209      | Mumbai-Thane<br>(Dombivali)<br>Pooja Motors<br>+91 8425840752  |
| Baramati<br>Jay Motors<br>+91 9960247655;<br>9890090381<br>02112-221055                | Dhule<br>Surbhi Motors<br>+91 9371057573<br>02562-239933                                | Karad<br>Nand Enterprises<br>+91 9923981211<br>02164-242772<br>Kolhapur | Mumbai - Goregaon<br>Ishna Wheels<br>+91 8879330226;<br>8879330227<br>022-28711242; 28711243  | 0251-2470611<br>Mumbai - Thane<br>(Godbundar)<br>Soniya Motors Pvt. Ltd<br>+91 9322315111              |
| Beed<br>Aaryan Motors<br>+91 9421184118<br>02442-223780                                | Gadinglaj<br>Yashashri Motors<br>+91 9657009444<br>9527094848                           | Motor India<br>+91 9822871729<br>0231-2531177                           | Mumbai - Kandivali<br>Voyage Motors<br>+91 9146871013; 7498567890<br>022-28087882             | +91         9322315111           022-25893202;         7208005207;           7208005208         Mumbai |
| Buldhana<br>Samyak Automotive<br>+91 9422181159<br>072-62241273                        | Ichalkaranji<br>Motor India<br>+91 9822551777   | Prisha Motors<br>+91 9049607711<br>02382-200711<br>Malegaon             | Mumbai-Panvel           Pratik Motors           +91         9029422942           022-27480040 | <b>road)</b><br>Unison Automobiles<br>+91 9029234040<br>022-28456620                                   |
| <b>Borivali</b><br>Unison Automobiles<br>+91 7506555039<br>22265614014                 | Indapur           Sahyadri Auto           +91         7387111109           02111-224111 | Shaurya Motors<br>+91 8380038153; 156;<br>9527002881<br>02554-231171    | Mumbai - Sakinaka<br>Synergy Auto Inc<br>+91 8286046565<br>022-28590085; 28590086             | Mumbai - Thane (Vasai)<br>SP Wheels<br>+91 8446011105<br>0250-6511107; 6511108                         |

| MAHARASHTRA   | MAHARASHTRA   | MAHARASHTRA  | MAHARASHTRA  | MAHARASHTRA   |
|---|---|--|--|---|
| Mumbai - Thane (Ulhas<br>Nagar)<br>S R Motors (A Unit of Riya<br>Motors Pvt. Ltd) | Nagpur - Wardhaman<br>Nagar<br>Shri Krishna Automobiles<br>+91 9372121346 | Nasik - Ganjamal<br>Ostwal Autos<br>+91 9595301414<br>0253-2500291   | Phaltan<br>Adved Motors<br>+91 7040829609<br>02166-225272; 225472  | <b>Pune - Fathima Nagar</b><br>Platiinum Auto<br>+91 7755932578; 2579<br>+91 9881171717   |
| +91 7738622211;<br>7506044995<br>0251-2700043                                     | 0712-3191202<br>Nanded<br>Jairam Motors<br>+91 9552446688                 | Nasik - Satpur<br>Moharir Auto Pvt. Ltd.<br>+91 8446646555;          | Pimgalgaon<br>Shaurya Motors<br>Shaurya Motors   | Pune - Hadapsar<br>Platiinum Auto<br>+91 7030911278;<br>7030911284  |
| Mumbai (ASP) Nerul<br>Ram Motorcycles<br>+91 9323025335                           | 02462-297788<br>Nandurbar<br>Dinesh Wheels                                | 8378998295<br>0253-6630000<br>Osmanabad                              | +91 9130068287<br>02550-660604<br>Pune - Adarsh Nagar<br>Dhone Automobiles   | Pune - Kasarwadi<br>Dhone Automobiles<br>+91 7028045684   |
| 022-27700394;<br>022-27700396<br>Nagpur - Kamptee Road                            | +91 9673298999<br>+91 9764567877  | Hatlai Auto<br>+91 9822838888<br>02472-228588                        | +91 7028922644<br>020-24273335   | Pune - Khed Shivpur<br>Siddh Auto<br>+91 9673152266   |
| Ved Motors<br>+91 9326916819<br>0712-2652222; 2654444                             | Narayangaon<br>Kings Royal Riders<br>+91 9075009831<br>0213-2245542       | Parbhani<br>Chandrallama Automotive<br>+91 9665516193<br>2452-242299 | Pune         Baner           Kings Auto Riders         +91           +91         7875756100           020-27200256 | Pune - Kothrud<br>Siddh Auto<br>+91 9168376611<br>020-25280050; 25280051  |
| Nagpur - Sitaburdi<br>Paragon Traders<br>+91 9595622261<br>0712-2523456           | Nasik - Dwarka<br>Ostwal Autos<br>+91 9422255773<br>0253-2592717          | Parli<br>Shiva Motors<br>+91 9765924477<br>02446-227477              | Pune         Chinchwad           Hridaan Motors         +91         9850888899         2069100202                  | D20-23280030; 23280031           Pune         Yerwada           Dhone Automobiles         +91           +91         7028978074           020-60121812 |

| MAHARASHTRA<br>Pune - Wakad (Talegaon)<br>Kings Auto Riders<br>020-65107545 | MAHARASHTRA<br>Satara<br>Nand Enterprises<br>+91 9923981211                                   | MAHARASHTRA<br>Wardha<br>Sri Krishna Automobiles<br>+91 9769169180  | MIZORAM<br>Aizawal<br>Lawma Enfield<br>+91 8575517879   | NEW DELHI & NCR<br>Delhi - Jhandewalan Ext.<br>Ess Aar Motors<br>+91 9810797099                    |
|---|---|---|---|--|
| Pune - Wakhewade<br>Brahma Motors<br>+91 7276629900                         | 02164-242772<br>Shrirampur<br>Karachiwala Automobiles<br>+91 9028537570                       | +91 7410061121<br>Yavatmal<br>Aaditya Riders Pvt Ltd                | 0389-2334731<br>NAGALAND<br>Dimapur                     | O11-65461901; 23524426<br>Delhi - Kailash colony,<br>Okhla Indust. Area<br>South Delhi Motorcycles |
| 7276027722<br><b>Pune (ASP)</b><br>Sadguru Service Station                  | 02422- 227570<br>Solapur - Bale chowk,<br>Pune Highway  | +91 8055958119<br>9158632833<br>MANIPUR                             | Uniglobe Enterprises<br>+91 9774057770<br>3862225903    | +91 9716145509,<br>9716002728<br>011-26811013<br>Delhi - Mahipalpur                                |
| +91 8308048854;<br>9011078854, 020-24350727<br>Ratnagiri                    | Chavan Motors<br>+91 7720069040<br>0217-2352323/2352424                                       | Imphal<br>Sanamahhi Motors<br>+91 8259061598                        | NEW DELHI & NCR<br>Delhi - Dhwarka<br>Cruiser Motors    | Kay Tee Automobiles<br>+91 9910884777<br>011-64612777  |
| Advait Motors<br>+91 9970551171<br>02352-228930                             | Solapur - Budhwarpeth<br>Mondhe Motors<br>+91 8237466447; 6446; 6442<br>0217-2315923; 2735081 | 0385-2449111<br>MEGHALAYA   | +91 9136310966<br>+91 8459223833<br>Delhi - Gujrawala   | Delhi - Mangolpuri<br>Soni Automobiles<br>+91 9873069001<br>011-27921311; 65180349                 |
| <b>Sangli</b><br>Abhay Auto<br>+91 7768073003;<br>9011964040, 0233-2623040  | Waluj - Pandharpur<br>Godavari Agro Serivces Pvt. Ltd<br>+91 9146189551<br>0240-2553770       | Shillong<br>Merin's Royal Enfield<br>+91 8258811320<br>0364-2590048 | Kay's Autos<br>+91 9810433555<br>011-28877008; 28877009 | <b>Delhi - Najafgarh</b><br>Outer Delhi Motorcycles<br>+91 9540941601<br>011 68888252 / 53         |

| NEW DELHI & NCR  | NEW DELHI & NCR  | NEW DELHI & NCR  | NEW DELHI & NCR  | ORISSA  |
|--|--|--|--|---|
| <b>Delhi - Padapadganj</b>   | New Delhi (ASP)  | Ghaziabad (ASP)  | NCR-Noida - Sector 10  | <b>Bargarh</b>  |
| Asco Motors  | Balaji Motors  | Jai Shiv enterprises   | Shree Mahadev Agency   | Shree Shyamji Bike Point  |
| +91 9582184488   | +91 9350102768   | +91 9927064206   | +91 9811404319   | +91 9437053233  |
| 011-2214888  | +91 8826574278   | Ghaziabad (ASP)  | 0120-4310052/4324662   | +91 7381053244; 255   |
| <b>Delhi - Rama Road</b>   | Delhi (ASP)  | Royal Taj Agency   | NCR-Noida - Sector 63  | <b>Baripada</b>   |
| Lamba Enterprises Pvt Ltd.   | M.G. Auto Sales  | +91 9810413387   | Solitaire Automotive   | Legend Automotive   |
| +91 9711611591   | +91 9810237417   | +91 9818728177   | +91 9810703922   | +91 9178024417;   |
| 011-45151159   | 011-27837439   | NCR Gurgaon - Old  | 0120-4547929   | 9040078001  |
| Delhi - Saraswati Vihar<br>North Delhi Motorcycles<br>+91 9810558625<br>011-27054737 | NCR - Faridabad -<br>Mathura Road<br>Heighten Automotive Pvt Ltd<br>+91 9911223811<br>+91 9717475811 | Delhi Road<br>Aman Automobiles<br>+91 9810535659<br>1244084648<br>NCR Gurgaon - Sheetala | NCR-Sahibabad<br>Sangam Autos<br>+91 9311051177;<br>9990624290, 0120-4198890 | Berhampur<br>Vaishnavi Automobiles<br>+91 9937308525;<br>7682833574; 6802248820     |
| <b>Delhi - Shahadra</b><br>Amar Autos<br>+91 8802583948<br>011-43595322              | NCR - NIT Faridabad<br>Sohan Auto World<br>+91 9811551530<br>0129-2429352                            | Mata road<br>Brawn Automobiles<br>+91 9212315090<br>1244251481                           | ORISSA<br>Angul<br>Green Treet Automotive (P) Ltd<br>+91 9937066505          | Bhubaneshwar - Buddha<br>Nagar<br>Royal Automobiles<br>+91 7752017606<br>8192256239 |
| <b>Delhi - Tilaknagar</b>  | NCR - Ghaziabad -  | NCR Gurgaon - Sohna  | +91 7852936512   | Bhubaneshwar - KIIT   |
| Lamba Enterprises Pvt Ltd.   | Nehru Nagar  | Road   | Balasore   | Road, Sishu Vihar   |
| +91 9999389189;  | Rawal Automobiles Pvt Ltd  | Manzil Motors Pvt. Ltd.  | Favour Ride  | Gugnani Automobiles   |
| 9250919994   | +91 9350315311   | +91 9650311988   | +91 7894775144;  | +91 9776160313;   |
| 011-45614855; 42138246   | 0120-4104659; 9211921227   | 1244231683   | 90400557156  | 9178143270  |

| ORISSA  | ORISSA   | PUNJAB  | PUNJAB   | PUNJAB  |
|---|--|---|--|---|
| Bhubaneshwar - NH 5 -<br>Patrapada<br>Trupti Autoworld<br>+91 9861824216;   | <b>Keonjhar</b><br>Sai Automobile<br>+91 9437054807<br>+91 9437004711                                  | <b>Abohar</b><br>Aman Auto Zone<br>+91 9814767900<br>+91 9914767900       | Bhatinda-Goniana Road<br>Ajay Autos<br>+91 9988678145<br>0164-2235608; 5000376                 | <b>Gurdaspur</b><br>Ajit Motors<br>+91 9855152204<br>01874-501644                         |
| 7873024206<br>0674-2470148<br><b>Bhawanipatana</b><br>Shyamkrishna Mart pvt Itd   | Rourkela<br>The Agents & Distributors<br>+91 9937007971;   | Amritsar<br>Jaycee Motors Corporation<br>+91 9780038349<br>+91 9780038078 | Bhatinda - Mansa Road<br>Krishna Automobiles<br>+91 8725086888<br>0164-2212802                 | Hamirpur<br>Parkash Royal Automobiles<br>+91 9418458483<br>01972-258483                   |
| +91 9040350293<br>8763130236<br><b>Cuttack</b><br>Shree Hanuman Automobiles<br>+91 8342039286; 9438429957<br>0671-2586630; 9853265588 | 9238111010; 0661-2511223<br>Sambhalpur<br>Sreyasri Motors<br>+91 9040015355;<br>9437030055; 9040015359 | <b>Barnala</b><br>Megan Autos<br>+91 9878120088<br>+91 9878120033         | Faridkot<br>Baba Farid Automobiles<br>+91 9780247048;<br>9872409626<br>01639-251343<br>Fazilka | Hoshiarpur<br>Lagwal Automobiles<br>+91 9256514321<br>01882-238586<br>Jalandhar - GT Road |
| Jajpur Road<br>Birendra Motors<br>+91 9078886306  | 0663-2115355<br>PONDICHERRY<br>Pondy   | <b>Batala</b><br>Moon Autos<br>+91 9988355955                             | Aman Auto Zone<br>+91 9988700765;<br>9814667900  | Fateh Autos<br>+91 9417231123<br>0181-2632880   |
| <b>Jeypore</b><br>Golden Motors<br>+91 9439355473;<br>9437024187  | Rooster Automobiles<br>+91 8940422422<br>0413-2355336  | 01871-222278<br>Begowal<br>S.S.Motors<br>+91 9814399532                   | Ferozepur<br>Royal Hut<br>+91 8437312364<br>01632-242567                                       | Jalandar - SatlujMarket<br>Navyug Motors<br>+91 9915630535; 9878785796<br>0181-4627998    |

| PUNJAB   | PUNJAB   | PUNJAB  | PUNJAB   | PUNJAB  |
|--|--|---|--|---|
| Jalandar - G.T.Road<br>Navyug Motors<br>+91 9878785796<br>0181-4627998   | Ludhiana - Jodhewal<br>Shree Dadu Dayal Automotive<br>+91 8728092401<br>0161-5040405 | Mohali<br>Manmohan Motors<br>+91 9216267888;<br>9988317366                      | Nakodar (ASP)<br>Bhagwati Automobiles<br>+91 9357242788<br>+91 9041522970                                    | Patiala - Sirhind Road<br>Gurukirpa Motors<br>+91 9779222225<br>Phagwara  |
| Kapurthala<br>Innovative Automobiles<br>+91 9357254736<br>01822-233011   | Mahilpur (ASP)<br>Mahilpur Motors<br>+91 9417354423                                  | 0172-6527366; 6527367<br>Morinda<br>Morinda Motorcycle Centre<br>+91 8427242324 | Nangal           Nangal Motors           +91         8283829760;   | Khalsa Automobiles<br>+91 9463138303<br>01824-270081                      |
| Khanna<br>Kishori Automobiles<br>+91 9872030903;<br>8591525575; 01628-503868<br>Ludhiana - Dholewal -                  | Malerkotla<br>Om Automobiles<br>+91 9814404513;<br>8054944713<br>01675-262113        | 0160-2630357; 2630072<br>Mukherian<br>Lagwal Motors<br>+91 8699982680           | 9878667432; 01887-229160<br>Nawanshahar<br>HS Enterprises<br>+91 9417654888;<br>8146091105; 01823-221194     | <b>Ropar</b><br>Garcha Automobiles<br>+91 9464752267<br>01881-228137      |
| GT Road<br>Sant Motors<br>+91 8968296020<br>0161-5012647   | Mansa<br>Ganpati Motors<br>+91 9779850001<br>01652-236899                            | Muktsar<br>Deep Autos<br>+91 8566926850<br>0163-3510390                         | Pathankot<br>Cashmir Sales Corporation<br>+91 9417412884<br>0186-2220148; 2224672                            | Sangrur<br>Verma Automobiles<br>+91 9888836998<br>01672-223273            |
| Ludhiana - Gurudev<br>Nagar - ferozpur Road<br>Barnala Automobiles(Jagroan)<br>+91 9780014995<br>0161-2424114; 2426209 | <b>Moga</b><br>Bikram Sales Corporation<br>+91 9855914072<br>01636-227777            | Nabha<br>Partap Automobiles<br>+91 9815001739;<br>9815001740<br>9872605400      | Patiala - Rajpura Road           Sukhdev Automobiles           +91         9876103017           0175-2305721 | <b>Sultanpur Lodhi</b><br>Dalbir Motors<br>+91 9814679432<br>01828-223634 |

| PUNJAB<br>Tanda<br>Sandeep Automobiles<br>+91 9914554304<br>01886-502398        | RAJASTHAN<br>Banswara<br>Veer Autolinks<br>+91 9001406681<br>02962-254135          | RAJASTHAN<br>Chittorgarh<br>Manglam Motocorp<br>+91 7737094370<br>01472-297018         | RAJASTHAN<br>Jaipur (ASP)-Sudershan<br>Pura<br>JMS & Co<br>+91 9460345047;        | RAJASTHAN<br>Nagaur<br>D.D.Autotech<br>+91 9828943737<br>01582-243006 |
|---|--|--|---|---|
| <b>Taran Taran</b><br>Chhabra Auto Agencies<br>+91 9815213148<br>+91 8528180632 | Barmer<br>Devrath Motors Pvt. Ltd<br>+91 8107381111;<br>9549657080<br>02982-224381 | Churu Balaji Motors Pvt Ltd<br>+91 964977777<br>01562-253777                           | 9785415498<br>0141-4059277<br>Jhunjhunu<br>Balaji Motors<br>+91 7733022411        | <b>Pali</b><br>RMD Motors<br>+91 9829285357<br>0293-2227151           |
| Zirakhpur<br>Garg Auto zone<br>+91 8427656388<br>RAJASTHAN                      | <b>Bharatpur</b><br>Khusali Motors<br>+91 9414944972                               | Hanumangarh<br>Udai Motors<br>+91 9772780001<br>01552-226266                           | 01592-231061<br>Jodhpur<br>Shree Rajpurohit Automobiles<br>+91 9001744442         | Sikar<br>Apoorva Motors<br>+91 9314237183<br>01572-245830             |
| <b>Ajmer</b><br>Jogbala Motors Pvt Ltd.<br>+91 9829072298<br>0145-2787666       | <b>Bhilwara</b><br>Soni Automobile<br>+91 8233416700<br>011 27921311; 65902249     | Jaipur - Govind Marg<br>Rajesh Motors (Raj.) Pvt Ltd.<br>+91 9521125125;<br>9414064864 | 0291-2980473<br>Kota<br>Mundra Motors Pvt. Ltd.<br>+91 9352602347<br>0744-2361264 | Sriganganagar<br>National Motors<br>+91 9414211956<br>0154-2444200    |
| <b>Alwar</b><br>R.S. Motors<br>+91 8696900842;<br>9785999998, 0144-2738248      | <b>Bikaner</b><br>Bikaner Bikes Pvt Ltd<br>+91 9529269924<br>0151-2251345          | Jaipur - Tonk Road<br>Aditi Motors<br>+91 9829822722<br>0141-2700224                   | <b>Kotputli</b><br>Shree Motors<br>+91 9468768300;<br>9116011113; 2912980473      | Udaipur<br>Voyage Motors<br>+91 9799144460<br>0294-2460104            |

| TAMILNADU  | TAMILNADU   | <b>TAMILNADU</b>  | TAMILNADU  | TAMILNADU   |
|--|---|---|--|---|
| Arani  | Chennai - Broadway  | Chennai - Kelambakkam   | Chennai - Pallikaranai   | Cuddalore   |
| Akan Agency  | Balaji Motors   | Vardhan Motors  | Sri Venkateswara Bike Zone   | Rooster Automobiles   |
| +91 9751502221   | +91 9962997975  | +91 9092604446  | +91 8681863330   | +91 9791322822  |
| +91 7845330209   | Chennai - Chrompet  | +91 9092604447  | 044-65655222   | 04142-227788  |
| <b>Chengalpattu-GST Road</b>   | The Legend Motors   | Chennai - OMR,  | Coimbatore - Hope  | <b>Dharmapuri</b>   |
| Shiv Sholai motors   | +91 7299042018  | Perungudi   | College, Peelamedu   | S.M.Motors  |
| +91 9500008699   | 044-49595867; 22410272  | Royal Enfield Company store   | Royal Enfield Company Store  | +91 7373778259,   |
| +91 9786177477   | Chennai - Greams Road   | +91 8939958655  | +91 9655999844   | 9994852482; 04342-288123  |
| Chennai - Ambattur<br>Classic Motorcycles<br>+91 9940063306<br>044-42180206 - 45080207 | Sri Velavan Motors<br>+91 8754553411; 8754553404<br>044-42076898<br>Chennai - Jafferkhanpet | 044 - 42607777; 42607555<br>Chennai - Purasaiwalkam<br>I Speed Motors<br>+91 9094633712<br>044 45588047 | 0422-6067006; 6067007<br>Coimbatore - Sai Baba<br>colony<br>Sheriff Motors | Dindigul<br>Rajendra Automobiles<br>+91 965933433, 8508678333<br>0451-2431850 |
| <b>Chennai - Anna Nagar</b><br>Southern Motors<br>+91 9841277990<br>044-26264686       | Sreehita Auto Zone<br>+91 7338819603; 04; 05<br>044-65906590; 591                           | <b>Chennai - Red Hills</b><br>AKG Motors<br>+91 9597082578  | +91 9597310101<br>0422-4210101<br>Coimbatore - Trichy                      | Erode<br>Senthil Murugan Auto Agencies<br>+91 8220048567<br>+91 9790030003    |
| Chennai - Alapakkam  | Chennai - Kattuppakkam  | 044-26322063  | Road, Kothari Layout   | Hosur   |
| Sri Velavan Motors   | Aravinduja Motors Private   | <b>Chennai - Tondiarpet</b>   | BullMenn Motors  | Sri Saravana Motors   |
| +91 7299405000;  | Limited   | Balaji Motors   | +91 9514555510;  | +91 9543813032;   |
| 7299705000;7299709999  | +91 8939804335  | +91 9087521116  | 7092900000;  | 8220013432  |
| 044-24761902   | 044-45554888  | 044-25910104; 25910105  | 7092900000   | 04344-244030/ 244031  |

| TAMILNADU   | TAMILNADU  | TAMILNADU           Namakkal           Royal Annanmar           +91         8883114777           04286-277557 | TAMILNADU   | TAMILNADU  |
|---|--|---|---|--|
| Hosur (ASP) - Seetharam   | Kumbakonam   |   | Thanjavur   | Tirupur  |
| Nager   | A.V. Motors  |   | JAF Associates  | Bikerz   |
| Sri Manjunatha Bullet Garage  | +91 7598707783; 7598707785   |   | +91 7867019836;   | +91 7502387000   |
| +91 9894955499;   | 0435-2415286   |   | 7867019831  | +91 9842187000   |
| 9940909908<br>0434-4314114<br><b>Kanchipuram</b><br>Jet Blaze Motors<br>+91 9629032223; | Madurai - KK Nagar<br>Madras Motors<br>+91 9976755111<br>0452-2585686<br>Madurai - Kazhavasal, | <b>Pollachi</b><br>Bharat Motors<br>+91 9715222600<br>+91 9843345461  | Theni<br>Coral Moto Hub<br>+91 9500739686<br>9698933000               | Trichy - Annamalai Nagar<br>Karur road<br>Oxina Motors<br>+91 8056455577<br>7402718502;  |
| 9894538176  | Theni main road           Classic Motors           +91 9629023344           0452-2667875       | Salem - Four Roads  | Thiruvannamalai   | 7402718514   |
| Karaikkudi  |  | Chamundi Enfield  | AKAN Agency   | Vellore  |
| Neha Motors   |  | +91 8098611999; 8098559999  | +91 9843033861  | Sri Kalikambal Autos   |
| +91 7373097717  |  | 0427-2414100  | 04175-233377  | +91 8508536771   |
| Karur<br>Murugan Motors<br>+91 9500955950;<br>9543255950; 0432-4329950<br>Krishnagiri   | Madurai - Simmakkal,<br>Workshop Road<br>G.G. Motors<br>+91 8012688444<br>0452-2342007         | <b>Sivakasi</b><br>Sri Scorpion Racers (P) Ltd<br>+91 7373059701<br>0456-2231303                              | <b>Thoothkudi</b><br>Charles Motors<br>+91 9944723062<br>0461-2321636 | 0416-2245505<br><b>Karaikal</b><br>Rooster Automobiles<br>+91 7639001047<br>0436-8228800 |
| Sree Maruthi Motor & Auto   | Nagercoil  | <b>Thiruvallur</b>  | <b>Tirunelveli</b>  | <b>Villupuram</b>  |
| Service   | Chandra Motors   | Gap Motors  | DG Motors   | Rooster Automobiles  |
| +91 9159566613 ,  | +91 8973886699   | +91 8939983660  | +91 9486729010  | +91 8489144744   |
| 9159566615; 0434-3232512  | 04652-236477   | +91 8939983662  | 0462-2970031  | 04146-222279   |

| TELANGANA<br>HYDERABAD &<br>SECUNDARABAD<br>Hyderabad- Banjara Hills   | TELANGANA<br>Hyderabad-PJR Nagar,<br>Gachibowli road<br>Go Green Motors India Pvt. Ltd    | TELANGANA<br>Hyderabad-Zafferguda,<br>Mehidipatnam<br>Venkataramana Automobiles                       | TELANGANA<br>Karimnagar-CVNR Road<br>Quality Motors<br>+91 9030775252                   | <b>TELANGANA</b><br><b>Miryalguda</b><br>Sri Lakshmi Pavan            |
|--|---|---|---|---|
| VVC Automobiles<br>+91 7842883883<br>Hyderabad-Bowenpally,<br>Suchitra<br>SVR Motors and Engineering                     | 040-64646303<br>040-64626265<br>Hyderabad-Prasanth<br>Nagar,vanasthalipuram               | Pvt Ltd<br>+91 7660008132;<br>9100087519, 040-23514551<br>Secundarabad-Begumpet<br>Kayjee Engineers   | Khammam<br>Royal Automotives<br>+91 9963886789<br>+91 8297536789                        | Automotives<br>+91 966660606<br>Nalgonda<br>Vijayalakshmi Automotives |
| +91 8885023360;<br>8885023350<br>040-40116336<br>Hyderabad-Erragada  | Taurus Motors<br>+91 8125828787<br>040-29804755<br>Hyderabad-<br>Ramachandrapuram,        | +91 9246113133<br>040-27907444<br>Secundrabad- Neredmet<br>Orange International<br>+91 8121091210     | Kothagudam<br>Royal Motors<br>+91 8297616789<br>+91 8297626789                          | +91 8885966627<br>8885966687<br>Nizamabad<br>KY Motors                |
| Royal Enfield Company Store<br>+91 9989055856;<br>7093190003; 7416783025<br>040-23701235; 23702255<br>Hyderabad-Himmayat | BHEL<br>Go Green Motors India Pvt. Ltd<br>+91 8712126622<br>040-69996644; 69996622        | 040-64449494; 3434  | Mahabub Nagar<br>Harshithh Automotives<br>+91 7660022336;<br>7660022334                 | +91 8885198222<br>08462-236882<br>Warrangal-Hanamkonda                |
| Nagar<br>Jayasree Automotives<br>+91 9010183555<br>+91 9010752555<br>040-65169666  | Hyderabad-Saraswathi<br>Nagar, Uppal<br>Royal Engineers<br>+91 9885051755<br>040-64241755 | 040 - 64533839<br><b>Karimnagar-Bye pass Road</b><br>Quality Motors<br>+91 9966173000<br>0878-6509993 | Mancherial           J V Aryan Motors           +91 8179356458           +91 8297388775 | Quality Automobiles<br>+91 9030775252<br>+91 9030775164               |

| TRIPURA  | UTTARKHAND  | UTTARKHAND   | UTTAR PRADESH  | UTTAR PRADESH   |
|--|---|--|--|---|
| Agartala<br>XED Motorcycles<br>+91 8415951975<br>0381-2341098                                      | Haridwar<br>Prem Auto Enterprises<br>+91 9927994477<br>01334-250242; 253242           | <b>Rudrapur</b><br>Brar Motors<br>+91 9219445699<br>05944-2473127      | Allahabad - Bai Ka Bagh<br>Vrindavan Automotive<br>+91 7860352786;<br>7860383786<br>0532-2417021 | Bareilly<br>Suri Sales (P) Limited<br>+91 9359108047<br>7351007963          |
| UTTARKHAND<br>Dehradun - Karanpur<br>Road<br>Abuia Enterprises                                     | Kashipur<br>Batra Enterprises<br>+91 9837336026<br>05947-277207                       | UTTAR PRADESH<br>Agra - Baluganj<br>Shambhavi Automotive<br>Engineers  | Allahabad-Kamla Nehru<br>Hospital<br>Jay Pee Motors<br>+91 7705907327; 7328; 7329                | 0581-2543334<br>Basti<br>New India Merchant<br>+91 9532211786               |
| Ahuja Enterprises<br>+91 9927532535<br>0135-2659082<br>Dehradun - Saharanpur<br>Road - Niranjanpur | <b>Pithoragarh (ASP)</b><br>Sai Automobiles<br>+91 9412981042<br>05964-225786         | +91 8057400022<br>0562-2260444<br>AGRA-Guru Ka Tal-NH 2<br>Agra Royals | 0532-6061002;1003<br><b>Azamgarh</b><br>Amit Motors<br>+91 9415795792<br>+91 9415103787          | 554 2281483<br>Bijnor<br>Chaudhary Motors<br>+91 8958994499<br>01342-264455 |
| Allied Auto Agencies<br>+91 969077771<br>0135-2623487  | Rishikesh (ASP)<br>Ranjeet Motorcycles<br>+91 9897548171;<br>9897113728, 0135-2434171 | +91 9837004872;<br>9997023456<br>0562-6888846<br>Aligarh               | <b>Badaun</b><br>Omkar Motors<br>+91 9412427289<br>9520330305                                    | Bulandshahar<br>Santhosh Enterprises<br>+91 9760415515<br>05732-231326      |
| Haldwani<br>Suri Sales (P) Limited<br>+91 7351007972<br>05946-210768                               | <b>Roorkee</b><br>Goswami Automobiles<br>+91 9897238608<br>01332-277477               | Maindola Royal Enfield<br>+91 9319144044<br>0571-3292464               | <b>Barabanki</b><br>G.R & Company<br>+91 7706911346;<br>7706911342                               | <b>Deoria</b><br>Supreem Motors<br>+91 9628755557<br>05568-229624           |

| UTTAR PRADESH   | UTTAR PRADESH  | UTTAR PRADESH   | UTTAR PRADESH  | UTTAR PRADESH   |
|---|--|---|--|---|
| Etawah<br>V P Motors<br>+91 9719530742  | Ghazipur<br>Shri Sai Chandra Automobiles<br>+91 9415881073   | <b>Kanpur</b><br>Sareen Motors<br>+91 9389629521                                      | Lucknow - Alambagh<br>Shreya Auto World Pvt. Ltd.<br>+91 8400400842; 850             | Meerut - Jagriti Vihar<br>Moto Riders<br>+91 8476900096<br>0121-4000511                     |
| +91 9568013104<br>Faizabad<br>Chawla Riders<br>+91 9628140004-07                          | Gonda<br>Style N Passion<br>+91 9125411110<br>Gorakhpur<br>Shin Matana (A Unit of                    | 0512-2540484<br>Kanpur-Khalasa Line<br>Sareen Motors<br>+91 7705905138;<br>8799414243 | 0522-4037677; 4041033<br>Lucknow - Jankipuram<br>Royal Motor works<br>+91 7607777396 | Meerut - West rithani<br>Nutech motors<br>+91 7088714714<br>0121-440111                     |
| 0527-8265077/78<br>Farrukhabad<br>Ankur Auto Agencies<br>+91 9415124921<br>+91 7678874000 | Shiv Motors (A Unit of<br>Pardeshi Zigwheels Pvt. Ltd.)<br>+91 9559005759<br>0551-2230014<br>Jaunpur | 8799414243<br>8303220224<br>Kanpur<br>S.S Automobiles<br>+91 7705006411               | 522 4078111<br>Maharajganj<br>RK Motors<br>+91 9161274582                            | Moradabad<br>Akanksha Autozone Pvt Ltd.<br>+91 7060007905<br>0591-6055999<br>Muzaffar Nagar |
| Fatehpur<br>K S Auto Sales<br>+91 9616519248<br>05180-221223                              | Aditya Motors<br>+91 9196128730;<br>9839216882<br>0545-2264047                                       | Lakhimpur Kheri<br>Shree Vinayak Motors<br>+91 9554155999<br>0587 2277734             | Mathura<br>Aryaman Enterprises<br>+91 9675303059<br>+91 8392916221                   | Harivansh Auto Agency<br>+91 9219440446;<br>8979298645<br>0131-2646477                      |
| Firozabad<br>Emerald Automobiles<br>+91 9219439555<br>+91 9219439444                      | Jhansi<br>Triveni Enterprises<br>+91 9415059809<br>0510-2481007; 2380007                             | Lucknow (ASP)<br>Amafh Bullet Centre<br>+91 9415018786<br>0522-4074200                | MAU<br>Chandra Motors<br>+91 9450189107<br>0547-2860555                              | Nazibabads<br>Agarwal Tractor & Parts<br>+91 9927030546;<br>9837072868<br>01341-220252      |

| UTTAR PRADESH   | UTTAR PRADESH   | WEST BENGAL  | WEST BENGAL  | WEST BENGAL   |
|---|---|--|--|---|
| Padrauna  | Unnao   | Barasat-24 Parganas  | Durgapur   | Kolkata - Behala  |
| Cantech Automobiles   | Raj Auto World  | The Country Motors   | R.H. Automobiles Pvt.Ltd.  | Chunnilal Jhanwarlal Motors   |
| +91 9838719444;   | +91 7080903700  | +91 9051506523   | +91 9748402629   | Pvt. Ltd.   |
| 7705803777; 05564245959   | +   | 033-654 04510  | Howrah   | +91 9339366660  |
| Pratapgarh<br>Shaurya Enterprises<br>+91 9554433888;                    | Varanasi - Maldahiya<br>Khurana Automobiles<br>+91 8934965655       | Baruipur-24 Parganas<br>Austin Distributors Pvt. Ltd<br>033-65556611 | Apollo Coaches (P) Ltd<br>+91 9903800400<br>033-32971712; 32902346   | 033-24983119<br>Kolkata - Chowrangee<br>chowk   |
| 9918601126; 1127  | 0542-2207532; 2207618   | Berhampore   | Howrah   | Austin Distributors Pvt. Ltd<br>+91 8420046876  |
| <b>Raebareli</b><br>Sushma Motors<br>+91 9455502987                     | Varanasi - Maqbool<br>Anand road<br>One Place Automobiles Pvt. Ltd. | Maxwheel Motors<br>+91 9233330208                                    | Apollon Motors LLP<br>+91 9804321122   | 033-65552077; 40721010;<br>60505574   |
| <b>Saharanpur</b><br>Sachdeva Enterprises<br>+91 8445577933             | +91 7753888536;<br>7753888522,<br>0542-2508385                      | 03482-224227<br>Burdwan<br>Sri Ram Automobiles                       | <ul> <li>Kharagpur</li> <li>Jain Motors</li> <li>+91 9476481717</li> </ul>                                       | Kolkata - Nowa para<br>Kolkata Bike Zone<br>91 9674029373<br>033-40082380                         |
| 0132-2680680  | WEST BENGAL   | + 91 9800365544;   | +91 9434692778   |   |
| <b>Sultanpur</b><br>Asia Royal Motors<br>+91 9935185230<br>05362-227777 | Asansol<br>SG Automobiles<br>+91 8170030003;<br>8170030004          | 9002450705<br>Dankuni-Hooghly<br>Universal Traders<br>+91 9883069797 | Kolkata - Anandapur           Royal Enfield Company store           +91 9874852522           033-40060206 / 0209 | Kolkata-Sarat Bose road<br>Shah Distributors (Auto<br>Division)<br>+91 9830477788<br>033-22814242 |

|--|--|--|

## PARTS STOCKIST DISTRIBUTOR

| Andhra Pradesh   | Gopalganj  | <b>Margoa</b>   | JAMMU & KASHMIR   | Bangalore  |
|--|--|---|---|--|
| Vijayawada   | Shri Harishankar Motors  | Saini Motors  | Jammu   | Fixwheel Motors  |
| Cyber Automobiles Pvt. Ltd   | +91 9771880938   | +91 8308808290  | Yahoo Technocra   | +91 9845949127   |
| +91 9959615806   | 06156-223956   | 0832-2740343; 2740345   | +91 9419191241  | Kolar  |
| Assam<br>Guwahati<br>Chirag Enfield<br>+91 8136051810<br>0361 2670293  | Patna<br>Moto Spares Pvt.Ltd<br>+91 9097577727<br>CHANDIGARH   | GUJARAT<br>Ahmedabad<br>Shreeji Auto Traders<br>+91 9173170931;   | JHARKHAND<br>Hazaribagh<br>Riders Point<br>+91 9234343422   | Jagadamba Automobiles<br>+91 9972522111<br>+91 9066983741<br>KERALA  |
| Guwahati   | <ul> <li>Chandigarh</li> <li>Manchanda Autos</li> <li>+91 9915047010;</li> <li>9988994000</li> <li>0172-2630263</li> </ul>                 | 9724722282  | Jamshedpur  | Aluva  |
| Pawan Automobiles  |  | JamNagar  | Royal Auto Syndicate  | Marikar Motors Ltd   |
| +91 9864045473   |  | New Chandra Motor Cycle   | 72502-22283   | +81 9894744880   |
| Jorhat   |  | House   | Ranchi  | Calicut  |
| Achharsingh Royal  |  | +91 9824211699  | Sri Nivas Automobiles   | Luha Automotives   |
| +91 9707522666<br><b>BIHAR</b><br><b>Biharshariff</b><br>PNN Automobile<br>+91 9135620008<br><b>Chapra</b><br>Supriyam Automobiles<br>+91 9128739999<br>06152-242999 | CHATTISGARH<br>Raipur<br>Nagorao Auto Engg Works Pvt.<br>Ltd.<br>+91 9165878692<br>GOA<br>Mapusa<br>Shauna Auto Agencies<br>+91 8326520712 | HARYANA<br>Ambala<br>Royal Motors<br>0171-2545795<br>Bhiwani<br>Sheoran Automobiles<br>+91 7056732216<br>01664-252216 | +91 7763801824<br>Zittau<br>Arjun Automobiles<br>+91 7282820788<br>+91 8935849216<br>KARNATAKA<br>Bangalore<br>Cyber Automobiles Pvt. Ltd<br>+91 9448473078 | +91 7025106888<br>0495-2333533<br>Ernakulam<br>JR & Sons<br>+91 9447063679<br>Kochi<br>Bhavani Auto Distributors<br>+91 8086078173 |

## PARTS STOCKIST DISTRIBUTOR

| Trivandrum<br>Subha Auto Wares<br>+91 9446562640<br>MADHYA PRADESH<br>Indore         | Nagpur<br>Siddarth Spares<br>+91 9373195554<br>Pune                     | PUNJAB<br>Amritsar<br>Gee Ess Enterprise<br>+91 9878930900<br>Ludhiana                 | Erode<br>Senthilmurugan Auto Parts<br>+91 9894756567<br>Madurai<br>Senthilmurugan Auto Parts  | Lucknow-Transport<br>Nagar<br>Moped House Pvt.Ltd<br>+91 9696202669;<br>8795444497 |
|--|---|--|---|--|
| Royal Ventures<br>+91 9589541950   | Planet Spares<br>+91 9371005335<br>Pune                                 | Amrik Singh & Co.<br>+91 9915069033  | +91 9500786567<br>TELANGANA   | Lucknow<br>Varma Auto Sales  |
| <b>Jabalpur</b><br>Bhawani Automobiles<br>094243-05880                               | Shree Spares<br>+91 9822377709  | RAJASTHAN<br>Jaipur-Indra Bazar<br>Shubham Agencies                                    | Hyderabad<br>Cyber Automobiles Pvt. Ltd<br>+91 7702143186                                     | +91 9335207393<br>UTTARAKHAND<br>Dehradun  |
| MAHARASHTRA<br>Aurangabad<br>Vinod Agency  | New Delhi<br>Kinematics Mktg (P) Ltd.<br>+91 9654787802<br>011-41545025 | +91 9680465973<br>Jaipur-Transport Nagar<br>Shubham Agencies<br>+91 9414067766         | UTTAR PRADESH<br>Ghaziabad<br>Indian Automobiles  | Anamika Enterprises<br>+91 9897615836<br>WEST BENGAL                               |
| +91 9823336611<br><b>Mumbai</b><br>Rajkamal Auto & Scooter Spares<br>+91 9833985931  | ORRISA<br>Bhubaneshwar<br>Orissa Marketing Services                     | TAMILNADU<br>Chennai<br>Cyber Auto Parts<br>+91 7358768669                             | +91 9999916346;<br>9899288337<br><b>Kanpur</b><br>Sareen Motors                               | Kolkata<br>Auto Marketing Agencies<br>+91 9830325490<br>033-22360642; 22360643     |
| Mumbai           Ram Motor Cycle Co.           +91 9920748891           022-27700394 | +91 9437033935<br>Cuttack<br>Bullet Plus<br>+91 9437037590              | Chennai<br>Popular Motors Cycle<br>Company<br>+91 9698444568<br>044-43435365; 43435364 | +91 9389629505<br>Lucknow-Kaiserbagh<br>Moped House Pvt.Ltd<br>+91 7408555502<br>0522-4108704 | Siliguri<br>Goyal Royal Spares<br>+91 9434063334                                   |

# NOTES

# ROYAL ENFIELD

## **MOTORCYCLE INSTALLATION FORM**

| Dealer's Name                           | aler's Name         |        |                                 |                          |             |        |         |           |                             |            |        |               | Date           |                |          |  |                |        |       |              |          |       |      |          |
|---|---------------------|--------|---------------------------------|--------------------------|-------------|--------|---------|-----------|-----------------------------|------------|--------|---------------|----------------|----------------|----------|--|----------------|--------|-------|--------------|----------|-------|------|----------|
| Place of Deale                          | ersh                | nip    |                                 |                          |             |        |         |           |                             |            |        |               | Dealer         | Code           |          |  |                |        |       |              |          |       |      |          |
| Engine No.                              |                     |        |                                 |                          |             |        |         |           |                             |            |        |               | Coupo          | n No.          |          | sidence egn. No. / Advice No. Per Day Mode of Purchase |                |        |       |              |          |       |      |          |
| Chassis No.                             |                     |        |                                 |                          |             |        |         |           |                             |            |        |               | Installa       | ation D        | ate.     |  |                |        |       |              |          |       |      | Τ        |
| Customer's Na                           | am                  | e      |                                 |                          |             |        |         |           |                             |            |        |               | Taluk          |                |          |  |                |        |       |              | •        |       |      |          |
| Door No. & St                           | ree                 | t      |                                 |                          |             |        |         |           |                             |            |        |               | State          |                |          |  |                |        |       |              |          |       |      |          |
| Village / Town                          | 1                   |        |                                 |                          |             |        |         |           |                             |            |        |               | STD Co         | ode            |          |  |                |        |       |              |          |       |      |          |
| District                                |                     |        |                                 |                          |             |        |         |           |                             |            |        |               | Teleph         | one Re         | eside    | nce  | !              |        |       |              |          |       |      |          |
| Pin Code                                |                     |        |                                 |                          |             |        |         |           |                             |            |        |               | Motor          | cycle F        | Regn.    | No   |                |        |       |              |          |       |      |          |
| Telephone Of                            | fice                | e      |                                 |                          |             |        |         |           |                             |            |        |               | Invoice        | e No.          |          |  |                |        |       |              |          |       |      |          |
| E-mail addres                           | s : i               | fany   | '                               |                          |             |        |         |           |                             |            |        |               | Delive         | ry Note        | e / Ac   | lvic   | e No           | o.     |       |              |          |       |      |          |
|   | Age                 | in Yea | rs                              |                          |             | м      | onthly  | Hous      | ehold Income                | 1          |        | Exp           | pected Ave     | erage KM       | s Per Da | y  | ] [            |        | Ν     | Aode         | e of P   | Purch | ase  |          |
| 18-20 Yrs AG 01                         | Ť                   | 36-4   | 0 Yrs                           | AG 05                    | Г           | Belc   | w Rs. 1 | 0 000     | ME 01                       |            | Le     | esser         | than 10 Kl     | Ms             | KM01     |  |                | Casl   |       |              |          |       | MP 0 | 1        |
| 21-25 Yrs AG 02                         | +                   | 41-4   |                                 | AG 06                    | $\square$   |        | 0,000-2 | -         | -                           |            | 11     | I <b>-</b> 30 | KMs            |                | KM02     |  |                | Ban    | k Fin | ance         | 2        |       | MP 0 | 12       |
| 26-30 Yrs AG 03                         |                     | Abo    | ve 45 Yrs                       | 5 AG 07                  | $\square$   | Rs. 2  | 0,000-5 | 50,000    | ) ME 03                     |            | 13     | 3 <b>-</b> 15 | KMs            |                | KM03     |  |                | Org    | anise | sed Company  |          | MP 0  | 3    |          |
| 31-35 Yrs AG 04                         |                     |        |                                 |                          |             |        |         |           |                             |            |        | bove          | 50 KMs         |                | KM04     |  |                | Fina   |       |              |          | _     |      |          |
| Educational Qualification               |                     |        |                                 |                          |             |        |         |           | F                           | Profession |        |               |                | 1 1            |          | al Fin<br>n fro  |                | ends   |       | MP 0<br>MP 0 | _        |       |      |          |
| 10th - 12th                             |                     | 2 0 1  | BE CQ 05 Private Company Employ |                          |             |        |         |           |                             |            |        |               | CP 01          |                |          |  |                |        |       |              | ·        |       | -    |          |
| Diploma                                 |                     | 202    |                                 | MBBS                     | +           | CQ 06  |         |           | Governmen                   |            |        | · ·           |                | CP 02          |          |  | 1              |        |       |              |          |       |      |          |
| Graduate                                | CC                  | 203    |                                 | CA                       |             | CQ 07  |         |           | Sales Repre                 | esenta     | tive   |               |                | CP 03          |          |  | 1              |        |       |              |          |       |      |          |
| Post - Graduate                         | CC                  | 204    |                                 | MBA                      |             | CQ 08  |         |           | Bank / Insur                | ance E     | mplo   | oyee          |                | CP 04          |          |  | ]              |        |       |              |          |       |      |          |
|   |                     | Pur    | pose of ı                       | use                      |             |        |         |           | Software En                 | -          |        |               | eS Emps        | CP 05          |          |  | -              |        |       |              |          |       |      |          |
| Family Motorcycle                       |                     | P 26   | ToC                             | ommute F                 | مد <b>ر</b> | مالمحم | P 31    |           | Public Secto<br>Farmer / Ag |            |        | 5             | CP 06<br>CP 07 |                |          |  |                |        |       |              |          |       |      |          |
| Personal Motorcyc                       | le                  | P 27   | _                               | arry load b              |             |        | P 32    | $\square$ | Student                     | neure      | 1150   |               | CP 08          |                |          |  |                |        |       |              |          |       |      |          |
| To move around / a                      |                     | P 28   | To go                           | o around v               | with 1      | riends | P 33    |           | Contractor                  |            |        |               |                | CP 09          |          |  | 1              |        |       |              |          |       |      |          |
| part of work / Busin                    |                     | r' 20  |                                 | pecific Pu<br>ived as Gi |             | e/     | P 34    | $\square$ | Small Trade                 | r/Sho      | pkee   | per           |                | CP 10          |          |  | ]              |        |       |              |          |       |      |          |
| Commute Between<br>Residence and Office |                     | P 29   |                                 | ong distar               |             | eisure | P 35    |           | Businessma                  | n          |        |               |                | CP 11          |          |  |                |        |       |              |          |       |      |          |
| To run Family Erran                     | ds                  | P 30   |                                 | only<br>other            |             |        | P 35    |           | Doctor                      |            |        |               |                | CP 12          |          |  | -              |        |       |              |          |       |      |          |
|   |                     |        |                                 |                          |             |        | P 30    | _         | Lawyer<br>Engineer          |            |        |               |                | CP 13<br>CP 14 |          |  | -              |        |       |              |          |       |      |          |
|   |                     | Usag   | e Road 1                        | iype                     | 0.7         |        |         |           | Chartered A                 | ccour      | ntant  |               |                | CP 14          |          |  | -              |        |       |              |          |       |      |          |
| Hilly Road<br>Plain Road                |                     |        |                                 |                          | RT          |        |         |           | Others (Plea                |            |        | n):           |                | CP 16          |          |  | 1              |        |       |              |          |       |      |          |
| Kutcha Road                             |                     |        |                                 |                          | RT<br>RT    |        |         |           | What was th                 | ne maj     | jor re | asor          | ı in decidi    | ng to pu       | irchase  | Roy  | al Enfi        | ield's | s Mo  | torc         | ycle     | ?     |      |          |
|   | Highways Road RT 04 |        |                                 |                          |             |        |         | _         | Riding Com                  | ort        |        |               | SP 01          |                | Load     | ing o  | arryir         | ng Ca  | apac  | ity          | SP       | 04    |      |          |
| City Road Congest                       | ed                  |        |                                 |                          | RT          |        |         | $\neg$    | Stability                   |            |        |               | SP 02          |                | Imag     | e/S  | tatus          |        |       |              | SP       | 05    |      |          |
| City Road Non - Co                      |                     | sted   |                                 |                          | RT          |        |         | _         | Safety                      |            |        |               | SP 03          |                | Fuel     | Cons   | umpt           | ion    |       |              | SP       | 06    |      |          |
| Mixed type of Road                      |                     |        |                                 |                          | RT          | -      |         |           | L                           |            |        |               | I              |                |          |  |                |        |       |              |          |       |      | $\dashv$ |
| Have you visite                         | ed F                | Royal  | Enfiel                          | ld webs                  | ite?        | γ γ    | es      |           | 10                          |            |        |               |                |                |          |  | d by F         |        |       |              | SP<br>SP |       |      | _        |
| For Office use                          | <u>- o</u>          | nly    |                                 |                          |             |        | _       | _         | —                           |            |        |               |                |                |          |  | d by L<br>Long |        |       | anics        | SP<br>SP |       |      | $\neg$   |
| Motorcycle                              | Inst                | talla  | tion F                          | orm (N                   | /IF)        | No.    |         |           |                             |            |        |               |                |                |          |  |                |        |       |              |          |       |      |          |

| What Motor  |             |          |                 |       |         |                                 |                      |            | Moto                            | rcycl                                      | e     |                       |          |                |       |                        |                   |      |        |       |               |     |
|---|-------------|----------|-----------------|-------|---------|---------------------------------|----------------------|------------|---------------------------------|--|-------|-----------------------|----------|----------------|-------|------------------------|-------------------|------|--------|-------|---------------|-----|
| First Time Two -  |             | Buye     | er FB           | 01    |         |                                 | DA / HER             |            |                                 | Yama                                       |       |                       |          | 13             |       |                        | ulsar 200         | )/2  | 20     |       | A 15          |     |
| ROYAL ENFIE   |             |          |                 |       | _       |                                 | D 100 SS             | -          | HH 01                           | Yama                                       |       |                       | EY       |                | _     | Ninja 2                |                   |      |        |       | A 16          |     |
| Royal Enfield Bu  | let 350 (   | (CI)     | RE              | 01    | HH S    | leek                            |                      |            | HH 02                           | Yama                                       | ha :  | SZR                   | EY       | 15             | _     | Ninja 6                |                   |      |        | -     | A 17          |     |
| Royal Enfield Bu  | et DLX      |          | RE              | 02    | HH S    | plendor                         |                      |            | HH 03 Yama                      |  |       | Z16                   | EY       | 16             | -     | KTM Duke               |                   |      |        | B     | A 18          |     |
| Royal Enfield Bu  |             | pus      | RE              |       | _       | treet / DI                      |                      |            | HH 04                           | HH 04 Yamaha FZS                           |       |                       | EY       | 17             | _     |                        | SUZUK             |      |        |       |               |     |
| Royal Enfield Ma  |             |          | RE              | 04    | НН С    | BZ Drum                         | / Disc / E           | S          | HH 05                           | Yama                                       | ha l  | Fazer                 | EY       | 18             |       | TVS - S                | Suzuki Ma         | ax 1 | 00     |       | S 01          |     |
| Royal Enfield Ma  |             | A350     | ) RE            | 05    | _       | assion                          |                      |            | HH 06                           | Yama                                       | ha ۱  | /ZF - R15             | EY       | 19             | _     |                        | Suzuki Ma         |      |        | _     | S 02          |     |
| Royal Enfield Lig   | ghtning     |          | RE              | 06    | HH A    | mbition                         | 125 /135             |            | HH 07                           | Yama                                       | ha l  | Enticer               | EY       | 20             |       | TVS - S                | Suzuki Sa         |      | S 03   |       |               |     |
| Royal Enfield Lig   | ghtning 5   | 535      | RE              | 07    | HH S    | uper sple                       | endor                |            | HH 08                           | Yama                                       | ha i  | Above 500 cc          | EY       | 21             | -     | TVS - S                | Suzuki Sh         | ogı  | un     | Т     | S 04          |     |
| Royal Enfield Ele   | ectra 4S    |          | RE              | 08    | HH S    | plendor                         | Plus / NXC           | G          | HH 09                           | KINE                                       | TIC   | >                     |          |                |       | TVS - S                | Suzuki Sh         | ao   | in     | _     | S 05          |     |
| Royal Enfield Ele   | ectra 5S    |          | RE              | 09    | HHF     | lunk / Ex                       | reme                 |            | HH 10                           | Kineti                                     | ic K  | A 80                  | KE       | 01             | -     | TVS - S                | Suzuki Fie        | ero, | / ES   |       | S 06          |     |
| Royal Enfield Th  |             |          | 3) RE           | 10    | Hero    | Ignitor                         |                      |            | HH 11                           | Kineti                                     | ic K  | 4 100                 | KE       | 02             | _     | TVS Sp                 |                   |      |        |       | S 07          |     |
| Royal Enfield Bu  | llet 350    | UCE      | RE              | 11    | Hero    | Impulse                         |                      |            | HH 12                           | Kineti                                     | ic C  | hallenger             | KE       | 03             |       | TVS St                 | ar City / [       | DLX  |        |       | S 08          |     |
| Royal Enfield Ele   |             |          | RE              |       | _       | CD Daw                          |                      |            | HH 13                           | Kinetio                                    | c GF  | Laser / 125 / 150     | KE       | 04             | _     | TVS M                  |                   |      |        |       | S 09          |     |
| RE Thunderbird  |             | ark      | RE              |       | _       | Splendo                         |                      |            | HH 14                           | Kineti                                     |       |                       | KE       | 05             | _     | TVS Jiv                |                   |      |        |       | S 10          |     |
| Royal Enfield Cla   |             |          | RE              |       |         | Passion                         | -                    |            | HH 15                           | Kineti                                     | ic St | tryker                | KE       | 06             |       |                        | ame SR /          |      |        |       | S 11          |     |
| Royal Enfield Cla   | assis 500   |          | RE              | 15    |         | Glamou                          |                      |            | HH 16                           | Kineti                                     | ic B  | oss                   | KE       |                | _     |                        | oache / R         |      |        |       | S 12          |     |
| SUZUKI MOT  | ORCYC       | LE       |                 |       |         | Achieve                         |                      |            | HH 17                           | _  |       | elocity               | KE       |                | _     |                        | ctor / GL)        | X /C | is .   | Т     | S 13          |     |
| Suzuki GW 250   |             |          | SM              |       | _       | CBZ Xtre                        |                      |            | HH 18                           | Kineti                                     |       | omet                  | KE       | 09             | _     | LML                    |                   |      |        |       |               |     |
| Suzuki Slingsho   | t           |          | SM              |       | Hero    | Karizma                         | /ZMR                 |            | HH 19                           | BAJA                                       |       |                       |          | _              |       |                        | nergy / F)        |      |        |       | M 01<br>M 02  |     |
| Suzuki GS 150R  |             |          |                 | 03    |         |                                 |                      |            |                                 |  |       | 0 / Major             | BA       |                | -     |                        | dreno / F         |      |        | -     |               |     |
| Suzuki Heat   |             |          | SM              |       | _       |                                 | /AHA / Y             | M          |                                 |  |       | 100 / RTZ             | BA       |                | _     |                        | edom DX / I       | _    |        |       | M 03<br>M 04  |     |
| Suzuki Zeus   |             |          |                 | 05    | _       | rt Rajdoc                       | t                    | _          | EY 01                           |  |       |                       | BA       |                |       | LIVIL G                | raptor / B        | sear | mer    | -     | WI 04         |     |
| Suzuki Above 5  |             | -        | SM              | 106   | _       | rt Ace                          | - DV 100             | _          | EY 02                           | Bajaj KB 125                               |       | BA                    |          | -              |       | NDRA                   |                   |      | +      |       |               |     |
| HONDA MOTO  |             | LE       | 1.14            | 1.01  |         |                                 | a RX 100<br>a RX 135 |            | EY 03                           | Bajaj Boxer AT & CT                        |       |                       | BA       |                | -     |                        | dra Stalli        | _    |        |       | IA 01         |     |
| Honda Dream Y<br>Honda CB Twist                                     | -           |          | HN              | 102   |         |                                 |                      |            | EY 04                           | Bajaj Caliber / SM<br>Bajaj Acer 100       |       | BA                    |          | _              |       | dra Stalle<br>dra Mach | · ·               |      |        | IA 01 |               |     |
|   |             |          |                 |       |         | rt Yamah                        |                      |            | EY 05                           |  |       |                       | BA       |                |       | vianin                 | ura Macr          | 10   |        | - 10  |               |     |
| Honda CB Shine<br>Honda CBF Stur                                    |             |          |                 | 103   |         | aha RX13<br>aha YBX             | 5(55)                |            | EY 06                           |  |       | sar 150 / 180         | BA       |                | _     |                        |                   |      |        | _     |               |     |
| Honda CBF Stur  |             |          |                 |       |         | ana YBX<br>aha YD 12            | 25                   |            | EY 07                           |  |       | ninator               | BA       |                | _     |                        |                   |      |        | -     |               |     |
| Honda CB Unico  |             | lor.     | _               | 1 05  | _       | ana YD T.<br>aha Crux           | 25                   |            | EY 08                           |  |       | eva CRX 3             | BA       |                | -     |                        |                   |      |        | +     |               |     |
| Honda CB Office<br>Honda CBR 150                                    |             | er       |                 | 107   |         | aha Liber                       |                      | _          | EY 09<br>EY 10                  | Bajaj /                                    |       | inger<br>ina 110/ 125 | BA       |                | -     |                        |                   |      |        | +     | _             |     |
| Honda CBR 250   |             |          |                 |       | _       |                                 |                      | _          |                                 |  |       | over 100 / 125 / 150  | BA       |                | -     |                        |                   |      |        | +     | _             |     |
| Honda CBR 250   |             |          | _               | 108   | _       | aha G <b>l</b> adi<br>aha YBR 1 |                      |            | EY 11<br>EY 12                  |  |       | sar 135               | BA<br>BA |                | +     |                        |                   |      |        | +     |               |     |
|   | 00 CC       |          |                 | 109   |         |                                 | 10/125               |            |                                 |  |       | 30 133                | DA       | 14             |       |                        |                   |      |        |       |               | _   |
| 1.641   |             |          |                 | Da:-' |         | scon                            |                      | Vi         |                                 | sc 03                                      | rs    | Diamin                |          | 50.04          | П     |                        | *0                | 6    | C 05   | Т     |               |     |
| LML   | SC 01       | $\vdash$ |                 | Bajaj | :       | SC 02                           | -                    | Kine       |                                 | -  |       | Piaggio               |          | SC 04<br>SC 09 | +     | He                     | IU                | +    | CUS    | +     |               |     |
| TVS   | SC 06       |          |                 | Suzuk | J       | SC 07                           |                      | Hon        |                                 | SC 08                                      |       | Yamaha                |          | JC 09          |       |                        |                   |      |        |       |               | _   |
|   |             |          |                 |       |         |                                 |                      |            | Мо                              | peds                                       | 5     |                       |          |                |       |                        |                   |      |        |       |               |     |
| Bajaj   | MD 01       |          |                 | TVS   |         | MD 02                           | Es                   | cort       | S                               | MD 03                                      |       | Hero Puch             |          | MD 04          |       |                        |                   |      |        |       |               |     |
| Kinetic   | MD 05       |          | Here            | o Maj | estic   | MD 06                           | A                    | vant       | ti                              | MD 07                                      |       |                       |          |                |       |                        |                   |      |        |       |               |     |
| Car (Below 1  | 000 cc)     | CR       | 01              |       | Car (10 | 00 to 20                        | 00 cc)               |            | CR 02                           | Car  | r (A  | bove 2000cc)          | CR       | 03             |       | Othe                   | ers               |      |        | OT    | 01            | Τ   |
| The reason I have booked and willing to wait for a Royal Enfield is |             |          |                 |       |         |                                 |                      | l would ra | ate i                           | ny ex                                      | peri  | ence                  | in this  | со             | unter | as                     | -                 |      |        |       |               |     |
| TICK THE OP<br>MOST SUITAR  | TION<br>BLE |          | Defini<br>Agree |       | Agree   | Maybe                           | Disagr               |            | Definite <b>l</b> y<br>Disagree |  |       | UITABLE               |          | cellei         | nt G  | àood                   | Could b<br>better | e I  | Not go |       | Extrei<br>Bad | nel |
| Because it is my  | dream       |          | -               |       |         |                                 |                      |            |                                 | Attitude and Capability of people          |       |                       | e.       |                |       |                        |                   |      |        |       |               |     |
| Motorcycle since<br>There is no other 3                             |             |          |                 |       |         |                                 |                      | -          |                                 | Test ride.<br>Communication during waiting |       |                       | _        |                | _     |                        |                   | _    |        |       |               |     |
| This kind of styli  | ng is not   | ,        |                 |       |         |                                 |                      | +          |                                 | period.                                    |       |                       |          |                |       |                        |                   |      |        |       |               |     |
| available on any o<br>Because this is a                             |             |          |                 |       |         |                                 |                      | +          |                                 | Ease of booking and other formalities.     |       |                       |          |                |       |                        |                   |      |        |       |               |     |
| am willing to wa<br>Other Reasons.                                  |             | .cru     |                 |       |         |                                 |                      | +          |                                 |  | vcle  | e delivery and        |          |                | +     |                        |                   | +    |        |       |               |     |
| Other Reasons.  |             |          |                 | 1     |         |                                 |                      | auol       | 1 BIACH                         |  |       |                       |          |                |       |                        |                   |      |        |       |               |     |

Customer's Signature & Date

Dealer's Signature & Rubber Stamp Seal

#### PRE-DELIVERY INSPECTION -PRE-DELIVERY INSPECTION -Bullet 350 / Bullet 350 - ES / Bullet 500 / Classic 500 / Classic 350

| Model :                                    |    |   |                             | Chassis No. :   |         |               |
|--|----|---|-----------------------------|---|---------|---------------|
| Dealer's Name :                            |    |   |                             | Engine No. :  |         |               |
| Location:                                  |    |   |                             | Battery Number :  |         |               |
| Colour :                                   |    |   |                             | Key Number :  |         | Date of PDI : |
| Battery Make :                             |    |   |                             | Tyre Number :   | Front : | Rear :        |
| Aggregate                                  |    | Area  | Defect<br>Code              | Measure   | Defect  | Remarks       |
| Ch. No./ Engine No.                        | 1  | Engine / Motorcycle Number Details                                      | DF                          | Same/ Different   |         |               |
| Connect Battery /<br>Check Voltage         | 2  | Battery Charging  | D / NC /L                   | 12.6 V<br>BATTERY(Static)   |         |               |
| Engine Oil                                 |    | Replace oil & oil filter / Check Oil level (Loose<br>three Drain Bolts) | EO - (Drained<br>Oil Level) | 2.5 Litres (Capacity is<br>2.75 Litres) -Loose<br>three Drain Bolts to<br>Drain Oil |         |               |
|  | 4  | Clean Oil Strainer  | -                           | Clean   |         |               |
| Lock Operation                             | 5  | Ignition / Side / Tool Box Lock / Fuel Tank Lock                        | H/LF/NW                     | Same  |         |               |
| Petrol                                     | 6  | Fill Petrol   | -                           | 2.5 Litres  |         |               |
|  | 7  | Front Disc Brake / Drum Lever Free Play                                 | SG /RB /Less                | 4 - 7 mm / (STD Model)  |         |               |
|  | 8  | Caliper Mtg Screws  | LF(Hand<br>Loose)           | 2.7 to 3 .3 Kgm   |         |               |
|  | 9  | Front Wheel Rotation  | T/ N                        | Check One Complete<br>Rotation, Spokes<br>Looseness & Runout                        |         |               |
|  | 10 | Front Mudguard Alignment / Cover Tube Rubbing                           | M / RB/SC                   | 5 mm- Refer SOP   |         |               |
|  | 11 | Front Wheel Nut   | LF(Hand<br>Loose)           | 6.3 0 to 7.7 Kgm  |         |               |
|  | 12 | Front Tyre Condition (Check Tyre Line Seating)                          | WF                          | Good  |         |               |
|  | 13 | Front Tyre Pressure   | Less                        | 22PSI   |         |               |
| Clutch                                     | 14 | Clutch Operation  | H /J/SY                     | Smooth  |         |               |
| Clutch                                     | 15 | Clutch Lever Free Play  | EP / Less                   | 2 - 3 mm  |         |               |
|  | 16 | Speedo /Odo / Ammeter /Fuel Guage                                       | NW                          | No Defects  |         |               |
|  | 17 | Accelerator Operation   | SY/EP/LESS                  | Smooth  |         |               |
|  | 18 | Lever Brackets Saddle Position  | LF/R                        | Tight   |         |               |
| Handle Bar Controls<br>& Electrical Switch | 19 | Steering Movement   | T /N                        | Free  |         |               |
| Operations                                 | 20 | Handle Bar Positioning  | WF/LF/M                     | W.r.to Dot Punch  |         |               |
|  | 21 | Lock Nut T- Stem  | LF/ PO/R                    | 4.5 to 5.5 Kgm  |         |               |
|  | 22 | Electrical Switch Operation   | NW / LF                     | No Defects  |         |               |
|  | 23 | Neutral Lamp  | NW / F                      | No Defects  |         |               |
|  | 24 | Fuel Tap Operation  | н                           | Smooth / Main / Res   |         |               |
| Fuel System                                | 25 | Fuel Leak   | L                           | No Leak (Tank, TAP,<br>Carb)  |         |               |
|  |    | Fuel Tank Alignment vs Seat Alignment                                   | м                           |   |         |               |
|  | 27 | Rear Brake Pedal Free Play  | Less / EP                   | 20-30 mm  |         |               |
|  | 28 | Pedal Position w.r.t foot rest  | м                           | Same Level  |         |               |
| Rear Wheel                                 | 29 | Chain Tension   | T / EP                      | 20 -30 mm   |         |               |
|  | 30 | Rear Wheel Rotation   | T / N                       | Check One Complete<br>Rotation, Spokes<br>Looseness & Runout                        |         |               |

| Aggr  | egate   |     |                    | Ar               | ea       |             |                     | Defe<br>Cod           |  |  | Meas             | ure      |                  | C        | )efect  | :                    | Ren         | narks   |          |
|---|---|-----|--------------------|------------------|----------|-------------|---------------------|-----------------------|--|--|------------------|----------|------------------|----------|---------|----------------------|-------------|---------|----------|
|   |   | 31  | Swing arm n        | nounting bol     | t        |             |                     | LF (Han<br>Loose)     |  | 6.5 to 7                                 | 7.5 kgr          | n        |                  |          |         |                      |             |         |          |
|   |   | 32  | Brake Shoe         | Pin Nut          |          |             |                     | LF (Hane<br>Loose)    | d  | 4.1 to 4                                 | 4.6 kgr          | n        |                  |          |         |                      |             |         |          |
|   |   | 33  | Rear Mudgu         | ard Alignme      | nt       |             |                     | M, RB                 |  | 8 mm -                                   | Refer            | SOP      |                  |          |         |                      |             |         |          |
| Rear Wh   | neel  | 34  | Rear Tyre Pi       | ressure          |          |             |                     | Less                  |  | 32PSI                                    |                  |          |                  |          |         |                      |             |         |          |
|   |   | 35  | Rear Tyre C        | ondition (Ch     | eck Tyr  | e Line Sea  | iting)              | WF                    |  | Good                                     |                  |          |                  |          |         |                      |             |         |          |
|   |   | 36  | Rear Shocke        | er Mounting      | Top & E  | lottom      |                     | LF (Han<br>Loose)     | d  | 2.5 to 3                                 | 3.3 kgr          | n        |                  |          |         |                      |             |         |          |
|   |   | 37  | Rear Shocka        | absorber Op      | eration  | / Adjustme  | ent                 | H/SG                  |  | Smoot                                    | h                |          |                  |          |         |                      |             |         |          |
|   |   | 38  | Mudguards -        | - Paint Relat    | ed       |             |                     | SC / PD<br>DN/DU/F    |  | No Det                                   | fects            |          |                  |          |         |                      |             |         |          |
|   |   | 39  | Fuel Tank - F      | Paint Relate     | d        |             |                     | SC / PD<br>DN/DU/F    | 20                                       | No Det                                   | fects            |          |                  |          |         |                      |             |         |          |
|   |   | 40  | Tool Box - P       | aint Related     |          |             |                     | SC / PD<br>DN/DU/F    | 20                                       | No Det                                   | fects            |          |                  |          |         |                      |             |         |          |
|   |   | 41  | S                  |                  |          |             |                     |                       | /<br>)U/                                 | No Det                                   | fects            |          |                  |          |         |                      |             |         |          |
| Aesthet   | ics   | 42  | Powder Coa<br>OFF) | ted Parts (S     | cratch/  | Rust / Chij | pped                | SC / PO<br>R / DU     | /  | No Det                                   | fects            |          |                  |          |         |                      |             |         |          |
|   | 43 Plated Parts (Scratch / Rusty)                                   |     |                    |                  |          |             | SC / R /<br>PO / DU |                       | No Det                                   |  |                  |          |                  |          |         |                      |             |         |          |
|   |   | 44  | Buffed comp        | onents poor      | Buffing  | & Scrathe   | es                  | SC/DU/                | DN/R                                     | No De                                    |                  |          |                  |          |         |                      |             |         |          |
|   | 45     Indicators Alignment       46     Stickers / knee pads       |     |                    |                  |          |             | м                   |                       | No Det                                   | fect                                     |                  |          |                  |          |         |                      |             |         |          |
|   |   |     |                    |                  |          |             | M/WF/               | PO                    | No Defects<br>Tight (Right, Left Cover / |  |                  |          |                  |          |         |                      |             |         |          |
| Other   | ~   | 47  | Nuts, bolts, f     | fasteners (To    | orque)   |             |                     | LF (Han<br>Loose )    | Ы  | Tight (I<br>Engine<br>Access             | Found            | dation / | 1                |          |         |                      |             |         |          |
| Other   | 5   | 48  | Owner's Mar        | nual & Tool I    | Kit Cont | ent         |                     | NA                    |  | -  |                  |          |                  |          |         |                      |             |         |          |
|   |   | 49  | Spare fuse in      | n fuse carrie    | r        |             |                     | NA                    |  | -  |                  |          |                  |          |         |                      |             |         |          |
|   |   | 50  | Starting (Kic      | k Start / Sel    | f Start) |             |                     | ST                    |  | Easy S                                   | Start            |          |                  |          |         |                      |             |         |          |
|   |   | 51  | Front Brakes       | s Effectivene    | ss / Fe  | əl          |                     | EP/ N/ S              | G/T                                      | Sharp                                    |                  |          |                  |          |         |                      |             |         |          |
|   |   | 52  | Rear Brakes        | Effectivene      | ss / Fee | el          |                     | EP/ N/ S              | G/T                                      | Sharp                                    |                  |          |                  |          |         |                      |             |         |          |
|   |   | 53  | Pulling            |                  |          |             |                     | Р                     |  | 16 met<br>kmph                           | ers-Sti          | riaght ( | @50              |          |         |                      |             |         |          |
|   |   | 54  | Motorcycle \       | /ibration        |          |             |                     | V                     |  | Smoot                                    | h                |          |                  |          |         |                      |             |         |          |
|   |   | 55  | Front Wheel        | Wobbling         |          |             |                     | w                     |  | Rim Run Out & Face<br>Out Value - 0.8 mm |                  | е        |                  |          |         |                      |             |         |          |
| Test Ri   | de  | 56  | Rear Wheel         | Wobbling         |          |             |                     | w                     |  | Rim Rı<br>Out Va                         |                  |          | e                |          |         |                      |             |         |          |
|   |   | 57  | Center Stan        | d & Side Sta     | nd Ope   | ration      |                     | H/N                   |  | Smoot                                    | h                |          |                  |          |         |                      |             |         |          |
|   |   | 58  | Fork Noise         |                  |          |             |                     | N                     |  | No Det                                   | fects            |          |                  |          |         |                      |             |         |          |
|   |   | 59  | Engine Perfo       | ormance / G      | ear Shif | ting        |                     | N / V / S<br>H/SK/L / |  | Smoot                                    | h                |          |                  |          |         |                      |             |         |          |
|   |   | 60  | Any Rattling       | / Squeaking      | Noise    |             |                     | N/V/L                 | F  | Nil (Sil<br>Access<br>Parts /            | sories /         | Body     |                  |          |         |                      |             |         |          |
|   |   | 61  | Cam Noise /        | Top End No       | oise     |             |                     | N                     |  | Smoot                                    |                  | ,        |                  |          |         |                      |             |         |          |
| Note ** Any Abnormal / Critical Issues / Noise / Engine Ope |   |     |                    |                  |          |             |                     | ine Oper              | n cas                                    | ses du                                   | ing P            | DI Info  | orm              | to Plan  | t       | Fo                   | ormat No    | :F/14A  | A/CS/02  |
|   |   |     |                    | _                |          |             | INST                | TRUCTI                | ON                                       | 5  |                  |          |                  |          |         |                      |             |         |          |
| 1. Check the<br>2. Carry out a                              | ıll jobs lis  | ted | under Pre-D        | elivery Insp     | ection S | Schedule.   |                     |                       | 4. P<br>5. C                             | lease ei<br>laim tra                     | insit lo         | ss and   | dam              | nage thr | ough "  | TRANS                | GIT' insura | nce on  | ly.      |
| 3. Thoroughly   | y road - t  | est | ,                  |                  |          | 2.          |                     |                       | 6. C                                     | laim Pa                                  | rts rep          | laced    | for N            | lanufac  | turing  | defect               | s only und  | der wai | rranty.  |
| Misalignment  | ignment Noise Vibration Leak Starting Trouble/Missing Less Wobbling |     | ling L             | oose Fitmer      | it Dis   | scharing    | Tight               | Fused                 | s  | cratch                                   | Pu <b>ll</b> ing | Dent     | Wrong<br>Fitment | Hard     | Jerking |                      |             |         |          |
| м   | N   | V   | L                  | M                | LESS     | s w         |                     | LF                    |  | D  | т                | F        |                  | SC       | Р       | DN                   | WF          | н       | J        |
| -   | Different   |     | ongy Sticky        | Not<br>Available | Smoke    | Adjustment  | Not<br>Workin       |                       |  | Rust                                     | Peel             |          | Du               | Dent     | 0       | ssive<br>Di <b>l</b> | Rubbing     |         | Charging |
| EP  | DF  | 5   |                    |                  | NW       | PE          | ,                   | R                     | PO                                       |  | DU               | DN       | E                | 0        | RB      |                      | NC          |         |          |

#### **ROYAL ENFIELD**

#### MOTORCYCLE INSTALLATION CONFIRMATION BY CUSTOMER

We congratulate you on becoming a proud owner of Royal Enfield motorcycle. We request you to give this feedback after completion of the delivery process.

|    |  | YES | NO |
|----|--|-----|----|
| 1  | Motorcycle Documents explained (Invoice, Insurance, RC / Road Tax Receipt) |     |    |
| 2  | Owner's Manual received  |     |    |
| 3  | Recommended Lubricants explained   |     |    |
| 4  | Maintenance Schedule sheet in Owner's Manual shown and explained           |     |    |
| 5  | Next Free Service due explained  |     |    |
| 6  | All Free / Paid Services explained   |     |    |
| 7  | Warranty Guidelines explained  |     |    |
| 8  | "Running in Period" details shown in the manual explained                  |     |    |
| 9  | Service Center Address given and Location explained                        |     |    |
| 10 | Service Incharge Name & Mobile No given                                    |     |    |
| 11 | Motorcycle delivered in neat and clean condition                           |     |    |
| 12 | Tools & First Aid Kit received and explained                               |     |    |

|     |  | YES    | NO     |  |  |  |  |  |  |  |
|-----|--|--------|--------|--|--|--|--|--|--|--|
| 13  | Control Switches & Disc Brake System usage explained                                 |        |        |  |  |  |  |  |  |  |
| 14  | Fuse Box location shown and explained  |        |        |  |  |  |  |  |  |  |
| 15  | Recommended Tyre Pressure explained  |        |        |  |  |  |  |  |  |  |
| 16  | Motorcycle starting & Gear shifting procedure explained                              |        |        |  |  |  |  |  |  |  |
| 17  | Quantity of Fuel in Fuel Tank informed   |        |        |  |  |  |  |  |  |  |
| 18  | Motorcycle orientation & short distance drive provided                               |        |        |  |  |  |  |  |  |  |
| 19  | Date and Time of Installation  |        |        |  |  |  |  |  |  |  |
| 20  | Name of Person who did Installation  |        |        |  |  |  |  |  |  |  |
| Sug | gestions If Any:   |        |        |  |  |  |  |  |  |  |
|     | С  | USTOM  | ER     |  |  |  |  |  |  |  |
|     | S  | IGNATU | RE     |  |  |  |  |  |  |  |
| Мос | lel: Registration No.:   |        |        |  |  |  |  |  |  |  |
| Cha | Chassis No.:   |        |        |  |  |  |  |  |  |  |
|     | We thank you and request you to return this filled up form to the person who did the |        |        |  |  |  |  |  |  |  |
| mot | torcycle installation for you  | KEED   | RIDING |  |  |  |  |  |  |  |

#### FORM 22

[See Rules 47(g), 115, 124 (2), 126A and 127 (1), 127 (2)]

#### INITIAL CERTIFICATE OF COMPLIANCE WITH POLLUTION STANDARDS, SAFETY STANDARDS OF COMPONENTS AND ROAD WORTHINESS

Certified that the following vehicle complies with the provisions of the Motor Vehicles Act, 1988, and the rules made there under, including the following mass emission norms:

| Brand name of the vehicle  | ÷ | Bullet 350 / Bullet 350 - ES  |
|--|---|---|
| Chassis number   | ÷ |   |
| Engine number/motor number<br>(in case of battery operated vehicles)             | ÷ |   |
| Sub-rule No. of rule   | ÷ | 115(2)(i), 115(14)(F)   |
| Emission norms<br>[Bharat Stage-I/II/III/Bharat (Trem) Stage-III etc.]<br>Date : | ÷ | Bharat Stage III<br>For ROYAL ENFIELD<br>PRALS<br>Quality Assurance |



Part No. 590882/A

**ROYALENFIELD.COM**