


Ilumipanel 180 IP Optic RGB

Quick Reference Guide

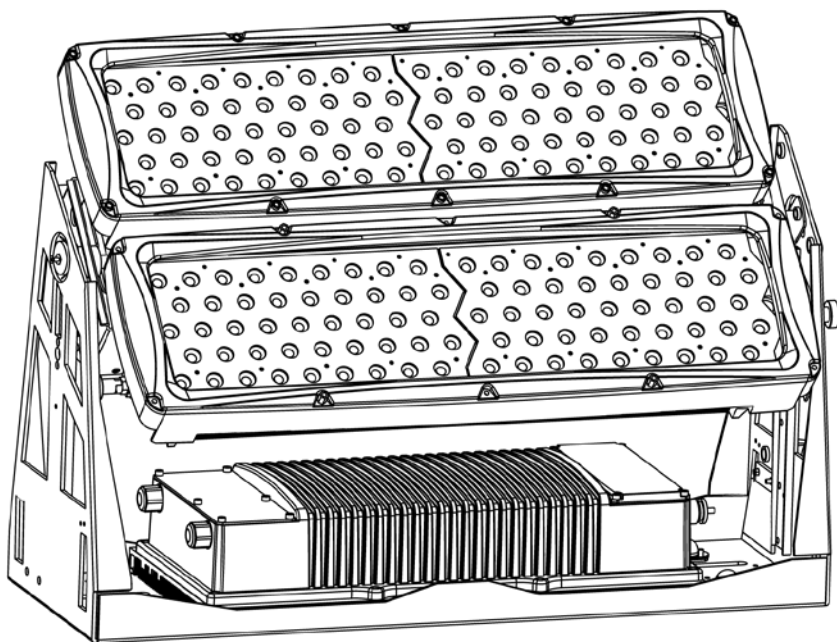

ILUMINARC®

About This Guide

The Illumipanel 180 IP Optic RGB Quick Reference Guide (QRG) contains the product’s connection and mounting information, as well as the menu options and DMX values.

Disclaimer

Refer to this product’s User Manual for detailed information and instructions. You can download the User Manual from the ILUMINARC® website: www.iluminarc.com.

Read ALL the disclaimers and Safety Notes in this document, as well as those in the product’s User Manual before installing, operating, and maintaining this product.

Safety Notes

- DO NOT open the product unless instructed. It contains no user-serviceable parts.
- DO NOT look at the light source when the product is on.
- DO NOT touch the product when operating because it may be hot.
- DO NOT leave any flammable material within 50 cm from the product while operating or connected to the power outlet to minimize the risk of fire.
- DO NOT mount the product overhead without using a safety cable.
- DO NOT submerge the product below 1 m (IP67) for more than 30 minutes. Regular outdoor operation is fine.
- DO NOT operate the product if you see damage on the housing, lenses, or cables. Have an authorized technician replace the damaged parts.
- DO NOT connect the product to a dimmer or rheostat.
- ONLY connect the product to a grounded and protected circuit.

What Is Included

- One Illumipanel 180 IP Optic RGB
- One Power Input Cable (bare-ended)
- One Data Input/Output Cable (bare-ended)
- One Warranty Card
- One Quick Reference Guide

Features

- 1, 3, 4, 6, or 7-channel DMX RGB LED wash product
- Operating modes:
 - 1-channel: Dimmer
 - 3-channel: RGB control
 - 4-channel: Dimmer, RGB control
 - 6-channel: RGB control per module (two modules)
 - 7-channel: Dimmer, RGB control, color macros, strobe, dimmer speed
- Five distinct dimming curves
- Dual Vector Array™ LED panel positioning
- High-power 5 W (700~1,000 mA) RGB LEDs
- IP67 with 316 stainless steel hardware
- GORE™ valve
- Cast and extruded aluminum with Integrated Cooling Enhancement™

Options

- Ilumicode addresser (for product configuration)



- **The RDM2go, which includes a built in ilumicode addresser along with many other useful features is now available.**
- **The Ilumicoode addresser is required for product configuration (sold separately).**

AC Power

This product has an auto-ranging power supply that works with an input voltage range of 100~240 VAC, 50/60 Hz.

Power Wiring

- To provide power, you have two options:
- Connect the bare-ended, IP67-rated power cable from the product to an IP67-rated power connector.
 - Use an IP6- rated junction box. If so, make sure to use IP67-rated conduit.




Power Cable Table

Illuminarc recommends always using conduit for underground wiring of any kind.

Connection	Wire (US)	Wire (Europe)	IP67 Pin
AC Live	Black	Brown	1
AC Neutral	White	Blue	2
AC Ground	Green/Yellow	Green/Yellow	3

AC Power Junction Box Wiring

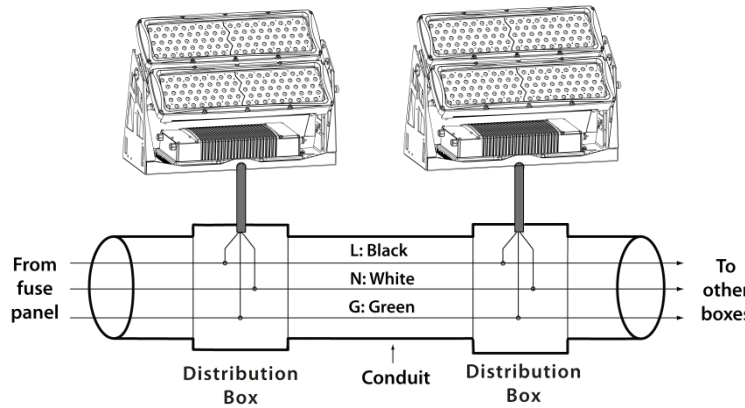


DMX Connection
Signal Wiring

- This product provides a DMX 512 connection by using bare-ended, IP67-rated signal cable. This cable comes connected to the product.
- To provide the signal, you have two options:
- Connect the bare-ended, IP6- rated signal cable from the product to two IP67-rated signal connectors (DMX In and DMX Out).
 - Use an IP67-rated junction box. If so, make sure to use IP67-rated conduit.



The signal cable must match or exceed the electrical characteristics of the Belden® 9841 cable for EIA RS-485 applications. You can also use CAT 5, CAT 5e, or CAT 6.

DMX Junction Box Wiring

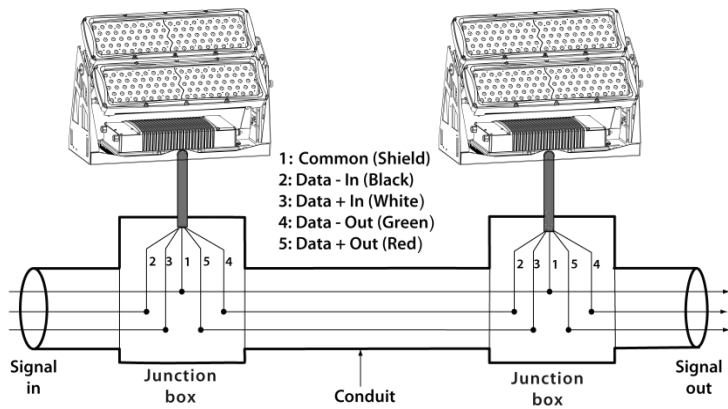

DMX Cable Table

Connection	DMX In	DMX Out	IP67 Pin
Ground	Shield	Shield	1
Data -	Black	Green	2
Data +	White	Red	3

Ilumicon and
DMX
Controllers

To control/operate the Ilumipanel 180 IP Optic RGB, use either an Ilumicon or a DMX controller. Use the standard DMX connection as shown in the section, *DMX Junction Box Wiring*, to connect this product to any standard DMX controller.

For more information, refer to the *Ilumipanel 180 IP Optic RGB User Manual*.

Ilumicode
Configuration

Ilumicode
Connections

To configure the Ilumipanel 180 IP Optic RGB, use the Ilumicode addresser.


The following diagram shows how to connect the Ilumicode to the product. This connection will control multiple products at the same time. In addition, all connected products will be assigned to the same DMX address.

To assign individual DMX addresses to each product, connect the Ilumicode unit to each product individually. In addition, disconnect the DMX output of the product being configured if other products are connected to it.



You must hardwire the Ilumicode directly to the Ilumipanel 180 IP Optic RGB when programming the product.

Ilumicode
Connection
Diagram

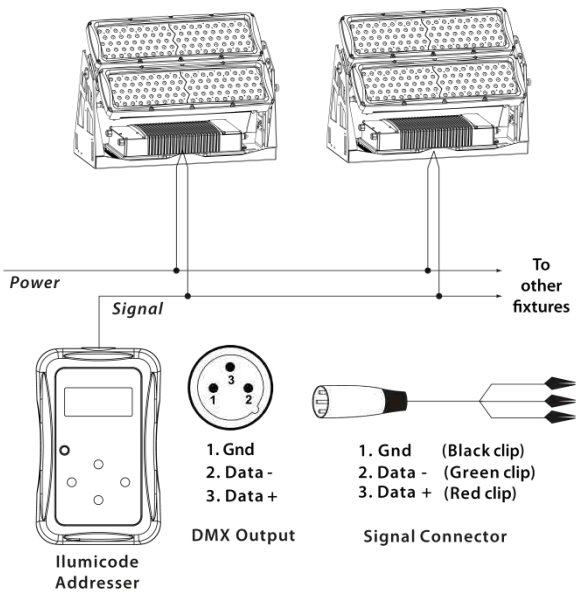


ILUMINARC® suggests connecting no more than 20 products in this mode, keeping the total distance to less than 60 m (197 ft). If not, you may need to use an optically isolated signal amplifier.

Mounting

Before mounting this product, read the Safety Notes at the beginning of the *Illumipanel 180 IP Optic RGB User Manual* and follow the mounting procedures.

Mounting Diagram

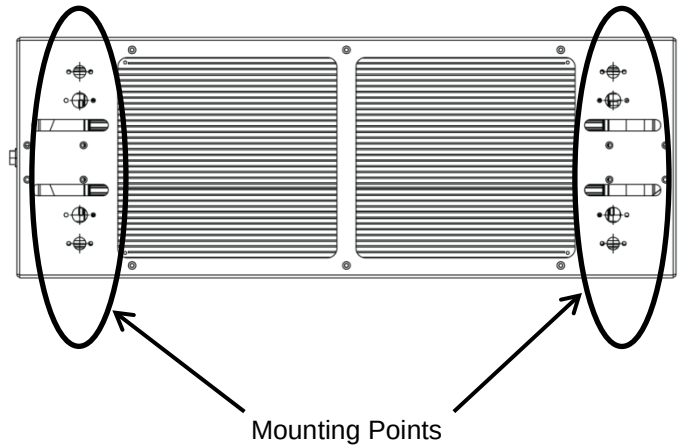

**Illumicode
Control Panel
Description**

Button	Function
<POWER>	Turns the Illumicode unit on.
<MENU>	Scrolls through the main level or exits from the current menu or function. NOTE: Press and hold to turn the unit off.
<ENTER>	Enables the currently displayed menu or sets the currently selected value into the selected function.
<UP>	Navigates upwards through the menu options and increases the numeric value when in a function.
<DOWN>	Navigates downwards through the menu options and decreases the numeric value when in a function.

Start Address To ensure full access to all channels in each DMX mode, the highest recommended DMX addresses are as follows:

Mode	Address	Mode	Address	Mode	Address
ARC FULL	506	AR1.D	509	SPECIAL 1	507
ARC1	510	SOLID	512		

Menu Options

Main Level	Programming Levels		Description
DMX	001~512	N/A	Sets the DMX starting address
PERSON	ARC 1	N/A	3-channel: RGB control
	ARC 1 + D		4-channel: RGB control + dimmer
	ARC FULL		7-channel: RGB control + dimmer
	REMOTE		Allows using the ILUMICON unit
	SOLID		1-channel: dimmer
	SPECIAL 1		6-channel RGB per module
CALIB	WHITE (1~11)	RED GREN BLUE	Determines the white balance for the color macros
	RGBTOW		Determines the white balance when RGBTOW is active
DIMMER	OFF	N/A	Dimmer works in linear mode
	DIM 1		Dimmer works in non-linear mode, from fast to slow
	DIM 2		
	DIM 3		
	DIM 4		
STATIC	RED	0~255	Configures the static color and effect
	GREN		
	BLUE		
	STRB	0~20	
SETTINGS	COLOR	OFF	Maximum output, unbalanced white
		RGBTOW	White output is as per CALIB > RGB settings
		UC	Output matches that of product's previous versions
	RESET	NO/YES	Resets unit to factory default settings

DMX Values

ARC FULL

Channel	Function	Value		Percent/Setting
1	Dimmer	000	255	0~100%
2	Red	000	255	0~100%
3	Green	000	255	0~100%
4	Blue	000	255	0~100%
5	Color Macros	000	010	No Function
		011	030	R: 100% G: 0~100% B: 0%
		031	050	R: 100~0% G: 100% B: 0%
		051	070	R: 0% G: 100% B: 0~100%
		071	090	R: 0% G: 100~0% B: 100%
		091	110	R: 0~100% G: 0% B: 100%
		111	130	R: 100% G: 0% B: 100~0%
		131	150	R: 100% G: 0~100% B: 0~100%
		151	170	R: 100~0% G: 100~0% B: 100%
		171	200	R: 100% G: 100% B: 100%
		201	205	White 1
		206	210	White 2
		211	215	White 3
		216	220	White 4
		221	225	White 5
		226	230	White 6
		231	235	White 7
		236	240	White 8
		241	245	White 9
		246	250	White 10
		251	255	White 11
6	Strobe	000	009	No Function
		010	255	Slow~Fast
7	Dimmer Speed	000	009	Uses Ilumicode Settings
		010	029	Off
		030	069	Speed 1 (Fastest)
		070	129	Speed 2
		130	189	Speed 3
		190	255	Speed 4 (Slowest)

Special 1

Channel	Function	Value		Percent/Setting
1	Module 1 Red	000	255	0~100%
2	Module 1 Green	000	255	0~100%
3	Module 1 Blue	000	255	0~100%
4	Module 2 Red	000	255	0~100%
5	Module 2 Green	000	255	0~100%
6	Module 2 Blue	000	255	0~100%

ARC 1

Channel	Function	Value		Percent/Setting
1	Red	000	255	0~100%
2	Green	000	255	0~100%
3	Blue	000	255	0~100%

ARC + D

Channel	Function	Value		Percent/Setting
1	Dimmer	000	255	0~100%
2	Red	000	255	0~100%
3	Green	000	255	0~100%
4	Blue	000	255	0~100%

SOLID

Channel	Function	Value		Percent/Setting
1	Master Dimmer	000	255	0~100%

Contact USA WORLD HEADQUARTERS

Us General Information - ILUMINARC
Address: 5200 NW 108th Avenue
Sunrise, FL 33351
Voice: (954) 923-3680
Fax: (800) 544-4898

Technical Support

Voice: (800) 762-1074
Email: support@iluminarc.com

World Wide Web

www.iluminarc.com

EUROPE

General Information - Chauvet Europe BVBA

Address: Stokstraat 18
9770 Kruishoutem
Belgium
Voice: +32 9 388 93 97

Technical Support

Email: Eutech@chauvetlighting.eu

World Wide Web

www.chauvetlighting.eu

General Information - Chauvet Europe Ltd.

Address: Unit 1C
Brookhill Road Industrial Estate
Pinxton, Nottingham, UK
NG16 6NT
Voice: +44 (0)1773 511115
Fax: +44 (0)1773 511110

Technical Support

Email: uktech@iluminarc.com

World Wide Web

www.chauvetlighting.co.uk

MEXICO

General Information - Chauvet Mexico

Address: Av. Santa Ana 30
Parque Industrial Lerma
Lerma, Mexico C.P. 52000
Voice: +52 (728) 285-5000

Technical Support

Email: servicio@iluminarc.com.mx

World Wide Web

www.chauvet.com.mx

Outside the U.S., United Kingdom, Ireland, Mexico, or Benelux contact the dealer of record. Follow their instructions to request support or to return a product. Visit our website for contact details.

