## Components and Accessories



Bluetooth Dual Speakers Noise Cancelling Headphone.
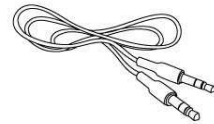
Ø 3.5mm Plug-pin Double Head Cable

Ø 3.5mm→Ø 6.3mm Adaptor

Charging cable: USB A to Micro USB

Fig. 10

## Location and function keys
## Headphone unit:
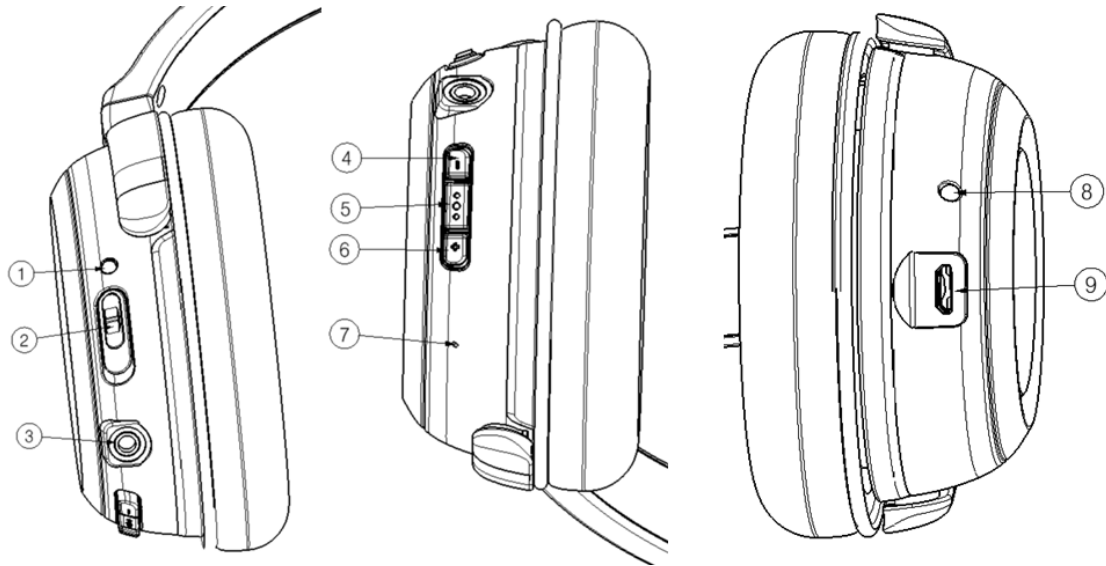


Fig. 11

①Indicator light: Blue-Green color. Under Bluetooth mode: blue light, Under ANC mode: green light

②Power switch: Power On/ ANC On

③3.5 audio jack: Line in

④Volume +: Short press to increase the volume.

⑤Middle Button: Power/ Play/ Pause / Pick up / Decline.

⑥Volume -: Short press to reduce the volume.

⑦Microphone hole

⑧Charging indicator light: Red light flash is under charging.

⑨Micro USB charging hole.

### LED Indicator:

| Item | Status | Flash mode |
|---|---|---|
| Flash function (Pair with devices which has Bluetooth function) | Turn on | Blue light flash 3 times . |
| | Standby (Disconnected) | Blue light long flash, 1s light and 1s dark . |
| | Under pairing | Blue light short flash, 0.1s light and 0.1s dark . |
| | Paired | None, enter to connection mode directly. |
| | Pairing time | 150s |
| | Standby (Connected) | Blue light long flash, 1s light and 5s dark. |
| | Music playing | Blue light long flash, 1s light and 5s dark. |
| | Phone calling | Blue light short flash 3 times under 1s . |
| | On the phone | Blue light short flash 2 times under 1s. |
| | Turn off | Blue light flash 3 times . |

| Item | Status | Flash mode |
|---|---|---|
| Flash function (Pair with devices which has Bluetooth function) | Charging | Red light on . |
| | Full charge | Red light off . |
| | Alert when power lower than 3.2V | Under 3.2V, blue light on . |
| | Music pause& play & decline | None |
| | Turn on and connected | None, enter to connection mode directly. |
| | Power off when power is lower than 3V | When power is under 2.9~3.0V, Bluetooth function will be turned off automatically. |
| | Auto power off | Over 10 minutes without connection. |

## Function Key Description:

| Item | Status | Key |
|---|---|---|
| Key function (Pair with devices which has Bluetooth function) | Turn on | Under power off, press middle key for 2s. |
| | Pairing | Under power off, press middle key for 4s. Under power on, press middle key for 2s . |
| | Pick up | Phone calling, short press middle key (less than 0.5s). |
| | Hang off | On the phone, short press middle key (less than 0.5s). |
| | Decline | Phone calling, long press middle key for 2s. |
| | Volume up | Under music playing or on the phone, short press + (less than 0.5s). |
| | Volume down | Under music playing or on the phone, short press - (less than 0.5s). |
| | Play / Pause | Under music playing, short press middle key (less than 0.5s). |
| | Turn off | Under power on, press middle key for 3s. |
| | Previous song | Under music playing, continuous press - key for 0.8s . |
| | Next song | Under music playing, continuous press + key for 0.8s. |
| | Re-dialing | Paired but non on the phone status, short press middle key twice. |

### Voice Response:

| Item | Status | Voice alert |
|---|---|---|
| Voice function (Pair with devices which has Bluetooth function) | Turn on | "Hello!" |
| | Standby | None |
| | Pairing | Long voice for 1 time. |
| | Paired | Paired, short voice for 2 times. |
| | Pairing time | None |
| | Connection | Short voice for 2 times. |
| | Music playing | None |
| | Max volume | Short voice for 1 time. |
| | Minimum volume | Short voice for 1 time. |
| | Phone calling | Ring |
| | On the phone | None |
| | Hang off | None |
| | Disconnected | Short voice for 2 times. |
| | Turn off | "Goodbye!" |
| | Charging | None |
| | Full of charge | None |
| | Alert when power lower than 3.2V | Under Bluetooth mode, lower than 3.2V will have long voice each 30s. |
| | Music pause& play & decline | None |
| | Power off when power is lower than 3V | Power off when power is lower than 2.9~3.0V. |
| | Last call re-dialing | Short voice for 1 time. |

### Bluetooth Timeout Setup

| Issue | Timeout time | Timeout Action |
|---|---|---|
| Pairing timeout | 3 minutes | Back to disconnection mode. |
| Over Bluetooth effective distance | 3 minutes | Re-connection will be cancelled. |
| Connection timeout | 10 minutes | Auto turn off. |

| | SPECIFICATIONS | MODEL NO.<br>BNC-204 |
|---|---|---|
| **OBO. Pro.2.** | **MODEL NAME**<br>Wireless Dual Speakers Noise Cancelling Hesdphone | |

**FCC Warning:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void

the user's authority to operate the equipment.

**FCC Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.