




1 Empfänger anschließen/Connecting receiver/Raccorder le récepteur

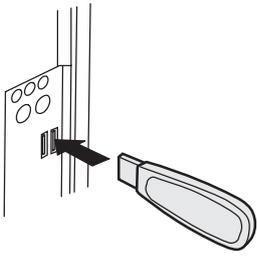

2 Batterien in die Maus einlegen/Inserting batteries into the mouse/
Insérer les piles dans la souris

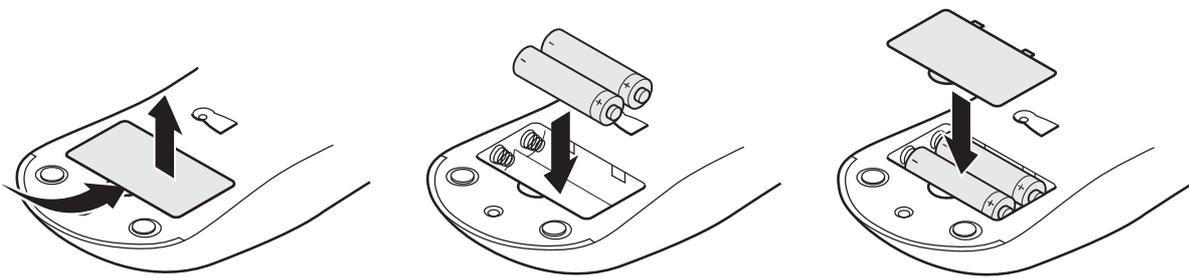

3 Batterien in die Tastatur einlegen/Inserting batteries into the keyboard/
Insérer les piles dans le clavier

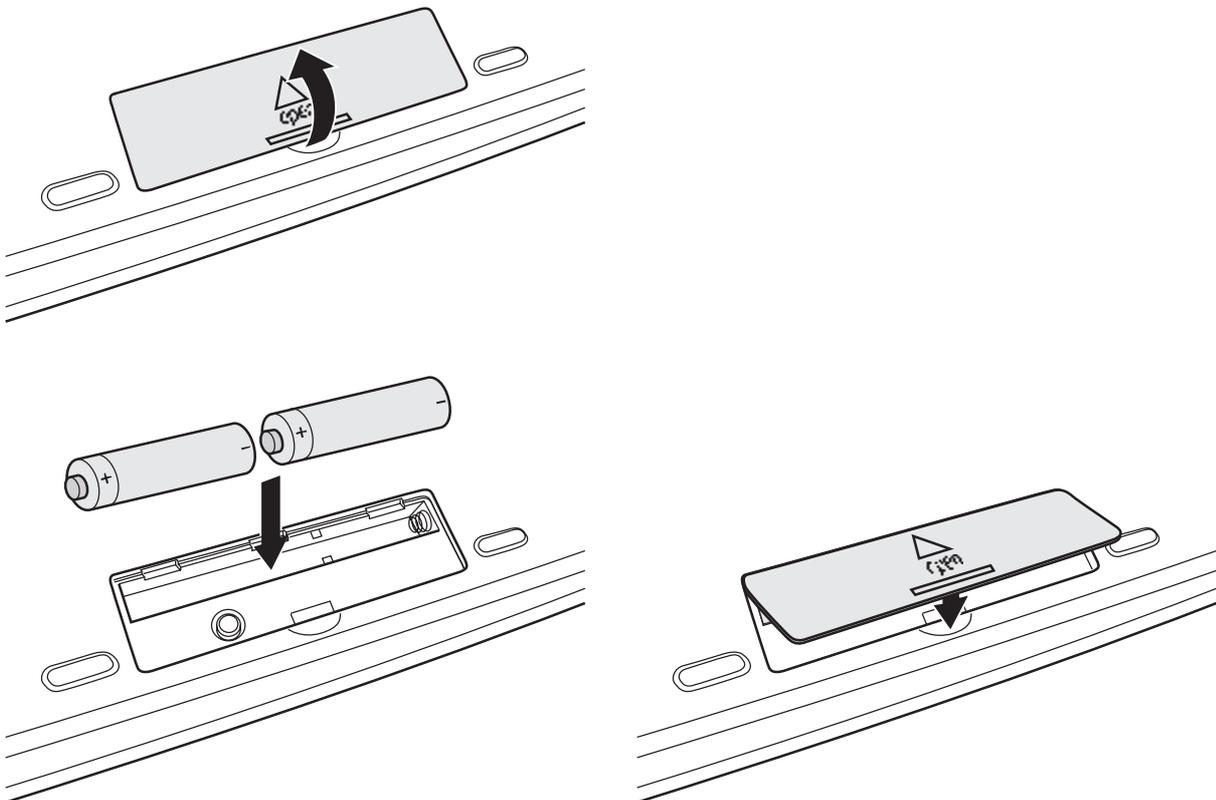

Congratulations!

When you select a quality product from Cherry, you've always made the right choice.

The following features in particular set your **BARRACUDA XT** apart:

- The feel of Notebook keys
- The freedom of no cables with a range of 10 m
- Precise and fast with optical sensor
- Soft-touch surface

For information on additional products, downloads, and much more, please visit www.cherrycorp.com or www.cherry.de

We hope you enjoy your new **BARRACUDA XT**.
Your Cherry GmbH

1 Tips

1.1 Surface under the mouse

A bright, structured surface under the mouse increases the efficiency of the mouse and ensures optimum detection of movement.

A reflective surface is not suitable for use under the mouse.

1.2 Cleaning the devices



Caution!

Damage may be caused by harsh cleaning agents or liquids in the devices

- 1 Do not use solvents such as gasoline or alcohol and scouring agents or scouring sponges for cleaning.
- 2 Prevent liquids from entering the devices.
- 3 Do not remove the keycaps of the keyboard.

-
- 1 Clean the mouse with a slightly damp cloth and some mild cleaning agent (e.g. dishwashing liquid).
 - 2 Dry off the mouse with a soft, lint-free cloth.

1.3 Disposal



Dispose of the old unit and the batteries via a collecting point for electronic scrap or via your dealer.

1.4 RSI syndrome



RSI syndrome

RSI stands for "Repetitive Strain Injury". RSI results from small, continually repeated movements.

Typical symptoms are discomfort in the fingers or neck. For further information see: www.cherry.de/english/service/servicedownload_rsi.htm

- 1 Set up your workspace for maximum ergonomic benefit.
 - 2 Position the keyboard and mouse in such a way that your upper arms and wrists are on either side of your body and are stretched out.
 - 3 Take several short breaks, with stretching exercises if necessary.
 - 4 Change the position of your body often.
-

2 Troubleshooting

- 1 Check whether the batteries are inserted correctly and supply sufficient voltage.
- 2 Connect the receiver to another USB port on the PC.

3 Technical data

| Designation | Value |
|-------------------------------|------------------------------|
| Supply voltage keyboard/mouse | 2.0 ... 3.3 V SELV |
| Supply voltage receiver | 5.0 V/DC \pm 5 % SELV |
| Current consumption keyboard | max. 3 mA |
| Current consumption mouse | max. 25 mA |
| Current consumption receiver | typ. 30 mA |
| Battery type keyboard | 2 batteries, type AAA (LR03) |
| Battery type mouse | 2 batteries, type AAA (LR03) |
| Storage temperature | -20 °C ... +60 °C |
| Operating temperature | 0 °C ... +40 °C |

4 Contact

Cherry GmbH
Cherrystraße
91275 Auerbach
Germany
www.cherrycorp.com
www.cherry.de

Sales:

Phone: +49 (0) 1805 243779 (01805 CHERRY)

E-mail: sales@cherry.de

Technical support:

Phone: +49 (0) 1805 919108

E-mail: support@cherry.de

Please have the following information on hand when contacting technical support:

- Item and serial no. of the product
- Name and manufacturer of your PC/notebook or motherboard
- Operating system and, if applicable, installed service pack version

5 General advice

Cherry continuously optimizes products as new technologies are developed. For this reason we reserve the right to make technical alterations. The evaluation of product reliability and the definition of the product's technical performance are carried out according to Cherry's own requirements in order to meet internationally recognized regulations and standards. Requirements in addition to these can be met through mutual cooperation. Improper usage, handling, storage and external influences could lead to faults and defects during use.

We do not accept warranty for defects caused by alterations to our product by the user and shall not be held liable for unauthorized modifications. All repairs must be made by Cherry or an officially appointed organization or person.

Possible compensation claims against Cherry or its nominated officers – whatever the legal justification including physical or stress related injuries – are excluded. Exceptions to this exist in the case of intent or gross negligence on the part of Cherry, infringements of Product Liability Law or in cases of injury, bodily harm or risk to health. These operating instructions only apply to the accompanying product.

Full details can be obtained from your local Cherry dealer or direct from Cherry GmbH.

M85-25805

eVolution

BARRACUDA XT



Bedienungsanleitung

Operating Manual

Mode d'emploi

CHERRY 

644-0506.00 DE, US, FR Jun 2007 (M85-25805 = Mod. G258B, F800, 03031)

Note:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and**
- (2) This device must accept any interference received, including interference that may cause undesired operation.**

Caution:

The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user authority to operate the equipment.