

BLUE HR Legal



Contact Wahoo Fitness

Please feel free to contact Wahoo Fitness for any questions you have regarding your product.

Wahoo Fitness L.L.C.
141 W. Wieuca B104
Atlanta, Georgia, USA 30342
www.wahoofitness.com
support@wahoofitness.com

Warnings

Before beginning or modifying any exercise program, please consult your physician. If you have a pacemaker or other implanted electronic device, consult your physician before using a heart rate sensor. This product is intended for recreational use only and is not intended for medical purposes. Heart rate and other readings could be influenced by interference from external sources.

If you use this product with navigation software, always be aware of your surroundings and do not fixate on the screen. Moreover, set destinations and other user inputs prior to your departure to ensure your attention stays on task and your facilities are directed to your activity and not the device.

This device contains no user serviceable parts and repairs/modifications should only be made by a technician authorized by Wahoo Fitness. Any unauthorized modifications or repairs will void your warranty. Do not leave device exposed to excessive heat or cold.

California Proposition 65

The enclosed hardware and its packaging contain chemicals the State of California has found to cause cancer, birth defects or reproductive harm.

FCC Rules Part 15

The enclosed hardware device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) it must accept any interference received, including interference that may cause undesired operation.

Limited Warranty

Wahoo Fitness warrants this product to be free from defects in material and workmanship, under normal use, for one year from the date of original purchase. Defects that have resulted from improper or unreasonable use or maintenance, accident, excess moisture, insects, improper packing, lightning, power surges, or unauthorized tampering, alteration or modification are not covered. Wahoo Fitness will, at its discretion, repair or replace with a comparable product, at no charge to the customer for parts or labor, so long as customer is responsible for shipping costs. Products may be new, refurbished or reconditioned and are warranted for the unexpired period of the original purchase, or 60 days from return, whichever is greater. Any products replaced become the property of Wahoo Fitness.


WHERE PERMITTED, THE PROVISIONS OF THIS LIMITED WARRANTY ARE IN LIEU OF ANY OTHER WRITTEN WARRANTY, WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

IN NO EVENT SHALL WAHOO FITNESS BE LIABLE FOR SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES. SOME PLACES DO NOT ALLOW LIMITATIONS ON THE EXCLUSION OR LIMITATION OF LIABILITY TO SPECIFIED AMOUNTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

To obtain warranty service, contact Wahoo Fitness for shipping instructions and an RMA tracking number. Return your device, freight prepaid, along with the original sales receipt which is a required proof of purchase for warranty repairs, with the RMA tracking number written on the outside of the package, and mail to Wahoo Fitness.

BLUE HR

Instructions

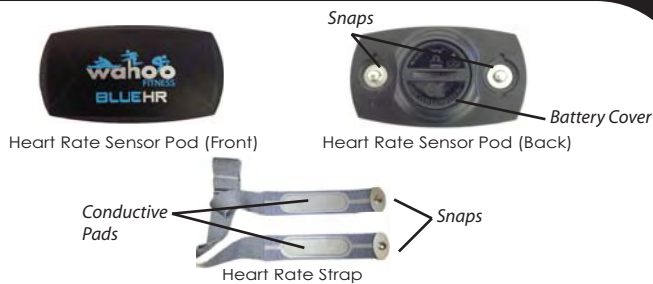

For more information on the Wahoo Fitness Heart Rate Sensor, visit

www.wahoofitness.com/manuals

Overview

Your Wahoo Fitness Heart Rate Strap is a device worn in proximity to the heart that captures electrical activity data to derive your pulse.

How to Use

- Thoroughly wet both of the plastic Conductive Pads on the Strap with water or electrode gel. It is important that the Conductive Pads are sufficiently moist so that a good skin-to-Conductive Pad connection is made.
- Snap one end of the Strap to one side of the Pod. Either end of the Strap can connect to either end of the Pod, but the Pod should have the Wahoo Fitness logo facing up when in use.
- Wrap the Strap around your back and snap the free end to the free side of the Pod so that the Pod is located on your breastplate, just below your breasts. Adjust the Strap to create a snug, yet comfortable fit.
- Once in place, move within 5' - 10' of any device that is compatible with Bluetooth Smart wireless sensors.

Troubleshooting

If you do not get a reading, or the readings are erroneous, ensure that the Conductive Pads are wet, have good contact with your skin and that your Strap is sufficiently snug. Your Heart Rate Sensor 'sleeps' with inactivity and 'awakens' with good electrical contact. To test your Sensor, the following procedure is helpful: 1/start your reader so that it is looking for a heart rate sensor, 2/in your hands, connect the Strap to the Sensor Pod as you would if wearing it (ie. connect both snaps), 3/rub your two thumbs on the two conductive pads on either side of the Sensor Pod for 5-10 seconds. This should 'awaken' your sensor so that it is broadcasting and the results should be displayed on your reader.

Pairing

Each Wahoo Fitness Sensor has a unique identification code and can be uniquely paired with a reader so that if you start your activity in proximity to other sensors, such as the start of a race, your program doesn't pick up someone else's sensor. Since each reader is unique, you should reference the instructions of your reader for pairing techniques.

Battery

The battery in your Wahoo Fitness Heart Rate Sensor is located behind a cover on the back of your Heart Rate Sensor Pod and can be replaced by placing a coin in the slot and turning the cover 1/4 turn counterclockwise. Replace with a 3 volt CR2032 battery (contact a local waste handling group for proper disposal of old battery). After removing the old battery, wait 45 seconds before installing the new battery to ensure the electronics fully reset.



WFBTHR01

This Important Product Information Guide contains safety and handling, regulatory, and warranty information for the Wahoo Blue HR

Important Safety and Handling Information
CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE.
CAUTION: DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS.

Before beginning or modifying any exercise program, please consult your physician. If you have a pacemaker or other implanted electronic device, consult your physician before using a heart rate sensor. This product is intended for recreational use only and is not intended for medical purposes. Heart rate and other readings could be influenced by interference from external sources. If you use this product with navigation software, always be aware of your surroundings and do not fixate on the screen. Moreover, set destinations and other user inputs prior to your departure to ensure your attention stays on task and your facilities are directed to your activity and not the device. This device contains no user serviceable parts and repairs / modifications should only be made by a technician authorized by Wahoo Fitness. Any unauthorized modifications or repairs will void your warranty. Do not leave device exposed to excessive heat or cold.

California Proposition 65

The enclosed hardware and its packaging contain chemicals the State of California has found to cause cancer, birth defects or reproductive harm.

FCC Rules Part 15

The enclosed hardware device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) it must accept any interference received, including interference that may cause undesired operation.

FCC ID : O4GHRMBLE

IC: 7666A-HRMBLE

FCC Compliance Statement:

This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in residential installations. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause interference to radio or television equipment reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna
-Increase the separation between the equipment and receiver
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help

To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the users authority to operate this equipment. (Example- use only shielded interface cables when connecting to a console or peripheral devices).

Radiation Exposure Statement

This device complies with Part 15 of the FCC Rules. Operation is subjected to the following two conditions 1) this device may not cause harmful interference and 2) this device must accept any interference received, including interference that may cause undesired operation.

Caution! The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the users authority to operate the equipment.

IC Statement

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. The device meets the exemption from the routine evaluation limits in section 2.5 of RSS 103 and users can obtain Canadian information on RF exposure and compliance.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement. Le dispositif rencontre l'exemption des limites courantes d'évaluation dans la section 2.5 de RSS 102 et les utilisateurs peuvent obtenir l'information canadienne sur l'exposition et la conformité de rf.

Canadian Representative as seen below:
Name: Iona Enterprises Ltd
Address: 203-1975 Pine Street Vancouver, BC V6J 3E1
Tel: 604-992-0612

Limited Warranty

Wahoo Fitness warrants this product to be free from defects in material and workmanship, under normal use, for one year from the date of original purchase. Defects that have resulted from improper or unreasonable use or maintenance, accident, excess moisture, insects, improper packing, lightning, power surges, or unauthorized tampering, alteration or modification are not covered. Wahoo Fitness will, at its discretion, repair or replace with a comparable product, at no charge to the customer for parts or labor, so long as customer is responsible for shipping costs. Products may be new, refurbished or reconditioned and are warranted for the unexpired period of the original purchase, or 60 days from return, whichever is greater. Any products replaced become the property of Wahoo Fitness.

WHERE PERMITTED, THE PROVISIONS OF THIS LIMITED WARRANTY ARE IN LIEU OF ANY OTHER WRITTEN WARRANTY, WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL WAHOOFITNESS BE LIABLE FOR SPECIAL, INCIDENTAL, CONSEQUENTIAL OR INDIRECT DAMAGES. SOME PLACES DO NOT ALLOW LIMITATIONS ON THE EXCLUSION OR LIMITATION OF LIABILITY TO SPECIFIED AMOUNTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

To obtain warranty service, contact Wahoo Fitness for shipping instructions and an RMA tracking number. Return your device, freight prepaid, along with the original sales receipt which is a required proof of purchase for warranty repairs, with the RMA tracking number written on the outside of the package, and mail to Wahoo Fitness.

Contact Wahoo Fitness

Please feel free to contact Wahoo Fitness for any questions you have regarding your product.

Wahoo Fitness L.L.C.
141 W. Wieuca Road B104
Atlanta, Georgia, USA 30342

www.wahoofitness.com
support@wahoofitness.com



Important Product Information