



CU170

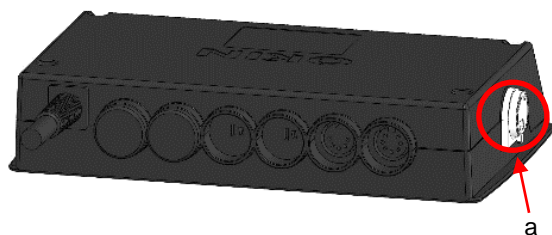

RF1058

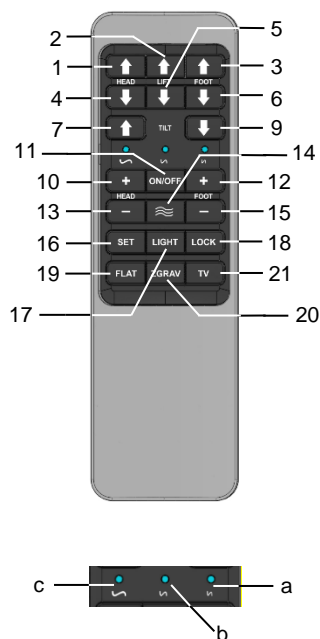

**GB**

**For wireless operation of your motorized comfort bed system**

Wireless, ergonomic, reliable, easy handling, elegant design

Activate the pairing mode at the CU170.

**Example for a Pairing method:**

1. Press the pairing button **(a)** at the CU170 **2x** until the LED turns on. You now have 20s for the pairing process.
2. Press button **(1)** and **(19)** of the RF1058 simultaneously. If the pairing LED or the LED set flashes 2x and a "Peep" signal sounds the programming has been completed.
3. According to this method you can pair a second CU170 by using button **(3)** and **(19)**.

► **Note:** The distance between transmitter and receiver should be less than two meters for pairing.

Button	Function
1	Drive M1 up (head)
2	Drive M3 up (lift)
3	Drive M2 up (foot)
4	Drive M1 down (head)
5	Drive M3 down (lift)
6	Drive M2 down (foot)
7	Drive M4 up (tilt)
9	Drive M4 down (tilt)
10	Head massage higher level
11	Massage on/off
12	Foot massage higher level
13	Head massage lower level
14	Massage wave
15	Foot massage lower level
16	Set memory
17	Under Bed Light on/off
18	Child safety lock on/off
19	Position Flat
20	Memory position Zero G
21	Memory position TV
1 + 19	Pairing System 1
3 + 19	Pairing System 2
13 + 15	Press + Release
16 + 19	Press + Hold
16 + 19	Reset memory position

LED	Function of massage
a	Slow
b	Medium
c	Fast

**FCC WARNING**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE 1: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.