


World's best baby care™
evenflo®

Constant Care 1500™

Secure Sound Monitor

Moniteur sonore de sûreté

**Monitor de sonido para su
seguridad**

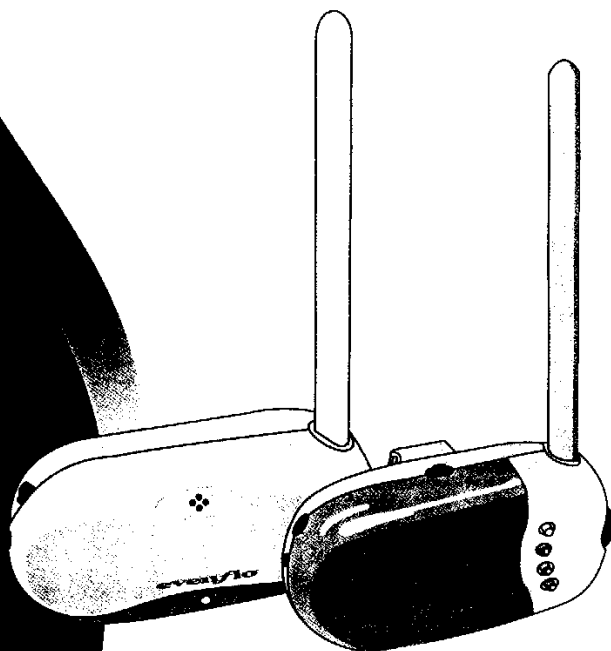

IMPORTANT: READ AND KEEP THESE
INSTRUCTIONS FOR FUTURE REFERENCE.

IMPORTANT : LIRE ET CONSERVER CE MODE
D'EMPLOI POUR RÉFÉRENCE ULTÉRIEURE

IMPORTANTE: LEA Y GUARDE ESTAS
INSTRUCCIONES PARA CONSULTA FUTURA.

©Evenflo Company, Inc. 2001

25708470 10/01

Thank You for purchasing the Evenflo Constant Care 1500 Secure Sound Monitor.

Understanding how your monitor works helps you obtain the highest performance levels. Before setting up and using your Constant Care 1500 Secure Sound Monitor, please read this Owner's Manual completely. It provides helpful tips to ensure the best operating circumstances for assisting you in monitoring your child.

❶ Retain this notice for future reference and attach your sales receipt.

❷ Record here the:

Model Number: _____

Date of purchase: _____

Date of manufacture: _____

Most problems can be handled promptly with a toll-free phone call. Before returning the product to the store, please let us try to help you. Call us on our toll-free number at 1-800-233-5921, Monday through Friday 8:00 a.m. to 7:00 p.m. E.S.T.

To help us help you, please have available or include in your correspondence all relative information such as the Model Number, Date of Manufacture, nature of the problem, etc. If you have any questions or problems with your Evenflo Constant Care 1500 Secure Sound Monitor **please do not return it to the store;** call Evenflo's Parent Link at **1-800-233-5921** (U.S.A. and Canada).

! WARNING

- **DO NOT OPEN. NO USER SERVICEABLE PARTS INSIDE. RISK OF ELECTRIC SHOCK. MAY CAUSE INJURY, FIRE, OR DEATH.**
- **DO NOT** use near water.
- **DO NOT** place furniture on cord.
- **NEVER** place the baby's unit or its adapter in the crib or playpen, or within the child's reach.
- **DO NOT** hang this monitor near or on a crib. The cord can present a strangulation hazard.
- Always keep the unit out of children's reach.
- **DO NOT** use this monitor if it is broken or missing parts.
- This product is designed and intended to be used solely to monitor the actions of a sleeping child.
- **DO NOT** use this monitor with products that warn the user: "NEVER LEAVE CHILD UNATTENDED".
- This product does not replace responsible adult supervision of a child.
- You should check your child regularly as this product will not detect your child's quiet activities.
- This product is not intended to be used as a medical monitor, and its use should not replace adult supervision.
- Make sure the Parent's and Baby's units are functioning properly, on the same channel, and within reception range of each other.
- It is essential to check the sound reception regularly.
- Your adapters are equipped with polarized alternating current line plugs (a plug having one blade wider than the other). This plug will fit into the outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. **If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Most building codes currently require polarized electrical outlets. Do not defeat the safety purpose of the polarized plug.**

Important Safety Instructions

The Evenflo Constant Care 1500 Secure Sound Monitor should not be used as a replacement for adult supervision of children. Please note that any modification of the transmitter or receiver will violate FCC compliance and can void the user's authority to operate this monitor set.

- 1. Read and observe all warnings on the product and in this Owner's Manual.** Pay special attention to information marked "WARNING" and "IMPORTANT". This information can affect your child's safety. Keep this Owner's Manual nearby for quick and easy reference.
- 2. Avoid placement near water or moisture.** Do not use baby's unit outdoors. Do not use your monitor near a bathtub, shower, sink, laundry tub, swimming pool, wet basement, or other locations where water or moisture may result in electrocution.
- 3. Allow for proper ventilation of the adapters and the monitors.** Do not place your monitor on or under a rug, bed, sofa, blanket or similar object that blocks its ventilation. Do not place it in a built-in installation such as a bookcase or stereo cabinet. These may impede the air flow through the ventilation openings.
- 4. Remove the batteries from the monitor components and unplug the AC adapters if the monitor will not be used for a long period of time.**
- 5. Avoid placement near heat sources.** Do not use your monitor near a radiator, stove, heat register, or other appliance (including amplifiers and TVs) that produce heat. Heat can damage the case or components.
- 6.** This monitor can be operated by batteries (Parent's Unit uses three AAA batteries and Baby's Unit uses one 9 Volt battery) or by the Evenflo AC adapters provided. The Evenflo AC adapters provided must be plugged into standard household outlets (120V AC outlet). Do not use extension cords.
- 7. Protect the AC adapter cords.** Route cords so they are not walked on or pinched by items placed upon them.
- 8. Do not immerse any component in water.** Clean the monitor with a dry cloth.
- 9. Do not use near fluorescent lights, appliances with motors, televisions, fans or other machinery.** These items may interfere with the quality of your unit's transmission or reception.

- 10. Adapter must be removed from either the transmitter or receiver for battery operation.** In case of power outage, the batteries will not act as a backup if the AC adapters are engaged.
- 11. Do not use the monitor if:**
- Either adapter cord has been damaged.
 - Objects have fallen or liquid has been spilled into any of its components.
 - It has been exposed to rain or water.
 - It has been dropped or something inside is damaged.
 - If any parts are missing or broken. Call Evenflo's Parent Link at 1-800-233-5921 for instructional literature or product information if needed.
- 12. Refer to the Troubleshooting Chart in this Owner's Manual before returning your monitor for servicing.** You may be able to solve the problem on your own in very little time.
- 13. If service is required due to a possible defect, and the monitor is still under warranty, see Limited Warranty for instructions.** This product should be serviced only by qualified service personnel at Evenflo Company, Inc. when:
- An AC adapter or its plug has been damaged.
 - Objects have fallen or liquid has been spilled into the Transmitter or Receiver.
 - The Transmitter or Receiver do not appear to operate normally or exhibit a marked change in performance.
- 14.** There are no serviceable parts inside these monitors. Do not open the cases.
- 15.** This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Helpful Hints

- For best results, use your AC adapters with the monitor. The power is more consistent than that of the battery, and using the adapter provides clearer reception.
- In some homes, battery operation will dramatically reduce the effective range of the system.
- For best results, use your adapter when you are in the same place (such as your bedroom at night or the kitchen during the day) over a long period of time. The adapter provides maximum power, and additional antenna length.
- This nursery monitor operates over public airwaves. Transmissions from your Baby's Unit may be picked up by another product operating on the same frequency. Your Parent's Unit may also pick up transmissions from another product on the same frequency. If interference occurs, change BOTH your Baby's and Parent's units to the alternate frequency channel.
- Always make sure that both units are on the same frequency channel. It is possible for the Parent's Unit to pick up the Baby's Unit even if they are not on the same channel when both units are close together; however, you'll experience static and interference.

! WARNING

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

There is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that which the receiver is connected.
- Consult the dealer or an experienced radio-TV technician for help.

Features

Out-Of-Range Alarm: An alarm will sound through your Parent's Unit if:

- The units are taken out of range of one another.
- The units are set to different channels.
- Power to the Baby's unit is lost.
- A strong interfering signal starts on the selected channel.


The Out-Of-Range Alarm can only be stopped by re-establishing contact between the two units or by turning off the Parent's Unit. This alarm feature is designed to give you confidence and reassurance that your Evenflo Constant Care 1500 Secure Sound Monitor is functioning properly.

Operational Range: Your monitor's typical transmission/reception range is typically 400 feet depending on battery power and possible obstructions (i.e. walls) that radio waves encounter. The methods and materials used in your home's construction, terrain and other factors may also affect transmission.

Power Indicator Light: The Power Indicator Light will illuminate green whenever the unit is turned on, whether the unit is stationary (plugged into the adapter) or portable (using battery power).

Channel A/B: If interference occurs, change BOTH your Baby's Unit and Parent's unit to the alternate frequency channel. The Constant Care 1500 Secure Sound Monitor operates over public airwaves. Transmission from your Baby's Unit may be picked up by another product if it is on the same frequency. Your Parent's Unit may also pick up transmission from another product if it is broadcasting from the same frequency.


1. **Carrier frequency:** 49.86 Mhz to 49.89 Mhz
2. **Transmitter Output Power:** 77dBuV/m at 3m

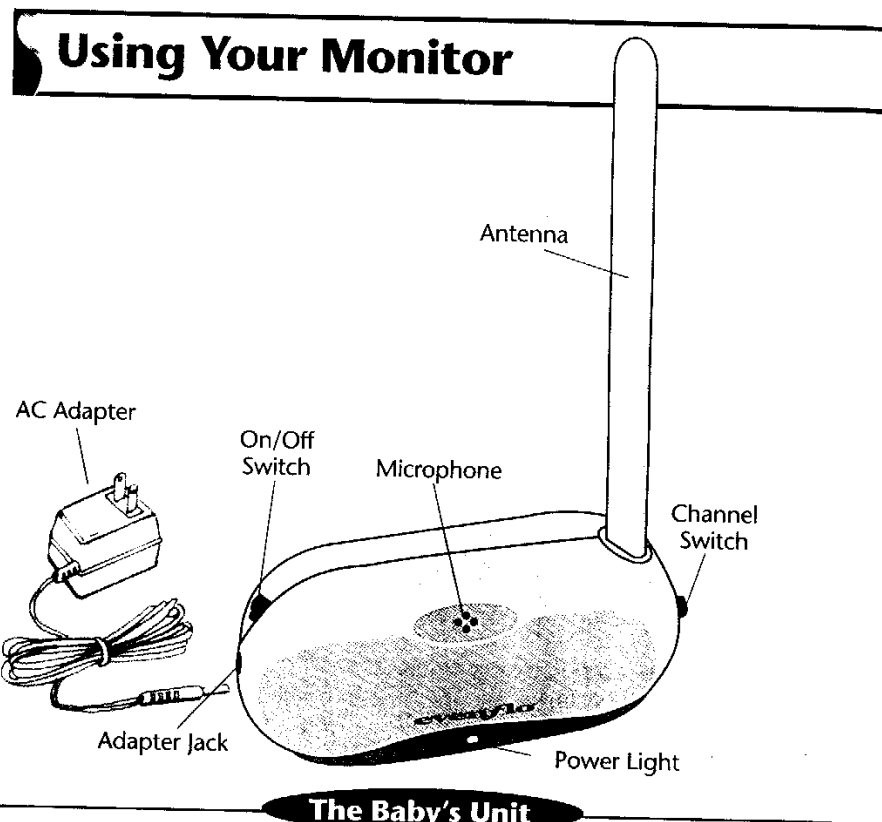

The Baby's Unit is a transmitter, which sends sounds to the Parent's Unit (receiver). It is powered either by a 9 volt battery or by an AC adapter which is included.

1. Place the Baby's Unit on a hard flat surface 5 to 10 feet away from the baby. Do not place it on a soft surface or it may tip over.
2. Aim the front of the Baby's Unit towards the baby. Be sure that there aren't any large objects blocking the path between the Baby's Unit and the baby.
3. Attach the AC adapter to the Baby's Unit, fully extend the cord, and plug the adapter into an electrical outlet. Use only the adapters included.
4. Check the channel switch. Ensure the Baby's Unit is set to the same channel as the Parent's Unit.
5. Slide the Power Switch to **ON**. The Power Light will glow green.
6. Turn the Baby's Unit **OFF** when not in use.

Before you set up your monitor, please read all instructions and warnings carefully and completely.

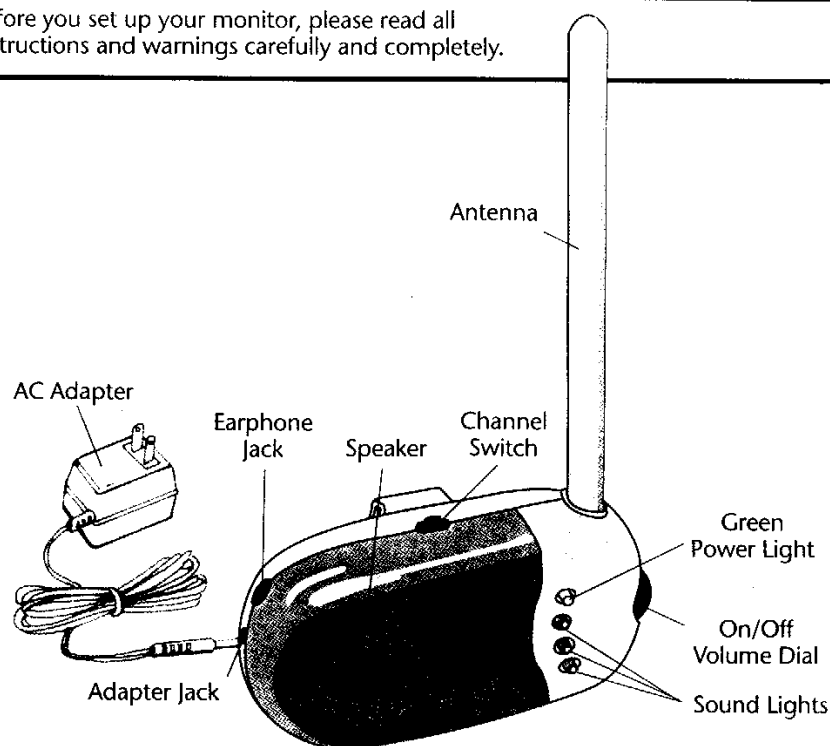


The Parent's Unit

The Parent's Unit receives sound from the Baby's Unit (transmitter) and is powered either by three AAA batteries or by an AC adapter which is included.

1. Check the channel switch. Ensure the Baby's Unit is set to the same channel as the Parent's Unit.
2. Move to a room away from the Baby's Unit.
3. Place the Parent's Unit where you can easily monitor it by sight or sound.
You can use the Parent's unit three ways:
 - When using batteries, place it where you can easily see or hear it.
 - When using batteries, wear it using the belt clip.
 - When using the adapter, plug it into a standard wall outlet.
4. Turn on the Parent's Unit by rotating the **ON/OFF** Volume Control; adjust the volume. The Power Light will glow green.
5. Turn **OFF** the Parent's Unit when not in use.
6. Have someone speak into the Baby's Unit to verify sound transmission.

Troubleshooting Guide

PROBLEM	POSSIBLE CAUSE
Power indicator light isn't working.	<ul style="list-style-type: none"> • Unit isn't getting power. • Battery may be weak.
Audio Out-of-Range alarm sounds.	<ul style="list-style-type: none"> • Parent's Unit may be outside the transmission range of the Baby's Unit. • Baby's Unit and Parent's unit are on different channels. • Baby's Unit is not turned on, or may not be plugged into a working outlet. • Battery in baby's unit may be weak.
Reception is poor due to static, buzzing or interference.	<ul style="list-style-type: none"> • Other household appliances, cordless phones, fluorescent lights or motors may be disrupting the signal. • Parent's Unit may be out of effective range. • Battery may be weak.
Parent's Unit is making a loud feedback noise.	<ul style="list-style-type: none"> • Baby's Unit is picking up sounds from the Parent's Unit because they are too close to each other. • Volume may be set too high.
Parent's Unit is picking up sounds or static from outside your home.	<ul style="list-style-type: none"> • A neighbor has a similar baby monitor, cordless phone or walkie talkie that is transmitting sounds on the same frequency channel.

	
	<ul style="list-style-type: none">• Make sure unit is properly plugged into the wall and the outlet is switched on.• Replace battery.
	<ul style="list-style-type: none">• Move Parent's Unit closer to the Baby's Unit.• Make sure that both units are set to the same channel.• Turn the ON/OFF switch on the Baby's Unit to the "ON" position.• Check the AC outlet to be sure it is working.• Replace battery.
	<ul style="list-style-type: none">• Turn off, unplug or move the device that is causing the problem.• Move the Parent's Unit closer to the Baby's Unit.• Replace battery.
	<ul style="list-style-type: none">• Move the Parent's Unit at least 10 feet away from the Baby's Unit.
	<ul style="list-style-type: none">• Lower the volume.
	<ul style="list-style-type: none">• Change the frequency channel that is in use. Be sure to change the channel on BOTH units.

Limited Warranty

For a period of ninety (90) days from the original purchase of this Product, Evenflo warrants this Product (including any accessories) against defects in material or workmanship. At Evenflo's option, Evenflo may repair or replace any Product that is determined to be defective by Evenflo and determined to be covered by this warranty.

REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER. EVENFLO SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS HEREBY DISCLAIMED. THERE ARE NO OTHER WARRANTIES THAT ACCOMPANY THIS PRODUCT.

Proof of purchase in the form of a receipted invoice or bill of sale which is evidence that the unit is within warranty period must be presented to obtain warranty service. This express limited warranty is extended by Evenflo to the original purchaser of the Product only and is not assignable or transferable to subsequent buyers.

For warranty service, contact Evenflo's ParentLink Consumer Resource Center at (800) 233-5921 or www.evenflo.com.