


Pebble Display

To show your daily progress anytime

Quickly tap the Pebble 5 times with the pads of your fingers



Sequence of lights

Activity Status



Minimal progress toward your goal



50% of your goal achieved

Sync Status




Pulsing = at least 5 minutes of data stored



Solid = recent successful data sync

Wearing Your Pebble

Running, indoor biking and elliptical

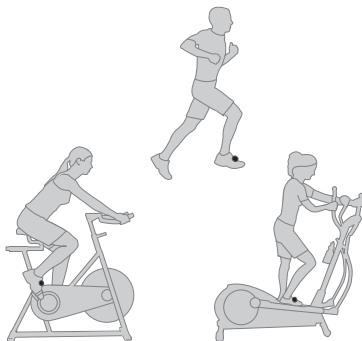

Note: Pebble must be secure

Syncing Pebble Data

The Pebble will sync data when it is "awake" and near a wireless SyncPoint

To wake the Pebble and sync activity data

Walk near a SyncPoint



Quickly tap the Pebble 5 times with the pads of your fingers near a SyncPoint



Replacing Your Battery

1. Turn the clip counterclockwise
2. Remove the battery door
3. Use tool or device clip to remove the old battery
Wait 60 seconds
4. Insert the new battery under tab
5. Replace the battery door
Turn clockwise

For more information regarding use, care, or servicing, please contact:

FitLinxx, Inc.
3 Enterprise Drive
Suite 401
Shelton, CT 06484
United States of America
Email: helpdesk@fitlinxx.com

Use of this product is subject to the FitLinxx End User License Agreement (EULA): <http://www.fitlinxx.net/terms.htm>

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operations. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the devices.

Patent information can be found at <http://www.fitlinxx.net/patents.htm>.

European Wireless EU Declaration of Conformity: This wireless device complies with the specifications EN 300 440-2, EN 301-489, and EN 60950 following the provisions of the R&TTE Directive.

Warning: Risk of explosion if battery is replaced by an incorrect type. Please dispose of used batteries in accordance with your local environmental laws and guidelines.

Specifications subject to change without notice.

© 2013 FitLinxx. All rights reserved. FitLinxx, the Fitlinxx logo, and Pebble are trademarks of FitLinxx, Inc.



Pebble and FitLinxx Quick Reference Guide

Before you begin:

You must set up a FitLinxx account at your fitness facility AND register on the FitLinxx member website before installing FitLinxx Connect. Please see your facility staff for more information on getting set up on FitLinxx.

Here is what you will need to continue:

- ☐ A Pebble® activity tracker
- ☐ A Personal SyncPoint
- ☐ Your FitLinxx online username and password

Step 1: Install FitLinxx Connect



- Go to www.fitlinxx.com/start to download the FitLinxx Connect installer
- Follow the on-screen instructions to set up FitLinxx Connect and add your devices
- Validate the SyncPoint connection status in the system tray or Mac Dock



Working properly



Not working properly

Step 2: Clip your Pebble on and go!



- Clip the Pebble on your shoe for best accuracy, or your waistband, belt, pocket or bra for good accuracy
- Walk within range of a working Personal SyncPoint to sync your data
- Tap the Pebble quickly 5 times to activate the display



Scan to see Pebble videos: