

FitLinxx[®]

Pebble[™]

Getting Started Guide



This Getting Started Guide covers the following information:

1. Pebble Display
2. Wearing the Pebble
3. Pebble Battery
4. Syncing Pebble Data
5. Using the ActiLink
6. Using the ActiScale
7. Using the ActiPressure


Pebble Display

To show daily progress anytime



Quickly tap
device 5 times

1. Device status



Sequence of
lights = working
properly

2. Activity status

Shows daily progress,
for example:



6 lights = 50% of
daily goal achieved



1 light = minimal
progress toward
daily goal

3. Sync status



Pulsing = at least
5 minutes of
data stored




Solid = recent
successful
data sync

Wearing the Pebble


All-day activity and walking

Running, elliptical, and biking

Good accuracy - clip
on belt/waistband,
pocket or bra

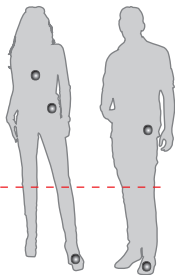

Best accuracy - clip
flat on top of shoes

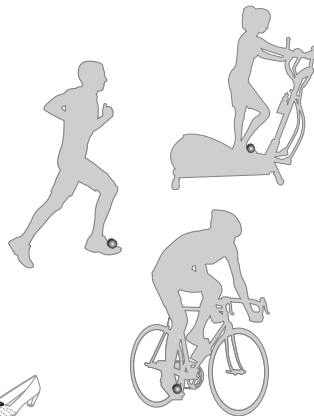

Note: Pebble must be secure




Pebble Battery








Pebble includes CR2032 battery

An extra battery is included for convenience



Red lights = less than 2 weeks of battery life remaining


Replacing the battery

- 1. Turn clip counterclockwise
- 2. Remove battery door
- 3. Use tool or device clip to remove old battery
Wait 60 seconds
- 4. Insert new battery under tab
- 5. Replace battery door
Turn clockwise


Syncing Pebble Data

The Pebble will sync data with your website when it is “awake” and near a wireless access point

To wake the Pebble and sync activity data

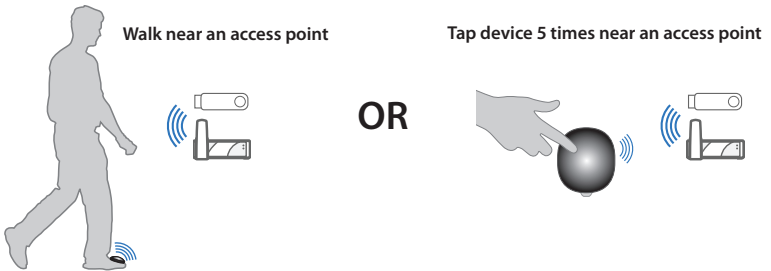


Using the ActiLink

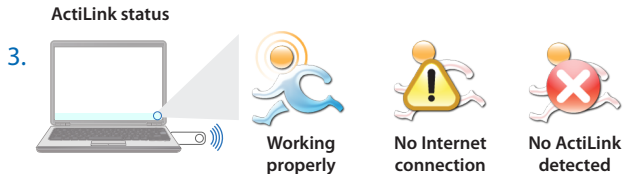


Using the ActiScale

1.




Place on flat, hard surface up to 50 feet from ActiLink

2.

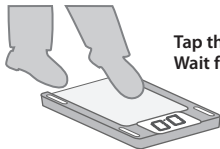


Tap the scale
Wait for "0.0"

3.

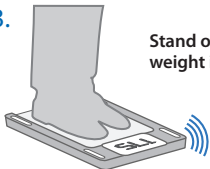

Stand on scale until
weight is displayed


4.



Weight wirelessly
sent to computer


Using the ActiPressure

1. Place on flat surface up to 50 feet from ActiLink

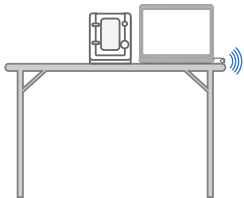

2. Follow ActiPressure instructions to take blood pressure

Blood pressure wirelessly sent to computer

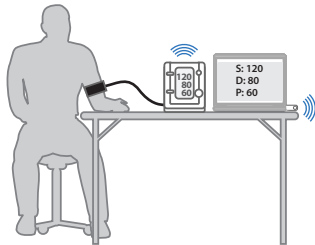

For more information regarding use, care, or servicing, please contact:

Use of this product is subject to the FitLinxx End User License Agreement (EULA): <http://www.fitlinxx.net/terms.htm>

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operations. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the devices.

Industry Canada Notice to users: This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

European Wireless EU Declaration of Conformity: This wireless device complies with the specifications EN 300 440-2, EN 301-489, and EN 60950 following the provisions of the R&TTE Directive.

Patent information can be found at <http://www.fitlinxx.net/patents.htm>. Specifications subject to change without notice.

Warning: Risk of explosion if battery is replaced by an incorrect type. Please dispose of used batteries in accordance with your local environmental laws and guidelines.

© 2012 FitLinxx. All rights reserved. FitLinxx, the Fitlinxx logo, and Pebble are trademarks of FitLinxx, Inc.

v1.9

